


HONDA

OWNER'S MANUAL

MANUEL DU PROPRIÉTAIRE

FAHRER-HANDBUCH

CBR1000

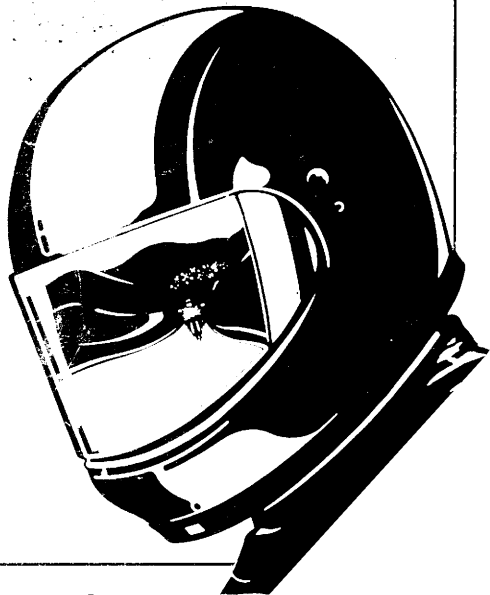

HONDA

CBR1000F

OWNER'S MANUAL

MANUEL DU CONDUCTEUR

FAHRER-HANDBUCH

IMPORTANT NOTICE

- **OPERATOR AND PASSENGER**

This motorcycle is designed to carry the operator and one passenger. Never exceed the maximum weight capacity as shown on the loading and accessories label.

- **ON-ROAD USE**

This motorcycle is designed to be used only on the road.

- **READ THIS OWNER'S MANUAL CAREFULLY**

Pay special attention to statements preceded by the following words:

▲ WARNING

Indicates a strong possibility of severe personal injury or death if instructions are not followed.


CAUTION:

Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when resold.

HONDA CBR1000F OWNER'S MANUAL

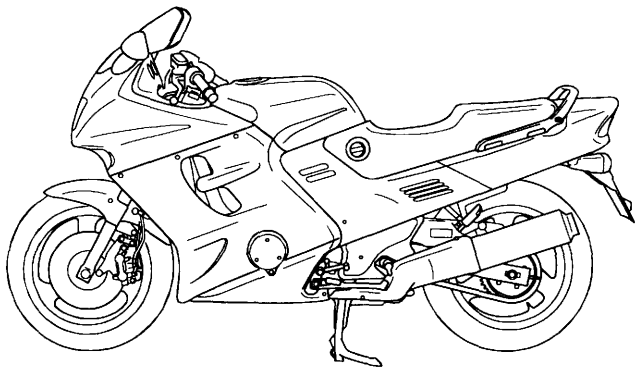

All information in this publication is based on the latest production information available at the time of approval for printing. HONDA MOTOR CO.,LTD. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

WELCOME

The motorcycle presents you a challenge to master the machine, a challenge to adventure. You ride through the wind, linked to the road by a vehicle that responds to your commands as no other does. Unlike an automobile, there is no metal cage around you. Like an airplane, a pre-ride inspection and regular maintenance are essential to your safety. Your reward is freedom.

To meet the challenges safely, and to enjoy the adventure fully, you should become thoroughly familiar with this owner's manual **BEFORE YOU RIDE THE MOTORCYCLE**.

When service is required, remember that your Honda dealer knows your motorcycle best. If you have the required mechanical "know-how" and tools, your dealer can supply you with an official Honda Service Manual to help you perform many maintenance and repair tasks.

Pleasant riding, and thank you for choosing a Honda !

- The illustrations and photos herein are based on the ED type.
- Following codes in this manual indicate each country.

ED	(European direct sales)
	Belgium
	Holland
	Portugal
	Greece
	Spain
IT	Italy

E	UK
F	France
U	Australia
SW	Switzerland
AR	Austria

ND	Finland
	Norway
	Denmark
G	Germany
	Sweden

- The specifications may vary with each locale.

OPERATION

Page

1	MOTORCYCLE SAFETY
1	Safe Riding Rules
2	Protective Apparel
2	Modifications
3	Loading and Accessories
6	PARTS LOCATION
9	Instruments and Indicators
14	MAJOR COMPONENTS (Information you need to operate this motorcycle)
14	Suspension
17	Brakes
21	Clutch
22	Coolant
24	Fuel
28	Engine Oil
29	Tubeless Tyres
32	ESSENTIAL INDIVIDUAL COMPONENTS
32	Ignition Switch

Page

33	Right Handlebar Controls
35	Left Handlebar Controls
36	FEATURES (Not required for operation)
36	Steering Lock
37	Helmet Holder
38	Seat
39	Document Compartment
39	Luggage Tie-Down Hooks
40	Side Cover
41	Lower Fairing
43	OPERATION
43	Pre-ride Inspection
44	Starting the Engine
48	Running-in
49	Riding
50	Braking
52	Parking
53	Anti-theft Tips

MAINTENANCE

Page

54	MAINTENANCE
55	Maintenance Schedule
58	Tool Kit
59	Serial Numbers
60	Colour Label
61	Maintenance Precautions
62	Air Cleaner
64	Crankcase Breather
65	Engine Oil
69	Spark Plugs
72	Throttle Operation
73	Idle Speed
74	Drive Chain
79	Drive Chain Slider
79	Front and Rear Suspension
80	Side Stand
81	Wheel Removal

page

89	Brake Pad Wear
91	Brake System Inspection
92	Battery
95	Fuse Replacement
97	Stoplight Switch Adjustment
98	Bulb Replacement
104	CLEANING
106	STORAGE GUIDE
106	Storage
108	Removal from Storage
109	SPECIFICATIONS
113	NOISE CONTROL SYSTEM (AUSTRALIA ONLY)

MOTORCYCLE SAFETY

▲WARNING

- **Motorcycle riding requires special efforts on your part to ensure your safety. Know these requirements before you ride:**

SAFE RIDING RULES

1. Always make a pre-ride inspection (page 43) before you start the engine. You may prevent an accident or equipment damage.
2. Many accidents involve inexperienced riders. Most countries require a special motorcycle riding test or license. Make sure you are qualified before you ride. NEVER lend your motorcycle to an inexperienced rider.
3. Many automobile/motorcycle accidents happen because the automobile driver does not “see” the motorcyclist. Make yourself conspicuous to help avoid the accident that wasn’t your fault:
 - Wear bright or reflective clothing.
 - Don’t ride in another motorist’s “blind spot.”
4. Obey all national and local laws and regulations.
 - Excessive speed is a factor in many accidents. Obey the speed limits, and NEVER travel faster than conditions warrant.
 - Signal before you make a turn or lane change. Your size and maneuverability can surprise other motorists.
5. Don’t let other motorists surprise you. Use extra caution at intersections, parking lot entrances and exits, and driveways.
6. Keep both hands on the handlebars and both feet on the footpegs while riding. A passenger should hold on to the motorcycle or the operator with both hands and keep both feet on the passenger footpegs.

PROTECTIVE APPAREL

1. Most motorcycle accident fatalities are due to head injuries: ALWAYS wear a helmet. You should also wear a face shield or goggles as well as boots, gloves and protective clothing. A passenger needs the same protection.
2. The exhaust system becomes hot during operation, and it remains hot for a while after stopping the engine. Be careful not to touch the exhaust system while it is hot. Wear clothing that fully covers your legs.
3. Do not wear loose clothing which could catch on the control levers, footpegs, drive chain or wheels.

MODIFICATIONS

▲ WARNING

- * **Modification of the motorcycle, or removal of original equipment, may render the vehicle unsafe or illegal. Obey all national and local equipment regulations.**

LOADING AND ACCESSORIES

▲WARNING

*** To prevent an accident, use extreme care when adding and riding with accessories and cargo. Addition of accessories and cargo can reduce a motorcycle's stability, performance and safe operating speed. Never ride an accessory-equipped motorcycle at speeds above 130 km/h (80 mph). And remember that this 130 km/h (80mph) limit may be reduced by installation of non-Honda accessories, improper loading, worn tyres and overall motorcycle condition, poor road or weather conditions. These general guidelines may help you decide whether or how to equip your motorcycle and how to load it safely.**

Loading

The combined weight of the rider, passenger, cargo and additional accessories must not exceed the maximum weight capacity:

185 kg (408 lbs)

Cargo weight alone should not exceed:

30 kg (66 lbs)

1. Keep cargo and accessory weight low and close to the center of the motorcycle. Load weight equally on both sides to minimize imbalance. As weight is located further from the motorcycle's center of gravity, handling is proportionally affected.
2. Adjust tyre pressure (page 29) and rear suspension (page 14) to suit load weight and riding conditions.

3. Vehicle handling and stability can be adversely affected by loose cargo. Recheck cargo security and accessory mounts frequently.
4. The Honda fairing is designed for this motorcycle only. Do not install it on any other motorcycle.
5. Do not attach large or heavy items (such as a sleeping bag or tent) to the handlebars, fork, or fender. Unstable handling or slow steering response may result.


Accessories


Genuine Honda accessories have been specifically designed for and tested on this motorcycle. Because the factory cannot test all other accessories, you are personally responsible for proper selection, installation, and use of non-Honda accessories. Always follow the guidelines under Loading, and these:


1. Carefully inspect the accessory to make sure it does not obscure any lights, reduce ground clearance and banking angle, or limit suspension travel, steering travel or control operation.
2. Large fork-mounted fairings or windshields, or poorly designed or improperly mounted fairings can produce aerodynamic forces that cause unstable handling. Do not install fairings that decrease cooling air flow to the engine.

- 3. Accessories which alter your riding position by moving hands or feet away from controls may increase reaction time in an emergency.
- 4. Do not add electrical equipment that will exceed the motorcycle's electrical system capacity. A blown fuse could cause a dangerous loss of lights or engine power.
- 5. This motorcycle was not designed to pull a sidecar or trailer. Handling may be seriously impaired if so equipped.
- 6. Any modification of the cooling system may cause overheating and serious engine damage. Do not modify the radiator shrouds or install accessories which block or deflect air away from the radiator.
-
-

PARTS LOCATION

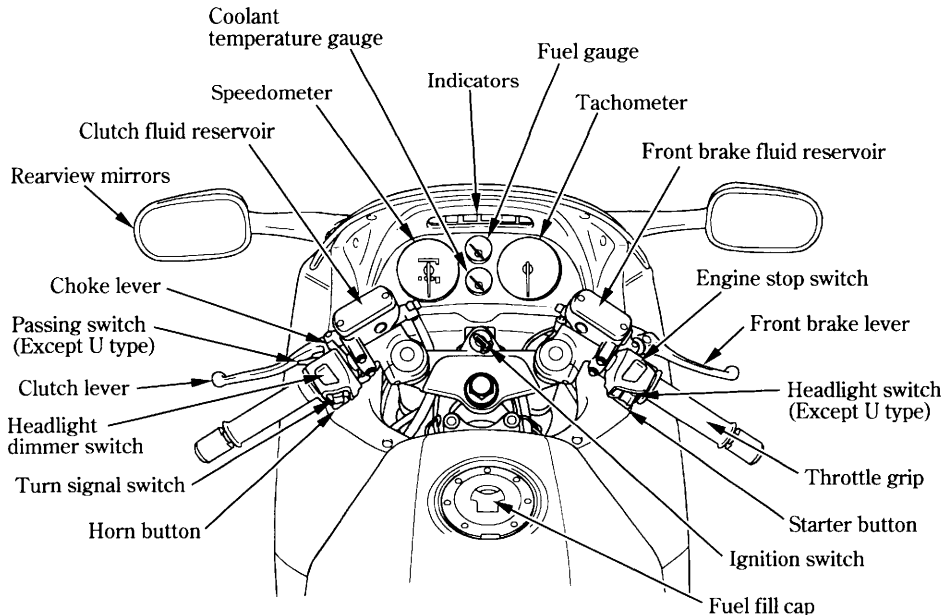


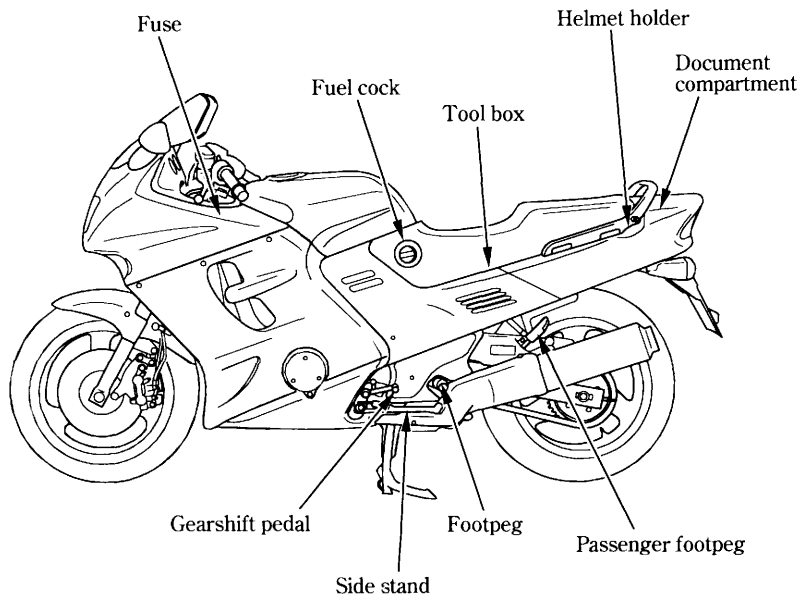


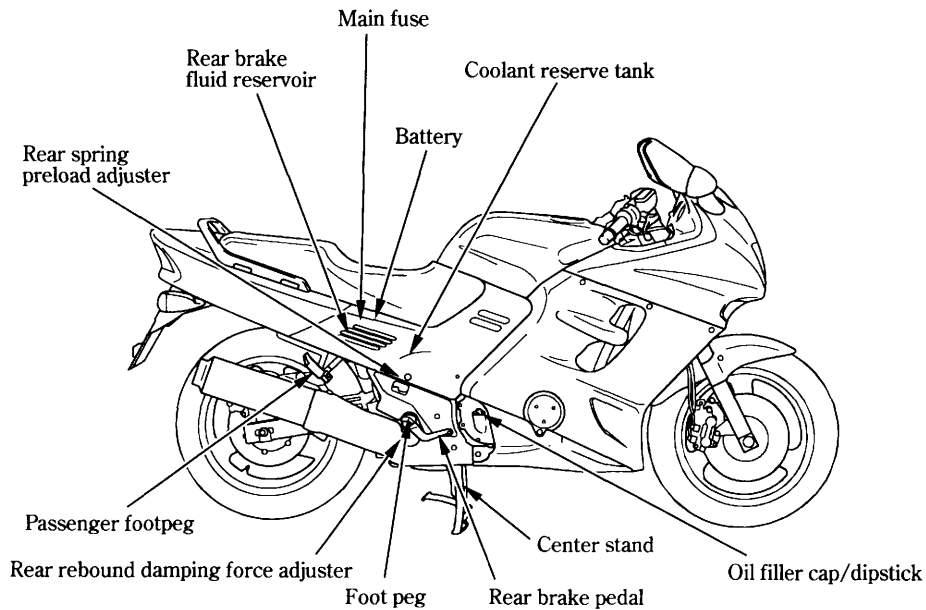

INSTRUMENTS AND INDICATORS

The indicators are contained in the instrument panel. Their functions are described in the tables on the following pages.

- (1) Speedometer
- (2) Tripmeter
- (3) Odometer
- (4) Left turn signal indicator
- (5) Low oil pressure indicator
- (6) Side stand indicator
- (7) Neutral indicator
- (8) High beam indicator
- (9) Right turn signal indicator
- (10) Tachometer
- (11) Tachometer red zone
- (12) Fuel gauge
- (13) Coolant temperature gauge
- (14) Tripmeter reset knob

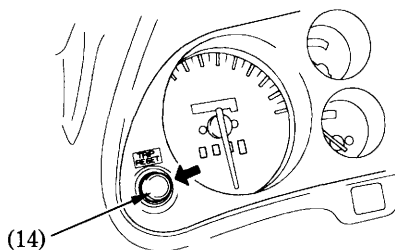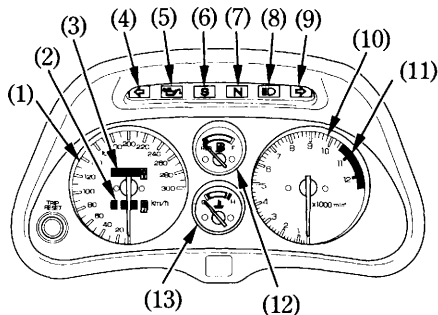

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Tripmeter	Shows mileage per trip.
(3) Odometer	Shows accumulated mileage.
(4) Left turn signal indicator	Flashes when the left turn signal operates.
(5) Low oil pressure indicator (red)	Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm. CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.
(6) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 44) is activated.


(Ref. No.) Description	Function
(7) Neutral indicator (green)	Lights when the transmission is in neutral.
(8) High beam indicator (blue)	Light when the headlight is on high beam.
(9) Right turn signal indicator	Flashes when the right turn signal operates.
(10) Tachometer	Shows engine rpm.
(11) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: *Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.
(12) Fuel gauge	Shows approximate fuel supply available (see page 13).
(13) Coolant temperature gauge	Shows coolant temperature (see page 12).
(14) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.

Coolant Temperature Gauge

When the needle begins to move above the C (Cold) mark, the engine is warm enough for the motorcycle to be ridden. The normal operating temperature range is within the section between the H and C marks. If the needle reaches the H (Hot) mark, stop the engine and check the reserve tank coolant level. Read pages 22 – 23 and do not ride the motorcycle until the problem has been corrected.

CAUTION:

***Exceeding maximum running temperature may cause serious engine damage.**

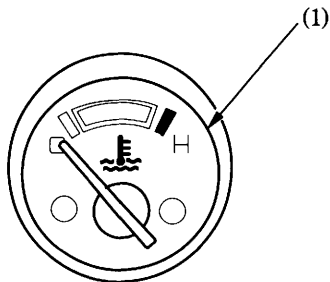

(1) Coolant temperature gauge


Fuel Gauge

The fuel gauge (1) shows the approximate fuel supply available. At F (Full), the fuel tank capacity including reserve is:

22.0 ℓ (5.81 US gal , 4.84 Imp gal)

When the gauge needle first points to RES, refill the tank as soon as possible. At RES there is :

3.5 ℓ (0.92 US gal , 0.77 Imp gal)

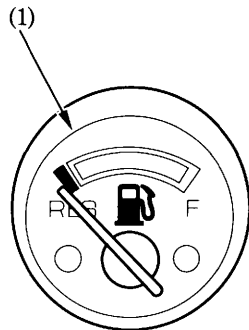

(1) Fuel gauge

MAJOR COMPONENTS (Information you need to operate this motorcycle)

⚠ WARNING

- **If the Pre-ride Inspection (page 43) is not performed, severe personal injury or vehicle damage may result.**

SUSPENSION

Rear Suspension

The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the rebound damping and spring preload adjuster.

Rebound damping force adjustment :

The damping force adjuster (1) is located behind the right muffler protector.

To reduce damping force:


turn the adjuster counterclockwise.

To increase damping force:

turn the adjuster clockwise.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) clockwise until it will no longer turn. This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise approximately 1/2 turn so that its punch mark (2) aligns with the reference punch mark (3).

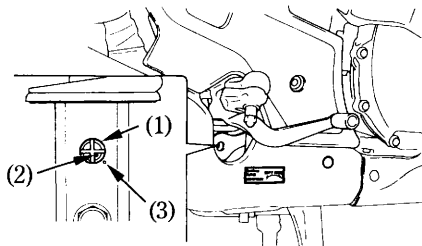

- (1) Rebound damping force adjuster
- (2) Punch mark
- (3) Reference punch mark

Spring preload adjustment :


The spring preload adjuster (1) has 22 positions to turn it with a 8 mm box wrench and handle grip provided in the tool box.

The adjuster is located behind the right side cover.

The standard position: LOW

To reduce preload—turn the adjuster counterclockwise.

To increase preload—turn the adjuster clockwise.

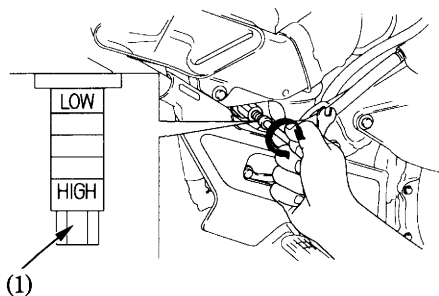

(1) Spring preload adjuster

▲WARNING

- * The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. The instructions found in this owner's manual are limited to adjustment of the shock assembly only. Do not attempt to disassemble, disconnect or service the damper unit; an explosion causing serious injury may result.
- * Puncture or exposure to flame may also result in an explosion, causing serious injury.
- * Service or disposal should only be done by your authorized Honda dealer or a qualified mechanic, equipped with the proper tools, safety equipment and the official Honda Shop Manual.

BRAKES

Both the front and rear brakes are the hydraulic disc types.

As the brake pads wear, the brake fluid level drops.

There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks. If the control lever or pedal free travel becomes excessive and the brake pads are not worn beyond the recommended limit (page 89), there is probably air in the brake system and it must be bled. See your authorized Honda dealer for this service.

Front Brake Fluid Level:

▲WARNING


- * **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**
- * **KEEP OUT OF REACH OF CHILDREN.**

CAUTION:

- * **Handle brake fluid with care because it can damage plastic and painted surfaces.**
- * **When adding brake fluid, be sure the reservoir is horizontal before the cap is removed or brake fluid may spill out.**
- * **Use only DOT 4 brake fluid from a sealed container.**
- * **Never allow contaminants such as dirt or water to enter the brake fluid reservoir.**

Check that the fluid level is above the LOWER level mark (1) with the motorcycle in an upright position.


Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (1). Remove the screws (2), reservoir cover (3), diaphragm plate (4), diaphragm (5), and float (6). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the upper level mark (7). Reinstall the float, diaphragm, diaphragm plate, and cover. Tighten the screws securely.

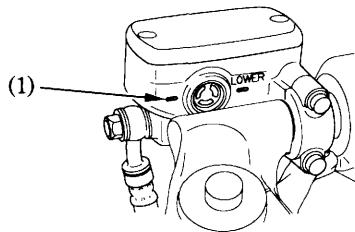

(1) LOWER level mark

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

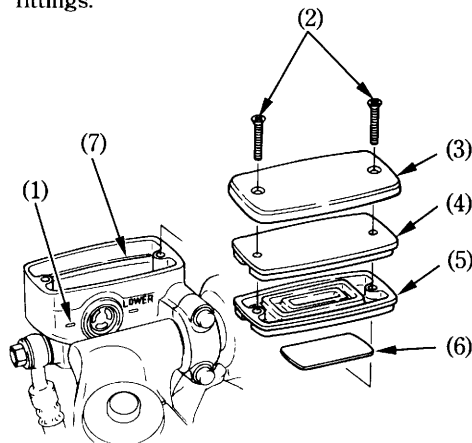

(2) Screws

(3) Reservoir cover

(4) Diaphragm plate

(5) Diaphragm

(6) Float


(7) Upper level mark

Front Brake Lever:

The distance between the tip of the brake lever (1) and the grip can be adjusted by turning the adjuster (2).

CAUTION:

- * **Align the arrow (3) on the brake lever with index mark (4) on the adjuster.**

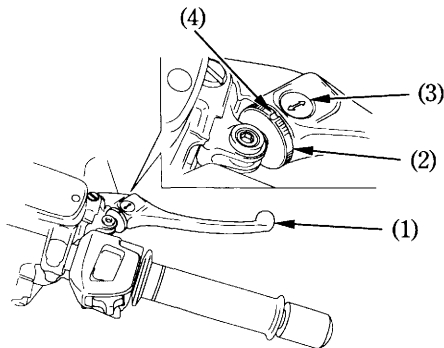

(1) Brake lever
(2) Adjuster

(3) Arrow
(4) Index mark

Rear brake fluid level:

▲ WARNING

- * **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**
- * **KEEP OUT OF REACH OF CHILDREN.**


CAUTION:

- * **Handle brake fluid with care because it can damage plastic and painted surfaces.**
- * **When adding brake fluid, be sure the reservoir is horizontal before the cap is removed or brake fluid may spill out.**
- * **Use only DOT 4 brake fluid from a sealed container.**
- * **Never allow contaminants such as dirt or water to enter the brake fluid reservoir.**


Check the brake fluid level from the inspection window (1) of the right side cover with the motorcycle in an upright position.

Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (2). Remove the right side cover (page 40) and duct (page 62). Remove the bolt (3).

Remove the reservoir cap (4), diaphragm plate (5), and diaphragm (6). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the UPPER level mark (7). Reinstall the diaphragm, diaphragm plate, cap and bolt securely.

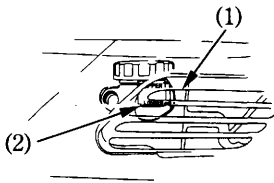

- (1) Inspection window
- (2) LOWER level mark

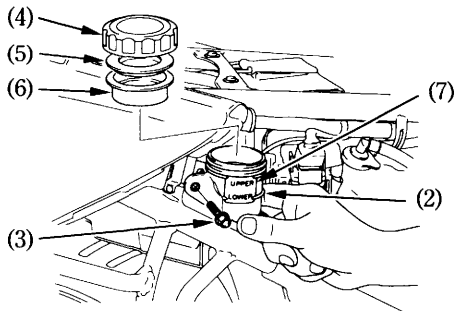

- (3) Bolt
- (4) Reservoir cap
- (5) Diaphragm plate
- (6) Diaphragm
- (7) UPPER level mark

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

CLUTCH


This motorcycle has a hydraulically actuated clutch. There are no adjustments to perform but the clutch system must be inspected periodically for fluid level and leakage. If the control lever freeplay becomes excessive and the motorcycle creeps or stalls when shifted into gear, or if the clutch slips, causing acceleration to lag behind engine speed, there is probably air in the clutch system and it must be bled out. See your authorized Honda dealer for this service.

Fluid level:

Check that the fluid level is above the LOWER level mark (1) with the motorcycle in an upright position. If the fluid level is near the lower level line, it indicates fluid leakage. See your authorized Honda dealer.

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

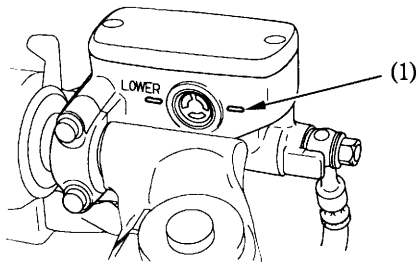

(1) LOWER level mark

COOLANT

Coolant Recommendation

The owner must properly maintain the coolant to prevent freezing, overheating, and corrosion. Use only high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. (SEE ANTIFREEZE CONTAINER LABEL).

CAUTION:


- * **Use only low-mineral drinking water or distilled water as a part of the antifreeze solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.**

The factory provides a 50/50 solution of antifreeze and distilled water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection. A higher concentration of antifreeze decreases the cooling system performance and is recommended only when additional protection against freezing is needed. A concentration of less than 40/60 (40% antifreeze) will not provide proper corrosion protection. During freezing temperatures, check the cooling system frequently and add higher concentrations of antifreeze (up to a maximum of 60% antifreeze) if required.

Inspection

Remove the seat and right side cover.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (3), remove the reserve tank cap (4) and add coolant mixture until it reaches the UPPER level mark (2). Do not remove the radiator cap.

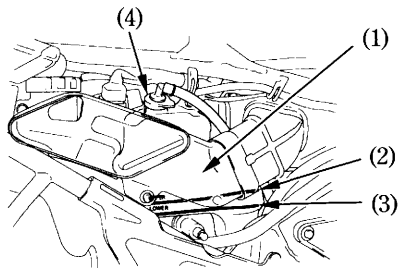

- | | |
|----------------------|----------------------|
| (1) Reserve tank | (3) LOWER level mark |
| (2) UPPER level mark | (4) Reserve tank cap |

⚠ WARNING

- * **Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.**
- * **Keep hands and clothing away from the cooling fan, as it starts automatically.**

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

FUEL

Manual Fuel Cock

The manual fuel cock (1) is under the left side of the fuel tank. Set it to ON for normal operation or RES when you start to run out of the main fuel supply. The OFF setting is only for long term storage or servicing of fuel system components.

Automatic Fuel ON-OFF

With the fuel cock set to ON (or RES) fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

Reserve Fuel

When the main fuel supply is gone, turn the fuel cock to RES. Refill the tank as soon as possible after switching to RES, then switch the cock back to ON.

The reserve fuel supply is:


3.5 l (0.92 US gal , 0.77 Imp gal)

⚠ WARNING

- **To avoid running out of fuel that may result in a sudden stop, learn how to operate the fuel cock when riding the motorcycle.**

NOTE:

- Remember to check that the fuel cock is in the ON position each time you refuel. If the cock is left in the RES position, you may run out of fuel with no reserve.

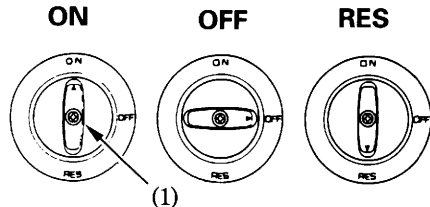

(1) Fuel cock

Fuel Tank

The fuel tank capacity including the reserve supply is:

22.0 l (5.81 US gal, 4.84 Imp gal)

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The fuel fill cap is hinged and will lift up.

After refueling, to close the fuel fill cap, push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

Except AUSTRALIA:


Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

For AUSTRALIA only

Use unleaded petrol with a research octane number of 91 or higher.


CAUTION:

* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

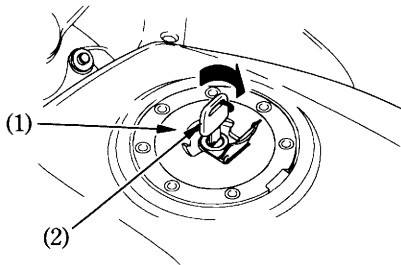

(1) Fuel tank cap

(2) Ignition key

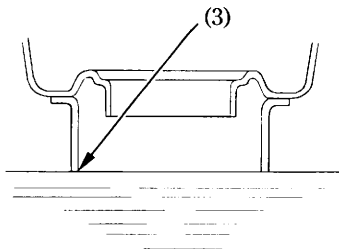

(3) Filler neck

⚠ WARNING

- * **Petrol is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is stored or where the fuel tank is refueled.**
- * **Do not overfill the tank (there should be no fuel in the filler neck (3)). After refueling, make sure the fuel fill cap is closed securely.**
- * **Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.**
- * **Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.**

Petrol Containing Alcohol

If you decide to use a petrol containing alcohol (gasohol), be sure it's octane rating is at least as high as that recommended by Honda. There are two types of "gasohol": one containing ethanol, and the other containing methanol. Do not use petrol that contains more than 10% ethanol. Do not use petrol containing methanol (methyl or wood alcohol) that does not also contain cosolvents and corrosion inhibitors for methanol. Never use petrol containing more than 5% methanol, even if it has cosolvents and corrosion inhibitors.

NOTE:

- Fuel system damage or engine performance problems resulting from the use of fuels that contain alcohol is not covered under the warranty. Honda cannot endorse the use of fuels containing methanol since evidence of their suitability is as yet incomplete.
- Before buying fuel from an unfamiliar station, try to find out if the fuel contains alcohol. If it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a petrol that contains alcohol, or one that you think contains alcohol, switch to a petrol that you know does not contain alcohol.

ENGINE OIL

Engine Oil Level Check


Check the engine oil level each day before riding the motorcycle.

The level must be maintained between the upper (1) and lower (2) level marks on the dipstick (3).

1. Start the engine and let it idle for a few minutes. Make sure the red low oil pressure indicator goes off. If the light remains on, stop the engine immediately.
2. Stop the engine and put the motorcycle on its center stand on level ground.
3. After a few minutes, remove the oil filler cap/dipstick, wipe it clean, and reinsert the dipstick without screwing it in. Remove the dipstick. The oil level should be between the upper and lower marks on the dipstick.
4. If required, add the specified oil (see page 65) up to the upper level mark. Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

CAUTION:

*** Running the engine with insufficient oil can cause serious engine damage.**

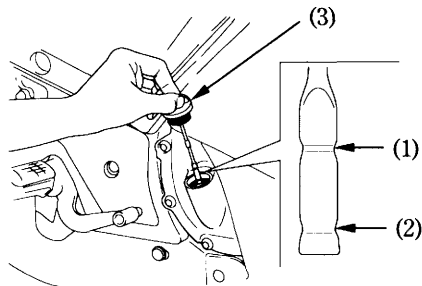

(1) Upper level mark

(2) Lower level mark

(3) Filler cap/dipstick

TUBELESS TYRES

This motorcycle is equipped with tubeless tyres, valves, and wheel rims. Use only tyres marked "TUBELESS" and tubeless valves on rims marked "TUBELESS TYRE APPLICABLE."

Proper air pressure will provide maximum stability, riding comfort and tyre life. Check tyre pressure frequently and adjust if necessary.

NOTE:

- * Tyre pressure should be checked before you ride while the tyres are "cold".
- * Tubeless tyres have some degree of selfsealing ability if they are punctured, and leakage is often very slow. Inspect very closely for punctures, especially if the tyre is not fully inflated.

		Front	Rear
Tyre size		120/70 VR 17 - V270	170/60 VR 17 - V270
Cold tyre pres- sures kPa (kgf/cm ² , psi)	Driver only	250 (2.50 , 36)	290 (2.90 , 42)
	Driver and one passenger	250 (2.50 , 36)	290 (2.90 , 42)
Tyre brand TUBELESS ONLY BRIDGESTONE DUNLOP		CYROX19E K510A	CYROX16E K510B

Check the tyres for cuts, embedded nails or other sharp objects. Check the rims for dents or deformation. If there is any damage, see your authorized Honda dealer for repair, replacement, and balancing.

⚠ WARNING

- * **Improper tyre inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tyre slipping on, or coming off of the rim causing tyre deflation that may result in a loss of vehicle control.**
- * **Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.**

Replace tyres before tread depth at the center of the tyre reaches the following limit:

Minimum tread depth	
Front :	1.5 mm (0.06 in)
Rear :	2.0 mm (0.08 in)

NOTE: < For Germany >

- * German law prohibits use of tyres whose tread depth is less than 1.6 mm.

Tyre Repair/Replacement:

See your authorized Honda Dealer.

⚠ WARNING

- * The use of tyres other than those listed on the tyre information label may adversely affect handling.
- * Do not install tube-type tyres on tubeless rims. The beads may not seat and the tyres could slip on the rims, causing tyre deflation that may result in a loss of vehicle control.
- * Do not install a tube inside a tubeless tyre. Excessive heat build-up may cause the tube to burst resulting in rapid tyre deflation that may result in a loss of vehicle control.
- * Proper wheel balance is necessary for safe, stable handling of the motorcycle. Do not remove or change any wheel balance weights. When wheel balancing is required, see your authorized Honda dealer. Wheel balancing is required after tyre repair or replacement.

- * To avoid possible repair failure and tyre deflation that may result in a loss of vehicle control, do not exceed 80 km/h (50 mph) for the first 24 hours, or 130 km/h (80 mph) at any time, after tyre repair.
- * Replace the tyre if the sidewall is punctured or damaged. Sidewall flexing may cause repair failure and tyre deflation that may result in a loss of vehicle control.


CAUTION:

- * Do not try to remove tubeless tyres without special tools and rim protectors. You may damage the rim sealing surface or disfigure the rim.

ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is below the indicator panel.

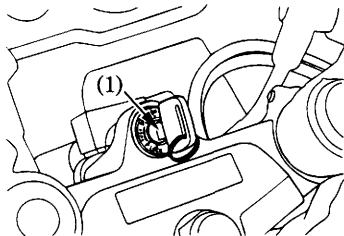

(1) Ignition switch

Key Position	Function	Key Removal
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.	Key can be removed
OFF	Engine and lights cannot be operated.	Key can be removed
ON	Engine and lights can be operated.	Key cannot be removed

RIGHT HANDLEBAR CONTROLS

〈 Except AUSTRALIA 〉

Engine Stop Switch

The engine stop switch (1) is next to the throttle grip. When the switch is in the  (RUN) position, the engine will operate. When the switch is in the  (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the  (RUN) position.

Headlight Switch

The headlight switch (3) has three positions; ,  and OFF marked by a dot to the right of .

 : Headlight, taillight, position light and meter lights on.


 : Position light, taillight and meter lights on.

OFF (dot) : Headlight, taillight, position light and meter lights off.

Starter Button

The starter button (2) is below the headlight switch (3).

When the starter button is pressed, the starter motor cranks the engine. If the engine stop switch is in the  (OFF) position, the starter motor will not operate. See page 45 for the starting procedure.

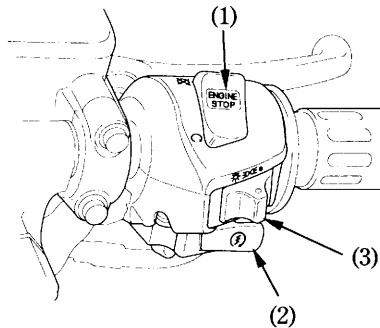

- (1) Engine stop switch
- (2) Starter button
- (3) Headlight switch

RIGHT HANDLEBAR CONTROLS

〈 For AUSTRALIA only 〉

Engine Stop Switch


The engine stop switch (1) is next to the throttle grip. When the switch is in the

○ (RUN) position, the engine will operate. When the switch is in the ☒ (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the ○ (RUN) position.

Starter Button

The starter button (2) is below the engine stop switch (1).

When the starter button is pressed, the starter motor cranks the engine. If the engine stop switch is in the ☒ (OFF) position, the starter motor will not operate. See page 45 for the starting procedure.

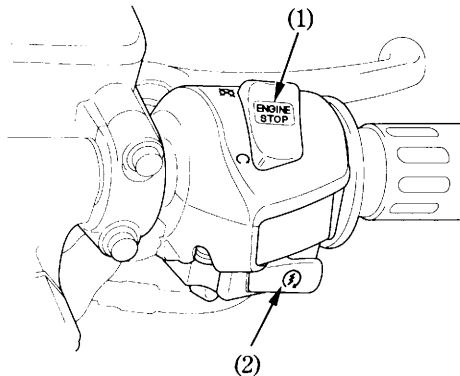

- (1) Engine stop switch
- (2) Starter button

LEFT HANDLEBAR CONTROLS

Headlight Dimmer Switch (1)

Push the dimmer switch to  (HI) to select high beam or to  (LO) to select low beam.

< Except AUSTRALIA >

Passing Light Control Switch (2)


When this switch is pressed, the headlight flashes on to signal approaching cars or when passing.

Turn Signal Switch (3)

Move to  (L) to signal a left turn,  (R) to signal a right turn. Press to turn signal off.

Horn Button (4)

Press the button to sound the horn.

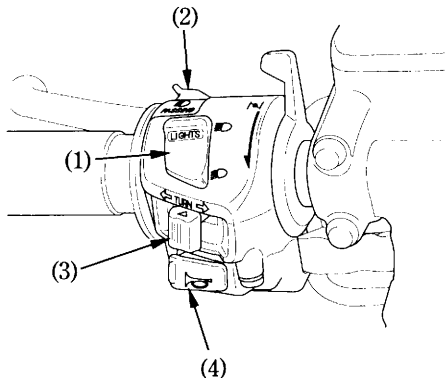

- (1) Headlight dimmer switch
- (2) Passing light control switch
- (3) Turn signal switch
- (4) Horn button

FEATURES


(Not required for operation)

STEERING LOCK

To lock the steering, turn the handlebars all the way to the left or right, turn the key (1) to LOCK while pushing in. Remove the key.

⚠ WARNING

- * Do not turn the key to LOCK while riding the motorcycle; loss of vehicle control will result.

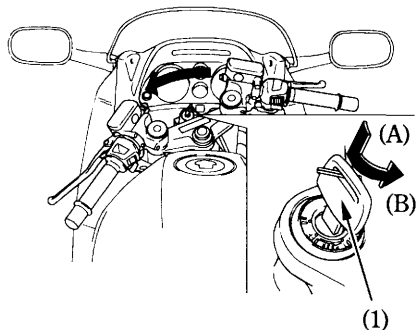

(1) Ignition key

(A) Push in

(B) Turn to LOCK


HELMET HOLDER

The helmet holder (1) is on the left side below the seat. Insert the ignition key (2) and turn it counterclockwise to unlock.

Hang your helmet on the holder pin (3) and push it in to lock. Remove the key.

⚠ WARNING

- *The helmet holder is designed for helmet security while parked. Do not ride with a helmet attached to the holder; the helmet may interfere with safe operation and result in loss of control.
- *As the helmet holder and seat lock are combined, confirm that locking is properly completed by lifting up the seat after using helmet holder.

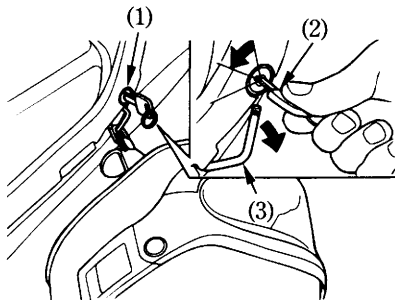

(1) Helmet holder

(2) Ignition key

(3) Holder pin


SEAT

To remove the seat (1), insert the ignition key (2) into the helmet holder (3) turn it counterclockwise.

Remove the seat by pulling up and rearward. To install the seat, insert the prong A (4) into the recess A (5) and set the prong B (6) against the fuel tank (7). Then set the hook (8) against the recess B (9). Push the rear of the seat down to lock the seat.

CAUTION:

*** Be sure the seat is locked securely in position after installation.**

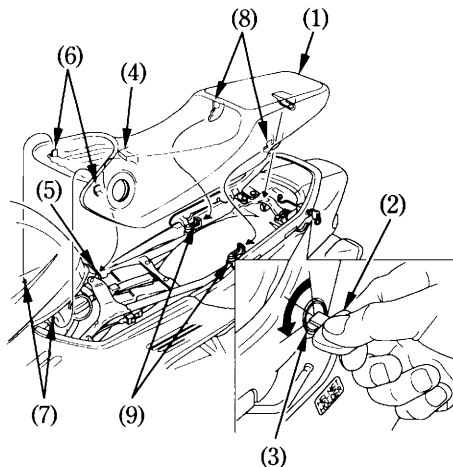

- (1) Seat
- (2) Ignition key
- (3) Helmet holder
- (4) Prong A
- (5) Recess A


- (6) Prong B
- (7) Fuel tank
- (8) Hook
- (9) Recess B

DOCUMENT COMPARTMENT

The document compartment (1) is underneath the rear cowl.

This owner's manual and other documents should be stored in this compartment.

When washing your motorcycle, be careful not to flood this area with water.

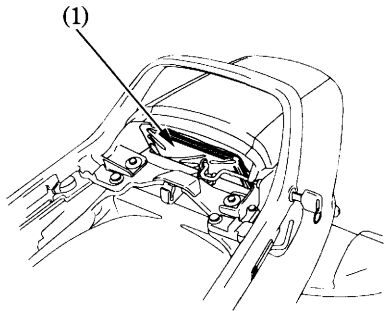


(1) Document compartment

LUGGAGE TIE-DOWN HOOKS

This motorcycle is equipped with retractable luggage tie-down hooks (1).

CAUTION:


*** Never use the tie-down hooks to tow or lift the motorcycle.**

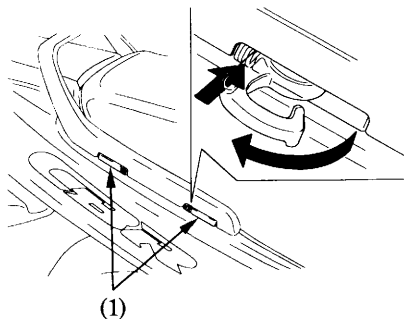

(1) Luggage tie-down hooks

SIDE COVER

The side cover (1) must be removed for main fuse, air cleaner and rear brake fluid maintenance. To remove the side cover, turn the clip (2) 90° counterclockwise so that the groove in the clip is level, pull out the prong (3) and then gently pull the side cover forward to release the tabs (4). Remove the side cover.

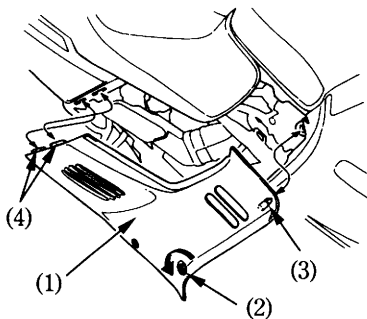

(1) Side cover
(2) Clip


(3) Prong
(4) Tabs

LOWER FAIRING

Right Lower Fairing Removal:

The right lower fairing must be removed for replacing the oil filter.


1. Remove the right side cover (page 40).
2. Remove the lid (1) by removing the two A clips (2).

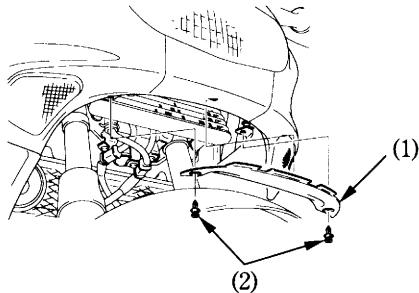

(1) Lid

(2) Clips A

3. Remove the B clip (3).
4. Remove the three trim clips (4).

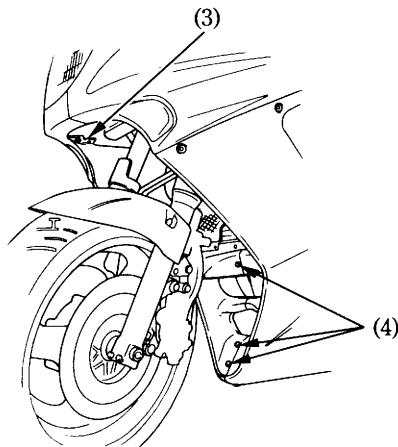

(3) Clip B


(4) Trim clips

5. Remove the crankcase cover (5) by removing the three socket bolts (6).
6. Remove the two bolts (7).
7. Remove the lower fairing cover (8) by removing the screw (9).
8. Remove the screw (10).
9. Remove the short mount socket bolt (11).
10. Remove the clip (12) from the plate (13).
11. Remove the three long mount socket bolts (14) while holding the lower fairing.
12. Remove the lower fairing.

Installation:

1. Installation can be done in the reverse order of removal.

- | | |
|-------------------------|------------------------------|
| (5) Crankcase cover | (11) Short mount socket bolt |
| (6) Socket bolts | (12) Clip |
| (7) Bolts | (13) Plate |
| (8) Lower fairing cover | (14) Long mount socket bolts |
| (9) Screw | |
| (10) Screw | |

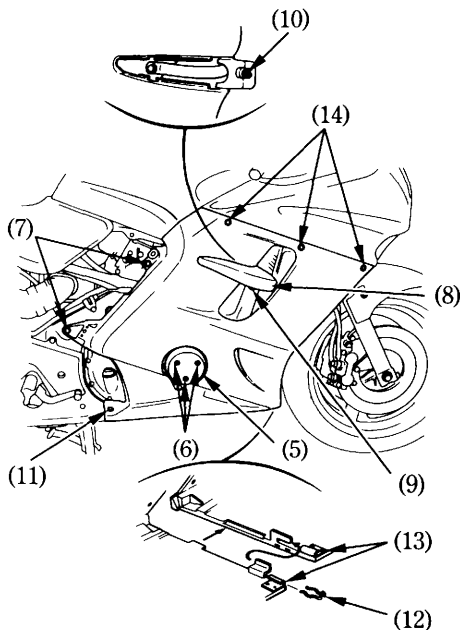

OPERATION

PRE-RIDE INSPECTION

⚠ WARNING

*** If the Pre-ride Inspection is not performed, severe personal injury or vehicle damage may result.**

Inspect your motorcycle every day before you ride it. The items listed here will only take a few minutes to inspect, and in the long run they can save time, expense, and possibly your life.

1. Engine oil level—add engine oil if required (page 28). Check for leaks.
2. Fuel level—fill fuel tank when necessary (page 26). Check for leaks.
3. Coolant level—add coolant if required. Check for leaks (pages 22 – 23).
4. Front and rear brakes—check operation; make sure there is no brake fluid leakage (pages 17 – 20).

5. Tyres—check condition and pressure (page 29–31).
6. Drive chain—check condition and slack (page 74). Adjust and lubricate if necessary.
7. Throttle—check for smooth opening and full closing in all steering positions.
8. Lights and horn—check that headlight, tail/brake light, turn signals, indicators and horn function properly.
9. Engine stop switch—check for proper function (page 33).
10. Side stand ignition cut-off system—check for proper function (page 80).
11. Battery electrolyte—check the level and add if necessary (page 92).

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.

STARTING THE ENGINE

This motorcycle is equipped with a side stand ignition cut-off system. The engine cannot be started if the side stand is down, unless the transmission is in neutral. If the side stand is up, the engine can be started in neutral or in gear with the clutch lever pulled in. After starting with the side stand down, the engine will shut off if the transmission is put in gear before raising the side stand.

▲WARNING

- * **Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.**

NOTE:

- * Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.
- * The electric starter will work when the transmission is in gear with the clutch disengaged.

Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in NEUTRAL (neutral indicator light ON).
- The engine stop switch is at  (RUN).
- The red low oil pressure indicator is ON.
- The fuel cock is ON.

Starting Procedure

To restart a warm engine, follow the procedure for "High Air Temperature."


Normal Air Temperature

$10^{\circ} - 35^{\circ}\text{C}$ ($50^{\circ} - 95^{\circ}\text{F}$)

1. Pull the choke lever (1) back all the way to Fully ON (A), if the engine is cold.
2. Start the engine, leaving the throttle closed.

NOTE:

- * Do not open the throttle when starting the engine with the choke ON. This will lean the mixture, resulting in hard starting.

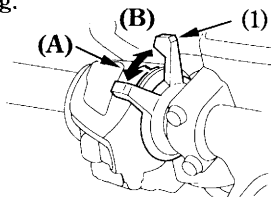

(1) Choke lever

(A) Fully ON

(B) Fully OFF

3. Immediately after the engine starts, operate the choke lever (1) to keep fast idle at:

$2,000 - 2,500 \text{ min}^{-1} (\text{rpm})$

4. About a half minute after the engine starts, push the choke lever (1) forward all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.

CAUTION:

- * The red low oil pressure indicator should go off a few seconds after the engine starts. If the light stays on, stop the engine immediately and check engine oil level. Operating the engine with insufficient oil pressure can cause serious engine damage.

High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. Open the throttle slightly.
3. Start the engine.

Low Air Temperature

10°C (50°F) or below

1. Follow steps 1 – 2 under “Normal Air Temperature.”
2. When engine speed begins to pick up, operate the choke lever to keep fast idle at:
2,000 – 2,500 min⁻¹ (rpm)
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever (1) is at Fully OFF (B).

CAUTION:

- * **Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.**
- * **Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.**

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, leave the engine stop switch on $\bigcirc$ (RUN) and push the choke lever forward to Fully OFF (B). Open the throttle fully and crank the engine for 5 seconds. If the engine starts, quickly close the throttle, then open it slightly if idling is unstable. If the engine does not start, wait 10 seconds, then follow the Starting Procedure.

RUNNING-IN

During initial running-in newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running-in maintenance at 1,000km (600 miles) is designed to compensate for this initial minor wear. Timely performance of the running-in maintenance will ensure optimum service life and performance from the engine.

The general rules as follows:

1. Never labour the engine with full throttle at low engine speeds. This rule is applicable not only during running-in but at all times.
2. Maximum continuous engine speed during the first 1,000 km (600 miles) must not exceed $5,000 \text{ min}^{-1}$ (rpm).
3. Increase the maximum continuous engine speed by $2,000 \text{ min}^{-1}$ (rpm) between odometer readings of 1,000 km (600 miles) and 1,600 km (1,000 miles). Drive briskly, vary speeds frequently and use full throttle for short bursts only. Do not exceed $7,000 \text{ min}^{-1}$ (rpm).

4. Upon reaching an odometer reading of 1,600 km (1,000 miles), you can subject the motorcycle to full throttle operation. However, do not exceed $10,500 \text{ min}^{-1}$ (rpm) at any time (tachometer red zone limit).

CAUTION:

- * **Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.**

RIDING

⚠ WARNING

- * **Review Motorcycle Safety (pages 1 – 5) before you ride.**


NOTE:

- * Make sure you understand the function of the side stand mechanism. (See MAINTENANCE SCHEDULE on page 55 and explanation for SIDE STAND on page 80)
1. After the engine has been warmed up, the motorcycle is ready for riding.
 2. While the engine is idling, pull in the clutch lever and depress the gearshift pedal to shift into 1st (low) gear.
 3. Slowly release the clutch lever and at the same time gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.

4. When the motorcycle attains a moderate speed, close the throttle, pull in the clutch lever and shift to 2nd gear by raising the gearshift pedal.

This sequence is repeated to progressively shift to 3rd, 4th, 5th and 6th(top) gear.

5. Coordinate the throttle and brakes for smooth deceleration.
6. Both front and rear brakes should be used at the same time and should not be applied strongly enough to lock the wheel, or braking effectiveness will be reduced and control of the motorcycle be difficult.

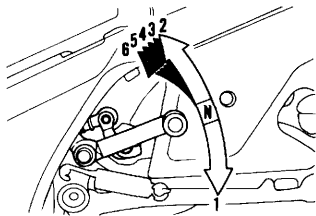

BRAKING

This motorcycle is equipped with a Dual Combined Brake System. Operating the front brake lever applies the front brake and a portion of the rear brake. Operating the rear brake pedal applies the rear brake and a portion of the front brake. For full braking effectiveness, use both the lever and pedal simultaneously, as you would with a conventional motorcycle braking system.

As with a conventional motorcycle braking system, excessively hard application of the brake controls may cause wheel lock, reducing control of the motorcycle.

For normal braking, apply both the brake lever and brake pedal while downshifting to match your road speed. For maximum braking, close the throttle and firmly apply the lever and pedal. Pull in the clutch lever before coming to a complete stop to prevent stalling the engine.

Important Safety Reminders:

- * When possible, reduce speed or brake before entering a turn; closing the throttle or braking in mid-turn may cause wheel slip. Wheel slip will reduce control of the motorcycle.**
- * When riding in wet or rainy conditions, or on loose surfaces, the ability to maneuver and stop will be reduced. All of your actions should be smooth under these conditions. Rapid acceleration, braking or turning may cause loss of control. For your safety, exercise extreme caution when braking, accelerating or turning.**

- * When descending a long, steep grade, use engine compression braking by downshifting, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.**
- * Riding with your foot resting on the brake pedal or your hands on the brake lever may actuate the brakelight, giving a false indication to other drivers. It may also overheat the brake, reducing effectiveness.**

PARKING

1. After stopping the motorcycle, shift the transmission into neutral, turn the fuel cock OFF, turn the handlebar fully to the left, turn the ignition switch OFF and remove the key.
2. Use the side or center stand to support the motorcycle while parked.

CAUTION:

- * **Park the motorcycle on firm, level ground to prevent it from falling over.**
 - * **If you must park on a slight incline, aim the front of the motorcycle uphill to reduce the possibility of rolling off the side stand or overturning.**
3. Lock the steering to help prevent theft (page 36).

ANTI-THEFT TIPS

1. Always lock the steering and never leave the key in the ignition switch. This sounds simple but people do forget.
2. Be sure the registration information for your motorcycle is accurate and current.
3. Park your motorcycle in a locked garage whenever possible.
4. Use an additional anti-theft device of good quality.
5. Put your name, address, and phone number in this Owner's Manual and keep it on your motorcycles at all times.

Many times stolen motorcycles are identified by information in the Owner's Manuals that are still with them.

NAME: _____

ADDRESS: _____

PHONE NO: _____

MAINTENANCE

- The Required Maintenance Schedule specifies how often you should have your motorcycle served, and what things need attention. It is essential that your motorcycle be served as scheduled to retain its high level of safety, dependability, and emission control performance.
- These instructions are based on the assumption that the motorcycle will be used exclusively for its designed purpose. Sustained high speed operation, or operation in unusually wet or dusty conditions, will require more frequent service than specified in the MAINTENANCE SCHEDULE. Consult your authorized Honda dealer for recommendations applicable to your individual needs and use.

MAINTENANCE SCHEDULE

The following Maintenance Schedule specifies all maintenance required to keep your motorcycle in peak operating condition. Maintenance work should be performed in accordance with standards and specifications of Honda by properly trained and equipped technicians. Your authorized Honda dealer meets all of these requirements.

Perform the Pre-ride Inspection (page 43) at each scheduled maintenance period.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE

FREQUENCY ITEM		WHICHEVER	ODOMETER READING [NOTE(1)]									
			COMES FIRST ↓	x 1,000 km	1	6	12	18	24	30	36	REFER TO PAGE
			x 1,000 mi	0.6	4	8	12	16	20	24		
		NOTE	MONTH		6	12	18	24	30	36		
*	FUEL LINE					I		I		I	—	
*	THROTTLE OPERATION					I		I		I	72	
*	CARBURETOR CHOKE					I		I		I	—	
	AIR CLEANER	(NOTE 2)					R			R	62	
	CRANKCASE BREATHER	(NOTE 3)			C	C	C	C	C	C	64	
	SPARK PLUG				I	R	I	R	I	R	69—71	
*	VALVE CLEARANCE			I		I		I		I	—	
	ENGINE OIL			R		R		R		R	65—68	
	ENGINE OIL FILTER			R		R		R		R	66—68	
*	CARBURETOR SYNCHRONIZATION					I		I		I	—	
*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	73	
	RADIATOR COOLANT	(NOTE 4)				I		I		R	22—23	
*	COOLING SYSTEM					I		I		I	—	
*	SECONDARY AIR SUPPLY SYSTEM	(NOTE 5)				I		I		I	--	

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ NOTE	ODOMETER READING [NOTE(1)]								REFER TO PAGE
			x 1,000 km x 1,000 mi	1 0.6	6 4	12 8	18 12	24 16	30 20	36 24	
			MONTH		6	12	18	24	30	36	
	DRIVE CHAIN			I, L, EVERY 1,000 km (600 mi)							74-78
	DRIVE CHAIN SLIDER					I		I		I	79
	BATTERY				I	I	I	I	I	I	92-94
	BRAKE FLUID	(NOTE 4)			I	I	R	I	I	R	17-20
	BRAKE PAD WEAR				I	I	I	I	I	I	89
	BRAKE SYSTEM			I		I		I		I	17-20, 91
*	BRAKE LIGHT SWITCH					I		I		I	97
*	HEADLIGHT AIM					I		I		I	—
	CLUTCH SYSTEM					I		I		I	21
	CLUTCH FLUID	(NOTE 4)			I	I	R	I	I	R	21
	SIDE STAND					I		I		I	80
*	SUSPENSION					I		I		I	79
*	NUTS, BOLTS, FASTENERS			I		I		I		I	—
**	WHEELS/TYRES					I		I		I	—
**	STEERING HEAD BEARINGS			I		I		I		I	—

- * SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

Honda recommends that your authorized Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in unusually wet or dusty areas.

(3) Service more frequently when riding in rain or at full throttle.

(4) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.


(5) Switzerland and Austria type only.

TOOL KIT

The tool kit (1) is in the tool box under the seat.

Some roadside repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

- Spark plug wrench
- 8 mm box wrench
- 10x12 mm box end wrench
- 22 mm box end wrench
- 27 mm box end wrench
- 8 mm open end wrench
- 10 x 12 mm open end wrench
- 14 x 17 mm open end wrench
- Pliers
- 5 mm hex wrench
- 6 mm hex wrench
- No.2 screwdriver
- No.2 Phillips screwdriver
- Screwdriver grip
- Tool bag
- Extension bar

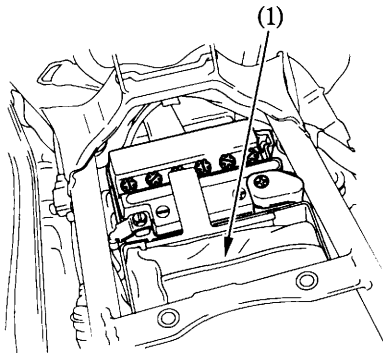


(1) Tool kit

SERIAL NUMBERS

The frame and engine serial numbers are required when registering your motorcycle. They may also be required by your dealer when ordering replacement parts. Record the numbers here for your reference.

FRAME NO. _____

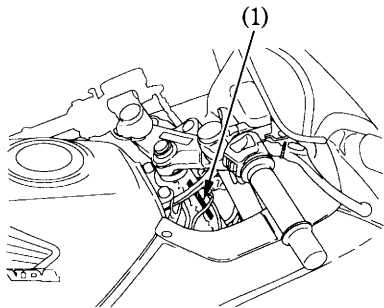


(1) Frame number

The frame number (1) is stamped on the right side of the steering head.

The engine number (2) is stamped on top of the crankcase.

ENGINE NO. _____

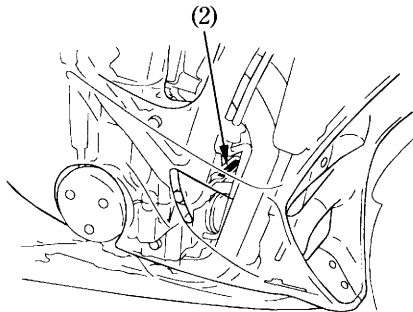

(2) Engine number


COLOUR LABEL

The colour label (1) is attached to the frame below the seat (See page 38).

It is helpful when ordering replacement parts. Record the colour and code here for your reference.

COLOUR _____

CODE _____

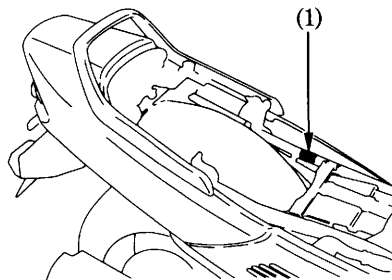

(1) Colour label

MAINTENANCE PRECAUTIONS


▲ WARNING

- * If your motorcycle is overturned or involved in a collision, inspect control levers, cables, brake hoses, calipers, accessories, and other vital parts for damage. Do not ride the motorcycle if damage impairs safe operation. Have your authorized Honda dealer inspect the major components, including frame, suspension and steering parts, for misalignment and damage that you may not be able to detect.**
- * Stop the engine and support the motorcycle securely on a firm, level surface before performing any maintenance.**
- * Use new, genuine Honda parts or their equivalent for maintenance and repair. Parts which are not of equivalent quality may impair the safety of your motorcycle.**

AIR CLEANER


(Refer to the maintenance precautions on page 61).

The air cleaner should be serviced at regular intervals (page 55). Service more frequently when riding in unusually wet or dusty areas.

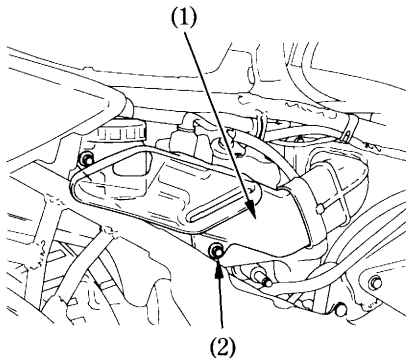

(1) Duct

(2) Bolt

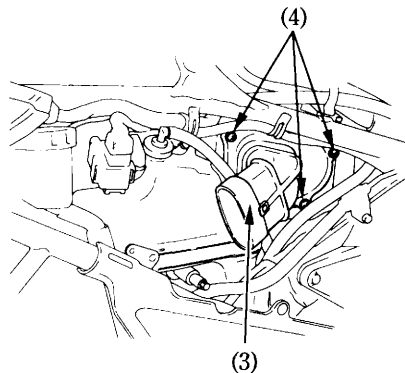


(3) Air cleaner housing cover

(4) Screws


5. Pull out the retainer (5).
6. Pull out the air cleaner (6).
7. Discard the air cleaner.
8. Install a new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

9. Install the removed parts in the reverse order of disassembly.

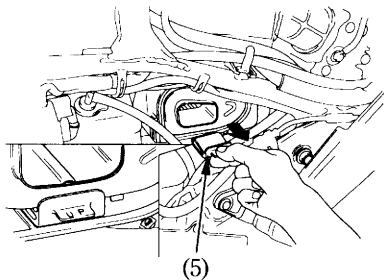

(5) Retainer

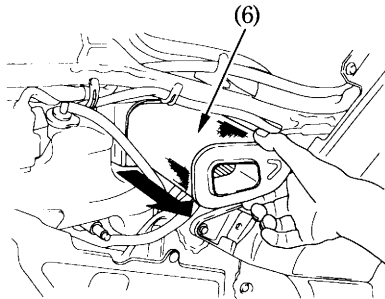

(6) Air cleaner


CRANKCASE BREATHER

(Refer to the maintenance precautions on page 61).

1. Remove the crankcase breather tube plug (1) from the tube and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

NOTE:

- * Service more frequently when riding in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

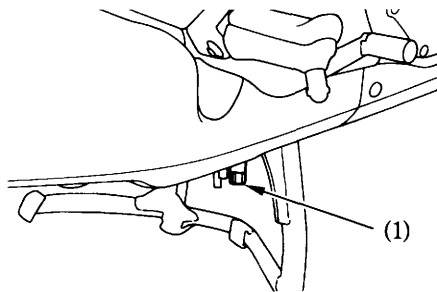

(1) Crankcase breather tube plug

ENGINE OIL


(Refer to the maintenance precautions on page 61).

Engine Oil

Good engine oil has many desirable qualities. Use only high detergent, quality motor oil certified on the container to meet or exceed requirements for API Service Classification SE, SF or SG.

Viscosity:

Viscosity grade of engine oil should be based on average atmospheric temperature in your riding area. The following provides a guide to the selection of the proper grade or viscosity of oil to be used at various atmospheric temperatures.

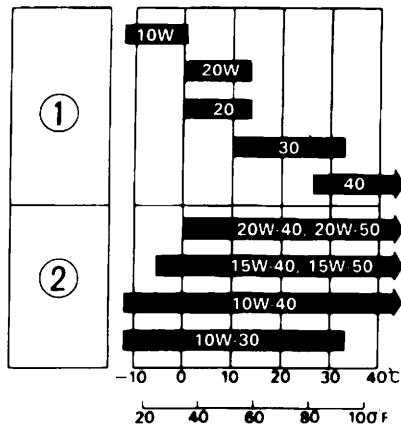


(1) Single grade

(2) Multigrade

Engine Oil and Filter

Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 55).

Changing the oil filter requires a special oil filter tool and a torque wrench. If you do not have these tools and the necessary skill, we recommend that you have your authorized Honda dealer perform this service. If a torque wrench is not used for this installation, see your authorized Honda dealer as soon as possible to verify proper assembly.

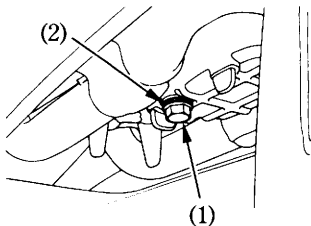

(1) Oil drain plug

(2) Sealing washer

NOTE:

- * Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

CAUTION:


- * **To prevent oil leaks and filter damage, never support the engine on the oil filter.**

1. Remove the right lower fairing (page 41).
2. To drain the oil, remove the oil filler cap and crankcase drain plug (1) and sealing washer (2).

▲WARNING


- * **A warmed-up engine and the oil in it are hot; be careful not to burn yourself.**

3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out.

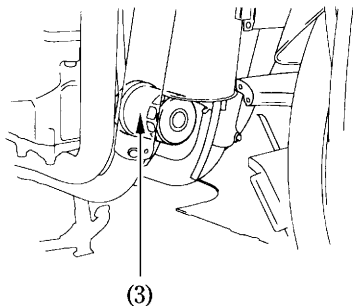

(3) Oil filter

4. Apply a thin coat of engine oil to the new oil filter rubber seal (4).
5. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:
10 N·m (1.0 kgf·m , 7 lbf·ft)

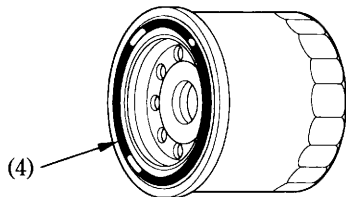

(4) Oil filter rubber seal

6. Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.
7. Check that the sealing washer on the drain plug is in good condition and install the plug. Replace the sealing washer every other time the oil is changed, or each time if necessary.
Oil Drain Plug Torque:
29 N·m (3.0 kgf·m , 22 lbf·ft)
8. Fill the crankcase with the recommended grade oil; approximately:
3.8 ℓ (4.0 US qt , 3.3 Imp qt)
9. Install the oil filler cap.
10. Start the engine and let it idle for 2–3 minutes.
11. Several minutes after stopping the engine, check that the oil level is at the upper level mark on the dipstick with the motorcycle upright on firm, level ground. Make sure there are no oil leaks.

NOTE:

- * When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.
- * Please dispose of used engine oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the rubbish or pour it on the ground or down a drain.

CAUTION:

- * **Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.**

SPARK PLUGS

(Refer to the maintenance precautions on page 61).

Recommended plugs:


Standard:

DPR9EA-9 (NGK) or
X27EPR-U9 (NIPPONDENSO)
(Except F)
DPR8EA-9 (NGK) or
X24EPR-U9 (NIPPONDENSO)
(F only)

For extended high speed riding:


DPR9EA-9 (NGK) or
X27EPR-U9 (NIPPONDENSO)
(F only)

1. Remove the seat (see page 38).
2. Remove the fuel tank front mount bolts (1) and washer (2).

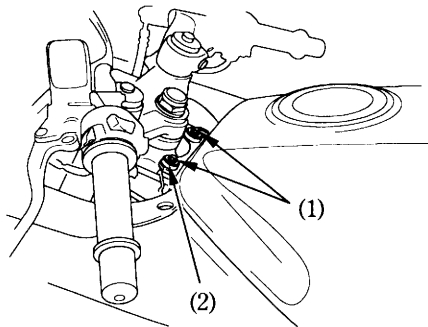


- (1) Mount bolts
(2) Washer

3. Raise the fuel tank until the prop stay (2) is locked.
4. Clean any dirt from around the spark plug base. Remove the spark plug using the plug wrench (3) furnished in the tool kit.

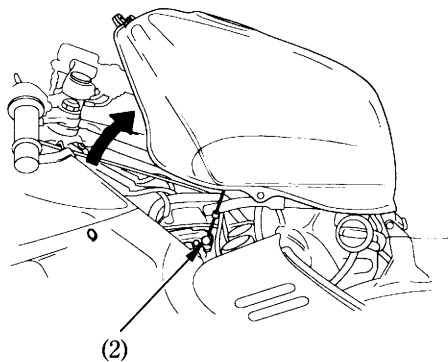

(2) Prop stay

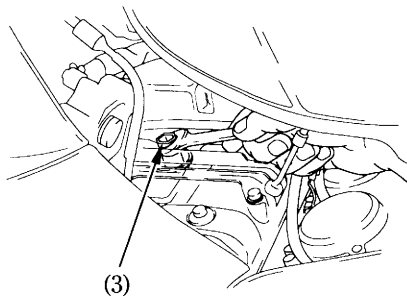

(3) Plug wrench

5. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.
6. Check the new spark plug gap (4) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (5) carefully.

The gap should be:


0.80 – 0.90 mm (0.031 – 0.035 in)

Make sure the plug washer is in good condition.

7. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
8. Tighten the spark plug 1/2 turn with a spark plug wrench to compress the washer.
9. Reinstall the spark plug caps.

CAUTION:

- * The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.
- * Never use a spark plug with an improper heat range. Severe engine damage could result.

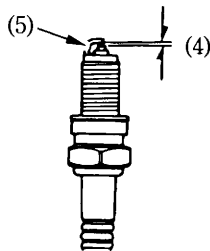

(4) Spark plug gap

(5) Side electrode

THROTTLE OPERATION


(Refer to the maintenance precautions on page 61).

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Measure the throttle grip free play at the throttle grip flange.

The standard free play should be approx:

2—6 mm (0.08—0.24 in)

To adjust the free play, loosen the lock nut (1) and turn the adjuster (2).

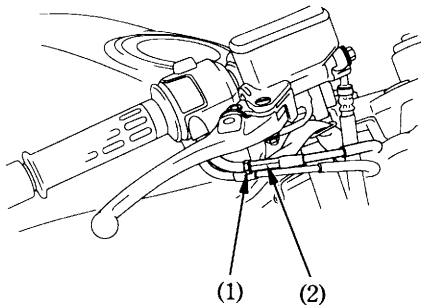

(1) Lock nut

(2) Adjuster

IDLE SPEED

(Refer to the maintenance precautions on page 61).

The idle speed adjustment procedure given here should only be used when changes in altitude affect normal idle speed as set by your dealer. See your authorized Honda dealer for regularly scheduled carburetor adjustments, including individual carburetor adjustment and synchronization.

NOTE:

• The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.


1. Warm up the engine, and shift to neutral, and place the motorcycle on its centerstand.
2. The throttle stop screw (1) is behind the seal rubber in the left side cover. Push in the rubber.
3. Adjust idle speed with the throttle stop screw (1).

Idle Speed: (In neutral)

$1,000 \pm 100 \text{ min}^{-1}(\text{rpm})$ (Except SW, AR)

$1,050 \pm 50 \text{ min}^{-1}(\text{rpm})$ (SW only)

$1,050 \pm 100 \text{ min}^{-1}(\text{rpm})$ (AR only)

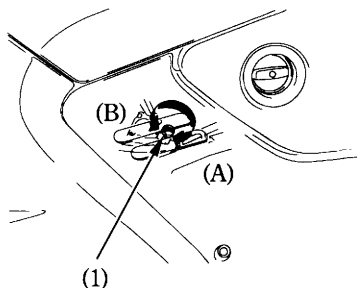

(1) Throttle stop screw

(A) Increase

(B) Decrease

DRIVE CHAIN

(Refer to the maintenance precautions on page 61).

The service life of the drive chain is dependent upon proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain and sprockets.

The drive chain should be checked and lubricated as part of the Pre-ride Inspection (page 43). Under severe usage, or when the motorcycle is ridden in unusually dusty or muddy areas, more frequent maintenance will be necessary.

Inspection :


1. Turn the engine off, place the motorcycle on its center stand, and shift the transmission into neutral.

2. Check slack in the lower drive chain run midway between the sprockets.

Drive chain slack should be adjusted to allow the following vertical movement by hand:

15–25 mm (5/8–1 in)

3. Rotate the rear wheel. Stop. Check the drive chain slack. Repeat this procedure several times. Drive chain slack should remain constant. If the chain is slack only in certain sections, some links are kinked and binding. Binding and kinking can frequently be eliminated by lubrication.

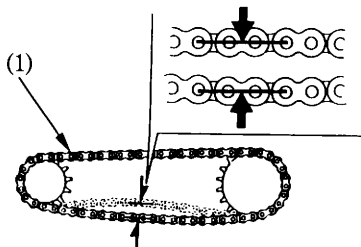

(1) Drive chain

4. Rotate the rear wheel slowly and inspect the drive chain and sprockets for any of the following conditions:

DRIVE CHAIN

- *Damaged Rollers
- *Loose Pins
- *Dry or Rusted Links
- *Kinked or Binding Links
- *Excessive Wear
- *Improper Adjustment
- *Missing O-rings


SPROCKETS

- *Excessively Worn Teeth
- *Broken or Damaged Teeth

A drive chain with damaged rollers, loose pins, or missing O-rings must be replaced. A chain which appears dry, or shows signs of rust, requires supplementary lubrication. Kinked or binding links should be thoroughly lubricated and worked free. If links cannot be freed, the chain must be replaced.

Damaged Sprocket
Teeth
REPLACE


Worn Sprocket
Teeth
REPLACE

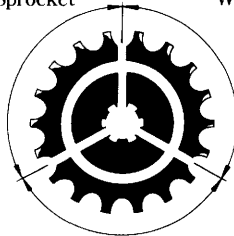

Normal Sprocket Teeth
GOOD

Adjustment:

Drive chain slack should be checked and adjusted, if necessary, every 1,000 km (600 miles). When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustment.

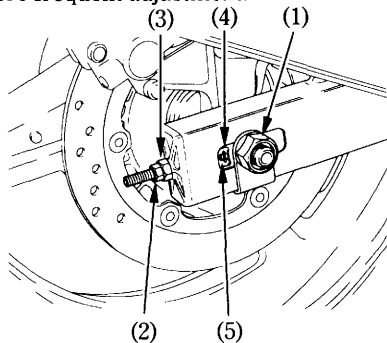

- (1) Axle nut
- (2) Lock nut
- (3) Drive chain adjusting nut
- (4) Index mark
- (5) Rear edge of adjusting slot

If the drive chain requires adjustment, the procedure is as follows:

1. Place the motorcycle on its center stand with the transmission in neutral and the ignition switch off.
2. Loosen the axle nut (1).
3. Loosen the lock nuts (2) on both sides of the swingarm.
4. Turn both adjusting nuts (3) an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting nuts clockwise to tighten the chain, or counterclockwise to provide more slack. Adjust the chain slack at a point midway between the drive sprocket and the rear wheel sprocket. Rotate the rear wheel and recheck slack at other sections of the chain.

Chain slack should be:

15–25 mm (5/8–1 in)

5. Check rear axle alignment by making sure the chain adjuster index marks (4) align with the rear edge (5) of the adjusting slots.

Both left and right marks should correspond. If the axle is misaligned, turn the left or right adjusting nut until the marks correspond on the rear edge of the adjusting slots and recheck chain slack.

6. Tighten the axle nut to :
91 N·m (9.3 kgf·m , 67 lbf·ft)

7. Tighten the adjusting nuts lightly, then tighten the lock nuts by holding the adjusting nuts with a spanner.


Wear inspection:

Check the chain wear label when adjusting the chain. If the red zone (6) on the label aligns with the arrow mark (7) on the chain adjuster plates after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced. The proper slack is:

15–25 mm (5/8–1 in)

CAUTION:

*** Damage to the bottom part of the frame may be caused by excessive drive chain slack of more than:
40 mm (1.6 in)**

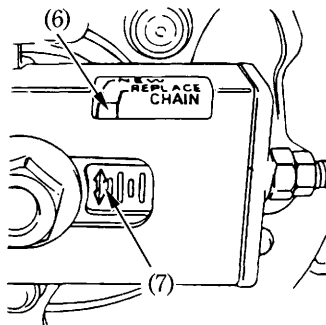

(6) Red zone


(7) Arrow mark

Lubrication and cleaning:

Lubricate every 1,000 km (600 miles) or sooner if chain appears dry.

The O-rings in this chain can be damaged by steam cleaning, high pressure washers, and certain solvents. Clean the chain with high flash-point solvent, such as paraffin. Wipe dry and lubricate only with SAE 80 or 90 gear oil. Commercial chain lubricants may contain solvents which could damage the rubber O-rings.

RK50LFO or D.I.D.50ZV

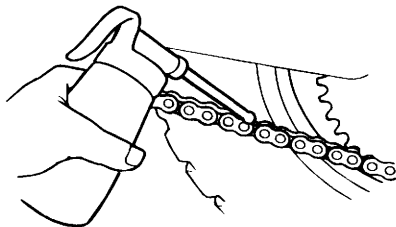

CAUTION:


- * The drive chain on this motorcycle is equipped with small O-rings between the link plates. These O-rings retain grease inside the chain to improve its service life. However, special precautions must be taken when adjusting, lubricating, washing, and replacing the chain.

DRIVE CHAIN SLIDER

(Refer to the maintenance precautions on page 61).

Check the chain slider (1) for wear.

The chain slider must be replaced if it is worn to the wear limit line (2). For replacement, see your authorized Honda dealer.

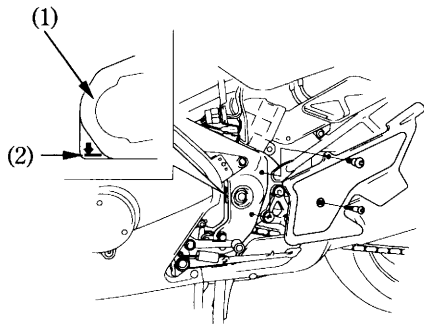

(1) Chain slider

(2) Wear limit line

FRONT AND REAR SUSPENSION INSPECTION

(Refer to the maintenance precautions on page 61).

1. Check the fork assembly by locking the front brake and pumping the fork up and down vigorously. Suspension action should be smooth and there must be no oil leakage.
2. Swingarm bearings should be checked by pushing hard against the side of the rear wheel while the motorcycle is on the center stand. Free play indicates worn bearings.
3. Carefully inspect all front and rear suspension fasteners for tightness.

SIDE STAND


(Refer to the maintenance precautions on page 61).

Perform the following maintenance in accordance with the maintenance schedule.

Functional Check :

- Check the spring (1) for damage or loss of tension and the side stand assembly for freedom of movement.
 - Check the side stand ignition cut-off system:
1. Sit astride the motorcycle; put the side stand up and the transmission in neutral.
 2. Start the engine and with the clutch lever pulled in, shift the transmission into gear.
 3. Lower the side stand. The engine should stop as you put the side stand down.

If the side stand system does not operate as described, see your authorized Honda dealer for service.

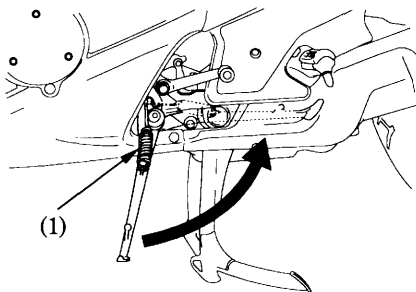


(1) Spring

WHEEL REMOVAL

(Refer to the maintenance precautions on page 61).


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Cover both sides of the front wheel with a protective tape (1) or equivalent.

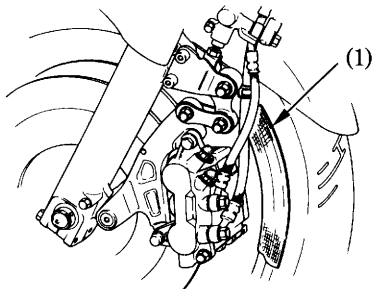

(1) Protective tape

3. Remove the two A socket bolts (2) and the B socket bolt (3).

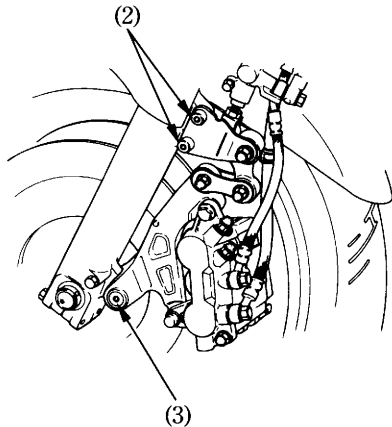

(2) Socket bolts A

(3) Socket bolt B


4. Remove the left caliper assembly (4).
Remove the right caliper assembly (5) from the fork leg by removing the fixing bolts (6).

CAUTION:


- * To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

NOTE:

- * Do not depress the brake lever and brake pedal when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

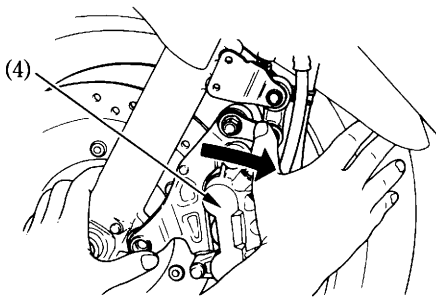


(4) Left caliper assembly

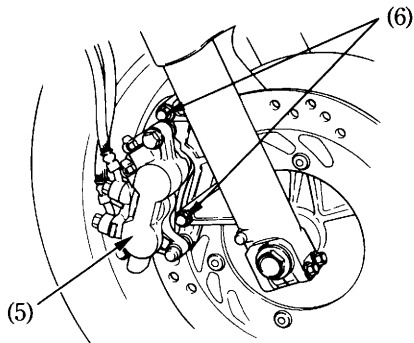

(5) Right caliper assembly


(6) Fixing bolts

5. Loosen the right and left axle pinch bolts (7), and remove the axle bolt (8).
6. Withdraw the front axle (9) and remove the front wheel.

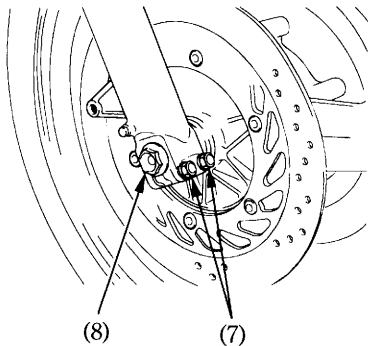

(7) Axle pinch bolt

(8) Axle bolt

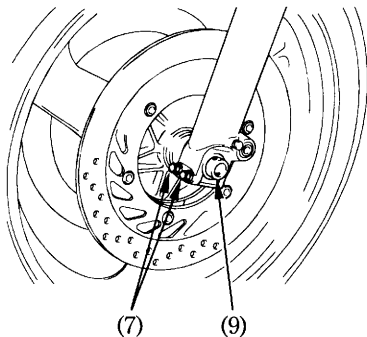

(9) Front axle

Installation Notes:

Position the front wheel between the fork legs and insert the front axle from the left side, through the left fork leg and wheel hub.

CAUTION:

- * **When installing the wheel, carefully fit the left brake disc between the brake pads to avoid damaging the pads.**

Tighten the axle bolt to the specified torque.

Axle bolt torque :

58 N·m (5.9 kgf·m , 43 lbf·ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts and tighten to a torque of:

26 N·m (2.7 kgf·m , 20 lbf·ft)

Socket bolts (2), (3) torque:


26 N·m (2.7 kgf·m , 20 lbf·ft)

Measure the clearance (10) between each surface of the left brake disc (11) and the left caliper holder (12) with a 0,7 mm (0,028 in) feeler gauge (13) (see illustration).

If the gauge inserts easily, tighten the right and left axle pinch bolts (7) to the specified torque.

Axle pinch bolt torque :

22 N·m (2.2 kgf·m , 16 lbf·ft)

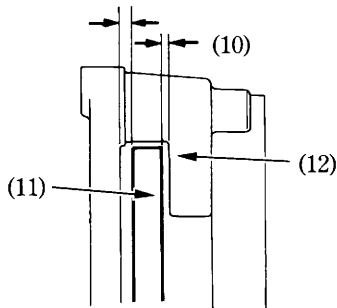


(10) Clearance
(11) Brake disc

(12) Caliper holder

⚠ WARNING

*** If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

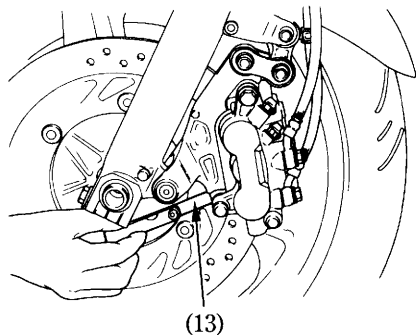

(13) Feeler gauge

If the feeler gauge cannot be inserted easily, pull the left fork outward or push inward until the gauge can be inserted and tighten the axle pinch bolts with the gauge inserted. After tightening, remove the gauge. After installing the wheel, apply the brakes several times, then recheck both discs for caliper holder to disc clearance. Do not operate the motorcycle without adequate clearance.

▲WARNING

- * Failure to provide adequate disc to caliper holder clearance may damage the brake discs and impair braking efficiency.**


CAUTION:

- * After installation, operate the brake lever and brake pedal and check the brake operation.**

Remove the protective tapes from the front wheel.

Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Loosen the drive chain adjusting nut lock nuts (1) and adjusting nuts (2).
3. Remove the rear axle nut (3).
4. Remove the drive chain (4) from the driven sprocket by pushing the rear wheel forward.
5. Remove the axle shaft (5), side collar and rear wheel from the swingarm.

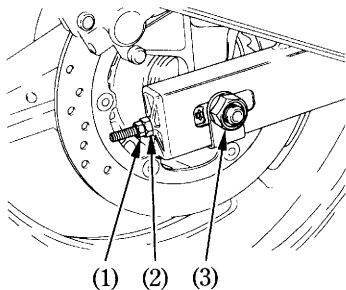


- (1) Lock nuts
(2) Adjusting nuts

- (3) Axle nut

NOTE:

- * Do not depress the brake pedal while the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

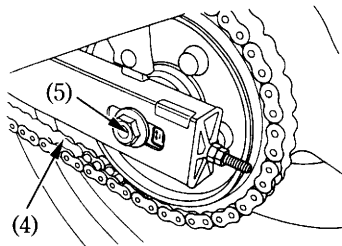

- (4) Drive chain

- (5) Axle shaft

Installation Notes:


- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (6) on the brake caliper is located in the slot (7) in the swingarm (8).
- Tighten the axle nut to:
91 N·m (9.3 kgf·m , 67 lbf·ft)
- Adjust the drive chain (Page 74).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.
- Brake system inspection (See page 91).

CAUTION:

- * **When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.**
- * **After installation, operate the brake pedal and check the brake operation.**

▲WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

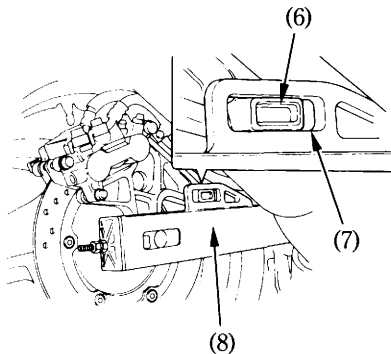

(6) Lug
(7) Slot

(8) Swing arm

BRAKE PAD WEAR

(Refer to the maintenance precautions on page 61).

Brake pad wear depends upon the severity of usage, the type of riding, and road conditions. (Generally, the pads will wear faster on wet and dirty roads.)

 

Inspect the pads at each regular maintenance interval (page 56).

Front/Rear Brake

Check the cutout (1) in each pad.


If either pad is worn to the cutout, replace both pads as a set. See your authorized Honda dealer for this service.

〈FRONT BRAKE〉

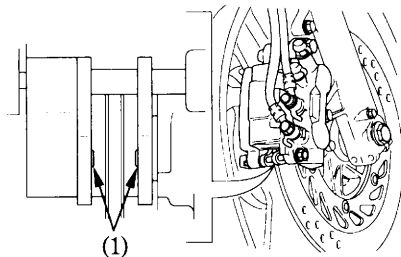

(1) Cutouts

〈 REAR BRAKE 〉

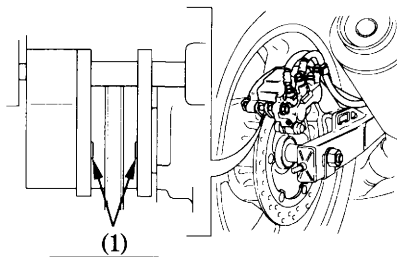


(1) Cutouts

BRAKE SYSTEM INSPECTION

(Refer to the maintenance precautions on page 61).

Check the brake system as follows:

1. Place the motorcycle on its center stand, stop the engine, and place the transmission in neutral.
2. Apply a 10 x 12 mm box end wrench (1) included in the tool kit to the left front caliper bolt (2).

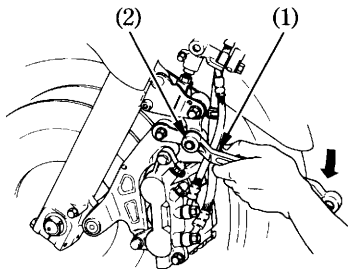


(1) 10 x 12 mm box end wrench (2) Bolt

3. Turn the wrench clockwise while slowly rotating the rear wheel. The brake system is normal if the rear wheel stops. If the rear wheel does not stop, see your authorized Honda dealer.

NOTE:

- * Turning the wrench counterclockwise will loosen the bolt.

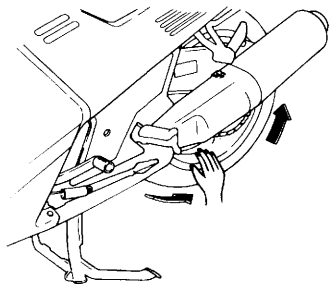

BATTERY

(Refer to the maintenance precautions on page 61).

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing slow starting or other electrical problems, see your authorized Honda dealer.

CAUTION:

- * **When checking the battery electrolyte level or adding distilled water, make sure the breather tube is connected to the battery breather outlet.**
- * **Use only distilled water in the battery. Tap water will shorten the service life of the battery.**
- * **Filling the battery above the UPPER LEVEL line may cause the electrolyte to overflow, resulting in corrosion to engine or frame parts. Immediately wash off any spilled electrolyte.**
- * **The battery breather tube must be routed as shown on the label. Do not bend or twist the breather tube. A bent or kinked breather tube may pressurize the battery and damage its case.**


▲WARNING

- * The battery gives off explosive gases; keep sparks, flames, and cigarettes away. Provide adequate ventilation when charging or using the battery in an enclosed space.
- * The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
 - If electrolyte gets on your skin, flush with water.
 - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately.
- * Electrolyte is poisonous.
 - If swallowed, drink large quantities of water or milk and follow with milk of magnesia or vegetable oil and call a physician.
- * **KEEP OUT OF REACH OF CHILDREN.**

Battery electrolyte:

The battery is under the seat.

Unhook the strap (1) and remove the battery cover (2).

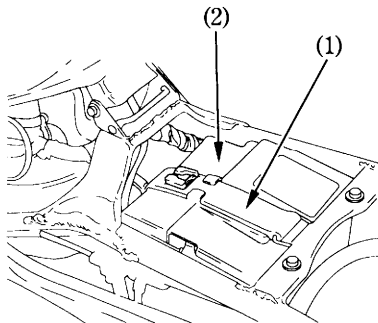


(1) Strap

(2) Cover

Remove the tool kit and pull back the separator (4).

Check the electrolyte level with the motorcycle on its center stand on level ground. The electrolyte level must be maintained between the UPPER (5) and LOWER (6) level marks on the side of the battery.

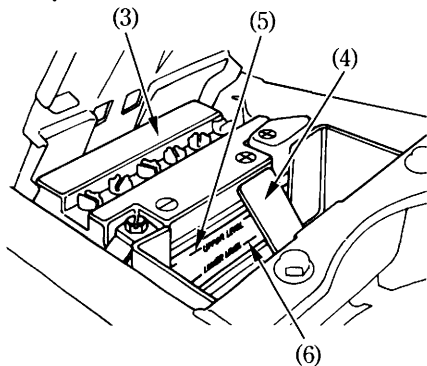


- (3) Battery
- (4) Separator

- (5) UPPER level
- (6) LOWER level

If the electrolyte level is low, disconnect the negative (−) terminal lead (7) from the battery first, then disconnect the positive (+) terminal lead (8).

Disconnect the battery breather tube (9). Pull out the battery. Remove the battery filler caps (10).

Carefully add distilled water to the UPPER level mark, using a small syringe or plastic funnel.

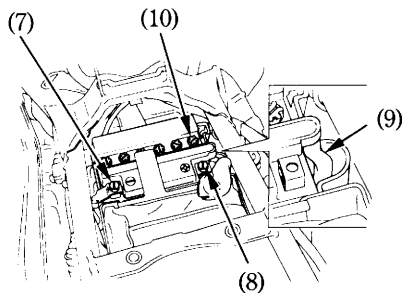

- (7) Negative terminal lead
- (8) Positive terminal lead
- (9) Breather tube
- (10) Filler caps

FUSE REPLACEMENT

(Refer to the maintenance precautions on page 61).


The main fuse (1), located near the rear brake reservoir behind the right side cover is :

30A

The spare main fuse (3) is located on battery strap.

The fuse box (4) is located under the left inner cover. The specified fuses are :

10A and 20A

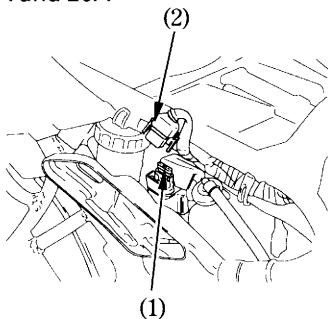

(1) Main fuse


(2) Wire connector

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

***Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat and right side cover (page 40), disconnect the wire connector (2) of the stator magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.


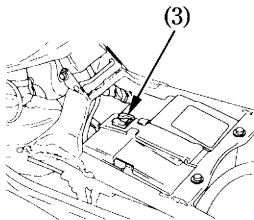


(3) Spare main fuse

To replace any fuses in the fuse box (4), remove the hex bolt (5) and left inner cover (6). Then open the fuse box cover (7). Spare fuses (8) are located in the fuse box. Pull the old fuse out of the clips. Push a new fuse into the clips and close the fuse box cover. Install the left inner cover and tighten the hex bolt.

⚠ WARNING

*** Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

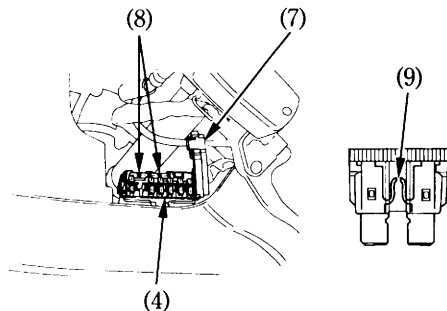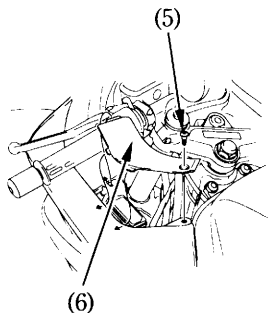

- (4) Fuse box
- (5) Hex bolt
- (6) Left inner cover

- (7) Fuse box cover
- (8) Spare fuses


- (9) Blown fuse

STOPLIGHT SWITCH ADJUSTMENT

(Refer to the maintenance precautions on page 61).

Check the operation of the stoplight switch (1) behind the right lower cover from time to time.

Adjustment is done by turning the adjusting nut (2). Turn the nut in the direction (A) if the switch operates too late and in direction (B) if the switch operates too soon.

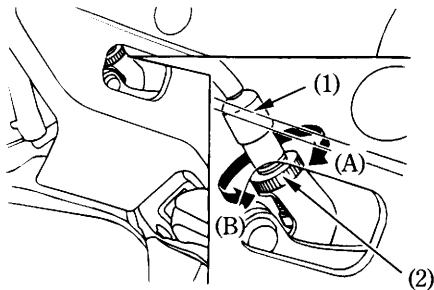

- (1) Stoplight switch
- (2) Adjusting nut

BULB REPLACEMENT

(Refer to the maintenance precautions on page 61).

Headlight/Position Light Bulb

⚠ WARNING

- * The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION:

- * Wear clean gloves while replacing the bulb.
- * Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break.
- * If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

NOTE:


- * Be sure to turn the ignition switch OFF when replacing the bulb.

Except Italian

1. Remove the lid (See page 41).
2. Pull off the socket (1) without turning.
3. Remove the seat rubber (2).
4. Unhook the bulb retainer (3) and pull out the headlight bulb (4) without turning.
5. Install a new bulb in the reverse order of removal.

NOTE:

- * Install the dust cover with its "TOP" mark facing up.
- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

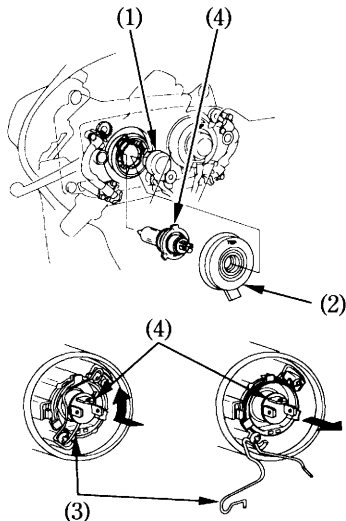

- (1) Socket
(2) Seat rubber



- (3) Bulb retainer
(4) Headlight bulb

Italian only

1. Remove the socket (1) by pulling it upward.
2. Slightly press down on the bulb (2) and turn it counterclockwise.
3. Install a new bulb (2).
4. Align the tab (3) of the socket with the hole in the headlight case (4) and press the socket into place on the headlight case securely.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

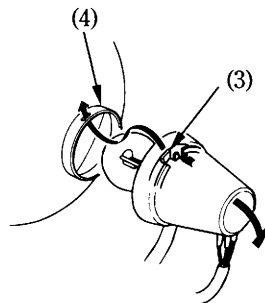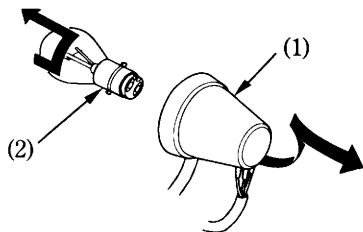

(1) Socket
(2) Bulb

(3) Tab
(4) Headlight case

Stop/Taillight Bulb

▲ WARNING

- * The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION:

- * Wear clean gloves while replacing the bulb.
- * If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.


NOTE:

- * Be sure to turn the ignition switch OFF when replacing the bulb.

1. Remove the rear seat (page 38).
2. Turn the socket (1) 90° counterclockwise, then pull it out toward you.
3. Slightly press down on the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

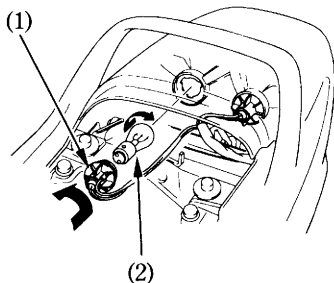

(1) Socket

(2) Bulb

Front/Rear Turn Signal Bulb

⚠ WARNING

- * The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION:

- * Wear clean gloves while replacing the bulb.
- * If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

NOTE:


- * Be sure to turn the ignition switch OFF when replacing the bulb.

<FRONT>

1. Remove the lid (page 41).
2. Turn the socket (1) 90 ° counterclockwise, then pull it out toward you.
3. Slightly press down on the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

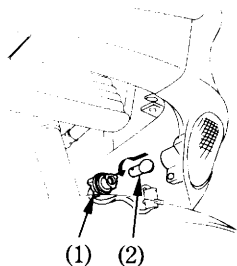

(1) Socket


(2) Bulb

< REAR >

1. Remove the turn signal lens from the turn signal by removing the screw (1).
2. Slightly press in on the bulb (2) and turn in 90° counterclockwise. Remove the bulb.
3. Install a new bulb in the reverse order of removal.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

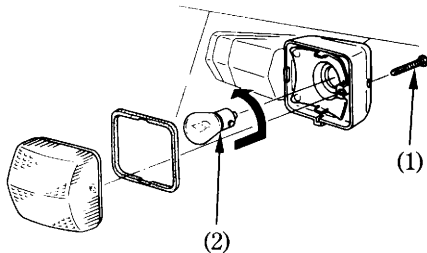

(1) Screw

(2) Bulb

CLEANING

Clean your motorcycle regularly to protect the surface finishes and inspect for damage, wear, and oil, coolant or brake fluid leakage.

CAUTION:

- * High pressure water (or air) can damage certain parts of the motorcycle.**

Avoid spraying high pressure water (typical in coin-operated car washes) at the following areas:

- Wheel Hubs
- Ignition Switch
- Carburetors
- Clutch Master Cylinder
- Brake Master Cylinders
- Instruments
- Handlebar Switches
- Muffler Outlets
- Under Fuel Tank
- Drive Chain
- Under Seat

1. After cleaning, rinse the motorcycle thoroughly with plenty of clean water. Strong detergent residue can corrode alloy parts.

NOTE:

- * Clean the fairing, headlight lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water. Rub the soiled area gently rinsing it frequently with fresh water.**
2. Dry the motorcycle, start the engine, and let it run for several minutes.

▲WARNING

- * Braking efficiency may be temporarily impaired immediately after washing the motorcycle. Anticipate longer stopping distance to avoid a possible accident.**

3. Test the brakes before riding the motorcycle. Several applications may be necessary to restore normal braking performance.
4. Lubricate the drive chain immediately after washing and drying the motorcycle.

Aluminum Wheel Maintenance

Aluminum corrodes when it comes in contact with dust, mud, road salt, etc. After riding, clean the wheels with a wet sponge and mild detergent, then rinse well with water and wipe dry with a clean cloth.

CAUTION:

- * Do not use steel wool or a cleaner containing abrasives or compounds to clean the wheels, as they can cause damage.

STORAGE GUIDE

Extended storage, such as for winter, requires that you take certain steps to reduce the effects of deterioration from non-use of the motorcycle. In addition, necessary repairs should be made **BEFORE** storing the motorcycle; otherwise, these repairs may be forgotten by the time the motorcycle is removed from storage.

STORAGE

1. Change the engine oil and filter.
2. Make sure the cooling system is filled with a 50/50% antifreeze solution.
3. Empty the fuel tank into an approved petrol container using a commercially available hand siphon or an equivalent method. Spray the inside of the tank with an aerosol rust-inhibiting oil.
Reinstall the fuel fill cap on the tank.

NOTE:

- * If storage will last more than one month, carburetor draining is very important, to assure proper performance after storage.

▲WARNING

- * **Petrol is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is drained or stored and where the fuel tank is refueled.**

4. To prevent rusting in the cylinders, perform the following:

- Remove the spark plug caps from the spark plugs. Using tape or string, secure the caps to any convenient plastic body part so that they are positioned away from the spark plugs.
- Remove the spark plugs from the engine and store them in a safe place. Do not connect the spark plugs to the spark plug caps.
- Pour a tablespoon (15–20 cc) of clean engine oil into each cylinder and cover the spark plug holes with a piece of cloth.
- Crank the engine several times to distribute the oil.
- Reinstall the spark plugs and spark plug caps.

5. Remove the battery. Store in an area protected from freezing temperatures and direct sunlight. Check the electrolyte level and slow charge the battery once a month.

6. Wash and dry the motorcycle. Wax all painted surfaces. Coat chrome with rustinhibiting oil.

7. Lubricate the drive chain (page 78).

8. Inflate the tyres to their recommended pressures. Place the motorcycle on blocks to raise both tyres off the ground.

9. Cover the motorcycle (don't use plastic or other coated materials) and store in an unheated area, free of dampness with a minimum of daily temperature variation. Do not store the motorcycle in direct sunlight.

REMOVAL FROM STORAGE

1. Uncover and clean the motorcycle.
Change the engine oil if more than 4 months have passed since the start of storage.
2. Check the battery electrolyte level and charge the battery as required. Install the battery.
3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.
4. Perform all Pre-ride Inspection checks (page 43).
Test ride the motorcycle at low speeds in a safe riding area away from traffic.

SPECIFICATIONS

DIMENSIONS

Overall length	2,235 mm (88.0 in) ...F, IT, ED, E, U
	2,270 mm (89.4 in) ...G, AR, SW, ND
Overall width	740 mm (29.1 in)
Overall height	1,215 mm (47.8 in)
Wheel base	1,505 mm (59.3 in) (Except SW, U)
	1,500 mm (59.1 in) (SW, U only)

WEIGHT

Dry weight	235 kg (518 lbs) (Except SW, AR)
	236 kg (520 lbs) (SW, AR only)

CAPACITIES

Engine oil (After draining and oil filter change) (After disassembly)	3.8 ℓ (4.0 US qt , 3.3 Imp qt)
	4.5 ℓ (4.8 US qt , 4.0 Imp qt)
Fuel tank	22.0 ℓ (5.81 US gal , 4.84 Imp gal)
Fuel reserve	3.5 ℓ (0.92 US gal , 0.77 Imp gal)
Cooling system capacity	2.8 ℓ (0.74 US gal , 0.62 Imp gal)
Passenger capacity load	Operator and one passenger
Maximum weight capacity	185 kg (408 lbs)

ENGINE

Bore and stroke	77.0 x 53.6 mm (3.03 x 2.11 in)
Compression ratio	10.5 : 1
Displacement	998 cm ³ (60.9 cu-in)
Spark plug	
Standard	DPR9EA-9 (NGK) or X27EPR-U9 (NIPPONDENSO) (Except F)
	DPR8EA-9 (NGK) or X24EPR-U9 (NIPPONDENSO) (F only)
For extended high speed riding	DPR9EA-9 (NGK) or X27EPR-U9 (NIPPONDENSO) (F only)
Spark plug gap	0.80-0.90 mm (0.031-0.035 in)
Idle speed	1,000 ± 100 min ⁻¹ (rpm) (Except SW,AR) 1,050 ± 50 min ⁻¹ (rpm) (SW only) 1,050 ± 100 min ⁻¹ (rpm) (AR only)

CHASSIS AND SUSPENSION

Caster	27°
Trail	110 mm (4.3 in)
Tyre size, front	120/70 VR17 – V270
Tyre size, rear	170/60 VR17 – V270

POWER TRANSMISSION

Primary reduction	1.785
Gear ratio, 1st	2.750
2nd	2.066
3rd	1.647
4th	1.368
5th	1.173
6th	1.045
Final reduction	2.412 (Except SW, U)
	2.470 (SW, U only)

ELECTRICAL

Battery
Generator

12V—14AH
AC Generator

LIGHTS

Headlight (HIGH/LOW)

12V—60/55W x 2...E
12V—60/55W, 12V—60W(Except E, IT, U)
12V—45/45W x 2...U
12V—60/55W...IT

Position light

12V—5W(Except U)

Tail/brake light

12V—5/21W x 2

Turn signal light Front
 Rear

12V—21W

12V—21W

Instrument lights

12V—1.7W x 4

Neutral indicator

12V—3.4W

Turn signal indicator

12V—3.4W

High beam indicator

12V—3.4W

Low oil pressure indicator

12V—3.4W

Side stand indicator

12V—3.4W

 
FUSE

Main fuse
Other fuses


30A
10A, 20A

NOISE CONTROL SYSTEM (AUSTRALIA ONLY)

TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED: Owners are warned that the law may prohibit : (a) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; and (b) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.




CBR1000F (U)

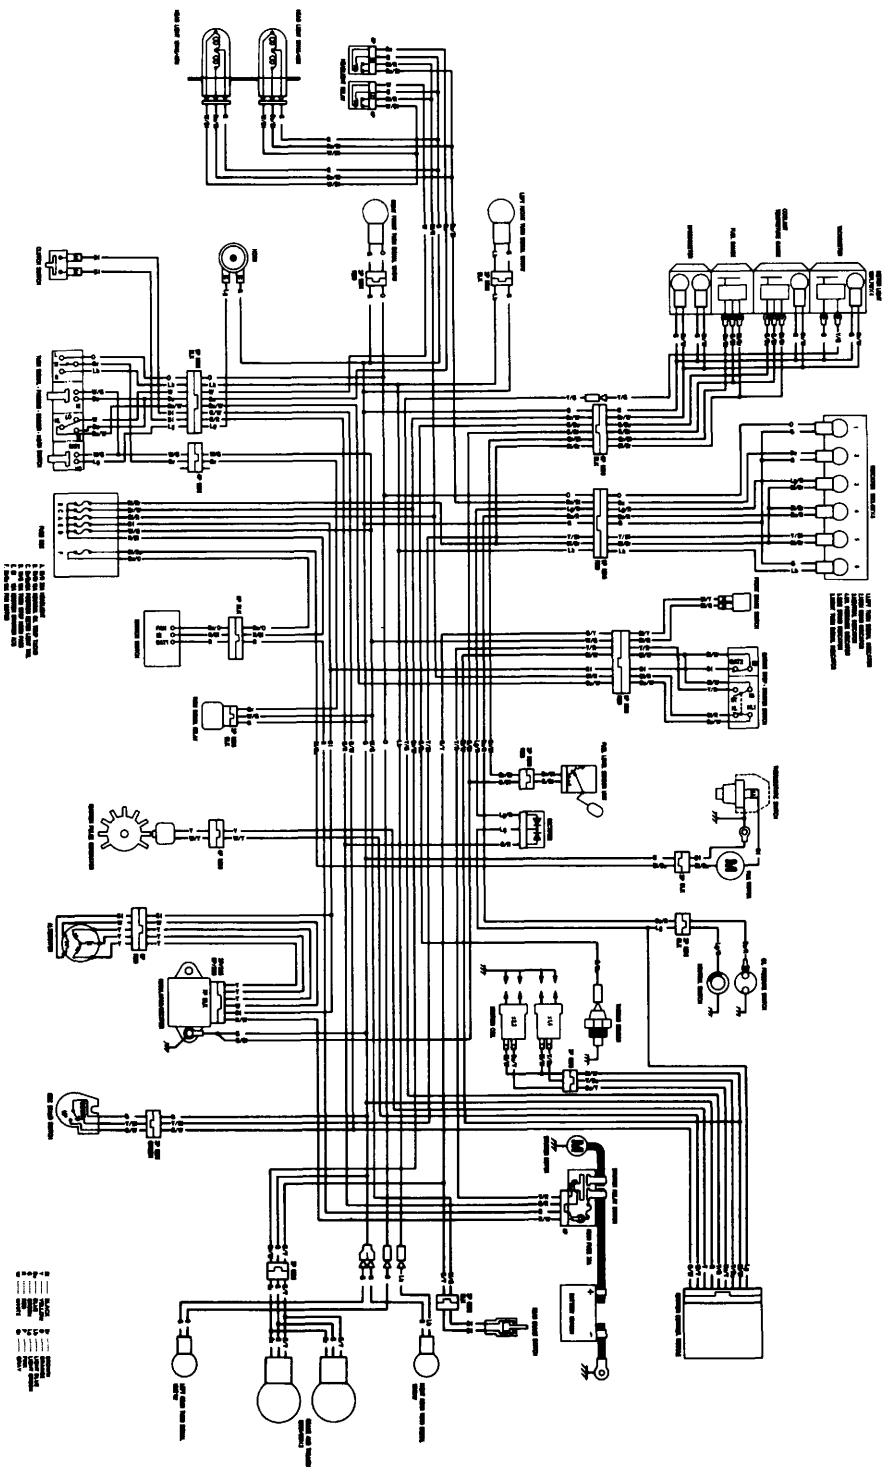


1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36
37	38	39	40	41	42
43	44	45	46	47	48
49	50	51	52	53	54
55	56	57	58	59	60
61	62	63	64	65	66
67	68	69	70	71	72
73	74	75	76	77	78
79	80	81	82	83	84
85	86	87	88	89	90
91	92	93	94	95	96
97	98	99	100	101	102
103	104	105	106	107	108
109	110	111	112	113	114
115	116	117	118	119	120
121	122	123	124	125	126
127	128	129	130	131	132
133	134	135	136	137	138
139	140	141	142	143	144
145	146	147	148	149	150
151	152	153	154	155	156
157	158	159	160	161	162
163	164	165	166	167	168
169	170	171	172	173	174
175	176	177	178	179	180
181	182	183	184	185	186
187	188	189	190	191	192
193	194	195	196	197	198
199	200	201	202	203	204
205	206	207	208	209	210
211	212	213	214	215	216
217	218	219	220	221	222
223	224	225	226	227	228
229	230	231	232	233	234
235	236	237	238	239	240
241	242	243	244	245	246
247	248	249	250	251	252
253	254	255	256	257	258
259	260	261	262	263	264
265	266	267	268	269	270
271	272	273	274	275	276
277	278	279	280	281	282
283	284	285	286	287	288
289	290	291	292	293	294
295	296	297	298	299	300
301	302	303	304	305	306
307	308	309	310	311	312
313	314	315	316	317	318
319	320	321	322	323	324
325	326	327	328	329	330
331	332	333	334	335	336
337	338	339	340	341	342
343	344	345	346	347	348
349	350	351	352	353	354
355	356	357	358	359	360
361	362	363	364	365	366
367	368	369	370	371	372
373	374	375	376	377	378
379	380	381	382	383	384
385	386	387	388	389	390
391	392	393	394	395	396
397	398	399	400	401	402
403	404	405	406	407	408
409	410	411	412	413	414
415	416	417	418	419	420
421	422	423	424	425	426
427	428	429	430	431	432
433	434	435	436	437	438
439	440	441	442	443	444
445	446	447	448	449	450
451	452	453	454	455	456
457	458	459	460	461	462
463	464	465	466	467	468
469	470	471	472	473	474
475	476	477	478	479	480
481	482	483	484	485	486
487	488	489	490	491	492
493	494	495	496	497	498
499	500	501	502	503	504
505	506	507	508	509	510
511	512	513	514	515	516
517	518	519	520	521	522
523	524	525	526	527	528
529	530	531	532	533	534
535	536	537	538	539	540
541	542	543	544	545	546
547	548	549	550	551	552
553	554	555	556	557	558
559	560	561	562	563	564
565	566	567	568	569	570
571	572	573	574	575	576
577	578	579	580	581	582
583	584	585	586	587	588
589	590	591	592	593	594
595	596	597	598	599	600
601	602	603	604	605	606
607	608	609	610	611	612
613	614	615	616	617	618
619	620	621	622	623	624
625	626	627	628	629	630
631	632	633	634	635	636
637	638	639	640	641	642
643	644	645	646	647	648
649	650	651	652	653	654
655	656	657	658	659	660
661	662	663	664	665	666
667	668	669	670	671	672
673	674	675	676	677	678
679	680	681	682	683	684
685	686	687	688	689	690
691	692	693	694	695	696
697	698	699	700	701	702
703	704	705	706	707	708
709	710	711	712	713	714
715	716	717	718	719	720
721	722	723	724	725	726
727	728	729	730	731	732
733	734	735	736	737	738
739	740	741	742	743	744
745	746	747	748	749	750
751	752	753	754	755	756
757	758	759	760	761	762
763	764	765	766	767	768
769	770	771	772	773	774
775	776	777	778	779	780
781	782	783	784	785	786
787	788	789	790	791	792
793	794	795	796	797	798
799	800	801	802	803	804
805	806	807	808	809	810
811	812	813	814	815	816
817	818	819	820	821	822
823	824	825	826	827	828
829	830	831	832	833	834
835	836	837	838	839	840
841	842	843	844	845	846
847	848	849	850	851	852
853	854	855	856	857	858
859	860	861	862	863	864
865	866	867	868	869	870
871	872	873	874	875	876
877	878	879	880	881	882
883	884	885	886	887	888
889	890	891	892	893	894
895	896	897	898	899	900
901	902	903	904	905	906
907	908	909	910	911	912
913	914	915	916	917	918
919	920	921	922	923	924
925	926	927	928	929	930
931	932	933	934	935	936
937	938	939	940	941	942
943	944	945	946	947	948
949	950	951	952	953	954
955	956	957	958	959	960
961	962	963	964	965	966
967	968	969	970	971	972
973	974	975	976	977	978
979	980	981	982	983	984
985	986	987	988	989	990
991	992	993	994	995	996
997	998	999	1000	1001	1002
1003	1004	1005	1006	1007	1008
1009	1010	1011	1012	1013	1014
1015	1016	1017	1018	1019	1020
1021	1022	1023	1024	1025	1026
1027	1028	1029	1030	1031	1032
1033	1034	1035	1036	1037	1038
1039	1040	1041	1042	1043	1044
1045	1046	1047	1048	1049	1050
1051	1052	1053	1054	1055	1056
1057	1058	1059	1060	1061	1062
1063	1064	1065	1066	1067	1068
1069	1070	1071	1072	1073	1074
1075	1076	1077	1078	1079	1080
1081	1082	1083	1084	1085	1086
1087	1088	1089	1090	1091	1092
1093	1094	1095	1096	1097	1098
1099	1100	1101	1102	1103	1104
1105	1106	1107	1108	1109	1110
1111	1112	1113	1114	1115	1116
1117	1118	1119	1120	1121	1122
1123	1124	1125	1126	1127	1128
1129	1130	1131	1132	1133	1134
1135	1136	1137	1138	1139	1140
1141	1142	1143	1144	1145	1146
1147	1148	1149	1150	1151	1152
1153	1154	1155	1156	1157	1158
1159	1160	1161	1162	1163	1164
1165	1166	1167	1168	1169	1170
1171	1172	1173	1174	1175	1176
1177	1178	1179	1180	1181	1182
1183	1184	1185	1186	1187	1188
1189	1190	1191	1192	1193	1194
1195	1196	1197	1198	1199	1200
1201	1202	1203	1204	1205	1206
1207	1208	1209	1210	1211	1212
1213	1214	1215	1216	1217	1218
1219	1220	1221	1222	1223	1224
1225	1226	1227	1228	1229	1230
1231	1232	1233	1234	1235	1236
1237	1238	1239	1240	1241	1242
1243	1244	1245	1246	1247	1248
1249	1250	1251	1252	1253	1254
1255	1256	1257	1258	1259	1260
1261	1262	1263	1264	1265	1266
1267	1268	1269	1270	1271	1272
1273	1274	1275	1276	1277	1278
1279	1280	1281	1282	1283	1284
1285	1286	1287	1288	1289	1290
1291	1292	1293	1294	1295	1296
1297	1298	1299	1300	1301	1302
1303	1304	1305	1306	1307	1308
1309	1310	1311	1312	1313	1314
1315	1316	1317	1318	1319	1320
1321	1322	1323	1324	1325	1326
1327	1328	1329	1330	1331	1332
1333	1334	1335	1336	1337	1338
1339	1340	1341	1342	1343	1344
1345	1346	1347	1348	1349	1350
1351	1352	1353	1354	1355	1356
1357	1358	1359	1360	1361	1362
1363	1364	1365	1366	1367	1368
1369	1370	1371	1372	1373	1374
1375	1376	1377	1378	1379	1380
1381	1382	1383	1384	1385	1386
1387	1388	1389	1390	1391	1392
1393	1394	1395	13		

CBR1000F (F, ED, ND, G)

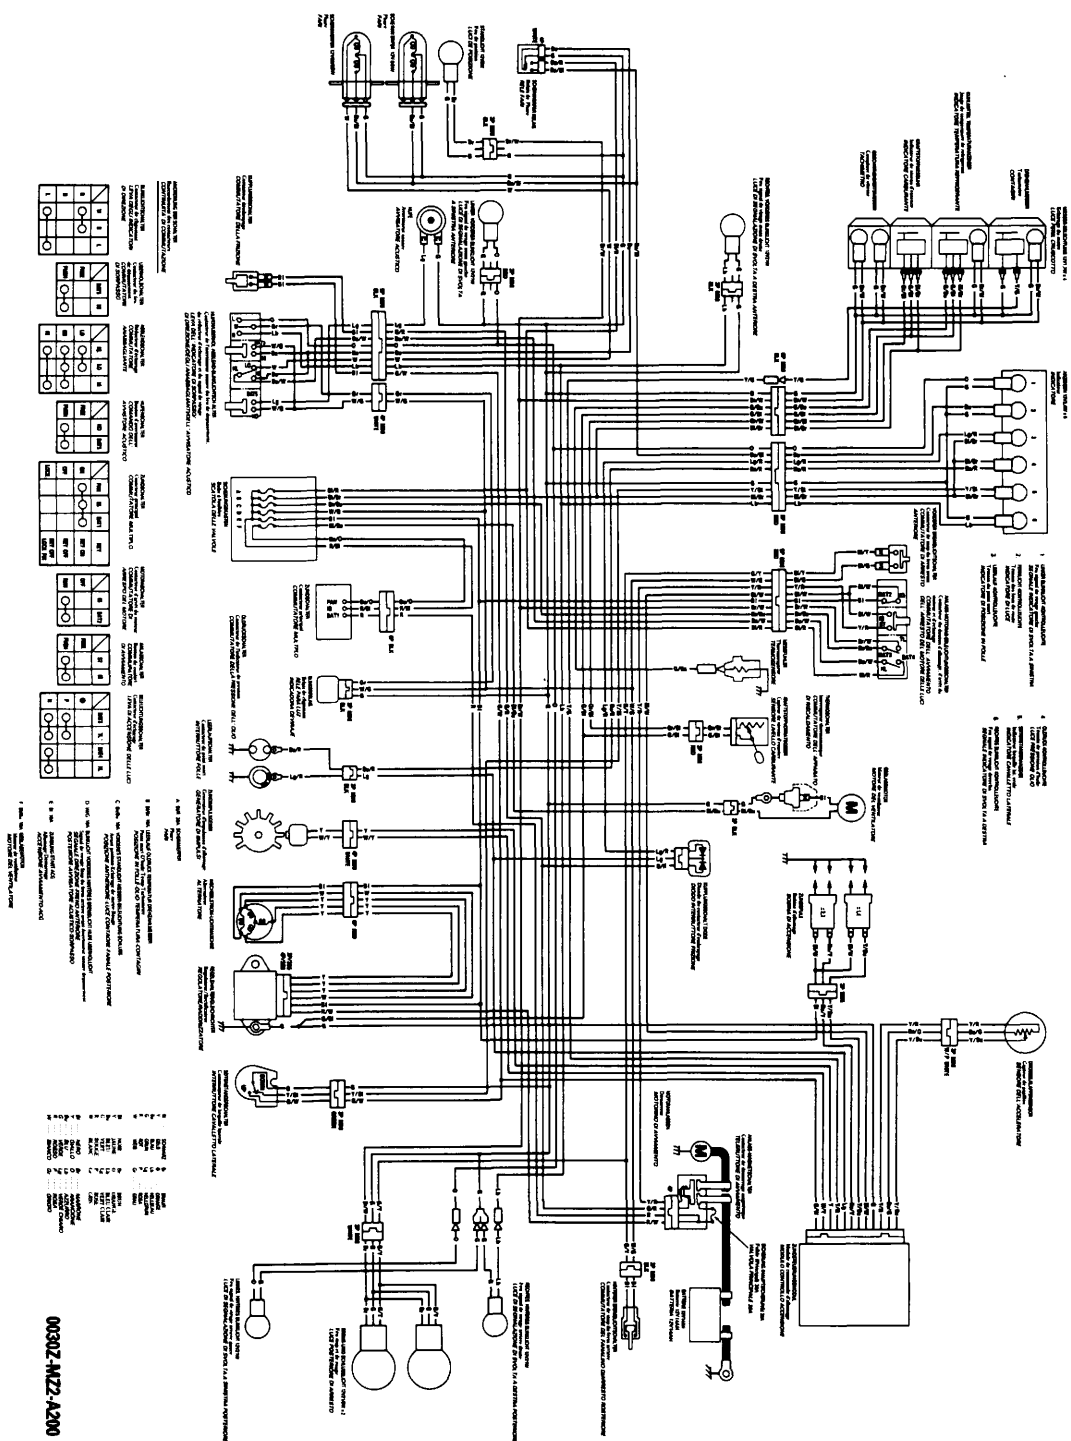

CBR1000F (F, ED, ND, G)

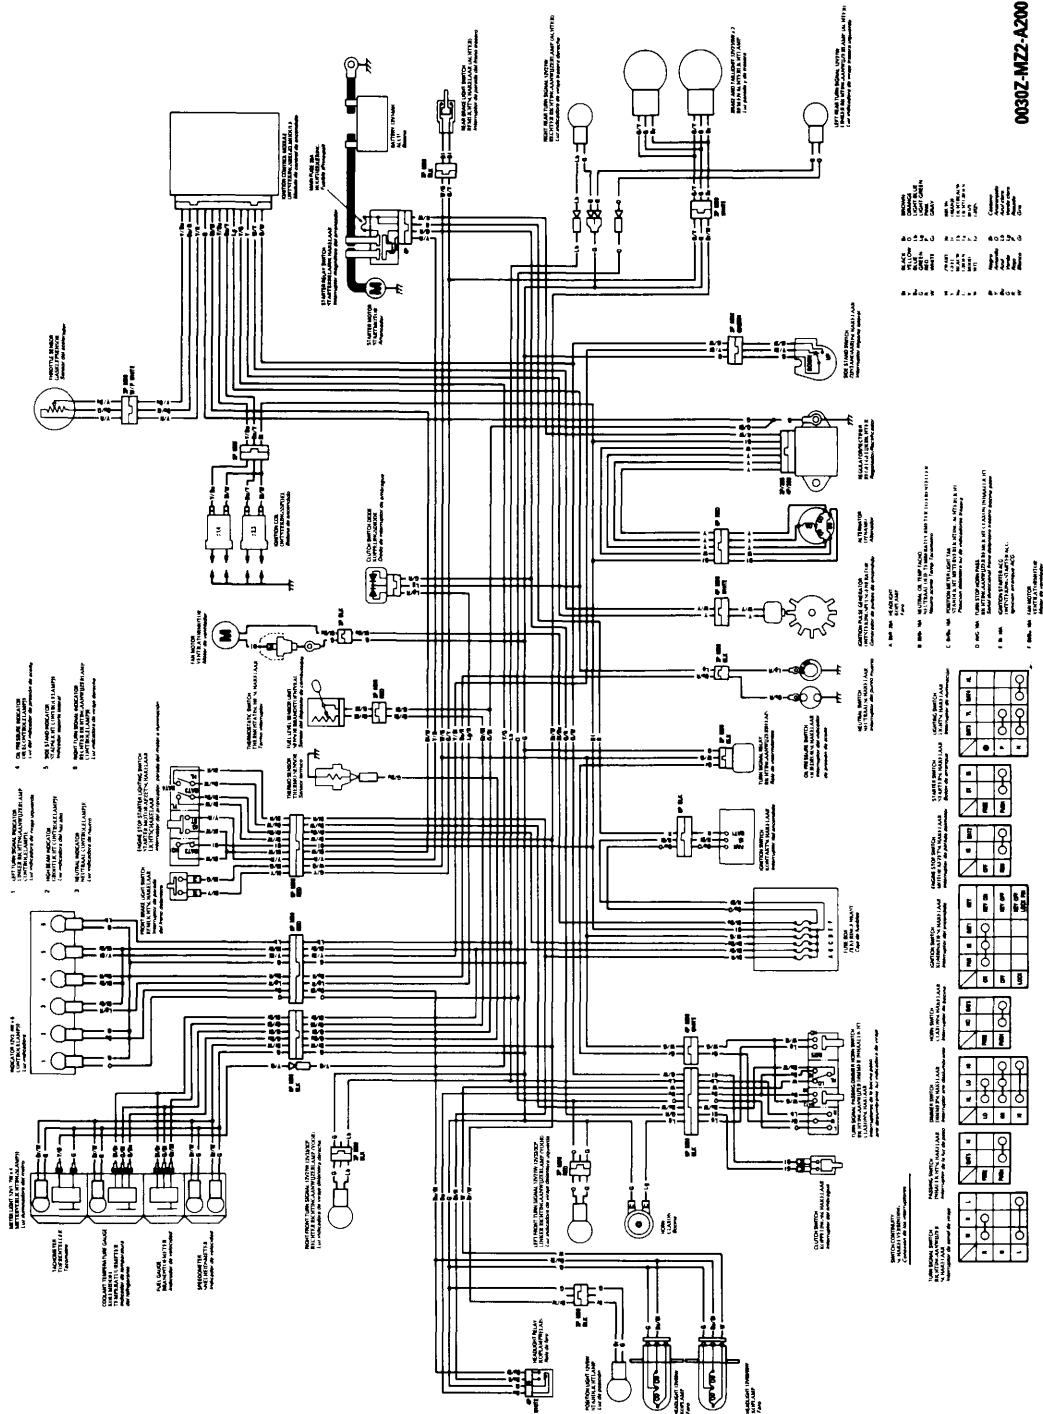

0030Z-MZ2-A200