


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 50

SCHEMATIC DRAWING

2

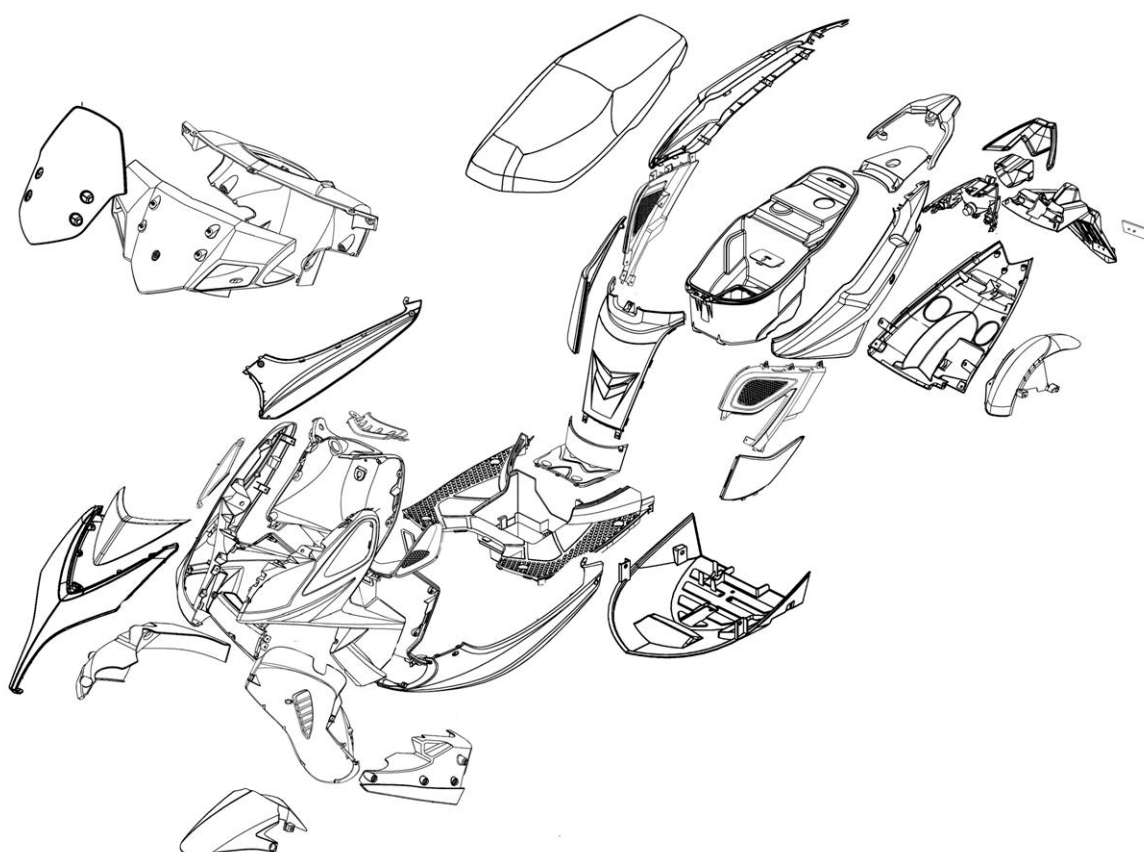

2. FRAME COVERS/EXHAUST MUFFLER

SERVICE INFORMATION	2-1	EXHAUST MUFFLER REMOVAL	2-5
FRAME COVERS	2-2		

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- When removing frame covers, use special care not to pull them by force because the cover joint claws may be damaged.

Items Related for Removal

- Handlebar front cover ——— Handlebar rear cover
Headlight wire connector
- Handlebar rear cover ——— Speedometer cable and instrument light
wire connectors, etc.
- Frame body cover ——— Met-in box, rear grip, rear turn signal
lights, floor board
- Floor board ——— Frame body cover
Battery and wire connectors
- Leg Shield ——— Front cover, floor board

TORQUE VALUES

Exhaust muffler joint lock nut	1.0~1.4kgf-m
Exhaust muffler lock bolt	3.0~3.6kgf-m


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 50

FRAME COVERS


FRONT COVER REMOVAL

Remove the screw on the front cover.
Remove the two screws on the back of the front cover.
Remove the front cover.
Remove the two bolt and ten screws attaching the R/L mole side.
Remove the R/L mole side
The installation sequence is the reverse of removal.

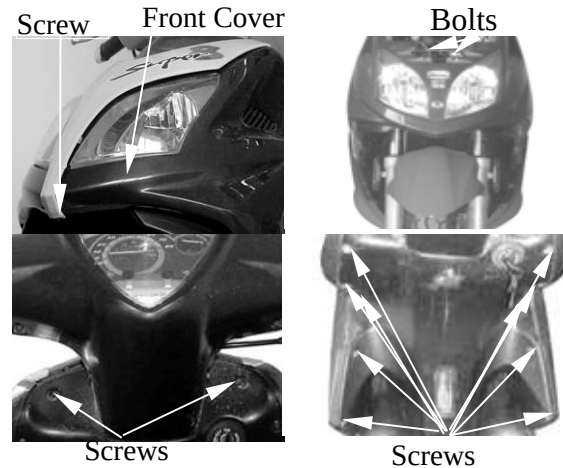


HANDLEBAR REAR COVER REMOVAL

Remove the handlebar rear cover screw.
Disconnect the speedometer cable, right and left handlebar switch couplers, and the stop switch wire connectors.
Remove two screws inside the handlebar rear cover and remove the handlebar rear cover.
The installation sequence is the reverse of removal.

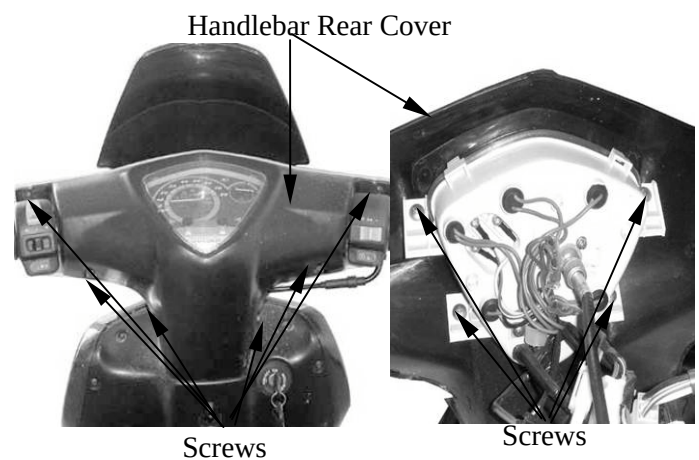


HANDLEBAR FRONT COVER REMOVAL

Remove the bolt attaching the handlebar front cover.
Remove the handlebar front cover.

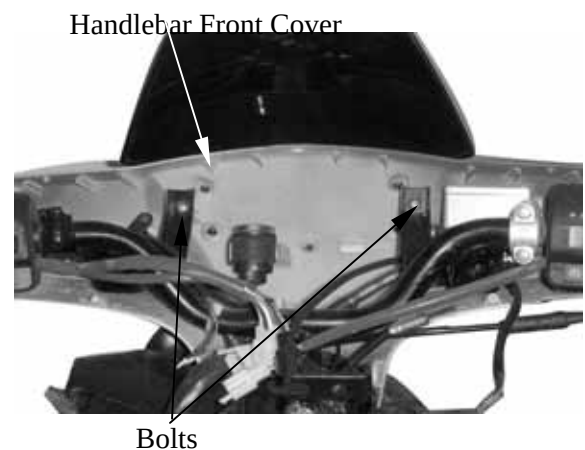

MET-IN BOX REMOVAL

Open the seat and remove the four bolt attaching the met-in box.
Remove the met-in box .

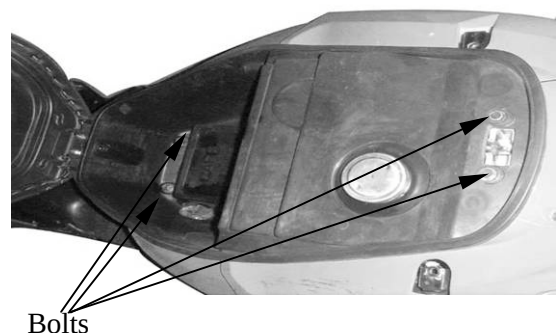


2. FRAME COVERS/EXHAUST MUFFLER


SUPER8 50

FRAME BODY COVER REMOVAL


Remove the two screws on the battery cover.
Remove the center cover

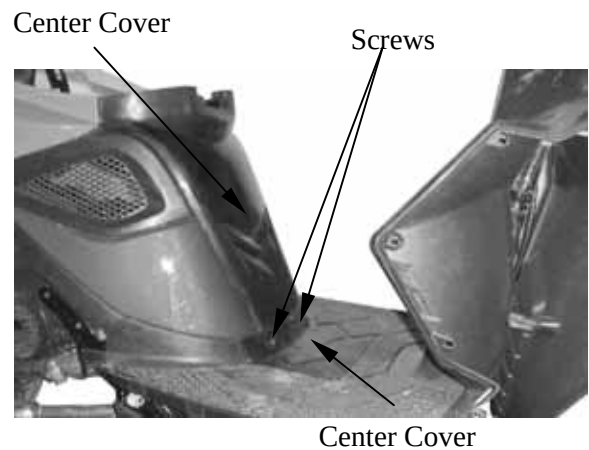

Remove the three bolts attaching the rear carrier.
Remove the rear carrier.

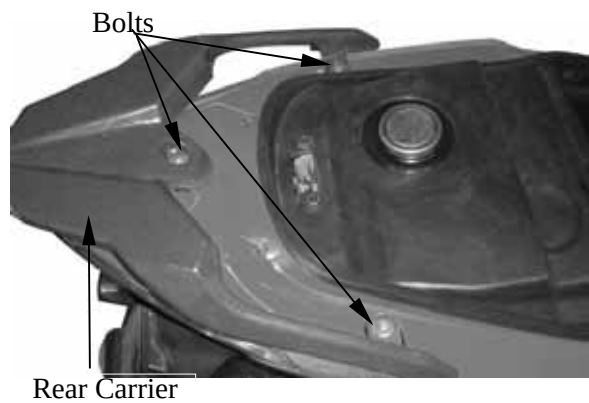

Remove the two bolt attaching the left and right rear step.
Remove the rear step

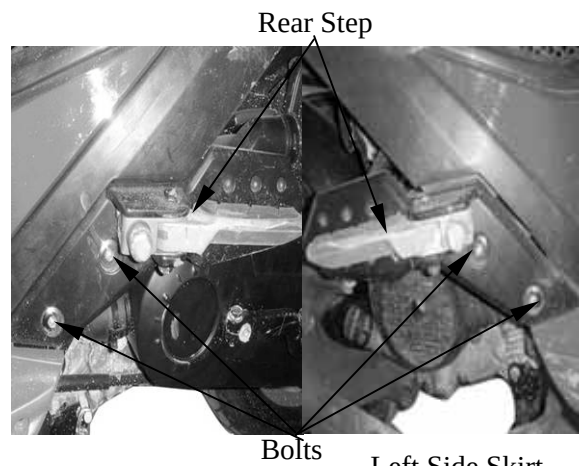


Remove the two screws attaching the left side and right side skirt

Remove the left side and right side skirt

*

During removal, do not pull the joint claws forcibly to avoid damage.
When installing, be sure to connect the seat lock wire.

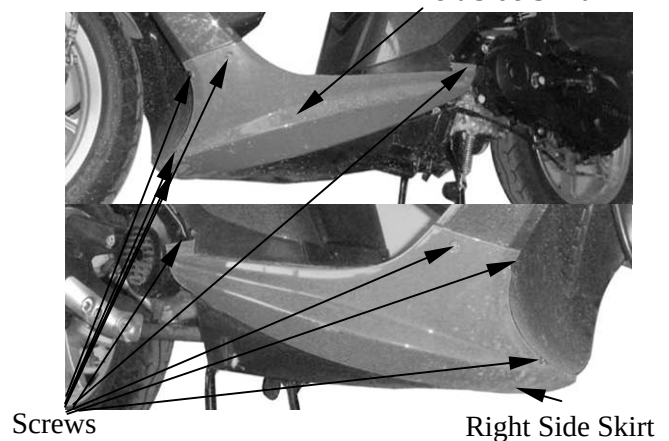


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 50

Remove the two screws on the center rear cover.
Remove the center rear cover.

Center Rear Cover.

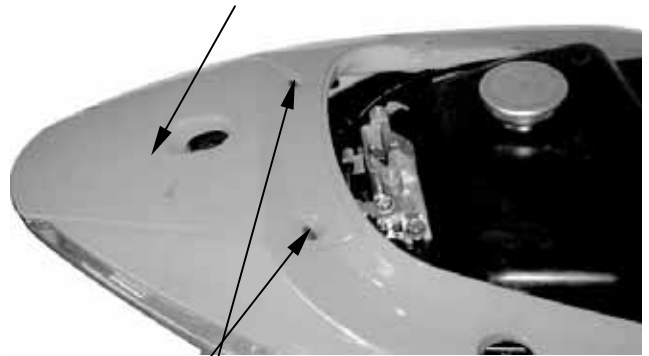


Remove the two bolts attaching the frame body cover.



Bolts

Remove the two bolts attaching the rear fender.
Disconnect the taillight wire connector
Remove the rear fender.

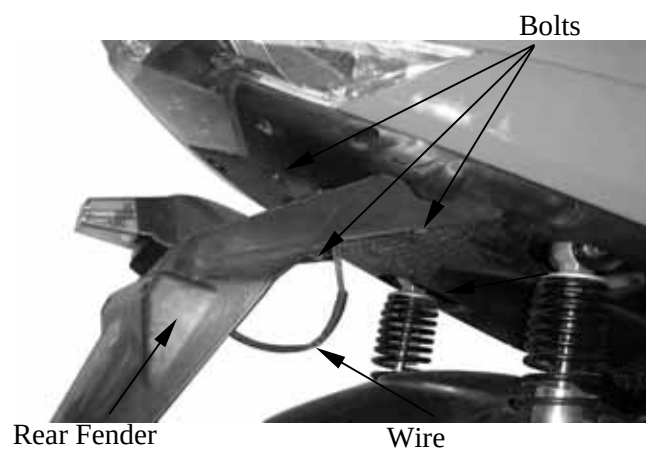


Bolts

Rear Fender

Wire

Remove the six screws attaching the fender rear inner.

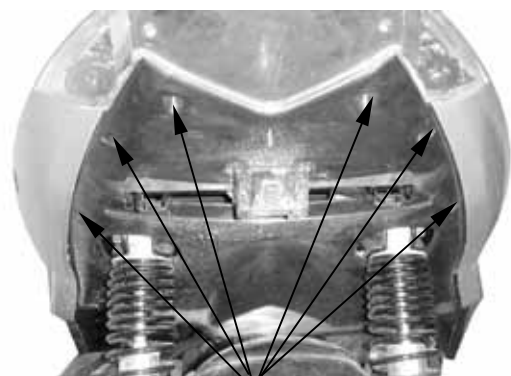

Screws


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 50

Disconnect the seat lock wire.
 Disconnect the tail lamp wire connectors
 Remove the left and right body cover
 The installation sequence is the reverse of remove

***** During removal, do not pull the joint claws forcibly to avoid damage.
 When installing, be sure to connect the seat lock wire.


Seat Lock Wire

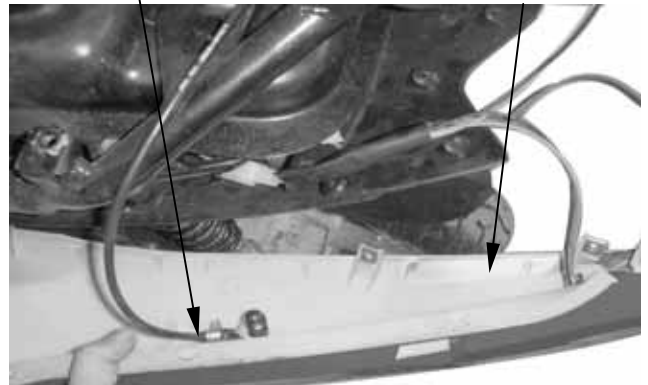

FLOOR BOARD REMOVAL

Remove the rear carrier. (⇒2-3)
 Remove the met-in box. (⇒2-3)
 Remove the frame body cover. (⇒2-4)
 Remove the four bolts attaching the floor board.
 Remove the floor board.

Bolts

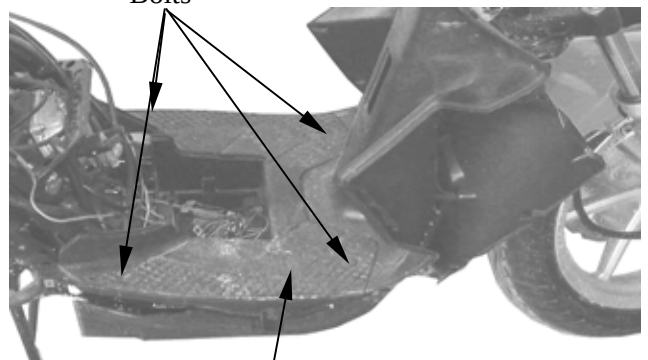


Floor Board.

FRONT FENDER AND UNDER COWL REMOVAL

Remove the two on the under cowl.
 Remove the under cowl.
 Remove the L/R side bolts attaching the front fender and front fender.

Under Cowl

Screws

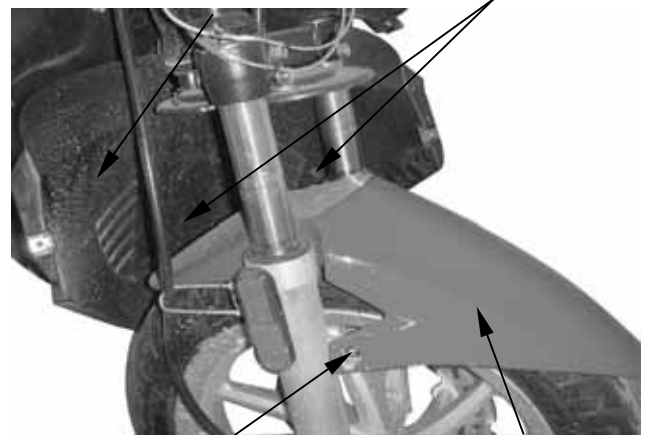

Bolt


Front Fender

LEG SHIELD REMOVAL

Remove the two clip body on the lid leg shield
 Remove the lid leg shield.
 The installation sequence is the reverse of remove

Clip Body.


Lid Leg Shield.

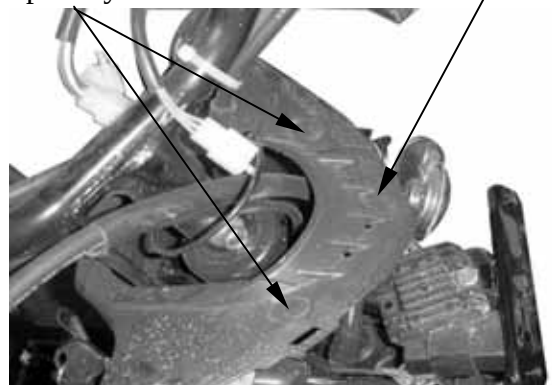

2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 50

Remove the decorative ring.
Remove the leg shield.
The installation sequence is the reverse of remove

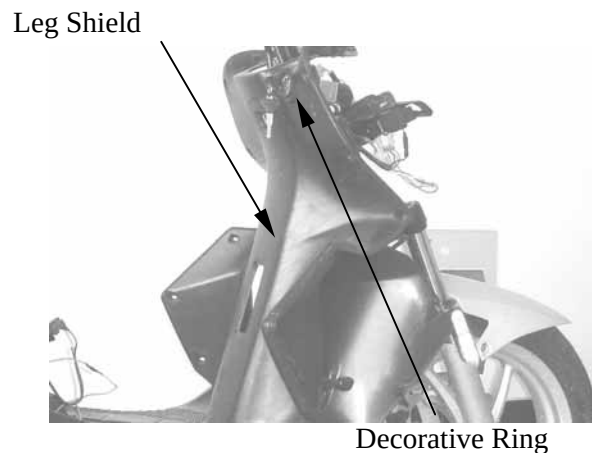

EXHAUST MUFFLER REMOVAL

Remove the two exhaust muffler joint lock nuts.
Remove the two exhaust muffler lock bolts.
Remove the exhaust muffler.
Remove the exhaust muffler joint packing collar.

When installing, first install the exhaust muffler packing collar and then install the exhaust muffler.
First install and tighten the exhaust muffler joint lock nuts. Then, install and tighten the exhaust muffler lock bolts.

Torques:


Exhaust muffler lock bolt: 3.0~3.6kgf-m

Exhaust muffler joint lock nut: 1.0~1.4kgf-m

* Be sure to install a new exhaust muffler packing collar.



Bolts

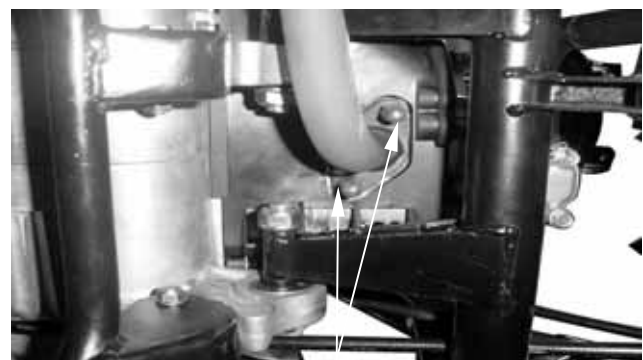

Lock Nut