

FOREWORD

This manual contains an introductory description on the SUZUKI LT-A500XP/Z and procedures for its inspection/service and overhaul of its main components.

Other information considered as generally known is not included.

Read the GENERAL INFORMATION section to familiarize yourself with the vehicle and its maintenance. Use this section as well as other sections to use as a guide for proper inspection and service.

This manual will help you know the vehicle better so that you can assure your customers of fast and reliable service.

- * This manual has been prepared on the basis of the latest specifications at the time of publication. If modifications have been made since then, differences may exist between the content of this manual and the actual vehicle.*
- * Illustrations in this manual are used to show the basic principles of operation and work procedures. They may not represent the actual vehicle exactly in detail.*
- * This manual is written for persons who have enough knowledge, skills and tools, including special tools, for servicing SUZUKI vehicles. If you do not have the proper knowledge and tools, ask your authorized SUZUKI motorcycle dealer to help you.*

⚠ WARNING

Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual.

Improper repair may result in injury to the mechanic and may render the vehicle unsafe for the rider.

SUZUKI MOTOR CORPORATION

TABLE OF CONTENTS

Precautions.....	00-i	Body and Accessories.....	9-i
Precautions	00-1	Precautions	9-1
General Information	0-i	Wiring Systems	9A-1
General Information	0A-1	Lighting Systems	9B-1
Maintenance and Lubrication	0B-1	Combination Meter / Fuel Meter / Horn	9C-1
Service Data.....	0C-1	Exterior Parts	9D-1
Engine	1-i	Body Structure	9E-1
Precautions	1-1		
Engine General Information and Diagnosis	1A-1		
Emission Control Devices	1B-1		
Engine Electrical Devices.....	1C-1		
Engine Mechanical.....	1D-1		
Engine Lubrication System	1E-1		
Engine Cooling System.....	1F-1		
Fuel System	1G-1		
Ignition System.....	1H-1		
Starting System.....	1I-1		
Charging System.....	1J-1		
Exhaust System	1K-1		
Suspension.....	2-i		
Precautions	2-1		
Suspension General Diagnosis.....	2A-1		
Front Suspension	2B-1		
Rear Suspension.....	2C-1		
Wheels and Tires	2D-1		
Driveline / Axle	3-i		
Precautions	3-1		
Drive Chain / Drive Train / Drive Shaft.....	3A-1		
Differential	3B-1		
Transfer	3C-1		
Propeller Shafts.....	3D-1		
Brake	4-i		
Precautions	4-1		
Brake Control System and Diagnosis	4A-1		
Front Brakes.....	4B-1		
Rear Brakes	4C-1		
Parking Brake.....	4D-1		
Transmission / Transaxle	5-i		
Precautions	5-1		
Automatic Transmission.....	5A-1		
Steering	6-i		
Precautions	6-1		
Steering General Diagnosis	6A-1		
Steering / Handlebar	6B-1		
Power Assisted Steering System	6C-1		

00

0

1

2

3

4

5

6

9

Section 00



Precautions

CONTENTS

Precautions	00-1	General Precautions	00-1
Precautions.....	00-1	Precautions for Electrical Circuit Service	00-2
Warning / Caution / Note	00-1		

Precautions

Precautions

Warning / Caution / Note

B931H20000001

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words WARNING, CAUTION and NOTE have special meanings. Pay special attention to the messages highlighted by these signal words.

⚠ WARNING

Indicates a potential hazard that could result in death or injury.

⚠ CAUTION

Indicates a potential hazard that could result in vehicle damage.

NOTE

Indicates special information to make maintenance easier or instructions clearer.

Please note, however, that the warnings and cautions contained in this manual cannot possibly cover all potential hazards relating to the servicing, or lack of servicing, of the vehicle. In addition to the WARNINGS and CAUTIONS stated, you must use good judgement and basic mechanical safety principles. If you are unsure about how to perform a particular service operation, ask a more experienced mechanic for advice.

General Precautions

B931H20000002

⚠ WARNING

- Proper service and repair procedures are important for the safety of the service mechanic and the safety and reliability of the vehicle.
- When 2 or more persons work together, pay attention to the safety of each other.
- When it is necessary to run the engine indoors, make sure that exhaust gas is forced outdoors.
- When working with toxic or flammable materials, make sure that the area you work in is well ventilated and that you follow all of the material manufacturer's instructions.
- Never use gasoline as a cleaning solvent.

- To avoid getting burned, do not touch the engine, engine oil, radiator and exhaust system until they have cooled.
- After servicing the fuel, oil, water, exhaust or brake systems, check all lines and fittings related to the system for leaks.

⚠ CAUTION

- If parts replacement is necessary, replace the parts with Suzuki Genuine Parts or their equivalent.
- When removing parts that are to be reused, keep them arranged in an orderly manner so that they may be reinstalled in the proper order and orientation.
- Be sure to use special tools when instructed.
- Make sure that all parts used in reassembly are clean. Lubricate them when specified.
- Use the specified lubricant, bond, or sealant.
- When removing the battery, disconnect the negative (–) cable first and then the positive (+) cable.
- When reconnecting the battery, connect the positive (+) cable first and then the negative (–) cable, and replace the terminal cover on the positive (+) terminal.
- When performing service to electrical parts, if the service procedures do not require use of battery power, disconnect the negative (–) cable the battery.
- When tightening the cylinder head or case bolts and nuts, tighten the larger sizes first. Always tighten the bolts and nuts diagonally from the inside toward outside and to the specified tightening torque.
- Whenever you remove oil seals, gaskets, packing, O-rings, locking washers, self-locking nuts, cotter pins, circlips and certain other parts as specified, be sure to replace them with new ones. Also, before installing these new parts, be sure to remove any left over material from the mating surfaces.

- **Never reuse a circlip. When installing a new circlip, take care not to expand the end gap larger than required to slip the circlip over the shaft. After installing a circlip, always ensure that it is completely seated in its groove and securely fitted.**
- **Use a torque wrench to tighten fasteners to the specified torque. Wipe off grease and oil if a thread is smeared with them.**
- **After reassembling, check parts for tightness and proper operation.**
- **To protect the environment, do not unlawfully dispose of used motor oil, engine coolant and other fluids: batteries, and tires.**
- **To protect Earth's natural resources, properly dispose of used vehicle and parts.**

Precautions for Electrical Circuit Service


B931H20000003

When handling the electrical parts or servicing the FI systems, observe the following points for the safety of the systems.

Electrical Parts

Connector / Coupler


- Faulty FI system is often related to poor electrical contact of connector/coupler. Before servicing individual electronic part, check electrical contact of the connector/coupler.
- When connecting a connector, be sure to push it in until a click is felt.

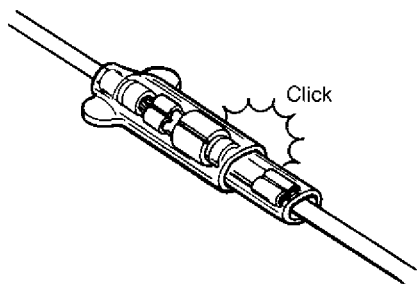

I310G1000001-01


- With a lock type coupler, be sure to release the lock when disconnecting, and push it in fully to engage the lock when connecting.
- When disconnecting the coupler, be sure to hold the coupler body and do not pull the lead wires.
- Inspect each terminal on the connector/coupler for looseness or bending.
- Push in the coupler straightly. An angled or skewed insertion may cause the terminal to be deformed, possibly resulting in poor electrical contact.

- Inspect each terminal for corrosion and contamination. The terminals must be clean and free of any foreign material which could impede proper terminal contact.
- Before refitting the sealed coupler, make sure its seal rubber is positioned properly. The seal rubber may possibly come off the position during disconnecting work and if the coupler is refitted with the seal rubber improperly positioned, it may result in poor water sealing.

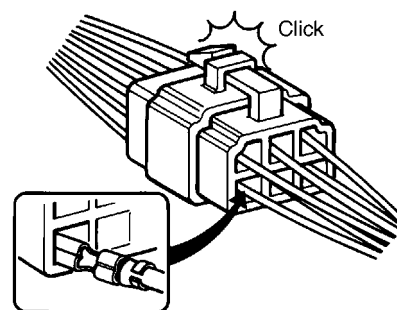


I310G1000002-01

- Inspect each lead wire circuit for poor connection by shaking it by hand lightly. If any abnormal condition is found, repair or replace.

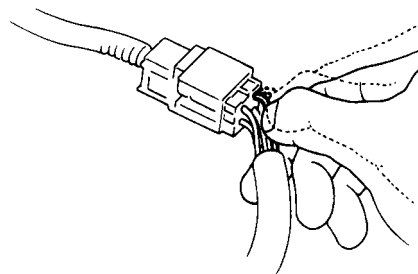

I310G1000003-02

- When taking measurements at electrical connectors using a tester probe, be sure to insert the probe from the wire harness side (backside) of the connector/coupler.

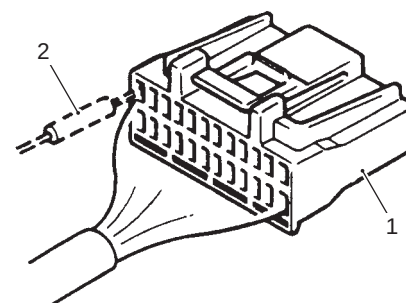


I649G1000013-02

1. Coupler	2. Probe
------------	----------

00-3 Precautions:

- When connecting meter probe from the terminal side of the coupler (where connection from harness side not being possible), use extra care not to force and cause the male terminal to bend or the female terminal to open. Connect the probe as shown to avoid opening of female terminal. Never push in the probe where male terminal is supposed to fit.
- Check the male connector for bend and female connector for excessive opening. Also check the coupler for locking (looseness), corrosion, dust, etc.

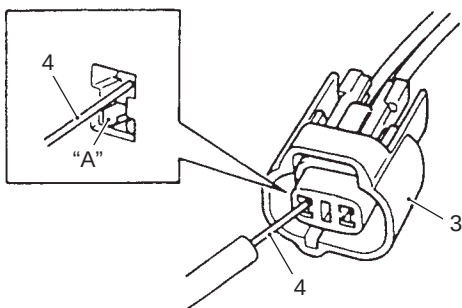


I649G1000030-02

3. Coupler	4. Probe	"A": Where male terminal fits
------------	----------	-------------------------------

Clamp


- Clamp the wire harness at such positions as indicated in **"Wiring Harness Routing Diagram: in Section 9A"**.
- Bend the clamp properly so that the wire harness is clamped securely.
- In clamping the wire harness, use care not to allow it to hang down.
- Do not use wire or any other substitute for the band type clamp.

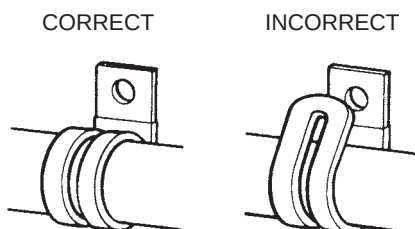

I718H1000001-02

Fuse

- When a fuse blows, always investigate the cause to correct it and then replace the fuse.
- Do not use a fuse of different capacity.
- Do not use wire or any other substitute for the fuse.

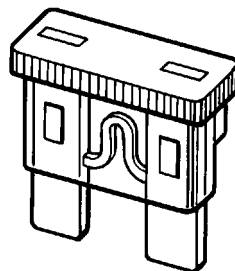


I649G1000001-02

Switch


Never apply grease material to switch contact points to prevent damage.

ECM / EPS control unit / EPS body assembly / Various sensors

- Since each component is a high-precision part, great care should be taken not to apply any severe impacts during removal and installation.

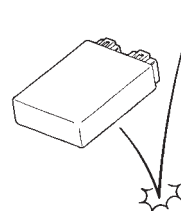


I931H1000001-02

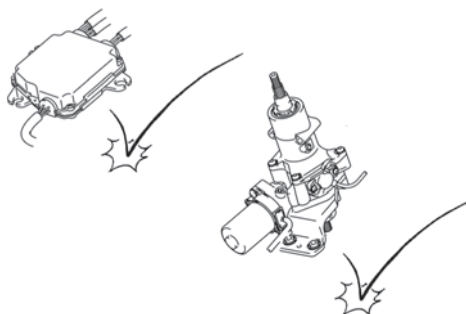


I931H1000003-02

- Be careful not to touch the electrical terminals of the electronic parts (ECM, etc.). The static electricity from your body may damage these.

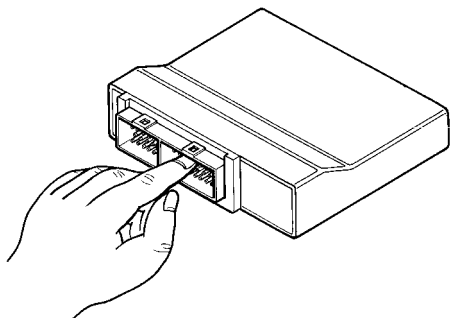


I310G1000008-01

- When disconnecting and connecting the coupler, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

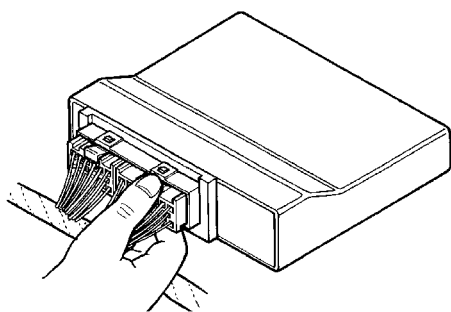


I831G1000001-01

- Never allow dust or water to contact the EPS control unit and EPS body assembly.

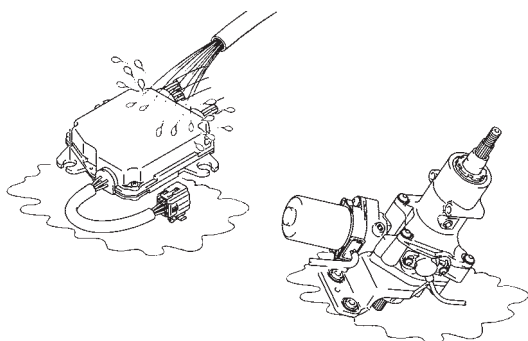

I931H1000004-01


- The EPS control unit and EPS body assembly cannot be disassembled. Replace the whole unit with a new one.

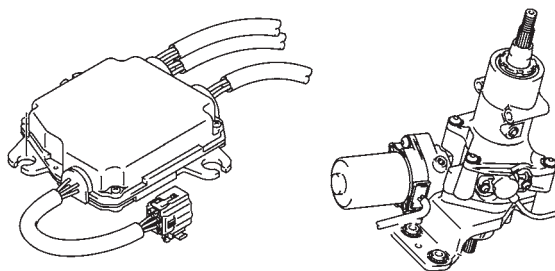

I931H1000005-01


Battery

- Battery connection in reverse polarity is strictly prohibited. Such a wrong connection will damage the components of the FI systems instantly when reverse power is applied.

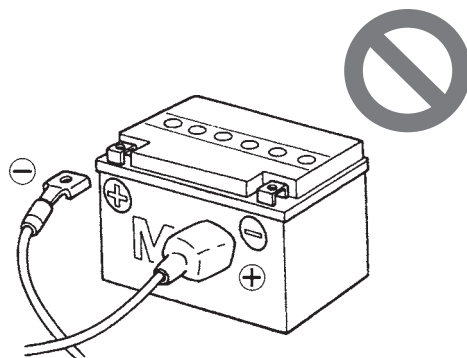

I718H1000004-01


- Removing any battery terminal of a running engine is strictly prohibited. The moment such removal is made, damaging counter electromotive force will be applied to the ECM which may result in serious damage.

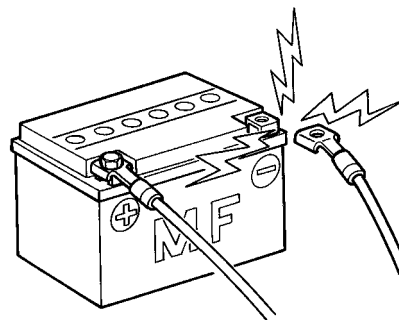

I310G1000011-01

00-5 Precautions:

- Before measuring voltage at each terminal, check to make sure that battery voltage is 11 V or higher. Terminal voltage check with a low battery voltage will lead to erroneous diagnosis.

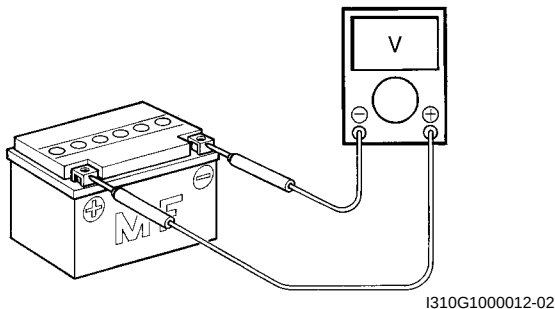

- Never connect any tester (voltmeter, ohmmeter, or whatever) to the electronic unit when its coupler is disconnected. Otherwise, damage to electronic unit may result.
- Never connect an ohmmeter to the ECM with its coupler connected. If attempted, damage to ECM or sensors may result.
- Be sure to use a specified voltmeter/ohmmeter. Otherwise, accurate measurements may not be obtained and personal injury may result.

Electrical Circuit Inspection Procedure

While there are various methods for electrical circuit inspection, described here is a general method to check for open and short circuit using an ohmmeter and a voltmeter.


Open circuit check

Possible causes for the open circuit are as follows. As the cause can exist in the connector/coupler or terminal, they need to be checked carefully.

- Loose connection of connector/coupler
- Poor contact of terminal (due to dirt, corrosion or rust, poor contact tension, entry of foreign object etc.)
- Wire harness being open.
- Poor terminal-to-wire connection.

When checking system circuits including an electronic control unit such as ECM, etc., it is important to perform careful check, starting with items which are easier to check.

- 1) Disconnect the negative (–) cable from the battery.
- 2) Check each connector/coupler at both ends of the circuit being checked for loose connection. Also check for condition of the coupler lock if equipped.

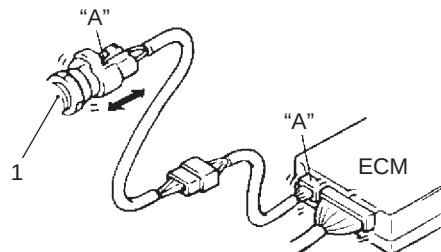


1. Sensor	"A": Check for loose connection
-----------	---------------------------------

- 3) Using a test male terminal, check the female terminals of the circuit being checked for contact tension.


Check each terminal visually for poor contact (possibly caused by dirt, corrosion, rust, entry of foreign object, etc.). At the same time, check to make sure that each terminal is fully inserted in the coupler and locked.

If contact tension is not enough, rectify the contact to increase tension or replace. The terminals must be clean and free of any foreign material which could impede proper terminal contact.

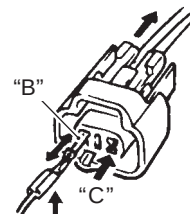

"B": Check contact tension by inserting and removing.
"C": Check each terminal for bend and proper alignment.

- 4) Using continuity inspect or voltage check procedure as described below, inspect the wire harness terminals for open circuit and poor connection. Locate abnormality, if any.

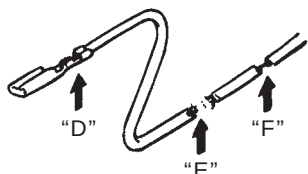


I649G1000028-02

"D": Looseness of crimping
"E": Open
"F": Thin wire (A few strands left)


Continuity check

- 1) Measure resistance across coupler "B" (between "A" and "C" in figure).
If no continuity is indicated (infinity or over limit), the circuit is open between terminals "A" and "C".

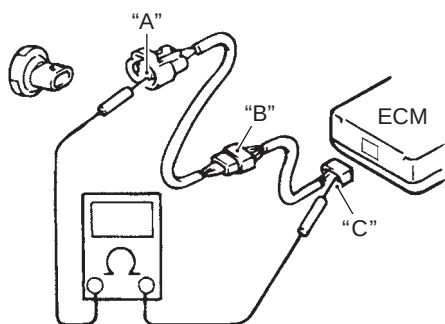

I705H1000006-02

- 2) Disconnect the coupler "B" and measure resistance between couplers "A" and "B-1".
If no continuity is indicated, the circuit is open between couplers "A" and "B-1". If continuity is indicated, there is an open circuit between couplers "B-2" and "C" or an abnormality in coupler "B-2" or coupler "C".

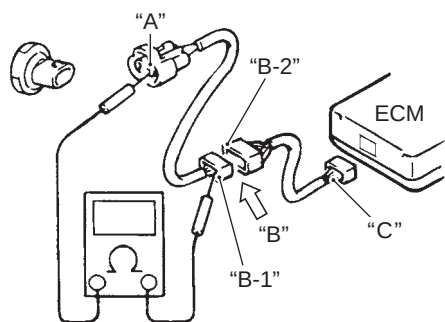

I705H1000010-02

Voltage check

If voltage is supplied to the circuit being checked, voltage check can be used as circuit check.

- 1) With all connectors/couplers connected and voltage applied to the circuit being checked, measure voltage between each terminal and body ground.
- 2) If measurements were taken as shown in the figure and results were listed in the following, it means that the circuit is open between terminals "A" and "B".

Voltage between

"A" and body ground: Approx. 5 V

"B" and body ground: Approx. 5 V

"C" and body ground: 0 V



- 3) Also, if measured values are as listed following, a resistance (abnormality) exists which causes the voltage drop in the circuit between terminals "A" and "B".

Voltage between

"A" and body ground: Approx. 5 V

"B" and body ground: Approx. 5 V – 2 V voltage drop

"C" and body ground: 3 V – 2 V voltage drop

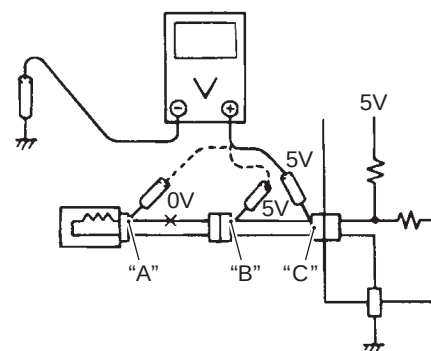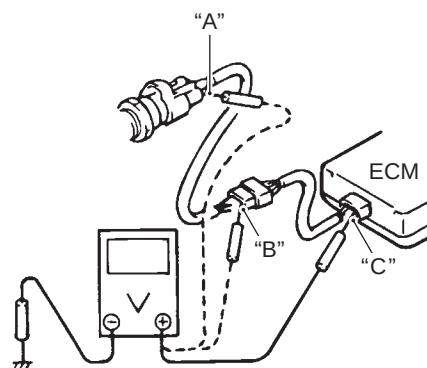

I705H1000007-01


Short circuit check (Wire harness to ground)

- 1) Disconnect the negative (–) cable from the battery.
- 2) Disconnect the connectors/couplers at both ends of the circuit to be checked.

NOTE

If the circuit to be checked branches to other parts as shown, disconnect all connectors/couplers of those parts. Otherwise, diagnosis will be misled.

- 3) Measure resistance between terminal at one end of circuit ("A" terminal in figure) and body ground. If continuity is indicated, there is a short circuit to ground between terminals "A" and "C".

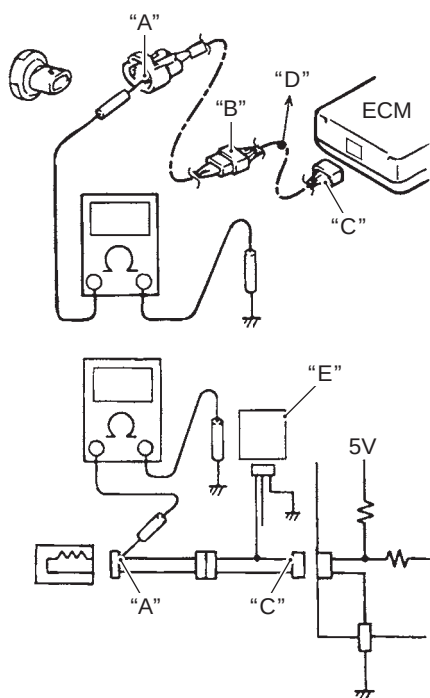


I705H1000008-01

"D": To other parts

"E": Other parts

- 4) Disconnect the connector/coupler included in circuit (coupler "B") and measure resistance between terminal "A" and body ground. If continuity is indicated, the circuit is shorted to the ground between terminals "A" and "B".

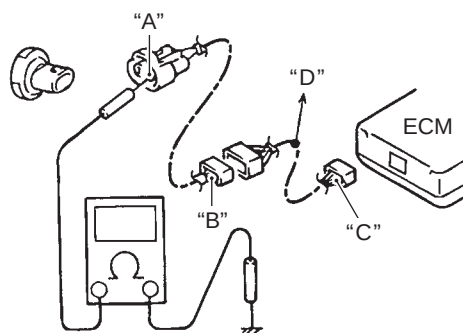

I705H1000009-02


"D": To other parts

Using The Multi-Circuit Testers

- Use the Suzuki multi-circuit tester set.
- Use well-charged batteries in the tester.
- Be sure to set the tester to the correct testing range.

Special tool

TOOL (A): 09900-25008 (Multi-circuit tester set)

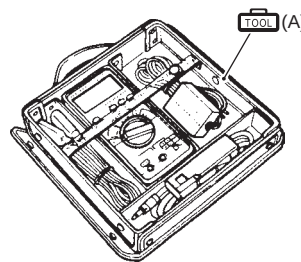


I649G1000024-03

Using the testers

- Incorrectly connecting the (+) and (–) probes may cause the inside of the tester to be burnout.
- If the voltage and current are not known, make measurements using the highest range.
- When measuring the resistance with the multi-circuit tester (1), ∞ will be shown as 10.00 M Ω and “1” flashes in the display.
- Check that no voltage is applied before making the measurement. If voltage is applied the tester may be damaged.
- After using the tester, turn the power off.

Special tool

 : 09900–25008 (Multi-circuit tester set)

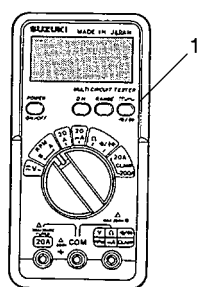


I649G1000002-02

NOTE

- When connecting the multi-circuit tester, use the needle pointed probe to the back side of the lead wire coupler and connect the probes of tester to them.
- Use the needle pointed probe to prevent the rubber of the water proof coupler from damage.
- When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.

Special tool

 (A): 09900–25009 (Needle pointed probe set)

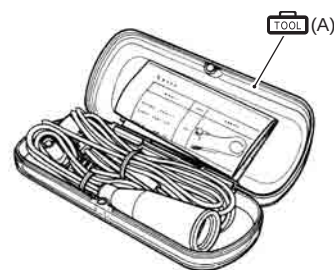

I649G1000025-03

00-9 Precautions:

Section 0

General Information

CONTENTS

0

General Information	0A-1	Fuel Line Inspection	0B-8
General Description	0A-1	Engine Oil and Filter Replacement	0B-8
Symbols	0A-1	Front Differential Gear Oil Inspection	0B-10
Abbreviations	0A-1	Front Differential Gear Oil Replacement	0B-11
SAE-to-Former SUZUKI Term	0A-2	Final Gear Oil Inspection	0B-12
Vehicle Side View	0A-3	Final Gear Oil Replacement	0B-12
Vehicle Identification Number	0A-3	Throttle Cable Play Inspection and	
Fuel and Oil Recommendation	0A-3	Adjustment	0B-13
Engine Coolant Recommendation	0A-4	Throttle Body Inspection	0B-13
BREAK-IN Procedures	0A-4	Cooling System Inspection	0B-13
Country and Area Codes	0A-5	Drive V-belt Inspection and Replacement	0B-15
Wire Color Symbols	0A-5	Drive Shaft Boots Inspection	0B-16
Warning, Caution and Information Labels		Front Brake System Inspection	0B-16
Location	0A-6	Rear Brake Pedal / Rear Brake (Parking	
Component Location	0A-7	Brake) Lever Inspection and Adjustment	0B-17
Electrical Components Location	0A-7	Rear Brake Friction Plate Wear Limit	
Specifications	0A-9	Inspection	0B-19
Specifications	0A-9	Tire Inspection	0B-19
Special Tools and Equipment	0A-11	Steering System Inspection	0B-20
Special Tool	0A-11	Toe Adjustment	0B-20
Maintenance and Lubrication	0B-1	Suspensions Inspection	0B-21
Precautions	0B-1	Chassis Bolt and Nut Inspection	0B-21
Precautions for Maintenance	0B-1	Compression Pressure Check	0B-25
General Description	0B-1	Oil Pressure Check	0B-25
Recommended Fluids and Lubricants	0B-1	SDS Check	0B-25
Scheduled Maintenance	0B-1	Automatic Clutch Inspection	0B-25
Periodic Maintenance Schedule Chart	0B-1	Specifications	0B-26
Lubrication Points	0B-2	Tightening Torque Specifications	0B-26
Repair Instructions	0B-3	Special Tools and Equipment	0B-26
Air Cleaner Element Inspection and Cleaning	0B-3	Recommended Service Material	0B-26
Exhaust Pipe Bolt and Muffler Bolt Inspection	0B-4	Special Tool	0B-27
Valve Clearance Inspection and Adjustment	0B-4	Service Data	0C-1
Spark Plug Replacement	0B-6	Specifications	0C-1
Spark Plug Inspection and Cleaning	0B-6	Service Data	0C-1
Spark Arrester Cleaning	0B-7	Tightening Torque List	0C-7

General Information

General Description

Symbols

B931H20101001

Listed in the table below are the symbols indicating instructions and other information necessary for servicing.
The meaning of each symbol is also included in the table.

Symbol	Definition
	Torque control required. Data beside it indicate specified torque.
	Apply oil. Use engine oil unless otherwise specified.
	Apply molybdenum oil solution. (Mixture of engine oil and SUZUKI MOLY PASTE in a ratio of 1:1).
	Apply SUZUKI SUPER GREASE "A" or equivalent. 99000-25010
	Apply SUZUKI MOLY PASTE or equivalent. 99000-25140
	Apply WATER RESISTANCE GREASE. 99000-25160
	Apply SUZUKI SILICONE GREASE or equivalent. 99000-25100
	Apply SUZUKI BOND "1215" or equivalent. 99000-31110
	Apply SUZUKI BOND "1216B" or equivalent. 99000-31230
	Apply THREAD LOCK SUPER "1303" or equivalent. 99000-32030
	Apply THREAD LOCK SUPER "1322" or equivalent. 99000-32110
	Apply THREAD LOCK SUPER "1360" or equivalent. 99000-32130
	Use engine coolant or equivalent. 99000-99032-11X
	Apply or use brake fluid.
	Use special tool.
	Do not reuse.
	Note on reassembly.

Abbreviations

B931H20101002

A:
ABDC: After Bottom Dead Center
AC: Alternating Current
ACL: Air Cleaner, Air Cleaner Box
API: American Petroleum Institute
ATDC: After Top Dead Center
A/F: Air Fuel Mixture
B:
BBDC: Before Bottom Dead Center
BTDC: Before Top Dead Center
B+: Battery Positive Voltage
C:
CKP Sensor: Crankshaft Position Sensor (CKPS)
CKT: Circuit
CO: Carbon Monoxide
CPU: Central Processing Unit

D:

DC: Direct Current
DIFF-LOCK Relay: Differential Lock Relay
DMC: Dealer Mode Coupler
DOHC: Double Over Head Camshaft
DRL: Daytime Running Light
DTC: Diagnostic Trouble Code
E:
ECM: Engine Control Module Engine Control Unit
 (ECU) (FI Control Unit)
ECT Sensor: Engine Coolant Temperature Sensor
 (ECTS)
 Water Temp. Sensor (WTS)
EPS: Electronic Power Steering
F:
FI: Fuel Injection, Fuel Injector
FP: Fuel pump
FPR: Fuel Pressure Regulator

FP Relay: Fuel Pump Relay

G:

GEN: Generator

GND: Ground

GP Switch: Gear Position Switch

H:

HC: Hydrocarbons

I:

IAP Sensor: Intake Air Pressure Sensor (IAPS)

IAT Sensor: Intake Air Temperature Sensor (IATS)

IG: Ignition

ISC Valve: Idle Speed Control Valve (ISCV)

J:

JASO: Japanese Automobile Standards Organization

L:

LCD: Liquid Crystal Display

LED: Light Emitting Diode (Malfunction Indicator Lamp)

LH: Left Hand

M:

MAL-CODE: Malfunction Code (Diagnostic Code)

Max: Maximum

MIL: Malfunction Indicator Lamp (LED)

Min: Minimum

N:

NOx: Nitrogen Oxides

O:

OHC: Over Head Camshaft

P:

PCV: Positive Crankcase Ventilation (Crankcase Breather)

R:

RH: Right Hand

ROM: Read Only Memory

S:

SAE: Society of Automotive Engineers

SDS: Suzuki Diagnosis System

T:

TO Sensor: Tip-over Sensor (TOS)

TP Sensor: Throttle Position Sensor (TPS)

SAE-to-Former SUZUKI Term

B931H20101003

This list shows SAE (Society of Automotive Engineers) J1930 terms and abbreviations which may be used in this manual in compliance with SAE recommendations, as well as their former SUZUKI names.

Ex. SAE term (Abbreviation): Former SUZUKI term

A:

Air Cleaner (ACL): Air Cleaner, Air Cleaner Box

B:

Battery Positive Voltage (B+): Battery Voltage, +B

C:

Crankshaft Position Sensor (CKP Sensor):

Crankshaft Position Sensor (CKPS), Crank Angle

D:

Data Link Connector (DLC): Dealer Mode Coupler

Diagnostic Test Mode (DTM): —

Diagnostic Trouble Code (DTC): Diagnostic Code, Malfunction Code

E:

Electronic Ignition (EI): —

Engine Control Module (ECM): Engine Control Module (ECM), FI Control Unit, Engine Control Unit (ECU)

Engine Coolant Level (ECL): Coolant Level

Engine Coolant Temperature (ECT): Coolant Temperature, Engine Coolant Temperature, Water Temperature

Engine Speed (RPM): Engine Speed (RPM)

F:

Fan Control (FC): —

Fuel Level Sensor: Fuel Level Sensor, Fuel Level Gauge

Fuel Pump (FP): Fuel Pump (FP)

G:

Generator (GEN): Generator

Ground (GND): Ground (GND, GRD)

I:

Ignition Control Module (ICM): —

Intake Air Temperature (IAT): Intake Air Temperature (IAT), Air Temperature

Idle Speed Control (ISC): —

Ignition Control (IC): Electronic Spark Advance (ESA)

M:

Malfunction Indicator Lamp (MIL): LED Lamp, Malfunction Indicator Lamp (MIL)

Manifold Absolute Pressure (MAP): Intake Air Pressure (IAP), Intake Vacuum

Mass Air Flow (MAF): Air Flow

O:

On-Board Diagnostic (OBD): Self-Diagnosis Function, Diagnostic

P:

Programmable Read Only Memory (PROM): —

R:

Random Access Memory (RAM): —

Read Only Memory (ROM): ROM

T:

Throttle Body (TB): Throttle Body (TB)

Throttle Body Fuel Injection (TBI): Throttle Body Fuel Injection (TBI)

Throttle Position Sensor (TP Sensor): TP Sensor (TPS)

V:

Voltage Regulator (VR): Voltage Regulator

Vehicle Side View


B931H20101004

NOTE

Difference between illustration and actual vehicle may exist depending on the markets.


SUZUKI LT-A500XP (2009-model)

Right Side

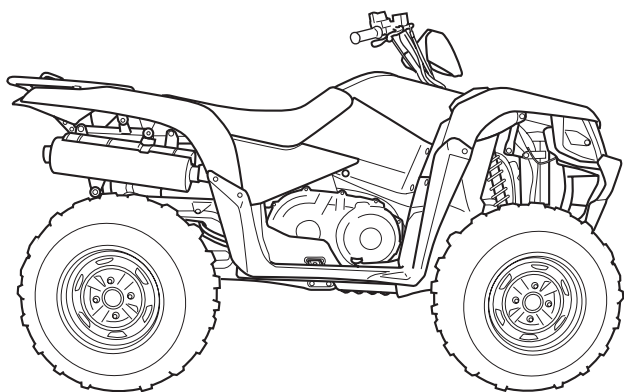

I931H1010002-01

Left Side

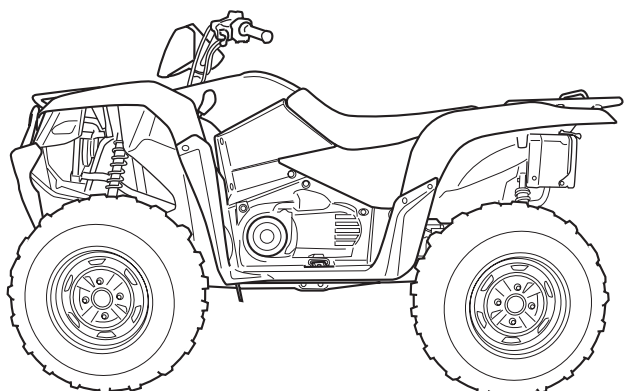


I931H1010003-02


Vehicle Identification Number

B931H20101005

The frame serial number or V.I.N. (Vehicle Identification Number) "A" is stamped on the left side of the front frame pipe. The engine serial number "B" is located on the right side of the crankcase. These numbers are required especially for registering the machine and ordering spare parts.

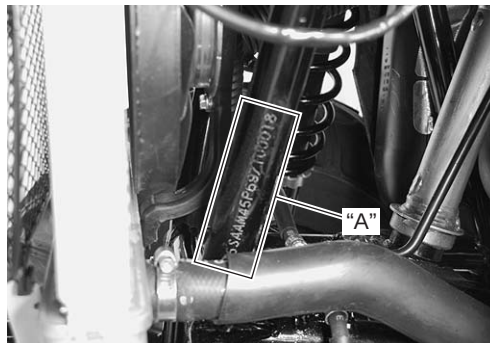

I931H1010007-01

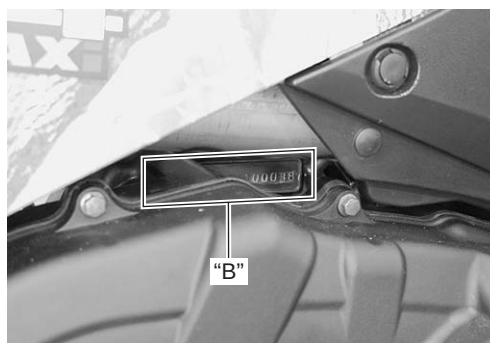

I931H1010008-01

Fuel and Oil Recommendation

B931H20101006

Fuel (For USA and Canada)

Use only unleaded gasoline of at least 87 pump octane (R/2 + M/2) or 91 octane or higher rated by the research method.

Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.

Fuel (For Other Countries)

Gasoline used should be graded 91 octane (Research Method) or higher. Unleaded gasoline is recommended.

Engine Oil (For USA)


Oil quality is a major contributor to your engine's performance and life. Always select good quality engine oil.

Suzuki recommends the use of SUZUKI PERFORMANCE 4 MOTOR OIL or an equivalent engine oil. Use of SF/SG or SH/SJ in API with MA in JASO.

Suzuki recommends the use of SAE 10W-40 engine oil. If SAE 10W-40 engine oil is not available, select and alternative according to the chart.

Engine Oil (For Other Countries)

Oil quality is a major contributor to your engine's performance and life. Always select good quality engine oil. Use of SF/SG or SH/SJ in API with MA in JASO. Suzuki recommends the use of SAE 10W-40 engine oil. If SAE 10W-40 engine oil is not available, select an alternative according to the chart.

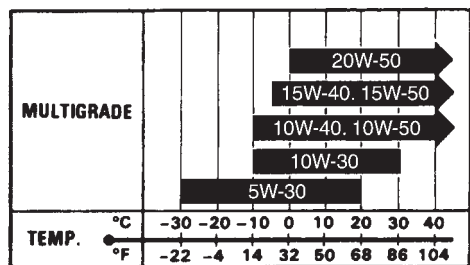

I831G1010008-01

Front Differential Gear Oil

Use hypoid gear oil that meets the API service classification GL-5 and is rated SAE #90. Use a hypoid gear oil with a rating of SAE #80 if the vehicle is operated where the ambient temperature is below 0 °C (32 °F).

Rear Drive (Final) Gear Oil

Use mobil fluid 424 or equivalent oil.

Brake Fluid

Specification and classification: DOT 4

⚠ WARNING

Since the brake system of this vehicle is filled with a glycol-based brake fluid by the manufacturer, do not use or mix different types of fluid such as silicone-based and petroleum-based fluid for refilling the system, otherwise serious damage will result.

Do not use any brake fluid taken from old or used or unsealed containers.

Never reuse brake fluid left over from a previous servicing, which has been stored for a long period.

Engine Coolant Recommendation

B931H20101007

Engine Coolant

Use an anti-freeze/engine coolant compatible with an aluminum radiator, mixed with distilled water only.

Water for mixing

Use distilled water only. Water other than distilled water can corrode and clog the aluminum radiator.

Anti-freeze / Engine coolant

The engine coolant perform as a corrosion and rust inhibitor as well as anti-freeze. Therefore, the engine coolant should be used at all times even though the atmospheric temperature in your area does not go down to freezing point.

Suzuki recommends the use of SUZUKI COOLANT anti-freeze/engine coolant. If this is not available, use an equivalent which is compatible with an aluminum radiator.

Liquid amount of water / Engine coolant

Solution capacity (total)

2 450 ml (2.6/2.2 US/lmp qt)

For engine coolant mixture information, refer to "Engine Coolant Description: in Section 1F".

⚠ CAUTION

Mixing of anti-freeze/engine coolant should be limited to 60%. Mixing beyond it would reduce its efficiency. If the anti-freeze/engine coolant mixing ratio is below 50%, rust inhabiting performance is greatly reduced. Be sure to mix it above 50% even though the atmospheric temperature does not go down to the freezing point.

BREAK-IN Procedures

B931H20101008

During manufacture only the best possible materials are used and all machined parts are finished to a very high standard but it is still necessary to allow the moving parts to "BREAK-IN" before subjecting the engine to maximum stresses. The future performance and reliability of the engine depends on the care and restraint exercised during its early life. The general rules are as follows.

1) Keep to these break-in engine speed limits:

Speed limits

Initial 500 km (300 miles): Less than 1/2 throttle

2) Upon reaching an odometer reading of 500 km (300 miles) you can subject the vehicle to full throttle operation, for short periods of time.

0A-5 General Information:

Country and Area Codes

B931H20101009

The following codes stand for the applicable country(-ies) and area(-s).

Code	Country or Area	Effective Frame No.
LT-A500XPK9 (P-17)	Sweden	5SAAM45P97100001 –
LT-A500XPK9 (P-24)	Australia	
LT-A500XPK9 (P-28)	Canada	
LT-A500XPK9 (P-33)	U.S.A.	
LT-A500XPZK9 (P-17)	Sweden	
LT-A500XPZK9 (P-24)	Australia	
LT-A500XPZK9 (P-28)	Canada	
LT-A500XPZK9 (P-33)	U.S.A.	


Wire Color Symbols

B931H20101010

Symbol	Wire Color	Symbol	Wire Color
B	Black	Br/W	Brown with White tracer
Bl	Blue	G/B	Green with Black tracer
Br	Brown	Gr/R	Gray with Red tracer
Dg	Dark green	Gr/W	Gray with White tracer
G	Green	O/G	Orange with Green tracer
Gr	Gray	O/R	Orange with Red tracer
O	Orange	O/W	Orange with White tracer
P	Pink	O/Y	Orange with Yellow tracer
R	Red	O/B	Orange with Black tracer
W	White	O/Bl	Orange with Blue tracer
Y	Yellow	P/W	Pink with White tracer
B/Bl	Black with Blue tracer	R/B	Red with Black tracer
B/Br	Black with Brown tracer	R/G	Red with Green tracer
B/G	Black with Green tracer	W/B	White with Black tracer
B/Lg	Black with Light green tracer	W/Bl	White with Blue tracer
B/R	Black with Red tracer	W/G	White with Green tracer
B/W	Black with White tracer	W/R	White with Red tracer
B/Y	Black with Yellow tracer	W/Y	White with Yellow tracer
Bl/B	Blue with Black tracer	Y/B	Yellow with Black tracer
Bl/G	Blue with Green tracer	Y/Bl	Yellow with Blue tracer
Bl/W	Blue with White tracer	Y/R	Yellow with Red tracer
Bl/R	Blue with Red tracer	Y/G	Yellow with Green tracer
Bl/Y	Blue with Yellow tracer		

Warning, Caution and Information Labels Location

B931H20101011

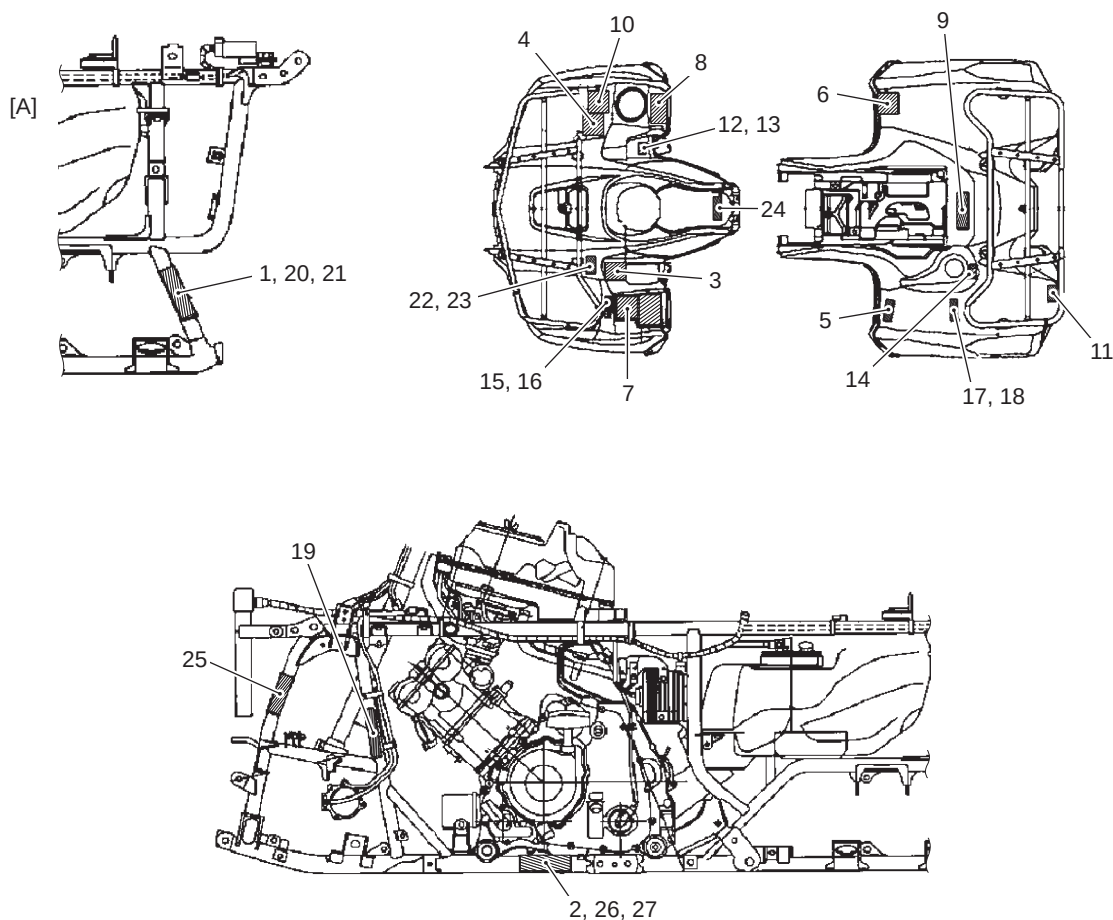


I931H1010010-03

1. Certification plate (English)	For P-24, 33	15. Front carrier warning label (English)	For P-24, 33
2. Information label (English)	For P-33	16. Front carrier warning label (English/French)	For P-17, 28
3. Gearshift label (English)	For P-17, 24, 28, 33	17. Rear carrier warning label (English)	For P-24, 33
4. Gearshift label (French)	For P-28	18. Rear carrier warning label (English/French)	For P-17, 28
5. Tire air pressure label (English)	For P-17, 24, 28, 33	19. ICES Canada label (English/French)	For P-28
6. Tire air pressure label and warning no-passenger label (French)	For P-28	20. Compliance label (English)	For P-28
7. General warning & AGE, 16 label (English)	For P-17, 24, 28, 33	21. I.D. plate (English)	For P-17
8. General warning label (French)	For P-28	22. Cooling fan label (English)	For P-24, 33
9. Warning no-passenger label (English)	For P-17, 24, 28, 33	23. Cooling fan label (English/French)	For P-17, 28
10. AGE, 16 label (French)	For P-28	24. Compliance label (English/French)	For P-28
11. Manual notice label (English)	For P-33	25. ANSI certification label (Right side of frame)	For P-33
12. Max AMP caution label (English)	For P-24, 33	26. Information label (English)	For P-28
13. Max AMP caution label (English/French)	For P-17, 28	27. Information label (French) (Right side of frame)	For P-28
14. Fuel caution label (English)	For P-24	[A]: Left side of frame	

Component Location








Electrical Components Location

B931H20103001

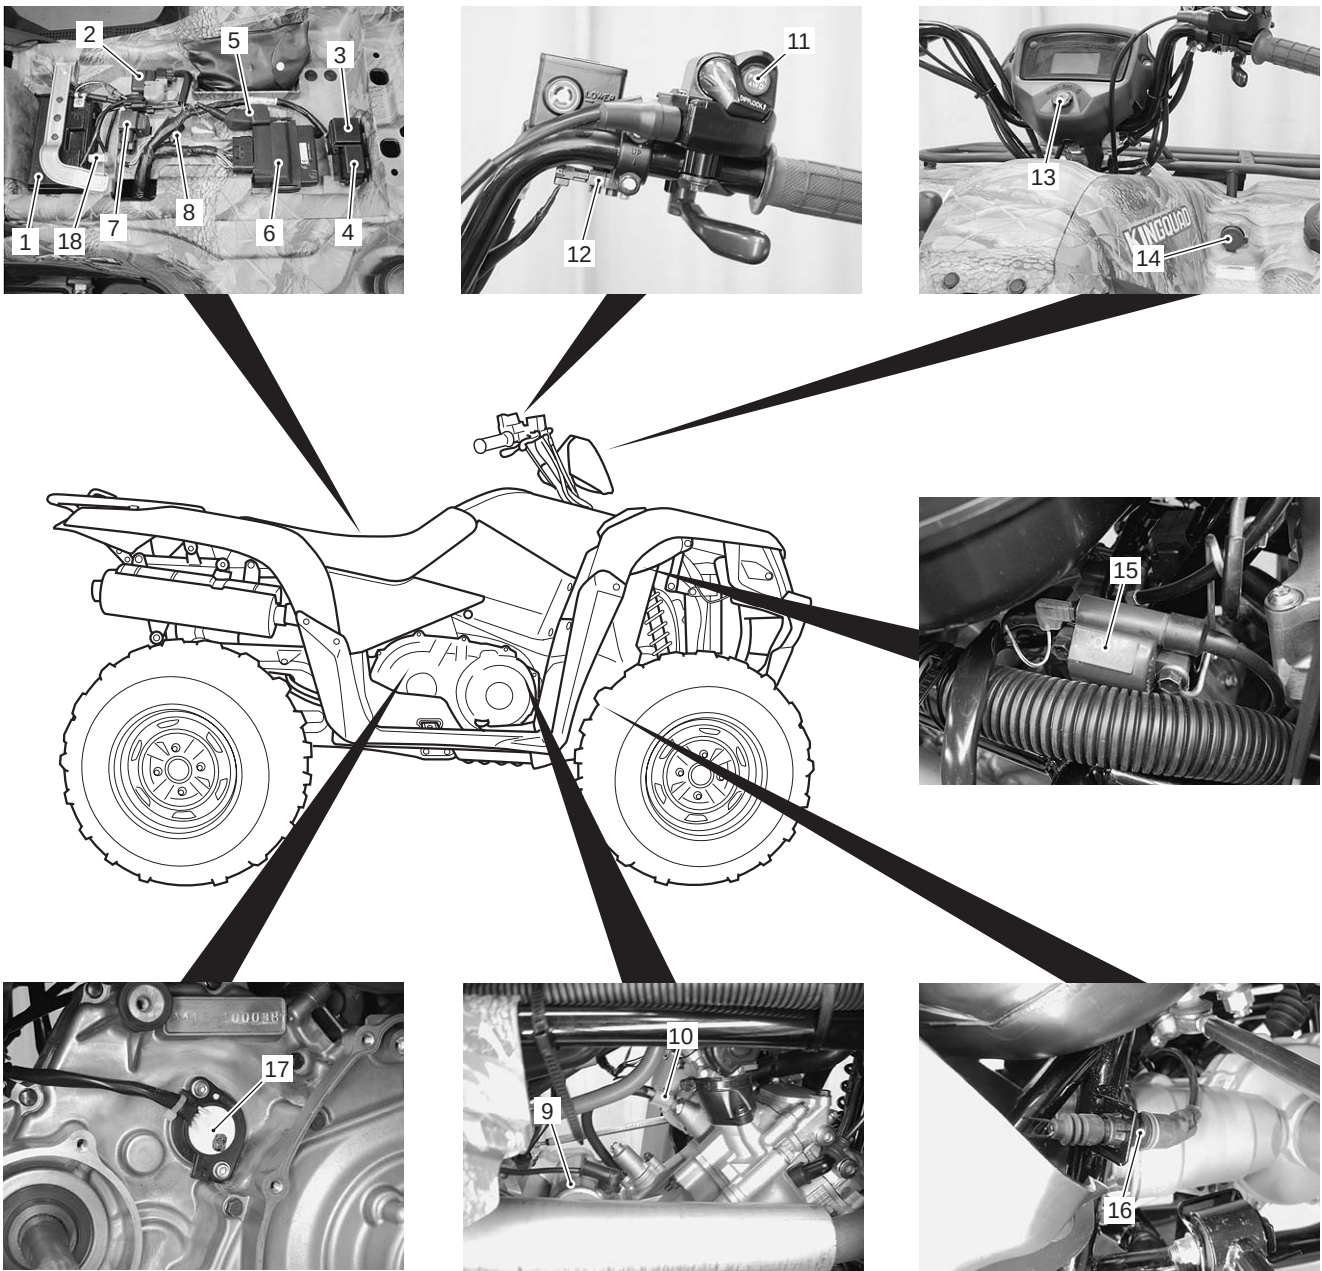

I931H1010005-03

1. Battery	7. Drive relay	13. Ignition switch
2. Starter relay/Main fuse	8. Mode select switch coupler	14. Power source
3. Fuse box	9. Starter motor	15. Ignition coil
4. Neutral relay	10. ECT sensor	16. Rear brake switch
5. Fuel pump relay	11. 4WD/Diff-lock switch	17. Gear position switch
6. ECM	12. Front brake light switch	18. Fuse (EPS)

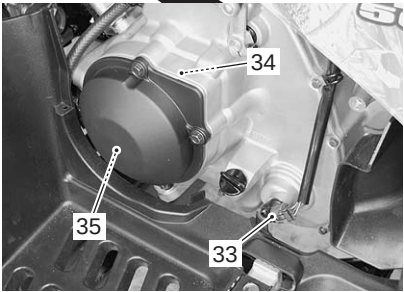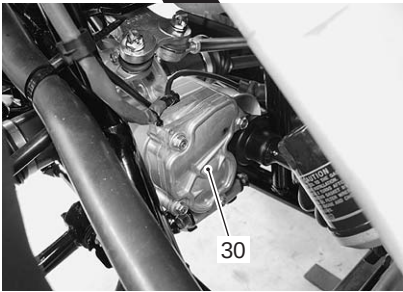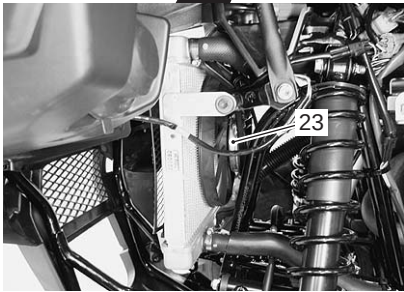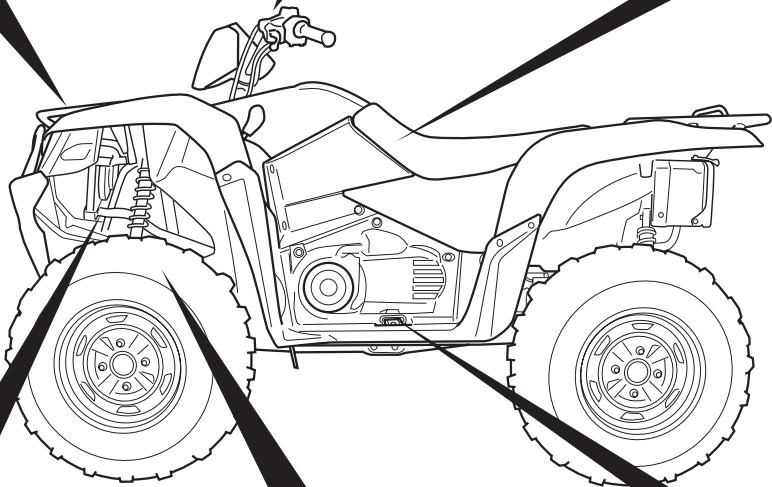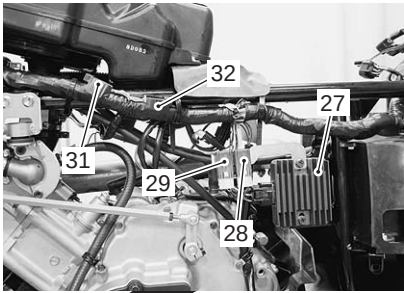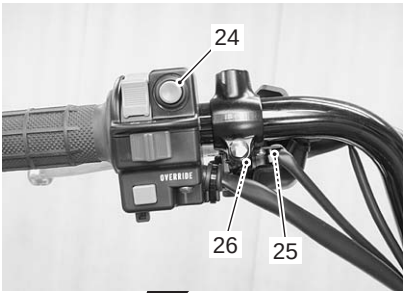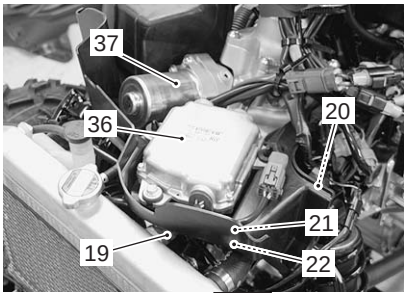

I931H1010006-05

19. Cooling fan thermo-switch	26. Parking/rear brake switch	33. Speed sensor
20. Resister	27. Regulator/Rectifier	34. CKP sensor
21. 4WD/Diff-lock actuator diode	28. Parking brake relay	35. Generator
22. Neutral relay diode	29. Diff-lock relay	36. EPS control unit
23. Cooling fan	30. Diff-lock actuator	37. EPS body assembly
24. Left handlebar switch	31. High position diode	
25. Parking/rear brake light switch	32. Low position diode	

Specifications

Specifications

B931H20107001

NOTE

These specifications are subject to change without notice.

Dimensions and dry mass

Item	Specification	Remark
Overall length	2 115 mm (83.3 in)	P-28, 33
	2 165 mm (85.2 in)	P-17, 24
Overall width	1 210 mm (47.6 in)	P-28, 33
	1 250 mm (49.2 in)	P-17, 24
Overall height	1 285 mm (50.6 in)	
Wheelbase	1 285 mm (50.6 in)	
Ground clearance	260 mm (10.2 in)	
Seat height	920 mm (36.2 in)	
Curb mass	300 kg (661 lbs)	P-28, 33
	302 kg (666 lbs)	P-17, 24
Front track	940 mm (37.0 in)	
Rear track	920 mm (36.2 in)	

Engine

Item	Specification	Remark
Type	4-stroke, liquid-cooled, OHC	
Number of cylinders	1	
Bore	87.5 mm (3.445 in)	
Stroke	82.0 mm (3.228 in)	
Displacement	493 cm ³ (30.1 cu.in)	
Compression ratio	10.0 : 1	
Fuel system	Fuel injection	
Air cleaner	Non-woven fabric element	
Starter system	Electric	
Lubrication system	Wet sump	
Idle speed	1 500 ± 100 r/min	

Drive train

Item	Specification	Remark
Clutch	Wet shoe, automatic, centrifugal type	
Transmission	CVT (V-belt)	
Transfer	2-speed forward with reverse	
Gearshift pattern	Transmission	Automatic
	Transfer	L-H-N-R (Hand operated)
Automatic transmission ratio	Variable change (2.902 – 0.779)	
Secondary reduction ratio	2.603 (37/18 x 19/15)	
Final reduction ratio (Front & Rear)	3.600 (36/10)	
Transfer gear ratio	Low	2.562 (41/16)
	High	1.240 (31/25)
	Reverse	2.000 (32/16)
Drive system	Shaft drive	

Chassis

Item	Specification	Remark
Front suspension	Independent, double wishbone, coil spring, oil damped	
Rear suspension	Independent, double wishbone, coil spring, oil damped	
Front wheel travel	170 mm (6.7 in)	
Rear wheel travel	195 mm (7.7 in)	
Caster	3.7°	
Trail	18.4 mm (0.72 in)	
Toe-out	5 mm (0.20 in)	
Camber	-1.3°	
Steering angle	46° (right & left)	
Turning radius	3.1 m (10.2 ft)	
Front brake	Disc brake, twin	
Rear brake	Sealed oil-bathed multi-disc	
Front tire size	AT25 x 8-12☆☆, tubeless	
Rear tire size	AT25 x 10-12☆☆, tubeless	

Electrical

Item	Specification	Remark
Ignition type	Electronic ignition (CDI)	
Ignition timing	7° B.T.D.C. at 1 500 r/min	
Spark plug	NGK CR6E or DENSO U20ESR-N	
Battery	12 V 64.8 kC (18 Ah)/10 HR	
Generator	Three-phase A.C. generator	
Main fuse	30 A	
Fuse	10/10/10/10/15/15 A	
EPS fuse	40 A	
Headlight	12 V 35/35 W x 2	
Brake light/Taillight	12 V 21/5 W	
Reversing light	12 V 21 W	P-17
Speedometer light	LED	
Neutral indicator light	LED	
High beam indicator light	LED	P-17
Coolant temperature/FI indicator light	LED	
Reverse indicator light	LED	
Diff-lock indicator light	LED	
EPS indicator light	LED	

























Capacities























Item	Specification	Remark
Fuel tank	17.5 L (4.6/3.8 US/lmp gal)	
Engine oil	Oil change	2 500 ml (2.6/2.2 US/lmp qt)
	With filter change	2 700 ml (2.9/2.4 US/lmp qt)
	Overhaul	3 200 ml (3.4/2.8 US/lmp qt)
Differential gear oil	460 ml (15.6/16.2 US/lmp oz)	
Final gear oil	770 ml (26.0/27.1 US/lmp oz)	
Coolant	2 450 ml (2.6/2.2 US/lmp qt)	

Special Tools and Equipment


























Special Tool














B931H20108001

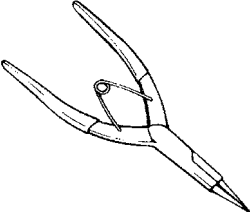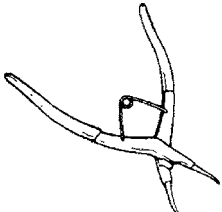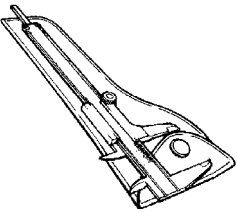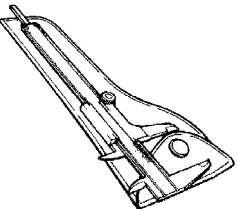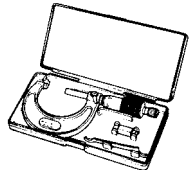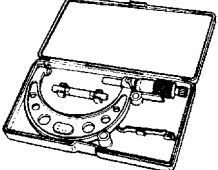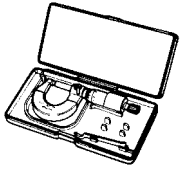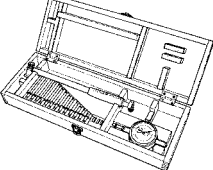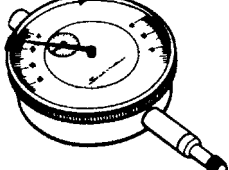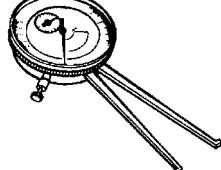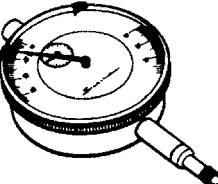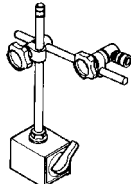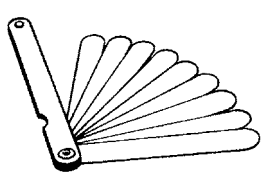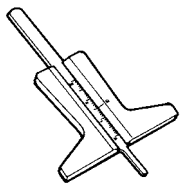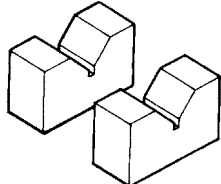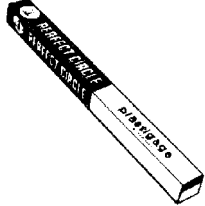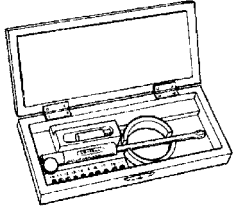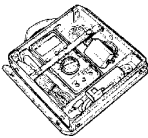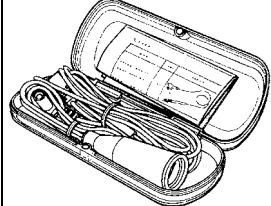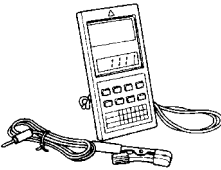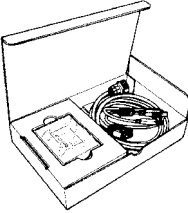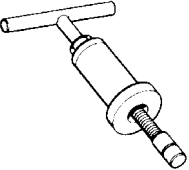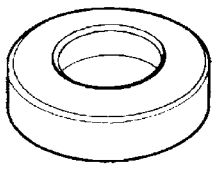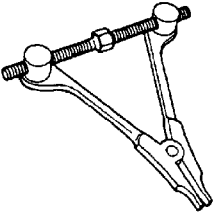 09900-06107 Snap ring remover (Open type)	 09900-06108 Snap ring remover (Close type)	 09900-20101 Vernier calipers (150 mm)	 09900-20102 Vernier calipers (200 mm)	 09900-20202 Micrometer (25 – 50 mm)
 09900-20204 Micrometer (75 – 100 mm)	 09900-20205 Micrometer (0 – 25 mm)	 09900-20530 Cylinder gauge set	 09900-20602 Dial gauge	 09900-20605 Dial calipers (10 – 34 mm)
 09900-20607 Dial gauge	 09900-20701 Dial gauge chuck	 09900-20803 Thickness gauge	 09900-20805 Tire depth gauge	 09900-21304 V blocks
 09900-22301 Plastigauge	 09900-22302 Plastigauge	 09900-22403 Small bore gauge (18 – 35 mm)	 09900-25008 Multi circuit tester set	 09900-25009 Needle pointed probe set
 09900-26006 Engine tachometer	 09904-41010 SUZUKI Diagnostic system set	 09910-32812 Crankshaft installer	 09910-32820 Crankshaft installer attachment	 09912-34510 Cylinder disassembly ring tool

  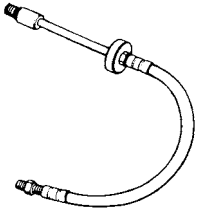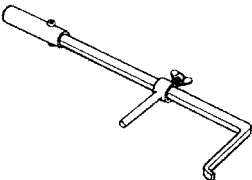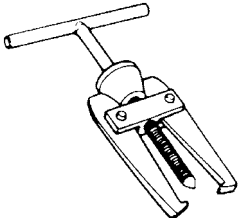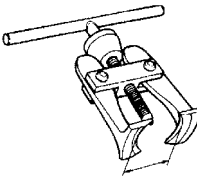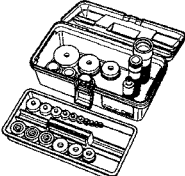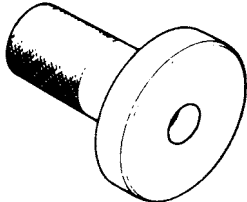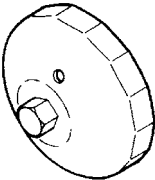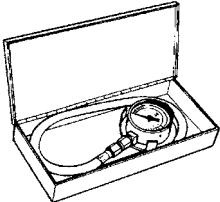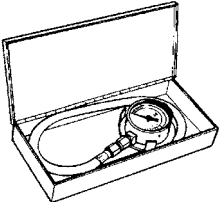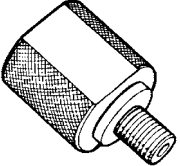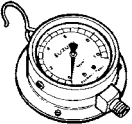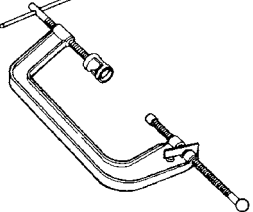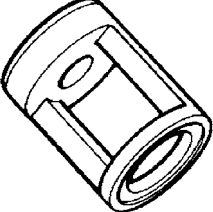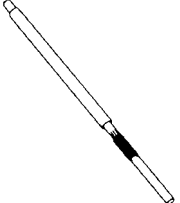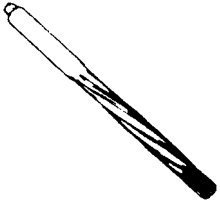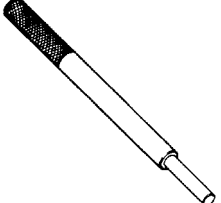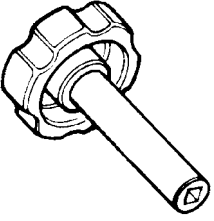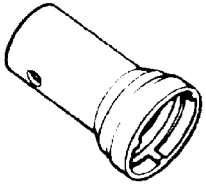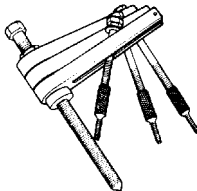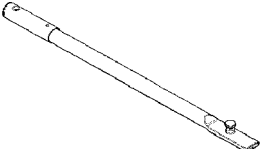				
09913-10750 Compression gauge adapter	09913-50121 Oil seal remover	09913-60910 Bearing and gear puller	09913-61510 Bearing puller	09913-70210 Bearing installer set (10 - 75)
				
09913-75520 Bearing installing tool	09915-40620 Oil filter wrench	09915-64512 Compression gauge	09915-74511 Oil pressure gauge (600 kPa)	09915-74521 Adapter hose
				
09915-74533 Oil pressure gauge adapter	09915-77331 Oil pressure gauge (1000 kPa)	09916-10911 Valve lapper set	09916-14510 Valve lifter	09916-14910 Valve lifter attachment
				
09916-34542 Reamer handle	09916-34570 Valve guide reamer (5.0 mm)	09916-34580 Valve guide reamer (10.8 mm)	09916-44310 Valve guide installer & remover	09916-53370 Valve guide installer attachment
				
09916-84511 Tweezer	09917-14910 Tappet adjust driver	09917-23711 Ring nut socket wrench	09920-13120 Crankshaft remover	09920-31020 Extension handle

 0A-13 General Information:

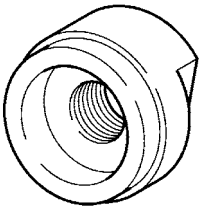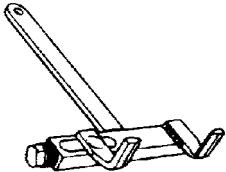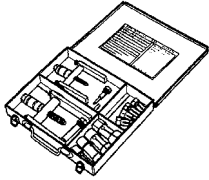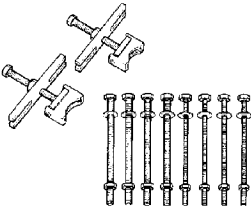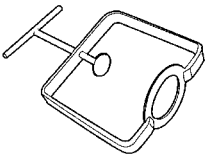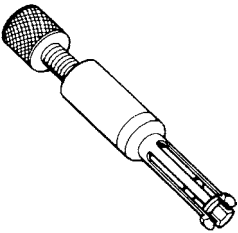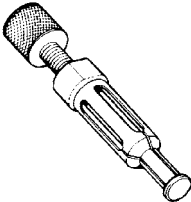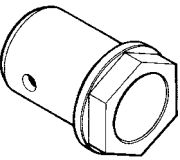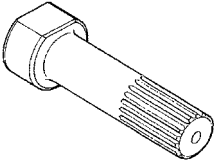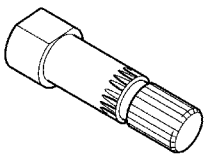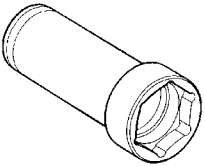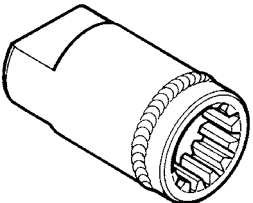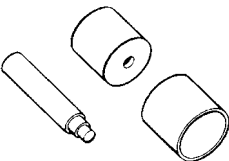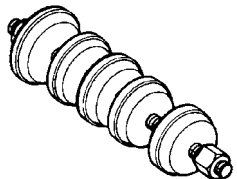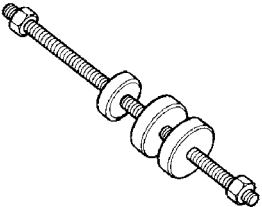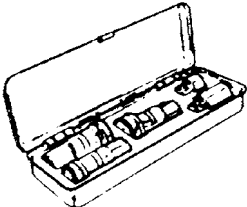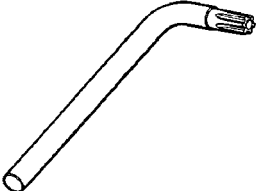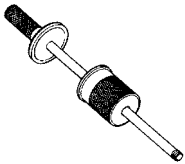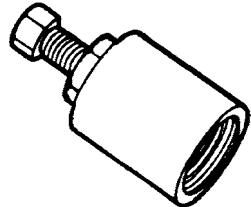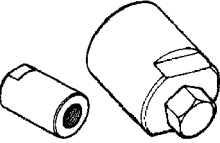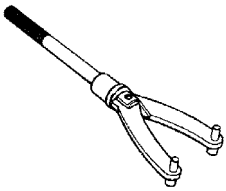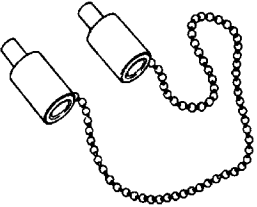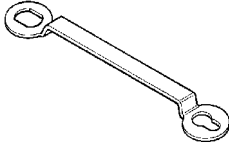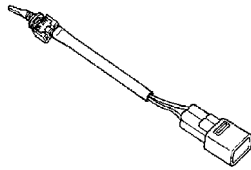 09920-33540 Clutch shoe remover	 09920-53740 Clutch sleeve hub holder	 09921-20240 Bearing remover set	 09921-21910 Bearing holder set	 09922-31430 Clutch spring compressor
 09923-73210 Bearing remover	 09923-74511 Bearing remover	 09924-41830 Bearing retainer wrench (50 mm)	 09924-52420 Secondary bevel gear holder	 09924-52450 Fixed driven face holder
 09924-52460 Socket (52 mm)	 09924-52470 Fixed final drive gear holder	 09924-74520 Oil seal installer and remover	 09924-74570 Final drive gear bearing installer	 09924-84510 Bearing installer set
 09924-84521 Bearing installer set	 09930-10121 Spark plug wrench set	 09930-11950 Torx wrench (5 mm)	 09930-30104 Rotor remover sliding shaft	 09930-30721 Rotor remover
 09930-31921 Rotor remover set	 09930-40113 Flywheel rotor holder	 09930-40120 Rotor holder attachment (A)	 09930-44530 Rotor holder	 09930-82710 Mode select switch

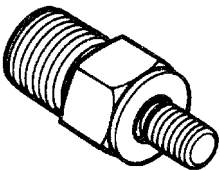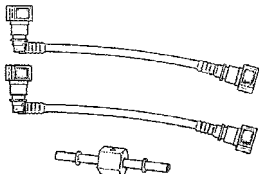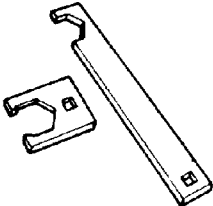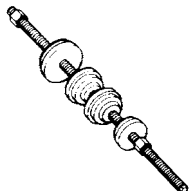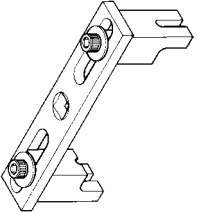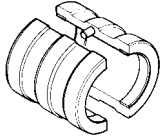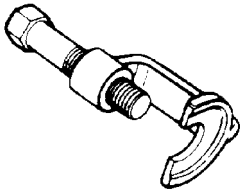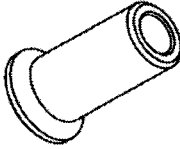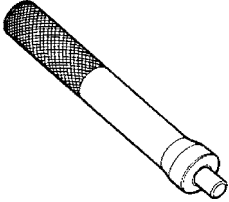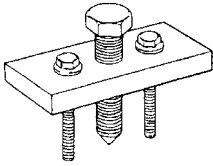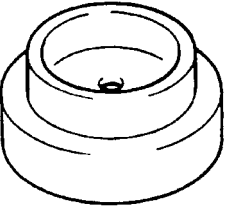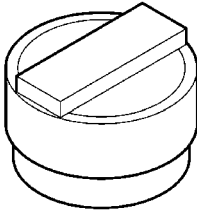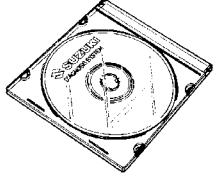 09930-82720 Mode selection switch	 09940-40211 Fuel pressure gauge adapter	 09940-40220 Fuel pressure gauge attachment	 09940-92430 Rear axle nut wrench (36×36 mm)	 09941-34513 Bearing installer
 09941-51012 Ring locknut wrench	 09941-53610 Front fork oil seal hammer	 09942-72410 Tie-rod end remover	 09942-83110 Clip remover	 09943-88211 Pinion bearing installer
 09944-36011 Steering wheel remover	 09944-66010 Oil seal installer	 09951-15810 Brake disk dust cover installer	 99565-01010-019 CD-ROM Ver.19	

Maintenance and Lubrication

Precautions

Precautions for Maintenance

B931H20200001

The "Periodic Maintenance Schedule Chart" lists the recommended intervals for all the required periodic service work necessary to keep the vehicle operating at peak performance and economy. Maintenance intervals are expressed in terms of kilometers, miles and months for your convenience.

NOTE

More frequent servicing may be required on vehicle that are used under severe conditions.

General Description

Recommended Fluids and Lubricants

B931H20201001

Refer to "Fuel and Oil Recommendation: in Section 0A" and "Engine Coolant Recommendation: in Section 0A".

Scheduled Maintenance

Periodic Maintenance Schedule Chart

B931H20205001

NOTE

I = Inspect and clean, adjust, replace or lubricate as necessary.

C = Clean.

R = Replace.

T = Tighten.

Item		Interval			
		km	Initial 200	Every 1 000	Every 2 000
		miles	Initial 100	Every 600	Every 1 200
		months	Initial 1	Every 3	Every 6
Air cleaner element	polyurethane foam element	—	—	C	C
	non-woven fabric element	—	—	I	I
Exhaust pipe nuts and muffler mounting bolts		T	T	T	T
Valve clearance		I	—	—	I
Spark plug		—	—	—	I
		Replace every 6 000 km (4 000 miles).			
Spark arrester		—	—	—	C
Fuel line		—	—	I	I
		Replace every 4 years.			
Engine oil and oil filter		R	—	—	R
Front differential gear oil		—	—	—	I
		Replace every 2 years.			
Final gear oil		—	—	—	I
		Replace every year.			
Throttle cable play		I	I	I	I
Throttle body		—	—	I	I
Engine coolant		Replace every 2 years.			
Radiator hose		—	—	—	I
Drive belt		—	—	I	R
Drive shaft boots		I	I	I	I
Brakes		I	I	I	I
Rear brake plates		Replace every 10 000 km (6 000 miles).			

Item	Interval			
	km	Initial 200	Every 1 000	Every 2 000
	miles	Initial 100	Every 600	Every 1 200
	months	Initial 1	Every 3	Every 6
Brake fluid		—	I	I
		Replace every 2 years.		
Brake hose		—	—	I
		Replace every 4 years.		
Tires		—	I	I
Steering		I	I	I
Suspensions		—	—	I
Chassis nuts and bolts		T	T	T
General lubrications		—	L	L

Lubrication Points

B931H20205002


Proper lubrication is important for smooth operation and long life of each working part of the vehicle. Major lubrication points are indicated as follows.

NOTE

- Before lubricating each part, clean off any rusty spots and wipe off any grease, oil, dirt or grime.
- Lubricate exposed parts which are subject to rust, with a rust preventative spray whenever the vehicle has been operated under wet or rainy conditions.

Lubricate exposed parts

Every 1 000 km (600 miles, 3 months)

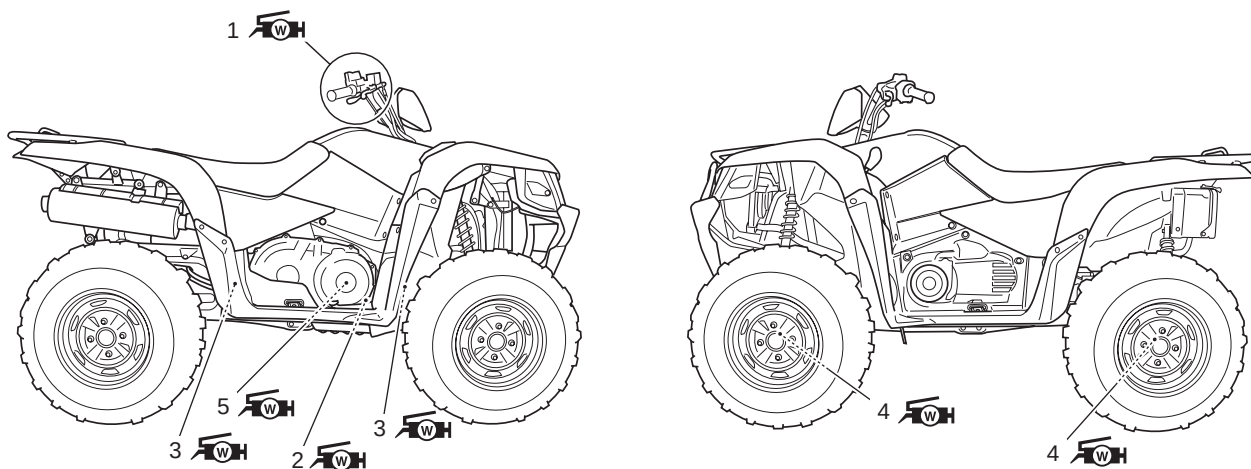

I931H1020078-03

1. Brake lever holder and throttle lever	3. Propeller shaft joint spline	5. Drive belt cover bearing (Inner race)
2. Brake pedal	4. Drive shaft joint spline	 : Apply water resistance grease.

Repair Instructions

Air Cleaner Element Inspection and Cleaning

B931H20206001

Inspect and clean element

Every 1 000 km (600 miles, 3 months)

Inspection

- 1) Remove the air cleaner element. Refer to “**Air Cleaner Element Removal and Installation: in Section 1D**”.
- 2) Inspect the air cleaner element for clogging. If it is clogged with dirt, clean or replace it with a new one.


⚠ CAUTION

If driving under dusty conditions, inspect or clean the air cleaner element more frequently. The surest way to accelerate engine wear is to operate the engine without the element or to use a torn element. Make sure that the air cleaner is in good condition at all times. Life of the engine depends largely on this component.

- 3) After finishing the air cleaner element inspection, reinstall the removed parts.

Cleaning

- 1) Remove the air cleaner element assembly. Refer to “**Air Cleaner Element Removal and Installation: in Section 1D**”.
- 2) Separate the polyurethane from element.

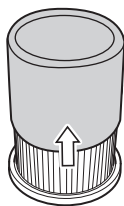


I831G1020002-01

- 3) Carefully use compressed air to clean the air cleaner element.


⚠ CAUTION

Always apply compressed air to the inside of the air cleaner element. If compressed air is applied to the outside, dirt will be forced into the pores of the air cleaner element, restricting air flow through the air cleaner element.

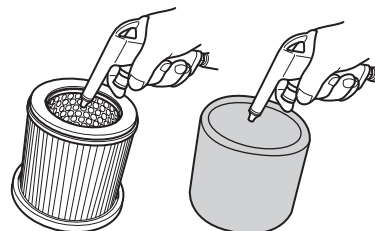

I831G1020003-01

- 4) After cleaning the air cleaner element, reinstall the removed parts.
- 5) Drain water from the air cleaner by removing the drain plug.

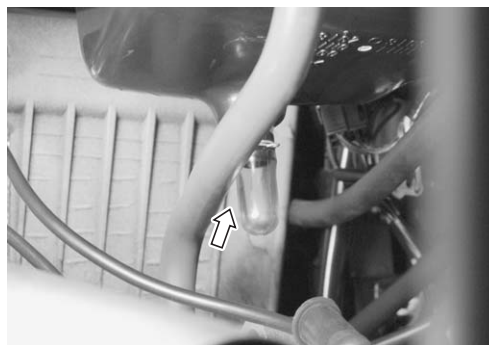

I931H1020001-01

- 6) Reinstall the drain plug.

Exhaust Pipe Bolt and Muffler Bolt Inspection

B931H20206002

Tighten exhaust pipe bolts, muffler bolt and nut
Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter


Check the exhaust pipe bolts, muffler bolts and nut to the specified torque. Refer to “**Exhaust Pipe / Muffler Removal and Installation: in Section 1K**”.

Tightening torque

Exhaust pipe nut (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Muffler mounting bolt (b): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Muffler connecting bolt (c): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

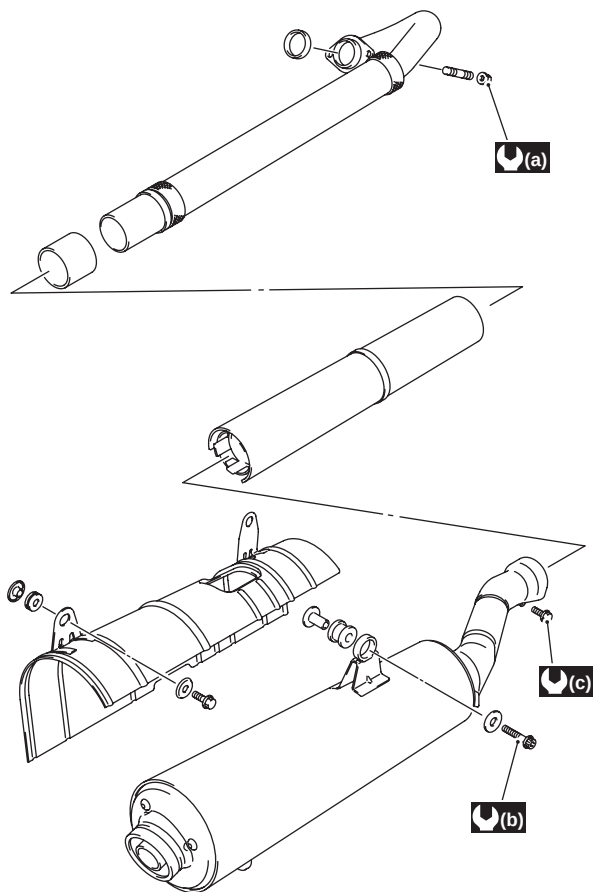

I831G1020005-02

Valve Clearance Inspection and Adjustment

B931H20206003

Inspect valve clearance

Initially at 200 km (100 miles, 1 month) and every 2 000 km (1 200 miles, 6 months) thereafter


Inspection

Valve clearance adjustment must be checked and adjusted, a) at the time of periodic inspection, b) when the valve mechanism is serviced, and c) when the camshafts are removed for servicing.

- 1) Remove the front inner fender left and right. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the side cover (left and right) and engine side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Move the throttle body backward. Refer to “**Throttle Body Removal and Installation: in Section 1D**”.


NOTE

It is unnecessary to disconnect the sensor coupler, fuel feed hose and throttle cable.

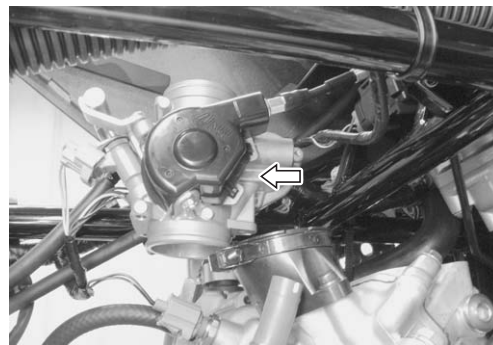

I931H1020002-01

- 4) Remove the recoil cover (1).

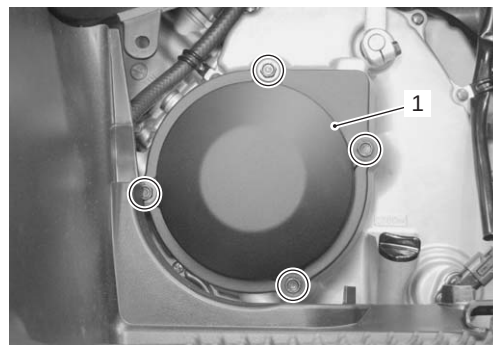


I931H1020003-01

- 5) Remove the spark plug cap and spark plug. Refer to **“Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H”**.

NOTE


Valve clearance is to be checked when the engine is cold. The intake and exhaust valves must be checked and adjusted when the piston is at Top-Dead-Center (TDC) of the compression stroke.

- 6) Remove the valve timing inspection plug (2).

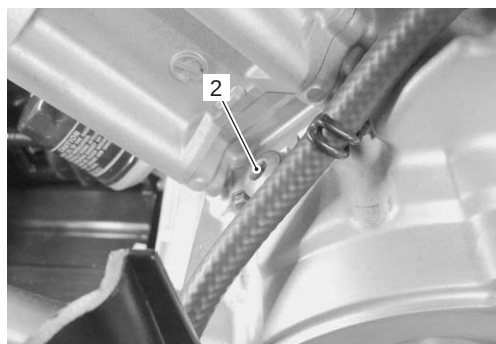


I931H1020004-01

- 7) Turn the crankshaft until the piston reaches TDC on the compression stroke by slowly pulling the recoil starter rope. Pull the recoil starter rope until the line (3) on the generator rotor is aligned with the mark (4) on the crankcase.

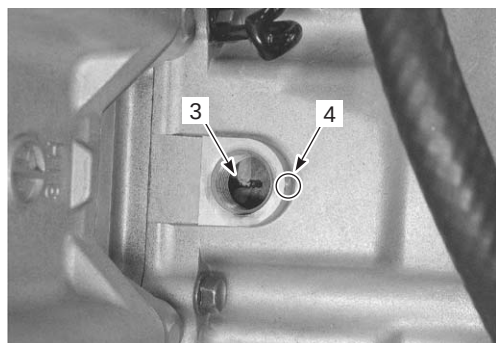

I931H1020005-01

- 8) Remove the valve timing inspection caps (5).

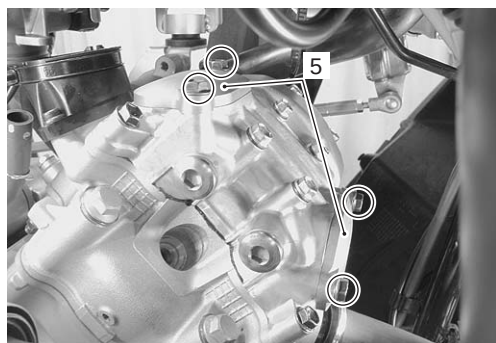

I931H1020006-03

- 9) Insert the thickness gauge to check the clearance between the valve stem end and the adjusting screw on the rocker arm.


Special tool

TOOL (A): 09900-20803 (Thickness gauge)

Valve clearance (When cold)

IN.: 0.05 – 0.10 mm (0.002 – 0.004 in)

EX.: 0.17 – 0.22 mm (0.007 – 0.009 in)

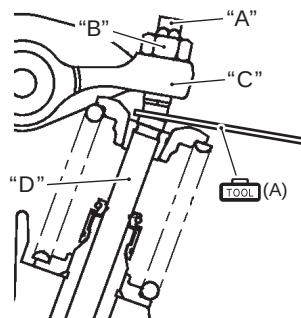

I931H1020007-01

"A": Adjusting screw	"C": Rocker arm
"B": Lock-nut	"D": Valve stem

Adjustment

- 1) If the clearance is out of specification, bring it into the specified range using the special tool.


Special tool

TOOL (A): 09900-20803 (Thickness gauge)


TOOL (B): 09917-14910 (Tappet adjust driver)

Tightening torque

Valve clearance adjuster lock-nut: 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

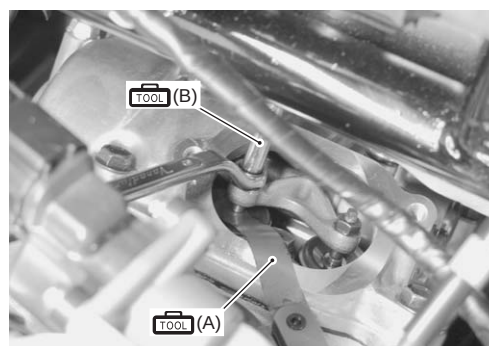

I931H1020008-02

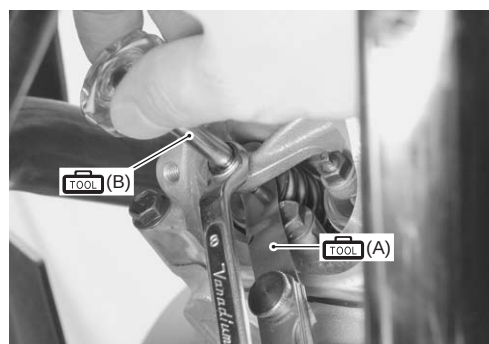

I931H1020009-02

- 2) After inspect and adjust the clearance, apply grease to the valve timing inspection cap O-rings and install the inspection caps (1).

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

 CAUTION

Use the new O-rings to prevent oil leakage.




I931H1020010-02

- 3) Tighten the valve timing inspection cap bolts (2) to the specified torque.

Tightening torque

Valve timing inspection cap bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

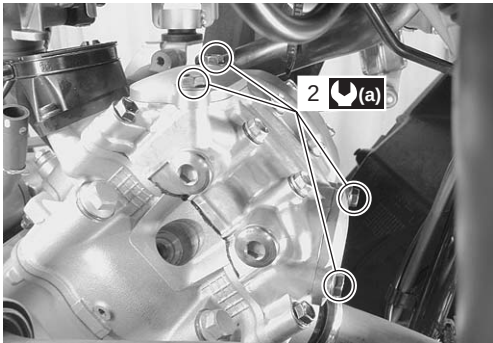

I931H1020011-03

- 4) Install the removed parts.

Tightening torque

TDC plug: 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Spark Plug Replacement

B931H20206004

Replace spark plug

Every 6 000 km (4 000 miles)

Refer to “**Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H**”.

Spark Plug Inspection and Cleaning

B931H20206005

Inspect spark plug

Every 2 000 km (1 200 miles, 6 months)

Heat Range

- 1) Remove the spark plug. Refer to “**Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H**”.
- 2) Check spark plug heat range by observing electrode color.
If it appears white or glazed, replace the spark plug with colder type one.


Heat range

	Standard	Cold type
NGK	CR6E	CR7E
DENSO	U20ESR-N	U22ESR-N

- 3) After finishing the spark plug inspection, reinstall the removed parts.

Carbon Deposits

- 1) Remove the spark plug. Refer to “**Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H**”.
- 2) Check carbon deposits on the spark plug.
If carbon is deposited, remove it using a spark plug cleaner machine or carefully use a tool with a pointed end.

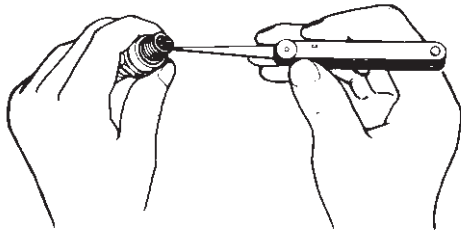

I649G1020010-02


- 3) After finishing the spark plug inspection, reinstall the removed parts.

Spark Plug Gap

- 1) Remove the spark plug. Refer to “**Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H**”.
- 2) Measure the spark plug gap using a wire gauge. Adjust the spark plug gap if necessary.

Spark plug gap

0.7 – 0.8 mm (0.028 – 0.031 in)

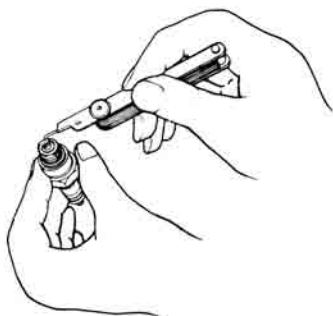

I831G1020092-01

- 3) After finishing the spark plug inspection, reinstall the removed parts.

Electrodes Condition

- 1) Remove the spark plug. Refer to “**Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H**”.
- 2) Check to see the worn or burnt condition of the electrodes.
If it is extremely worn or burnt, replace the plug. And also replace the plug if it has a broken insulator, or damaged thread.
- 3) After finishing the spark plug inspection, reinstall the removed parts.

⚠ CAUTION

Check the thread size and reach when replacing the spark plug. If the reach is too short, carbon will be deposited on the screw portion of the spark plug hole and engine damage may result.


Spark Arrester Cleaning

B931H20206006

Spark arrester cleaning


Every 2 000 km (1 200 miles, 6 months)

- 1) Remove the muffler end cover (1).

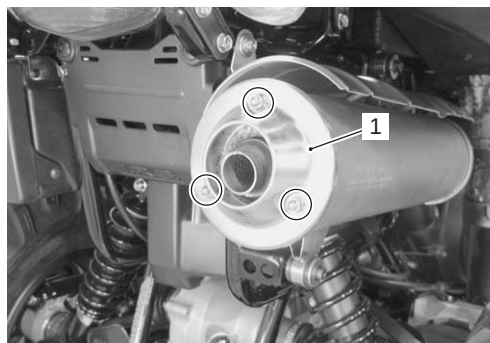


I931H1020012-01

- 2) Remove the spark arrester (2) from the muffler.

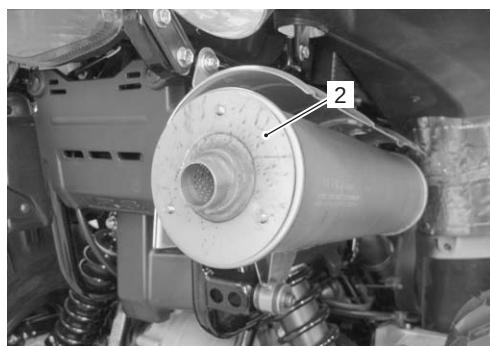

I931H1020013-01

- 3) Clean the spark arrester (2) with a brush.

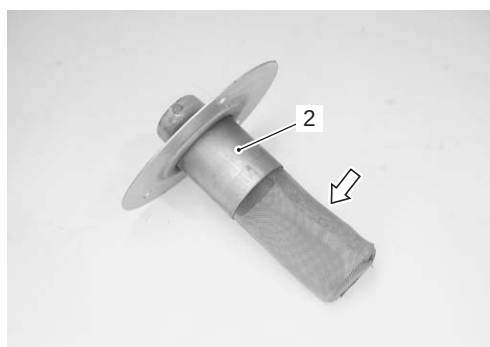


I931H1020014-02

- 4) Tighten the muffler end cover nut (3) to the specified torque.

Tightening torque

Muffler end cover nut (a): 11 N·m (1.1 kgf-m, 8.0 lbf-ft)

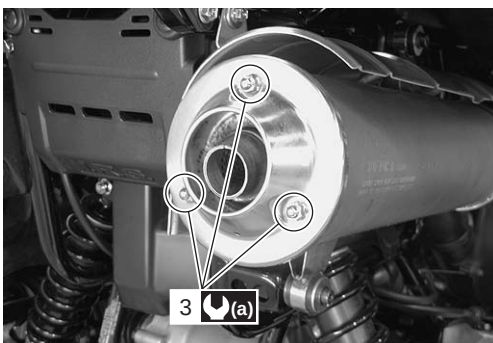

I931H1020089-01

- 5) After finishing the spark arrester cleaning, reinstall the removed parts.

Fuel Line Inspection

B931H20206007

Inspect fuel line

Every 1 000 km (600 miles, 3 months)


Replace fuel line

Every 4 years


Inspect the fuel line in the following procedures:

- 1) Remove the left side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the rear fender. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Remove the fuel tank side cover. Refer to “**Fuel Tank Removal and Installation: in Section 1G**”.

- 4) Inspect the fuel feed hose for damage and fuel leakage. If any defects are found, the fuel feed hose must be replaced.

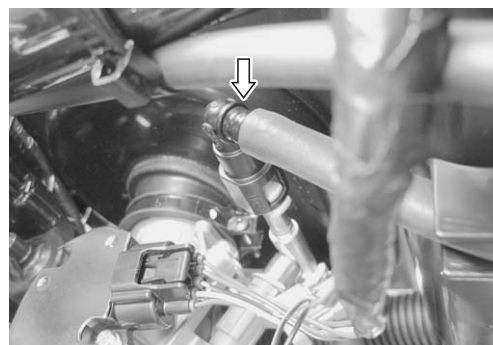

I931H1020015-01

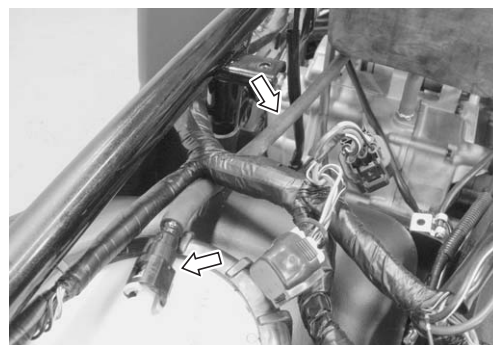

I931H1020016-01

- 5) After finishing the fuel feed hose inspection or replacement, reinstall the removed parts.

Engine Oil and Filter Replacement

B931H20206008

Replace engine oil

Initially at 200 km (100 miles, 1 month) and every 2 000 km (1 200 miles, 6 months) thereafter


Replace oil filter

Initially at 200 km (100 miles, 1 month) and every 2 000 km (1 200 miles, 6 months) thereafter


Oil should be changed while the engine is warm. Oil filter replacement at the above intervals, should be done together with the engine oil change.

Engine Oil Replacement

- 1) Place the vehicle on a level ground and set the brake lock.
- 2) Remove the engine side cover. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- 3) Place an oil pan below the engine, and drain engine oil by removing the oil drain plug (1) and filler cap (2).

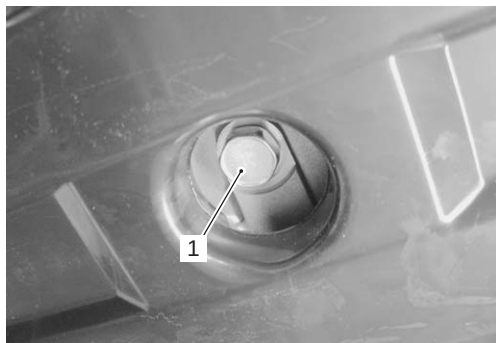

I931H1020017-01

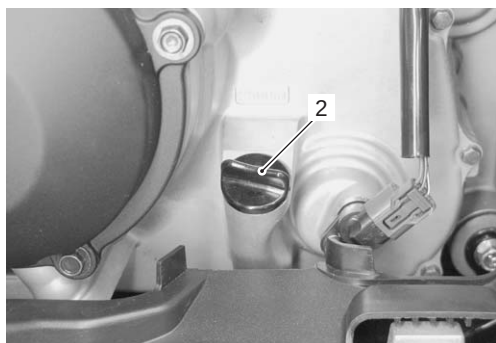


I931H1020018-01

- 4) Tighten the oil drain plug (1) to the specified torque.

⚠ CAUTION**Replace the gasket washer with a new one.****Tightening torque****Oil drain plug (a): 21 N·m (2.1 kgf-m, 15.0 lbf-ft)**

I931H1020019-01


- 5) Pour new oil through the oil filler. When performing an oil change (without oil filter replacement), the engine will hold about 2.3 L (2.4/2.0 US/Imp qt) of oil. Use of SF/SG or SH/SJ in API with MA in JASO.
- 6) Start up the engine and allow it to run for several minutes at idling speed after tightening the oil filler cap.
- 7) Turn off the engine and wait about three minutes, and then check the oil level on the dipstick (3). The oil level should be between the low level line “A” and full level line “B”. If the oil level is lower than the low level line “A”, add oil to the full level line “B”.

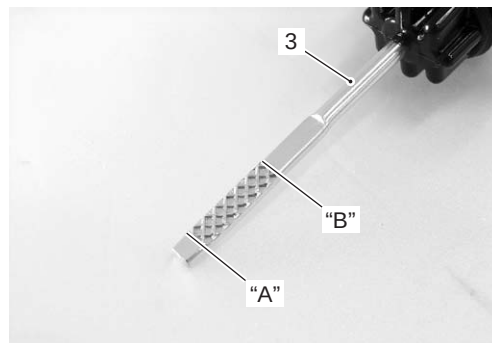

I831G1020023-01

Oil Level Inspection

- 1) Place the vehicle on a level ground and set the brake lock.
- 2) Start up the engine and allow it to run for several minutes at idling speed.
- 3) Turn off the engine and wait about three minutes, then check the oil level on the dipstick (1). If the level is below low level line “A”, add oil to full level line “B”. If the level is above full level line “B”, drain oil to full level line “B”.

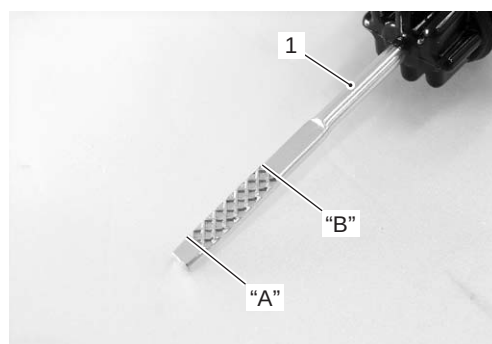NOTE**When inspecting the oil level, the oil filler cap threads are not run in but touching the filler hole upper edge.**


I831G1020024-01

Oil Filter Replacement

- 1) Drain engine oil as described in the engine oil replacement procedure.
- 2) Remove left inner cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Remove the oil filter (1) using the special tool.

Special tool

 (A): 09915-40620 (Oil filter wrench)

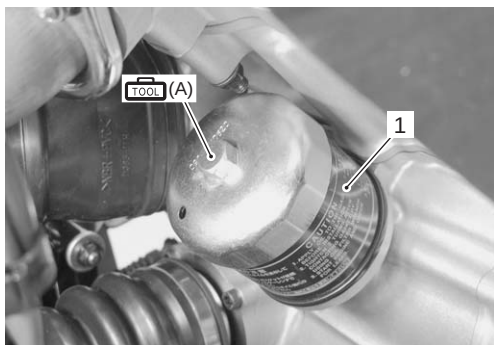

I931H1020020-02

- 4) Apply engine oil lightly to the O-ring of new oil filter, before installation.

CAUTION

ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER.

Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this vehicle.

- 5) Install a new oil filter. Turn it by hand until you feel that the oil filter O-ring contacts the oil filter mounting surface. Then, tighten the oil filter two full turns (or to specified torque) using the special tool.

NOTE


To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand only.

Special tool

 (A): 09915-40620 (Oil filter wrench)

Tightening torque

Oil filter (a): 20 N·m (2.0 kgf-m, 14.5 lbf-ft)

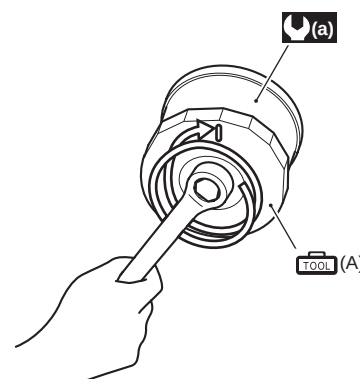

I940H1020023-03

- 6) Add new engine oil and check the oil level is as described in the engine oil replacement procedure.

Necessary amount of engine oil

Oil change: 2 500 ml (2.6/2.2 US/Imp qt)

Oil and filter change: 2 700 ml (2.9/2.4 US/Imp qt)

Engine overhaul: 3 200 ml (3.4/2.8 US/Imp qt)


Front Differential Gear Oil Inspection

B931H20206009

Inspect front differential gear oil

Every 2 000 km (1 200 miles, 6 months)

- 1) Place the vehicle on level ground.
- 2) Remove the oil level plug (1) and oil filler plug (2), and inspect the oil level. If the oil level is below the level hole, add fresh oil until oil flows from the level hole.

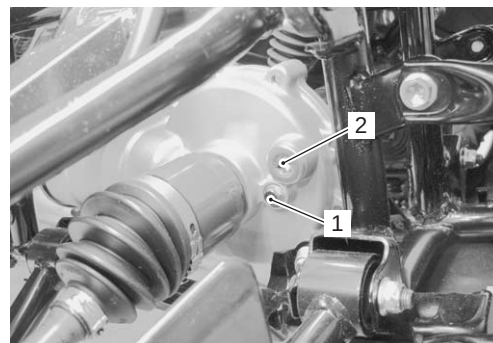

I931H1020021-01

0B-11 Maintenance and Lubrication:

- 3) Tighten the oil level plug (1) and oil filler plug (2) to the specified torque.

⚠ CAUTION


Replace the gasket washers with new ones.

Tightening torque

Front differential gear oil level plug (a): 8 N·m (0.8 kgf-m, 5.7 lbf-ft)

Tightening torque

Front differential gear oil filler plug (b): 35 N·m (3.5 kgf-m, 25.5 lbf-ft)

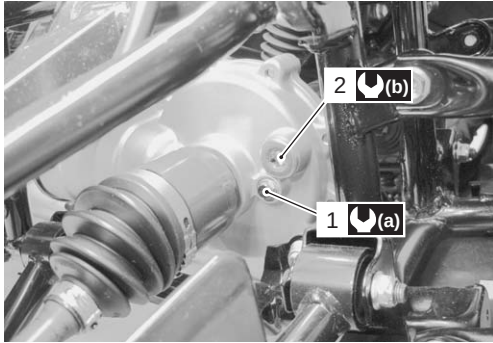


I931H1020022-02

Front Differential Gear Oil Replacement

B931H20206010

Replace front differential gear oil Every 2 years

- 1) Place the vehicle on level ground.
- 2) Remove the front under cover. Refer to “Under Cover Removal and Installation: in Section 9D”.
- 3) Drain the front differential gear oil by removing the oil drain plug (1), oil filler plug and oil level plug.

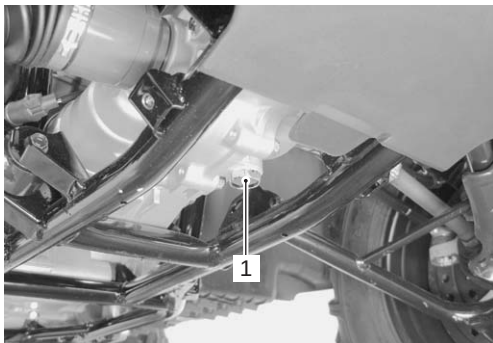

I931H1020023-01


- 4) Tighten the oil drain plug (1) to the specified torque.

⚠ CAUTION

Replace the gasket washers with a new one.

Tightening torque

Front differential gear oil drain plug (a): 32 N·m (3.2 kgf-m, 23.0 lbf-ft)

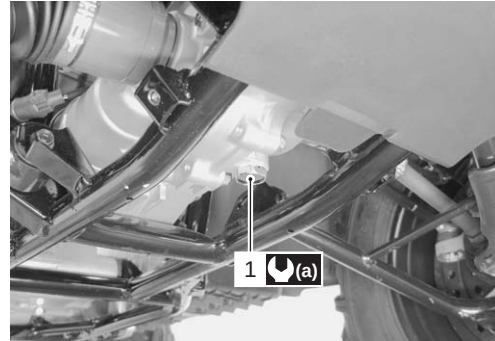

I931H1020024-01

- 5) Pour fresh oil through the oil filler hole until it overflows from the oil level hole. When performing an oil change, the front differential will hold about 460 ml (15.6 US oz, 16.2 Imp oz) of oil. Use hypoid gear oil SAE #90, API grade GL-5.

NOTE

Use hypoid gear oil SAE #80, API grade GL-5, if the vehicle is ridden where the ambient temperature is below 0 °C (32 °F).

Front differential gear oil capacity
460 ml (15.6/16.2 US/Imp oz)

- 6) Tighten the oil level plug (2) and oil filler plug (3) to the specified torque.


⚠ CAUTION

Replace the gasket washers with new ones.

Tightening torque

Front differential gear oil level plug (b): 8 N·m (0.8 kgf-m, 5.7 lbf-ft)

Front differential gear oil filler plug (c): 35 N·m (3.5 kgf-m, 25.5 lbf-ft)

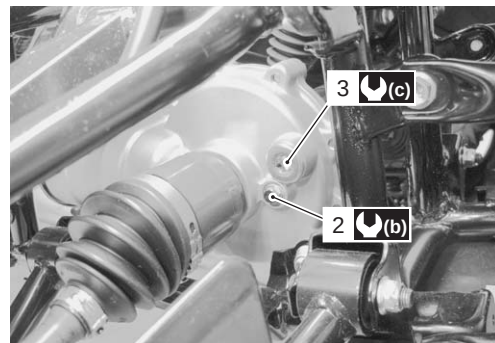

I931H1020025-02


Final Gear Oil Inspection

B931H20206011


Inspect final gear oil

Every 2 000 km (1 200 miles, 6 months)

- 1) Place the vehicle on a level ground.
- 2) Remove the filler plug (1), and inspect the oil level. If the oil level is below, add fresh oil until the oil level reaches the bottom tip of the thread.

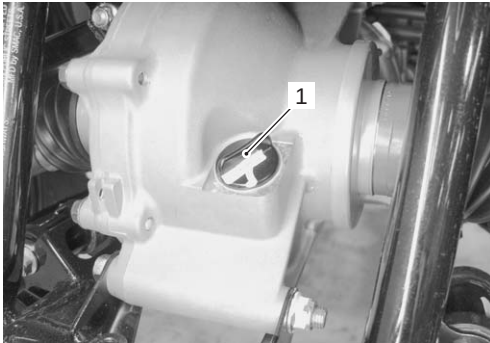

I931H1020026-01

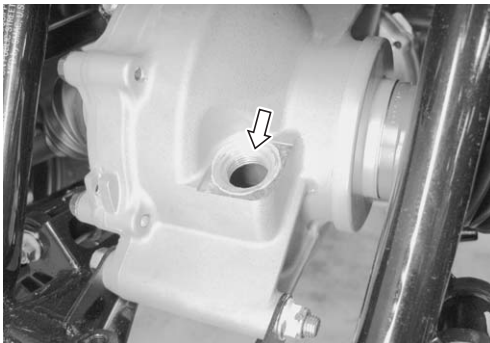

I931H1020027-02

- 3) Tighten the oil filler plug (1) securely.

Final Gear Oil Replacement


B931H20206012

Replace final gear oil

Every year

- 1) Place the vehicle on a level ground.
- 2) Remove the rear under cover. Refer to “**Under Cover Removal and Installation: in Section 9D**”.
- 3) Place an oil pan below the final gear case.

- 4) Drain oil by removing the oil drain plug (1) and oil filler plug (2).

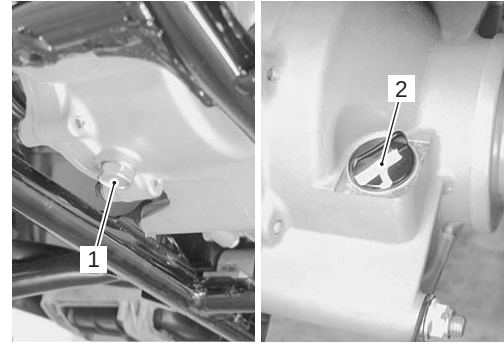

I931H1020029-01

- 5) Tighten the oil drain plug (1) to the specified torque, and pour fresh oil through the oil filler hole until the oil level reaches the bottom tip of the thread. Use Mobil fluid 424 or equivalent oil.

Final gear oil capacity


770 ml (26.0/27.1 US/Imp oz)

⚠ CAUTION

Replace the gasket with a new one.

Tightening torque

Final gear oil drain plug (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

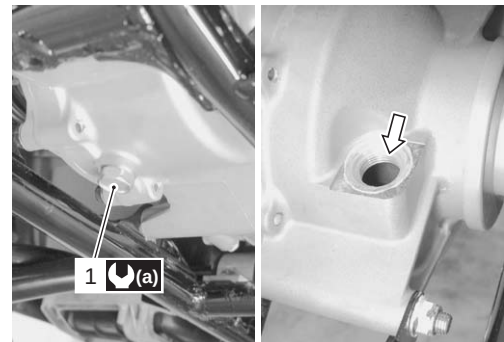

I931H1020028-01

Throttle Cable Play Inspection and Adjustment

B931H20206013

Inspect throttle cable play

Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter

Inspect and adjust the throttle cable play "a" as follows.


Throttle cable play "a"

3.0 – 5.0 mm (0.12 – 0.20 in)



I931H1020030-01

- 1) Loosen the lock-nut (1) of the throttle cable.
- 2) Turn the adjuster (2) in or out until the throttle cable play "a" (at the throttle lever) is between 3 – 5 mm (0.12 – 0.20 in).
- 3) Tighten the lock-nut (1) while holding the adjuster (2).

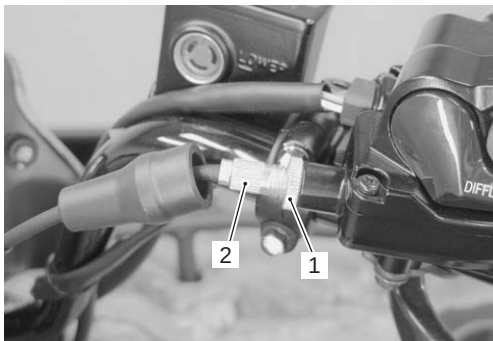

I931H1020031-01

⚠ WARNING

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle lever returns smoothly and automatically.

Throttle Body Inspection

B931H20206014

Inspect throttle body

Every 1 000 km (600 miles, 3 months)

Inspect the throttle body periodically for dirt or mud. If any dirt or mud is found, clean it. Refer to "Throttle Body Removal and Installation: in Section 1D".

Cooling System Inspection


B931H20206015

Replace engine coolant

Every 2 years

Engine Coolant Level Inspection

- 1) Place the vehicle on a level ground.
- 2) Check the engine coolant level by observing the full and lower lines on the engine coolant reservoir tank. If the level is below the lower line, add engine coolant to the full line from the engine coolant reservoir tank filler.

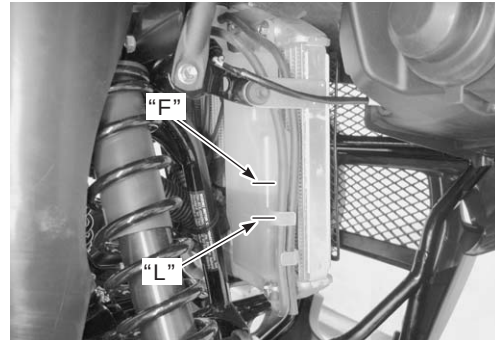

I931H1020032-01


Engine Coolant Change

Refer to "Engine Coolant Description: in Section 1F".

⚠ WARNING


Do not open the radiator cap when the engine is hot, as you may be injured by escaping hot liquid or vapor. Engine coolant may be harmful if swallowed or if it comes in contact with skin or eyes. If engine coolant gets into the eyes or in contact with the skin, flush thoroughly with plenty of water. If swallowed, induce vomiting and call physician immediately.

- 1) Remove the radiator cap lid.
- 2) Remove the radiator cap (1).

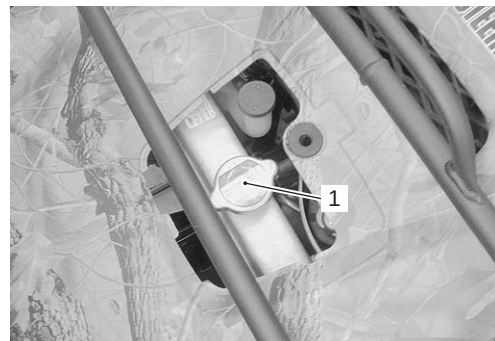

I931H1020033-01

- 3) Remove the left inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 4) Remove the front under cover. Refer to “**Under Cover Removal and Installation: in Section 9D**”.
- 5) Place a pan below the water pump, and then drain the engine coolant by removing the drain plug (2).

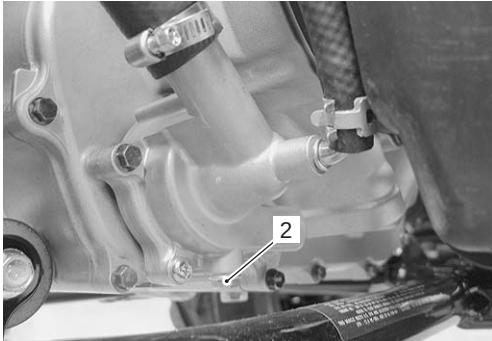

I931H1020034-01


- 6) Flush the radiator with fresh water if necessary.
- 7) Tighten the drain plug (2) to the specified torque.

⚠ CAUTION

Replace the gasket with a new one.

Tightening torque

Engine coolant drain plug (a): 13 N·m (1.3 kgf-m, 9.5 lbf-ft)

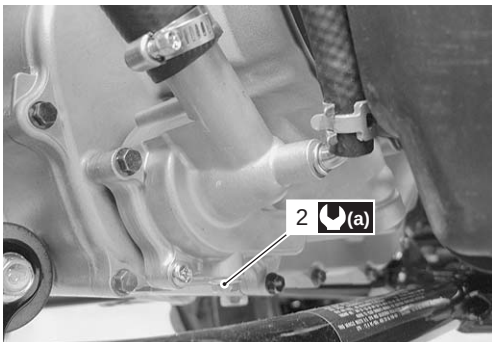

I931H1020035-01

- 8) Pour the specified engine coolant up to the radiator inlet.

Engine coolant capacity (including reservoir)
2 450 ml (2.6/2.2 US/Imp qt)



I931H1020036-01

- 9) Bleed air from the cooling circuit.
- 10) After changing engine coolant, reinstall the removed parts.

Air Bleeding From the Cooling Circuit

- 1) Place the vehicle on a level ground and set the brake lock.
- 2) Pour engine coolant up to the radiator inlet.
- 3) Slowly swing the vehicle, right and left, to bleed the air trapped in the cooling circuit.
- 4) Add engine coolant up to the radiator inlet.
- 5) Start up the engine and bleed air from the radiator inlet completely.
- 6) Add engine coolant up to the radiator inlet.
- 7) Repeat the 6), 7) procedures until no air bleeds from the thermostat connector inlet.
- 8) Close the radiator cap securely.
- 9) After warming up and cooling down the engine, add the specified engine coolant until the level is between the upper and lower lines on the engine coolant reservoir tank.



I931H1020037-01


- 10) Reinstall the removed parts.

Radiator Hoses Inspection


Inspect radiator hoses

Every 2 000 km (1 200 miles, 6 months)


Inspect the radiator hoses for damage and engine coolant leakage. If any defects are found, replace them with new ones.

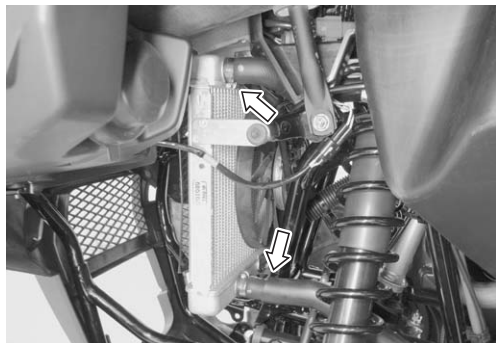

I931H1020040-01

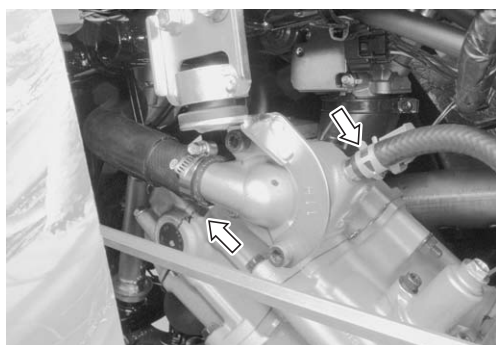

I931H1020041-01

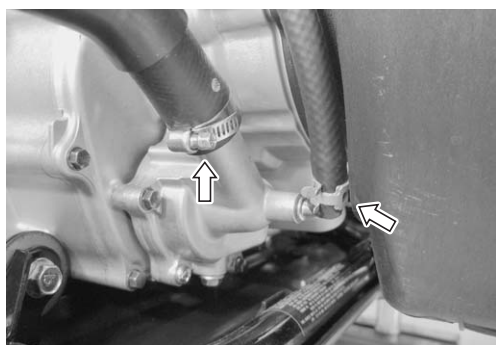

I931H1020042-01

Drive V-belt Inspection and Replacement

B931H20206016

Inspect drive V-belt


Every 1 000 km (600 miles, 3 months)

Replace drive V-belt

Every 2 000 km (1 200 miles, 6 months)

Inspect the drive V-belt in the following procedures:

- 1) Remove the drive V-belt. Refer to “**V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A**”.
- 2) Inspect the drive V-belt for crack or other damage and measure the width of belt if necessary. Refer to “**Drive V-belt Inspection: in Section 5A**”. If any abnormal points are found, replace the drive V-belt with a new one. Refer to “**V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A**”.

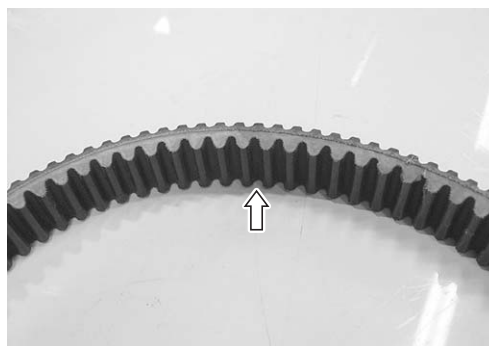

I831G1020043-01

- 3) Install the removed parts. Refer to “**V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A**”.


Drive Shaft Boots Inspection

B931H20206017


Inspect drive shaft

Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter

- Check the driveshaft boots for twist and grease leak. If any defects are found, replace the defective parts with new ones.
- Inspect the boots for wear or damage. If any defects are found, replace them with new ones.

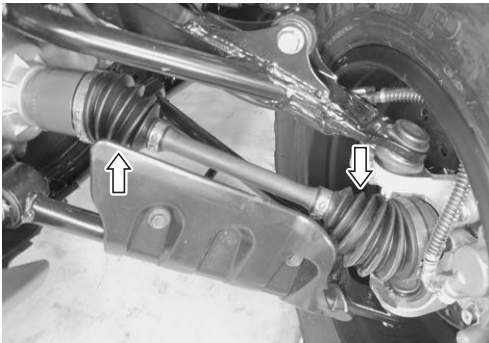

I931H1020045-01

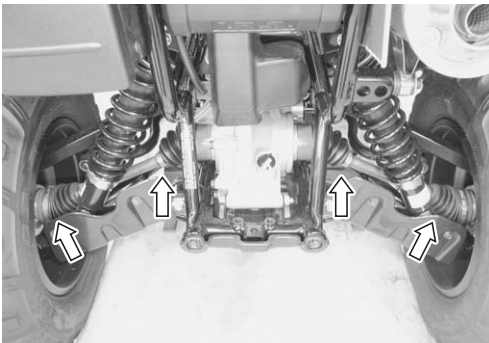

I931H1020046-01

Front Brake System Inspection

B931H20206018

Inspect brake system

Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter

▲ WARNING

- The brake system of this vehicle is filled with a glycol-based brake fluid. Do not use or mix different types of fluid such as silicone-based and petroleum-based fluids. Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or stored for a long period of time.
- Brake fluid, if it leaks, will interfere with safe running and immediately discolor painted surfaces. Check the brake hoses and hose joints for cracks and oil leakage before riding.

Brake Fluid Level Check

Inspect brake fluid level

Every 1 000 km (600 miles, 3 months)

- 1) Place the vehicle on a level ground.
- 2) Check the brake fluid level by observing the lower limit lines on the brake fluid reservoir. When the brake fluid level is below the lower limit line, replenish with brake fluid that meets the following specification.

BF: Brake fluid (DOT 4)



I931H1020047-01

Brake Fluid Replacement

Replace brake fluid

Every 2 years

Refer to "Brake Fluid Replacement: in Section 4A".

Air Bleeding from Brake Fluid Circuit


Refer to "Air Bleeding from Front Brake Fluid Circuit: in Section 4A".

Front Brake Pads Check


The extent of front brake pad wear can be checked by observing the grooved limit line "A" on the pad. When the wear exceeds the grooved limit line, replace the pads with new ones. Refer to **"Front Brake Pad Replacement: in Section 4B"**.

CAUTION

Replace the brake pad as a set, otherwise braking performance will be adversely affected.

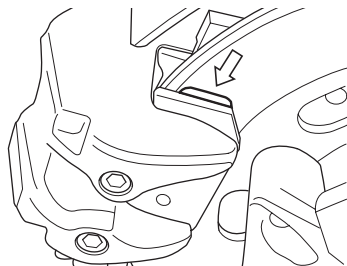

I931H1020048-03

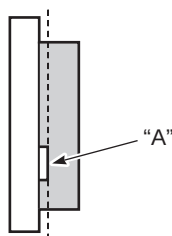


I931H1020087-01

Front Brake Hose Inspection

Inspect brake hose

Every 2 000 km (1 200 miles, 6 months)

- 1) Turn the handlebars to left or right.
- 2) Inspect the brake hoses and hose joints for crack, damage or brake oil leakage. If any defects are found, replace the front brake hose with a new one. Refer to **"Front Brake Hose Removal and Installation: in Section 4A"**.

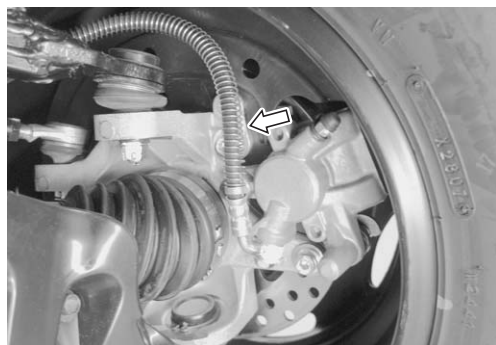

I931H1020049-01

Front Brake Hose Replacement

Replace brake hose

Every 4 years

Refer to **"Front Brake Hose Removal and Installation: in Section 4A"**.

Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment

B931H20206019

NOTE


Adjust the rear brake by adjusting the brake pedal first and then adjust the brake lever.

Brake Pedal Height

- 1) Inspect the brake pedal height "a" between the pedal top face and footrest. Adjust the brake pedal height if necessary.


Brake pedal height "a"

12.5 – 22.5 mm (0.5 – 0.9 in)

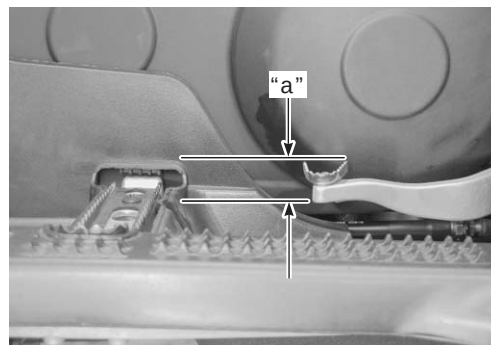

I931H1020050-02

- 2) Loosen the lock-nut (1).
- 3) Turn the adjuster (2) until the brake pedal becomes 12.5 – 22.5 mm (0.5 – 0.9 in) "a" higher from the top of the footrest.
- 4) Tighten the lock-nut (1) securely.

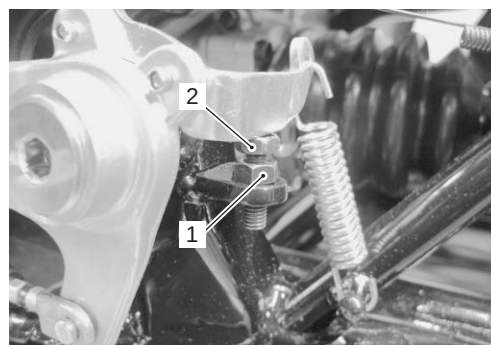

I931H1020051-02


Brake Pedal Free Travel

Inspection

Inspect and adjust the rear brake pedal free travel "a" as follows.

Rear brake pedal free travel "a"


20 – 30 mm (0.8 – 1.2 in)

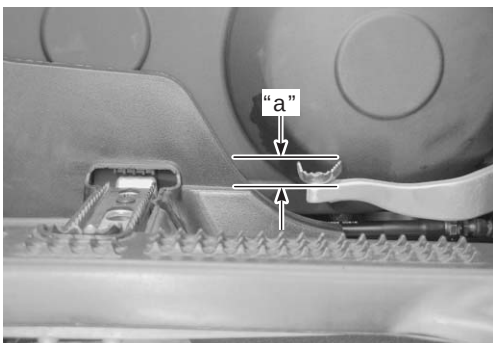

I931H1020052-02


Adjustment

- Turn the adjuster nut (1) so the rear brake pedal has 20 – 30 mm (0.8 – 1.2 in) free travel at the rear brake pedal end before pressure is felt.

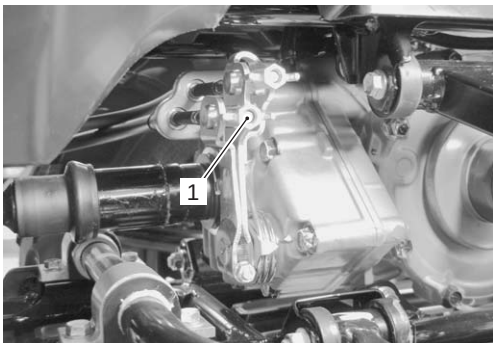

I931H1020053-01

- Adjust the rear brake light switch so that the brake light will come on just before pressure is felt when the brake pedal is depressed.

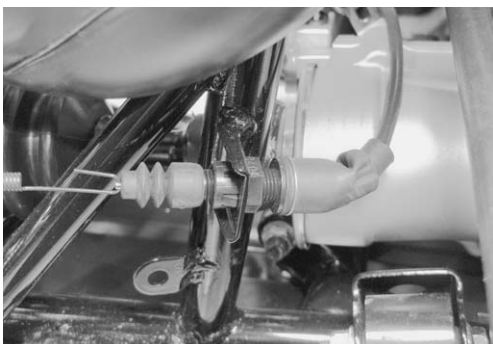


I931H1020054-01

Rear Brake (Parking Brake) Lever Play Adjustment

- 1) After adjusting the brake pedal, check the rear brake lever play "a". The brake lever play "a" as measured at the lever holder should be between 6 – 8 mm (0.2 – 0.3 in) when the lever is lightly pulled in towards the grip. If adjustment is necessary, slacken the cable by loosening the lock-nut (1) and screwing the cable adjuster (2) on the brake lever holder all the way in.


Rear brake lever play "a"

6 – 8 mm (0.2 – 0.3 in)

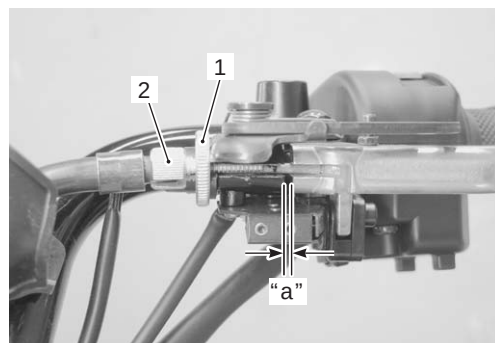


I931H1020055-01

- 2) Turn the adjust nut (3) so the rear brake lever has 6 – 8 mm (0.2 – 0.3 in) play "a" at the rear brake lever end before pressure is felt.

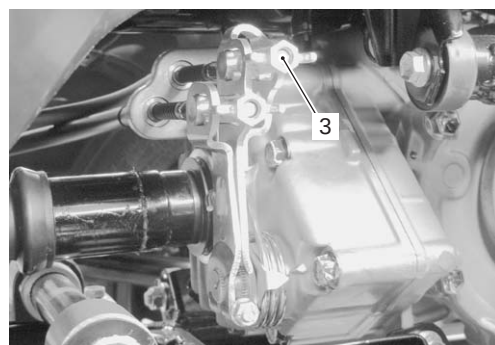

I931H1020056-01

- 3) Minor adjustment can be made with the adjuster (2).
- 4) Tighten the lock-nut (1).

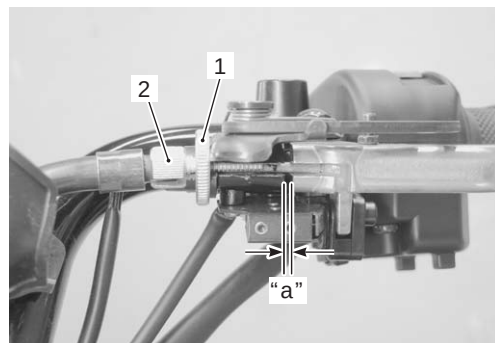

I931H1020055-01

- 5) After adjusting the play, check that the rear wheels roll freely without applying the brake, the transmission in neutral and the rear wheels off the ground. Readjust the rear brake lever if the rear wheels could not roll freely.

Rear Brake Friction Plate Wear Limit Inspection

B931H20206020

Replace rear brake friction plate


Every 10 000 km (6 000 miles)

After adjusted rear brake pedal and rear brake lever, inspect the rear brake friction plate wear limit.

- While fully applying the rear brake, check to see that the extension line of the index mark "A" is within the limit "B". If the extension line is out of the limit "B", replace the friction plates with new ones. Refer to "Rear Brake Disassembly and Assembly: in Section 4C".

⚠ CAUTION

Replace the friction plate as a set, otherwise breaking performance will be adversely affected.

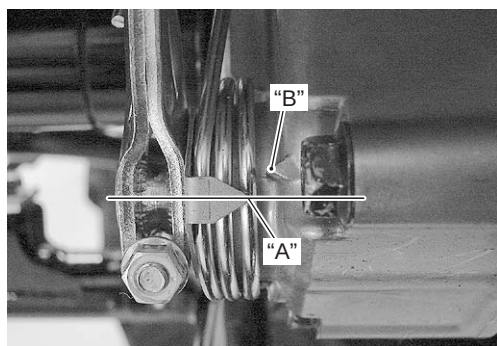

I831G1020049-02

Tire Inspection

B931H20206021

Inspect tire

Every 1 000 km (600 miles, 3 months)

Tire Tread Condition

Operating the vehicle with excessively worn tires will decrease riding stability and consequently invite a dangerous situation. It is highly recommended to replace a tire when the remaining depth of tire tread reaches the following specification.


Special tool

 : 09900-20805 (Tire depth gauge)

Tire tread depth "a" (Service limit)

Front: 4.0 mm (0.16 in)

Rear: 4.0 mm (0.16 in)

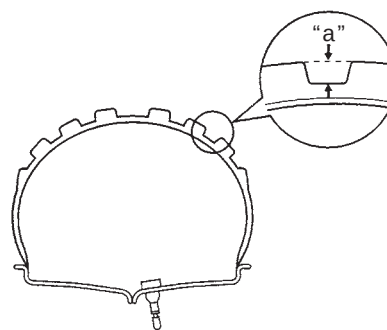

I831G1020084-01

Tire Pressure

If the tire pressure is too high or too low, steering will be adversely affected and tire wear increased. Therefore, maintain the correct tire pressure for good roadability or longer tire life will result. Cold inflation tire pressure is as follows.

Cold inflation tire pressure

	kPa	kgf/cm ²	psi
Front	35	0.35	5.1
Rear	30	0.30	4.4

Vehicle load capacity limit

172 kg (380 lbs)

⚠ CAUTION

To minimize the possibility of tire damage from over-inflation, we strongly recommended that a manual type air pump be used rather than a high pressure air compressor as found in service stations. When filling air into the tires, never exceed 70 kPa (0.7 kgf/cm², 10 psi)

⚠ CAUTION

The standard tire fitted on this vehicle is an AT25 x 8-12☆☆ for the front and a AT25 x 10-12☆☆ for the rear. The use of tires other than those specified may cause instability. It is highly recommended to use the specified tires.

Tire type

DUNLOP

- Front: DUNLOP KT411
- Rear: DUNLOP KT415

Steering System Inspection

B931H20206022

Inspect steering system


Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter

Steering should be adjusted properly for smooth turning of handlebars and safe running.


- 1) Place the vehicle on level ground.
- 2) Make sure the tire pressure for right and left tires in the same and set to the proper specification.
- 3) Set the front wheels in the straight position.
- 4) Place a load of 75 kg (165 lbs) on the seat.
- 5) Measure the distances ("A" and "B") between the front wheels. Subtract the measurement of "A" from that of "B" to find the toe-out. If the toe-out is not within specification, adjust the tie-rod to the right or left until the toe-out is within the specified range.

Toe-out ("B" – "A")

Standard: $5 \pm 4 \text{ mm}$ ($0.20 \pm 0.16 \text{ in}$)

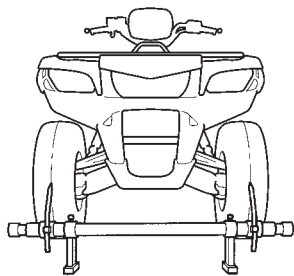

I931H1020057-01

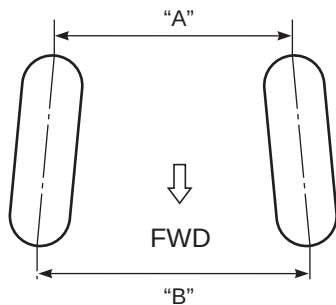

I831G1020059-04

If the toe-out is out of specification, bring it into the specified range. Refer to "Toe Adjustment (Page 0B-20)".

Toe Adjustment

B931H20206023

Adjust the toe-out as follows:


- 1) Loosen the lock-nuts (1), (2) on each tie-rod.

⚠ CAUTION

- The lock-nuts (2) have left-hand threads.
- When loosening and tightening the lock-nuts, hold the tie-rod end with a open end wrench.


NOTE

Hold the concave part "a" of tie-rod with a wrench.

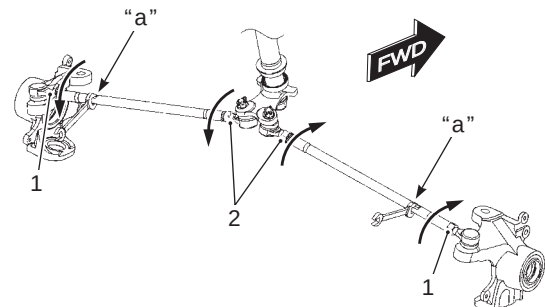

I931H1020079-02

- 2) Temporarily tighten the four lock-nuts.
- 3) Check that the distances "C" and "D" are equal, as shown. If the distances are not equal, adjust the tie-rod to the right or left until the toe-out is within specification. Check the toe-out again by measuring distances "A" and "B".
- 4) If the toe-out is not within specification, repeat the adjustment as above until the proper toe-out is obtained and distances "C" and "D" become equal.

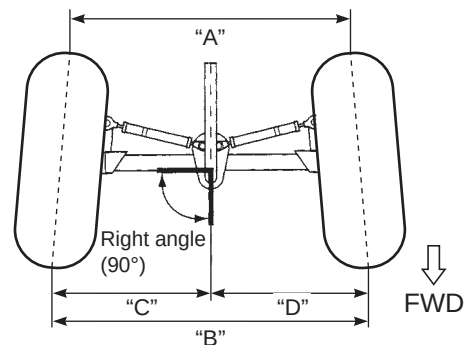


I831G1020088-04

- 5) After adjustment has been made, tighten the four lock-nuts to the specified torque.

Tightening torque

Tie-rod lock-nut (a): 29 N·m (2.9 kgf-m, 21.0 lbf-ft)

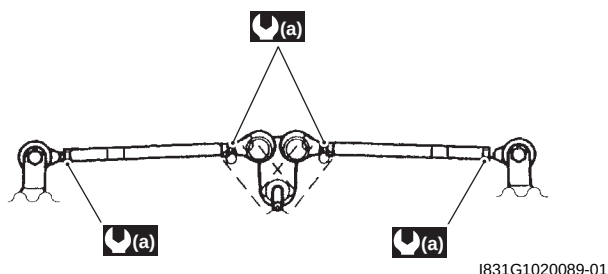

Suspensions Inspection

B931H20206024

Inspect suspension

Every 2 000 km (1 200 miles, 6 months)

- 1) Support the vehicle with a jack and wooden blocks.
- 2) Remove the front and rear wheels.
- 3) Inspect the suspension arm and bearing for scratches, wear, or damage. If any defects are found, replace them with new ones. Refer to **“Front Shock Absorber Removal and Installation: in Section 2B”**.
- 4) Inspect the front and rear shock absorbers for oil leakage or damage. If any defects are found, replace them with new ones. Refer to **“Front Shock Absorber Removal and Installation: in Section 2B”** and **“Rear Shock Absorber Removal and Installation: in Section 2C”**.


Chassis Bolt and Nut Inspection

B931H20206025


Tighten chassis bolt and nut

Initially at 200 km (100 miles, 1 month) and every 1 000 km (600 miles, 3 months) thereafter


Check that all chassis bolts and nuts are tightened to their specified torque.

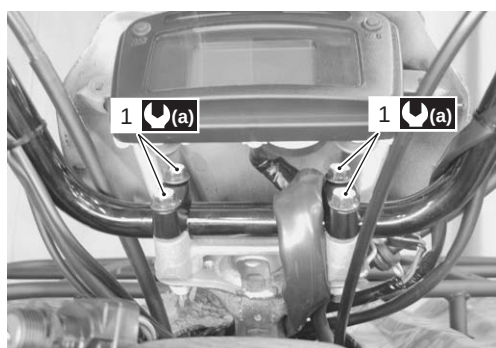


1 (a) Handlebar upper clamp bolt 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

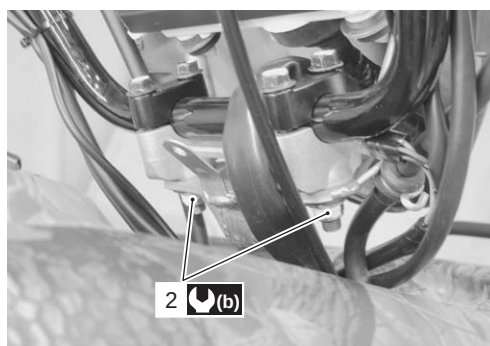


2 (b) Handlebar holder nut 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

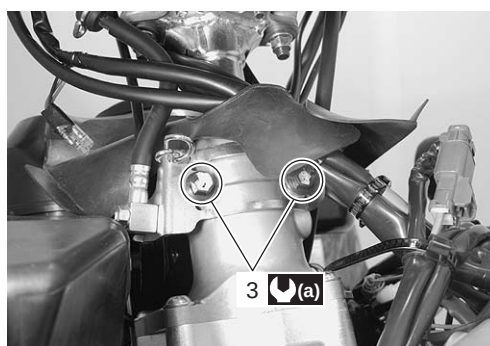


3 (a) EPS body mounting bolt (Upper) 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

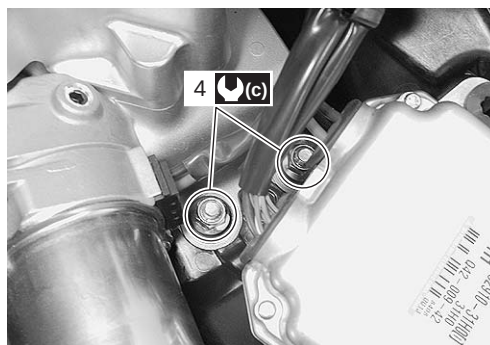

4 (c) EPS body mounting nut (Lower) 28 N·m (2.8 kgf-m, 20.0 lbf-ft)

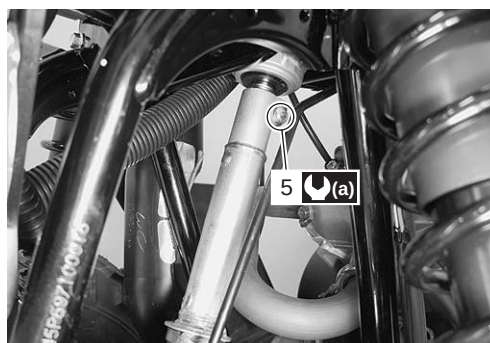


5 (a) Steering shaft bolt 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

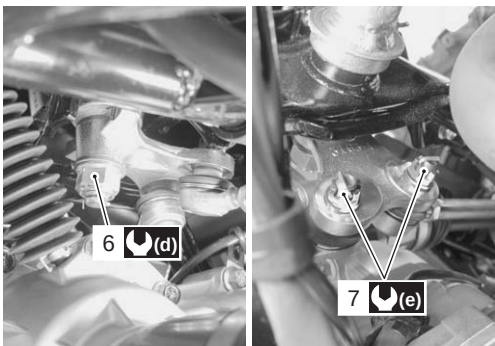


I931H1020060-02

6	(d)	Steering shaft lower nut 162 N·m (16.2 kgf·m, 117.0 lbf·ft)
7	(e)	Tie-rod end nut 29 N·m (2.9 kgf·m, 21.0 lbf·ft)

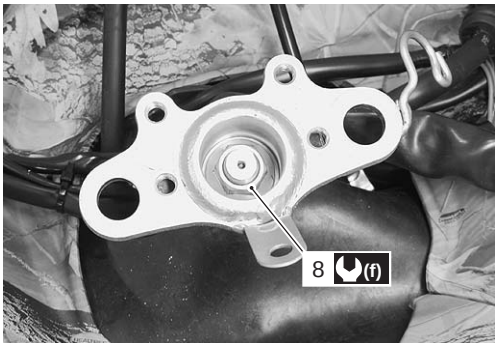


I931H1020082-01

8	(f)	Steering shaft upper nut 120 N·m (12.0 kgf·m, 87.0 lbf·ft)
---	-----	--

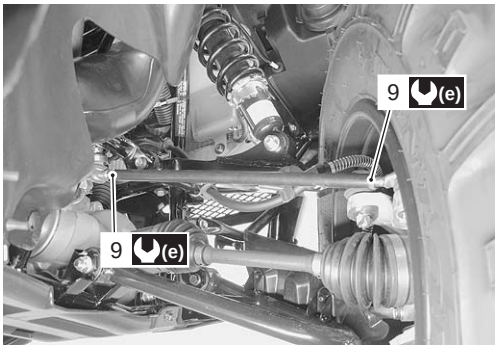


I931H1020061-04

9	(e)	Tie-rod lock-nut 29 N·m (2.9 kgf·m, 21.0 lbf·ft)
---	-----	--

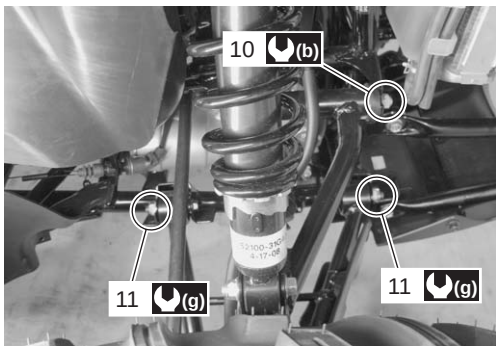


I931H1020062-04

10	(b)	Front suspension arm pivot nut (Upper) 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
11	(g)	Front suspension arm pivot nut (Lower) 65 N·m (6.5 kgf·m, 47.0 lbf·ft)

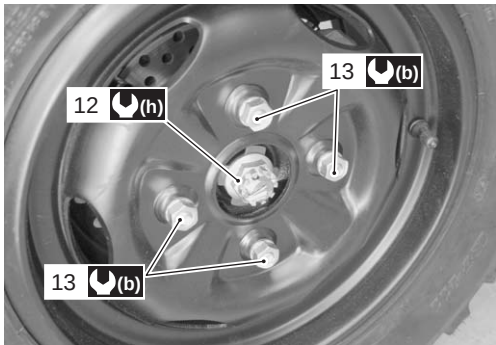


I931H1020063-04

12	(h)	Front hub nut 110 N·m (11.0 kgf·m, 79.5 lbf·ft)
13	(b)	Front wheel set nut 60 N·m (6.0 kgf·m, 43.5 lbf·ft)

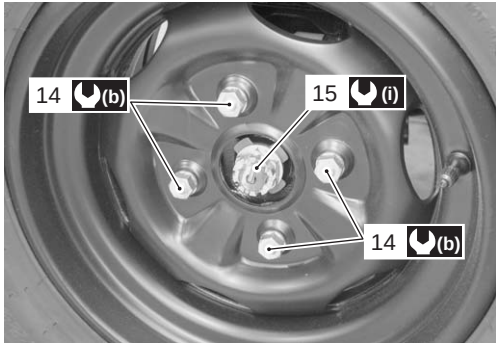


I931H1020064-03

14	(b)	Rear wheel set nut 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
15	(i)	Rear hub nut 121 N·m (12.1 kgf·m, 87.5 lbf·ft)

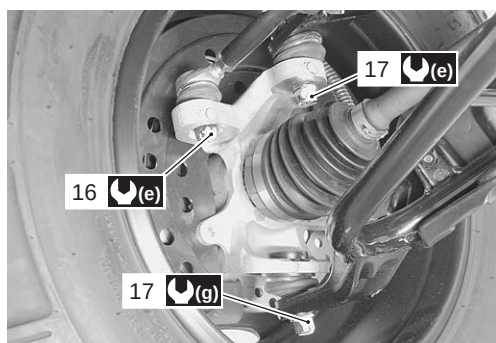


I931H1020065-04

- | | | | |
|----|--|-----|--|
| 16 | | (e) | Tie-rod end nut 29 N·m (2.9 kgf-m, 21.0 lbf-ft) |
| 17 | | (e) | Steering knuckle end nut (Upper and Lower) 29 N·m (2.9 kgf-m, 21.0 lbf-ft) |

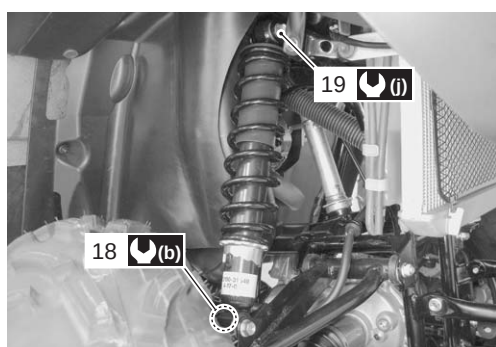


I931H1020066-04

- | | | | |
|----|--|-----|--|
| 18 | | (b) | Front shock absorber mounting nut (Lower) 60 N·m (6.0 kgf-m, 43.5 lbf-ft) |
| 19 | | (i) | Front shock absorber mounting bolt (Upper) 55 N·m (5.5 kgf-m, 40.0 lbf-ft) |

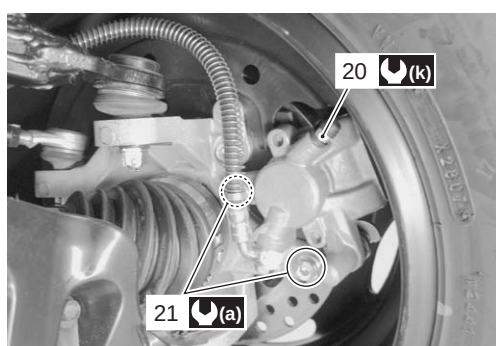

I931H1020067-04

- | | | | |
|----|--|-----|---|
| 20 | | (k) | Front brake air bleeder valve 6 N·m (0.6 kgf-m, 4.5 lbf-ft) |
| 21 | | (a) | Front brake caliper mounting bolt 26 N·m (2.6 kgf-m, 19.0 lbf-ft) |

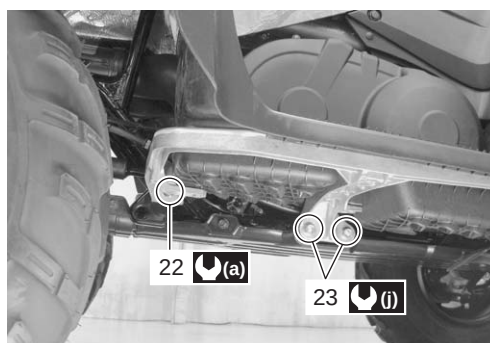


I931H1020068-04

- | | | | |
|----|--|-----|--|
| 22 | | (a) | Footrest mounting bolt (M8) 26 N·m (2.6 kgf-m, 19.0 lbf-ft) |
| 23 | | (i) | Footrest mounting bolt (M10) 55 N·m (5.5 kgf-m, 40.0 lbf-ft) |



I931H1020069-03

- | | | | |
|----|--|-----|---|
| 24 | | (i) | Brake hose union bolt 23 N·m (2.3 kgf-m, 16.5 lbf-ft) |
|----|--|-----|---|

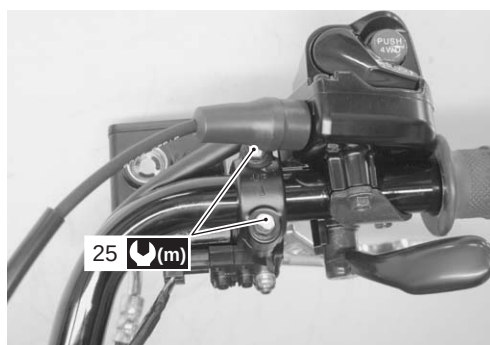


I931H1020070-02

- | | | | |
|----|--|-----|--|
| 25 | | (m) | Master cylinder mounting bolt 10 N·m (1.0 kgf-m, 7.0 lbf-ft) |
|----|--|-----|--|




I931H1020071-04

- | | | | |
|----|--|-----|--|
| 26 | | (b) | Rear brake pedal shaft nut 60 N·m (6.0 kgf-m, 43.5 lbf-ft) |
|----|--|-----|--|

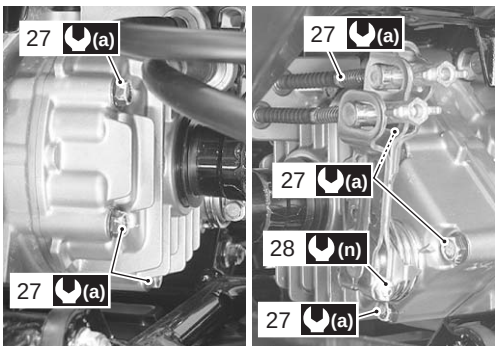


I931H1020072-03

27	(a)	Rear brake case bolt 26 N-m (2.6 kgf-m, 19.0 lbf-ft)
28	(n)	Rear brake cam lever nut 11 N-m (1.1 kgf-m, 8.0 lbf-ft)

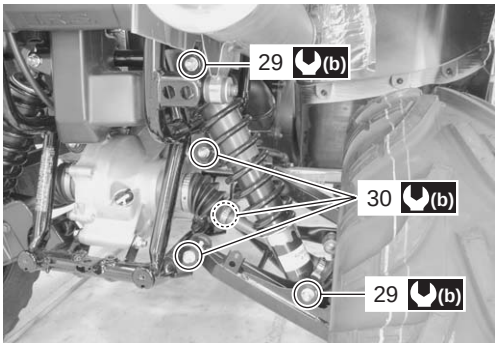


I931H1020073-02

29	(b)	Rear shock absorber mounting nut (Upper and Lower) 60 N-m (6.0 kgf-m, 43.5 lbf-ft)
30	(b)	Rear suspension arm pivot nut (Upper and Lower) 60 N-m (6.0 kgf-m, 43.5 lbf-ft)

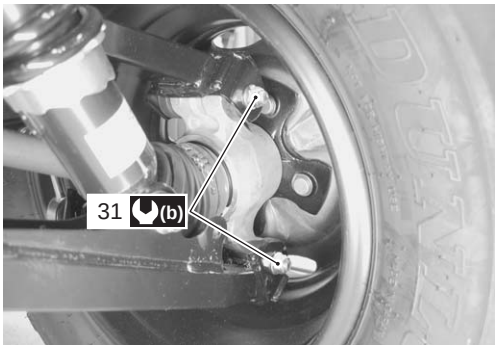


I931H1020074-02

31	(b)	Rear knuckle end nut 60 N-m (6.0 kgf-m, 43.5 lbf-ft)
----	-----	--

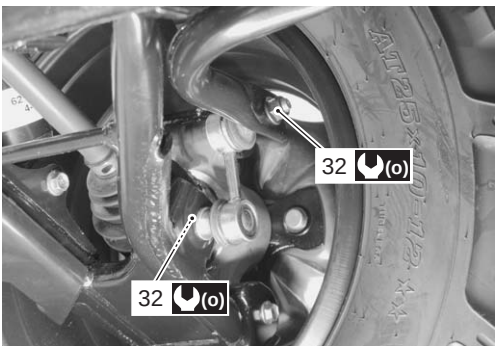


I931H1020075-02

32	(o)	Rear stabilizer joint nut 60 N-m (6.0 kgf-m, 43.5 lbf-ft)
----	-----	---

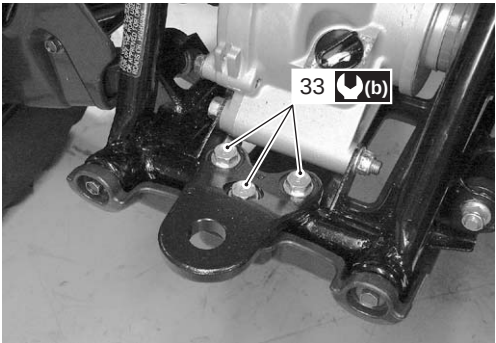

I931H1020076-02

33	(b)	Trailer towing mounting bolt 60 N-m (6.0 kgf-m, 43.5 lbf-ft)
----	-----	--

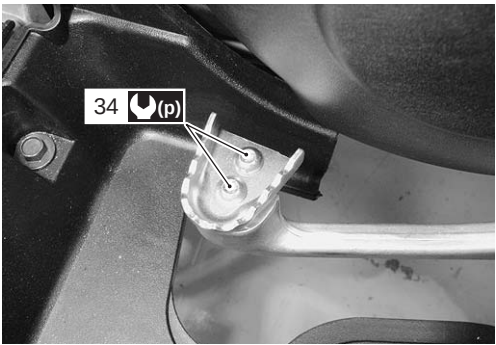

I931H1020088-01

34	(p)	Rear brake pedal screw 4.5 N-m (0.45 kgf-m, 3.0 lbf-ft)
----	-----	---

Compression Pressure Check

B931H20206026

Refer to “**Compression Pressure Check: in Section 1D**”.

Oil Pressure Check

B931H20206027

Refer to “**Oil Pressure Check: in Section 1E**”.

SDS Check

B931H20206028

Refer to “**SDS Check: in Section 1A**”.

Automatic Clutch Inspection

B931H20206029

This vehicle is equipped with a centrifugal type automatic clutch.

To insure proper performance and longevity of the clutch assemblies it is essential that the clutches engage smoothly and gradually. Before checking the initial engagement and clutch lock-up two inspection checks must be performed to thoroughly check the operation of the drive train.

Initial Engagement Inspection

- 1) Warm up the engine.
- 2) Remove the right side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Connect the special tool to the high-tension cord.

Special tool

 (A): 09900-26006 (Engine tachometer)



I931H1020077-01

- 4) Start the engine.
- 5) Shift the range lever to the “High” position.
- 6) Slowly open the throttle and note the engine speed (r/min) when the vehicle begins to move forward.

Engagement speed

1 700 – 2 200 r/min

- 7) Disconnect the tachometer and install the frame front cover.

Clutch “Lock-up” Inspection

Perform this inspection to determine if the clutch is engaging fully and not slipping.

- 1) Warm up the engine.
- 2) Remove the right side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Connect a special tool to the high-tension code.

Special tool

 : 09900-26006 (Engine tachometer)

 : 09900-25008 (Multi-circuit tester set)

- 4) Start the engine.
- 5) Shift the range lever to the “High” position.
- 6) Apply the front and rear brakes as firm as possible.
- 7) Fully open the throttle fully and note the maximum engine speed sustained during the test cycle.

CAUTION

Do not apply full power for more than 5 seconds or damage to the clutch or engine may occur.

Lock-up r/min

3 700 – 4 300 r/min

If the lock-up speed (r/min) does not coincide with the standard range, inspect the following items for any abnormalities.

Refer to “**V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A**”.

- Clutch shoe
- Clutch wheel
- Movable drive and driven face

Specifications

Tightening Torque Specifications

B931H20207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Exhaust pipe nut	23	2.3	16.5	☞ (Page 0B-4)
Muffler mounting bolt	23	2.3	16.5	☞ (Page 0B-4)
Muffler connecting bolt	23	2.3	16.5	☞ (Page 0B-4)
Valve clearance adjuster lock-nut	10	1.0	7.0	☞ (Page 0B-5)
Valve timing inspection cap bolt	10	1.0	7.0	☞ (Page 0B-6)
TDC plug	23	2.3	16.5	☞ (Page 0B-6)
Muffler end cover nut	11	1.1	8.0	☞ (Page 0B-8)
Oil drain plug	21	2.1	15.0	☞ (Page 0B-9)
Oil filter	20	2.0	14.5	☞ (Page 0B-10)
Front differential gear oil level plug	8	0.8	5.7	☞ (Page 0B-11) / ☞ (Page 0B-11)
Front differential gear oil filler plug	35	3.5	25.5	☞ (Page 0B-11) / ☞ (Page 0B-11)
Front differential gear oil drain plug	32	3.2	23.0	☞ (Page 0B-11)
Final gear oil drain plug	23	2.3	16.5	☞ (Page 0B-12)
Engine coolant drain plug	13	1.3	9.5	☞ (Page 0B-14)
Tie-rod lock-nut	29	2.9	21.0	☞ (Page 0B-21)

NOTE

The specified tightening torque is described in the following.
 “Chassis Bolt and Nut Inspection (Page 0B-21)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material







B931H20208001

Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞ (Page 0B-16)
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 0B-6)

NOTE

Required service material is also described in the following.
 “Lubrication Points (Page 0B-2)”

Special Tool

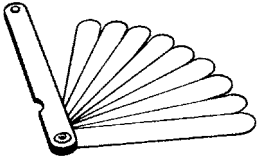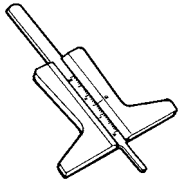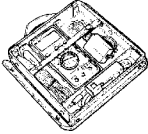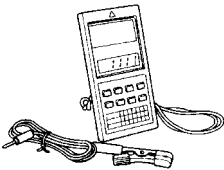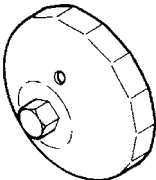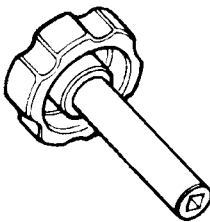09900-20803 Thickness gauge ☞ (Page 0B-5) / ☞ (Page 0B-5)		09900-20805 Tire depth gauge ☞ (Page 0B-19)	
09900-25008 Multi circuit tester set ☞ (Page 0B-25)		09900-26006 Engine tachometer ☞ (Page 0B-25) / ☞ (Page 0B-25)	
09915-40620 Oil filter wrench ☞ (Page 0B-10) / ☞ (Page 0B-10)		09917-14910 Tappet adjust driver ☞ (Page 0B-5)	

Service Data

Specifications

Service Data

B931H20307001

Valve + Valve Guide

Unit: mm (in)

Item	Standard		Limit
Valve diam.	IN.	30.6 (1.20)	—
	EX.	27.0 (1.06)	—
Valve clearance (When cold)	IN.	0.05 – 0.10 (0.002 – 0.004)	—
	EX.	0.17 – 0.22 (0.007 – 0.009)	—
Valve guide to valve stem clearance	IN.	0.010 – 0.037 (0.0004 – 0.0015)	—
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	—
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	—
Valve stem O.D.	IN.	4.975 – 4.990 (0.1959 – 0.1965)	—
	EX.	4.955 – 4.970 (0.1951 – 0.1957)	—
Valve stem deflection	IN. & EX.	—	0.35 (0.014)
Valve stem runout	IN. & EX.	—	0.05 (0.002)
Valve head thickness	IN. & EX.	—	0.5 (0.02)
Valve stem end length	IN. & EX.	—	2.3 (0.09)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	—
Valve head radial runout	IN. & EX.	—	0.03 (0.001)
Valve spring free length	IN. & EX.	—	38.8 (1.53)
Valve spring tension	IN. & EX.	182 – 210 N (18.6 – 21.4 kgf, 41.0 – 47.2 lbs) at length 31.5 mm (1.24 in)	—

Camshaft + Cylinder Head

Unit: mm (in)

Item	Standard		Limit
Cam height	IN.	33.45 – 33.50 (1.317 – 1.319)	33.15 (1.305)
	EX.	33.47 – 33.52 (1.318 – 1.320)	33.17 (1.306)
Camshaft journal oil clearance	Camshaft end side	0.028 – 0.059 (0.0011 – 0.0023)	0.150 (0.0059)
	Other side	0.032 – 0.066 (0.0013 – 0.0026)	
Camshaft journal holder I.D.	Camshaft end side	17.512 – 17.525 (0.6894 – 0.6900)	—
	Other side	22.012 – 22.025 (0.8666 – 0.8671)	
Camshaft journal O.D.	Camshaft end side	17.466 – 17.484 (0.6876 – 0.6883)	—
	Other side	21.959 – 21.980 (0.8645 – 0.8654)	
Camshaft runout	—		0.10 (0.004)
Rocket arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	
Rocket arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	
Cylinder head distortion	—		0.05 (0.002)
Cylinder head cover distortion	—		0.05 (0.002)

0C-2 Service Data:**Cylinder + Piston + Piston Ring**

Unit: mm (in)

Item	Standard			Limit
Compression pressure (Automatic-decomp. actuated)	Approx. 1 000 kPa (10.0 kgf/cm ² , 142 psi)			—
Piston-to-cylinder clearance	0.030 – 0.040 (0.0012 – 0.0016)			0.120 (0.0047)
Cylinder bore	87.500 – 87.515 (3.4449 – 3.4455)			Nicks or Scratches
Piston diam.	87.465 – 87.480 (3.4435 – 3.4441) Measure at 15 mm (0.6 in) from the skirt end.			87.380 (3.4402)
Cylinder distortion	—			0.05 (0.002)
Piston ring free end gap	1st	Approx. 6.2 (0.24)		4.9 (0.19)
	2nd	2R	Approx. 12.0 (0.47)	9.6 (0.38)
Piston ring end gap	1st	0.08 – 0.20 (0.003 – 0.008)		0.50 (0.020)
	2nd	2R	0.10 – 0.25 (0.004 – 0.010)	0.50 (0.020)
Piston ring-to-groove clearance	1st	—		0.180 (0.0071)
	2nd	—		0.150 (0.0059)
Piston ring groove width	1st	0.78 – 0.80 (0.0307 – 0.0315)		—
		1.30 – 1.32 (0.051 – 0.052)		—
	2nd	1.01 – 1.03 (0.040 – 0.041)		—
	Oil	2.51 – 2.53 (0.099 – 0.100)		—
Piston ring thickness	1st	0.71 – 0.76 (0.028 – 0.030)		—
		1.08 – 1.10 (0.0425 – 0.0433)		—
	2nd	2R	0.97 – 0.99 (0.038 – 0.039)	—
Piston pin bore I.D.	20.002 – 20.008 (0.7875 – 0.7877)			20.030 (0.7886)
Piston pin O.D.	19.992 – 20.000 (0.7871 – 0.7874)			19.980 (0.7866)

Conrod + Crankshaft

Unit: mm (in)

Item	Standard			Limit
Conrod small end I.D.	20.006 – 20.014 (0.7876 – 0.7880)			20.040 (0.7890)
Conrod deflection	—			3.0 (0.12)
Conrod big end side clearance	0.10 – 0.65 (0.004 – 0.026)			1.0 (0.04)
Conrod big end width	24.95 – 25.00 (0.982 – 0.984)			—
Crank web to web width	70.9 – 71.1 (2.79 – 2.80)			—
Crankshaft runout	—			0.08 (0.003)

Oil Pump

Item	Standard			Limit
Oil pressure (at 60 °C, 140 °F)	100 kPa (1.0 kgf/cm ² , 14.2 psi) at 3 000 r/min			—

Clutch

Unit: mm (in)

Item	Standard			Limit
Clutch wheel I.D.	140.0 – 140.2 (5.512 – 5.520)			140.5 (5.53)
Clutch shoe	—			No groove at any part
Clutch engagement r/min.	1 700 – 2 200 r/min			—
Clutch lock-up r/min.	3 700 – 4 300 r/min			—

Drive Train

Unit: mm (in) Except ratio

Item		Standard	Limit
Automatic transmission ratio		Variable change (2.902 – 0.779)	—
Secondary reduction ratio		2.733 (41/19 x 19/15)	—
Final reduction ratio	Front	3.600 (36/10)	—
	Rear	3.600 (36/10)	—
Transfer gear ratio	Low	2.562 (41/16)	—
	High	1.240 (31/25)	—
	Reverse	2.000 (32/16)	—
Drive belt width		31.1 (1.22)	30.1 (1.18)
Movable driven face spring free length		215.0 (8.46)	204.3 (8.04)
Shift fork to groove clearance		0.10 – 0.30 (0.0040 – 0.0120)	0.50 (0.020)
Shift fork groove width	Reverse	5.50 – 5.60 (0.217 – 0.220)	—
	High	5.50 – 5.60 (0.217 – 0.220)	—
Shift fork thickness	Reverse	5.30 – 5.40 (0.209 – 0.213)	—
	High	5.30 – 5.40 (0.209 – 0.213)	—
Front/Rear output shaft bevel gear backlash		0.03 – 0.15 (0.001 – 0.006)	—
Front drive (differential) gear backlash		0.05 – 0.20 (0.002 – 0.008)	—
Final gear backlash		0.08 – 0.15 (0.003 – 0.006)	—
Front differential gear oil type		Hypoid gear oil SAE #90, API grade GL-5 or SAE 75 W-90	—
Final gear oil type		Mobil fluid 424 (or equivalent gear oil)	—
Front differential gear oil capacity		460 ml (15.6/16.2 US/lmp oz)	—
Final gear oil capacity		770 ml (26.0/27.1 US/lmp oz)	—

Thermostat + Radiator + Fan + Coolant

Item		Standard/Specification	Note
Thermostat valve opening temperature		80.5 – 83.5 °C (177 – 182 °F)	—
Thermostat valve lift		8 mm (0.31 in) and over at 95 °C (203 °F)	—
Radiator cap valve opening pressure		110 – 137.3 kPa (1.1 – 1.4 kgf/cm ² , 15.6 – 19.9 psi)	—
Cooling fan thermo-switch operating temperature	OFF → ON	Approx. 93 °C (199 °F)	—
	ON → OFF	Approx. 87 °C (189 °F)	—
Engine coolant type		Use an antifreeze/coolant compatible with aluminum radiator, mixed with distilled water only, at the ratio of 50:50.	—
Engine coolant capacity	Reservoir	250 ml (0.26/0.22 US/lmp qt)	—
	Engine	2 200 ml (2.32/1.94 US/lmp qt)	—

0C-4 Service Data:**Injector + Fuel Pump + Fuel Pressure Regulator**

Item	Specification	Note
Injector resistance	11 – 13 Ω at 20 °C (68 °F)	
Fuel pump discharge amount	55.5 ml (1.88/1.95 US/Imp qt) and more/10 sec.	
Fuel pressure regulator operating set pressure	Approx. 294 kPa (2.9 kgf/cm ² , 41 psi)	

FI Sensors

Item	Specification		Note
CKP sensor resistance	170 – 250 Ω		
CKP sensor peak voltage	5.0 V and more		When cranking
IAP sensor input voltage	4.5 – 5.5 V		
IAP sensor output voltage	1.78 – 3.35 V at idle speed		
TP sensor input voltage	4.5 – 5.5 V		
TP sensor output voltage	Closed	0.93 – 1.31 V	
	Opened	3.64 – 4.82 V	
IAT sensor input voltage	4.5 – 5.5 V		
IAT sensor output voltage	1.88 – 3.06 V at 20 °C (68 °F)		
IAT sensor resistance	20 °C (68 °F)	2.22 – 3.22 k Ω	
ECT sensor input voltage	4.5 – 5.5 V		
ECT sensor output voltage	0.15 – 4.85 V		
ECT sensor resistance	20 °C (68 °F)	Approx. 2.45 k Ω	
TO sensor resistance	19 – 20 k Ω		
TO sensor voltage	Normal	0.4 – 1.4 V	
	Leaning	3.7 – 4.4 V	When leaning 65°
ISC valve resistance	Approx. 31 Ω at 20 °C (68 °F)		
Injector voltage	Battery voltage		
Ignition coil primary peak voltage	80 V and more		When cranking

Throttle Body

Item	Standard/Specification
Bore size	37 mm
I.D. No.	31H0
Idle r/min	1 500 $\pm$ 100 r/min
Throttle cable play	3 – 5 mm (0.1 – 0.2 in)

Electrical

Unit: mm (in)

Item		Standard/Specification		Note
Spark plug	Type	NGK: CR6E DENSO: U20ESR-N		
	Gap	0.7 – 0.8 (0.028 – 0.031)		
Spark performance		Over 8 (0.3) at 1 atm.		
Ignition coil resistance	Primary	0.1 – 0.6 Ω		Terminal – Ground
	Secondary	12 – 19 k Ω		Plug cap – Terminal
Generator coil resistance		0.1 – 1.0 Ω		
Generator Max. output		Approx. 400 W at 5 000 r/min		
Generator no-load voltage (When engine is cold)		70 V (AC) and more at 5 000 r/min		
Regulated voltage		13.5 – 15.5 V at 5 000 r/min		
Starter motor brush length	Standard	10 (0.39)		
	Limit	6.5 (0.26)		
Starter relay resistance		3 – 5 Ω		
Battery	Type designation	YTX20CH-BS		
	Capacity	12 V 64.8 kC (18 Ah)/10 HR		
Fuse size	Headlight	HI	10 A	
		LO	10 A	
	Power source		10 A	
	Ignition		15 A	
	Fuel		10 A	
	Fan		15 A	
	Main		30 A	
	EPS		40 A	

Wattage

Unit: W

Item		Standard/Specification	
		P-24, 28, 33	P-17
Headlight	HI	35 x 2	←
	LO	35 x 2	←
Brake light/Taillight		21/5	←
Reversing light		—	21
Speedometer light		LED	←
High beam indicator light		—	LED
Neutral indicator light		LED	←
FI indicator light/Engine coolant temp. indicator light		LED	←
Reverse indicator light		LED	←
Differential lock indicator light		LED	←
EPS indicator light		LED	←

0C-6 Service Data:**Brake + Wheel**

Unit: mm (in)

Item	Standard/Specification	Limit
Rear brake pedal height	12.5 – 22.5 (0.5 – 0.9)	—
Rear brake pedal free travel	20 – 30 (0.8 – 1.2)	—
Front brake disc thickness	3.3 – 3.7 (0.13 – 0.15)	3.0 (0.20)
Front brake disc runout	—	0.30 (0.012)
Front master cylinder bore	12.700 – 12.743 (0.5000 – 0.5017)	—
Front master cylinder piston diam.	12.657 – 12.684 (0.4983 – 0.4994)	—
Front brake caliper cylinder bore	33.960 – 34.010 (1.3370 – 1.3390)	—
Front brake caliper piston diam.	33.878 – 33.928 (1.3338 – 1.3357)	—
Rear brake lever play	6 – 8 (0.2 – 0.3)	—
Brake fluid type	DOT 4	—
Steering angle	46 ° (right & left)	—
Turning radius	3.1 m (10.2 ft)	—
Toe-out (With 75 kg, 165 lbs)	5 ± 4 mm (0.20 ± 0.16)	—
Camber	–1.3 °	—
Caster	3.7 °	—
Rear brake outer distance	26.0 – 27.0 (1.02 – 1.06)	—
Brake side plate spring free length	21.3 (0.84)	20.2 (0.80)

Tire

Unit: mm (in)

Item	Standard		Limit
Cold inflation tire pressure (Solo riding)	Front	35 kPa (0.35 kgf/cm ² , 5.1 psi)	—
	Rear	30 kPa (0.30 kgf/cm ² , 4.4 psi)	—
Tire size	Front	AT 25 x 8-12 ☆☆, tubeless	—
	Rear	AT 25 x 10-12 ☆☆, tubeless	—
Tire tread depth	Front	—	4.0 (0.16)
	Rear	—	4.0 (0.16)

Suspension

Item	Standard	Limit
Front shock absorber spring adjuster	2/5 position	—
Rear shock absorber spring adjuster	2/5 position	—

Fuel + Oil

Item	Specification	Note
Fuel type	Use only unleaded gasoline of at least 87 pump octane (R/2 + M/2) or 91 octane or higher rated by the Research Method. Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.	E-28, 33
	Gasoline used should be graded 91 octane or higher. An unleaded gasoline type is recommended.	The others
Fuel tank capacity	17.5 L (4.6/3.8 US/Imp gal)	
Engine oil type	SAE 10 W-40, API SF/SG or SH/SJ with JASO MA	
Engine oil capacity	Change	2 500 ml (2.6/2.2 US/Imp qt)
	Filter change	2 700 ml (2.9/2.4 US/Imp qt)
	Overhaul	3 200 ml (3.4/2.8 US/Imp qt)

Tightening Torque List

Engine

Item		N·m	kgf·m	lbf·ft
Spark plug		11	1.1	8.0
Air cleaner box mounting bolt		4.5	0.45	3.0
Cylinder head cover bolt		10	1.0	7.0
Rocket arm shaft bolt		28	2.8	20.0
Intake pipe bolt		9	0.9	6.5
Cylinder head bolt (M8)		25	2.5	18.0
Cylinder head bolt (M10)	Initial	25	2.5	18.0
	Final	37	3.7	27.0
Cylinder head base nut		25	2.5	18.0
Camshaft sprocket bolt		15	1.5	11.0
Cam chain tensioner bolt		13	1.3	9.5
Cam chain tension adjuster mounting bolt		10	1.0	7.0
Cam chain tension adjuster cap bolt		8	0.8	6.0
Crankcase bolt (M6)		10	1.0	7.0
Crankcase bolt (M8)		26	2.6	19.0
TDC plug		23	2.3	16.5
Valve clearance adjuster lock-nut		10	1.0	7.0
Valve clearance inspection cap bolt		10	1.0	7.0
Clutch shoe nut		150	15.0	108.5
Movable drive face bolt		110	11.0	79.5
Movable driven face bolt		110	11.0	79.5
Movable driven face ring nut		110	11.0	79.5
Clutch outer cover bolt		8	0.8	6.0
Clutch inner cover bolt		9	0.9	6.5
Generator rotor nut		140	14.0	101.5
Generator stator set bolt		11	1.1	8.0
Speed sensor bolt		10	1.0	7.0
Starter clutch bolt		26	2.6	19.0
Left crankshaft spacer nut		38	3.8	27.5
Exhaust pipe nut		23	2.3	16.5
Muffler connect bolt		23	2.3	16.5
Muffler mounting bolt		23	2.3	16.5
Muffler end cover nut		11	1.1	8.0
Engine oil drain plug		21	2.1	15.0
Engine coolant drain plug		12.5	1.25	9.0
Drive bevel gear nut		100	10.0	72.5
Engine mounting nut		60	6.0	43.5
Engine mounting damper stopper bolt		23	2.3	16.5
Rear output shaft nut		100	10.0	72.5
Crank balancer drive gear nut		150	15.0	108.5
Crank balancer driven gear bolt		50	5.0	36.0
Starter motor mounting bolt		10	1.0	7.0
Starter motor lead wire connecting nut		6	0.6	4.5
Starter motor housing bolt		3.5	0.35	2.0
Oil gallery plug (M8)		18	1.8	13.0
Oil gallery plug (M12)		21	2.1	15.0

0C-8 Service Data:**Drive Train**

Item	N-m	kgf-m	lbf-ft
4WD/Diff-lock actuator mounting bolt	10	1.0	7.0
Front drive (differential) gear case cover bolt	12	1.2	8.5
Front drive (differential) gear case mounting nut	50	5.0	36.0
Front differential gear oil level plug	8.1	0.81	6.0
Front differential gear oil filler plug	35	3.5	25.5
Front differential gear oil drain plug	32	3.2	23.0
Front propeller shaft boot clamp screw	1.3	0.13	0.94
Final drive gear nut	100	10.0	72.5
Rear drive bearing stopper	100	10.0	72.5
Final gear case bolt (M8)	26	2.6	19.0
Final gear case bolt (M10)	55	5.5	40.0
Final gear case mounting nut	65	6.5	47.0
Final gear case mounting bolt	65	6.5	47.0
Rear propeller shaft boot clamp screw	2	0.2	1.5
Final gear oil drain plug	23	2.3	16.5
Rear propeller shaft coupling nut	100	10.0	72.5
Rear output shaft nut	100	10.0	72.5
Rear output shaft driven gear nut	100	10.0	72.5

FI System and Fuel System

Item	N-m	kgf-m	lbf-ft
CKP sensor mounting bolt	6	0.6	4.5
Generator lead wire clamp bolt	6	0.6	4.5
Fuel delivery pipe mounting screw	5	0.5	3.5
Fuel pump retainer	35	3.5	25.5
ECT sensor	18	1.8	13.0
ISC valve screw	2	0.2	1.5

Cooling System

Item	N-m	kgf-m	lbf-ft
Water pump cover screw	5.5	0.55	4.0
Water pump mounting bolt	10	1.0	7.0
Cooling fan thermo-switch	18	1.8	13.0
Thermostat case bolt	23	2.3	16.5
Cooling fan mounting bolt	8.4	0.84	6.0
Water hose clamp screw	1.5	0.15	1.0
Water bypass union	12	1.2	8.5
Water pump drain bolt	13	1.3	9.5




Chassis

Item	N·m	kgf·m	lbf·ft
Handlebar upper clamp bolt	26	2.6	19.0
Handlebar holder nut	60	6.0	43.5
Rear brake lever holder clamp bolt	10	1.0	7.5
Throttle lever case clamp bolt	4	0.4	3.0
Throttle lever case screw	2	0.2	1.5
EPS body assembly mounting bolt	26	2.6	19.0
EPS body assembly mounting nut	28	2.8	20.0
Steering shaft upper nut	120	12	87.0
Steering shaft bolt	26	2.6	19.0
Steering shaft lower nut	162	16.2	117.0
EPS control unit mounting nut	12	1.2	8.5
Front suspension arm pivot nut (Upper)	60	6.0	43.5
Front suspension arm pivot nut (Lower)	65	6.5	47.0
Steering knuckle end nut (Upper and Lower)	29	2.9	21.0
Tie-rod end nut	29	2.9	21.0
Tie-rod lock-nut	29	2.9	21.0
Front shock absorber mounting bolt (Upper)	55	5.5	40.0
Front shock absorber mounting nut (Lower)	60	6.0	43.5
Front hub nut	110	11.0	79.5
Rear hub nut	121	12.1	87.5
Wheel set nut (Front and Rear)	60	6.0	43.5
Front brake hose union bolt	23	2.3	16.5
Front brake air bleeder valve	6.0	0.6	4.3
Front brake caliper mounting bolt	26	2.6	19.0
Caliper holder pin	18	1.8	13.0
Caliper holder slide pin	23	2.3	16.5
Front brake pad mounting pin	18	1.8	13.0
Brake pipe flare nut	16	1.6	11.5
Front brake disc mounting bolt	23	2.3	16.5
Brake master cylinder clamp bolt	10	1.0	7.0
Footrest mounting bolt (M8)	26	2.6	19.0
Footrest mounting bolt (M10)	55	5.5	40.0
Rear stabilizer joint nut	60	6.0	43.5
Rear shock absorber mounting nut (Upper and Lower)	60	6.0	43.5
Rear suspension arm pivot nut (Upper and Lower)	60	6.0	43.5
Rear knuckle end nut (Upper and Lower)	60	6.0	43.5
Rear brake cam lever nut	11	1.1	8.0
Rear brake case bolt	26	2.6	19.0
Rear brake pedal shaft nut	60	6.0	43.5
Rear brake pedal screw	4.5	0.45	3.0
Trailer towing bolt	60	6.0	43.5
Gearshift gate cover mounting bolt	10	1.0	7.0

Tightening Torque Chart

For other bolts and nuts not listed in the preceding page, refer to this chart:

Bolt Diameter "a" (mm)	Conventional or "4" marked bolt			"7" marked bolt		
	N·m	kgf-m	lbf-ft	N·m	kgf-m	lbf-ft
4	1.5	0.15	1.0	2.3	0.23	1.5
5	3	0.3	2.0	4.5	0.45	3.0
6	5.5	0.55	4.0	10	1.0	7.0
8	13	1.3	9.5	23	2.3	16.5
10	29	2.9	21.0	50	5.0	36.0
12	45	4.5	32.5	85	8.5	61.5
14	65	6.5	47.0	135	13.5	97.5
16	105	10.5	76.0	210	21.0	152.0
18	160	16.0	115.5	240	24.0	173.5

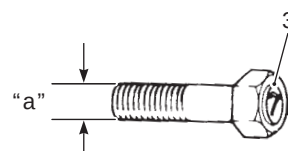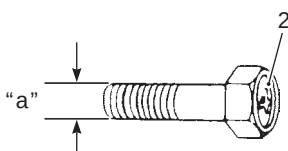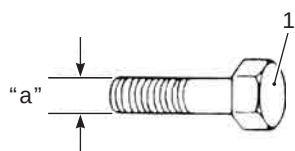

I649G1030001-04

1. Conventional bolt	2. "4" marked bolt	3. "7" marked bolt
----------------------	--------------------	--------------------

Section 1

Engine

CONTENTS

Precautions	1-1		
Precautions.....	1-1		
Precautions for Engine	1-1		
Engine General Information and			
Diagnosis	1A-1		
General Description	1A-1		
Injection Timing Description	1A-1		
Schematic and Routing Diagram.....	1A-4		
FI System Wiring Diagram	1A-4		
Terminal Alignment of ECM Coupler.....	1A-5		
Component Location	1A-6		
FI System Parts Location	1A-6		
Diagnostic Information and Procedures.....	1A-7		
Engine Symptom Diagnosis	1A-7		
Self-Diagnostic Procedures	1A-10		
Use of SDS Diagnosis Reset Procedures.....	1A-12		
Show Data When Trouble (Displaying Data at			
the Time of DTC)	1A-13		
SDS Check	1A-15		
DTC Table.....	1A-18		
Fail-Safe Function Table	1A-18		
FI System Troubleshooting	1A-19		
Malfunction Code and Defective Condition			
Table	1A-21		
DTC "C12" (P0335): CKP Sensor Circuit			
Malfunction.....	1A-23		
DTC "C13" (P0105-H/L): IAP Sensor Circuit			
Malfunction.....	1A-26		
DTC "C14" (P0120-H/L): TP Sensor Circuit			
Malfunction.....	1A-33		
DTC "C15" (P0115-H/L): ECT Sensor Circuit			
Malfunction.....	1A-40		
DTC "C20" (P1752): Diff-lock Relay Circuit			
Malfunction.....	1A-45		
DTC "C21" (P0110-H/L): IAT Sensor Circuit			
Malfunction.....	1A-47		
DTC "C23" (P1651-H/L): TO Sensor Circuit			
Malfunction.....	1A-52		
DTC "C24" (P0351): Ignition Coil Circuit			
Malfunction.....	1A-59		
DTC "C32" (P0201): Fuel Injector Circuit			
Malfunction.....	1A-59		
		DTC "C40" (P0505-H/L): ISC Valve Circuit	
		Malfunction.....	1A-62
		DTC "C41" (P230-H/L): FP Relay Circuit	
		Malfunction.....	1A-68
		Specifications.....	1A-70
		Service Data.....	1A-70
		Special Tools and Equipment	1A-71
		Special Tool	1A-71
		Emission Control Devices	1B-1
		Precautions.....	1B-1
		Precautions for Emission Control Devices	1B-1
		Repair Instructions	1B-1
		Crankcase Breather (PCV) Hose Inspection.....	1B-1
		Crankcase Breather (PCV) Hose Removal	
		and Installation	1B-1
		Engine Electrical Devices	1C-1
		Precautions.....	1C-1
		Precautions for Engine Electrical Device	1C-1
		Component Location	1C-1
		Engine Electrical Components Location	1C-1
		Diagnostic Information and Procedures.....	1C-1
		Engine Symptom Diagnosis	1C-1
		Repair Instructions	1C-1
		ECM Removal and Installation.....	1C-1
		CKP Sensor Inspection	1C-1
		CKP Sensor Removal and Installation	1C-2
		IAP / TP / IAT Sensor Inspection	1C-2
		IAP / TP / IAT Sensor Removal and	
		Installation	1C-2
		ECT Sensor Removal and Installation	1C-2
		ECT Sensor Inspection	1C-3
		TO Sensor Inspection	1C-3
		TO Sensor Removal and Installation	1C-3
		ISC Valve Inspection.....	1C-3
		ISC Valve Removal and Installation.....	1C-4
		GP Switch Inspection	1C-4
		GP Switch Removal and Installation	1C-4
		Specifications.....	1C-5
		Service Data.....	1C-5
		Tightening Torque Specifications	1C-5
		Special Tools and Equipment	1C-5
		Special Tool	1C-5

Engine Mechanical	1D-1
Schematic and Routing Diagram	1D-1
Throttle Cable Routing Diagram.....	1D-1
Diagnostic Information and Procedures	1D-2
Engine Mechanical Symptom Diagnosis.....	1D-2
Compression Pressure Check	1D-2
Repair Instructions	1D-3
Engine Components Removable with the	
Engine in Place	1D-3
Air Cleaner Element Removal and Installation	1D-5
Air Cleaner Element Inspection and Cleaning	1D-5
Air Cleaner Inlet Sheet Construction.....	1D-6
Air Cleaner Inlet Sheet Removal and	
Installation	1D-6
Air Cleaner Box Removal and Installation.....	1D-6
Throttle Cable Removal and Installation	1D-7
Throttle Cable Inspection	1D-8
Throttle Cable Play Inspection and	
Adjustment	1D-8
Throttle Body Components	1D-8
Throttle Body Construction.....	1D-9
Throttle Body Removal and Installation	1D-9
Throttle Body Disassembly and Assembly.....	1D-11
Throttle Body Inspection and Cleaning	1D-13
Engine Assembly Removal	1D-13
Engine Assembly Installation	1D-17
Engine Top Side Disassembly	1D-18
Engine Top Side Assembly	1D-22
Valve Clearance Inspection and Adjustment	1D-29
Camshaft Inspection	1D-29
Camshaft Sprocket Inspection	1D-31
Cam Chain Tension Adjuster Inspection.....	1D-31
Cam Chain Guide Inspection	1D-31
Cam Chain Tensioner Inspection.....	1D-32
Cylinder Inspection.....	1D-32
Piston Ring Removal and Installation	1D-33
Piston and Piston Ring Inspection	1D-34
Cylinder Head Cover Disassembly and	
Assembly	1D-36
Cylinder Head Cover Related Parts	
Inspection.....	1D-37
Cylinder Head Disassembly and Assembly	1D-38
Cylinder Head Related Parts Inspection	1D-41
Valve Guide Replacement	1D-44
Valve Seat Repair	1D-46
Engine Bottom Side Disassembly.....	1D-46
Engine Bottom Side Assembly.....	1D-52
Conrod and Crankshaft Inspection.....	1D-60
Width Between Crankshaft Webs	1D-61
Crankshaft Oil Seal and Driveshaft Spacer Oil	
Seal Inspection	1D-61
Bearing (Crankcase and Generator Cover)	
Inspection.....	1D-62
Oil Seal / Bearing (Crankcase and Generator	
Cover) Removal and Installation.....	1D-62
Specifications.....	1D-67
Service Data.....	1D-67
Tightening Torque Specifications.....	1D-69

Special Tools and Equipment	1D-70
Recommended Service Material	1D-70
Special Tool	1D-70
Engine Lubrication System	1E-1
Precautions.....	1E-1
Precautions for Engine Oil	1E-1
Schematic and Routing Diagram	1E-1
Engine Lubrication System Chart Diagram	1E-1
Engine Lubrication Circuit Diagram.....	1E-2
Diagnostic Information and Procedures	1E-4
Engine Lubrication Symptom Diagnosis	1E-4
Oil Pressure Check	1E-4
Repair Instructions	1E-5
Engine Oil and Filter Replacement	1E-5
Engine Oil Level Inspection.....	1E-5
Oil Sump Filter Removal and Installation	1E-5
Oil Sump Filter Inspection and Cleaning	1E-6
Oil Jet Removal and Installation.....	1E-6
Oil Pump Construction	1E-7
Oil Jet Inspection.....	1E-7
Oil Pump Removal and Installation	1E-7
Oil Pump Inspection	1E-9
Specifications	1E-10
Service Data.....	1E-10
Tightening Torque Specifications.....	1E-10
Special Tools and Equipment	1E-10
Recommended Service Material	1E-10
Special Tool	1E-11
Engine Cooling System	1F-1
Precautions.....	1F-1
Precautions for Engine Cooling System.....	1F-1
Precautions for Engine Coolant	1F-1
General Description	1F-2
Engine Coolant Description.....	1F-2
Schematic and Routing Diagram	1F-2
Cooling Circuit Diagram	1F-2
Water Hose Routing Diagram	1F-3
Diagnostic Information and Procedures	1F-4
Engine Cooling Symptom Diagnosis	1F-4
Repair Instructions	1F-4
Cooling Circuit Inspection	1F-4
Radiator Cap Inspection.....	1F-5
Radiator Inspection and Cleaning	1F-5
Radiator / Cooling Fan Assembly Removal	
and Installation.....	1F-5
Water Hose Removal and Installation	1F-6
Cooling Fan Inspection	1F-7
Radiator Reservoir Tank Removal and	
Installation	1F-7
Radiator Reservoir Tank Inspection.....	1F-8
Water Hose Inspection	1F-8
ECT Sensor Removal and Installation	1F-8
ECT Sensor Inspection	1F-8
Cooling Fan Thermo-switch Removal and	
Installation	1F-8
Cooling Fan Thermo-switch Inspection.....	1F-9
Thermostat Removal and Installation.....	1F-10

Thermostat Inspection	1F-11	Repair Instructions	1H-3
Water Pump Components.....	1F-12	Spark Plug Cap and Spark Plug Removal and Installation	1H-3
Water Pump Removal and Installation.....	1F-12	Spark Plug Inspection and Cleaning	1H-3
Water Pump Disassembly and Assembly	1F-13	Ignition Coil and Plug Cap Inspection	1H-4
Water Pump Related Parts Inspection	1F-17	Ignition Coil Removal and Installation	1H-5
Specifications.....	1F-18	CKP Sensor Inspection	1H-5
Service Data	1F-18	CKP Sensor Removal and Installation	1H-6
Tightening Torque Specifications.....	1F-18	Engine Stop Switch Inspection.....	1H-6
Special Tools and Equipment	1F-19	Ignition Switch Inspection.....	1H-7
Recommended Service Material	1F-19	Ignition Switch Removal and Installation.....	1H-7
Special Tool	1F-19	Override Switch Inspection	1H-7
Fuel System	1G-1	Emergency Switch Inspection (For P-17).....	1H-8
Precautions.....	1G-1	Emergency Switch Removal and Installation (For P-17).....	1H-8
Precautions for Fuel System	1G-1	Specifications.....	1H-8
General Description	1G-2	Service Data.....	1H-8
Fuel System Description	1G-2	Tightening Torque Specifications.....	1H-8
Schematic and Routing Diagram.....	1G-3	Special Tools and Equipment	1H-8
Fuel Hose Routing Diagram.....	1G-3	Special Tool	1H-8
Fuel Tank Breather Hose Routing Diagram	1G-4	Starting System	1I-1
Diagnostic Information and Procedures.....	1G-5	Schematic and Routing Diagram	1I-1
Fuel System Diagnosis	1G-5	Starting System Diagram	1I-1
Repair Instructions	1G-6	Component Location	1I-1
Fuel Pressure Inspection	1G-6	Starting System Components Location.....	1I-1
Fuel Pump Inspection	1G-6	Diagnostic Information and Procedures	1I-1
Fuel Discharge Amount Inspection	1G-6	Starting System Symptom Diagnosis	1I-1
Fuel Pump Relay Inspection	1G-7	Starter Motor will not Run.....	1I-2
Fuel Hose Inspection	1G-8	Starter Motor Runs but Does not Crank the Engine	1I-2
Fuel Feed Hose Removal and Installation	1G-8	Engine Does not Turn Though the Starter Motor Runs.....	1I-2
Fuel Level Gauge Inspection	1G-8	Repair Instructions	1I-3
Fuel Level Indicator Inspection	1G-8	Starter Motor Components.....	1I-3
Fuel Tank Removal and Installation.....	1G-8	Starter Motor Removal and Installation.....	1I-3
Fuel Pump Components	1G-9	Starter Motor Disassembly and Assembly	1I-4
Fuel Pump Assembly Removal and Installation	1G-9	Starter Motor Related Parts Inspection	1I-5
Fuel Pump Disassembly and Assembly.....	1G-10	Starter Relay Removal and Installation.....	1I-6
Fuel Mesh Filter Inspection and Cleaning.....	1G-10	Starter Relay Inspection.....	1I-7
Fuel Injector Inspection and Cleaning.....	1G-10	Neutral Relay Removal and Installation	1I-7
Fuel Injector / Fuel Delivery Pipe Removal and Installation.....	1G-10	Neutral Relay Inspection	1I-8
Fuel Tank Pressure Control (FTPC) Valve Removal and Installation.....	1G-12	Neutral Relay Diode Inspection.....	1I-8
Fuel Tank Pressure Control (FTPC) Valve Inspection.....	1G-13	Parking Brake Relay Removal and Installation	1I-8
Specifications.....	1G-13	Parking Brake Relay Inspection	1I-9
Service Data	1G-13	Parking / Rear Brake Switch Inspection	1I-9
Tightening Torque Specifications.....	1G-13	Gear Position Switch Inspection	1I-9
Special Tools and Equipment	1G-14	Starter Idle Gear / Starter Clutch Removal and Installation	1I-10
Special Tool	1G-14	Starter Driven Gear Bearing Removal and Installation	1I-12
Ignition System.....	1H-1	Starter Related Parts Inspection	1I-12
General Description	1H-1	Starter Button Inspection.....	1I-13
Override Switch Description.....	1H-1	Specifications.....	1I-13
Schematic and Routing Diagram.....	1H-1	Service Data.....	1I-13
Ignition System Diagram	1H-1	Tightening Torque Specifications.....	1I-14
Ignition System Components Location	1H-1	Special Tools and Equipment	1I-14
Diagnostic Information and Procedures.....	1H-2	Recommended Service Material	1I-14
Ignition System Symptom Diagnosis.....	1H-2	Special Tool	1I-14
No Spark or Poor Spark	1H-2		

Charging System.....	1J-1
Schematic and Routing Diagram.....	1J-1
Charging System Diagram.....	1J-1
Component Location	1J-1
Charging System Components Location.....	1J-1
Diagnostic Information and Procedures	1J-1
Charging System Symptom Diagnosis.....	1J-1
Battery Runs Down Quickly	1J-2
Repair Instructions	1J-3
Battery Current Leakage Inspection.....	1J-3
Regulated Voltage Inspection	1J-3
Generator Inspection.....	1J-3
Generator Removal and Installation.....	1J-4
Regulator / Rectifier Inspection	1J-8
Battery Components	1J-9
Battery Charging	1J-9
Battery Removal and Installation	1J-11
Battery Visual Inspection.....	1J-12

Specifications	1J-12
Service Data.....	1J-12
Tightening Torque Specifications.....	1J-13
Special Tools and Equipment	1J-13
Recommended Service Material	1J-13
Special Tool	1J-13
Exhaust System.....	1K-1
Precautions.....	1K-1
Precautions for Exhaust System	1K-1
Repair Instructions	1K-1
Exhaust System Construction	1K-1
Exhaust Pipe / Muffler Removal and Installation	1K-2
Exhaust System Inspection.....	1K-3
Spark Arrester Inspection.....	1K-3
Specifications	1K-3
Tightening Torque Specifications.....	1K-3

Precautions

Precautions

Precautions for Engine

B931H21000001

Refer to “General Precautions: in Section 00” and “Precautions for Electrical Circuit Service: in Section 00”.

Engine General Information and Diagnosis


General Description

Injection Timing Description

B931H21101001

Injection Time (Injection Volume)

The factors to determine the injection time include the basic fuel injection time, which is calculated on the basis of the intake air pressure, engine speed and throttle opening angle, and various compensations. These compensations are determined according to the signals from various sensors that detect the engine and driving conditions.

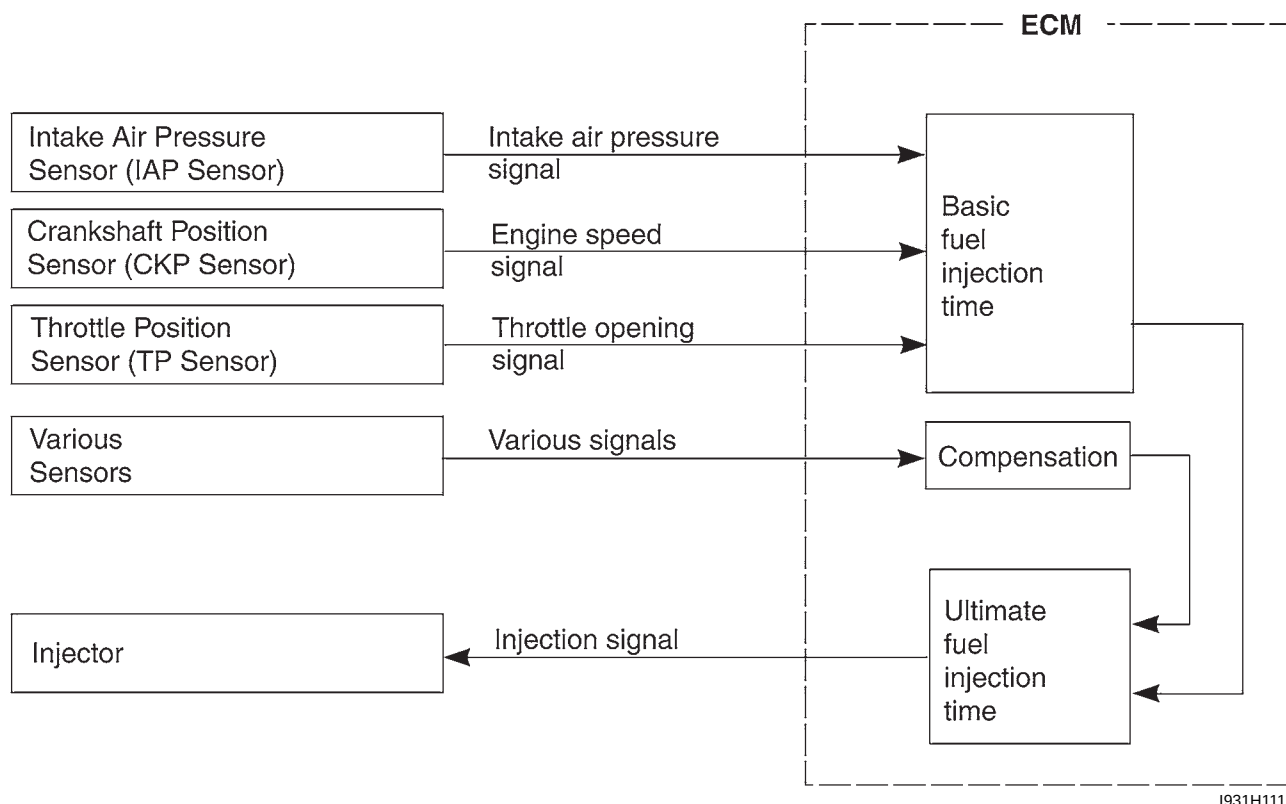

I931H1110080-01

Compensation of Injection Time (Volume)

The following different signals are output from the respective sensors for compensation of the fuel injection time (volume).

Signal	Descriptions
ENGINE COOLANT TEMPERATURE SENSOR SIGNAL	When engine coolant temperature is low, injection time (volume) is increased.
INTAKE AIR TEMPERATURE SENSOR SIGNAL	When intake air temperature is low, injection time (volume) is increased.
BATTERY VOLTAGE SIGNAL	ECM operates on the battery voltage and at the same time, it monitors the voltage signal for compensation of the fuel injection time (volume). A longer injection time is needed to adjust injection volume in the case of low voltage.
ENGINE RPM SIGNAL	At high speed, the injection time (volume) is increased.
STARTING SIGNAL	When starting engine, additional fuel is injected during cranking engine.
ACCELERATION SIGNAL/DECELERATION SIGNAL	During acceleration, the fuel injection time (volume) is increased in accordance with the throttle opening speed and engine rpm. During deceleration, the fuel injection time (volume) is decreased.

Injection Stop Control

Signal	Descriptions
TIP-OVER SENSOR SIGNAL (FUEL SHUT-OFF)	When the vehicle tips over, the tip-over sensor sends a signal to the ECM. Then, this signal cuts OFF current supplied to the fuel pump, fuel injectors and ignition coils.
OVER-REV. LIMITER SIGNAL	The fuel injector stops operation when engine rpm reaches rev. limit rpm.

Self-Diagnosis Function

The self-diagnosis function is incorporated in the ECM. The function has two modes, "User mode" and "Dealer mode". The user can only be notified by the LCD (DISPLAY) panel and LED (FI indicator light). To check the function of the individual FI system devices, the dealer mode is prepared. In this check, the special tool is necessary to read the code of the malfunction items.

User Mode

Malfunction		LCD (display) indication "A"	FI indicator light indication "B"	Indication mode
"NO"		Clock/Hour meter *1	—	—
"YES"	Engine can start	Clock/Hour meter (*1) and "FI" letters *2	FI indicator light turns ON.	Each 2 sec. Odometer (*1) and "FI" is indicated alternately.
	Engine can not start	"FI" letters *3	FI indicator light turns ON and blinks.	"FI" is indicated continuously.

***1**

Current letter displayed any one of the clock/hour meter.

***2**

When one of the signals is not received by ECM, the fail-safe circuit works and injection is not stopped. In this case, "FI" and clock/hour meter (*1) are indicated in the LCD panel and vehicle can run.

***3**

The injection signal is stopped, when the crankshaft position sensor signal, tip-over sensor signal, ignition signal, injector signal, fuel pump relay signal or ignition switch signal is not sent to ECM. In this case, "FI" is indicated in the LCD panel. Vehicle does not run.

"CHEC":

The LCD panel indications "CHEC" when no communication signal from the ECM is received for 3 seconds.

For Example:

The ignition switch is turned ON, and the engine stop switch is turned OFF. In this case, the speedometer does not receive any signal from ECM, and the panel indicates "CHEC".


If "CHEC" is indicated, the LCD does not indicate the trouble code. It is necessary to check the wiring harness between ECM and speedometer couplers.

The possible cause of this indication is as follows;

Engine stop switch is in OFF position. Ignition fuse is burnt.

NOTE

The FI light turns ON 2 seconds after the ignition switch turns ON.

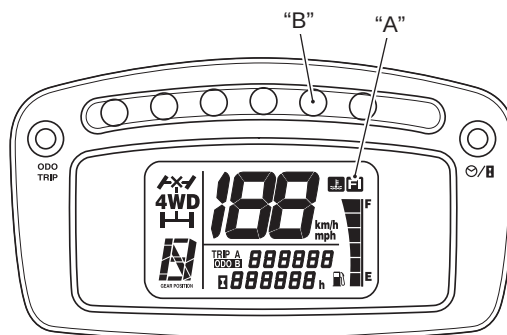

I931H1110001-03

1A-3 Engine General Information and Diagnosis:

Dealer Mode

The defective function is memorized in the computer. Use the special tool's coupler to connect to the mode select switch. The memorized malfunction code is displayed on LCD (DISPLAY) panel. Malfunction means that the ECM does not receive signal from the devices. These affected devices are indicated in the code form.

⚠ CAUTION

Before checking the malfunction code, do not disconnect the ECM coupler.
If the coupler from the ECM is disconnected, the malfunction code memory may be erased and the malfunction code can not be checked.

Special tool

 (A): 09930-82720 (Mode selection switch)




Malfunction	LCD (display) indication	FI light indication	Indication mode
"NO"	C00	FI indicator light turns OFF.	—
"YES"	C** code is indicated from small numeral to large one.		For each 2 sec., code is indicated.

Schematic and Routing Diagram

FI System Wiring Diagram


B931H21102001

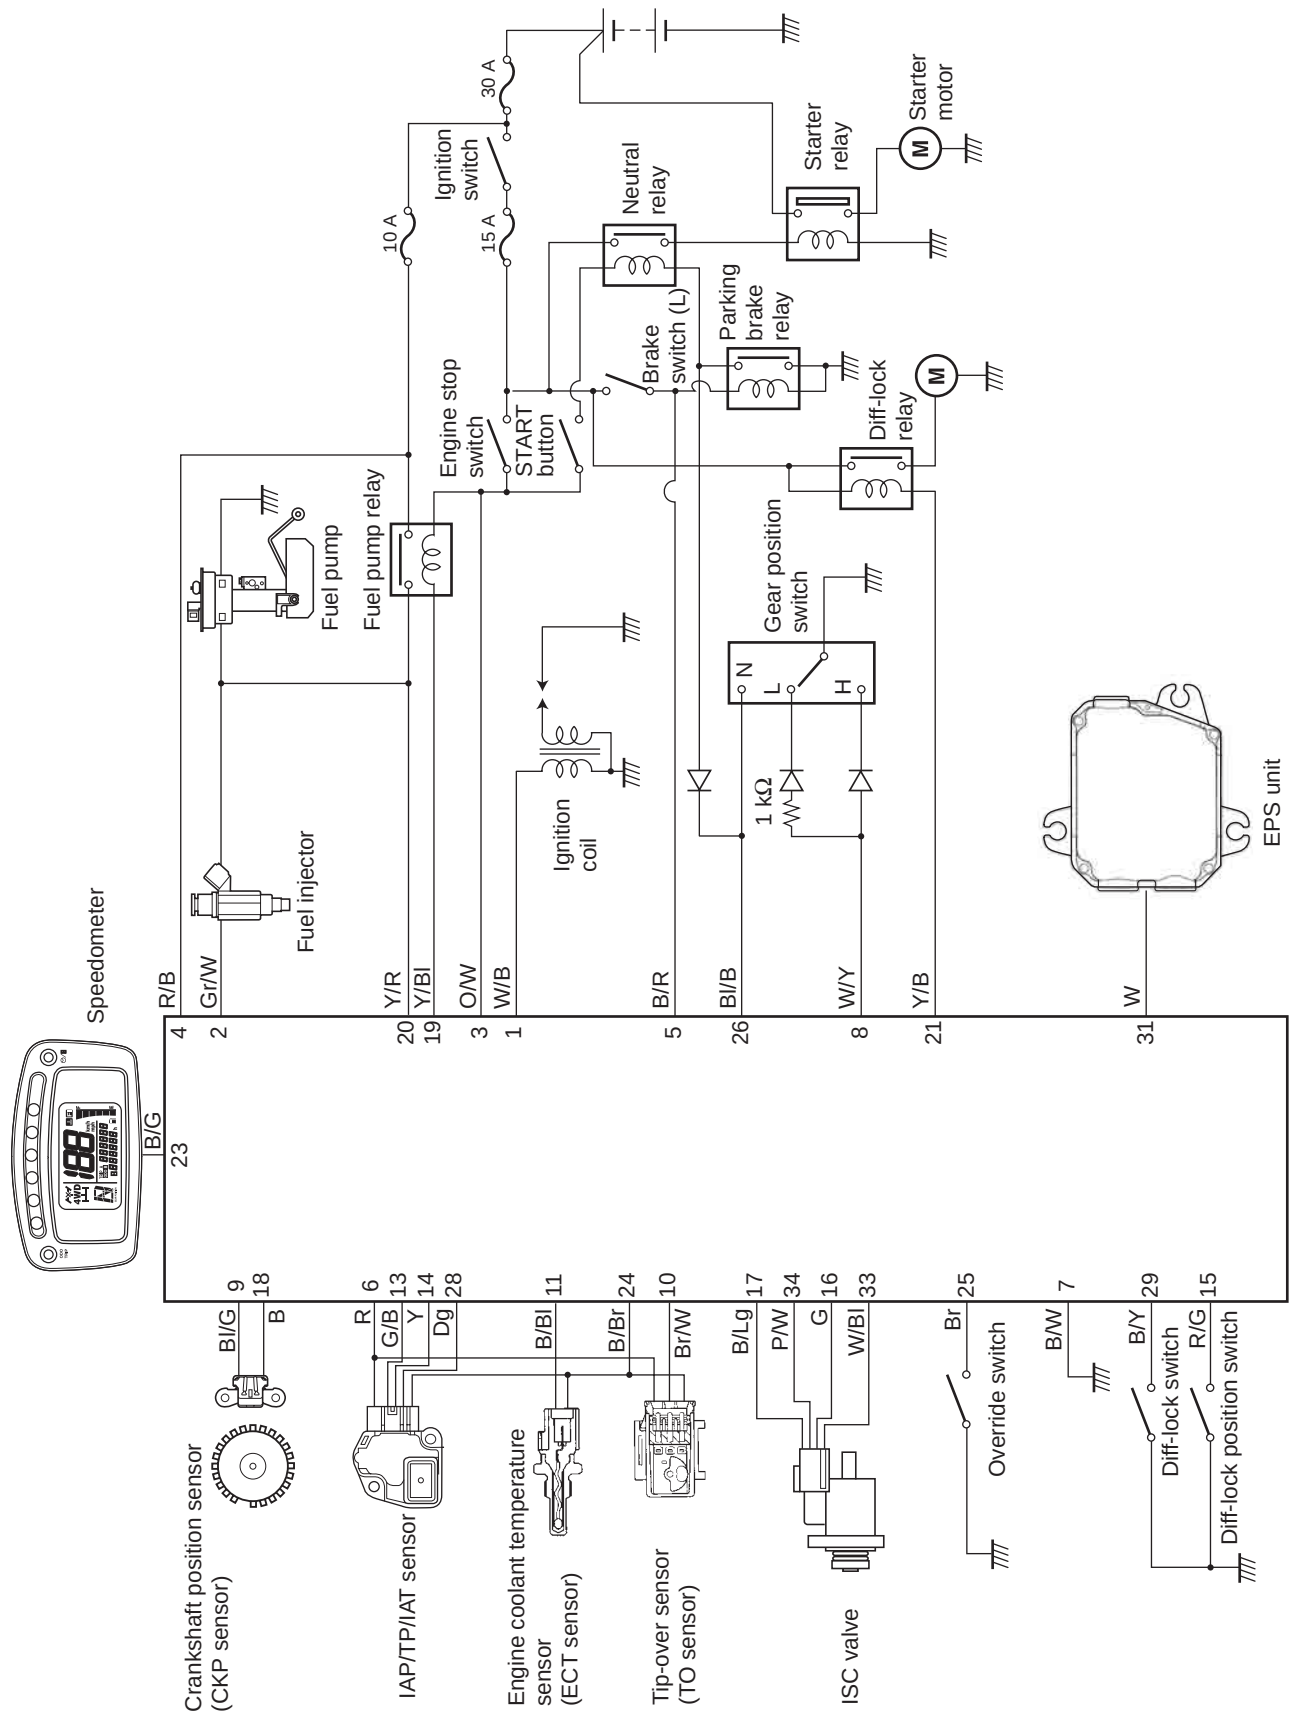

I931H1110005-03

Terminal Alignment of ECM Coupler

B931H21102002

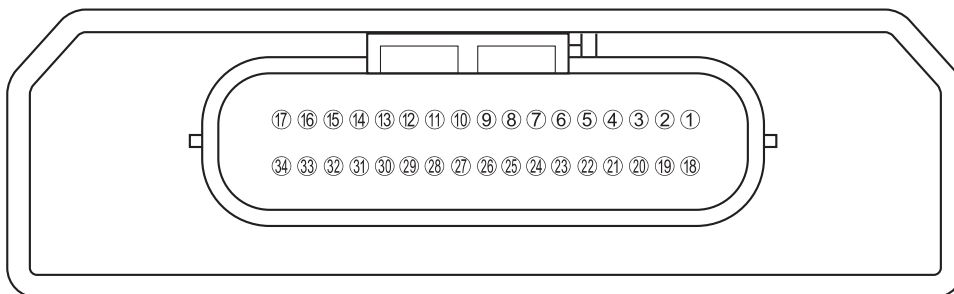


I931H1110006-01

TERMINAL NO.	CIRCUIT	TERMINAL NO.	CIRCUIT
1	Ignition coil (IG1)	18	CKP sensor signal (CKP-)
2	Fuel injector (#1)	19	Fuel pump relay (FP relay)
3	Power source (+B)	20	Power source for fuel injector
4	Power source for back-up (BATT)	21	Diff-lock relay (DL relay)
5	Brake switch (BRK)	22	Serial data for self-diagnosis
6	Power source for sensors (VCC)	23	Serial data for speedometer
7	ECM ground (E1)	24	Sensor ground (E2)
8	Forward sensor signal (FOW)	25	Override switch (OVR)
9	CKP sensor signal (CKP+)	26	Neutral switch (NT)
10	TO sensor signal (TO)	27	—
11	ECT sensor signal (ECT)	28	IAT sensor signal (IAT)
12	—	29	Diff-lock switch (DL)
13	IAP sensor signal (IAP)	30	—
14	TP sensor signal (TP)	31	Tacho out signal (TACO)
15	Diff-lock position sensor signal (DLP)	32	—
16	ISC valve (IS2A)	33	ISC valve (IS2B)
17	ISC valve (IS1A)	34	ISC valve (IS1B)

Component Location


FI System Parts Location

B931H21103001

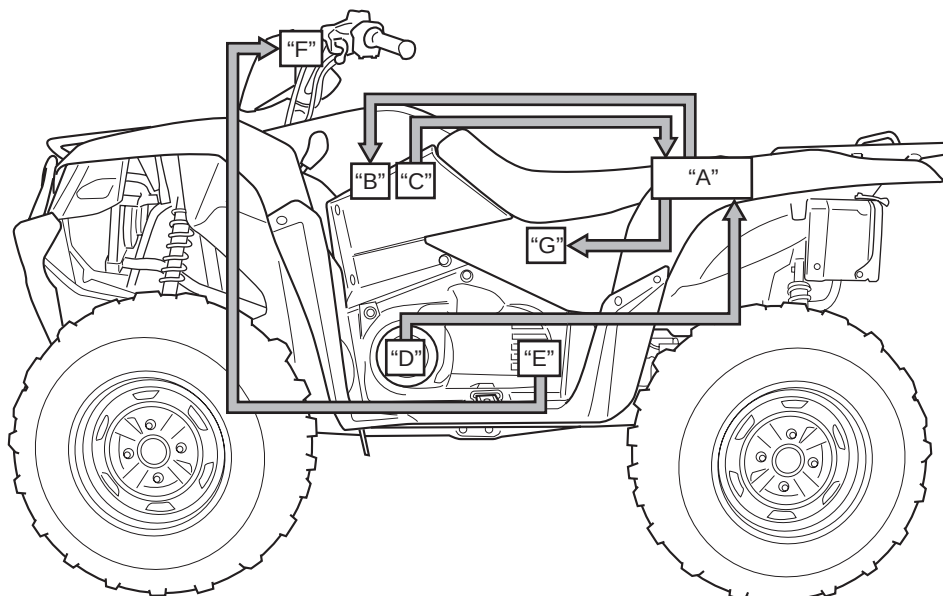

I931H1110007-05

"A": ECM	"C": IAP/TP/IAT sensor	"E": Speed sensor	"G": Diff-lock relay
"B": ISC valve	"D": CKP sensor	"F": Combination meter	

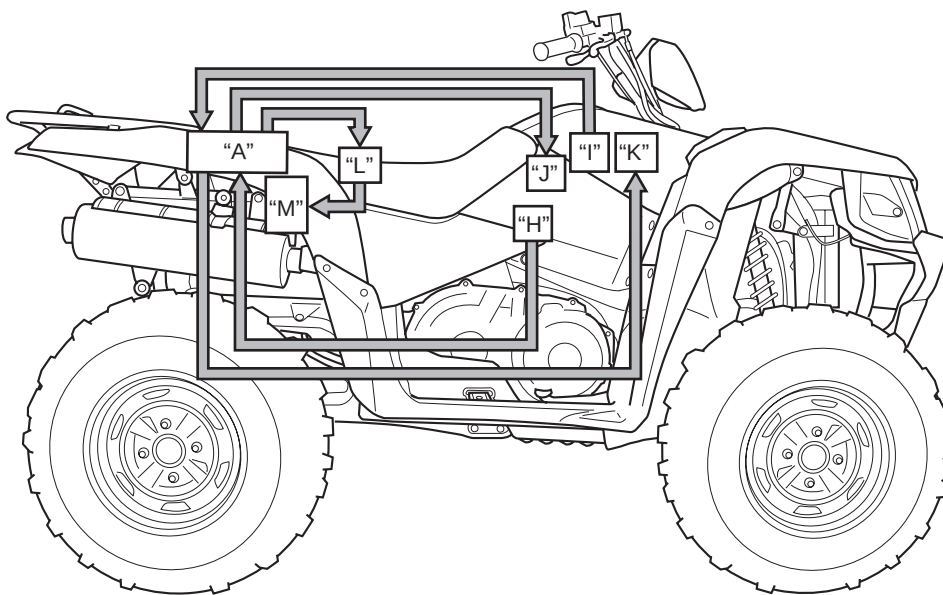

I931H1110008-02

"A": ECM	"I": TO sensor	"K": Ignition coil	"M": Fuel pump
"H": ECT sensor	"J": Fuel injector	"L": FP relay	

Diagnostic Information and Procedures

Engine Symptom Diagnosis

B931H21104001

Condition	Possible cause	Correction / Reference Item
Engine will not start or is hard to start (Compression too low)	Valve clearance out of adjustment.	<i>Adjust.</i>
	Worn valve guides or poor seating of valves.	<i>Repair or replace.</i>
	Mistimed valves.	<i>Adjust.</i>
	Excessively worn piston rings.	<i>Replace.</i>
	Worn-down cylinder bore.	<i>Replace.</i>
	Starter motor cranks too slowly.	<i>Refer to "Starting System Diagram: in Section 1I".</i>
	Poor seating of spark plug.	<i>Retighten.</i>
Engine will not start or is hard to start (Plugs not speaking)	Fouled spark plug.	<i>Clean.</i>
	Wet spark plug.	<i>Clean and dry.</i>
	Defective ignition coil.	<i>Replace.</i>
	Open or short in high-tension cord.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Open-circuited wiring connections.	<i>Repair or replace.</i>
Engine will not start or is hard to start (No fuel reaching the intake manifold)	Clogged fuel filter or fuel hose.	<i>Clean or replace.</i>
	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective fuel injector.	<i>Replace.</i>
	Defective fuel pump relay.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Open-circuited wiring connections.	<i>Check and repair.</i>
Engine will not start or is hard to start (Incorrect fuel/air mixture)	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective TP sensor.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective IAP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Defective ECT sensor.	<i>Replace.</i>
Engine idles poorly	Defective IAT sensor.	<i>Replace.</i>
	Valve clearance out of adjustment.	<i>Adjust.</i>
	Poor seating of valves.	<i>Replace or repair.</i>
	Defective valve guides.	<i>Replace.</i>
	Worn down camshaft.	<i>Replace.</i>
	Too wide spark plug gap.	<i>Adjust or replace.</i>
	Defective ignition coil.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Defective ISC valve.	<i>Replace.</i>
Engine stalls often (Incorrect fuel/air mixture)	Defective IAP sensor or circuit.	<i>Repair or replace.</i>
	Clogged fuel filter.	<i>Clean or replace.</i>
	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective ECT sensor.	<i>Replace.</i>
	Defective thermostat.	<i>Replace.</i>
Engine stalls often (Fuel injector improperly operating)	Defective IAT sensor.	<i>Replace.</i>
	Defective fuel injector.	<i>Replace.</i>
	No injection signal from ECM.	<i>Repair or replace.</i>
	Open or short circuited wiring connection.	<i>Repair or replace.</i>
	Defective battery or low battery voltage.	<i>Replace or recharge.</i>

Condition	Possible cause	Correction / Reference Item
Engine stalls often (Control circuit or sensor improperly operating)	Defective ECM.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective TP sensor.	<i>Replace.</i>
	Defective IAT sensor.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective ECT sensor.	<i>Replace.</i>
	Defective fuel pump relay.	<i>Replace.</i>
Engine stalls often (Engine parts improperly operating)	Fouled spark plug.	<i>Clean.</i>
	Defective CKP sensor or ECM.	<i>Replace.</i>
	Clogged fuel hose.	<i>Clean.</i>
	Valve clearance out of adjustment.	<i>Adjust.</i>
Engine noisy (Excessive valve chatter)	Too large valve clearance.	<i>Adjust.</i>
	Weakened or broken valve springs.	<i>Replace.</i>
	Worn rocker arm contacting surface or cam surface.	<i>Replace.</i>
	Worn and burnt camshaft journal.	<i>Replace.</i>
Engine noisy (Noise seems to come from piston)	Worn down piston or cylinder.	<i>Replace.</i>
	Combustion chambers fouled with carbon.	<i>Clean.</i>
	Worn piston pin or piston pin bore.	<i>Replace.</i>
	Worn piston rings or ring grooves.	<i>Replace.</i>
Engine noisy (Noise seems to come from timing chain)	Stretched chain.	<i>Replace.</i>
	Worn sprockets.	<i>Replace.</i>
	Tension adjuster not working.	<i>Repair or replace.</i>
Engine noisy (Noise seems to come from crankshaft)	Rattling bearings due to wear.	<i>Replace.</i>
	Worn and burnt journal bearings.	<i>Replace.</i>
Engine noisy (Noise seems to come from balancer)	Worn and burnt journal bearings.	<i>Replace.</i>
Engine noisy (Noise seems to come from transmission)	Worn or rubbing gears.	<i>Replace.</i>
	Worn splines.	<i>Replace.</i>
	Worn or rubbing primary gears.	<i>Replace.</i>
	Worn bearings.	<i>Replace.</i>
Engine noisy (Noise seems to come from water pump)	Worn or damaged impeller shaft.	<i>Replace.</i>
	Worn or damaged mechanical seal.	<i>Replace.</i>
	Contact between pump case and impeller.	<i>Replace.</i>
Engine runs poorly in high speed range (Defective engine internal/electrical parts)	Weakened valve springs.	<i>Replace.</i>
	Worn camshaft.	<i>Replace.</i>
	Valve timing out of adjustment.	<i>Adjust.</i>
	Too narrow spark plug gap.	<i>Adjust.</i>
	Ignition not advanced sufficiently due to poorly working timing advance circuit.	<i>Replace ECM.</i>
	Defective ignition coil.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Clogged air cleaner element.	<i>Clean.</i>
	Clogged fuel hose, resulting in inadequate fuel supply to injector.	<i>Clean and prime.</i>
	Defective fuel pump.	<i>Replace.</i>
	Defective TP sensor.	<i>Replace.</i>
Engine runs poorly in high speed range (Defective air flow system)	Clogged air cleaner element.	<i>Clean or replace.</i>
	Defective throttle valve.	<i>Adjust or replace.</i>
	Defective ISC valve.	<i>Replace.</i>
	Sucking air from throttle body joint.	<i>Repair or replace.</i>
	Defective ECM.	<i>Replace.</i>

1A-9 Engine General Information and Diagnosis:

Condition	Possible cause	Correction / Reference Item
Engine runs poorly in high speed range (Defective control circuit or sensor)	Low fuel pressure.	Repair or replace.
	Defective TP sensor.	Replace.
	Defective IAT sensors.	Replace.
	Defective IAP sensor.	Replace.
	Defective ECM.	Replace.
Engine lacks power (Defective engine internal/ electrical parts)	Loss of valve clearance.	Adjust.
	Weakened valve springs.	Replace.
	Valve timing out of adjustment.	Adjust.
	Worn piston rings or cylinder.	Replace.
	Poor seating of valves.	Repair.
	Fouled spark plug.	Clean or replace.
	Incorrect spark plug.	Adjust or replace.
	Clogged injector.	Clean.
	Clogged air cleaner element.	Clean.
	Sucking air from throttle valve.	Replace.
	Too much engine oil.	Drain out excess oil.
	Defective fuel pump or ECM.	Replace.
	Defective CKP sensor and ignition coil.	Replace.
Engine lacks power (Defective control circuit or sensor)	Low fuel pressure.	Repair or replace.
	Defective TP sensor.	Replace.
	Defective IAT sensor.	Replace.
	Defective CKP sensor.	Replace.
	Defective IAP sensor.	Replace.
	Defective ECM.	Replace.
Engine overheats (Defective engine internal parts)	Heavy carbon deposit on piston crown.	Clean.
	Not enough oil in the engine.	Add oil.
	Defective oil pump or clogged oil circuit.	Replace or clean.
	Use of incorrect engine oil.	Change.
	Sucking air from intake pipe.	Retighten or replace.
	Defective cooling system.	Refer to "Engine Cooling Symptom Diagnosis: in Section 1F" .
Engine overheats (Lean fuel/air mixture)	Short-circuited IAP sensor/lead wire.	Repair or replace.
	Short-circuited IAT sensor/lead wire.	Repair or replace.
	Sucking air from intake pipe joint.	Repair or replace.
	Defective fuel injector.	Replace.
	Defective ECT sensor.	Replace.
Engine overheats (The other factors)	Ignition timing too advanced due to defective timing advance system (ECT sensor, CKP sensor and ECM).	Replace.
Dirty or heavy exhaust smoke	Worn piston rings or cylinder.	Replace.
	Too much engine oil in the engine.	Check and drain excess oil.
	Worn valve guides.	Replace.
	Scored or scuffed cylinder wall.	Replace.
	Worn valves stems.	Replace.
	Defective stem seals.	Replace.
	Worn oil ring side rails.	Replace.
	Dirty spark arrester.	Clean or replace. Refer to "Spark Arrester Cleaning: in Section 0B" .

Self-Diagnostic Procedures

B931H21104002

Use of Mode Select Switch

NOTE

- Do not disconnect coupler from ECM, the battery cable from the battery, ECM ground wire harness from the engine or main fuse before confirming DTC (Diagnostic Trouble Code) stored in memory. Such disconnection may erase memorized information in ECM memory.
- DTC stored in ECM memory can be checked by the special tool.
- Before checking DTC, read self-diagnosis function "User mode and dealer mode" (Refer to "Self-Diagnostic Procedures (Page 1A-10)".) carefully to have good understanding as to what functions are available and how to use it.
- Be sure to read "Precautions for Electrical Circuit Service" (Refer to "Precautions for Electrical Circuit Service: in Section 00".) before inspection and observe what is written there.

- 1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".
- 2) Connect the special tool to the mode select switch coupler at the wiring harness.

Special tool

 (A): 09930-82720 (Mode selection switch)




I931H1110009-01

- 3) Start the engine or crank the engine for more than 4 seconds.
- 4) Turn the special tool's switch ON.


- 5) Check the DTC to determine the malfunction part. Refer to "DTC Table (Page 1A-18)".

Special tool

 (A): 09930-82720 (Mode selection switch)

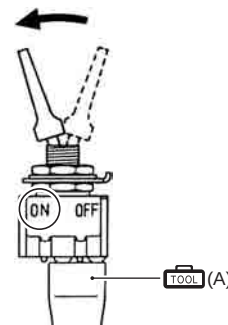

I718H1110006-04

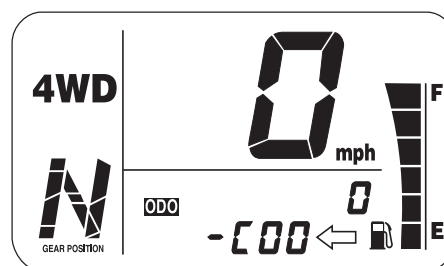

I931H1110010-01

- 6) After repairing the trouble, turn OFF the ignition switch and turn ON again. If DTC is indicated (C00), the malfunction is cleared.

NOTE

- Even though DTC (C00) is indicated, the previous malfunction history DTC still remains stored in the ECM. Therefore, erase the history DTC memorized in the ECM using SDS.
- DTC is memorized in the ECM also when the wire coupler of any sensor is disconnected. Therefore, when a wire coupler has been disconnected at the time of diagnosis, erase the stored history DTC using SDS. Refer to "Use of SDS Diagnosis Reset Procedures (Page 1A-12)".

- 7) Turn the ignition switch OFF and disconnect the special tool from the mode select switch coupler.
- 8) Reinstall the seat.

Use of SDS

NOTE


- Do not disconnect the coupler from ECM, the battery cable from the battery, ECM ground wire harness from the engine or main fuse before confirming DTC (Diagnostic Trouble Code) stored in memory. Such disconnection may erase the memorized information in ECM memory.
- DTC stored in ECM memory can be checked by the SDS.
- Be sure to read “Precautions for Electrical Circuit Service: in Section 00” before inspection and observe what is written there.

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Set up the SDS tools. (Refer to the SDS operation manual for further details.)



Special tool

TOOL (A): 09904-41010 (SUZUKI Diagnostic system set)

TOOL (B): 99565-01010-019 (CD-ROM Ver.19)

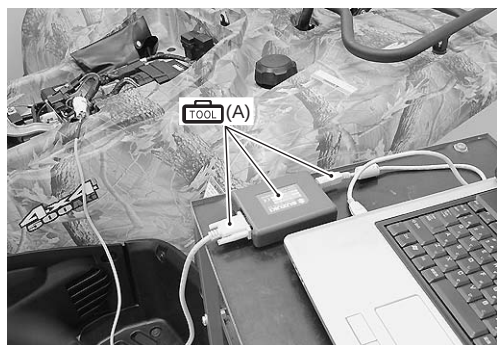


I931H1110011-01

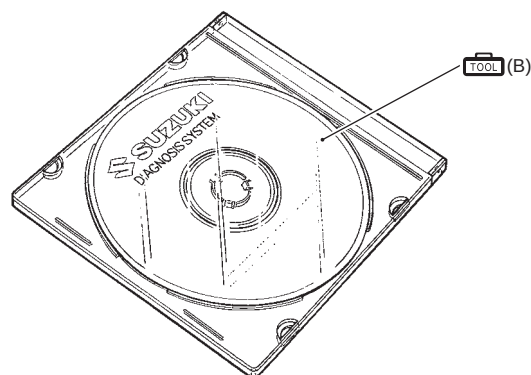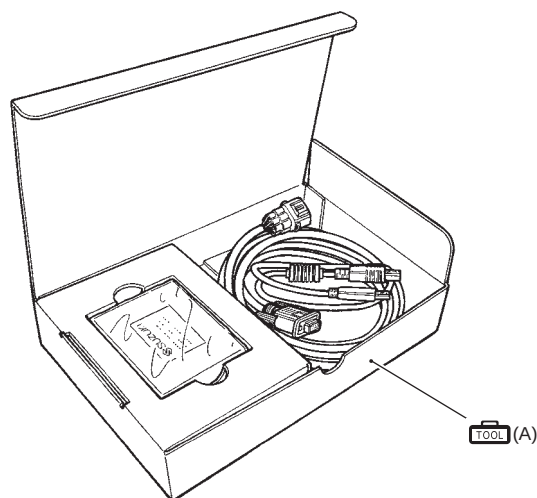

I705H1110116-03

- 3) Click the DTC inspection button (1).

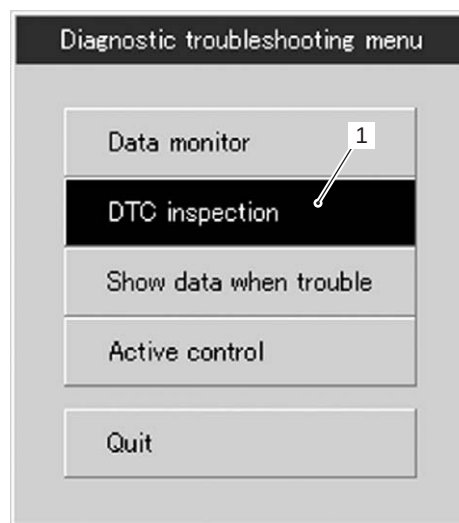

I705H1110003-01

- 4) Start the engine or crank the engine for more than 4 seconds.
- 5) Check the DTC to determine the malfunction part. Refer to "DTC Table (Page 1A-18)".

NOTE

- **Read the DTC (Diagnostic Trouble Code) and show data when trouble (displaying data at the time of DTC) according to instructions displayed on SDS.**
- **Not only SDS is used for detecting Diagnostic Trouble Codes but also for reproducing and checking on screen the failure condition as described by customers using the trigger. (Refer to "Show Data When Trouble (Displaying Data at the Time of DTC) (Page 1A-13)".)**
- **How to use trigger. (Refer to the SDS operation manual for further details.)**

- 6) After repairing the trouble, clear to delete history code (Past DTC). Refer to "Use of SDS Diagnosis Reset Procedures (Page 1A-12)".
- 7) Close the SDS tool and turn the ignition switch OFF.
- 8) Disconnect the SDS tool and install the right frame cover.


Use of SDS Diagnosis Reset Procedures

B931H21104003

NOTE


The malfunction code is memorized in the ECM also when the wire coupler of any sensor is disconnected. Therefore, when a wire coupler has been disconnected at the time of diagnosis, erase the stored malfunction history code using SDS.

- 1) After repairing the trouble, turn OFF the ignition switch and turn ON again.
- 2) Click the DTC inspection button (1).

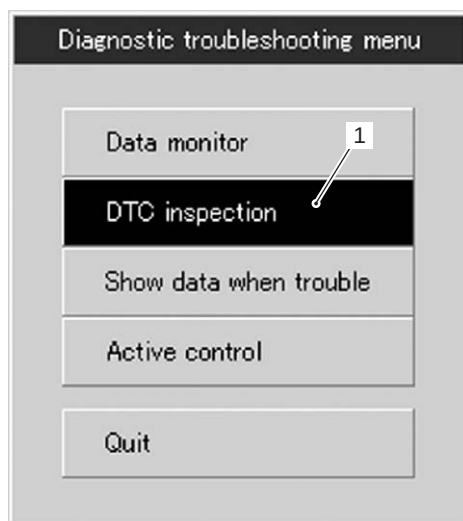


I705H1110003-01

- 3) Check the DTC.
- 4) The previous malfunction history code (Past DTC) still remains stored in the ECM. Therefore, erase the history code memorized in the ECM using SDS tool.
- 5) Click "Clear" (2) to delete history code (Past DTC).

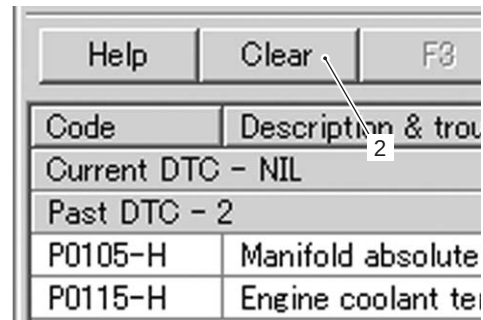

I705H1110005-01

- 6) Follow the displayed instructions.

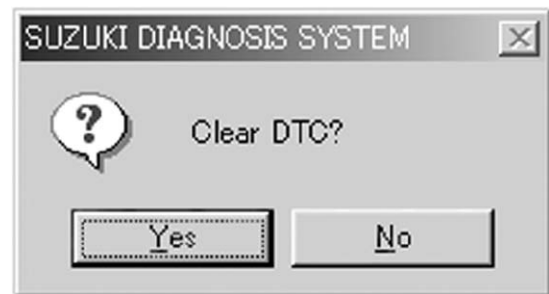


I705H1110006-01



I705H1110009-01

- 7) Check that both "Current DTC" (3) and "Past DTC" (4) are deleted (NIL).

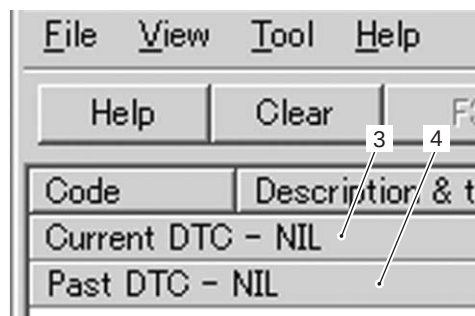

I705H1110008-01

- 8) Close the SDS tool and turn the ignition switch OFF.
- 9) Disconnect the SDS tool and install the seat.

Show Data When Trouble (Displaying Data at the Time of DTC)

B931H21104004

Use of SDS

ECM stores the engine and driving conditions (in the form of data as shown in the figure) at the moment of the detection of a malfunction in its memory. This data is called "Show data when trouble".


Therefore, it is possible to know engine and driving conditions (e.g., whether the engine was warm or not, where the vehicle was running or stopped) when a malfunction was detected by checking the show data when trouble. This show data when trouble function can record the maximum of two Diagnostic Trouble Codes in the ECM.

Also, ECM has a function to store each show data when trouble for two different malfunctions in the order of occurrence as the malfunction is detected. Utilizing this function, it is possible to know the order of malfunctions that have been detected. Its use is helpful when rechecking or diagnosing a trouble.

Failure #1				
P0110-H Intake air temperature circuit malfunction				
Item	Pre-detect	Detect poi...	Post-dete...	
Engine speed	1082	1327	1175	
Throttle position	32.4	32.4	32.4	
Manifold absolute pressure 1	98.1	93.5	98.1	
Engine coolant / oil temperature	37.8	37.8	37.8	
Gear position	N	N	N	


I831G1110016-02

1) Click "Show data when trouble" (1) to display the data.

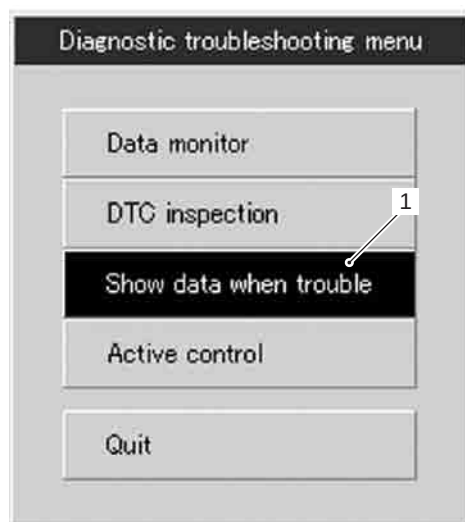

I718H1110269-02

2) Click the drop down button (2), either "Failure #1" or "Failure #2" can be selected.

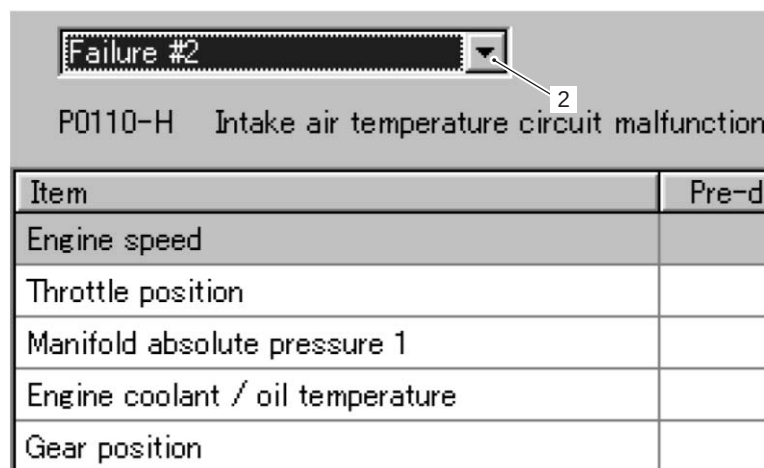

I831G1110017-01

SDS Check

Using SDS, sample the data at the time of new and periodic vehicle inspections.

After saving the sampled data in the computer, file them by model and by user.

The periodically filed data help improve the accuracy of troubleshooting since they can indicate the condition of vehicle functions that has changed with time.

For example, when a vehicle is brought in for service but the troubleshooting of a failure is not easy, comparing the current data value to past filed data value at time of normal condition can allow the specific engine failure to be determined.

Also, in the case of a customer vehicle which is not periodically brought in for service with no past data value having been saved, if the data value of a good vehicle condition have been already saved as a master (STD), comparison between the same models helps to facilitate the troubleshooting.

- 1) Remove the seat. Refer to **“Seat Removal and Installation: in Section 9D”**.
- 2) Set up the SDS tool. (Refer to the SDS operation manual for further details.)

Special tool

 : 09904-41010 (SUZUKI Diagnostic system set)


 : 99565-01010-019 (CD-ROM Ver.19)

NOTE


- Before taking the sample of data, check and clear the Past DTC.
- A number of different data under a fixed condition as shown below should be saved or filed as sample.

Sample

Data sampled from cold starting through warm-up

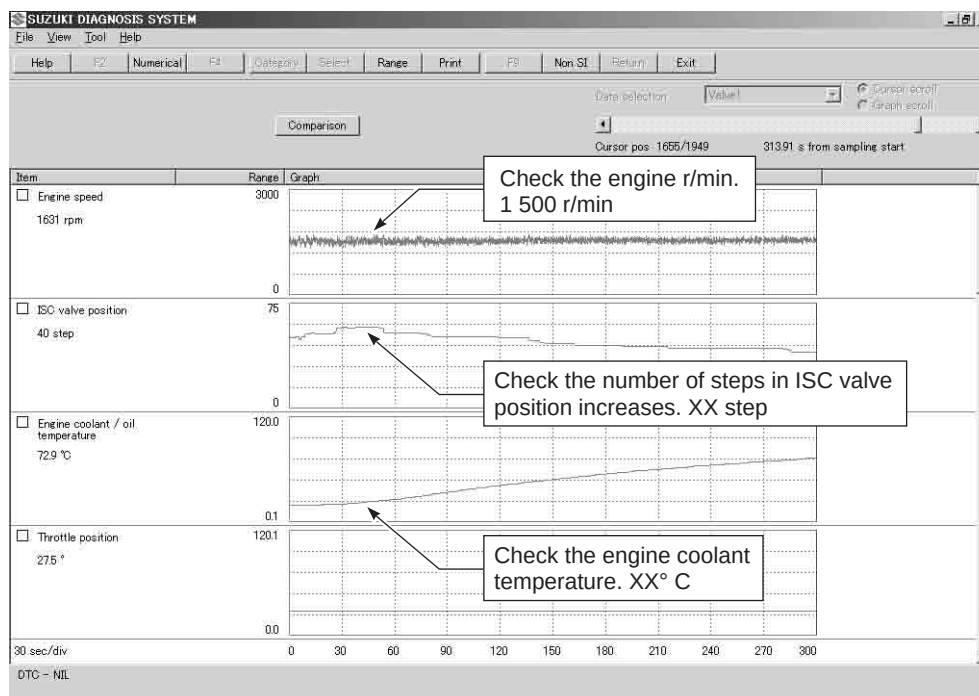


Data at 3 000 r/min under no load

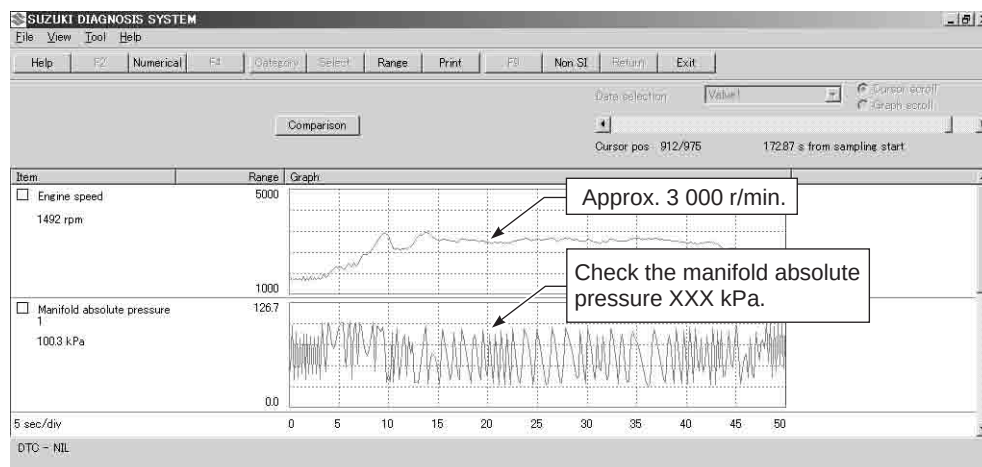

I931H1110068-01

Data at the time of racing

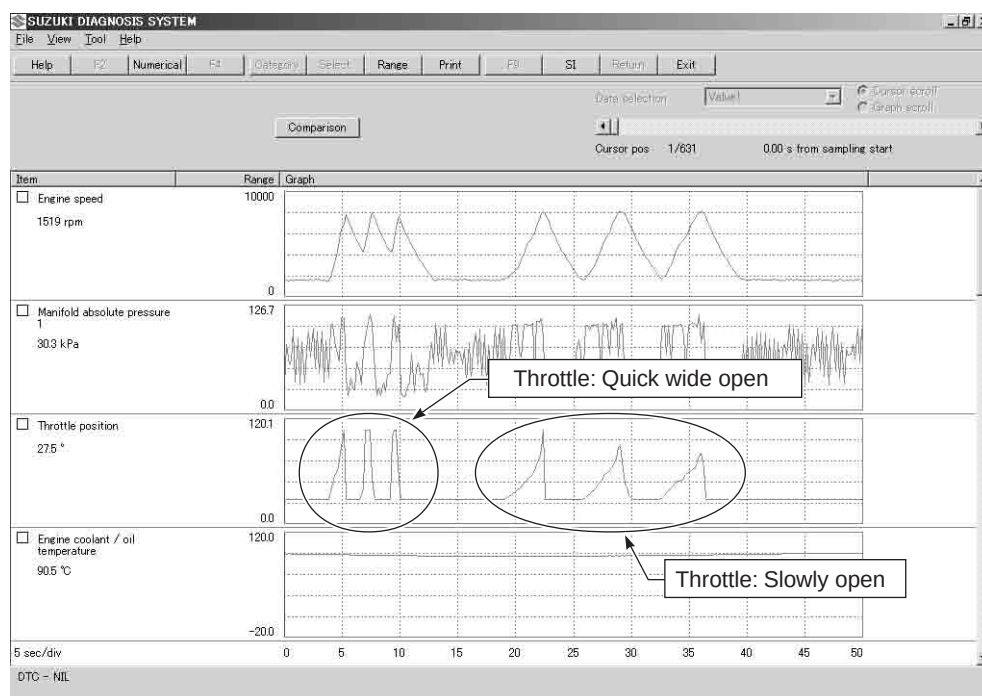

I931H1110069-01


1A-17 Engine General Information and Diagnosis:

Example of Trouble

Three data; value 3 (current data 3), value 2 (past data 2) and value 1 (past data 1); can be made in comparison by showing them in the graph. Read the change of value by comparing the current data to the past data that have been saved under the same condition, then you may determine how changes have occurred with the passing of time and identify what problem is currently occurring.

NOTE

With DTC not output, if the value of intake air pressure is found to be upper than the data saved previously, the possible cause may probably lie in a air passage clogged or influence of internal resistance value changes, etc.

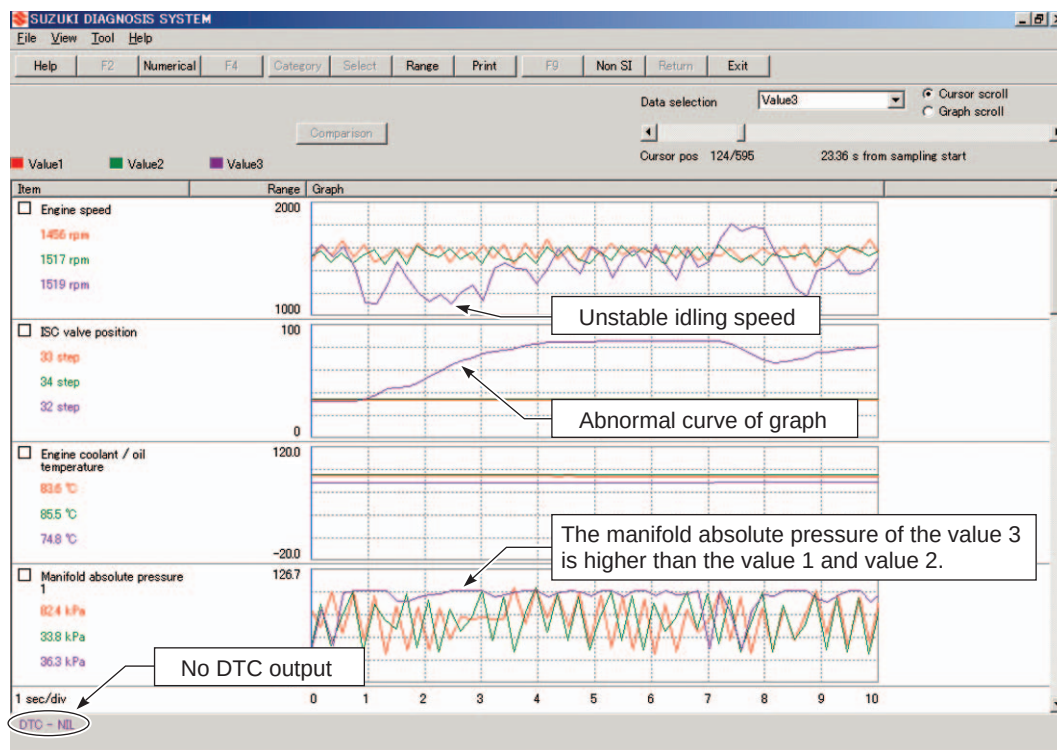

I931H1110070-01

DTC Table

B931H21104006

Code	Malfunction Part	Remarks
C00	None	No defective part
C12 (P0335) ☞ (Page 1A-23)	Crankshaft position sensor (CKP sensor)	Pick-up coil signal, signal generator
C13 (P0105-H/L) ☞ (Page 1A-26)	Intake air pressure sensor (IAP sensor)	
C14 (P0120-H/L) ☞ (Page 1A-33)	Throttle position sensor (TP sensor)	*1
C15 (P0115-H/L) ☞ (Page 1A-40)	Engine coolant temperature sensor (ECT sensor)	
C20 (P1752) ☞ (Page 1A-45)	Differential lock relay (Diff-lock relay)	
C21 (P0110-H/L) ☞ (Page 1A-47)	Intake air temperature sensor (IAT sensor)	
C23 (P1651-H/L) ☞ (Page 1A-52)	Tip-over sensor (TO sensor)	
C24 (P0351) ☞ (Page 1A-59)	Ignition signal (Ignition coil)	
C32 (P0201) ☞ (Page 1A-59)	Injector signal (FI)	
C40 (P0505-H/L) ☞ (Page 1A-59)	Idle speed control valve (ISC valve)	
C41 (P0230-H/L) ☞ (Page 1A-59)	Fuel pump control system (FP relay)	Fuel pump, Fuel pump relay

In the LCD (DISPLAY) panel, the malfunction code is indicated from small code to large code.

*1

To get the proper signal from the throttle position sensor, the sensor basic position is indicated in the LCD (DISPLAY) panel. The malfunction code is indicated in three digits. In front of three digits, a line appears in any of the position, upper, middle or lower line. If the indication is upper or lower line when engine rpm is 1 500 rpm, slightly turn the throttle position sensor and bring the line to middle.

In the normal condition, the throttle valve stop screw pushes throttle valves slightly, and indication point is middle line.

Fail-Safe Function Table

B931H21104007

FI system is provided with fail-safe function to allow the engine to start and the vehicle to run in a minimum performance necessary even under malfunction condition.

Item	Fail-Safe Mode	Starting Ability	Running Ability
IAP sensor	Intake air pressure is fixed to 101 kPa (760 mmHg).	“YES”	“YES”
TP sensor	The throttle opening is fixed to full open position. Ignition timing is also fixed.	“YES”	“YES”
ECT sensor	Engine coolant temperature value is fixed to 80 °C (176 °F).	“YES”	“YES”
IAT sensor	Intake air temperature value is fixed to 40 °C (104 °F).	“YES”	“YES”
Diff-lock relay	Differential position signal is fixed to neutral gear.	“YES”	“YES”

The engine can start and can run even if the above signal is not received from each sensor. But, the engine running condition is not complete, providing only emergency help (by fail-safe circuit). In this case, it is necessary to bring the vehicle to the workshop for complete repair.

FI System Troubleshooting

Customer Complaint Analysis

Record details of the problem (failure, complaint) and how it occurred as described by the customer. For this purpose, use of an inspection form such as below will facilitate collecting information required for proper analysis and diagnosis.

EXAMPLE: CUSTOMER PROBLEM INSPECTION FORM

User name:	Model:	VIN:	
Date of issue:	Date Reg.:	Date of problem:	Mileage:

Malfunction indicator light condition (LED)	☐ Always ON / ☐ Sometimes ON / ☐ Always OFF / ☐ Good condition
Malfunction display/code (LCD)	User mode: ☐ No display / ☐ Malfunction display () Dealer mode: ☐ No code / ☐ Malfunction code ()

PROBLEM SYMPTOMS	
☐ Difficult Starting ☐ No cranking ☐ No initial combustion ☐ No combustion ☐ Poor starting at (☐ cold / ☐ warm / ☐ always) ☐ Other	☐ Poor Driveability ☐ Hesitation on acceleration ☐ Back fire / ☐ After fire ☐ Lack of power ☐ Surging ☐ Abnormal knocking ☐ Engine rpm jumps briefly ☐ Other
☐ Poor Idling ☐ Poor fast Idle ☐ Abnormal idling speed (☐ High / ☐ Low) (r/min) ☐ Unstable ☐ Hunting (r/min to r/min) ☐ Other	☐ Engine Stall when ☐ Immediately after start ☐ Throttle valve is opened ☐ Throttle valve is closed ☐ Load is applied ☐ Other
☐ OTHERS:	

VEHICLE/ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS	
Environmental condition	
Weather	☐ Fair / ☐ Cloudy / ☐ Rain / ☐ Snow / ☐ Always / ☐ Other
Temperature	☐ Hot / ☐ Warm / ☐ Cool / ☐ Cold (°C / °F) / ☐ Always
Frequency	☐ Always / ☐ Sometimes (times / day, month) / ☐ Only once
Road	☐ Under certain condition ☐ Mountainous (☐ Uphill / ☐ Downhill) / ☐ Gravel / ☐ Other
Vehicle condition	
Engine condition	☐ Cold / ☐ Warming up phase / ☐ Warmed up / ☐ Always / ☐ Other at starting ☐ Immediately after start / ☐ Racing without load / ☐ Engine speed (r/min)
Vehicle condition	During driving: ☐ Constant speed / ☐ Accelerating / ☐ Decelerating ☐ Right hand corner / ☐ Left hand corner ☐ At stop / ☐ Vehicle speed when problem occurs (km/h, mile/h) ☐ Other:

NOTE

The above form is a standard sample. The form should be modified according to condition and characteristics of each market.

Visual Inspection

Prior to diagnosis using the mode select switch or SDS, perform the following visual inspections. The reason for visual inspection is that mechanical failures (such as oil leakage) cannot be displayed on the screen with the use of mode select switch or SDS.

- Engine oil level and leakage. Refer to **“Engine Oil and Filter Replacement: in Section 0B”**.
- Engine coolant level and leakage. Refer to **“Cooling Circuit Inspection: in Section 1F”**.
- Fuel level and leakage. Refer to **“Fuel Line Inspection: in Section 0B”**.
- Clogged air cleaner element. Refer to **“Air Cleaner Element Inspection and Cleaning: in Section 0B”**.
- Battery condition.
- Throttle cable play. Refer to **“Throttle Cable Play Inspection and Adjustment: in Section 0B”**.
- Broken fuse.
- FI light operation. Refer to **“Combination Meter Inspection: in Section 9C”**.
- Each indicator light operation. Refer to **“Combination Meter Inspection: in Section 9C”**.
- Speedometer operation. Refer to **“Speedometer Inspection: in Section 9C”**.
- Exhaust gas leakage and noise. Refer to **“Exhaust System Inspection: in Section 1K”**.
- Each coupler disconnection.
- Clogged radiator fins. Refer to **“Radiator Inspection and Cleaning: in Section 1F”**.

Malfunction Code and Defective Condition Table

Malfunction Code	Detected Item		Detected Failure Condition	Check For
C00	NO FAULT		—	—
C12	CKP sensor		The signal does not reach ECM for 3 sec. or more, after receiving the starter signal.	CKP sensor wiring and mechanical parts. CKP sensor, lead wire/coupler connection.
P0335				
C13	IAP sensor		The sensor should produce following voltage. $0.5\text{ V} \leq \text{sensor voltage} < 4.85\text{ V}$ In other than the above range, C13 (P0105) is indicated.	IAP sensor, lead wire/coupler connection.
P0105		H	Sensor voltage is higher than specified value.	IAP sensor circuit shorted to VCC or ground circuit open.
		L	Sensor voltage is lower than specified value.	IAP sensor circuit open or shorted to the ground or VCC circuit open.
C14	TP sensor		The sensor should produce following voltage. $0.2\text{ V} \leq \text{sensor voltage} < 4.8\text{ V}$ In other than the above range, C14 (P0120) is indicated.	TP sensor, lead wire/coupler connection.
P0120		H	Sensor voltage is higher than specified value.	TP sensor circuit shorted to VCC or ground circuit open.
		L	Sensor voltage is lower than specified value.	TP sensor circuit open or shorted to the ground or VCC circuit open.
C15	ECT sensor		The sensor voltage should be the following. $0.15\text{ V} \leq \text{sensor voltage} < 4.85\text{ V}$ In other than the above range, C15 (P0115) is indicated.	ECT sensor, lead wire/coupler connection.
P0115		H	Sensor voltage is higher than specified value.	ECT sensor circuit open or ground circuit open.
		L	Sensor voltage is lower than specified value.	ECT sensor circuit shorted to the ground.
C20	Diff-lock relay		No voltage is applied to 4WD/diff-lock actuator, although ignition switch is turned ON, or voltage is applied to 4WD/diff-lock actuator, although ignition switch is turned OFF. In this case, the code C20 (P1752) is indicated.	Diff-lock relay circuit open or shorted to ground.
P1752				
C21	IAT sensor		The sensor voltage should be the following. $0.15\text{ V} \leq \text{sensor voltage} < 4.85\text{ V}$ In other than the above range, C21 (P0110) is indicated.	IAT sensor, lead wire/coupler connection.
P0110		H	Sensor voltage is higher than specified value.	IAT sensor circuit open or ground circuit open.
		L	Sensor voltage is lower than specified value.	IAT sensor circuit shorted to the ground.
C23	TO sensor		The sensor voltage should be the following. $0.2\text{ V} \leq \text{sensor voltage} < 4.8\text{ V}$ In other than the above value, C23 (P1651) is indicated.	TO sensor, lead wire/coupler connection.
P1651		H	Sensor voltage is higher than specified value.	TO sensor circuit shorted to VCC or ground circuit open.
		L	Sensor voltage is lower than specified value.	TO sensor circuit open or shorted to the ground or VCC circuit open.

Malfunction Code		Detected Item	Detected Failure Condition	Check For
C24		Ignition signal	CKP sensor (pick-up coil) signal is produced, but signal from ignition coil is interrupted 8 times or more continuously. In this case, the code C24 (P0351) is indicated.	Ignition coil, wiring/coupler connection, power supply from the battery.
P0351				
C32		Fuel injector	CKP sensor (pick-up coil) signal is produced, but fuel injector signal is interrupted 4 times or more continuously. In this case, the code C32 (P0201) is indicated.	Fuel injector, wiring/coupler connection, power supply to the injector.
P0201				
C40		ISC valve	ISC valve motor current is higher than specified value.	ISC valve circuit shorted to BATT or ground circuit open.
P0505	H		ISC valve motor circuit is open.	ISC valve circuit open or BATT circuit open.
	L			
C41		Fuel pump relay	No voltage is applied to the fuel pump, although fuel pump relay is turned ON, or voltage is applied to fuel pump, although fuel pump relay is turned OFF.	Fuel pump relay, lead wire/ coupler connection, power source to the fuel pump relay and fuel injectors.
P0230	H		Voltage is applied to the injector and fuel pump relay is turned OFF.	Fuel pump relay switch circuit shorted to power source. Fuel pump relay (switch side).
	L		No voltage is applied to the injector and fuel pump relay is turned ON.	Fuel pump relay circuit open or short. Fuel pump relay (coil side).


DTC “C12” (P0335): CKP Sensor Circuit Malfunction

B931H21104010

Detected Condition and Possible Cause


Detected Condition	Possible Cause
The signal does not reach ECM for 3 sec. or more, after receiving the starter signal.	• Metal particles or foreign material being stuck on the CKP sensor and rotor tip. • CKP sensor circuit open or short. • CKP sensor malfunction. • ECM malfunction.

Wiring Diagram

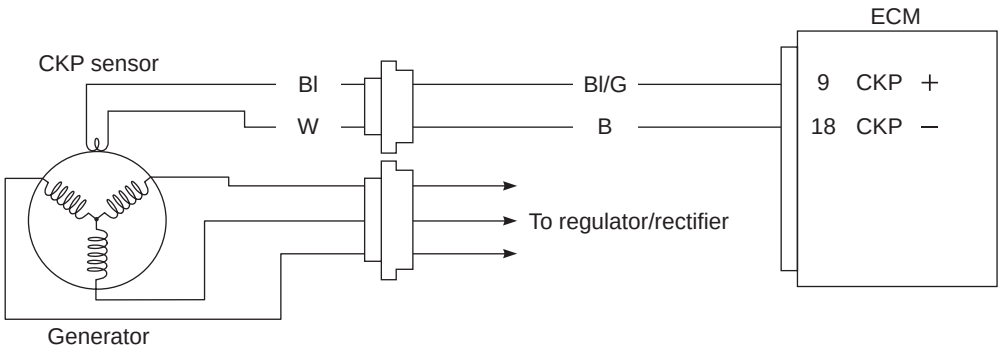

I931H1110012-02

ECM coupler (Harness side)

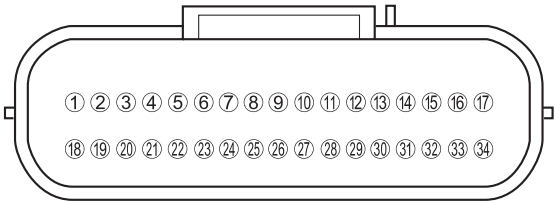




I831G1110019-01

Troubleshooting

NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

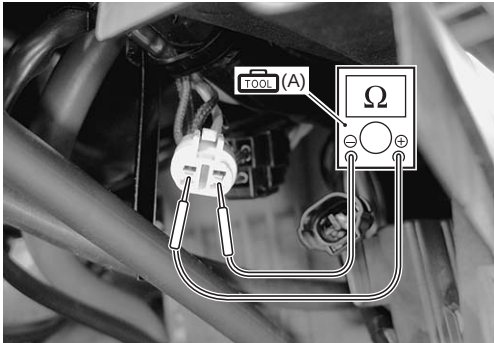Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the CKP sensor coupler for loose or poor contacts. If OK, then measure the CKP sensor resistance.  I931H1110013-01 4) Disconnect the CKP sensor coupler and measure the resistance. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Resistance (Ω) CKP sensor resistance 170 – 250 Ω (BI – W)  I931H1110014-02	Go to Step 2.	Replace the CKP sensor with a new one.

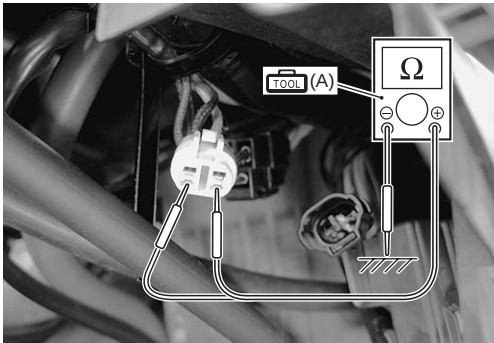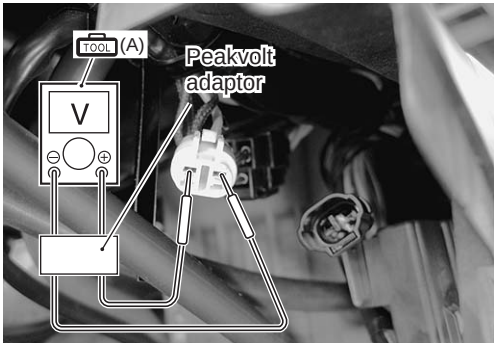
Step	Action	Yes	No
1	5) If OK, then check the continuity between each terminal and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) CKP sensor continuity $\infty \Omega$ (Infinity) (BI – Ground, W – Ground)  I931H1110015-01 <i>Are the resistance and continuity OK?</i>	Go to Step 2.	Replace the CKP sensor with a new one.
2	1) Crank the engine several seconds with the starter motor, and measure the CKP sensor peak voltage at the coupler. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) CKP sensor peak voltage 5.0 V and more ((+) terminal: BI – (–) terminal: W)  I931H1110016-02 2) Repeat the above test procedure a few times and measure the highest peak voltage. <i>Is the voltage OK?</i>	• BI/G or B wire open or shorted to the ground, or poor “9” or “18” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again. Refer to “ECM Removal and Installation: in Section 1C”.	• Inspect that metal particles or foreign material stuck on the CKP sensor and rotor tip. • If there are no metal particles and foreign material, then replace the CKP sensor with a new one. Refer to “CKP Sensor Removal and Installation: in Section 1C”.

DTC “C13” (P0105-H/L): IAP Sensor Circuit Malfunction


B931H21104011

Detected Condition and Possible Cause

Detected Condition		Possible Cause
C13	IAP sensor voltage is not within the following range. $0.5\text{ V} < \text{Sensor voltage} \leq 4.85\text{ V}$	• Clogged vacuum passage between throttle body and IAP sensor. • Air being drawn from vacuum passage between throttle body and IAP sensor. • IAP sensor circuit open or shorted to the ground. • IAP sensor malfunction. • ECM malfunction.
	NOTE Note that atmospheric pressure varies depending on weather conditions as well as altitude. Take that into consideration when inspecting voltage.	
P0105	H Sensor voltage is higher than specified value.	• IAP sensor circuit is open or shorted to VCC or ground circuit open. • IAP sensor circuit is shorted to the ground or VCC circuit open.
	L Sensor voltage is lower than specified value.	

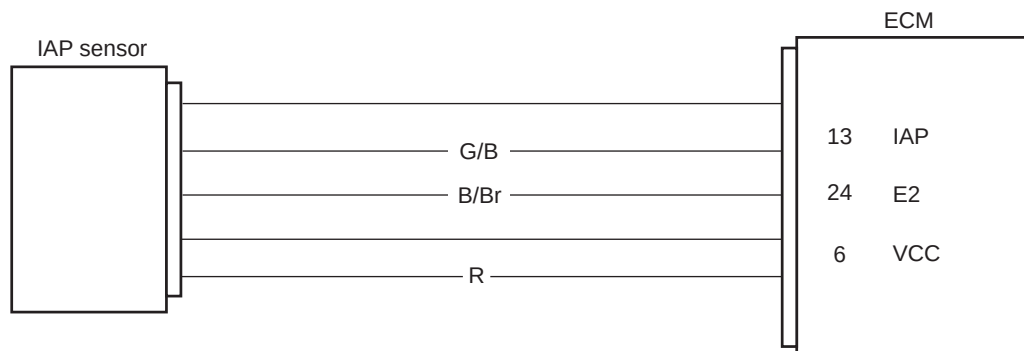Wiring Diagram

I931H1110017-02

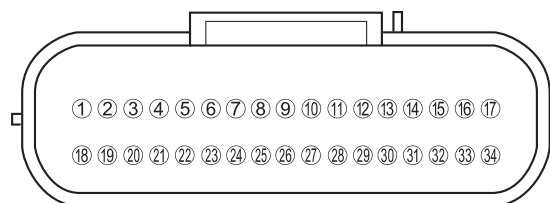ECM coupler (Harness side)

I831G1110019-01



Troubleshooting**⚠ CAUTION**

When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.



NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.


C13 (Use of mode select switch)

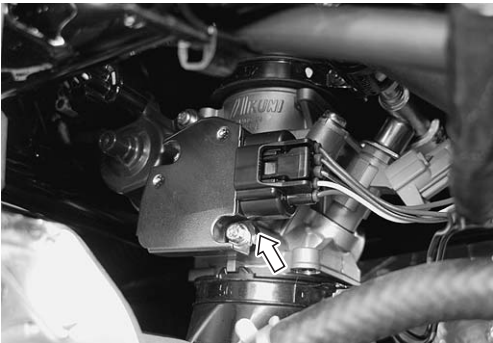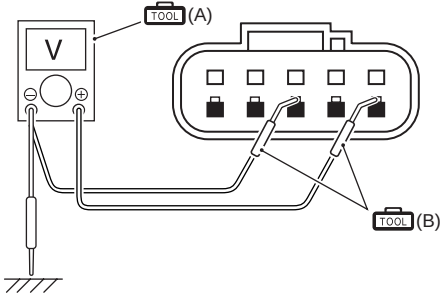Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the IAP sensor coupler for loose or poor contacts. If OK, then measure the IAP sensor input voltage.  I931H1110018-01 4) Disconnect the IAP sensor coupler. 5) Turn the ignition switch ON. 6) Measure the voltage at the R wire and ground. If OK, then measure the voltage at the R wire and B/Br wire. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) IAP sensor input voltage 4.5 – 5.5 V ((+) terminal: R – (-) terminal: Ground, (+) terminal: R – (-) terminal: B/Br)  I931H1110019-01 <i>Is the voltage OK?</i>	Go to Step 2.	- Loose or poor contacts on the ECM coupler. - Open or short circuit in the R wire or B/Br wire.



P0105-H for IAP sensor (Use of SDS)

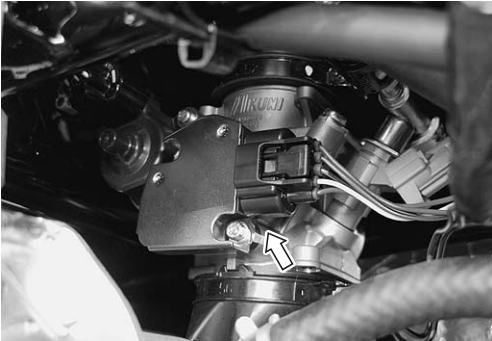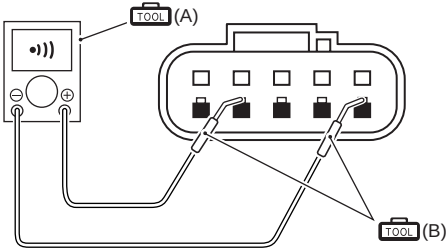Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 3) Check the IAP sensor coupler for loose or poor contacts. If OK, then check the IAP sensor lead wire continuity.  I931H1110020-01 4) Disconnect the IAP sensor coupler. 5) Check the continuity between the R wire and G/B wire. If the sound is not heard from the tester, the circuit condition is OK. Special tool TOOL (A): 09900–25008 (Multi-circuit tester set) TOOL (B): 09900–25009 (Needle pointed probe set) Tester knob indication Continuity (•)))  I931H1110021-01	Go to Step 3.	G/B wire shorted to VCC, or B/Br wire open.



1A-29 Engine General Information and Diagnosis:

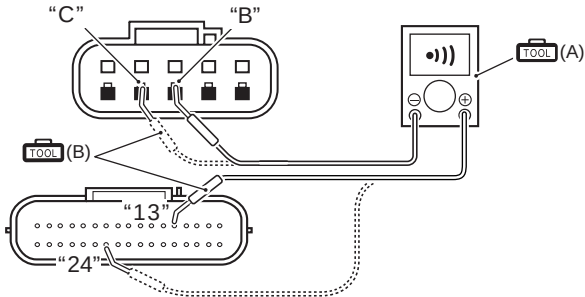
Step	Action	Yes	No
1	6) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”. 7) Insert the needle pointed probes to the lead wire coupler. 8) Check the continuity between the G/B wire “B” and terminal “13”. If OK, then check the continuity between the B/Br wire “C” and terminal “24”. Special tool  (A): 09900–25008 (Multi-circuit tester set)  (B): 09900–25009 (Needle pointed probe set) Tester knob indication Continuity test (•)))  I931H1110022-01 Is the continuity OK?	Go to Step 3.	G/B wire shorted to VCC, or B/Br wire open.

P0105-L for IAP sensor (Use of SDS)

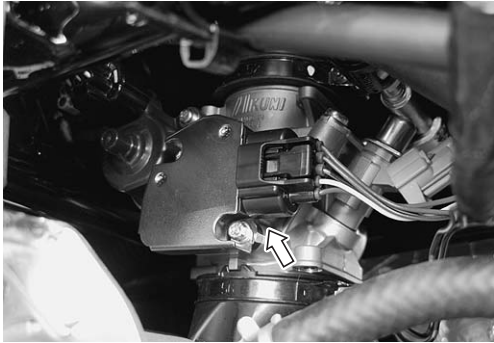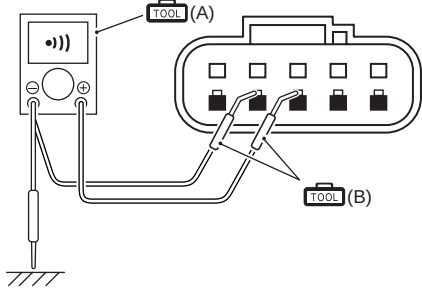Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 3) Check the IAP sensor coupler for loose or poor contacts. If OK, then check the IAP sensor lead wire continuity.  I931H1110023-01 4) Disconnect the IAP sensor coupler. 5) Check the continuity between the G/B wire and ground. Also, check the continuity between the G/B wire and B/Br wire. If the sound is not heard from the tester, the circuit condition is OK. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity (•)))  I931H1110024-01 6) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”. 7) Insert the needle pointed probes to the lead wire coupler.	Go to Step 3.	R and G/B wire open, G/B wire shorted to the ground.

1A-31 Engine General Information and Diagnosis:

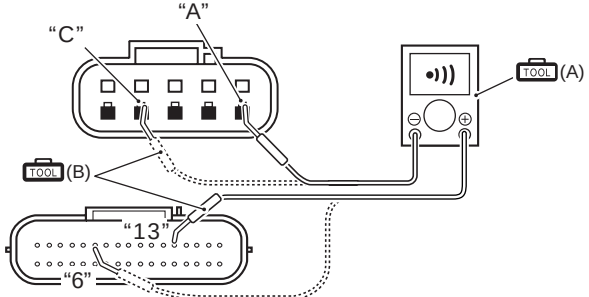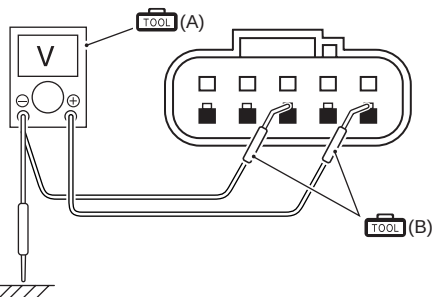Step	Action	Yes	No
1	8) Check the continuity between the R wire "A" and terminal "6". Also, check the continuity between the G/B wire "B" and terminal "13". Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity (•)))  I931H1110025-01 <i>Is the voltage OK?</i>	Go to Step 3.	R and G/B wire open, G/B wire shorted to the ground.
2	1) Connect the ECM coupler. 2) Turn the ignition switch ON. 3) Insert the needle pointed probes to the lead wire coupler. 4) Measure the input voltage at the R wire and ground with the needle pointed probes. If OK, the measure the input voltage at the R wire and B/Br wire. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) IAP sensor input voltage 4.5 – 5.5 V ((+) terminal: R – (–) terminal: Ground, (+) terminal: R – (–) terminal: B/Br)  I718H1110180-03 <i>Is the voltage OK?</i>	Go to Step 4.	Open or short circuit in the R wire or B/Br wire.

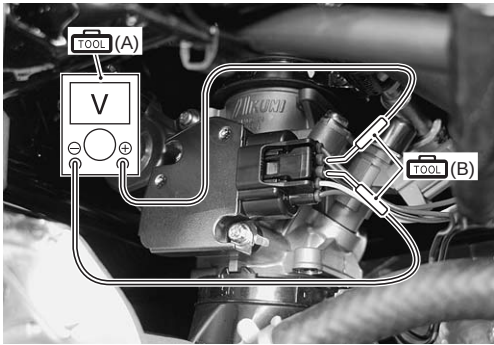Step	Action	Yes	No
3	1) Turn the ignition switch OFF. 2) Connect the IAP sensor coupler. 3) Insert the needle pointed probes to the lead wire coupler. 4) Starter the engine at idle speed and measure the IAP sensor output voltage at the wire side coupler between G/B wire and B/Br wire. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) IAP sensor output voltage 1.78 – 3.35 V at idle speed ((+) terminal: G/Bl – (–) terminal: B/Br)  I931H1110026-01 <i>Is the voltage OK?</i>	• G/B, R or B/Br wire open or shorted to ground, or poor “6”, “13” or “24” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again. Refer to “ECM Removal and Installation: in Section 1C”.	If check result is not satisfactory, replace IAP sensor (throttle body) with a new one. Refer to “Throttle Body Removal and Installation: in Section 1D”.


DTC “C14” (P0120-H/L): TP Sensor Circuit Malfunction

B931H21104012

Detected Condition and Possible Cause


Detected Condition			Possible Cause
C14		Output voltage is not within the following range. 0.2 V ≤ Sensor voltage < 4.8 V	• TP sensor maladjusted. • TP sensor circuit open or short. • TP sensor malfunction. • ECM malfunction. • TP sensor circuit is shorted to VCC or ground circuit open. • TP sensor circuit is open or shorted to the ground or VCC circuit open.
P0120	H	Sensor voltage is higher than specified value.	
	L	Sensor voltage is lower than specified value.	

Wiring Diagram

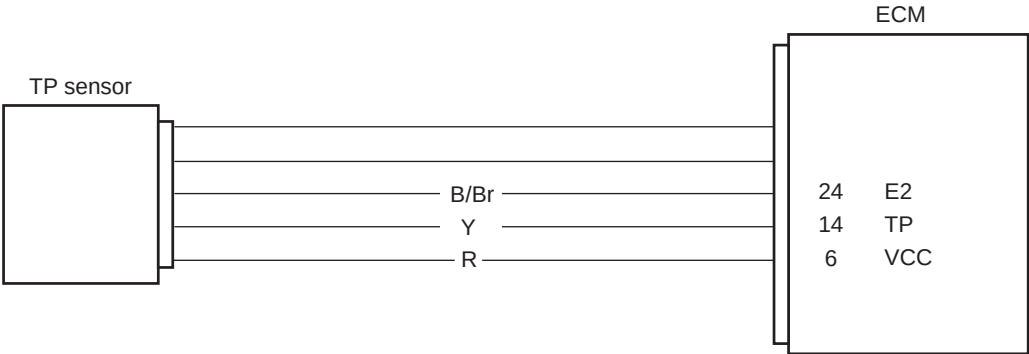

I931H1110027-02

ECM coupler (Harness side)

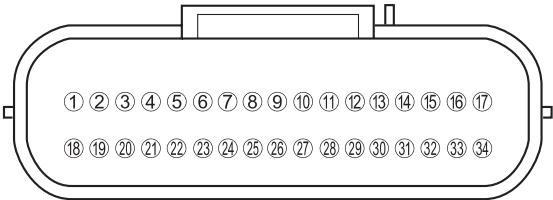

I831G1110019-01

Troubleshooting



⚠ CAUTION

When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.



NOTE


After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

C14 (Use of mode select switch)

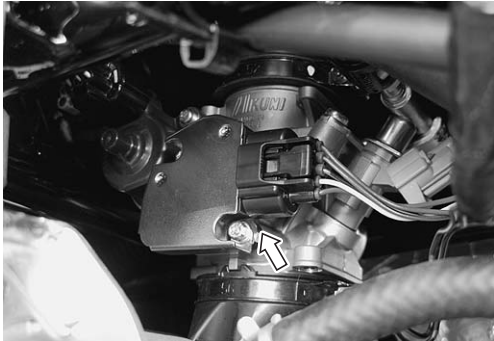
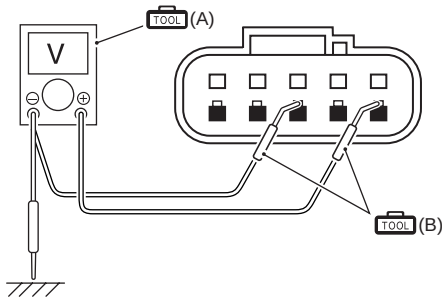
Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the TP sensor coupler for loose or poor contacts. If OK, then check the TP sensor input voltage. 4) Disconnect the TP sensor coupler.  I931H1110028-01 5) Turn the ignition switch ON. 6) Insert the pointed probes to the lead wire coupler. 7) Measure the input voltage at the R wire “A” and ground. If OK, then measure the input voltage at the R wire “A” and B/Br wire “C”. Special tool TOOL (A): 09900–25008 (Multi-circuit tester set) TOOL (B): 09900–25009 (Needle pointed probe set) Tester knob indication Voltage (---) TP sensor input voltage 4.5 – 5.5 V ((+) terminal: R – (–) terminal: Ground, (+) terminal: R – (–) terminal: B/Br)  I718H1110180-03 <i>Is the continuity OK?</i>	Go to Step 2.	- Loose or poor contacts on the ECM coupler. - Open or short circuit in the R wire or B/Br wire.



P0120-H (Use of SDS)

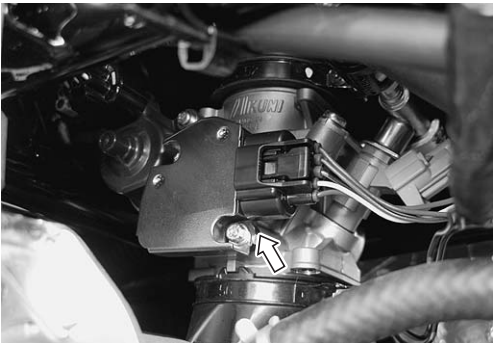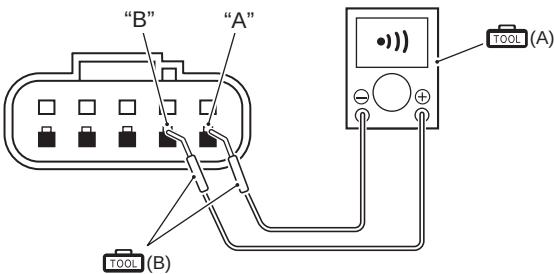
Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the TP sensor coupler for loose or poor contacts. If OK, then check the TP sensor lead wire continuity.  I931H1110029-01 4) Disconnect the TP sensor coupler. 5) Insert the needle pointed probes to the lead wire coupler. 6) Check the continuity between R wire “A” and Y wire “B”. If sound is not heard from the tester, the circuit condition is OK. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity (•)))  I931H1110030-02 7) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”.	Go to Step 2.	R wire shorted to VCC or B/Br wire open.

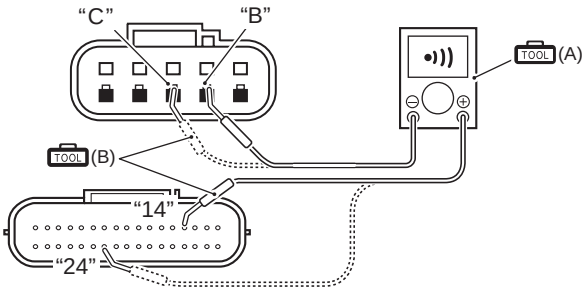Step	Action	Yes	No
1	8) Check the continuity between Y wire “B” and terminal “14”. Also, check the continuity between B/Br wire “C” and terminal “24”. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity (●)))  I931H1110032-02 Is the continuity OK?	Go to Step 2.	R wire shorted to VCC or B/Br wire open.

P0120-L (Use of SDS)

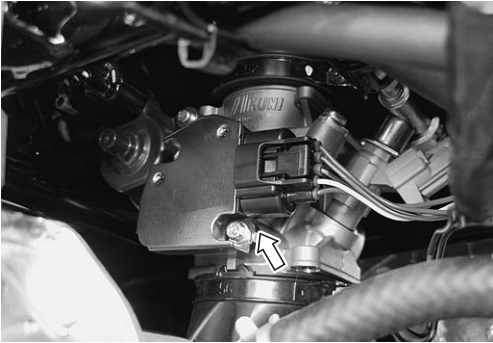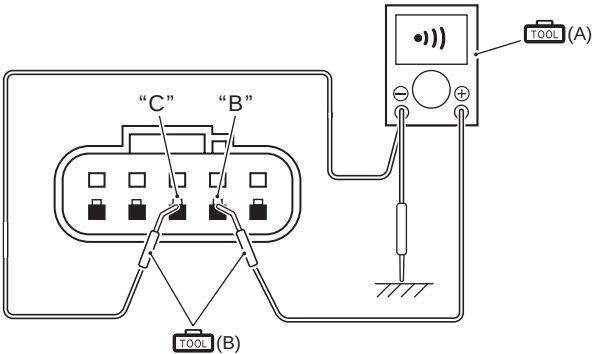Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the TP sensor coupler for loose or poor contacts. If OK, then check the TP sensor lead wire continuity.  I931H1110033-01 4) Disconnect the TP sensor coupler. 5) Insert the needle pointed probes to the lead wire coupler. 6) Check the continuity between Y wire “B” and ground. Also, check the continuity between Y wire “B” and B/Br wire “C”. If sound is not heard from the tester, the circuit condition is OK. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•)  I931H1110066-01 7) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”.	Go to Step 2.	Y or R wire open, or Y wire shorted to ground.

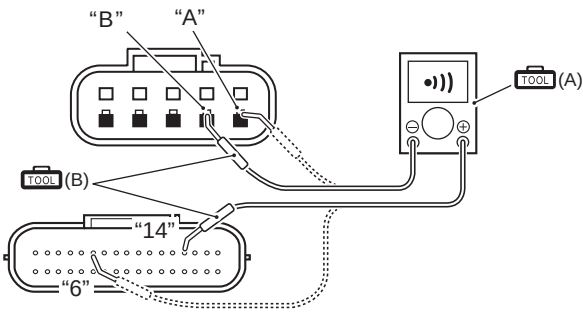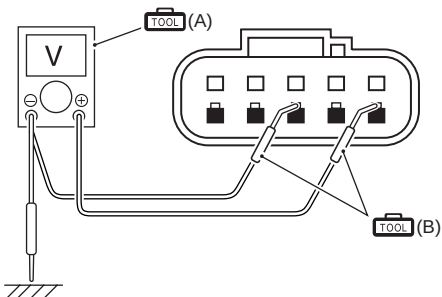Step	Action	Yes	No
1	8) Check the continuity between Y wire "B" and terminal "14". Also, check the continuity between R wire "A" and terminal "6". Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•••)  I931H1110031-01 <i>Is the continuity OK?</i>	Go to Step 2.	Y or R wire open, or Y wire shorted to ground.
2	1) Correct the ECM coupler. 2) Turn the ignition switch ON. 3) Measure the input voltage between the R wire and ground. If OK, the measure the input voltage between the R wire and B/Br wire. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) TP sensor input voltage 4.5 – 5.5 V ((+) terminal: R – (–) terminal: Ground, (+) terminal: R – (–) terminal: B/Br)  I718H1110180-03 <i>In the voltage OK?</i>	Go to Step 3.	R and Y wire open, or Y wire shorted to the ground.

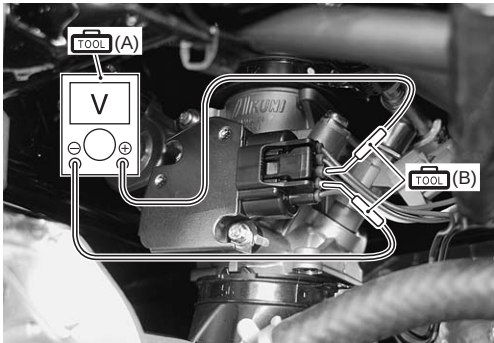Step	Action	Yes	No
3	1) Connect the TP sensor coupler. 2) Insert the needle pointed probes to the lead wire coupler. 3) Turn the ignition switch ON. 4) Measure the TP sensor output voltage at the coupler (between (+) Y wire and (–) B/Br wire) by opening the throttle lever. Special tool  (A): 09900–25008 (Multi-circuit tester set)  (B): 09900–25009 (Needle pointed probe set) Tester knob indication Voltage (—) TP sensor output voltage Throttle valve is closed: Approx. 0.93 – 1.31 V Throttle valve is opened: Approx. 3.64 – 4.82 V  I931H1110034-01 <i>Is the voltage OK?</i>	- Y, B/Br or R wire open or shorted to ground, or poor “14”, “24” or “6” connection. - If wire and connection are OK, intermittent trouble or faulty ECM. - Recheck each terminal and wire harness for open circuit and poor connection. - Replace the ECM with a known good one, and inspect it again.	If check result is not satisfactory, replace TP sensor with a new one. Refer to “Throttle Body Disassembly and Assembly: in Section 1D”.


DTC “C15” (P0115-H/L): ECT Sensor Circuit Malfunction

B931H21104013

Detected Condition and Possible Cause


Detected Condition			Possible Cause
C15		Output voltage is not within the following range. $0.15\text{ V} \leq \text{Sensor voltage} < 4.85\text{ V}$	- ECT sensor circuit open or short. - ECT sensor malfunction. - ECM malfunction. - ECT sensor circuit is open or ground circuit open.
P0115	H	Sensor voltage is higher than specified value.	
	L	Sensor voltage is lower than specified value.	

Wiring Diagram

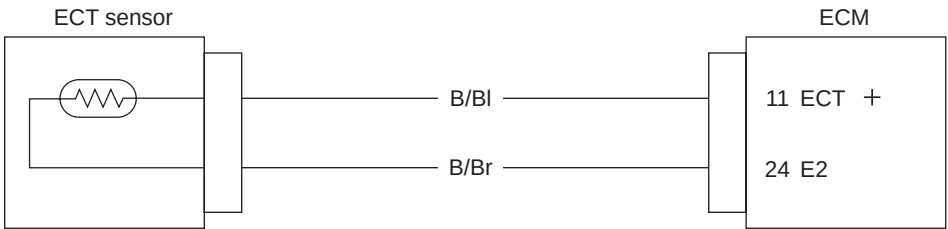

I831G1110041-01

ECM coupler (Harness side)

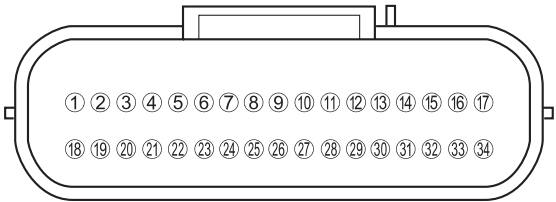

I831G1110019-01

Troubleshooting



⚠ CAUTION

When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.



NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.



C15 (Use of mode select switch)

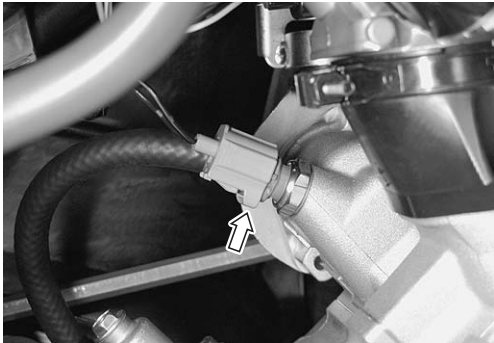
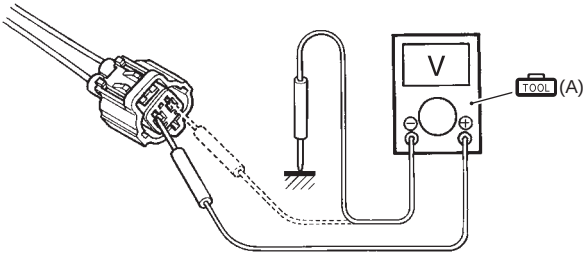
Step	Action	Yes	No
1	1) Remove the right side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the ECT sensor coupler for loose or poor contacts. If OK, then measure the ECT sensor voltage at the wire side coupler.  I931H1110035-01 4) Disconnect the coupler and turn the ignition switch ON. 5) Measure the voltage between the B/BI wire terminal and ground. If OK, then measure the input voltage between B/BI wire terminal and B/Br wire terminal. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) ECT sensor voltage 4.5 – 5.5 V ((+) terminal: B/BI – (–) terminal: Ground, (+) terminal: B/BI – (–) terminal: B/Br)  I718H1110048-03 <i>Is the voltage OK?</i>	Go to Step 2.	- Loose or poor contacts on the ECM coupler. - Open or short circuit in the B/BI or B/Br wire.

P0115-H (Use of SDS)

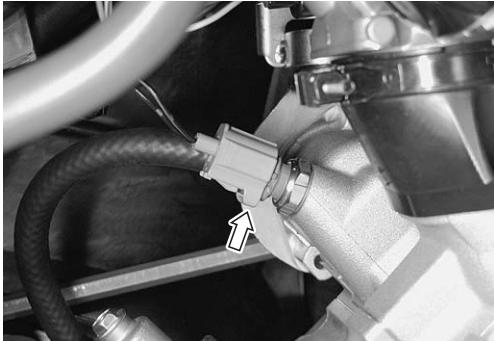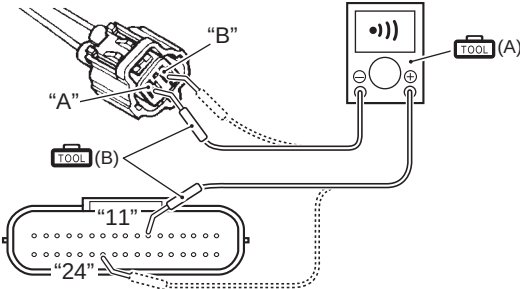Step	Action	Yes	No
1	1) Remove the right side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the ECT sensor coupler for loose or poor contacts. If OK, then check the ECT sensor lead wire continuity.  I931H1110035-01 4) Disconnect the ECT sensor coupler. 5) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”. 6) Insert the needle pointed probes to lead wire coupler. 7) Check the continuity between B/BI wire “A” and terminal “11”. Also, check the continuity between B/Br wire “B” and terminal “24”. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•)  I931H1110036-01 Is the continuity OK?	Go to Step 2.	B/BI or B/Br wire open.

P0115-L (Use of SDS)

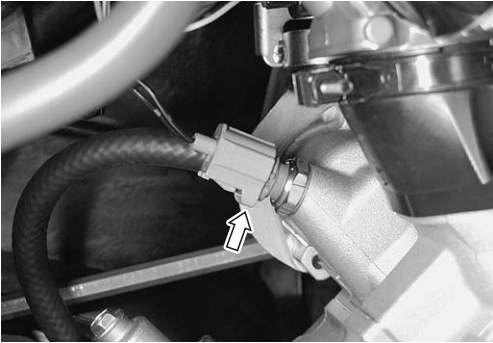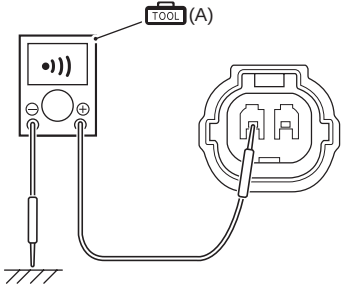Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the ECT sensor coupler for loose or poor contacts. If OK, then check the ECT sensor lead wire continuity.  I931H1110035-01 4) Disconnect the ECT sensor coupler. 5) Check the continuity between B/BI wire and ground. If sound is not heard from the tester, the circuit condition is OK. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Continuity test (•)))  I931H1110037-02 6) Connect the ECT sensor coupler. 7) Insert the needle pointed probes to the lead wire coupler. 8) Turn the ignition switch ON.	Go to Step 2.	• B/BI wire shorted to ground. • If wire is OK, go to Step 2.

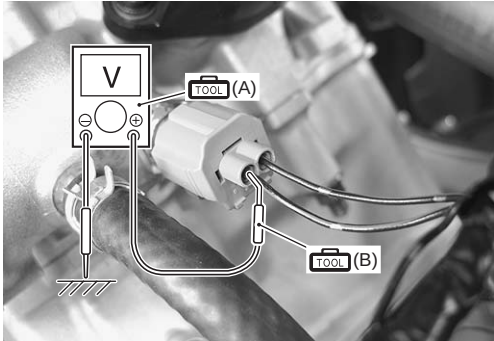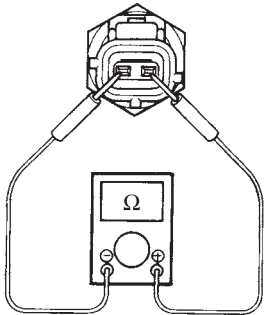Step	Action	Yes	No
1	9) Measure the output voltage between B/BI wire and ground. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) Output voltage 0.1 – 4.6 V ((+) terminal: B/BI – (–) terminal: Ground)  I931H1110038-02 <i>Are the continuity and voltage OK?</i>	Go to Step 2.	- B/BI wire shorted to ground. - If wire is OK, go to Step 2.
2	1) Turn the ignition switch OFF. 2) Connect the ECM coupler. 3) Disconnect the ECT sensor coupler. 4) Measure the ECT sensor resistance. Refer to “ECT Sensor Inspection: in Section 1C” for details. Special tool TOOL : 09900-25008 (Multi-circuit tester set) Tester knob indication Resistance (Ω) ECT sensor resistance Approx 2.45 kΩ at 20 °C (68 °F) (Terminal – Terminal)  I831G1110047-01 NOTE Refer to “ECT Sensor Inspection: in Section 1C” for details. <i>Is the resistance OK?</i>	- B/Br or B/BI wire open or shorted to ground, or poor “24” or “11” connection. - If wire and connection are OK, intermittent trouble or faulty ECM. - Recheck each terminal and wire harness for open circuit and poor connection. - Replace the ECM with a known good one, and inspect it again. Refer to “ECM Removal and Installation: in Section 1C”.	Replace the ECT sensor with a new one. Refer to “ ECT Sensor Removal and Installation: in Section 1C ”.


DTC “C20” (P1752): Diff-lock Relay Circuit Malfunction

B931H21104014

Detected Condition and Possible Cause


Detected Condition	Possible Cause
No voltage is applied to diff-lock motor, although ignition switch is turned ON, or voltage is applied to diff-lock motor, although ignition switch is turned OFF.	- Diff-lock relay circuit open or short. - Diff-lock relay malfunction. - ECM malfunction.

Wiring Diagram

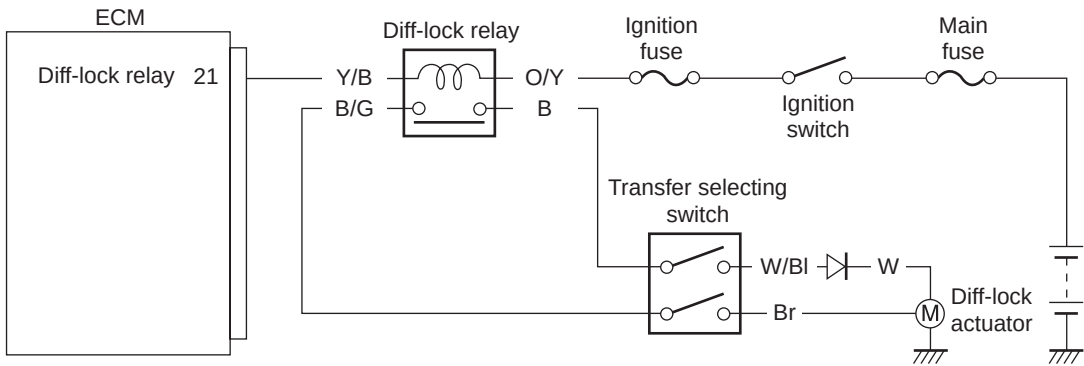

I931H1110039-01

ECM coupler (Harness side)

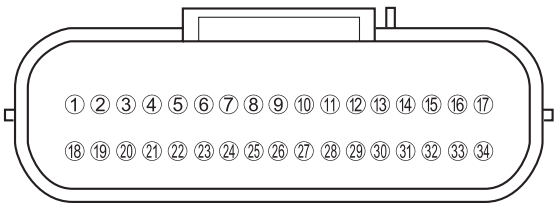

I831G1110019-01

Troubleshooting

NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

Step	Action	Yes	No
1	1) Remove the left side cover and engine side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.  I931H1110040-01 2) Connect the disconnected couplers and battery. 3) Turn the ignition switch OFF. 4) Check the diff-lock relay coupler for loose or poor contacts. If OK, then check the diff-lock relay insulation and continuity. Refer to “2WD / 4WD / Diff-lock System Inspection: in Section 3B”. <i>Is the diff-lock relay OK?</i>	• Inspect the 4WD/diff-lock switch. • Y/B wire open or shorted to ground, or poor “21” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again.	Replace the diff-lock relay with a new one.

DTC “C21” (P0110-H/L): IAT Sensor Circuit Malfunction

B931H21104015

Detected Condition and Possible Cause


Detected Condition			Possible Cause
C21		Output voltage is not within the following range. 0.15 V ≤ Sensor voltage < 4.85 V	- IAT sensor circuit open or short. - IAT sensor malfunction. - ECM malfunction. - IAT sensor circuit open or ground circuit open.
P0110	H	Sensor voltage is higher than specified value.	
	L	Sensor voltage is lower than specified value.	

Wiring Diagram



I931H1110041-01

ECM coupler (Harness side)

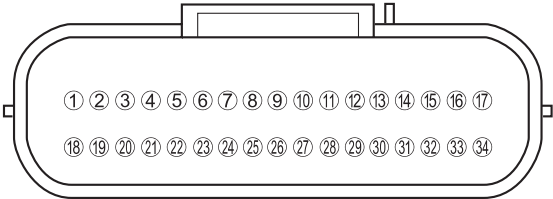

I831G1110019-01

Troubleshooting



⚠ CAUTION

When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.



NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.



C21 (Use of mode select switch)

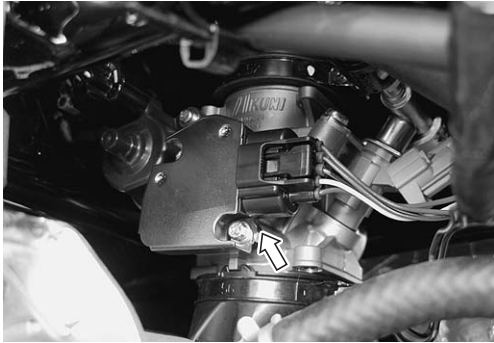
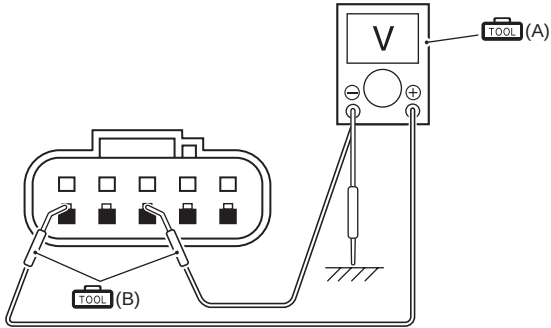
Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the IAT sensor coupler for loose or poor contacts. If OK, then measure the IAT sensor voltage.  I931H1110042-01 4) Disconnect the coupler and turn the ignition switch ON. 5) Measure the voltage between the Dg wire terminal and ground. If OK, then measure the input voltage between Dg wire terminal and B/Br wire terminal. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) IAT sensor input voltage 4.5 – 5.5 V ((+) terminal: Dg – (–) terminal: Ground, (+) terminal: Dg – (–) terminal: B/Br)  I718H1110057-04 <i>Is the voltage OK?</i>	Go to Step 2.	- Loose or poor contacts on the ECM coupler. - Open or short circuit in the Dg wire or B/Br wire.

P0110-H (Use of SDS)

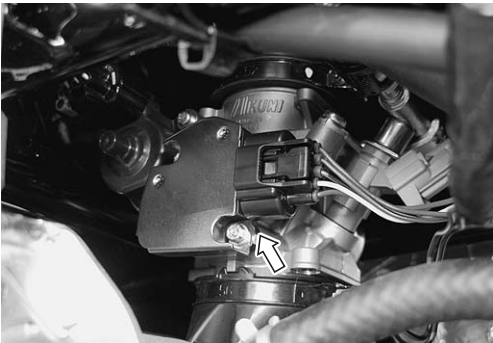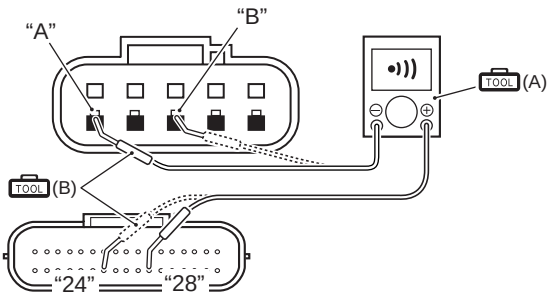Step	Action	Yes	No
1	1) Remove the left side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 2) Turn the ignition switch OFF. 3) Check the IAT sensor coupler for loose or poor contacts. If OK, then check the IAT sensor lead wire continuity.  I931H1110043-01 4) Disconnect the IAT sensor coupler. 5) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”. 6) Insert the needle pointed probes to the lead wire coupler. 7) Check the continuity between the Dg wire “A” and terminal “28”. Also, check the continuity between the B/Br wire “B” and terminal “24”. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•))  I931H1110044-01 Is the continuity OK?	Connect the ECM coupler and go to step 2.	Dg or B/Br wire open.

P0110-L (Use of SDS)

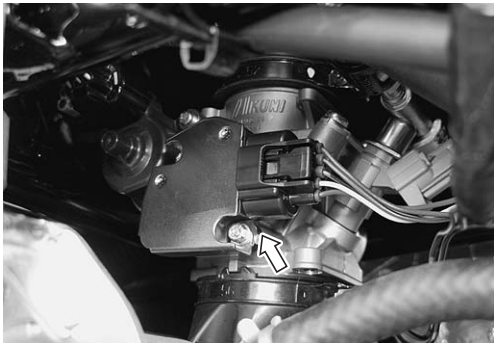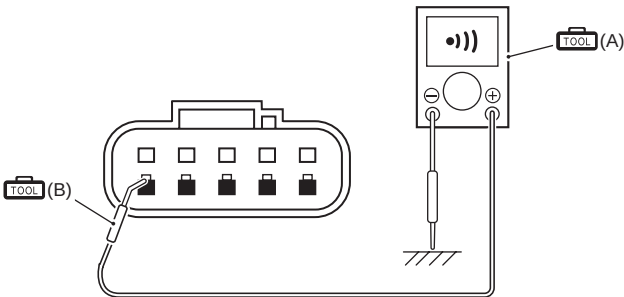Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the IAT sensor coupler for loose or poor contacts. If OK, then check the IAT sensor lead wire continuity.  I931H1110045-01 3) Disconnect the IAT sensor coupler. 4) Insert the needle pointed probes to the lead wire coupler. 5) Check the continuity between the Dg wire and ground. If the sound is not heard from the tester, the circuit condition is OK. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•))))  I718H1110063-03 6) Connect the IAT sensor coupler. 7) Turn the ignition switch ON. 8) Insert the needle pointed probes to the lead wire coupler.	Go to Step 2.	- Dg wire shorted to the ground. - If wire is OK, go to Step 2.

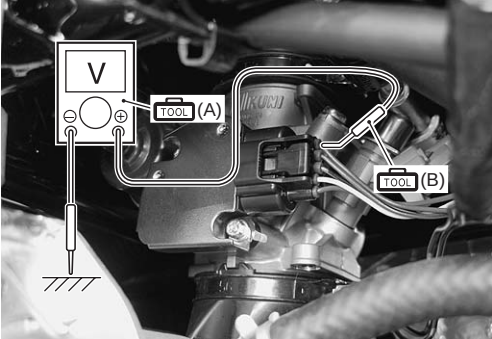
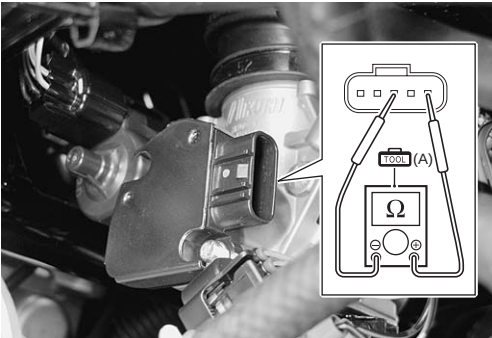
Step	Action	Yes	No
1	9) Measure the output voltage between the Dg wire and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) IAT sensor output voltage 1.88 – 3.06 V at 20 °C (68 °F) ((+) terminal: Dg – (–) terminal: Ground)  I931H1110046-01 <i>Are the continuity and voltage OK?</i>	Go to Step 2.	• Dg wire shorted to the ground. • If wire is OK, go to Step 2.
2	1) Turn the ignition switch OFF. 2) Disconnect the IAT sensor coupler. 3) Measure the IAT sensor resistance. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Resistance (Ω) IAT sensor resistance 2.22 – 3.22 kΩ at 20 °C (68 °F) (Terminal – Terminal)  I931H1110047-01 <i>Is the resistance OK?</i>	• Dg or B/Br wire open or shorted to the ground, or poor “28” or “24” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again. Refer to “ECM Removal and Installation: in Section 1C”.	Replace the IAT sensor (throttle body) with a new one. Refer to “ Throttle Body Disassembly and Assembly: in Section 1D ”.

DTC “C23” (P1651-H/L): TO Sensor Circuit Malfunction

B931H21104016

Detected Condition and Possible Cause

Detected Condition			Possible Cause
C23		The sensor voltage is not within the following range. $0.2\text{ V} \leq \text{Sensor voltage} < 4.8\text{ V}$	• TO sensor circuit open or short. • TO sensor malfunction. • ECM malfunction. • TO sensor circuit open or shorted to VCC or ground circuit open. • TO sensor circuit shorted to ground or VCC circuit open.
P1651	H	Sensor voltage is higher than specified value.	
	L	Sensor voltage is lower than specified value.	

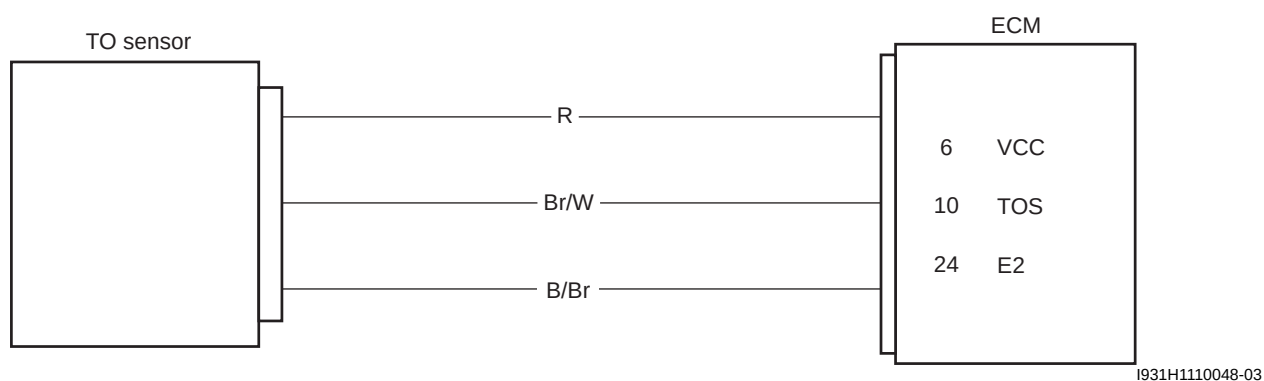
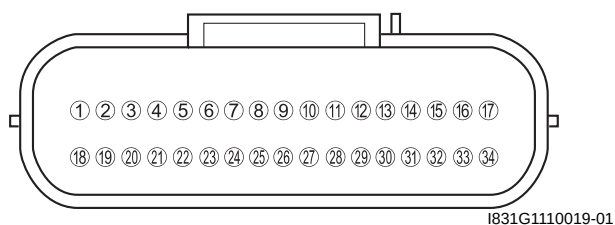
Wiring Diagram**ECM coupler (Harness side)****Troubleshooting****⚠ CAUTION**

When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.



NOTE


After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

C23 (Use of mode select switch)

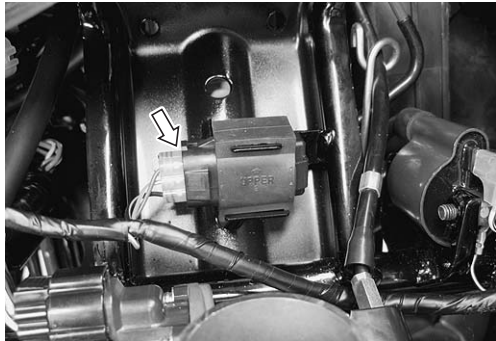
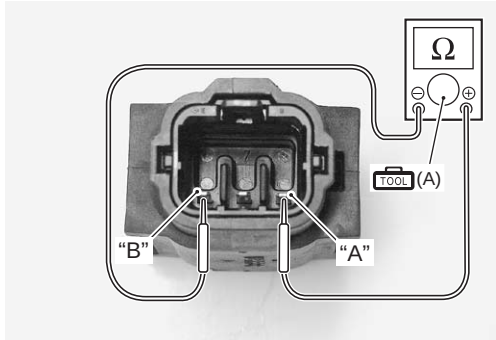
Step	Action	Yes	No
1	1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”. 2) Turn the ignition switch OFF. 3) Check the TO sensor coupler for loose or poor contacts. If OK, then measure the TO sensor resistance.  I931H1110049-02 4) Remove the TO sensor. 5) Disconnect the TO sensor coupler. 6) Measure the resistance between terminal “A” and terminal “B”. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Resistance (Ω) <u>TO sensor resistance</u> 19.0 – 20.0 kΩ (Terminal “A” – Terminal “B”)  I831G1110056-03 Is the resistance OK? <td>Go to Step 2.</td> <td>Replace the TO sensor with a new one. Refer to “TO Sensor Removal and Installation: in Section 1C”.</td>	Go to Step 2.	Replace the TO sensor with a new one. Refer to “ TO Sensor Removal and Installation: in Section 1C ”.


P1651-H (Use of SDS)

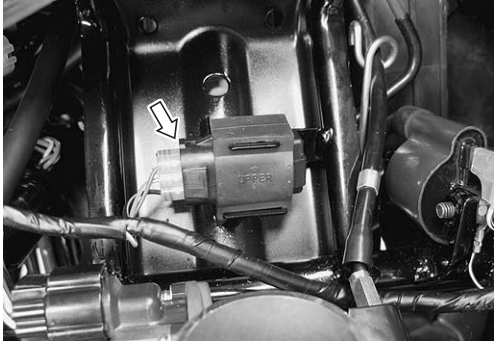
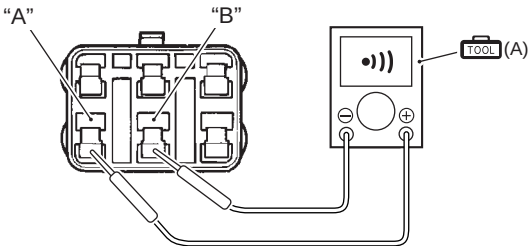
Step	Action	Yes	No
1	1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”. 2) Turn the ignition switch OFF. 3) Check the TO sensor coupler for loose or poor contacts. If OK, then check the TO sensor lead wire continuity.  I931H1110050-02 4) Remove the TO sensor. 5) Disconnect the TO sensor coupler. 6) Check the continuity between the R wire “A” and B/Br wire “B”. If the sound is not heard from the tester, the circuit condition is OK. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Continuity test (•)))  I718H1110070-02 7) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”.	Go to Step 2.	Br/W wire shorted to VCC, or B/Br wire open.

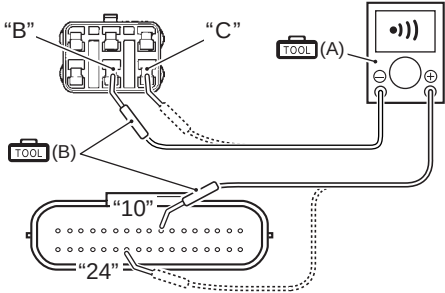Step	Action	Yes	No
1	8) Check the continuity between Br/W wire “B” and terminal “10”. Also, check the continuity between B/Br wire “C” and terminal “24”. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (••))  I931H1110051-02 Is the continuity OK?	Go to Step 2.	Br/W wire shorted to VCC, or B/Br wire open.

P1651-L (Use of SDS)

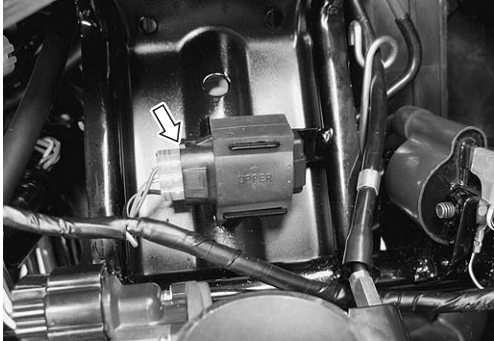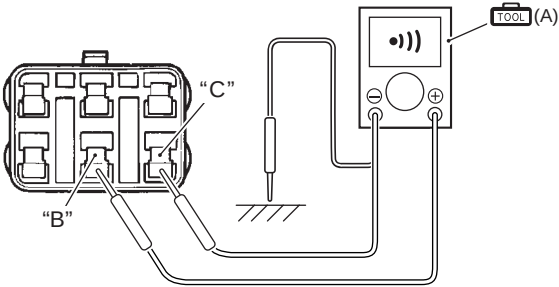Step	Action	Yes	No
1	1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”. 2) Turn the ignition switch OFF. 3) Check the TO sensor coupler for loose or poor contacts. If OK, then check the TO sensor lead wire continuity.  I931H1110052-01 4) Remove the TO sensor. 5) Disconnect the TO sensor coupler. 6) Insert the needle pointed probes to the lead wire coupler. 7) Check the continuity between Br/W wire “B” and ground. Also, check the continuity between Br/W wire “B” and B/Br wire “C”. If sound is not heard from the tester, the circuit condition is OK. Special tool  (A): 09900–25008 (Multi circuit tester set)  I831G1110084-01 8) Disconnect the ECM coupler. Refer to “ECM Removal and Installation: in Section 1C”.	Go to Step 2.	R or B wire open, or Br/W wire shorted to the ground.

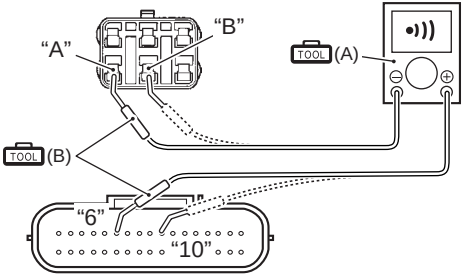Step	Action	Yes	No
1	9) Check the continuity between R wire “A” and terminal “6”. Also, then check the continuity between Br/W wire “B” and terminal “10”. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•)))  I931H1110053-01 Is the continuity OK?	Go to Step 2.	R or B wire open, or Br/W wire shorted to the ground.

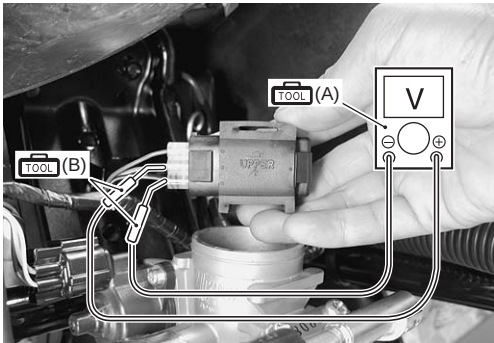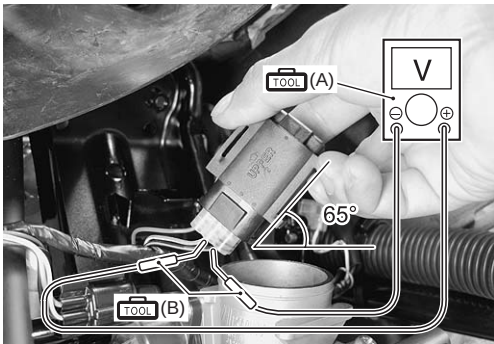Step	Action	Yes	No
2	1) Connect the TO sensor coupler. 2) Insert the needle pointed probes to the lead wire coupler. 3) Turn the ignition switch ON. 4) Measure the voltage at the wire side coupler between Br/W and B/Br wires. Also, measure the voltage when learning the vehicle. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) TO sensor voltage 0.4 – 1.4 V ((+) terminal: Br/W – (-) terminal: B/Br)  I931H1110054-01 5) Dismount the TO sensor from its bracket and measure the voltage when it is learned 65° and more, left and right, from the horizontal level. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) TO sensor voltage 3.7 – 4.4 V ((+) terminal: Br/W – (-) terminal: B/Br)  I931H1110055-02 Is the voltage OK?	• R, B/Br or Br/W wire open or shorted to ground, or poor “6”, “24” or “10” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again. Refer to “ECM Removal and Installation: in Section 1C”.	• Loose or poor contacts on the ECM coupler. • Open or short circuit. • Replace the TO sensor with a new one.

NOTE

Refer to “No Spark or Poor Spark: in Section 1H” for details.


DTC “C32” (P0201): Fuel Injector Circuit Malfunction

B931H21104018


Detected Condition and Possible Cause

Detected Condition	Possible Cause
CKP signal is produced but fuel injector signal is interrupted by 4 times or more continuity.	• Injector circuit open or short. • Injector malfunction. • ECM malfunction.

Wiring Diagram

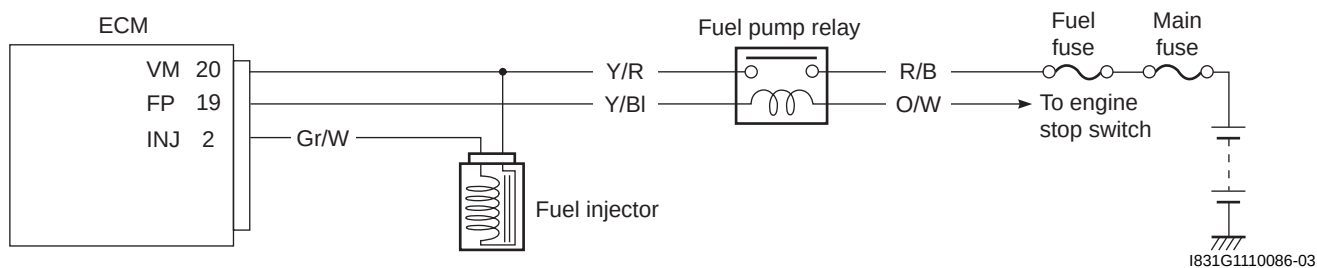


ECM coupler (Harness side)


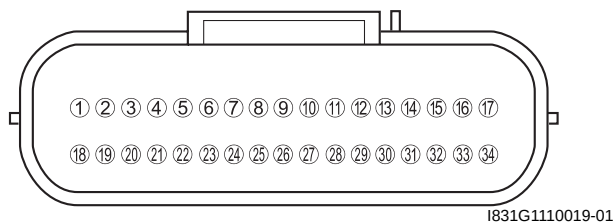


Troubleshooting

NOTE

- After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.
- Injector voltage can be detected only for 3 seconds after ignition switch is turned ON.

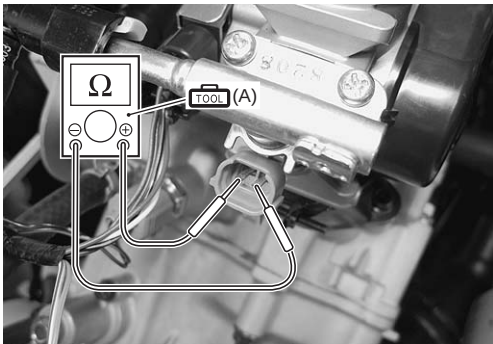Step	Action	Yes	No
1	1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”. 2) Turn the ignition switch OFF. 3) Check the injector coupler for loose or poor contacts. If OK, then measure the injector resistance.  I931H1110056-01 4) Disconnect the injector coupler and measure the resistance between terminals. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Resistance (Ω) Injector resistance Approx. 11 – 13 Ω at 20 °C (68 °F) (Terminal – Terminal)  I931H1110057-01 <td>Go to Step 2.</td> <td>Replace the injector with a new one. Refer to “Throttle Body Disassembly and Assembly: in Section 1D”.</td>	Go to Step 2.	Replace the injector with a new one. Refer to “Throttle Body Disassembly and Assembly: in Section 1D”.

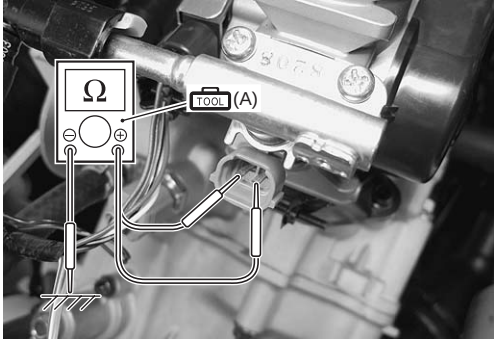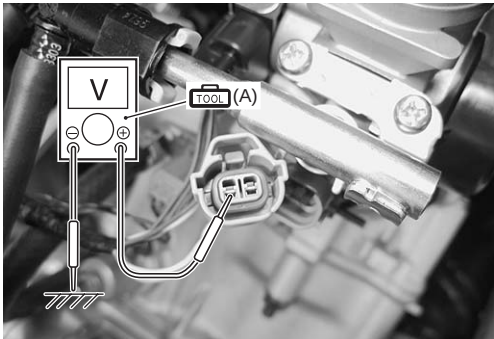
Step	Action	Yes	No
1	5) If OK, then check the continuity between each terminal and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) Injector continuity $\infty \Omega$ (Infinity) (Terminal – Ground)  I931H1110058-01 <i>Are the resistance and continuity OK?</i>	Go to Step 2.	Replace the injector with a new one. Refer to “Throttle Body Disassembly and Assembly: in Section 1D”.
2	1) Turn the ignition switch ON. 2) Measure the injector voltage between Y/R wire and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Injector voltage Battery voltage ((+) terminal: Y/R – (–) terminal: Ground)  I931H1110059-01 <i>Is the voltage OK?</i>	• Gr/W or Y/R wire open or shorted to ground, or poor “2” or “20” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and poor connection. • Replace the ECM with a known good one, and inspect it again.	Open circuit in the Y/R wire.

DTC “C40” (P0505-H/L): ISC Valve Circuit Malfunction


B931H21104019

Detected Condition and Possible Cause

Detected Condition			Possible Cause
C40/ P0505	H	ISC valve motor current is higher than the specified value.	• ISC valve circuit shorted to BATT or ground circuit open.
	L	ISC valve motor circuit is open.	• ISC valve circuit open or shorted to ground or BATT circuit open.

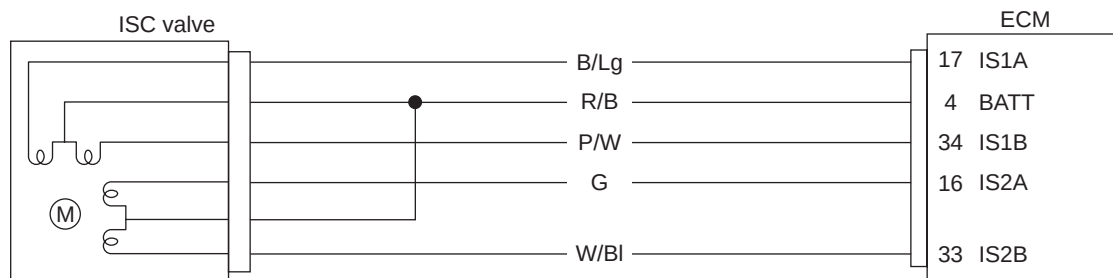Wiring Diagram

I831G1110062-01

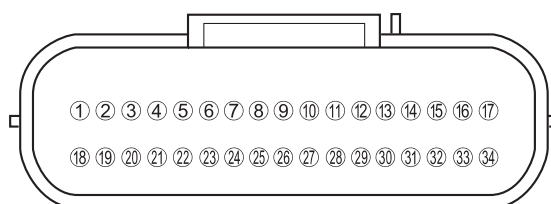ECM coupler (Harness side)



I831G1110019-01



Troubleshooting**⚠ CAUTION**


- Be careful not to disconnect at least 3 seconds after ignition switch is turned to OFF. If the ECM coupler is disconnected within 3 seconds after ignition switch is turned to OFF, there is a possibility of an usual valve being written in ECM and causing an error of ISC valve operation.
- When using the multi-circuit tester, do not strongly touch the terminal of the ECM coupler with a needle pointed tester probe to prevent the terminal damage or terminal bend.

NOTE

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

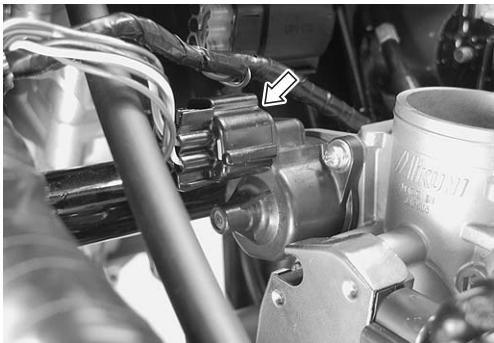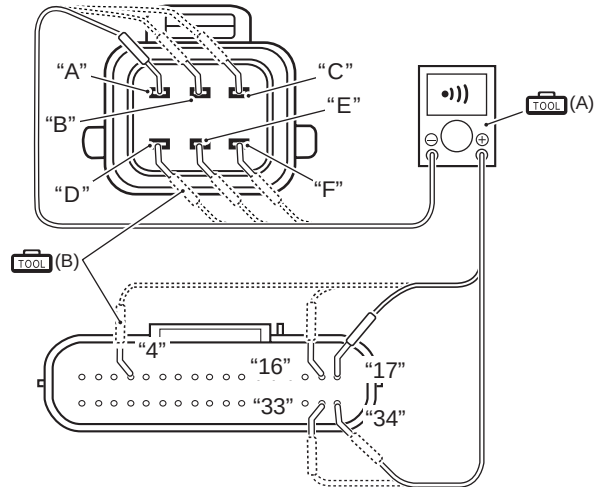Step	Action	Yes	No
1	1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”. 2) Turn the ignition switch OFF. 3) Check the ISC valve coupler for loose or poor contacts. If OK, then check the ISC valve lead wire continuity.  I931H1110060-01 4) Disconnect the ISC valve coupler. 5) Check the continuity between terminals “A” and “34”, terminals “B” and “4”, terminals “C” and “17”, terminals “D” and “33”, terminals “E” and “4” and terminals “F” and “16”. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity test (•)))  I931H1110061-02 Is the continuity OK?	Go to Step 2.	B/Lg, R/B, P/W, G or W/ Bl wire open.

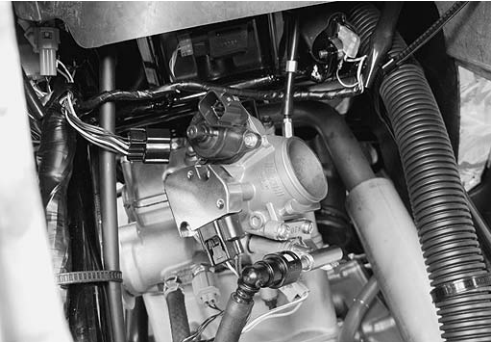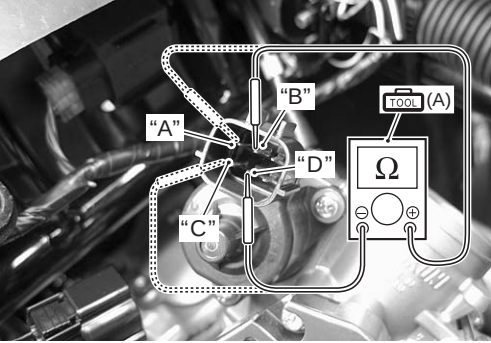Step	Action	Yes	No
2	1) Move the throttle body as shown. Refer to “Throttle Body Removal and Installation: in Section 1D”.  I931H1110062-01 2) Measure the resistance between terminals “A” and “C”, terminals “B” and “D”. Special tool  (A): 09900–25008 (Multi-circuit tester set) ISC valve resistance Approx. ∞ (Terminal “A” – Terminal “C”) (Terminal “B” – Terminal “D”)  I931H1110063-01	If wire is OK, intermittent trouble or faulty ECM.	Replace the ISC valve with a new one. Refer to “ISC Valve Removal and Installation: in Section 1C” .

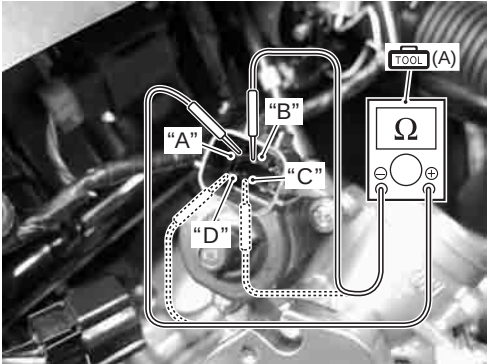Step	Action	Yes	No
2	3) If OK, then measure the resistance between terminals “A” and “B”, terminals “C” and “D”. Special tool  (A): 09900–25008 (Multi-circuit tester set) ISC valve resistance Approx. 31 Ω at 20 °C (68 °F) (Terminal “A” – Terminal “B”) (Terminal “C” – Terminal “D”)  I931H1110064-01 Is the resistance OK?	If wire is OK, intermittent trouble or faulty ECM.	Replace the ISC valve with a new one. Refer to “ISC Valve Removal and Installation: in Section 1C”.


ACTIVE CONTROL INSPECTION (ISC RPM CONTROL)**Check 1**

- 1) Set up the SDS tool. (Refer to the SDS operation manual for further details.)
- 2) Check that the engine is running.
- 3) Click the "Active control".
- 4) Click the "ISC rpm control" (1).



I931H1110071-01

- 5) Check that the "Spec" (2) is idle speed $1\,500 \pm 100$ rpm.
- 6) Check that the "Desired idle speed" (3) is within the specified idle rpm.

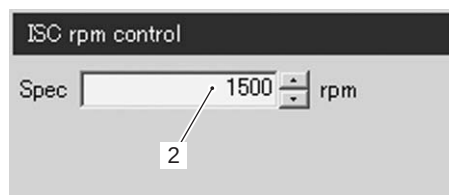


I931H1110072-01

Item		Value	Unit	
☐ Engine speed		1527	rpm	
☐ Desired idle speed	3	1500	rpm	
☐ ISC valve position		17	step	
☐ Throttle position		27.5	°	

I931H1110073-01

Check 2

- 1) Click the button (4) and decrease the "Spec" (2) to 1 400 rpm slowly.
- 2) Check that the "Desired idle speed" (3) is nearly equal to the "Spec" (2). At the same time, check that the number of steps (5) in the ISC valve position decreases.
- 3) Click the button (6) and increase the "Spec" (2) slowly.
- 4) Check that the "Desired idle speed" (3) is nearly equal to the "Spec" (2). Also, check that the number of steps (5) in the ISC valve position increases.

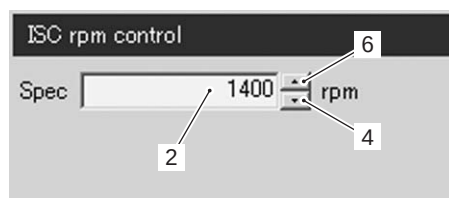

I931H1110074-01

Item		Value	Unit	
☐ Engine speed		1489	rpm	
☐ Desired idle speed	3	1400	rpm	
☐ ISC valve position		16	step	
☐ Throttle position	5	27.5	°	

I931H1110075-01

Check 3

- 1) Click the button (6) and increase the “Spec” (2) to 1 600 rpm slowly.
- 2) Check that the “Desired idle speed” (3) is nearly equal to the “Spec” (2). Also, check that the number of steps (5) in the ISC valve position increases.

ISC rpm control

Spec

1600

rpm

2

6

Item		Value	Unit
☐ Engine speed	3	1613	rpm
☐ Desired idle speed		1600	rpm
☐ ISC valve position		36	step
☐ Manifold absolute pressure 1	5	78.5	kPa

I931H1110076-02

I931H1110077-01

Check 4

- 1) Click the button (6) and increase the “Spec” (2) to 1 800 rpm.
- 2) Check that the “Desired idle speed” (3) is approx. 1 800 rpm.
- 3) Check that the “Engine speed” (7) is close to 1 800 rpm.

NOTE

Be careful not to increase the “Spec” to 1 850 rpm, or the “Engine speed” may reach the upper limit.

ISC rpm control

Spec

1800

rpm

2

6

Item		Value	Unit
☐ Engine speed	7	1870	rpm
☐ Desired idle speed		1800	rpm
☐ ISC valve position	3	70	step
☐ Throttle position		27.5	°

I931H1110078-01

I931H1110079-01



If the ISC valve does not function properly, replace the ISC valve or inspect the ISC valve. Refer to “Throttle Body Disassembly and Assembly: in Section 1D”.

DTC “C41” (P230-H/L): FP Relay Circuit Malfunction

B931H21104020

Detected Condition and Possible Cause

Detected Condition			Possible Cause
C41		No voltage is applied to fuel pump although fuel pump relay is turned ON, or voltage is applied to fuel pump, although fuel pump relay is turned OFF.	- Fuel pump relay circuit open or short. - Fuel pump relay malfunction. - ECM malfunction.
P0230	H	Voltage is applied to fuel pump although fuel pump relay is turned OFF.	
	L	No voltage is applied to fuel pump although fuel pump relay is turned ON.	- Fuel pump relay switch circuit shorted to power source. - Faulty fuel pump relay (switch side). - Fuel pump relay coil circuit open or short. - Faulty fuel pump relay (coil side).

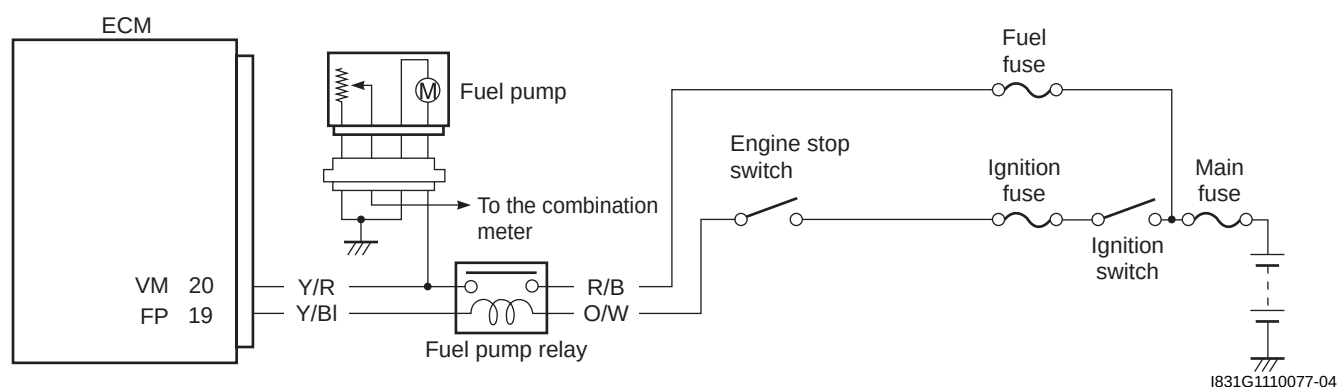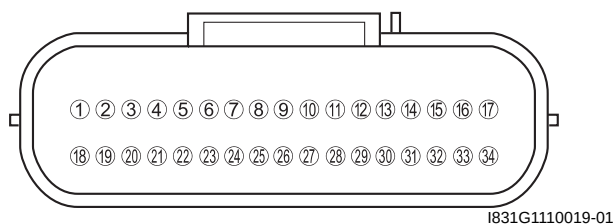Wiring Diagram**ECM coupler (Harness side)****Troubleshooting****NOTE**

After repairing the trouble, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures (Page 1A-12)”.

C41 (Use of mode select switch)

Step	Action	Yes	No
1	1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D". 2) Turn the ignition switch to OFF. 3) Check the FP relay coupler for loose or poor contacts. If OK, then check the FP relay. Refer to "Fuel Pump Relay Inspection: in Section 1G". <i>Is the FP relay OK?</i>	• Y/BI or O/W wire open or shorted to ground, or poor "19" connection. • Y/R or R/B wire open or shorted to ground, or poor "20" connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit poor connection. • Replace the ECM with a known good one, and inspect it again. Refer to "ECM Removal and Installation: in Section 1C".	Replace the FP relay with a new one.

P0230-H (Use of SDS)

Step	Action	Yes	No
1	1) Remove the seat. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D". 2) Turn the ignition switch to OFF. 3) Check the FP relay coupler for loose or poor contacts. If OK, then check the FP relay. Refer to "Fuel Pump Relay Inspection: in Section 1G".  I931H1110065-01 <i>Is the FP relay OK?</i>	• Y/R wire shorted to power source. • Y/BI wire shorted to ground. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again.	Replace the FP relay with a new one.

P0230-L (Use of SDS)

Step	Action	Yes	No
1	1) Turn the ignition switch to OFF. 2) Remove the seat. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”. 3) Check the FP relay coupler for loose or poor contacts. If OK, then check the FP relay. Refer to “Fuel Pump Relay Inspection: in Section 1G”.  I931H1110065-01 Is the FP relay OK?	• Y/BI wire open or poor “19” connection. • O/W wire open or shorted to ground. • R/B or Y/R wire open or shorted to ground or poor “16” connection. • If wire and connection are OK, intermittent trouble or faulty ECM. • Recheck each terminal and wire harness for open circuit and poor connection. • Replace the ECM with a known good one, and inspect it again.	Replace the FP relay with a new one.

Specifications

Service Data

B931H21107001

Injector

Item	Specification	Note
Injector resistance	11 – 13 Ω at 20 °C (68 °F)	—

FI Sensors + Secondary Throttle Valve Actuator






Item	Specification		Note
CKP sensor resistance	170 – 250 Ω		
CKP sensor peak voltage	5.0 V and more		When cranking
IAP sensor input voltage	4.5 – 5.5 V		
IAP sensor output voltage	1.78 – 3.35 V at idle speed		
TP sensor input voltage	4.5 – 5.5 V		
TP sensor output voltage	Closed	0.93 – 1.31 V	
	Opened	3.64 – 4.82 V	
ECT sensor input voltage	4.5 – 5.5 V		
ECT sensor output voltage	0.15 – 4.85 V		
ECT sensor resistance	Approx. 2.45 k Ω at 20 °C (68 °F)		
IAT sensor input voltage	4.5 – 5.5 V		
IAT sensor output voltage	1.88 – 3.06 V at 20 °C (68 °F)		
IAT sensor resistance	2.22 – 3.22 k Ω at 20 °C (68 °F)		
TO sensor resistance	19 – 20 k Ω		
TO sensor voltage	Normal	0.4 – 1.4 V	
	Leaning	3.7 – 4.4 V	When leaning 65°
Injector voltage	Battery voltage		
Ignition coil primary peak voltage	80 V and more		When cranking
ISC valve resistance	Approx. 31 k Ω at 20 °C (68 °F)		

Special Tools and Equipment

Special Tool

B931H21108001

09900-25008 Multi circuit tester set ☞ (Page 1A-24) / ☞ (Page 1A-25) / ☞ (Page 1A-25) / ☞ (Page 1A-27) / ☞ (Page 1A-28) / ☞ (Page 1A-29) / ☞ (Page 1A-30) / ☞ (Page 1A-31) / ☞ (Page 1A-31) / ☞ (Page 1A-32) / ☞ (Page 1A-34) / ☞ (Page 1A-35) / ☞ (Page 1A-36) / ☞ (Page 1A-37) / ☞ (Page 1A-38) / ☞ (Page 1A-38) / ☞ (Page 1A-39) / ☞ (Page 1A-41) / ☞ (Page 1A-42) / ☞ (Page 1A-43) / ☞ (Page 1A-44) / ☞ (Page 1A-44) / ☞ (Page 1A-48) / ☞ (Page 1A-49) / ☞ (Page 1A-50) ☞ (Page 1A-51) / ☞ (Page 1A-51) / ☞ (Page 1A-53) / ☞ (Page 1A-54) / ☞ (Page 1A-55) / ☞ (Page 1A-56) / ☞ (Page 1A-57) / ☞ (Page 1A-58) / ☞ (Page 1A-58) / ☞ (Page 1A-60) / ☞ (Page 1A-61) / ☞ (Page 1A-61) / ☞ (Page 1A-63) / ☞ (Page 1A-64) / ☞ (Page 1A-65)	09900-25009 Needle pointed probe set ☞ (Page 1A-27) / ☞ (Page 1A-28) / ☞ (Page 1A-29) / ☞ (Page 1A-30) / ☞ (Page 1A-31) / ☞ (Page 1A-31) / ☞ (Page 1A-32) / ☞ (Page 1A-34) / ☞ (Page 1A-35) / ☞ (Page 1A-36) / ☞ (Page 1A-37) / ☞ (Page 1A-38) / ☞ (Page 1A-38) / ☞ (Page 1A-39) / ☞ (Page 1A-42) / ☞ (Page 1A-44) / ☞ (Page 1A-48) / ☞ (Page 1A-49) / ☞ (Page 1A-50) / ☞ (Page 1A-51) / ☞ (Page 1A-55) / ☞ (Page 1A-57) / ☞ (Page 1A-58) / ☞ (Page 1A-58) / ☞ (Page 1A-63)
09904-41010 SUZUKI Diagnostic system set ☞ (Page 1A-11) / ☞ (Page 1A-15)	09930-82720 Mode selection switch ☞ (Page 1A-3) / ☞ (Page 1A-10) / ☞ (Page 1A-10)
99565-01010-019 CD-ROM Ver.19 ☞ (Page 1A-11) / ☞ (Page 1A-15)	

 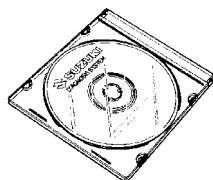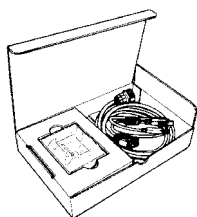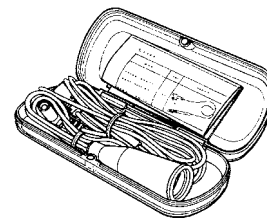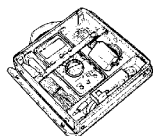

Emission Control Devices

Precautions

Precautions for Emission Control Devices

Refer to “General Precautions: in Section 00”.

B931H21200001


Repair Instructions

Crankcase Breather (PCV) Hose Inspection

B931H21206001

Inspect the PCV hose in the following procedures:

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Remove the right side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Inspect the PCV hose (1) for wear or damage. If it is worn or damaged, replace the PCV hose with a new one.
Check that the PCV hose (1) is securely connected.

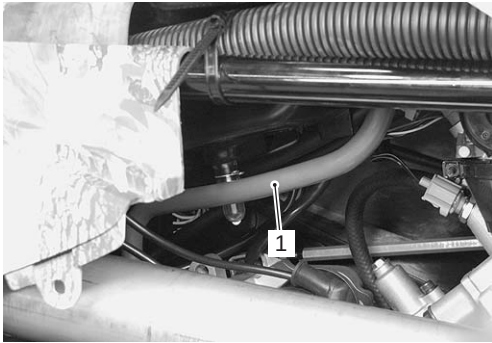


I931H1120001-01

Crankcase Breather (PCV) Hose Removal and Installation

B931H21206002

Removal

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Remove the right side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Disconnect the PCV hose (1).

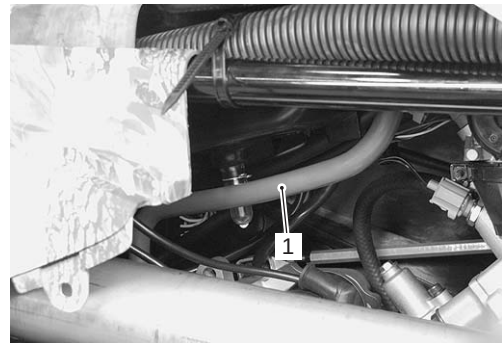

I931H1120001-01

Installation

- 1) Install the PCV hose as shown in the fuel hose routing diagram. Refer to “**Fuel Hose Routing Diagram: in Section 1G**”.
- 2) Reinstall the removed parts.

Engine Electrical Devices

Precautions

Precautions for Engine Electrical Device

B931H21300001

Refer to “General Precautions: in Section 00” and “Precautions for Electrical Circuit Service: in Section 00”.

Component Location

Engine Electrical Components Location

B931H21303001

Refer to “Electrical Components Location: in Section 0A”.

Diagnostic Information and Procedures

Engine Symptom Diagnosis

B931H21304001

Refer to “Engine Symptom Diagnosis: in Section 1A”.

Repair Instructions

ECM Removal and Installation

B931H21306001

Removal

- 1) Remove the seat. Refer to “Seat Removal and Installation: in Section 9D”.
- 2) Remove the battery (–) lead wire.
- 3) Disconnect the ECM coupler (1) and remove the ECM (2).



I931H1130001-01

Installation

NOTE

After replacing the ECM, turn ON the ignition switch and turn OFF again.

Install the ECM in the reverse order of removal.

CKP Sensor Inspection

B931H21306002


Refer to “CKP Sensor Inspection: in Section 1H”.

CKP Sensor Removal and Installation

B931H21306003

Removal

- 1) Remove the generator cover. Refer to **“Generator Removal and Installation: in Section 1J”**.
- 2) Remove the CKP sensor (1) along with generator stator.

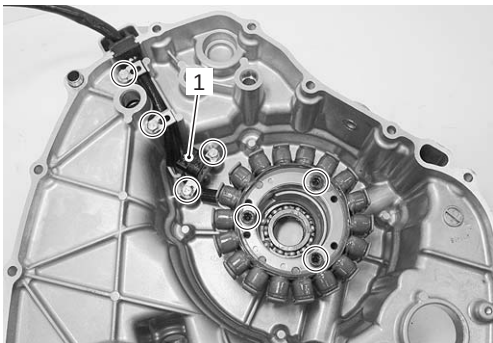

I931H1130002-01

Installation

Install the CKP sensor in the reverse order of removal. Refer to **“Generator Removal and Installation: in Section 1J”**.

IAP / TP / IAT Sensor Inspection

B931H21306004

Refer to **“DTC “C13” (P0105-H/L): IAP Sensor Circuit Malfunction: in Section 1A”**, **“DTC “C14” (P0120-H/L): TP Sensor Circuit Malfunction: in Section 1A”** and **“DTC “C21” (P0110-H/L): IAT Sensor Circuit Malfunction: in Section 1A”**.

NOTE

IAP sensor, TP sensor and IAT sensor are combined into one.

IAP / TP / IAT Sensor Removal and Installation

B931H21306005

Refer to **“Throttle Body Disassembly and Assembly: in Section 1D”**.

⚠ CAUTION

- Never remove the IAP/TP/IAT sensor from the throttle body.
- The IAP/TP/IAT sensor and throttle body are available only as an assembly.

ECT Sensor Removal and Installation


B931H21306006

Removal

- 1) Drain engine coolant. Refer to **“Cooling System Inspection: in Section 0B”**.
- 2) Remove the right side cover. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- 3) Disconnect the coupler (1) and remove the ECT sensor (2).

⚠ CAUTION

Take special care when handling the ECT sensor. It may cause damage if it gets an excessive impact.

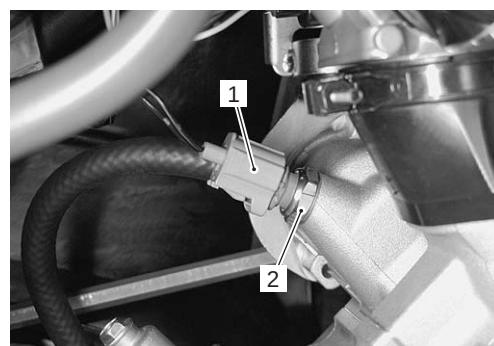

I931H1130003-01

Installation

Install the ECT sensor in the reverse order of removal. Pay attention to the following points:


- Tighten the ECT sensor to the specified torque.

⚠ CAUTION

Use the new gasket washer (1) to prevent engine coolant leakage.

Tightening torque

ECT sensor (a): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

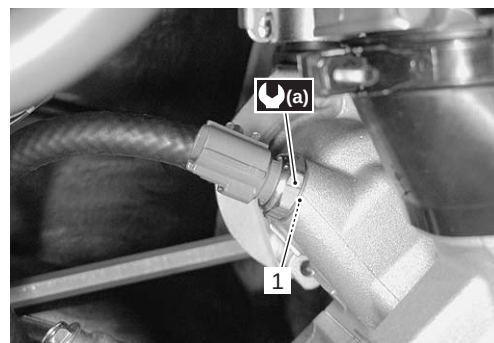

I931H1130004-01

- Pour engine coolant. Refer to **“Cooling System Inspection: in Section 0B”**.

ECT Sensor Inspection

B931H21306007

Refer to "DTC "C15" (P0115-H/L): ECT Sensor Circuit Malfunction: in Section 1A".

Inspect the ECT sensor in the following procedures:

- 1) Remove the ECT sensor. Refer to "ECT Sensor Removal and Installation (Page 1C-2)".
- 2) Connect the ECT sensor (1) to a circuit tester and place it in the oil (2) contained in a pan, which is placed on a stove.
- 3) Heat the oil to raise its temperature slowly and read the column thermometer (3) and the ohmmeter. If the ECT sensor ohmic value does not change in the proportion indicated, replace it with a new one.

⚠ CAUTION

Do not contact the ECT sensor and the column thermometer with a pan.

Special tool


 (A): 09900-25008 (Multi-circuit tester set)

Tester knob indication

Resistance (Ω)

Temperature sensor specification

Temperature	Standard resistance
20 °C (68 °F)	Approx. 2.45 k Ω
50 °C (122 °F)	Approx. 0.811 k Ω
80 °C (176 °F)	Approx. 0.318 k Ω
110 °C (230 °F)	Approx. 0.142 k Ω

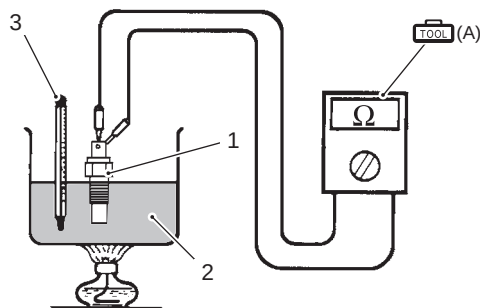

I718H1130014-01

- 4) Install the ECT sensor. Refer to "ECT Sensor Removal and Installation (Page 1C-2)".

TO Sensor Inspection

B931H21306008


Refer to "DTC "C23" (P1651-H/L): TO Sensor Circuit Malfunction: in Section 1A".

TO Sensor Removal and Installation

B931H21306009

Removal

- 1) Remove the air cleaner box. Refer to "Air Cleaner Box Removal and Installation: in Section 1D".
- 2) Disconnect the coupler (1) and remove the TO sensor (2).

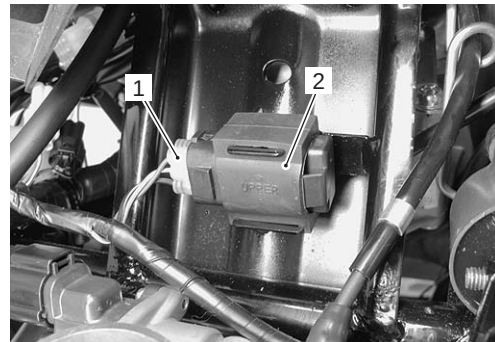


I931H1130005-01

Installation

Install the TO sensor in the reverse order of removal. Pay attention to the following point:

- When installing the TO sensor, bring the "UPPER" letters and arrow mark "A" upward.

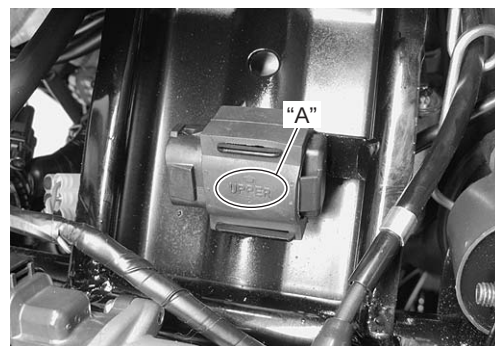

I931H1130006-01

ISC Valve Inspection

B931H21306010

Refer to "DTC "C40" (P0505-H/L): ISC Valve Circuit Malfunction: in Section 1A".

ISC Valve Removal and Installation


B931H21306011

Removal

⚠ CAUTION

Be careful not to disconnect the ISC valve coupler at least 3 seconds after ignition switch is turned to OFF. If the ECM coupler or ISC valve coupler is disconnected within 3 seconds after ignition switch is turned to OFF, there is a possibility of an unusual valve position being written in ECM and causing an error of ISC valve operation.

- 1) Remove the seat. Refer to “Seat Removal and Installation: in Section 9D”.
- 2) Remove the front fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 3) Disconnect the ISC valve coupler (1) and remove the ISC valve (2).

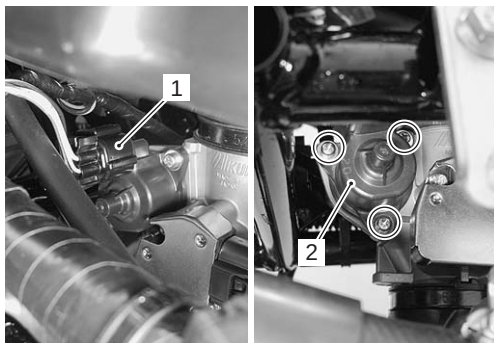

I931H1130007-01

Installation

NOTE


After replacing the ISC valve, turn ON the ignition switch and OFF again.

Install the ISC valve in the reverse order of removal. Pay attention to the following points:

- Install the new O-ring (1).
- Install the ISC valve (2) and tighten the ISC valve mounting screws to the specified torque.

Tightening torque

ISC valve mounting screw: 2 N·m (0.2 kgf-m, 1.5 lbf-ft)

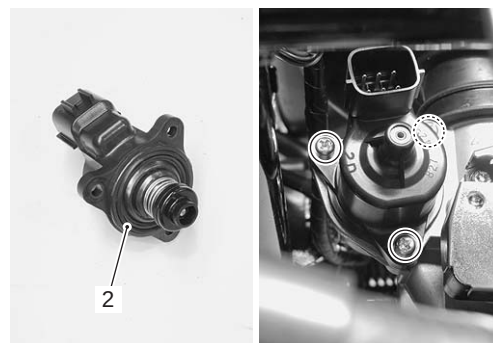

I931H1130008-01

GP Switch Inspection

B931H21306012

Refer to “Gear Position Switch Inspection: in Section 1I”.

GP Switch Removal and Installation

B931H21306013

Refer to “Gear Position (GP) Switch Removal and Installation: in Section 3C”.

Specifications

Service Data

B931H21307001

FI Sensors

Item	Specification		Note
CKP sensor resistance	170 – 250 Ω		
CKP sensor peak voltage	5.0 V and more		When cranking
IAP sensor input voltage	4.5 – 5.5 V		
IAP sensor output voltage	1.78 – 3.35 V at idle speed		
TP sensor input voltage	4.5 – 5.5 V		
TP sensor output voltage	Closed	0.93 – 1.31 V	
	Opened	3.64 – 4.82 V	
ECT sensor input voltage	4.5 – 5.5 V		
ECT sensor output voltage	0.15 – 4.85 V		
ECT sensor resistance	Approx. 2.45 k Ω at 20 °C (68 °F)		
IAT sensor input voltage	4.5 – 5.5 V		
IAT sensor output voltage	1.88 – 3.06 V at 20 °C (68 °F)		
IAT sensor resistance	2.22 – 3.22 k Ω at 20 °C (68 °F)		
TO sensor resistance	19 – 20 k Ω		
TO sensor voltage	Normal	0.4 – 1.4 V	
	Leaning	3.7 – 4.4 V	When leaning 65°
Injector voltage	Battery voltage		
Ignition coil primary peak voltage	80 V and more		When cranking
ISC valve resistance	Approx. 31 k Ω at 20 °C (68 °F)		

Tightening Torque Specifications

B931H21307002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
ECT sensor	18	1.8	13.0	☞ (Page 1C-2)
ISC valve mounting screw	2	0.2	1.5	☞ (Page 1C-4)


Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Special Tool

B931H21308001

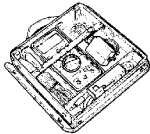
09900–25008 Multi circuit tester set ☞ (Page 1C-3)		
--	---	--

Engine Mechanical

Schematic and Routing Diagram

Throttle Cable Routing Diagram

B931H21402001

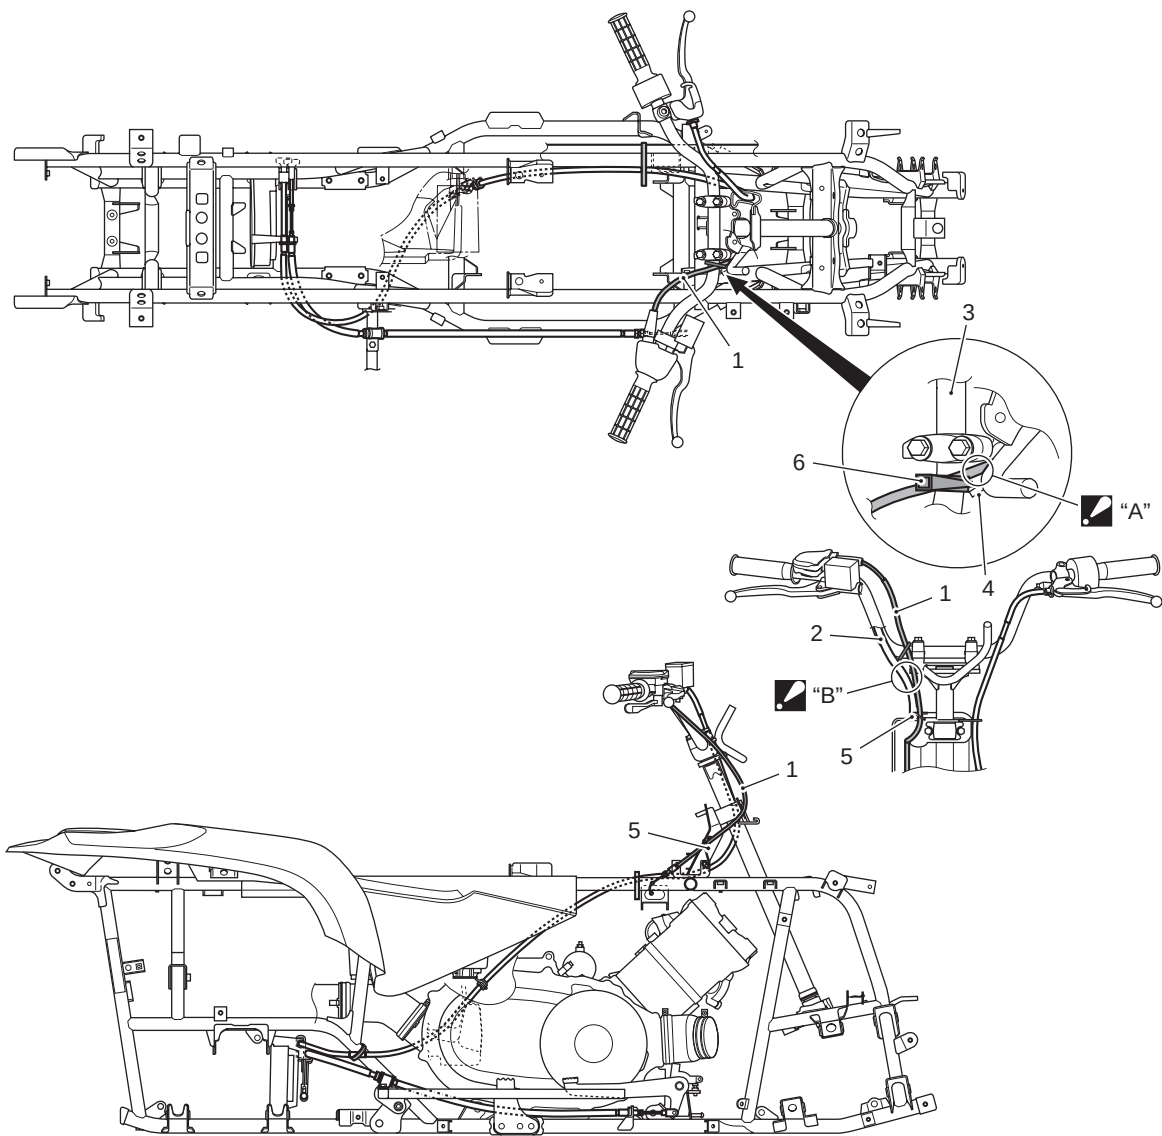

I931H1140114-01

1. Throttle cable	5. Throttle cable guide
2. Brake hose	6. Clamp
3. Handlebar	 "A": Pass through the throttle cable inside of pin.
4. Pin	 "B": Pass through the throttle cable front side of brake hose.

Diagnostic Information and Procedures

Engine Mechanical Symptom Diagnosis

B931H21404001

Refer to “Engine Symptom Diagnosis: in Section 1A”.

Compression Pressure Check

B931H21404002

The compression pressure reading of a cylinder is a good indicator of its internal condition. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

NOTE

- Before checking the engine for compression pressure, make sure that the cylinder head nuts are tightened to the specified torque values and the valves are properly adjusted.
- Make sure that the battery is in fully-charged condition.

- 1) Warm up the engine.
- 2) Remove the seat. Refer to “Seat Removal and Installation: in Section 9D”.
- 3) Disconnect the fuel pump relay coupler (1).




I931H1140002-01

- 4) Remove the spark plug. Refer to “Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H”.
- 5) Install the compression gauge and adaptor in the spark plug hole. Make sure that the connection is tight.

Special tool

-  (A): 09915-64512 (Compression gauge)
 (B): 09913-10750 (Compression gauge adaptor)

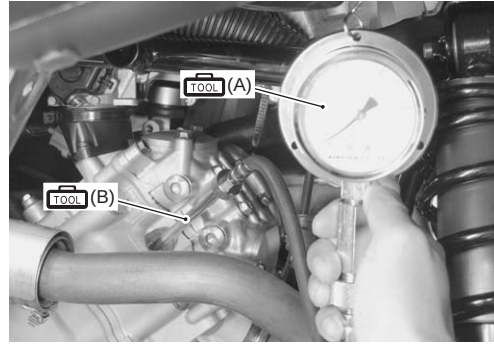

I931H1140003-01

- 6) Keep the throttle grip in the fully-opened position.



I931H1140004-01

- 7) Press the starter button and crank the engine for a few seconds. Record the maximum gauge reading as the cylinder compression.

Compression pressure specification

Standard
Approx. 1 000 kPa (10.0 kgf/cm ² , 142 psi) (Automatic decompression actuated)

Low compression pressure can indicate any of the following conditions:

- Excessively worn cylinder wall
- Worn piston or piston rings
- Piston rings stuck in grooves
- Poor valve seating
- Ruptured or otherwise defective cylinder head gasket

- 8) After checking the compression pressure, reinstall the removed parts.
- 9) After connecting the fuel pump relay coupler, clear the DTC using SDS tool. Refer to “Use of SDS Diagnosis Reset Procedures: in Section 1A”.

Repair Instructions

Engine Components Removable with the Engine in Place

B931H21406001

Engine components which can be removed while the engine is installed on the frame are as follows. For the installing and removing procedures, refer to respective paragraphs describing each component.

Center of Engine

Item	Removal	Inspection	Installation
Starter motor	Refer to “Starter Motor Removal and Installation: in Section 1I” .	Refer to “Starter Motor Related Parts Inspection: in Section 1I” .	Refer to “Starter Motor Removal and Installation: in Section 1I” .
Air cleaner	Refer to “Air Cleaner Element Removal and Installation (Page 1D-5)”.	Refer to “Air Cleaner Element Inspection and Cleaning (Page 1D-5)”.	Refer to “Air Cleaner Element Removal and Installation (Page 1D-5)”.
Oil filter	Refer to “Engine Oil and Filter Replacement: in Section 0B” .	—	Refer to “Engine Oil and Filter Replacement: in Section 0B” .
Exhaust pipe/Muffler	Refer to “Exhaust Pipe / Muffler Removal and Installation: in Section 1K” .	Refer to “Exhaust System Inspection: in Section 1K” .	Refer to “Exhaust Pipe / Muffler Removal and Installation: in Section 1K” .
Throttle body	Refer to “Throttle Body Removal and Installation (Page 1D-9)”.	Refer to “Throttle Body Inspection and Cleaning (Page 1D-13)”.	Refer to “Throttle Body Removal and Installation (Page 1D-9)”.
Cylinder head	Refer to “Engine Top Side Disassembly (Page 1D-18)”.	Refer to “Cylinder Head Cover Related Parts Inspection (Page 1D-37)”.	Refer to “Engine Top Side Assembly (Page 1D-22)”.
Cam chain tension adjuster	Refer to “Engine Top Side Disassembly (Page 1D-18)”.	Refer to “Cam Chain Tension Adjuster Inspection (Page 1D-31)”.	Refer to “Engine Top Side Assembly (Page 1D-22)”.
Cylinder head cover	Refer to “Valve Clearance Inspection and Adjustment: in Section 0B” .	—	Refer to “Engine Top Side Assembly (Page 1D-22)”.
Camshaft	Refer to “Engine Top Side Disassembly (Page 1D-18)”.	Refer to “Camshaft Inspection (Page 1D-29)”.	Refer to “Engine Top Side Assembly (Page 1D-22)”.
Valve	Refer to “Cylinder Head Disassembly and Assembly (Page 1D-38)”.	Refer to “Cylinder Head Cover Related Parts Inspection (Page 1D-37)”.	Refer to “Cylinder Head Disassembly and Assembly (Page 1D-38)”.
Cylinder	Refer to “Engine Top Side Disassembly (Page 1D-18)”.	Refer to “Cylinder Inspection (Page 1D-32)”.	Refer to “Engine Top Side Assembly (Page 1D-22)”.
Piston	Refer to “Engine Top Side Disassembly (Page 1D-18)”.	Refer to “Piston and Piston Ring Inspection (Page 1D-34)”.	Refer to “Engine Top Side Assembly (Page 1D-22)”.

Engine Right Side

Item	Removal	Inspection	Installation
Spark plug	Refer to “Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H” .	Refer to “Spark Plug Inspection and Cleaning: in Section 1H” .	Refer to “Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H” .
Fixed drive face	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .	Refer to “Movable / Fixed Drive Face Parts Inspection: in Section 5A” .	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .
Movable drive face	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .	Refer to “Movable / Fixed Drive Face Parts Inspection: in Section 5A” .	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .
Clutch housing/Clutch shoe	Refer to “Clutch Shoe Removal and Installation: in Section 5A” .	Refer to “Clutch Related Parts Inspection: in Section 5A” .	Refer to “Clutch Shoe Removal and Installation: in Section 5A” .
Movable driven face assembly	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .	Refer to “Movable / Fixed Driven Face Parts Inspection: in Section 5A” .	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .
Drive V-belt	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .	Refer to “Drive V-belt Inspection: in Section 5A” .	Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” .
Gear position switch	Refer to “Gear Position (GP) Switch Removal and Installation: in Section 3C” .	Refer to “Gear Position Switch Inspection: in Section 1I” .	Refer to “Gear Position (GP) Switch Removal and Installation: in Section 3C” .

Engine Left Side


Item	Removal	Inspection	Installation
Generator	Refer to “Generator Removal and Installation: in Section 1J” .	Refer to “Generator Inspection: in Section 1J” .	Refer to “Generator Removal and Installation: in Section 1J” .
Starter clutch	Refer to “Starter Idle Gear / Starter Clutch Removal and Installation: in Section 1I” .	Refer to “Starter Related Parts Inspection: in Section 1I” .	Refer to “Starter Idle Gear / Starter Clutch Removal and Installation: in Section 1I” .
Starter idle gear	Refer to “Engine Bottom Side Disassembly (Page 1D-46)”.	—	Refer to “Engine Bottom Side Assembly (Page 1D-52)”.
Balancer driven gear	Refer to “Engine Bottom Side Disassembly (Page 1D-46)”.	—	Refer to “Engine Bottom Side Assembly (Page 1D-52)”.
Oil pump driven gear	Refer to “Oil Pump Removal and Installation: in Section 1E” .	—	Refer to “Oil Pump Removal and Installation: in Section 1E” .
Oil pump	Refer to “Oil Pump Removal and Installation: in Section 1E” .	Refer to “Oil Pump Inspection: in Section 1E” .	Refer to “Oil Pump Removal and Installation: in Section 1E” .
CKP sensor	Refer to “Generator Removal and Installation: in Section 1J” .	Refer to “CKP Sensor Inspection: in Section 1H” .	Refer to “Generator Removal and Installation: in Section 1J” .
Water pump	Refer to “Water Pump Removal and Installation: in Section 1F” .	Refer to “Water Pump Related Parts Inspection: in Section 1F” .	Refer to “Water Pump Removal and Installation: in Section 1F” .
Speed sensor	Refer to “Speed Sensor Removal and Installation: in Section 9C” .	Refer to “Speed Sensor Inspection: in Section 9C” .	Refer to “Speed Sensor Removal and Installation: in Section 9C” .

Air Cleaner Element Removal and Installation

B931H21406002

Removal

- 1) Remove the seat. Refer to **“Seat Removal and Installation: in Section 9D”**.
- 2) Remove the air cleaner box cover. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- 3) Remove the air cleaner element bolt (1).
- 4) Remove the air cleaner element (2).

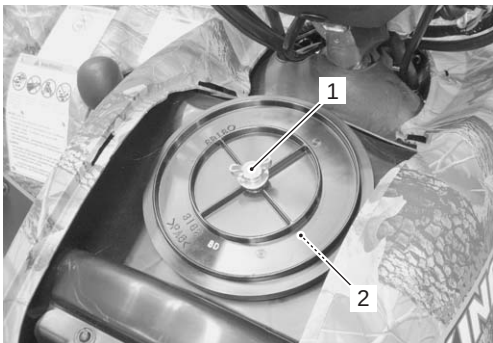

I931H1140005-02

Installation

Installation in the reverse order of removal.


Air Cleaner Element Inspection and Cleaning

B931H21406003

Refer to **“Air Cleaner Element Inspection and Cleaning: in Section 0B”**.

Air Cleaner Inlet Sheet Construction

B931H21406004

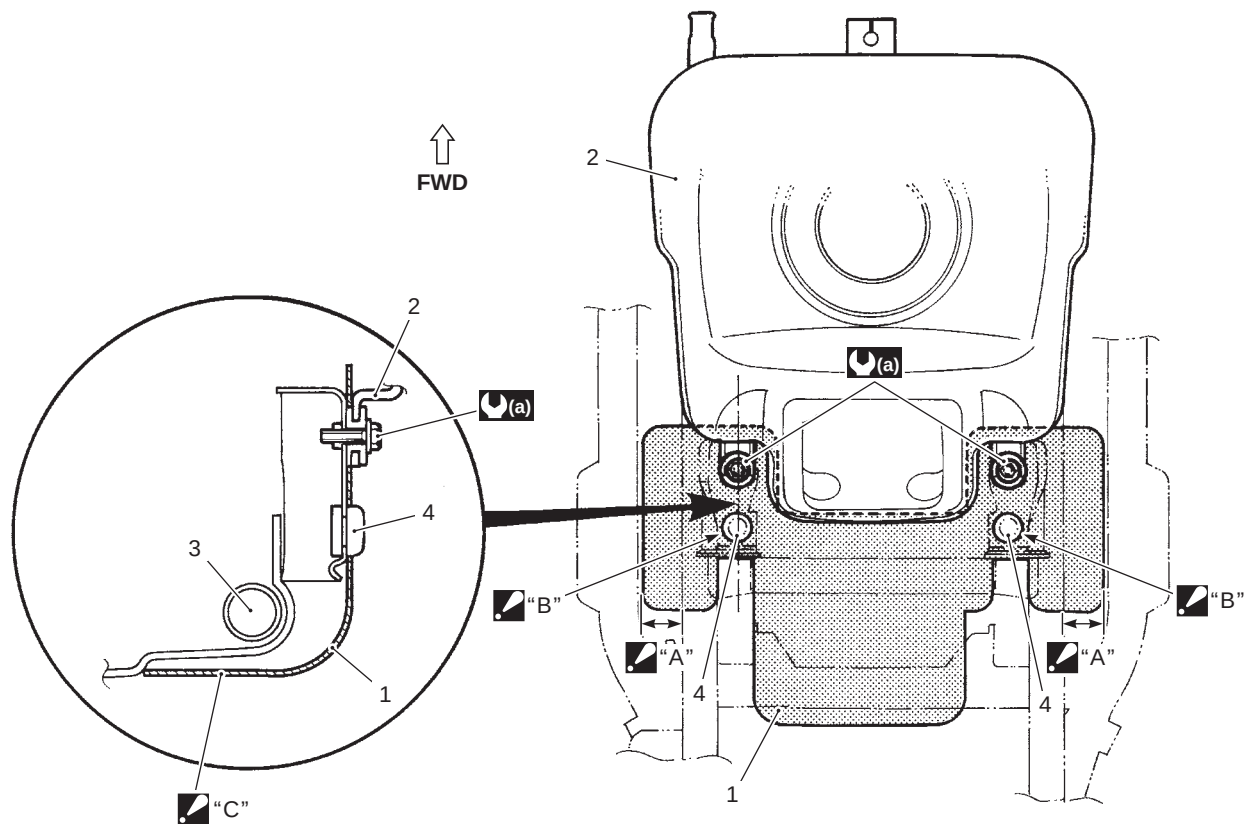

I931H1140288-01

1. Air cleaner inlet sheet	⚡ "A": Insert the air cleaner inlet sheet between the rear fender and frame.
2. Air cleaner box	⚡ "B": Align the hole of the air cleaner inlet sheet and cushion.
3. Frame	⚡ "C": Set the air cleaner sheet into the battery box.
4. Cushion	⚡ (a) : 4.5 N-m (0.45 kgf-m, 3.0 lbf-ft)

Air Cleaner Inlet Sheet Removal and Installation

B931H21406005

Refer to "Air Cleaner Inlet Sheet Construction (Page 1D-6)".


Air Cleaner Box Removal and Installation

B931H21406006


Removal

- 1) Remove the seat, side covers and air cleaner box cover. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".

2) Remove the air cleaner box mounting bolts (1).

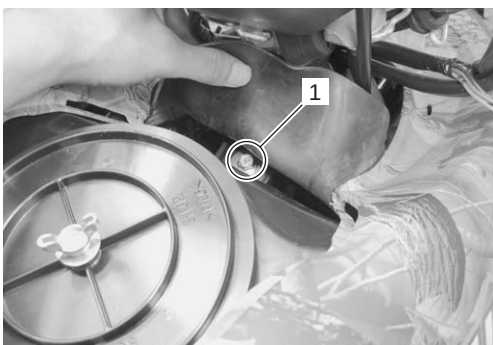


I931H1140006-01

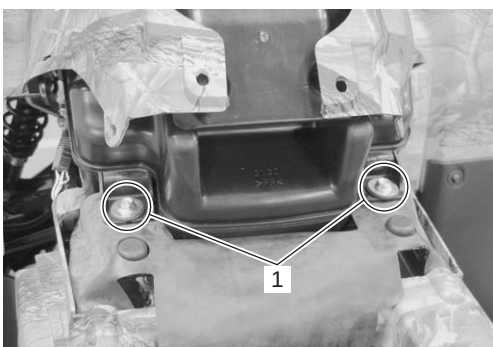

I931H1140007-01

3) Remove the PCV hose (2) and loosen the throttle body clamp screw (3).

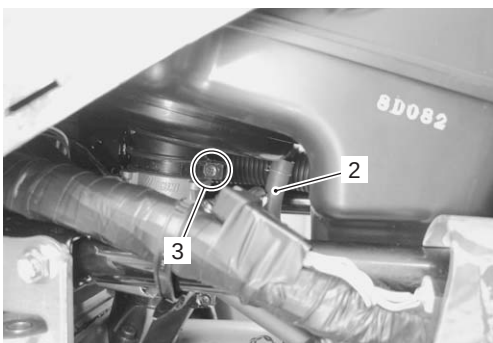

I931H1140008-01

4) Remove the air cleaner box (4).



I931H1140009-01


Installation

Install the air cleaner box in the reverse order of removal. Pay attention to the following points:

- Install the air cleaner box (1) and tighten the throttle body clamp screw. Refer to "Throttle Body Construction (Page 1D-9)".
- Tighten the air cleaner box mounting bolts to the specified torque.

Tightening torque

Air cleaner box mounting bolt (a): 4.5 N·m (0.45 kgf-m, 3.0 lbf-ft)

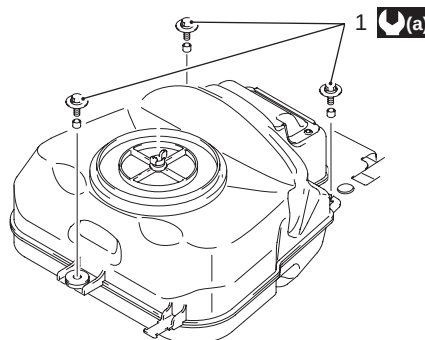

I931H1140289-02

- Install the removed parts.

Throttle Cable Removal and Installation


B931H21406007

Removal

- 1) Remove the air cleaner box. Refer to "Air Cleaner Box Removal and Installation (Page 1D-6)".
- 2) Remove the right throttle lever case (1) and throttle cable cover (2).



I931H1140010-01

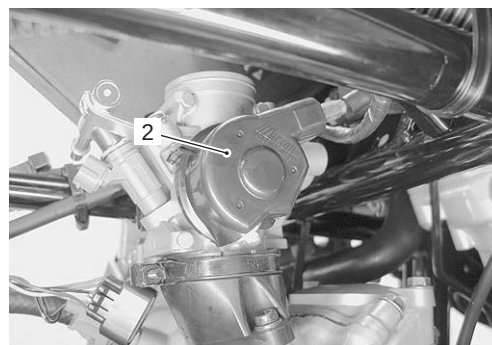

I931H1140011-01

3) Remove the throttle cable as shown in the cable routing diagram. Refer to “Throttle Cable Routing Diagram (Page 1D-1)”.



I931H1140012-01

Installation

Install the throttle cables in the reverse order of removal. Pay attention to the following points:

- Install the throttle cable as shown in the cable routing diagram. Refer to “Throttle Cable Routing Diagram (Page 1D-1)”.
- Check the throttle cable play and proper operation.

Throttle Cable Inspection

B931H21406008

Check that the throttle lever moves smoothly from full open to full close. If it does not move smoothly, lubricate the throttle cable.


Throttle Cable Play Inspection and Adjustment

B931H21406009

Refer to “Throttle Cable Play Inspection and Adjustment: in Section 0B”.

Throttle Body Components

B931H21406010

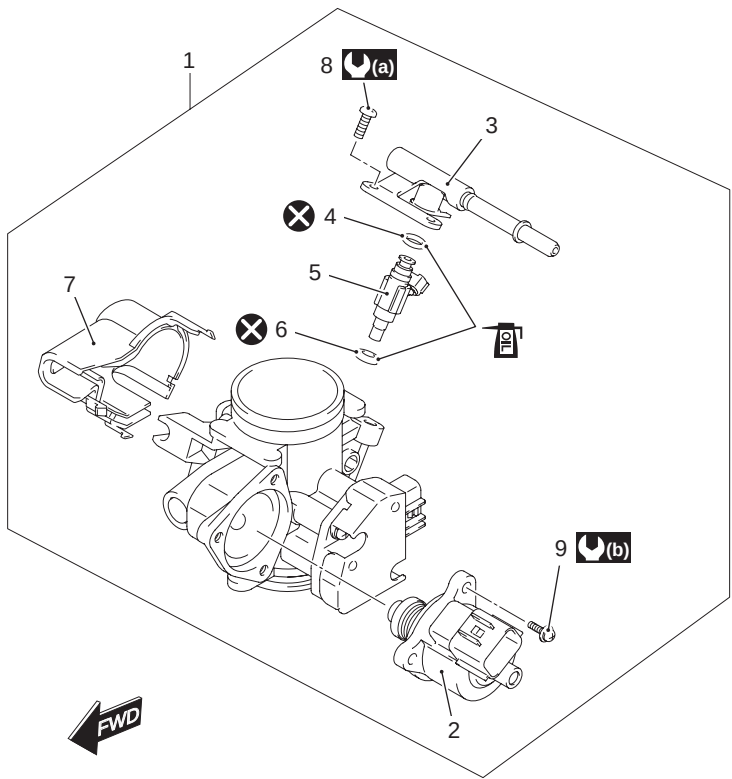


I931H1140290-03

1. Throttle body assembly	6. Cushion seal	(b) : 2 N·m (0.2 kgf·m, 1.5 lbf·ft)
2. ISC valve	7. Throttle cable cover	Apply engine oil.
3. Fuel delivery pipe	8. Fuel delivery pipe mounting screw	Do not reuse.
4. O-ring	9. ISC valve mounting screw	
5. Fuel injector	(a) : 5 N·m (0.5 kgf·m, 3.5 lbf·ft)	

Throttle Body Construction

B931H21406011

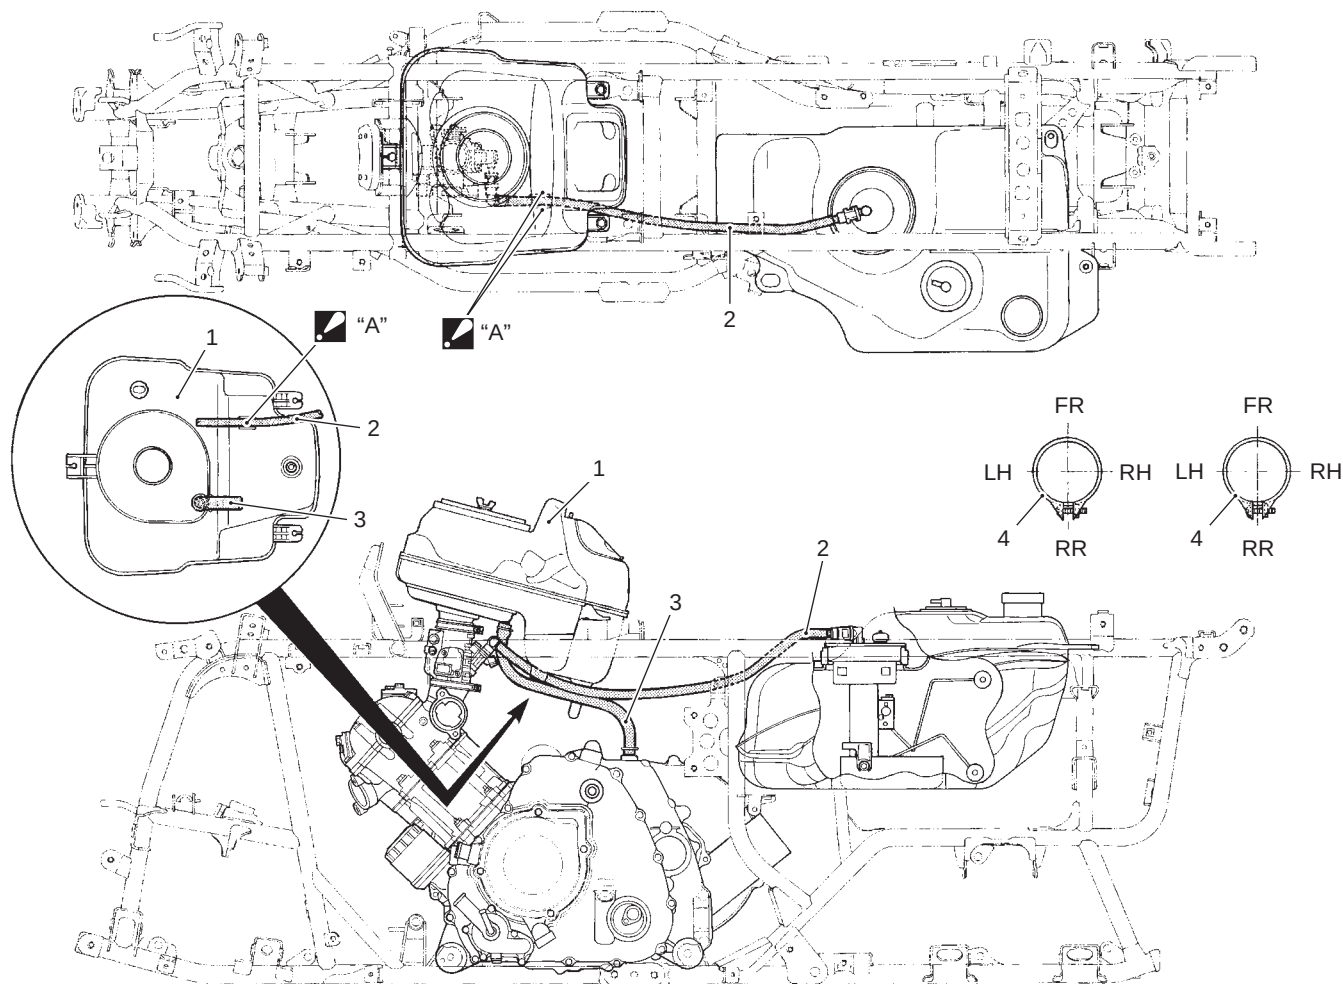

I931H1140291-02

1. Air cleaner box	4. Clamp
2. Fuel hose	“A”: Pass through the fuel hose between air cleaner guide ribs.
3. PCV hose	

Throttle Body Removal and Installation


B931H21406012

Removal

- 1) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation (Page 1D-6)”.
- 2) Place a rug under the fuel feed hose (1) and disconnect the fuel feed hose (1) from the fuel delivery pipe.

⚠ WARNING


**Gasoline is highly flammable and explosive.
Keep heat, spark and flame away.**

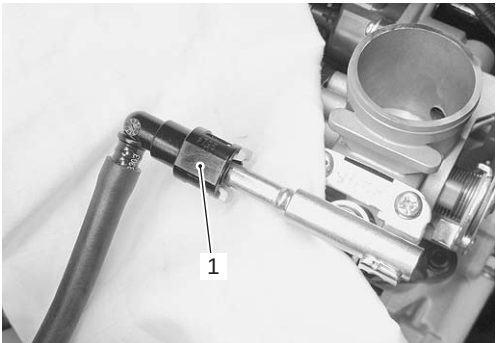

I931H1140013-01


1D-10 Engine Mechanical:

- 3) Disconnect the fuel injector coupler (2) and TP/IAP/IAT sensor coupler (3).
- 4) Disconnect the ISC valve coupler (4).

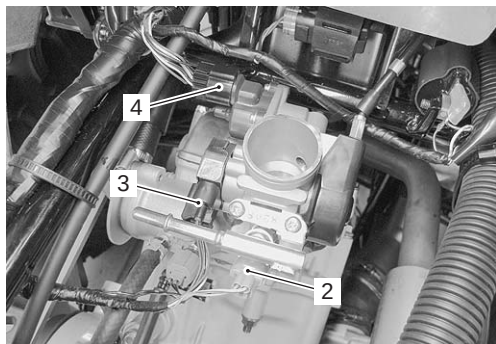

I931H1140014-02

- 5) Remove the throttle cable cover (5).

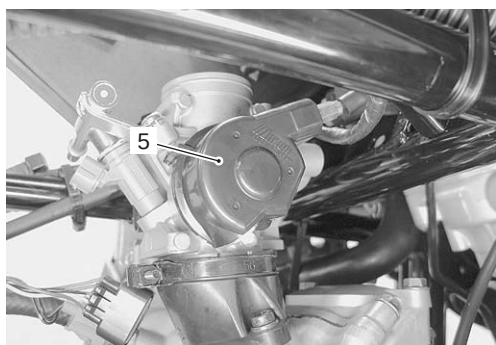


I931H1140015-01

- 6) Disconnect the throttle cable (6).


⚠ CAUTION

After disconnecting the throttle cables, do not snap the throttle valve from full open to full close. It may cause damage to the throttle valve and throttle body.

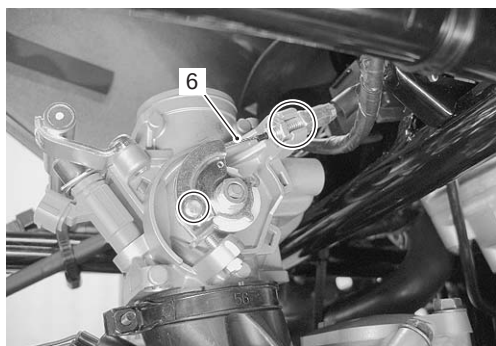

I931H1140016-01

- 7) Loosen the throttle body clamp screw and remove the throttle body assembly.

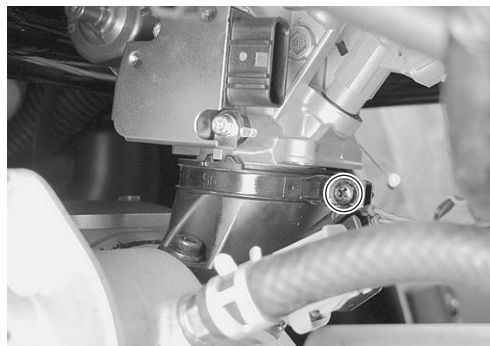

I931H1140017-01

Installation

NOTE


When replacing the throttle body, turn ON the ignition switch and turn OFF again.

Install the throttle body in the reverse order of removal. Pay attention to the following points:

- Install the throttle body.

NOTE

When installing the throttle body, fit the concave part "A" of the intake pipe onto the convex part "B" of the throttle body.

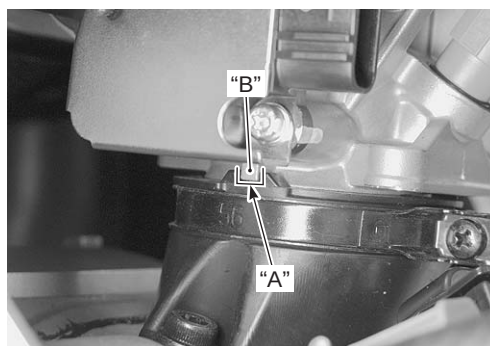


I931H1140018-01

- Tighten the throttle body clamp screws. Refer to "Throttle Body Construction (Page 1D-9)".



I931H1140019-01

- Connect the throttle cable (1).

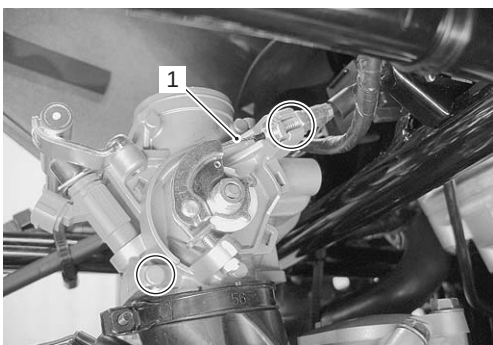

I931H1140020-01

- After installed throttle cable, adjust the throttle cable play. Refer to **“Throttle Cable Play Inspection and Adjustment: in Section 0B”**.

Throttle Body Disassembly and Assembly

B931H21406013

Refer to “Throttle Body Removal and Installation (Page 1D-9)”.


Disassembly

- 1) Remove the fuel delivery pipe assembly (1) by removing its mounting screws.



I931H1140021-01

- 2) Remove the fuel injector (2).

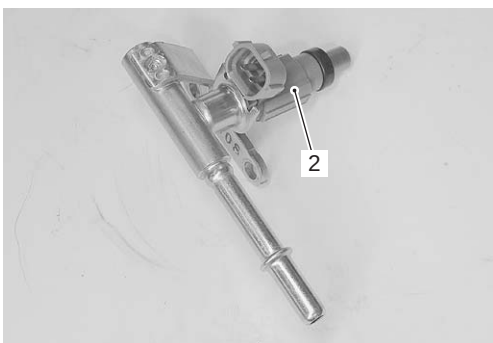

I931H1140022-02

- 3) Remove the ISC valve (3).

⚠ CAUTION


Because the O-ring is not available as spare part, the ISC valve should not be removed unless necessary.



I931H1140023-02

⚠ CAUTION

Never remove the TP/IAP/IAT sensor (4).

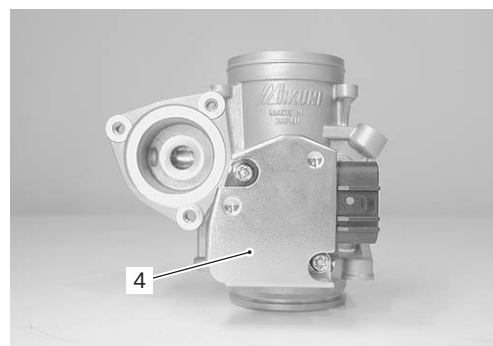

I931H1140024-02

⚠ CAUTION


Never remove the throttle valve (5).



I931H1140025-02

⚠ CAUTION

- Do not loosen the lock-nut (6).
- The fast idle screw (7) is factory-adjusted at the time of delivery and therefore avoid removing or turning it unless otherwise necessary.

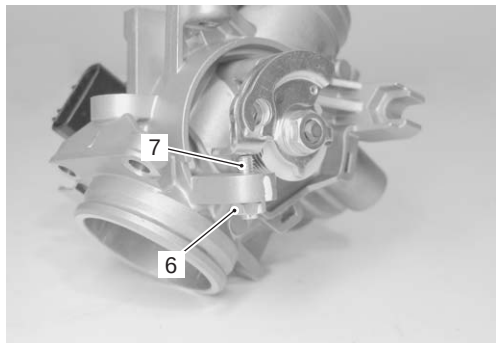

I931H1140026-02

Assembly

Assembly is the throttle body in the reverse order of removal. Pay attention to the following points:

- Apply a thin coat of engine oil to the O-ring and install the ISC valve.

⚠ CAUTION

Normally, the removed O-ring must be replaced with a new one. However, this O-ring is not available for the spare parts. If it is found to be damaged, replace the ISC valve assembly with new one.

NOTE

After replacing the ISC valve and installing the throttle body, turn ON the ignition switch and turn OFF again.



I931H1140027-01


- Tighten the ISC valve mounting screws to the specified torque.

Special tool

TOOL : 09930-11950 (Torx wrench (5 mm))

Tightening torque

ISC valve mounting screw (a): 2 N·m (0.2 kgf-m, 1.5 lbf-ft)

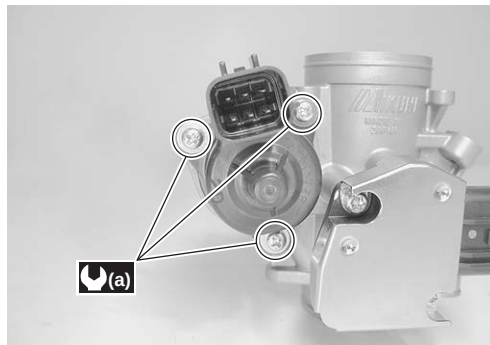


I931H1140028-01

- Apply a thin coat of engine oil to the new cushion seal (1) and the O-ring (2).

⚠ CAUTION

Replace the cushion seal and O-ring with the new ones.

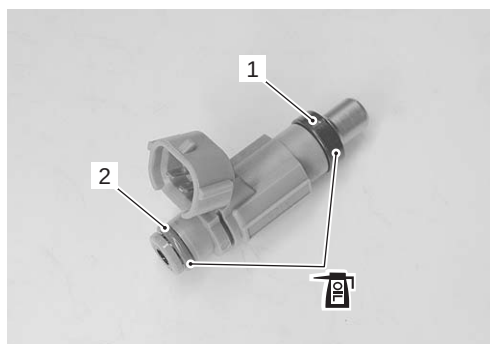


I931H1140029-01

- Install the fuel injector (3) by pushing it straight to the throttle body.

⚠ CAUTION

Never turn the injector (3) while pushing it.

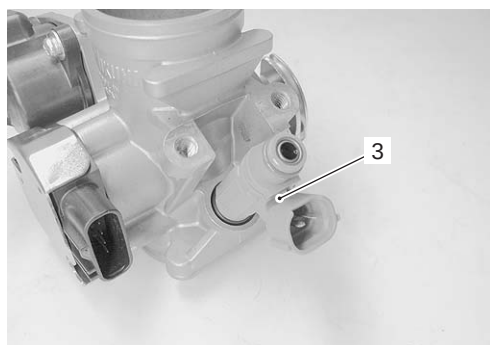

I931H1140030-01

- Install the fuel delivery pipe assembly (4) to the fuel injector.


⚠ CAUTION

Never turn the fuel injector while installing them.

- Tighten the fuel delivery pipe mounting screws to the specified torque.

Tightening torque

Fuel delivery pipe mounting screw (b): 5 N·m (0.5 kgf-m, 3.5 lbf-ft)

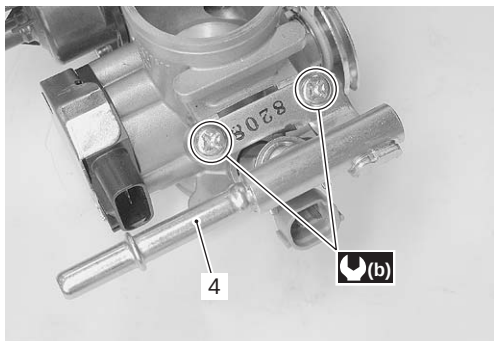

I931H1140031-02

Throttle Body Inspection and Cleaning

B931H21406014

Refer to "Throttle Body Disassembly and Assembly (Page 1D-11)".

Cleaning

⚠ WARNING

Some carburetor cleaning chemicals, especially dip-type soaking solutions, are very corrosive and must be handled carefully. Always follow the chemical manufacturer's instructions on proper use, handling and storage.


- Clean passageways with a clean rag.

⚠ CAUTION

- **Do not use compressed air to clean passageways.**
- **Do not use wire to clean passageways.** Wire can damage passageways. If the components cannot be cleaned with a spray cleaner it may be necessary to use a dip-type cleaning solution and allow them to soak. Always follow the chemical manufacturer's instructions for proper use and cleaning of the throttle body components. Do not apply carburetor cleaning chemicals to the rubber and plastic materials.

Inspection

Move the throttle valve by hand to inspect it if operating smoothly.

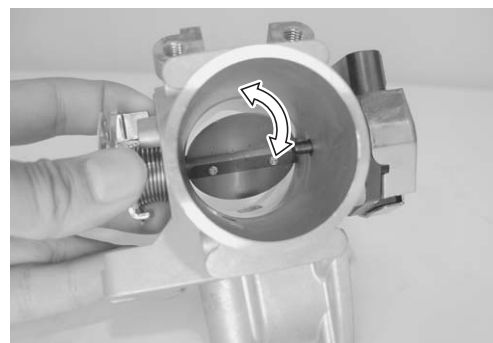

I931H1140032-01

ISC Valve Visual Inspection

Check the ISC valve for carbon deposits or other damage. If carbon is deposited, remove it with a brush and clean with a compressed air.

⚠ CAUTION

Normally, the removed O-ring must be replaced with a new one. However, this O-ring is not available for the spare parts. If it is found to be damaged, replace the ISC valve assembly with new one.



I931H1140033-01

Engine Assembly Removal

B931H21406015

Before taking the engine out of the frame, wash the engine using a steam cleaner. Engine removal is sequentially explained in the following steps:


- 1) Remove the engine under cover and rear under cover. Refer to "**Under Cover Removal and Installation: in Section 9D**".
- 2) Drain engine oil. Refer to "**Engine Oil and Filter Replacement: in Section 0B**".
- 3) Drain engine coolant. Refer to "**Cooling System Inspection: in Section 0B**".
- 4) Remove the seat. Refer to "**Seat Removal and Installation: in Section 9D**".

1D-14 Engine Mechanical:

5) Remove the battery.

⚠ CAUTION

When disconnecting the battery lead wires, be sure to disconnect the battery (-) lead wire first.

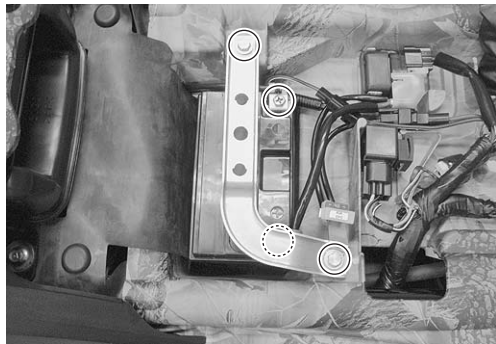


I931H1140034-01

6) Remove the following parts from the vehicle.


- Inner fender. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- Mud guard (left and right). Refer to **“Rear Side Exterior Parts Removal and Installation: in Section 9D”**.
- Front fender. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- Rear fender. Refer to **“Rear Side Exterior Parts Removal and Installation: in Section 9D”**.

7) Disconnect the spark plug cap (1).

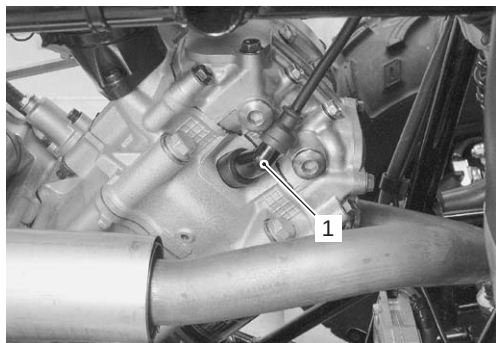


I931H1140035-01

8) Disconnect the starter motor lead wire (2) and ground lead wire (3).

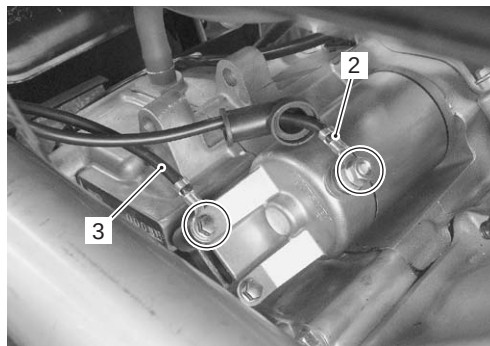


I931H1140036-02

9) Disconnect the radiator inlet hose (4) and outlet hose (5).

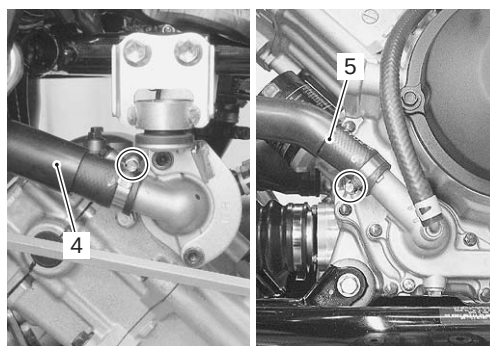


I931H1140037-01

10) Remove the air cleaner box. Refer to **“Air Cleaner Box Removal and Installation (Page 1D-6)”**.

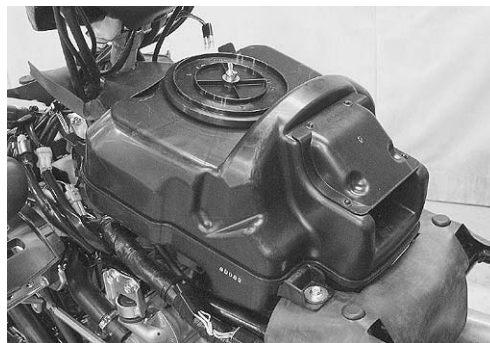


I931H1140038-01

- 11) Remove the throttle body assembly (6). Refer to "Throttle Body Removal and Installation (Page 1D-9)".
- 12) Disconnect the ECT sensor coupler (7).

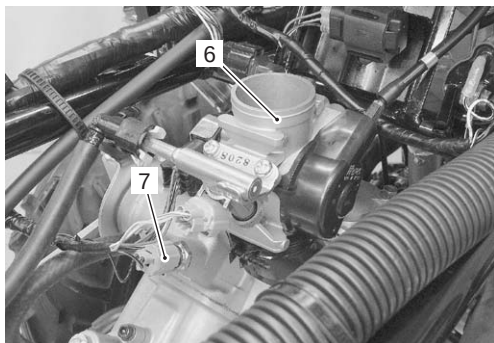


I931H1140039-01

- 13) Remove the gearshift arm (8) and shift lever assembly (9).

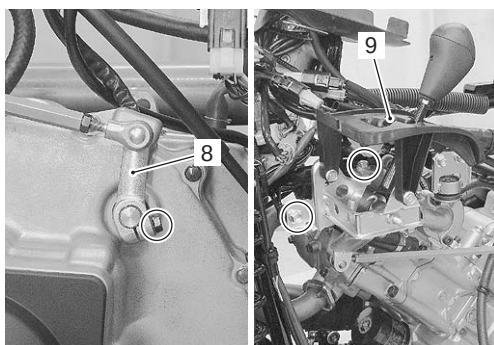


I931H1140040-01

- 14) Disconnect the speed sensor coupler (10) and clamp.

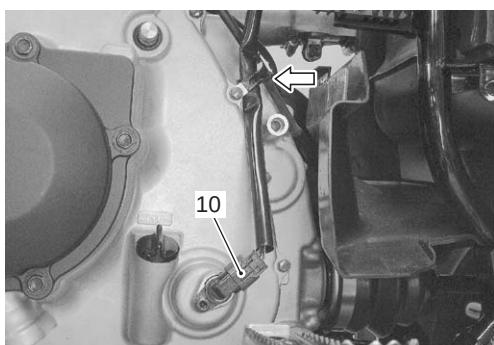


I931H1140041-01

- 15) Disconnect the generator coupler (11), CKP sensor coupler (12) and GP switch coupler (13).

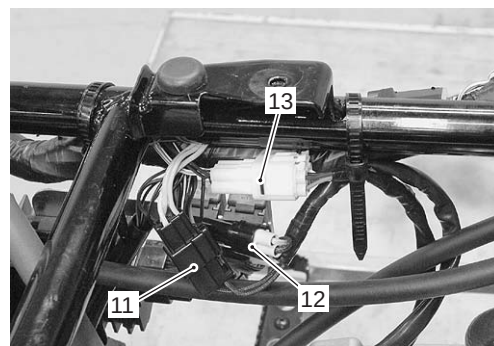


I931H1140042-01

- 16) Remove the inlet cooling duct assembly (14).
- 17) Disconnect the outlet cooling duct connector (15).

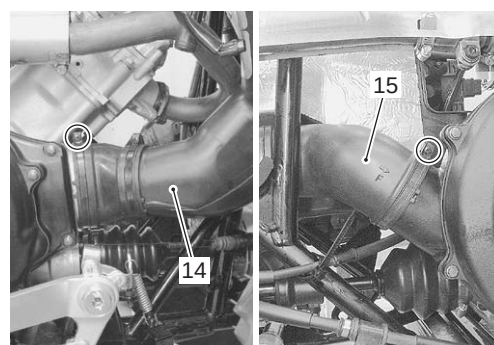


I931H1140043-01

- 18) Remove the muffler (16) and exhaust pipe (17). Refer to "Exhaust Pipe / Muffler Removal and Installation: in Section 1K".

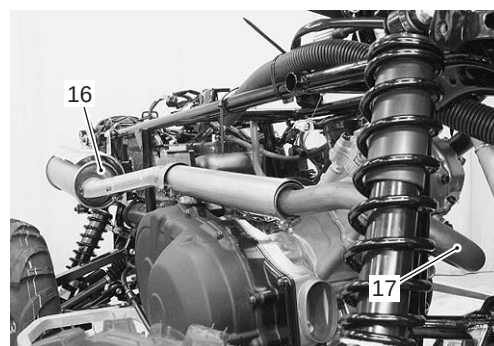

I931H1140044-02

- 19) Remove the rear brake cable clamp bolt (18).

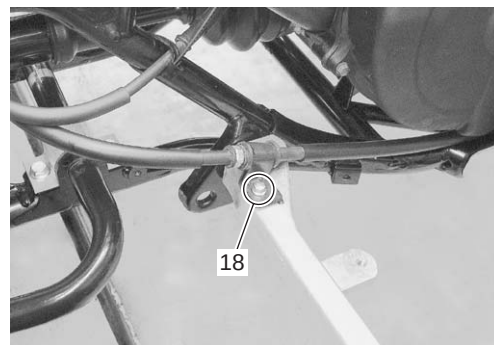

I931H1140045-01


1D-16 Engine Mechanical:

20) Remove the right footrest (19).



I931H1140046-01

21) Remove the rear brake pedal (20). Refer to **“Rear Brake Pedal Removal and Installation: in Section 4A”**.

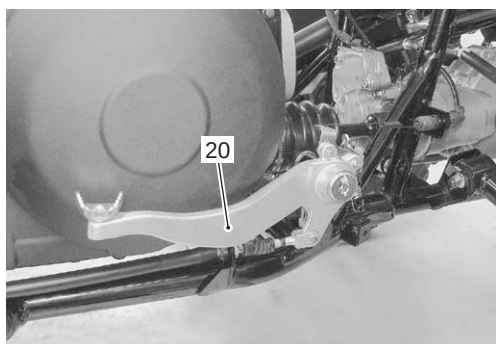

I931H1140047-01


22) Remove the front differential mounting bolts.



I931H1140048-01


23) Slide the front differential assembly (21) forward.

24) Remove the spring (22) and front propeller shaft (23).

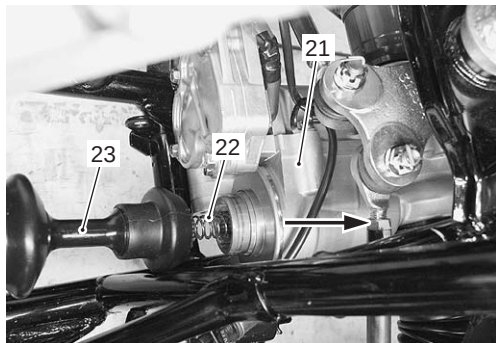


I931H1140049-02

25) Remove the final gear assembly (24) and rear propeller shaft (25). Refer to **“Final Gear Assembly Removal and Installation: in Section 3B”** and **“Rear Propeller Shaft Removal and Installation: in Section 3D”**.

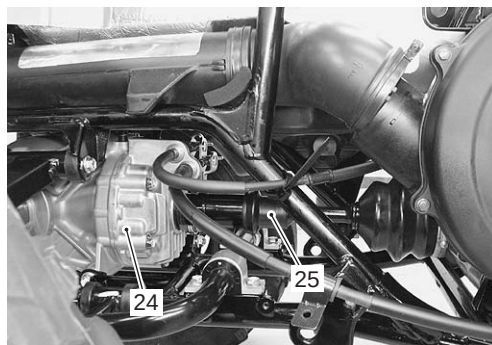


I931H1140284-01

26) Remove the engine mounting dumper stopper (26).

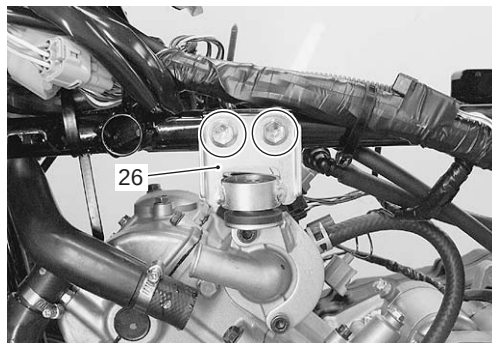

I931H1140050-01

27) Remove the engine mounting bolts and nuts.

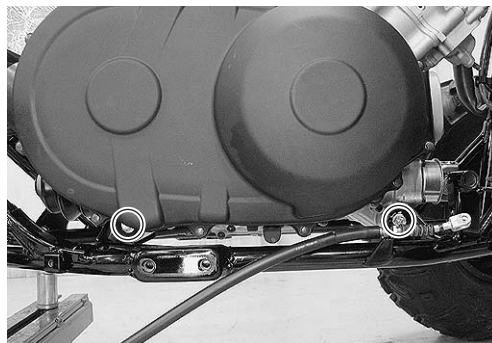

I931H1140051-01

28) Remove the engine from the right side.

⚠ WARNING

Care should be taken not to drop the engine accidentally when the engine mounting bolts and nuts are removed.

Engine Assembly Installation

B931H21406016

Reinstall the engine in the reverse order of engine removal. Pay attention to the following points:


- Tighten the engine mounting nuts (1) to the specified torque.

Tightening torque

Engine mounting nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)


NOTE

The engine mounting nuts are self-locking. Once the nuts have been removed, they are no longer of any use.

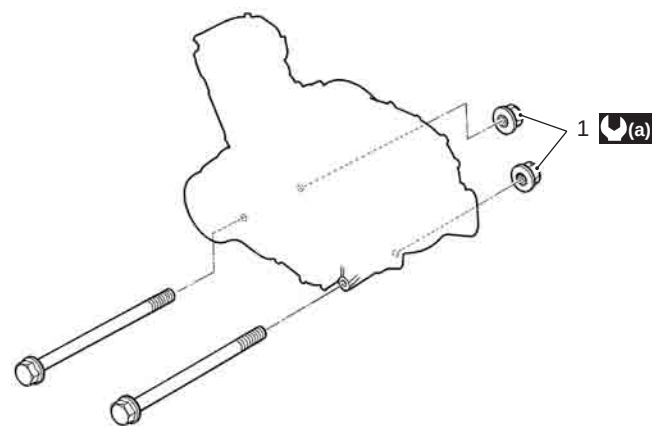

I931H1140052-01

- When installing the engine mounting damper stopper (2), keep that the clearance are equal.

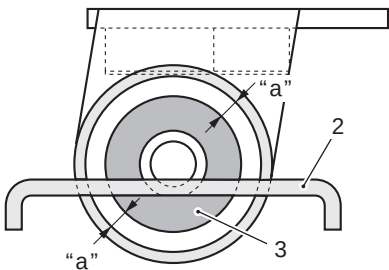

I931H1140054-01

2. Engine mounting damper stopper	"a": Clearance
3. Damper	

- Tighten the engine mounting damper stopper bolts (4) to the specified torque.

Tightening torque

Engine mounting damper stopper bolt (b): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)



I931H1140055-01

- Install the rear propeller shaft and final gear assembly. Refer to "Rear Propeller Shaft Removal and Installation: in Section 3D" and "Final Gear Assembly Removal and Installation: in Section 3B".
- Install the front propeller shaft and front differential assembly. Refer to "Front Drive (Differential) Assembly Removal and Installation: in Section 3B".
- Install the rear brake pedal. Refer to "Rear Brake Pedal Removal and Installation: in Section 4A".
- Install the right footrest and rear brake cable clamp. Refer to "Footrest Removal and Installation: in Section 9E".
- Install the exhaust pipe and muffler. Refer to "Exhaust Pipe / Muffler Removal and Installation: in Section 1K".
- Install the shift lever assembly. Refer to "Shift Lever Assembly Removal and Installation: in Section 5A".
- Install the throttle body assembly. Refer to "Throttle Body Removal and Installation (Page 1D-9)".
- After remounting the engine, route the wiring harness, cable and hoses properly. Refer to "Wiring Harness Routing Diagram: in Section 9A", "Throttle Cable Routing Diagram (Page 1D-1)" and "Water Hose Routing Diagram: in Section 1F".
- Pour engine coolant and engine oil. Refer to "Cooling System Inspection: in Section 0B" and "Engine Oil and Filter Replacement: in Section 0B".

1D-18 Engine Mechanical:

- After finishing the engine installation, check the following items:
 - Throttle cable play
Refer to **“Throttle Cable Play Inspection and Adjustment: in Section 0B”**.
 - Rear brake cable play
Refer to **“Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”**.
 - Parking brake cable play
Refer to **“Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”**.
 - Smooth operation of transfer gearshift lever
Refer to **“Shift Rod Adjustment: in Section 5A”**.
 - Engine oil and engine coolant leakage
Refer to **“Cooling Circuit Inspection: in Section 1F”**.

Engine Top Side Disassembly


B931H21406017

It is unnecessary to remove the engine assembly from the frame when servicing the engine top side.

CAUTION

Identify the position of each removed part.
Organize the parts in their respective groups (e.g., intake, exhaust) so that they can be reinstalled in their original positions.


- 1) Drain engine coolant. Refer to **“Cooling System Inspection: in Section 0B”**.
- 2) Remove the seat. Refer to **“Seat Removal and Installation: in Section 9D”**.
- 3) Disconnect the battery (–) lead wire.

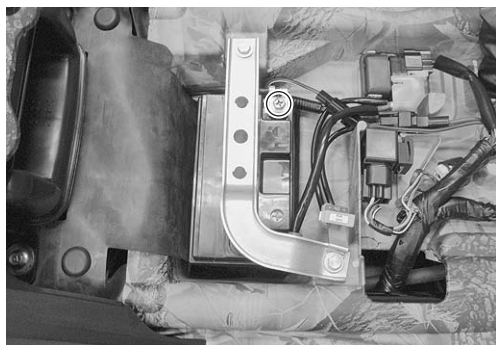

I931H1140056-01

- 4) Remove the front fender and mud guards. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”** and **“Rear Side Exterior Parts Removal and Installation: in Section 9D”**.


- 5) Remove the shift lever assembly (1). Refer to **“Shift Lever Assembly Removal and Installation: in Section 5A”**.
- 6) Remove the air cleaner box (2). Refer to **“Air Cleaner Box Removal and Installation (Page 1D-6)”**.
- 7) Remove the throttle body (3). Refer to **“Throttle Body Removal and Installation (Page 1D-9)”**.
- 8) Disconnect the ECT sensor coupler (4).

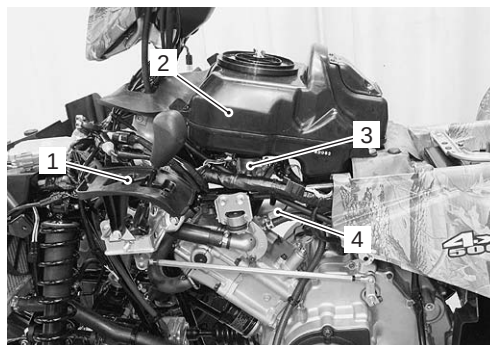

I931H1140057-01

Engine Mounting Damper Stopper


- 1) Remove the engine mounting damper stopper (1).

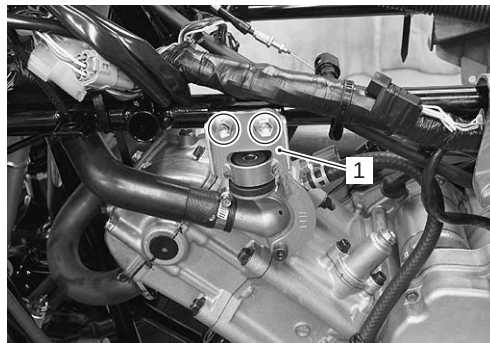

I931H1140058-01

Water Hose


- 1) Disconnect the radiator inlet hose (1) and water bypass hose (2).

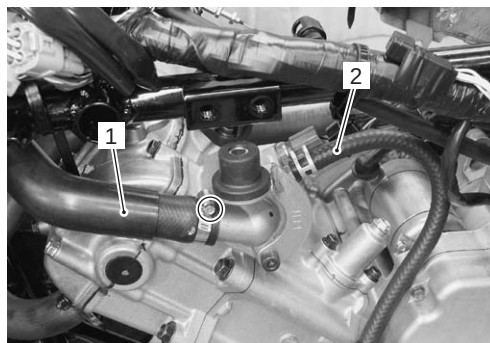

I931H1140059-01

Exhaust Pipe


Remove the exhaust pipe (1). Refer to **“Exhaust Pipe / Muffler Removal and Installation: in Section 1K”**.

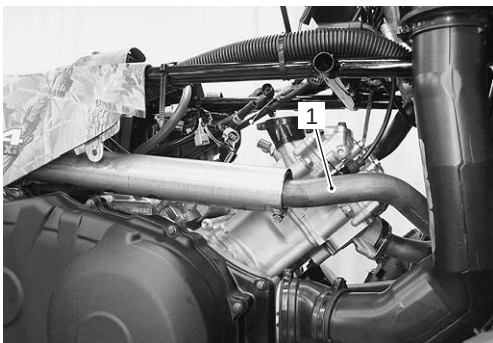

I931H1140060-01

Spark Plug Cap / Spark Plug


Remove the spark plug cap and spark plug. Refer to **“Spark Plug Cap and Spark Plug Removal and Installation: in Section 1H”**.

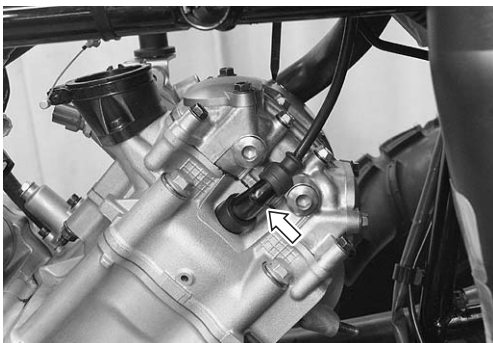

I931H1140061-01

Recoil Cover


Remove the recoil cover (1).

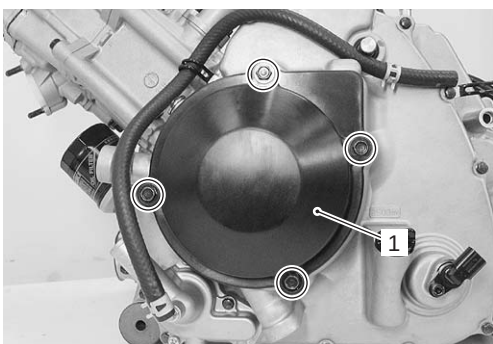

I931H1140062-01


Cam Chain Tension Adjuster

1) Remove the TDC plug (1).

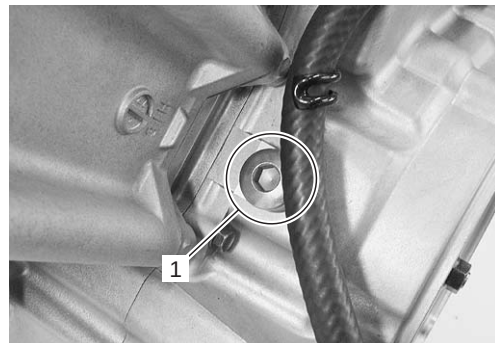


I931H1140063-01

2) Turn the crankshaft and align the match mark “A” on the crankshaft with the mark “B” on the crankcase.

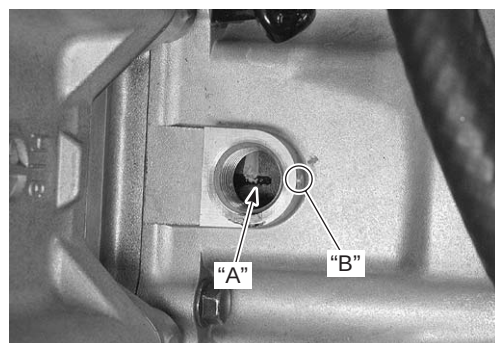


I931H1140064-01

3) Remove the cam chain tension adjuster cap bolt (2) and gasket.

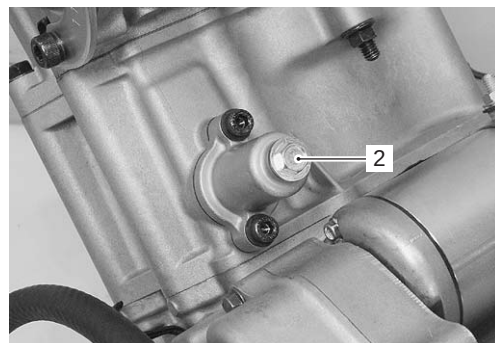


I931H1140065-01

4) Turn the adjusting screw clockwise with a (–) screwdriver until the push rod locked.

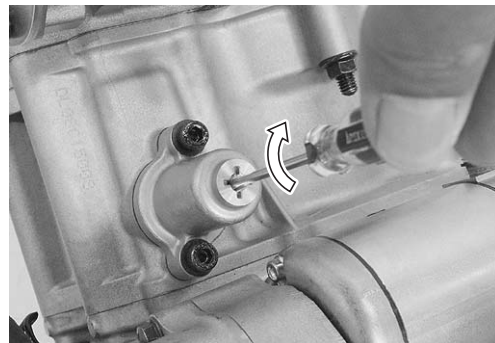

I931H1140066-01


- 5) Remove the cam chain tension adjuster (3) and gasket (4).

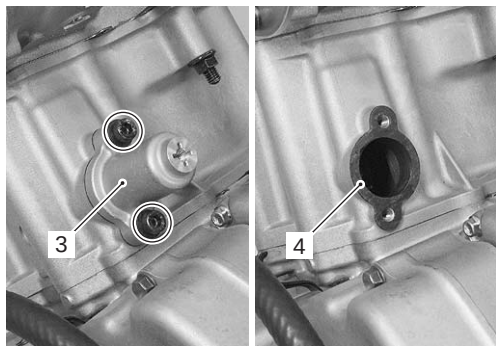

I931H1140067-01


Cylinder Head Cover

- 1) Remove the valve clearance inspection caps (1) and O-rings.

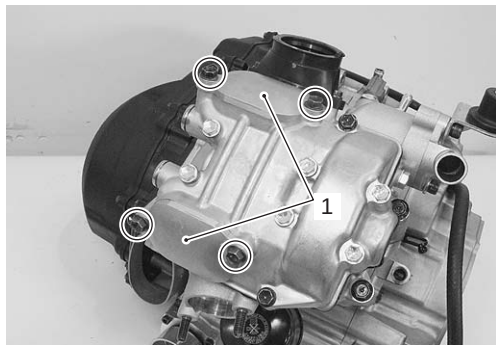


I931H1140068-02

- 2) Remove the cylinder head cover (2).

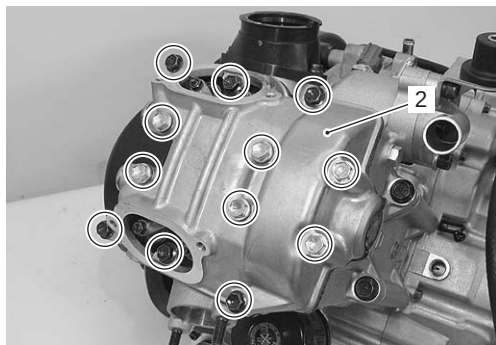

I931H1140069-01


- 3) Remove the dowel pins (3) and cylinder head cover plug (4).

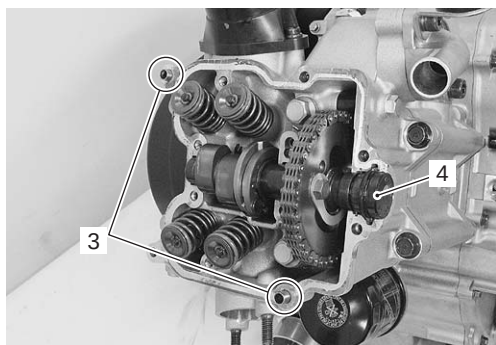

I931H1140070-01


Camshaft / Crankshaft Sprocket

- 1) Flatten the tongues of the lock washer (1).
- 2) Remove the camshaft sprocket bolts and lock washer (1).

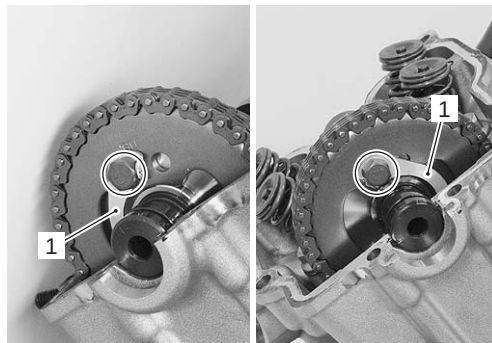


I931H1140071-01

- 3) Turn the crankshaft and position the camshaft sprocket hole "A" upward as shown.

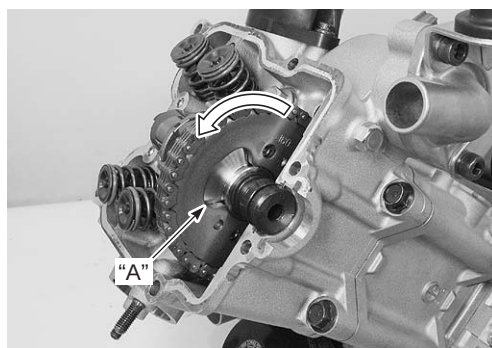

I931H1140072-02

- 4) Drop the camshaft sprocket to the camshaft groove "B".

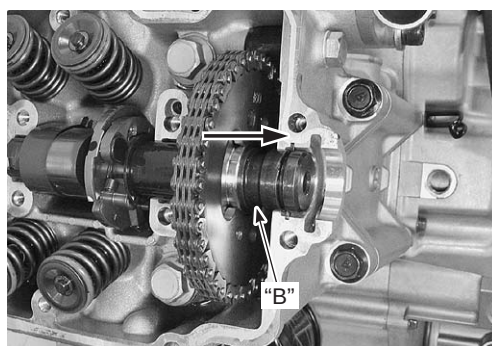


I931H1140073-02

- 5) Remove the C-ring (2) and draw out the camshaft (3) from the camshaft sprocket.

NOTE

Be careful not to drop the C-ring (2) and locating pin (4) into the crankcase.

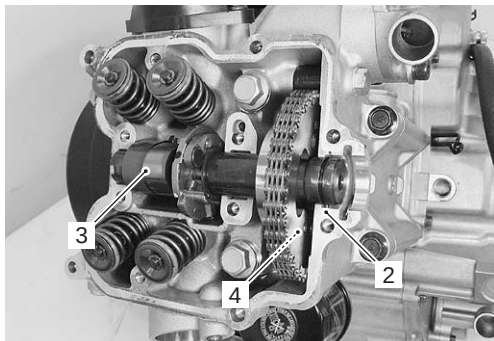


I931H1140074-01

- 6) Remove the locating pin (4) from the camshaft.



I931H1140075-01


- 7) Remove the camshaft sprocket (5).

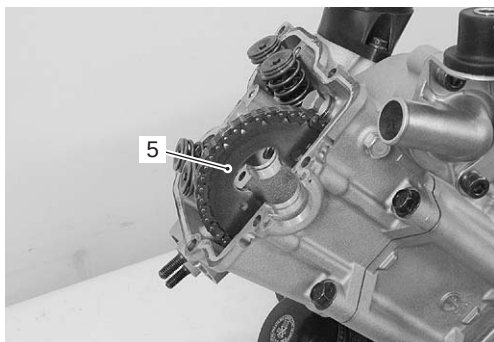

I931H1140076-01


Cylinder Head

- 1) Remove the cylinder head base nuts (1).

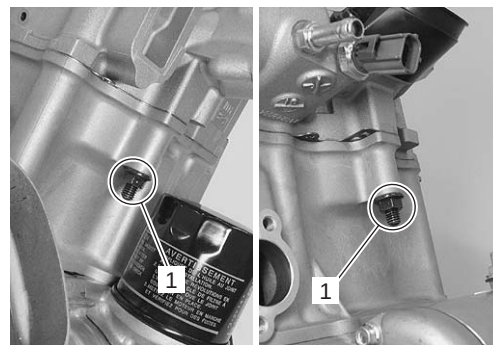

I931H1140077-01

- 2) Remove the cylinder head bolts (M8) (2).

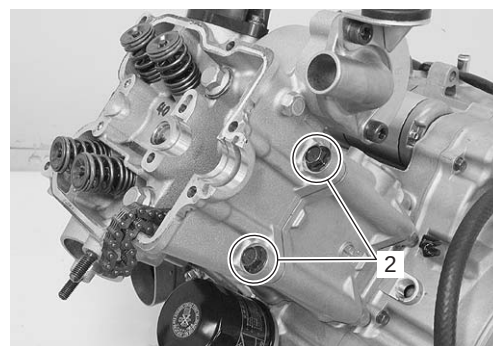

I931H1140078-01

- 3) Remove the cylinder head bolts (M10) and washers.


NOTE

When loosening the cylinder head bolts, loosen each bolt little by little diagonally.

- 4) Remove the cylinder head (3).


NOTE

If the cylinder head does not come off easily, lightly tap using a plastic hammer.

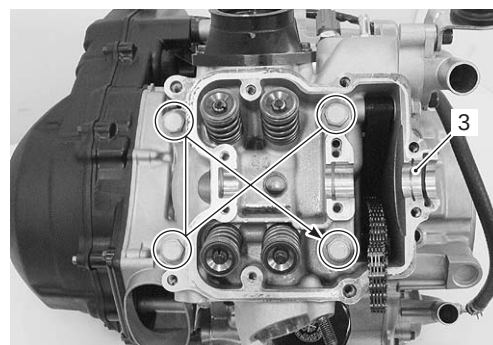

I931H1140079-01

- 5) Remove the dowel pins (4) and gasket (5).

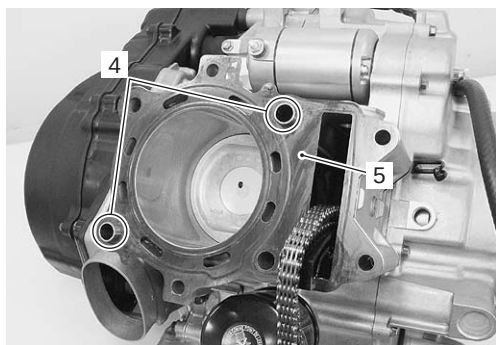


I931H1140080-02

Cylinder

- 1) Remove the cam chain guide (1).
- 2) Remove the cylinder (2).

NOTE

If the cylinder does not come off easily, lightly tap using a plastic hammer.

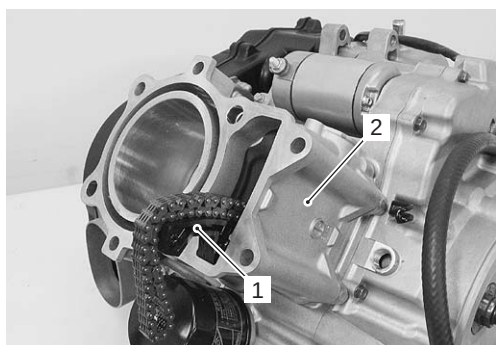


I931H1140081-01

- 3) Remove the dowel pins (3) and gasket (4).

NOTE


Be careful not to drop the dowel pins (3) into the crankcase.

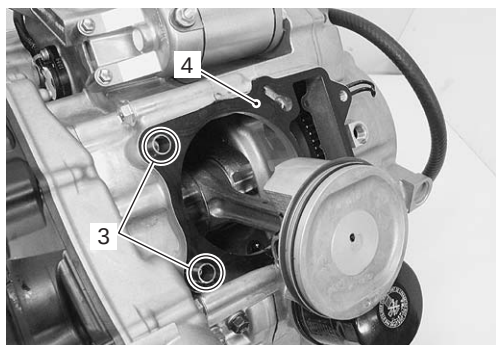

I931H1140082-01


Piston

- 1) Place a clean rag over the cylinder base so as not to drop the piston pin circlips into the crankcase.
- 2) Remove the piston pin circlips (1).

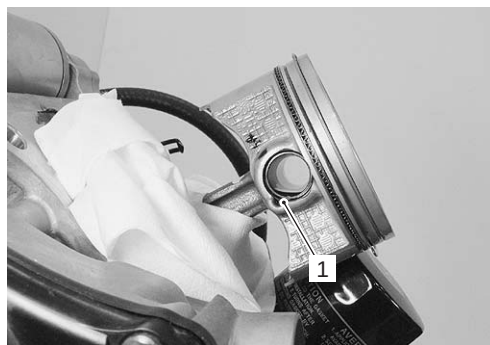

I931H1140083-01

- 3) Draw out the piston pin (2) and remove the piston (3).

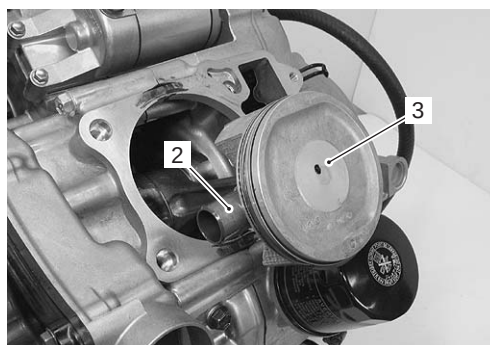

I931H1140084-01

Engine Top Side Assembly

B931H21406018

Assemble the engine top side in the reverse order of disassembly. Pay attention to the following points:

Piston


- When installing the piston pin, apply molybdenum oil solution onto piston pin.

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

- Install the piston and piston pin.

NOTE

When installing the piston, the indent "A" on the piston head must be faced to exhaust side.

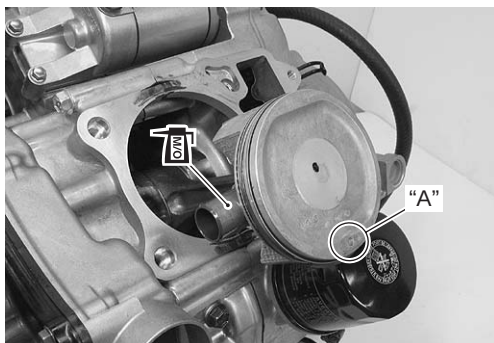

I931H1140085-01

- Place a clean rag over the cylinder base so as not to drop the piston pin circlips (1) into the crankcase.
- Install the piston pin circlips (1).

CAUTION

Use new piston pin circlips (1) to prevent circlip failure which will occur when it is bent.


NOTE

End gap of the circlip (1) should not be aligned with the cutaway in the piston pin bore.



I931H1140086-01

- Position the gaps of the three rings and side rails as shown in the figure. Before inserting each piston into the cylinder, check that the gaps are properly positioned.

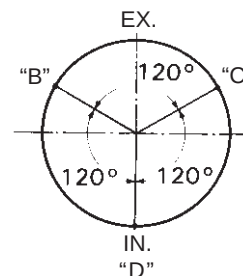


I931H1140292-01

"B":	2nd ring and lower side rail
"C":	Upper side rail
"D":	1st ring and spacer

Cylinder

- Apply a bond lightly to the mating surfaces at the parting line between the left and right crankcases.

1207B : Sealant 99000-31140 (SUZUKI BOND No.1207B or equivalent)

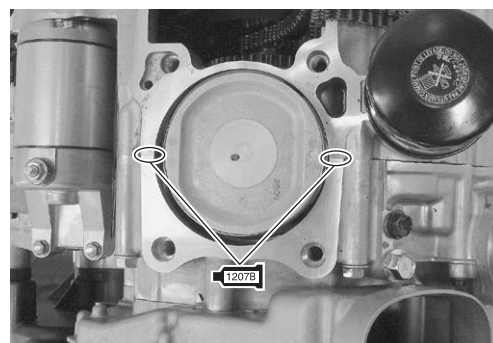


I931H1140087-01

- Fit the dowel pins (1) and gasket (2).

CAUTION

Use the new gasket (2) to prevent oil leakage.

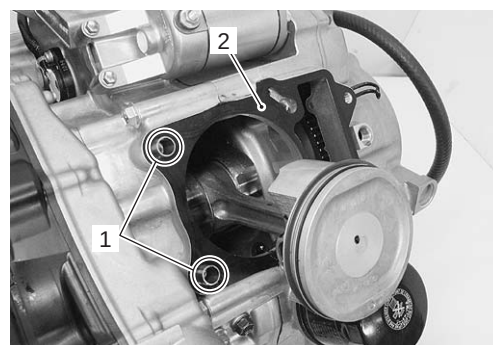


I931H1140088-01

1D-24 Engine Mechanical:

- Apply molybdenum oil solution to the sliding surface of the piston and piston rings.

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

- Hold each piston ring with properly position, insert the piston into the cylinder.

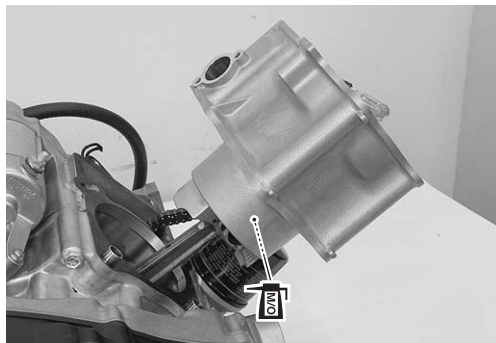

I931H1140089-02

⚠ CAUTION

When installing the cylinder, pull the cam chain upward, or the chain will be caught between the crankcase and cam drive sprocket.




I931H1140090-01

Cam Chain Guide

- Install the cam chain guide (1).

⚠ CAUTION

Be sure that the cam chain guide (1) is installed properly.

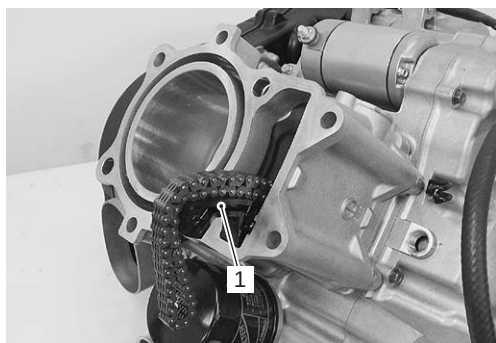


I931H1140091-01

Cylinder Head

- Fit the dowel pins (1) and cylinder head gasket (2).

⚠ CAUTION

Use the new gasket to prevent gas leakage.

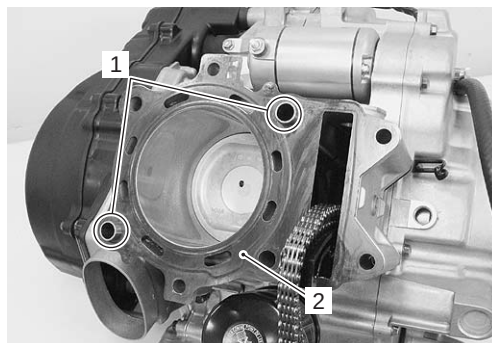


I931H1140092-02

- Place the cylinder head (3) on the cylinder.


NOTE

When installing the cylinder head, keep the cam chain taut.

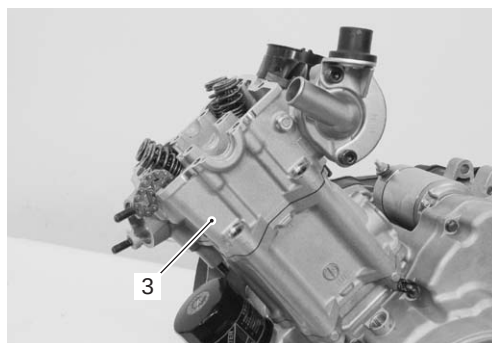

I931H1140093-01

- Apply the engine oil to the both sides of washers and thread of the cylinder head bolts (M10).

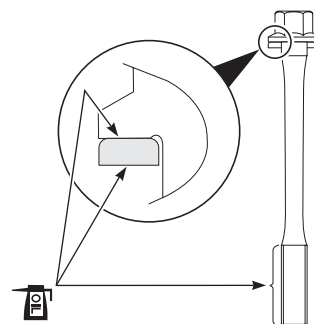


I933H1140081-01

- Tighten the cylinder head bolts (M10) to the specified two-step torque with a torque wrench sequentially and diagonally.

Tightening torque

Cylinder head bolt (M10) (Initial): 25 N·m (2.5 kgf-m, 18.0 lbf-ft)

Cylinder base head bolt (M10) (Final): 37 N·m (3.7 kgf-m, 27.0 lbf-ft)

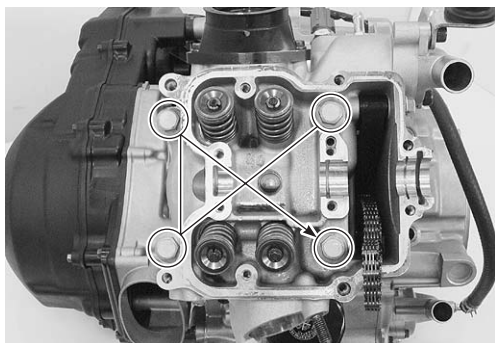


I931H1140094-01

- After tightening the cylinder head bolts (M10), tighten the cylinder head bolts (M8) (4) and cylinder head base nut (5) to the specified torque.


Tightening torque

Cylinder head bolt (M8) (a): 25 N·m (2.5 kgf-m, 18.0 lbf-ft)

Cylinder head nut (b): 25 N·m (2.5 kgf-m, 18.0 lbf-ft)

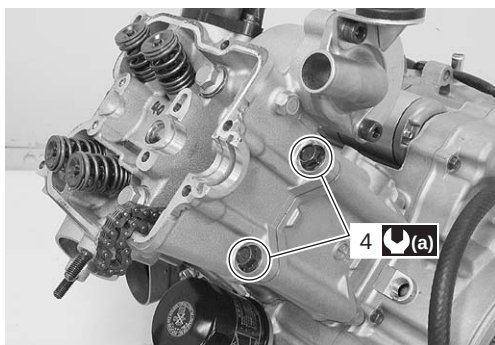

I931H1140095-01

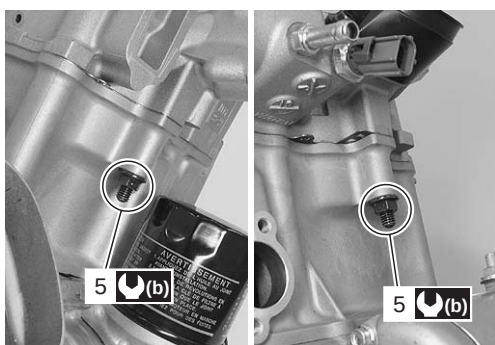


I931H1140096-01

Camshaft / Camshaft Sprocket

- Turn the crankshaft and align the match mark "A" on the crankshaft with the mark "B" on the crankcase.

⚠ CAUTION

Pull the cam chain upward, or the chain will be caught between crankcase and cam drive sprocket.

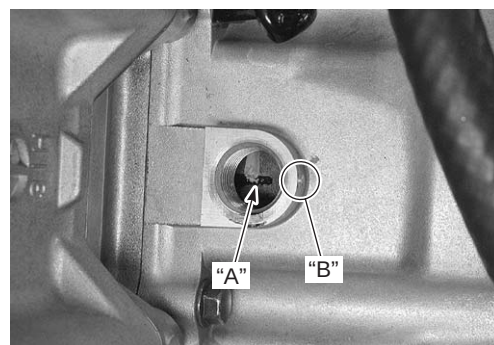


I931H1140097-01

- Engage the cam chain with camshaft sprocket (1).
- Install the C-ring (2) and camshaft (3).

⚠ CAUTION

Install the camshaft sprocket so that the stamped mark side faces outside.

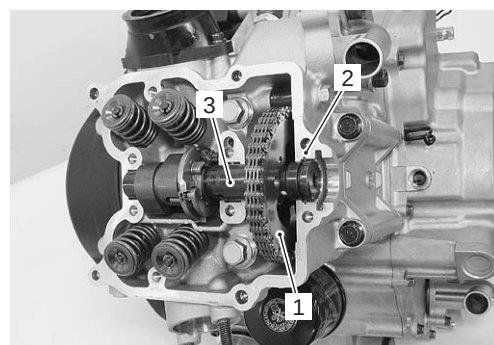


I931H1140098-01

1D-26 Engine Mechanical:

- Align the marks "C" on the camshaft so that they are parallel with the surface of the cylinder head.
- Engage the hole of the camshaft sprocket with the locating pin (4) on the camshaft.

NOTE

Do not rotate the crankshaft while installing the camshaft or cam chain.

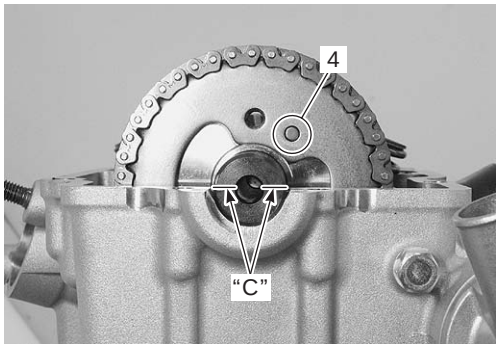


I931H1140099-02

- Install the lock washer (5) so that it is covering the locating pin (4).

CAUTION

Replace the lock washer (4) with a new one.

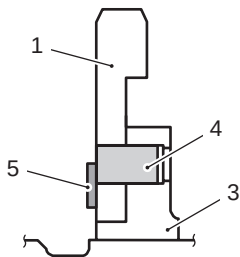

I931H1140101-02

1. Camshaft sprocket	4. Locating pin
3. Camshaft	5. Lock washer


- Apply a small quantity of thread lock to the camshaft sprocket bolts and tighten them to the specified torque.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

Tightening torque

Camshaft sprocket bolt (a): 15 N·m (1.5 kgf-m, 11.0 lbf-ft)


- Bend up the washer tongue positively to lock the bolts.

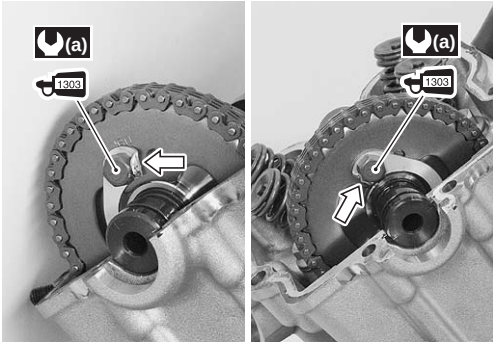

I931H1140100-01

- Apply molybdenum oil solution to the cam faces and journals.

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

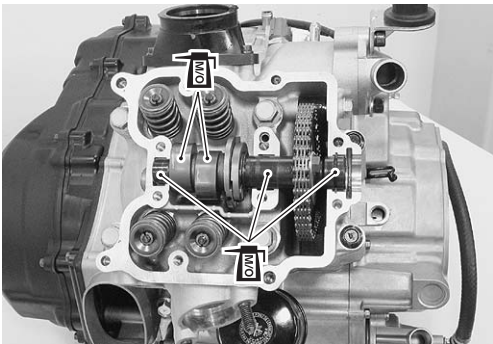


I931H1140102-01

Cylinder Head Cover

- Clean the mating surfaces of the cylinder head and head cover before mating.
- Install the dowel pins (1) and cylinder head cover plug to the cylinder head.

NOTE

The groove "A" of the cylinder head cover plug should face cylinder head side.

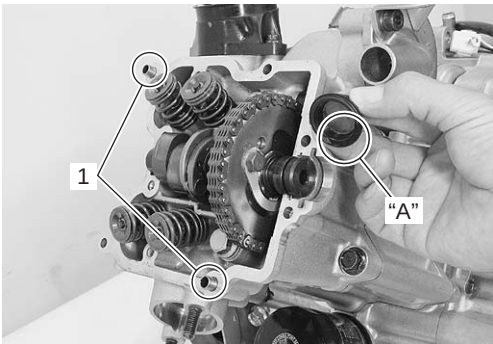


I931H1140103-01

- Apply bond uniformly to the mating surface of the cylinder head cover and install it within a few minutes.

NOTE

When installing the cylinder head cover, the piston must be at the top dead center on the compression stroke.

1216B : Sealant 99000-31230 (SUZUKI BOND No.1216B or equivalent)

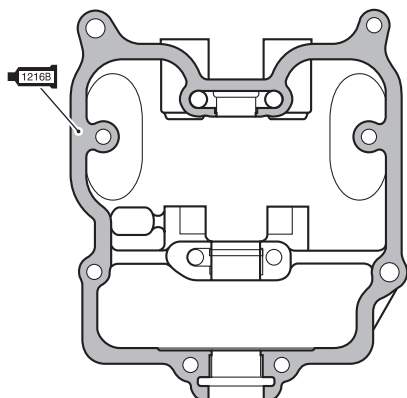

I931H1140104-01

- Apply engine oil to both sides of the washers.


CAUTION

Fit the new washer to the bolts (2).

- Lightly tighten the cylinder head cover bolts diagonally, and then tighten them to the specified torque.

Tightening torque

Cylinder head cover bolt: 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

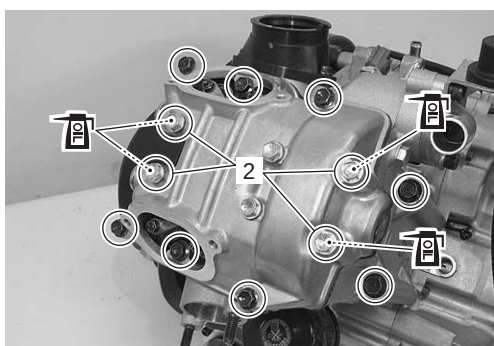

I931H1140105-03

- Apply grease to the O-rings and install the valve clearance inspection caps.

CAUTION


Use the new O-rings to prevent oil leakage.

FAH : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Tighten the valve clearance inspection cap bolts to the specified torque.

Tightening torque


Valve clearance inspection cap bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

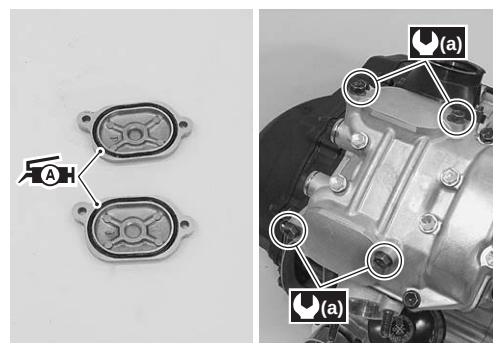

I931H1140106-01

Cam Chain Tension Adjuster

- Apply engine oil to the push rod of the cam chain tension adjuster.
- Turn the adjusting screw clockwise with a (–) screwdriver until the push rod locked.

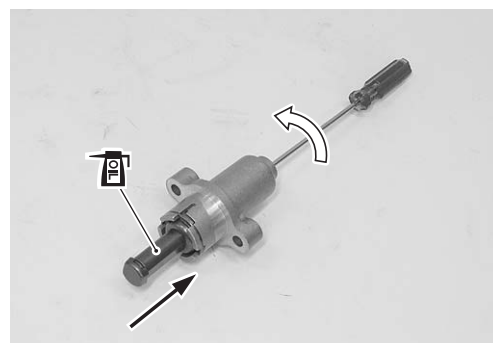

I931H1140107-01

1D-28 Engine Mechanical:

- Fit a new gasket (1) and install the cam chain tension adjuster.


⚠ CAUTION

Use the new gasket to prevent oil leakage.

- Tighten the cam chain tension adjuster mounting bolts to the specified torque.


Tightening torque

Cam chain tension adjuster mounting bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

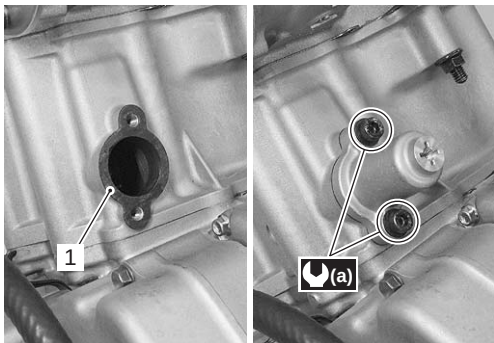

I931H1140108-01

- Turn the adjusting screw counterclockwise with a (–) screw driver until the push rod unlocked.

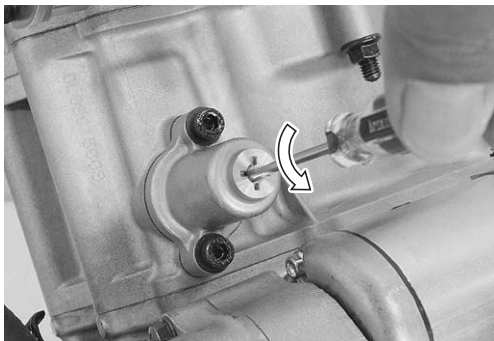

I931H1140109-01

- Fit a new gasket (2).


⚠ CAUTION

Use the new gasket to prevent oil leakage.

- Tighten the cam chain tension adjuster cap bolt to the specified torque.

Tightening torque

Cam chain tension adjuster cap bolt (b): 8 N·m (0.8 kgf-m, 6.0 lbf-ft)

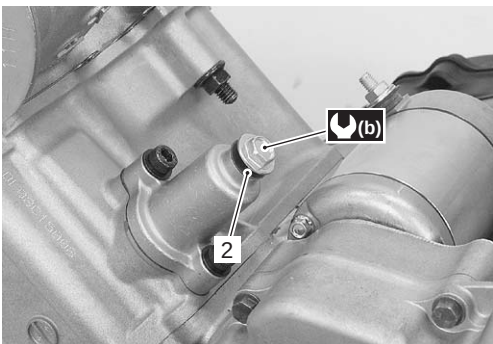

I931H1140110-01

- Be sure to check the valve clearance. Refer to “Valve Clearance Inspection and Adjustment: in Section 0B”.
- Fit a new gasket (3).


⚠ CAUTION

Use the new gasket to prevent oil leakage.

- Tighten the TDC plug to the specified torque.

Tightening torque


TDC plug (c): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

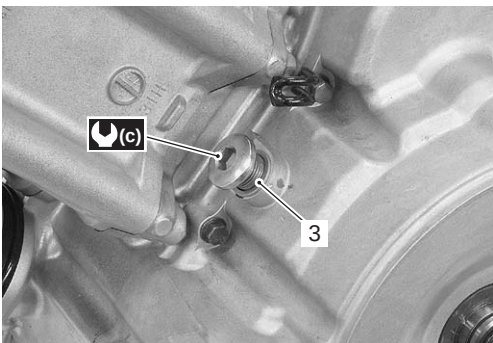

I931H1140111-01

Engine Mounting Dumper Stopper

- When installing the engine mounting dumper stopper (1), keep that the clearance are equal.

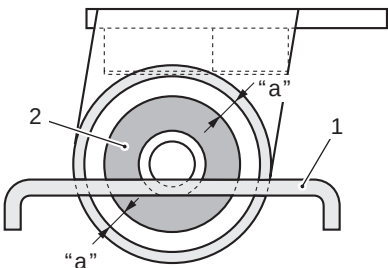


I931H1140112-02

1. Engine mounting dumper stopper	“a”: Clearance
2. Damper	

- Tighten the engine mounting damper stopper bolts (3) to the specified torque.

Tightening torque

Engine mounting damper stopper bolt (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

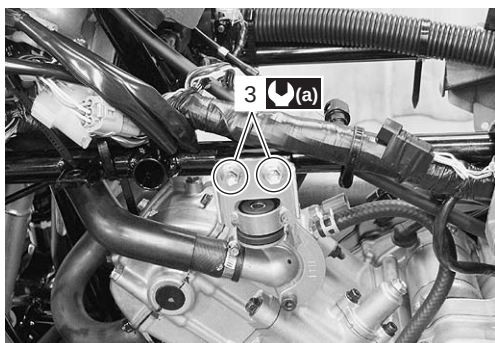

I931H1140113-01

Valve Clearance Inspection and Adjustment

B931H21406019

Refer to "Valve Clearance Inspection and Adjustment: in Section 0B".

Camshaft Inspection

B931H21406020

Refer to "Engine Top Side Disassembly (Page 1D-18)".
Refer to "Engine Top Side Assembly (Page 1D-22)".

Automatic Decomp.

Inspection the decomp. control arm (1) moves smoothly and decomp. cam (2) rotates together. If any abnormal condition are found, replace the camshaft assembly with a new one.

⚠ CAUTION

Do not attempt to disassemble the camshaft/automatic decomp. assembly. It is not serviceable.



I931H1140115-01

Cam Wear

Check the camshaft for wear or damage.

Measure the cam height "a" with a micrometer.

Replace a camshaft if the cams are worn to the service limit.


Special tool

TOOL : 09900-20202 (Micrometer (25 – 50 mm))

Cam height "a"

Service limit (IN.): 33.15 mm (1.305 in)

Service limit (EX.): 33.17 mm (1.306 in)

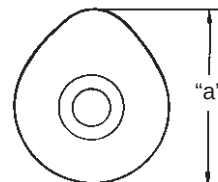

I649G1140199-02

Camshaft Runout

Measure the runout using the dial gauge. Replace the camshaft if the runout exceeds the limit.

Special tool


TOOL (A): 09900-20607 (Dial gauge)

TOOL (B): 09900-20701 (Dial gauge chuck)

TOOL (C): 09900-21304 (V blocks)

Camshaft runout (IN. & EX.)

Service limit: 0.10 mm (0.004 in)

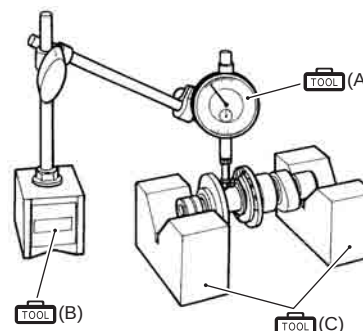

I931H1140116-01

Camshaft Journal Wear


Inspect the camshaft journal wear in the following procedures:

- 1) Determine whether or not each journal is worn down to the limit by measuring the oil clearance with the camshaft installed in place.
- 2) Use the plastigauge to read the clearance at the widest portion, which is specified as follows.

Special tool

 (A): 09900-22301 (Plastigauge)

 (B): 09900-22302 (Plastigauge)

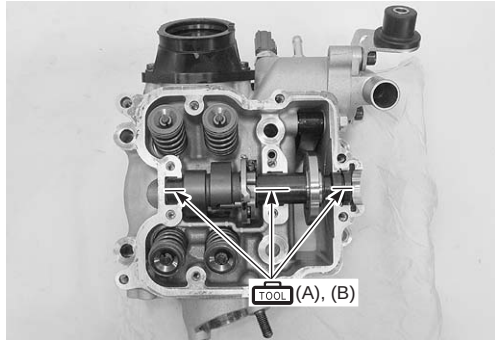

I931H1140117-01

- 3) Install the cylinder head cover.
- 4) Tighten the cylinder head cover bolts evenly and diagonally to the specified torque. Refer to "Engine Top Side Assembly (Page 1D-22)".

NOTE

Do not rotate the camshafts with the plastigauge in place.

Tightening torque

Cylinder head cover bolt: 10 N·m (1.0 kgf-m, 7.0 lbf-ft)




I931H1140118-01

- 5) Remove the cylinder head cover and measure the width of the compressed plastigauge using the envelope scale.
- 6) This measurement should be taken at the widest part of the compressed plastigauge.

Camshaft journal oil clearance

Service limit: 0.150 mm (0.0059 in)

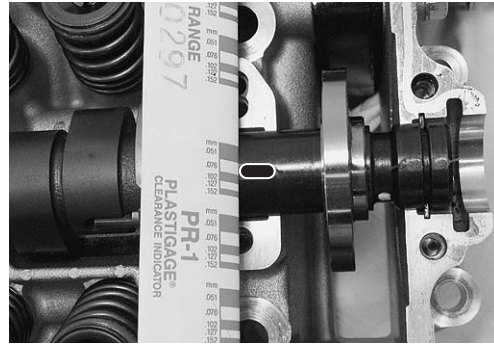

I931H1140119-01

- 7) If the camshaft journal oil clearance exceeds the limit, measure the inside diameter of the camshaft journal holder and the outside diameter of the camshaft journal. Replace the camshaft or the cylinder head depending upon which one exceeds the specification.

Special tool


 (C): 09900-20602 (Dial gauge)

 (D): 09900-22403 (Small bore gauge (18 – 35 mm))

Camshaft journal holder I.D.

Standard (point "a"): 17.512 – 17.525 mm (0.6894 – 0.6900 in)

Standard (point "b"): 22.012 – 22.025 mm (0.8666 – 0.8671 in)

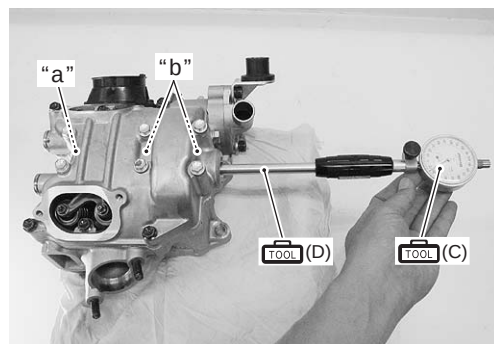

I931H1140120-02

Special tool

 (E): 09900-20205 (Micrometer (0 – 25 mm))

Camshaft journal O.D.

Standard (point "c"): 17.466 – 17.484 mm (0.6876 – 0.6883 in)

Standard (point "d"): 21.959 – 21.980 mm (0.8645 – 0.8654 in)



I931H1140121-01

Camshaft Sprocket Inspection

B931H21406021

Inspect the camshaft sprocket in the following procedures:

- 1) Remove the camshaft sprocket. Refer to "Engine Top Side Disassembly (Page 1D-18)".
- 2) Inspect the teeth of the camshaft sprocket for wear or damage.

If they are worn or damaged, replace the camshaft and cam chain as a set.



I931H1140122-01

- 3) Install the camshaft sprocket. Refer to "Engine Top Side Assembly (Page 1D-22)".

Cam Chain Tension Adjuster Inspection

B931H21406022

The cam chain tension adjuster is maintained at the proper tension by an automatically adjusted.

- 1) Remove the cam chain tension adjuster. Refer to "Engine Top Side Disassembly (Page 1D-18)".
- 2) Insert the (–) screwdriver into the slotted end of cam chain tension adjuster and turn it clockwise to lessen the tension and release the (–) screwdriver. Then check the push rod movement. If the push rod is stuck or spring mechanism failed, replace the cam chain tension adjuster with a new one.



I931H1140123-01

- 3) Install the cam chain tension adjuster. Refer to "Engine Top Side Assembly (Page 1D-22)".

Cam Chain Guide Inspection

B931H21406023

Inspect the cam chain guide in the following procedures:

- 1) Remove the cam chain guide. Refer to "Engine Top Side Disassembly (Page 1D-18)".
- 2) Check the contacting surface of the cam chain guide. If it is worn or damaged, replace it with a new one.



I931H1140124-01

- 3) Install the cam chain guide. Refer to "Engine Top Side Assembly (Page 1D-22)".

Cam Chain Tensioner Inspection

B931H21406024

Inspect the cam chain tensioner in the following procedures:

- 1) Remove the cam chain tensioner. Refer to "Cylinder Head Disassembly and Assembly (Page 1D-38)".
- 2) Check the contacting surface of the cam chain tensioner. If it is worn or damaged, replace it with a new one.



I931H1140125-01

- 3) Install the cam chain tensioner. Refer to "Cylinder Head Disassembly and Assembly (Page 1D-38)".

Cylinder Inspection

B931H21406025

Refer to "Engine Top Side Disassembly (Page 1D-18)".
Refer to "Engine Top Side Assembly (Page 1D-22)".

Cylinder Distortion


Check the gasket surface of the cylinder for distortion. Use a straightedge and thickness gauge. Take clearance readings at several places. If any reading exceeds the service limit, replace the cylinder.

Special tool

 : 09900-20803 (Thickness gauge)

Cylinder distortion

Service limit: 0.05 mm (0.002 in)

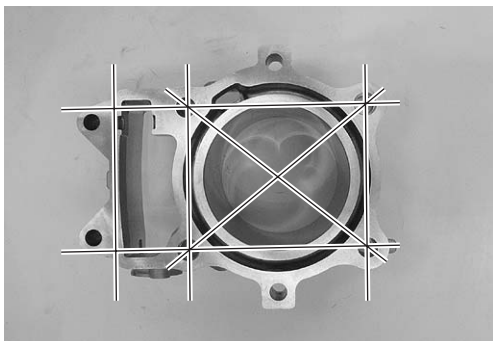

I931H1140126-01

Cylinder Bore


Inspect the cylinder wall for any scratches, nicks or other damage. Measure the cylinder bore diameter at six places. If any defects are found, replace the cylinder with a new one.

Special tool


 (A): 09900-20530 (Cylinder gauge set)

Cylinder bore

Standard: 87.500 – 87.515 mm (3.4449 – 3.4455 in)

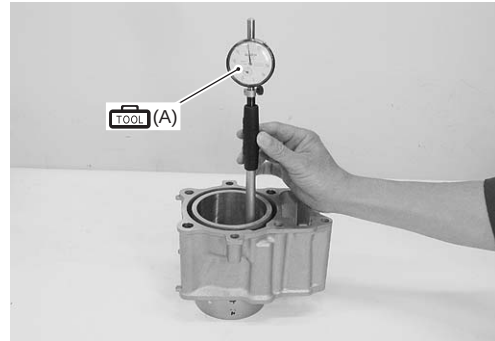

I931H1140127-01

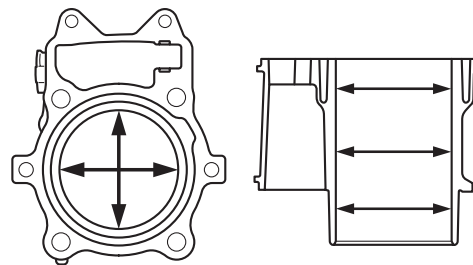

I931H1140128-01

Piston-to-cylinder Clearance

Refer to "Piston and Piston Ring Inspection (Page 1D-34)".

Piston Ring Removal and Installation


B931H21406026

Removal

- 1) Draw out the piston pin and remove the piston. Refer to "Engine Top Side Disassembly (Page 1D-18)".
- 2) Carefully spread the ring opening with your thumbs and then push up the opposite side of the 1st ring to remove it.

NOTE

Do not expand the piston ring excessively since it is apt to be broken down.

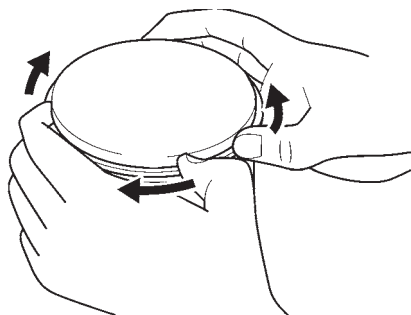

I831G1140178-01


- 3) Remove the 2nd ring and oil ring in the same manner.

Installation

NOTE

- When installing the piston ring, be careful not to damage the piston.
- Do not expand the piston ring excessively since it is apt to be broken down.


- 1) Install the piston rings in the order of the oil ring, second ring and top ring.
 - a) The first member to go into the oil ring groove is a spacer (1). After placing the spacer, fit the two side rails (2).

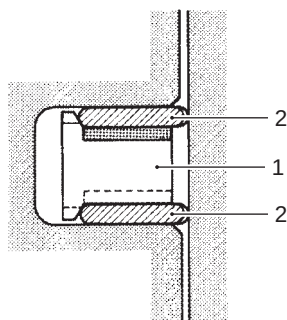

I718H1140143-02

⚠ CAUTION

When installing the spacer, be careful so that the both edges are not overlapped.

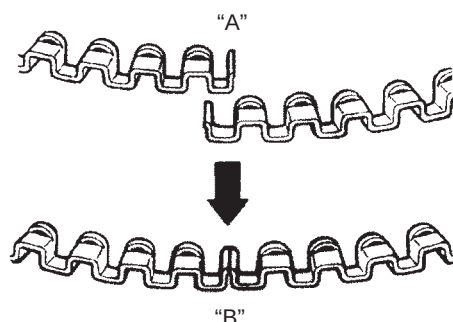


I705H1140170-02

"A": INCORRECT	"B": CORRECT
----------------	--------------

- b) Install the 2nd ring (3) and 1st ring (4) to piston.

NOTE


1st ring (4) and 2nd ring (3) differ in shape.

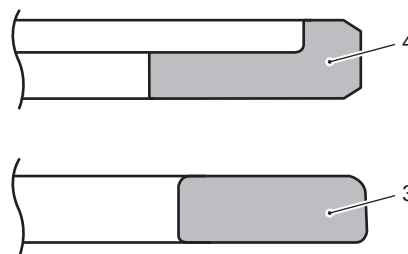

I931H1140129-01

NOTE


Face the side with the edge "C" and stamped mark "D" upward when assembling.

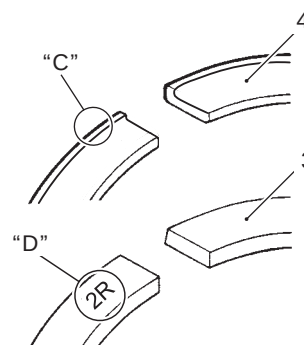

I931H1140130-01

1D-34 Engine Mechanical:

- 2) Position the gaps of the three rings and side rails as shown. Before inserting piston into the cylinder, check that the gaps are so located.

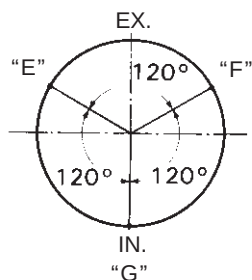

I931H1140131-02

"E": 2nd ring and lower side rail
"F": Upper side rail
"G": 1st ring and spacer

- 3) Install the piston and piston pin. Refer to "Engine Top Side Assembly (Page 1D-22)".

Piston and Piston Ring Inspection

B931H21406027

Refer to "Piston Ring Removal and Installation (Page 1D-33)".

Piston Diameter


Measure the piston diameter using the micrometer at 15 mm (0.6 in) "a" from the skirt end. If the piston diameter is less than the service limit, replace the piston.

Special tool


 (A): 09900-20204 (Micrometer (75 – 100 mm))

Piston diameter

Service limit: 87.380 mm (3.4402 in)

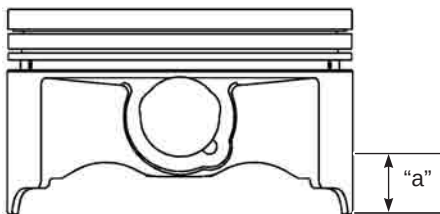

I931H1140132-01

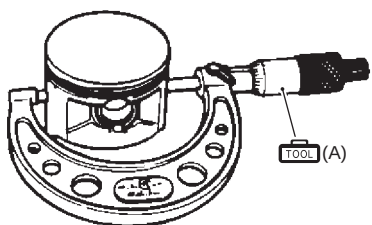

I831G1140337-01

Piston-to-cylinder Clearance

Subtract the piston diameter from the cylinder bore diameter. If the piston-to-cylinder clearance exceeds the service limit, replace both the cylinder and the piston.

Piston-to-cylinder clearance

Service limit: 0.120 mm (0.0047 in)

Piston Ring-to-groove Clearance

Measure the side clearances of the 1st and 2nd piston rings using the thickness gauge. If any of the clearances exceed the limit, replace both the piston and piston rings.

Special tool

 (A): 09900-20803 (Thickness gauge)

Piston ring-to-groove clearance

Service limit: (1st): 0.180 mm (0.0071 in)

Service limit: (2nd): 0.150 mm (0.0059 in)


Piston ring groove width

Standard: (1st: "a"): 0.78 – 0.80 mm (0.0307 – 0.0315 in)


Standard: (1st: "b"): 1.30 – 1.32 mm (0.051 – 0.052 in)

Standard: (2nd): 1.01 – 1.03 mm (0.040 – 0.041 in)

Standard: (Oil): 2.51 – 2.53 mm (0.099 – 0.100 in)

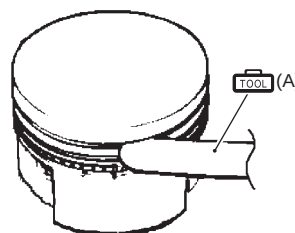

I831G1140183-03

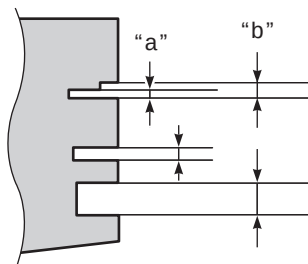

I931H1140133-01

Special tool


TOOL (B): 09900-20205 (Micrometer (0 – 25 mm))

Piston ring thickness

Standard: (1st: "c"): 0.71 – 0.76 mm (0.028 – 0.030 in)

Standard: (1st: "d"): 1.08 – 1.10 mm (0.0425 – 0.0433 in)

Standard: (2nd): 0.97 – 0.99 mm (0.038 – 0.039 in)

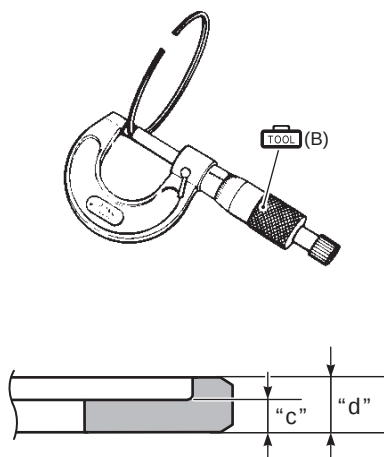

I931H1140134-01

Piston Ring Free End Gap and Piston Ring End Gap

Measure the piston ring free end gap using vernier calipers. Next, fit the piston ring squarely into the cylinder and measure the piston ring end gap using the thickness gauge. If any of the measurements exceed the service limit, replace the piston ring with a new one.


Special tool

TOOL (A): 09900-20101 (Vernier calipers (150 mm))

Piston ring free end gap

Service limit: (1st): 4.9 mm (0.19 in)

Service limit: (2nd): 9.6 mm (0.38 in)

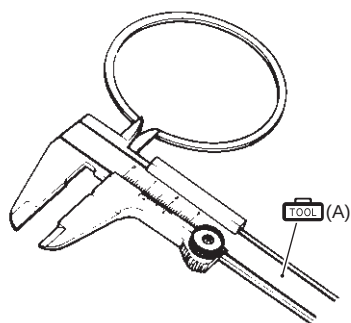

I649G1140265-03

Special tool

TOOL (B): 09900-20803 (Thickness gauge)

Piston ring end gap

Service limit: (1st): 0.50 mm (0.020 in)

Service limit: (2nd): 0.50 mm (0.020 in)



I931H1140135-01

Piston Pin and Pin Bore

Measure the piston pin bore inside diameter using the small bore gauge. If measurement is out of specification, replace the piston.


Special tool

TOOL (A): 09900-20602 (Dial gauge)

TOOL (B): 09900-22403 (Small bore gauge (18 – 35 mm))

Piston pin bore I.D.

Service limit: 20.030 mm (0.7886 in)

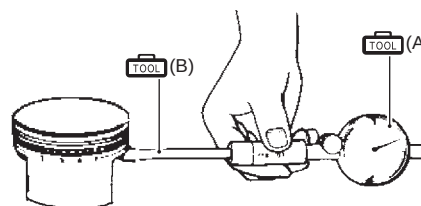

I831G1140185-02


Measure the piston pin outside diameter at three positions using the micrometer. If any of the measurements are out of specification, replace the piston pin.

Special tool

TOOL (C): 09900-20205 (Micrometer (0 – 25 mm))

Piston pin O.D.

Service limit: 19.980 mm (0.7866 in)

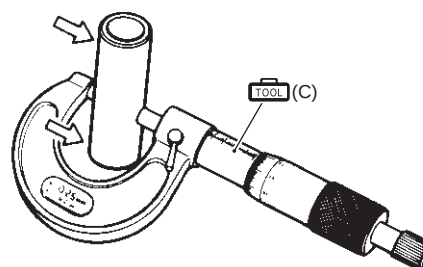

I649G1140268-03

Cylinder Head Cover Disassembly and Assembly

B931H21406028

Refer to "Engine Top Side Disassembly (Page 1D-18)".
Refer to "Engine Top Side Assembly (Page 1D-22)".

⚠ CAUTION

Identify the position of each removed part.
Organize the parts in their respective groups
(i.e., intake, exhaust) so that they can be
installed in their original positions.


Disassembly

- 1) Remove the rocker arm shaft bolts (1).




I931H1140136-01

- 2) Remove the rocker arm shaft (2) using 6 mm bolt "A".

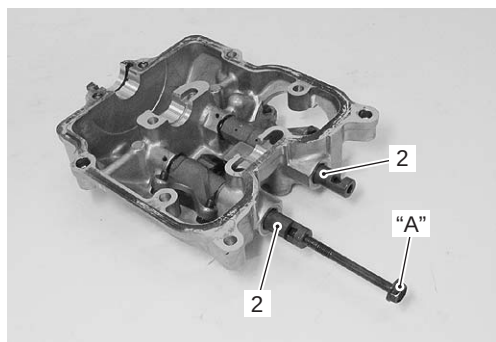

I931H1140137-01


- 3) Remove each rocker arm (3) and wave washer (4).

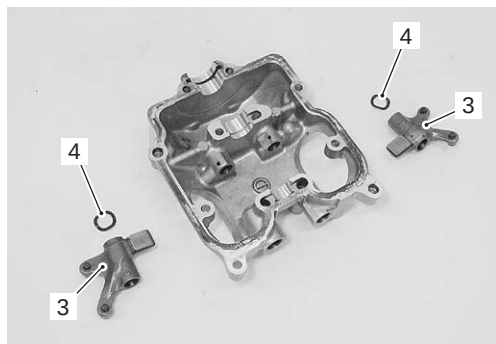

I931H1140138-01


Assembly

- 1) Apply engine oil to the rocker arm shafts (1).

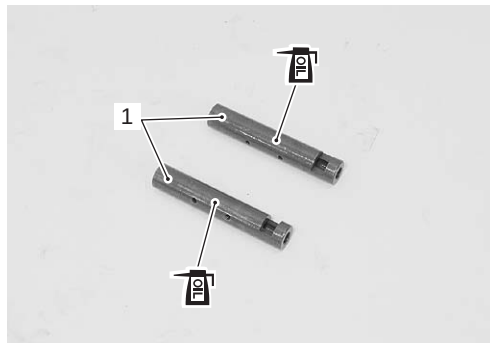

I931H1140139-01


- 2) Install each wave washer (2), rocker arm (3) and rocker arm shaft (1).

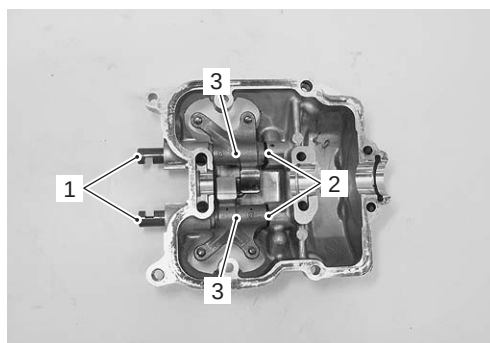

I931H1140140-01

NOTE

Align the rocker arm shaft grooves "A" with the cylinder head cover holes "B".

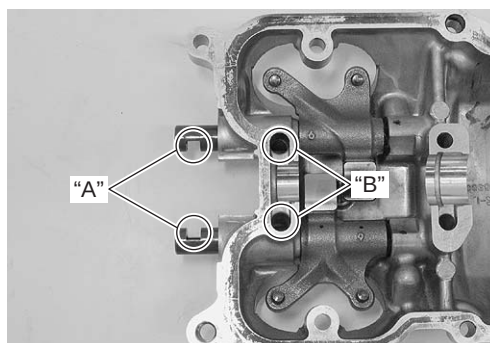

I931H1140142-01

- 3) Tighten the rocker arm shaft bolts (4) to the specified torque.

⚠ CAUTION

Replace the gaskets with new ones.

Tightening torque

Rocker arm shaft bolt (a): 28 N·m (2.8 kgf·m, 20 lbf·ft)



I931H1140143-02

Cylinder Head Cover Related Parts Inspection

B931H21406029

Refer to "Cylinder Head Cover Disassembly and Assembly (Page 1D-36)".

Cylinder Head Distortion


- 1) Remove sealant from the mating surface of the cylinder head cover.
- 2) Place the cylinder head cover on a surface plate and check for distortion with the thickness gauge. If the distortion exceeds the limit, replace the cylinder head cover.

Special tool

TOOL (A): 09900-20803 (Thickness gauge)

Cylinder head cover distortion

Service limit: 0.05 mm (0.002 in)

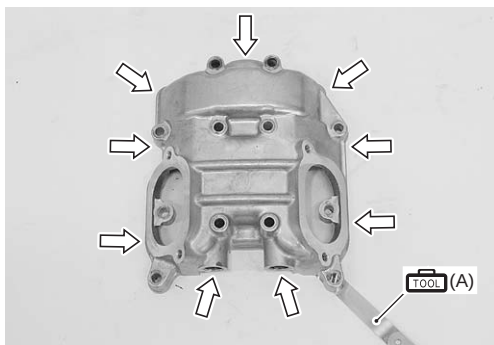

I931H1140144-01

Rocker Arm Shaft Outside Diameter


Measure each rocker arm shaft outside diameter using the micrometer. If the diameter exceeds the limit, replace the rocker arm shaft with a new one.

Special tool

TOOL (A): 09900-20205 (Micrometer (0 – 25 mm))

Rocker arm shaft O.D. (IN. & EX.)

Standard: 11.973 – 11.984 mm (0.4714 – 0.4718 in)

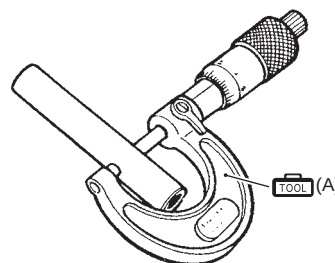

I931H1140146-01

Rocker Arm Inspection


Measure the inside diameter of the rocker arm and check the wear of the camshaft contacting surface. If the diameter exceeds the limit or any damage is found, replace the rocker arm with a new one.

Special tool

TOOL (A): 09900-20605 (Dial calipers (10 – 34 mm))

Rocker arm I.D. (IN. & EX.)

Standard: 12.000 – 12.018 mm (0.4724 – 0.4731 in)

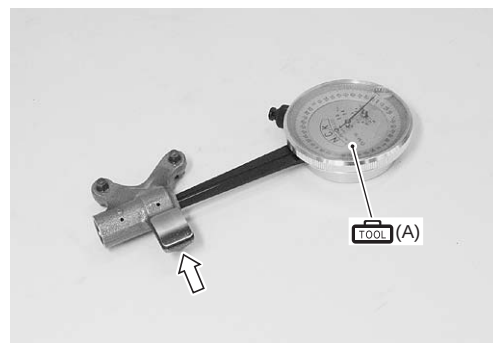

I931H1140147-01

Cylinder Head Disassembly and Assembly

B931H21406030

Refer to "Engine Top Side Disassembly (Page 1D-18)".


Refer to "Engine Top Side Assembly (Page 1D-22)".

⚠ CAUTION

Identify the position of each removed part.
Organize the parts in their respective groups (i.e., intake, exhaust) so that they can be installed in their original locations.


Disassembly

- 1) Remove the cam chain tensioner (1).

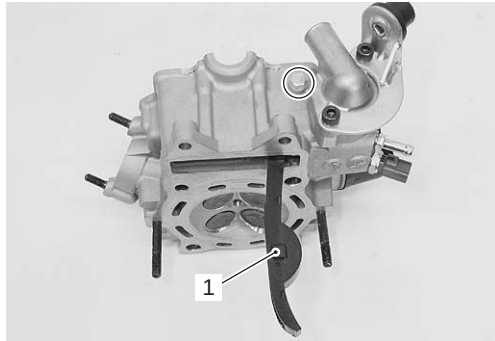


I931H1140148-01

- 2) Remove the engine mounting dumper plate (2), thermostat cover (3) and thermostat (4).

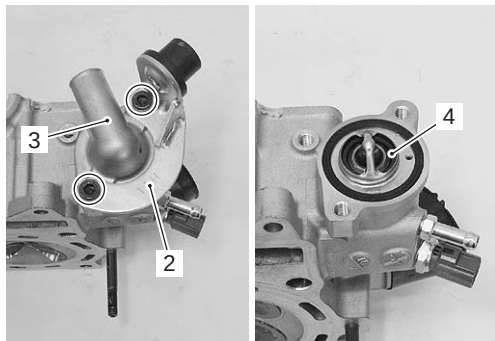

I931H1140149-02

- 3) Remove the intake pipe (5), water bypass union (6) and ECT sensor (7).

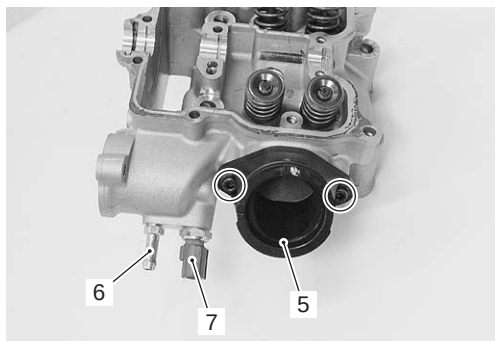

I931H1140150-01


- 4) Using the special tools, compress the valve spring and remove the two cotter halves (8) from the valve stem.

Special tool

TOOL (A): 09916-14510 (Valve lifter)


TOOL (B): 09916-14910 (Valve lifter attachment)

TOOL : 09916-84511 (Tweezer)

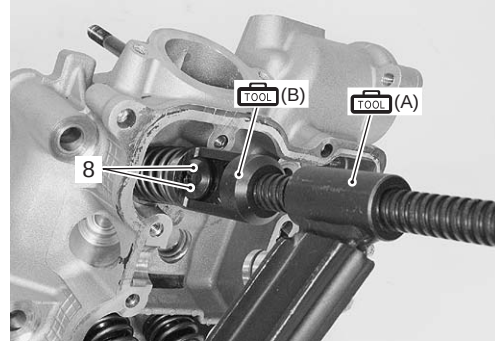


I931H1140151-01

- 5) Remove the valve spring retainer (9) and valve spring (10).

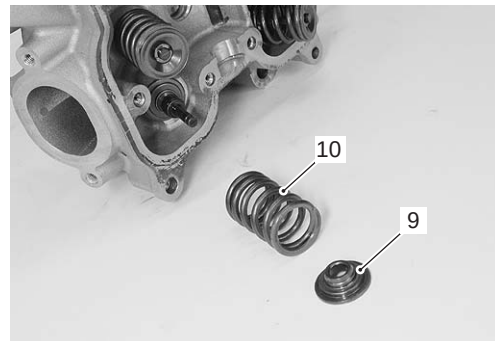


I931H1140152-01

- 6) Pull out the valve (11) from the combustion chamber side.

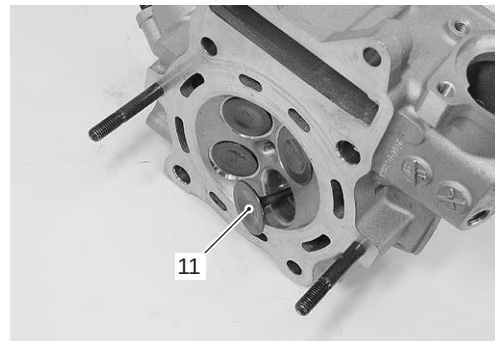

I931H1140153-01

7) Remove the oil seal (12) and valve spring seat (13).

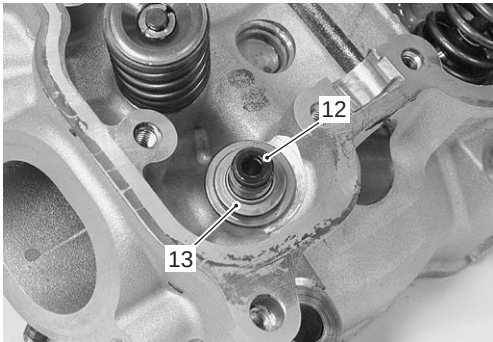

I931H1140154-01

8) Remove the other valves in the same manner as described previously.

Assembly


Assembly is in the reverse order of disassembly. Pay attention to the following points:

- Install the valve spring seat (1).
- Apply molybdenum oil solution to the oil seal (2), and press-fit it into position.

⚠ CAUTION

Do not reuse the removed oil seal.

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

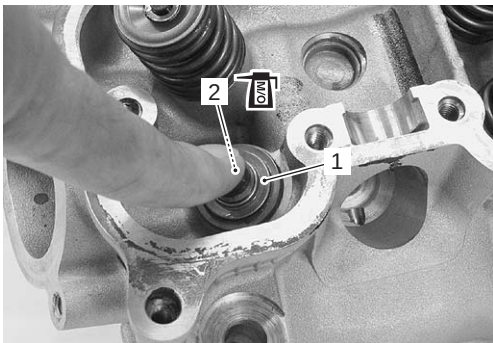


I931H1140155-02

- Insert the valve, with its stem coated with molybdenum oil solution all around and along the full stem length without any break.

⚠ CAUTION


When inserting the valve, take care not to damage the lip of the oil seal.

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

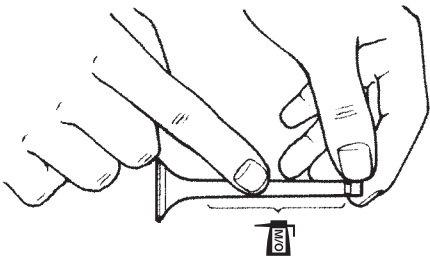

I705H1140165-01

- Install the valve spring with the small-pitch portion "A" facing cylinder head.

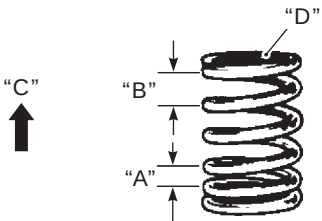

I931H1140156-02

"A": Small-pitch portion	"C": Upward
"B": Large-pitch portion	"D": Paint


- Put on the valve spring retainer (3), and using the special tools, press down the spring, fit the cotter halves to the stem end, and release the lifter to allow the cotter halves to wedge in between retainer and stem.

⚠ CAUTION

- Be sure to restore each spring and valve to their original positions.
- Be careful not to damage the valve and valve stem when handling them.

Special tool


-  (A): 09916-14510 (Valve lifter)
-  (B): 09916-14910 (Valve lifter attachment)
-  : 09916-84511 (Tweezer)

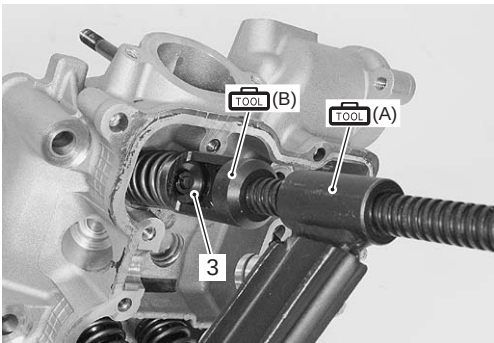

I931H1140285-01

1D-40 Engine Mechanical:

- Be sure that the rounded lip “E” of the cotter fits snugly into the groove “F” in the stem end.

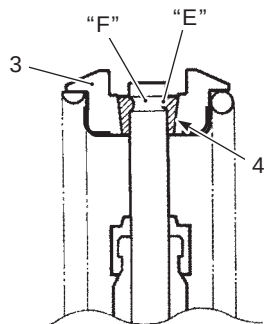

I931H1140158-01

3. Valve spring retainer


4. Cotter

- Install the other valves and springs in the same manner as described previously.
- Install the ECT sensor. Refer to “ECT Sensor Removal and Installation: in Section 1C”.
- Apply bond to the thread part of the water bypass union and tighten it to the specified torque.

1207B : Sealant 99000–31140 (SUZUKI BOND No.1207B or equivalent)

Tightening torque

Water bypass union (a): 12 N·m (1.2 kgf-m, 8.5 lbf-ft)

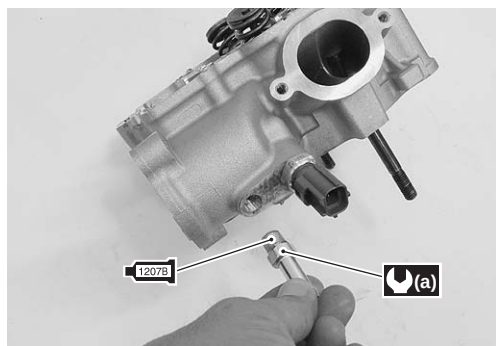

I931H1140159-01

- Apply grease to the O-ring of the intake pipe.

⚠ CAUTION

Replace the O-ring with a new one.

FAH : Grease 99000–25010 (SUZUKI SUPER GREASE A or equivalent)



I931H1140160-01

- Apply a small quantity of thread lock to the intake pipe mounting bolts and tighten them to the specified torque.


NOTE

Make sure that the “UP” mark “G” faces up.

1322 : Thread lock cement 99000–32110 (THREAD LOCK CEMENT SUPER 1322 or equivalent)

Tightening torque

Intake pipe bolt (b): 9 N·m (0.9 kgf-m, 6.5 lbf-ft)

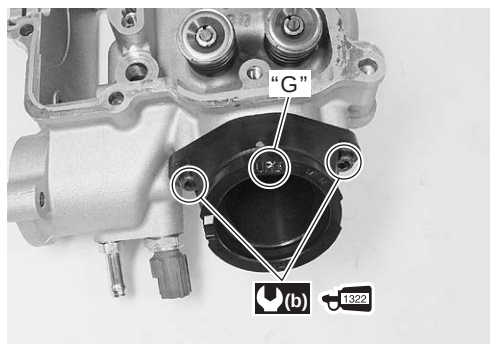


I931H1140162-02

- Install the thermostat, thermostat cover and engine mounting dumper plate. Refer to “**Thermostat Removal and Installation: in Section 1F**”.
- Install the cam chain tensioner (5), washer (6) and cam chain tensioner bolt (7).
- Tighten the cam chain tensioner bolt (7) to the specified torque.

Tightening torque

Cam chain tensioner bolt (c): 13 N·m (1.3 kgf-m, 9.5 lbf-ft)

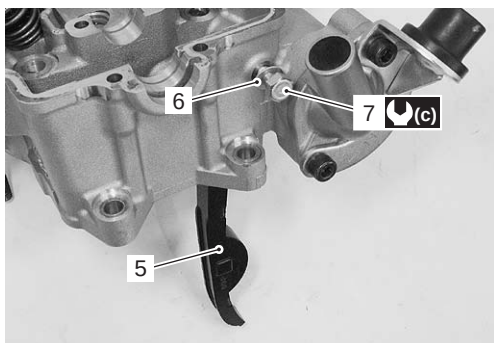

I931H1140163-01

Cylinder Head Related Parts Inspection

B931H21406031

Refer to “Cylinder Head Disassembly and Assembly (Page 1D-38)”.

Cylinder Head Distortion


- 1) Decarbonize the combustion chambers.
- 2) Check the gasket surface of the cylinder head for distortion. Use a straightedge and thickness gauge. Take clearance readings at several places. If readings exceed the service limit, replace the cylinder head.

Special tool

: 09900-20803 (Thickness gauge)

Cylinder head distortion

Service limit: 0.05 mm (0.002 in)

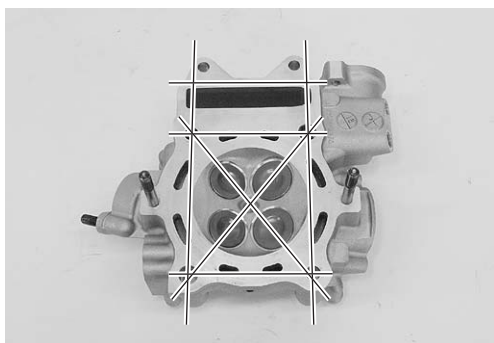

I931H1140164-01

Valve Stem Runout

Support the valve using V-blocks, as shown, and check its runout using the dial gauge. If the runout exceeds the service limit, replace the valve.

Special tool


(A): 09900-20607 (Dial gauge)

(B): 09900-20701 (Dial gauge chuck)

(C): 09900-21304 (V blocks)

Valve stem runout (IN. & EX.)

Service limit: 0.05 mm (0.002 in)

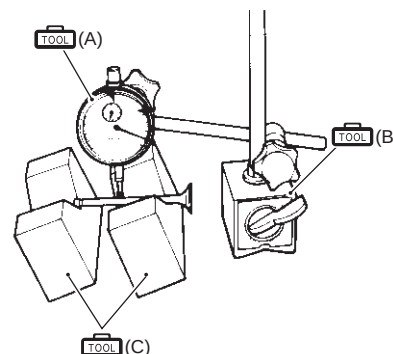

I649G1140231-03

Valve Head Radial Runout

Place the dial gauge at a right angle to the valve head face and measure the valve head radial runout. If it measures more than the service limit, replace the valve.

Special tool


(A): 09900-20607 (Dial gauge)

(B): 09900-20701 (Dial gauge chuck)

(C): 09900-21304 (V blocks)

Valve head radial runout (IN. & EX.)

Service limit: 0.03 mm (0.001 in)

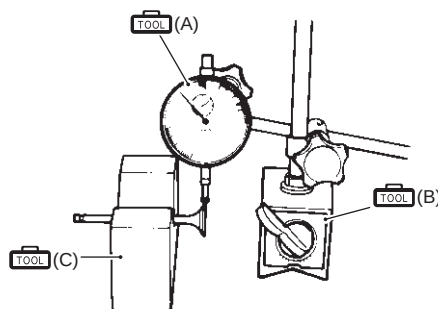

I649G1140232-03

Valve Face Wear


Visually inspect each valve face for wear. Replace any valve with an abnormally worn face. The thickness of the valve face decreases as the face wears. Measure the valve head "a". If it is out of specification replace the valve with a new one.

Special tool

 : 09900-20101 (Vernier calipers (150 mm))

Valve head thickness "a" (IN. & EX.)

Service limit: 0.5 mm (0.02 in)

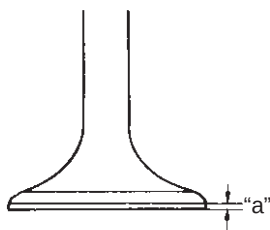

I649G1140233-02

Valve Stem Deflection

Lift the valve about 10 mm (0.39 in) from the valve seat. Measure the valve stem deflection in two directions, "X" and "Y", perpendicular to each other. Position the dial gauge as shown. If the deflection exceeds the service limit, then determine whether the valve or the guide should be replaced with a new one.


Special tool

 (A): 09900-20607 (Dial gauge)

 (B): 09900-20701 (Dial gauge chuck)

Valve stem deflection (IN. & EX.)

Service limit: 0.35 mm (0.014 in)

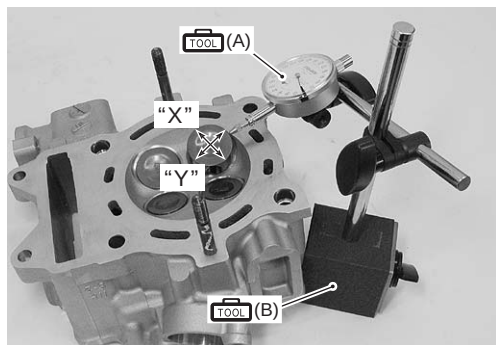

I931H1140165-01

Valve Stem Wear

Measure the valve stem O.D. using the micrometer. If it is out of specification, replace the valve with a new one. If the valve stem O.D. is within specification but the valve stem deflection is not, replace the valve guide. After replacing the valve or valve guide, recheck the deflection.

Special tool

 (A): 09900-20205 (Micrometer (0 - 25 mm))


Valve stem O.D.

Standard (IN.): 4.975 - 4.990 mm (0.1959 - 0.1965 in)

Standard (EX.): 4.955 - 4.970 mm (0.1951 - 0.1957 in)

NOTE

If valve guides have to be removed for replacement after inspecting related parts, carry out the steps shown in valve guide replacement. Refer to "Valve Guide Replacement (Page 1D-44)".

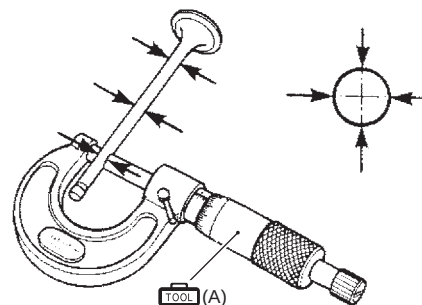


I718H1140122-01

Valve Stem End Condition

Inspect the valve stem end face for pitting and wear. If pitting or wear of the stem end face are present, the valve stem end may be resurfaced, providing that the length "A" will not be reduced to less than the service limit. If this length becomes less than the service limit, the valve must be replaced.

Valve stem end length

Service limit: 2.3 mm (0.09 in)

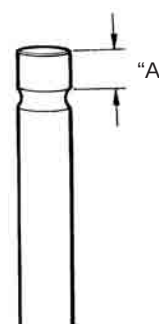

I827H1140065-01

Valve Spring

The force of the coil spring keeps the valve seat tight. A weakened spring results in reduced engine power output and often accounts for the chattering noise coming from the valve mechanism.

Check the valve springs for proper strength by measuring their free length and also by the force required to compress them. If the spring length is less than the service limit or if the force required to compress the spring does not fall within the specified range, replace the valve spring.

Special tool


 (A): 09900–20101 (Vernier calipers (150 mm))

Valve spring free length (IN. & EX.)


Service limit: 38.8 mm (1.53 in)

Valve spring tension (IN. & EX.)

Standard: 182 – 210 N (18.6 – 21.4 kgf, 41.0 – 47.2 lbs)/31.5 mm (1.24 in)

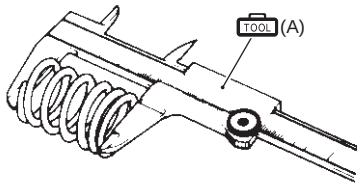

I649G1140237-03

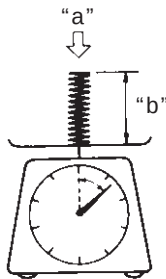

I649G1140238-03


Tension “a”	Length “b”
182 – 210 N (18.6 – 21.4 kgf, 41.0 – 47.2 lbs)	31.5 mm (1.24 in)

Valve Seat Width

- 1) Visually check for valve seat width on each valve face. If the valve face has worn abnormally, replace the valve.
- 2) Coat the valve seat with a red lead (Prussian Blue) and set the valve in place.
- 3) Rotate the valve with light pressure.

Special tool

 (A): 09916–10911 (Valve lapper set)

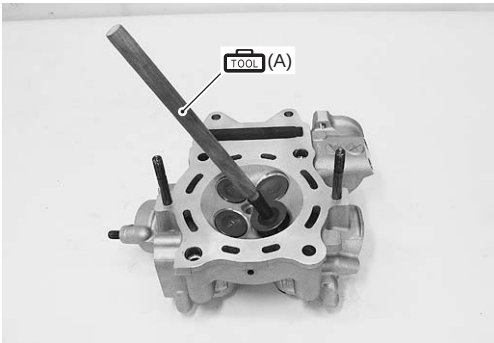


I931H1140286-01

- 4) Check that the transferred red lead (blue) on the valve face is uniform all around and in center of the valve face.

If the seat width “a” measured exceeds the standard value, or seat width is not uniform reface the seat using the seat cutter. Refer to “Valve Seat Repair (Page 1D-46)”.

Valve seat width “a” (IN. & EX.)

Standard: 0.9 – 1.1 mm (0.035 – 0.043 in)

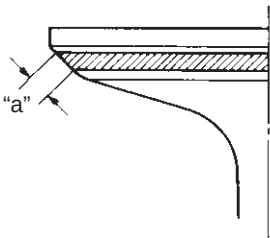


I649G1140246-02

Valve Seat Sealing Condition

- 1) Clean and assemble the cylinder head and valve components.
- 2) Fill the intake and exhaust ports with gasoline to check for leaks. If any leaks occur, inspect the valve seat and face for burrs or other things that could prevent the valve from sealing. Refer to "Valve Seat Repair (Page 1D-46)".

⚠ WARNING

Always use extreme caution when handling gasoline.

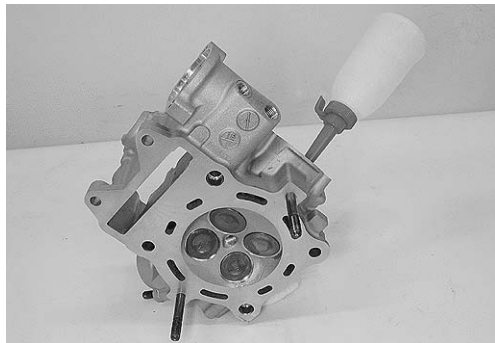

I931H1140166-01

NOTE

After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been reinstalled. Refer to "Valve Clearance Inspection and Adjustment (Page 1D-29)".

Valve Guide Replacement

B931H21406032


- 1) Remove the cylinder head. Refer to "Engine Top Side Disassembly (Page 1D-18)".
- 2) Remove the valves. Refer to "Cylinder Head Disassembly and Assembly (Page 1D-38)".
- 3) Using the valve guide remover, drive the valve guide out toward the camshaft side.

Special tool

⚠ (B) : 09916-44310 (Valve guide installer & remover)

NOTE

- Discard the removed valve guide sub-assemblies.
- Only oversized valve guides are available as replacement parts. (Part No. 11115-14D71)

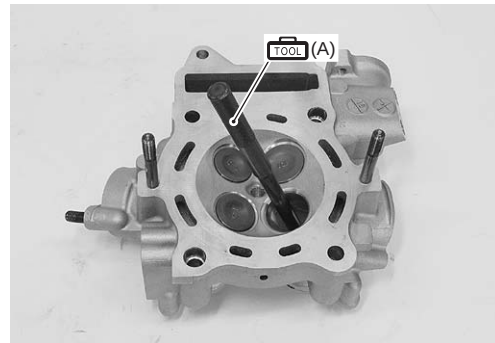

I931H1140167-01

- 4) Refinish the valve guide holes in the cylinder head using the reamer and handle.


⚠ CAUTION

When refinishing or removing the reamer from the valve guide hole, always turn it clockwise.

Special tool

⚠ (B) : 09916-34580 (Valve guide reamer (10.8 mm))

⚠ (C) : 09916-34542 (Reamer handle)

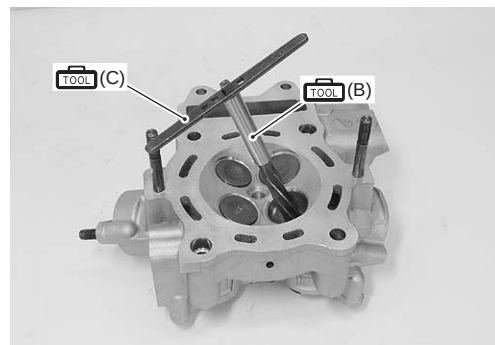

I931H1140168-01

- 5) Cool down the new valve guides in a freezer for about one hour and heat the cylinder head to 100 – 150 °C (212 – 302 °F) with a hot plate.

⚠ CAUTION

Do not use a burner to heat the valve guide hole to prevent cylinder head distortion.

- 6) Apply engine oil to each valve guide and valve guide hole.
- 7) Drive the guide into the guide hole using the valve guide installer.


⚠ CAUTION

Failure to oil the valve guide hole before driving the new guide into place may result in a damaged guide or head.

Special tool


🔧 (A): 09916-44310 (Valve guide remover/installer)

🔧 (D): 09916-53370 (Valve guide installer attachment)

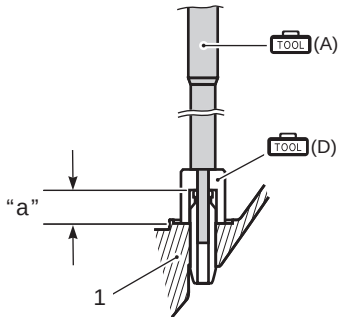

I718H1140127-01

1. Cylinder head	"a": 13.0 mm (0.51 in)
------------------	------------------------

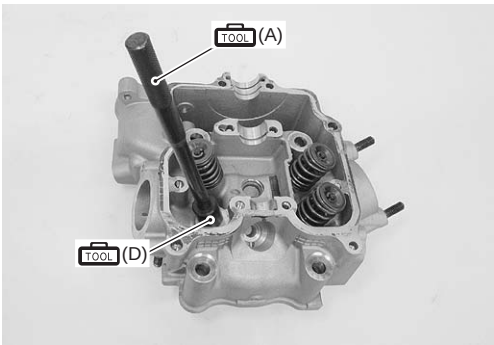

I931H1140169-01

- 8) After installing the valve guides, refinish their guiding bores using the reamer. Be sure to clean and oil the guides after reaming.


NOTE

- Be sure to cool down the cylinder head to ambient air temperature.
- Insert the reamer from the combustion chamber and always turn the reamer handle clockwise.

Special tool

🔧 (C): 09916-34542 (Reamer handle)

🔧 (E): 09916-34570 (Valve guide reamer (5.0 mm))

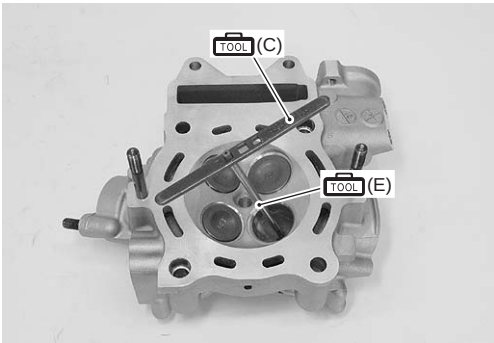

I931H1140170-01


- 9) Reassemble the cylinder head. Refer to "Cylinder Head Disassembly and Assembly (Page 1D-38)".

- 10) Install the cylinder head. Refer to "Engine Top Side Assembly (Page 1D-22)".

Valve Seat Repair

B931H21406033

The valve seats (1) for both the intake and exhaust valves are machined to two different angles. The seat contact surface is cut at 45°.

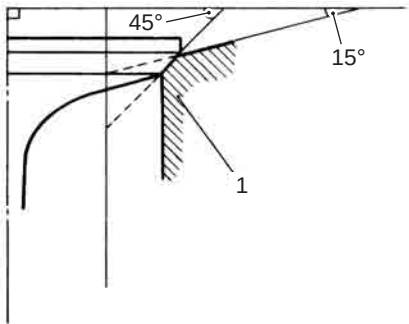

I827H1140074-01

	Intake	Exhaust
Seat angle	15°/45°	←
Seat width	0.9 – 1.1 mm (0.035 – 0.043 in)	←
Valve diameter	30.6 mm (1.20 in)	27.0 mm (1.06 in)
Valve guide I.D.	5.000 – 5.012 mm (0.1969 – 0.1973 in)	←

⚠ CAUTION

- The valve seat contact area must be inspected after each cut.
- Do not use lapping compound after the final cut is made. The finished valve seat should have a velvety smooth finish but not a highly polished or shiny finish. This will provide a soft surface for the final seating of the valve which will occur during the first few seconds of engine operation.


NOTE

After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been reinstalled. Refer to “Valve Clearance Inspection and Adjustment: in Section 0B”.

Engine Bottom Side Disassembly

B931H21406034


- 1) Remove the engine assembly. Refer to “Engine Assembly Removal (Page 1D-13)”.
- 2) Remove the front propeller shaft universal joint (1) and rear propeller shaft boot (2). Refer to “Front Propeller Shaft Removal and Installation: in Section 3D” and “Rear Propeller Shaft Removal and Installation: in Section 3D”.

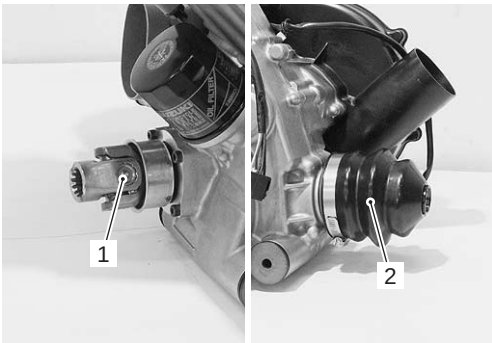

I931H1140171-01

Engine Top Side


Remove the engine top side (1). Refer to “Engine Top Side Disassembly (Page 1D-18)”.

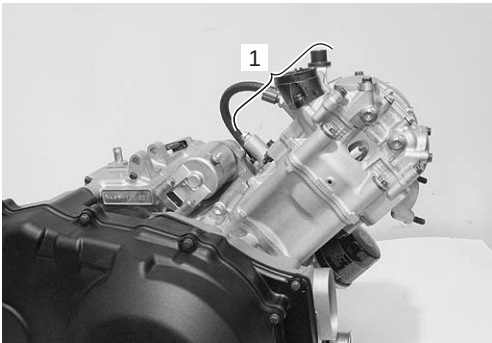

I931H1140172-01

Starter Motor

Remove the starter motor (1).

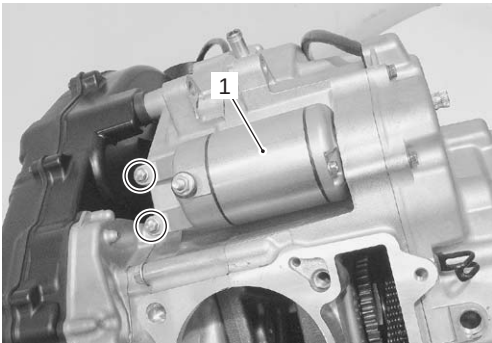


I931H1140173-01

Oil Filter

Remove the oil filter (1) with the special tool.

Special tool


 (A): 09915-40620 (Oil filter wrench)

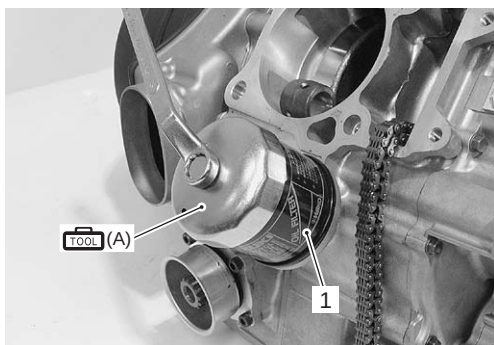

I931H1140174-01

Water Pump

Remove the water pump (1).

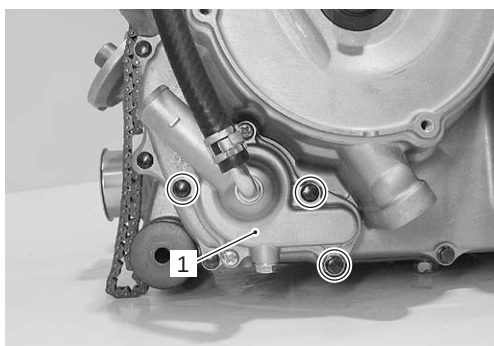

I931H1140176-01


Left Crankshaft Spacer

- 1) Hold the left crankshaft spacer (1) with the special tool.

Special tool

 (A): 09930-44530 (Rotor holder)


- 2) Remove the left crankshaft spacer nut (2) and spacer (1).

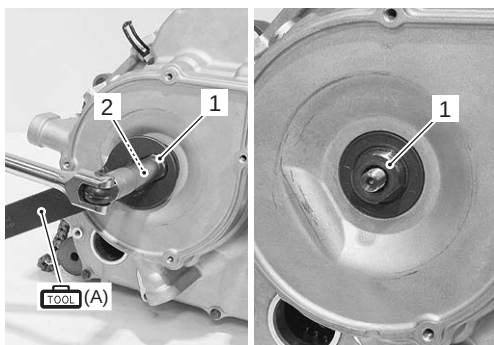

I931H1140177-01

Generator


Remove the generator component parts (1). Refer to "Generator Removal and Installation: in Section 1J".

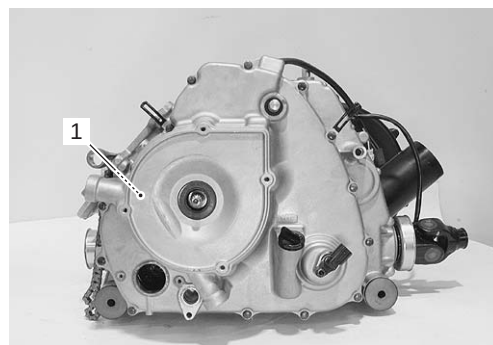

I931H1140178-01


Starter Idle Gear

- 1) Remove the starter idle gear No. 1 (1) and shaft (2).

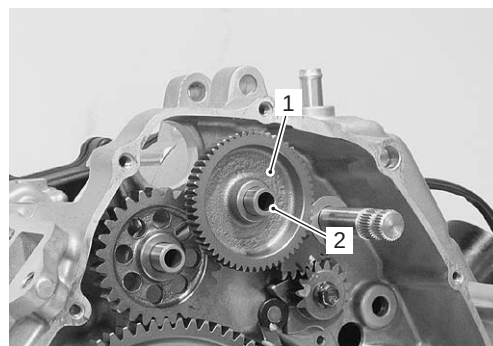

I931H1140180-01


- 2) Remove the starter idle gear No. 2 (3) and shaft (4).

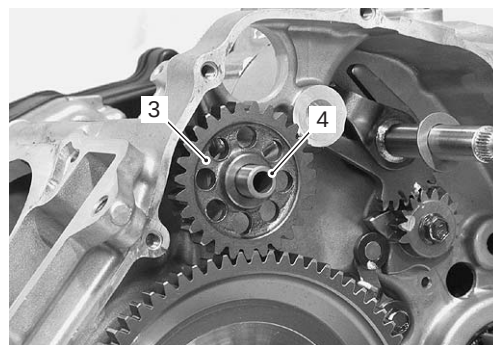

I931H1140181-01

Starter Driven Gear


Remove the key (1) and starter driven gear (2).

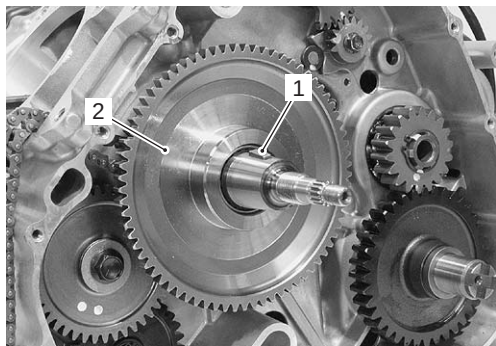

I931H1140182-01


Gearshift System

- 1) Remove the gearshift shaft (1) and washers (2).
- 2) Remove the cam driven gear (3).

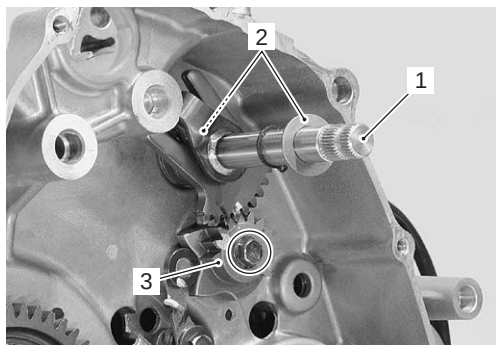

I931H1140183-02

- 3) Remove the gearshift cam stopper bolt (4), gearshift cam stopper (5), washer (6) and return spring (7).

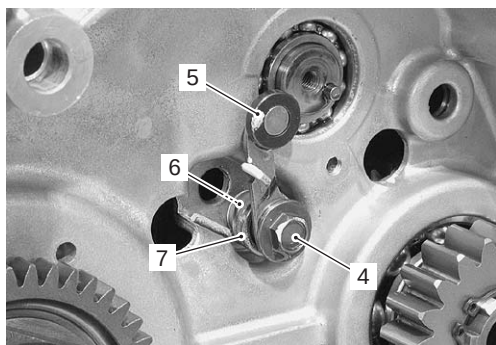

I931H1140184-01


Transfer Output Drive Gear

- 1) Remove the snap ring (1) and transfer output drive gear (2).

Special tool


Tool : 09900-06107 (Snap ring remover (Open type))

- 2) Remove the drive gear spacer (3).

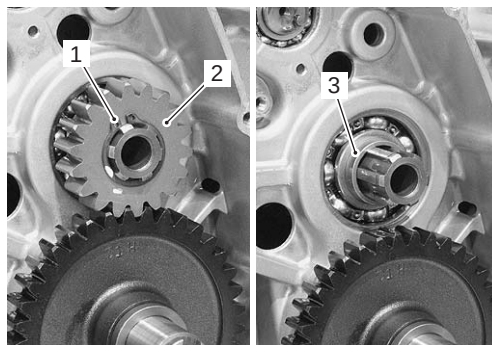

I931H1140185-02


- 3) Remove the output shaft spacer (4).

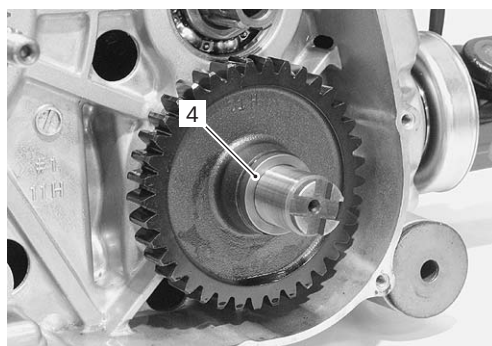

I931H1140186-01

Cam Chain

- 1) Remove the cam chain (1).

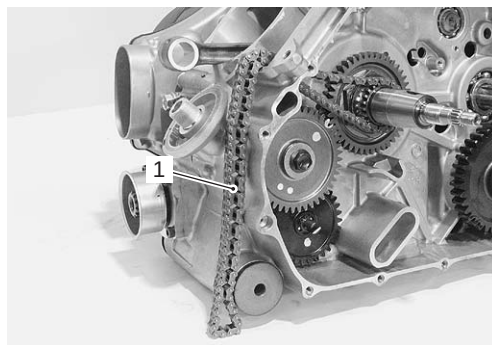

I931H1140187-01


Crank Balancer Driven Gear

- 1) Hold the crank balancer drive gear (1) with the special tools.
- 2) Remove the bolt (2) and crank balancer driven gear (3).

Special tool

 (A): 09920-53740 (Clutch sleeve hub holder)


 (B): 09920-31020 (Extension handle)

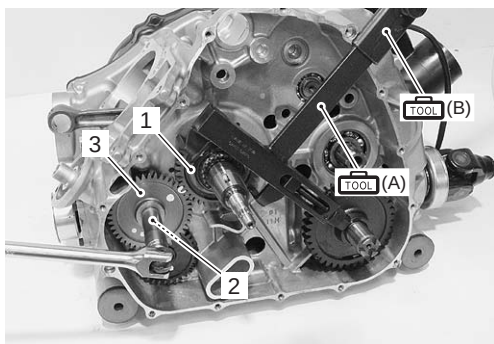

I931H1140188-01

Oil Pump

- 1) Remove the oil pump drive gear (1) and key (2).

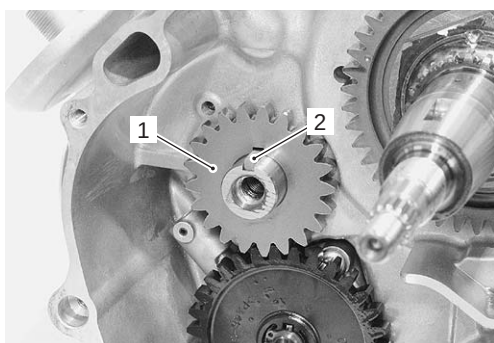


I931H1140189-01

- 2) Remove the snap ring (3).

Special tool

 : 09900-06107 (Snap ring remover (Open type))


- 3) Remove the oil pump driven gear (4).

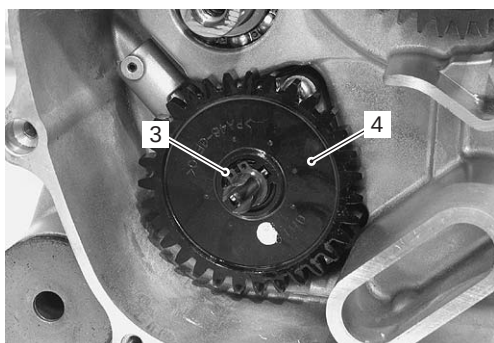

I931H1140190-01

- 4) Remove the pin (5) and washer (6).


- 5) Remove the oil pump (7).

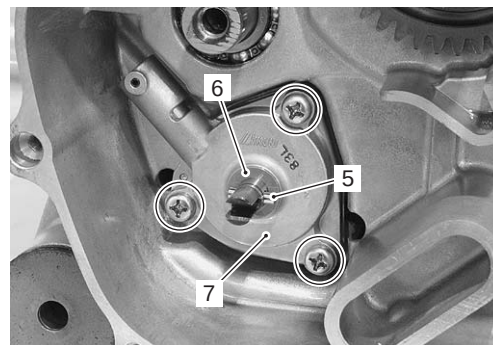

I931H1140191-01

Crank Balancer Drive Gear

- 1) Unlock the crank balancer drive gear nut with a chisel.

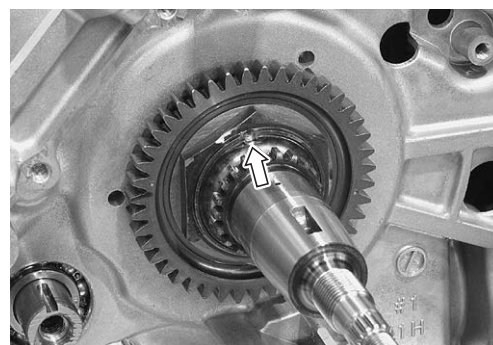

I931H1140192-02


- 2) Remove the crank balancer drive gear nut (1) with the special tools.

Special tool

 (A): 09924-52460 (Socket (52 mm))


 (B): 09920-53740 (Clutch sleeve hub holder)

 (C): 09920-31020 (Extension handle)

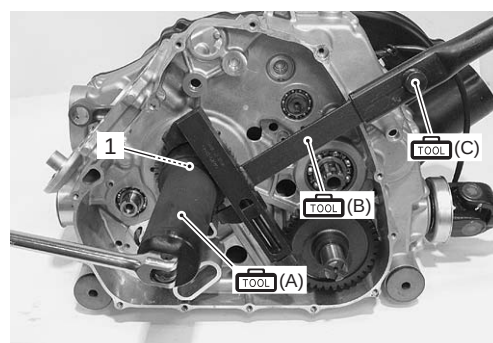


I931H1140193-01

- 3) Remove the washer (2) and crank balancer drive gear (3).

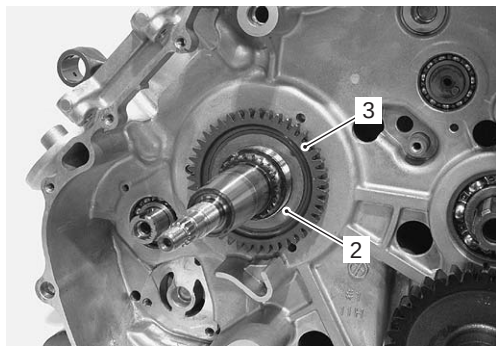

I931H1140194-01


- 4) Remove the pin (4).

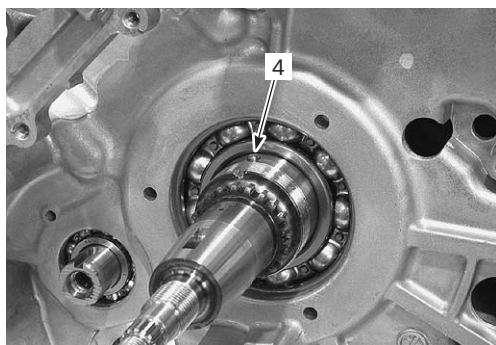

I931H1140195-02

Automatic Transmission


Remove the automatic transmission component parts (1). Refer to “V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A” and “Clutch Shoe Removal and Installation: in Section 5A”.

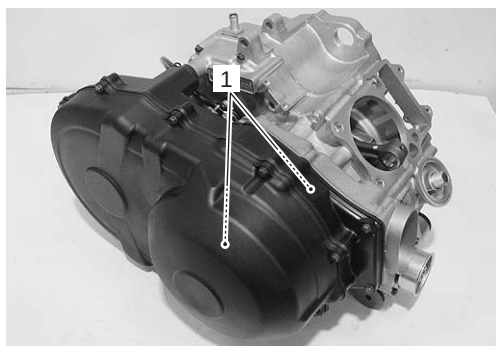

I931H1140196-01

Oil Jet


Remove the oil jet (1) from the right crankcase.

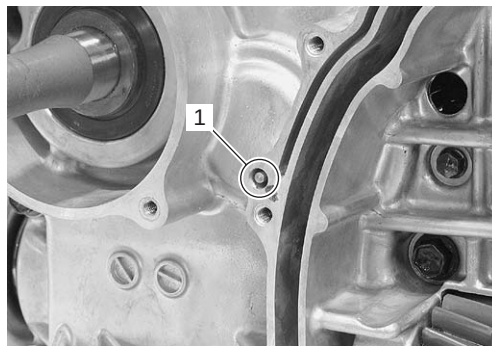

I931H1140197-01


Gear Position Switch

- 1) Remove the gear position switch (1).

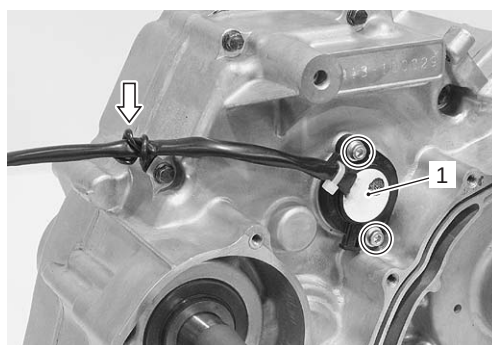

I931H1140198-01

- 2) Remove the gear position switch contacts (2) and springs (3).

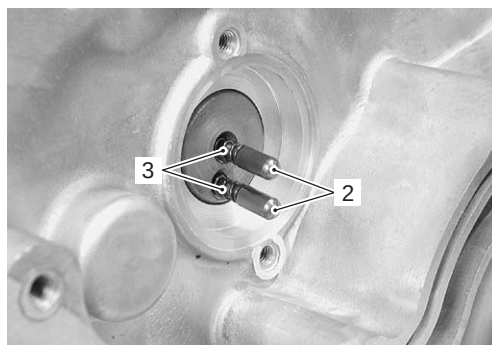


I931H1140199-01

Crankcase

- 1) Remove the crankcase bolts (M6 and M8) and clamp (1).

NOTE

Loosen the crankcase bolts diagonally with the smaller sizes first.

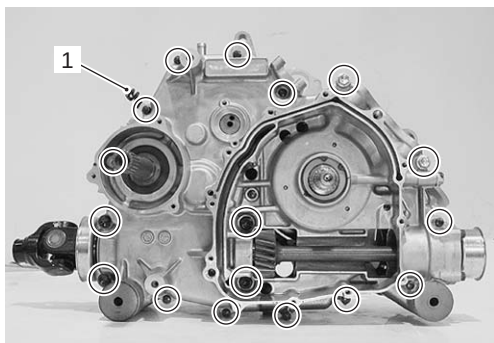

I931H1140200-01

- 2) Separate the crankcase with the special tool.


NOTE

- The crankcase separator plate is parallel with the end face of the crankcase.
- The crankshaft must remain in the left crankcase half.

Special tool


 (A): 09920-13120 (Crankshaft remover)

- 3) Remove the spacer (2).

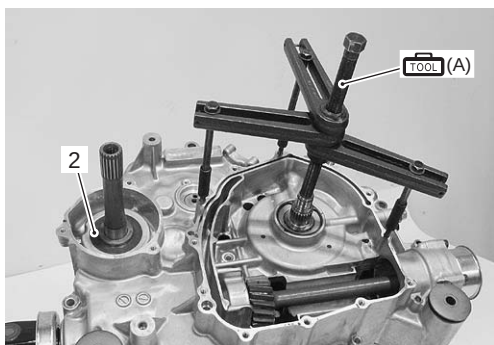

I931H1140201-01


- 4) Remove the dowel pins (3).

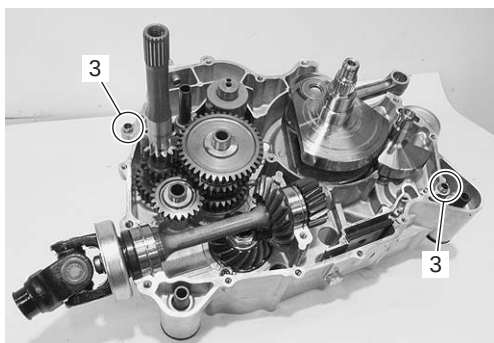

I931H1140202-01

Oil Sump Filter


Remove the oil sump filter (1).

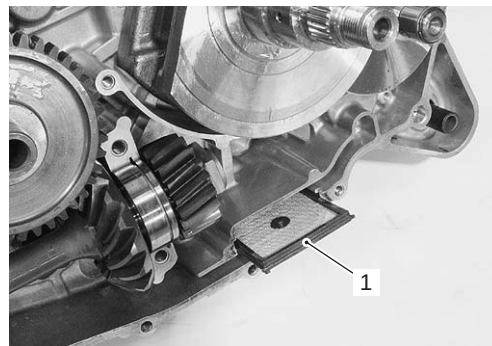

I931H1140203-01

Transfer / Rear Output Shaft / Rear Output Shaft Bevel Gear


Remove the transfer component parts (1), rear output shaft (2) and rear output shaft bevel gear component parts (3). Refer to "Transfer Removal and Installation: in Section 3C" and "Rear Output Shaft / Drive Bevel Gear Removal and Installation: in Section 3D".

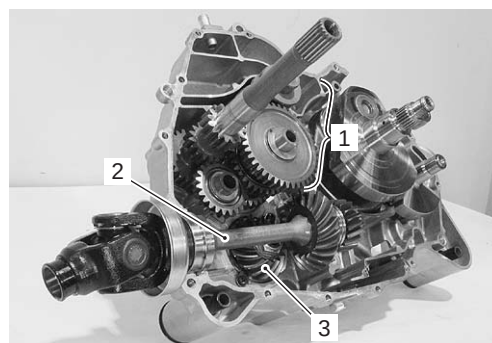

I931H1140204-02

Crank Balancer


Remove the crank balancer (1).

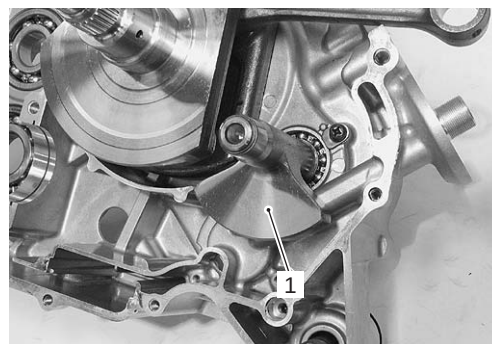

I931H1140205-01

Crankshaft

- 1) Install the removed generator cover (1) and tighten the bolts.

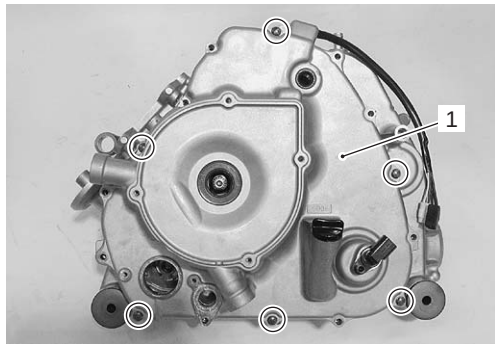


I931H1140206-01

- 2) Remove the crankshaft (2) with the special tool.

Special tool


TOOL (A): 09920-13120 (Crankshaft remover)

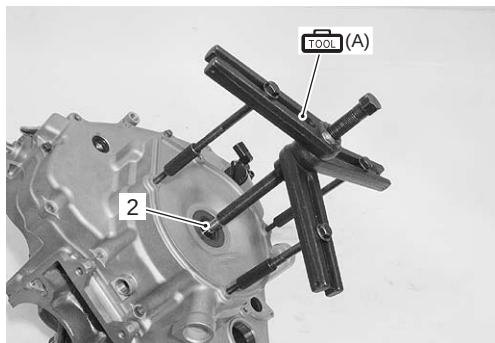

I931H1140207-01

Engine Mount Bushing

Remove the engine mount bushings (1) if necessary.

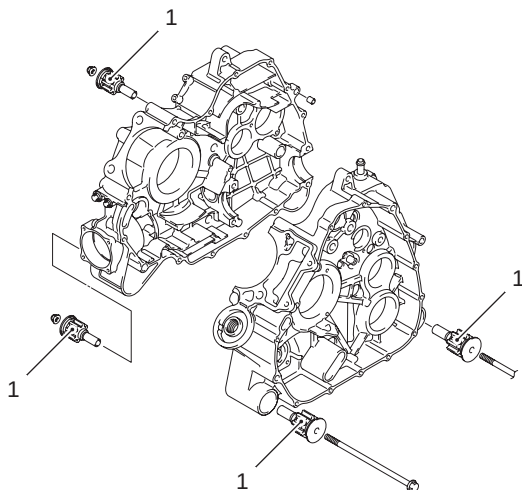

I931H1140208-01

Engine Bottom Side Assembly

B931H21406035

Assemble the engine bottom side in the reverse order of disassembly. Pay attention to the following points:

NOTE

Apply engine oil to each running and sliding part before reassembling.

Crankshaft

Install the crankshaft to left crankcase with the special tools.

CAUTION

Never fit the crankshaft into the crankcase by striking it with a plastic mallet.


Always use the special tool, otherwise the accuracy of the crankshaft alignment will be affected.

Special tool

TOOL (A): 09910-32812 (Crankshaft installer)

TOOL (B): 09910-32820 (Crankshaft installer attachment)


TOOL (C): 09941-53610 (Front fork oil seal hammer)

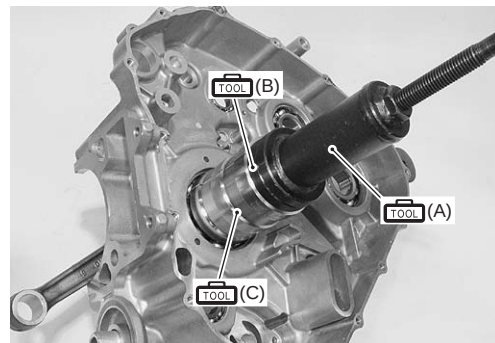

I931H1140209-01

Crank Balancer

Install the crank balancer (1).

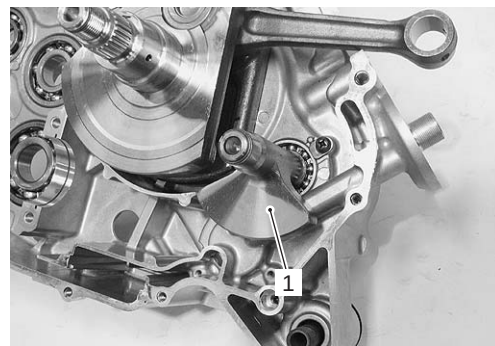

I931H1140210-01


Transfer / Rear Output Shaft / Rear Output Shaft Bevel Gear

- Install the rear output shaft bevel gear component parts (1) and rear output shaft (2). Refer to “**Rear Output Shaft / Drive Bevel Gear Removal and Installation: in Section 3D**”.

NOTE

Check the backlash and tooth before installing the transfer component parts (3). Refer to “**Driven / Drive Bevel Gear Shim Inspection and Adjustment: in Section 3D**”.

- Install the transfer component parts (3). Refer to “**Transfer Removal and Installation: in Section 3C**”.

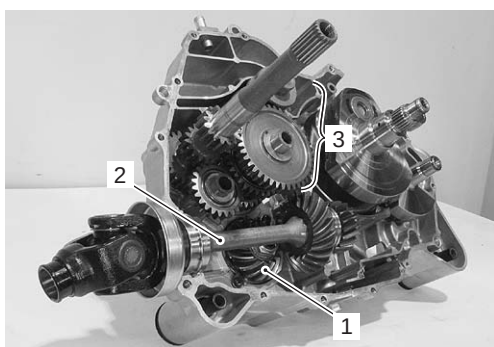


I931H1140212-02

Oil Sump Filter

Install the oil sump filter (1).

NOTE


Fit the projection “A” of the oil sump filter in the concave portion of the crankcase.

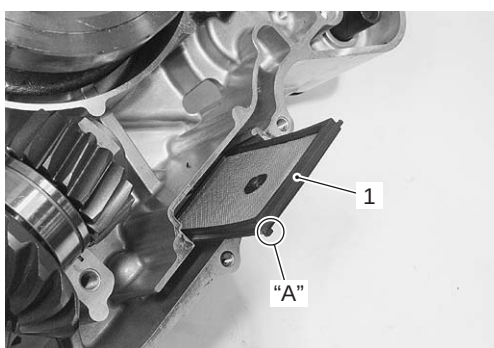

I931H1140213-01

Crankcase

- Wipe the crankcase mating surface (both surfaces) with a cleaning solvent.
- Install the dowel pins (1) to the left crankcase.
- Apply engine oil to the conrod big end and each gear.

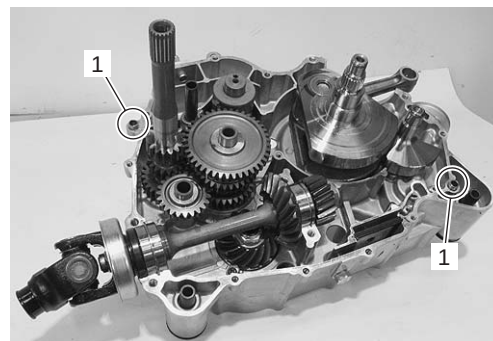


I931H1140214-01

- Apply bond to the mating surface of the right crankcase as follows.

NOTE

- Make surfaces free from moisture, oil, dust and other foreign materials.
- Spread the sealant on surfaces thinly to form an even layer, and assemble the crankcases within a few minutes.
- Take extreme care not to apply sealant to any oil hole, oil groove and bearing.
- Apply sealant to distorted surfaces as it forms a comparatively thick film.

1215 : Sealant 99000-31110 (SUZUKI BOND No.1215 or equivalent)

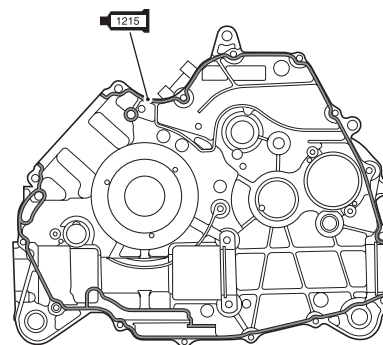

I931H1140215-01

1D-54 Engine Mechanical:

- Apply grease to the oil seals and match the left and right crankcases.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)



I931H1140216-01

- Tighten the crankcase bolts to the specified torque.


NOTE

- Tighten the larger diameter crankcase bolts first and then smaller ones diagonally and evenly.
- Fit the clamp to the bolt "2".

Tightening torque


Crankcase bolt (M6): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

Crankcase bolt (M8): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

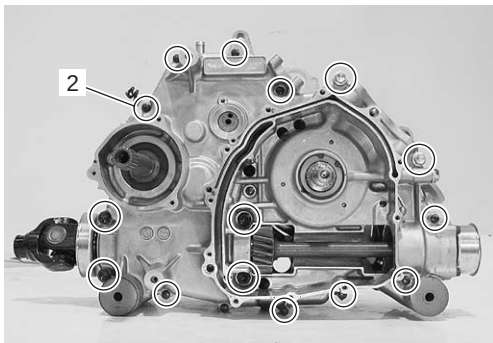


I931H1140217-01

- After the crankcase bolts have been tightened, check if the each shaft rotate smoothly.

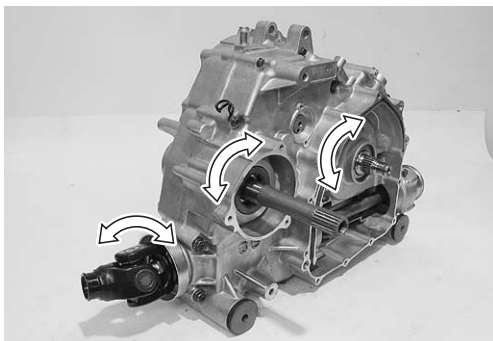

I931H1140218-01

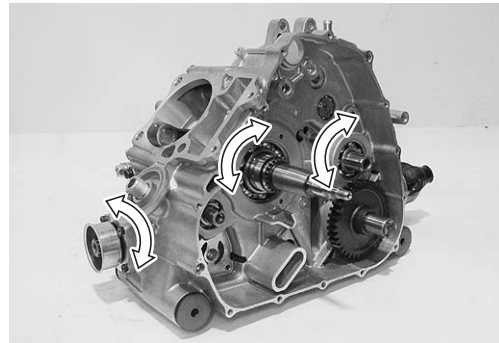

I931H1140219-01


- Apply grease to the O-ring and install the spacer.

CAUTION

Use the new O-ring to prevent oil leakage.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Install the spacer (3).

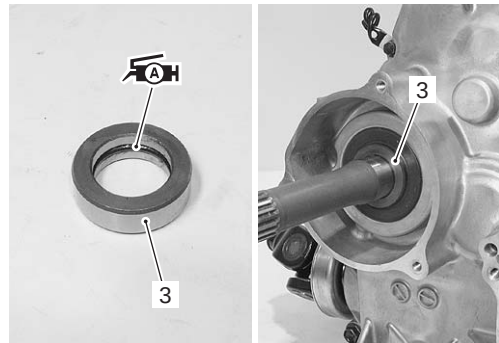

I931H1140221-01


Gear Position Switch

- Install each gear position switch contact (1) and spring (2).
- Apply grease to the O-ring.

CAUTION


Replace the O-ring with a new one.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

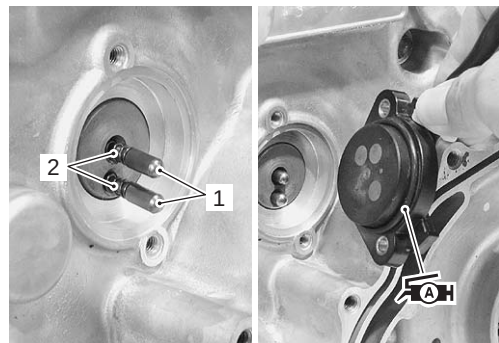

I931H1140222-01

- Tighten the gear position switch mounting bolts.
- Clamp the lead wire firmly.

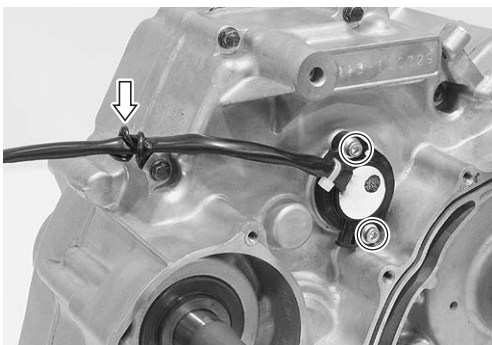


I931H1140223-01

Oil Jet

Apply engine oil to the O-ring.

⚠ CAUTION


Use the new O-ring to prevent oil pressure leak.

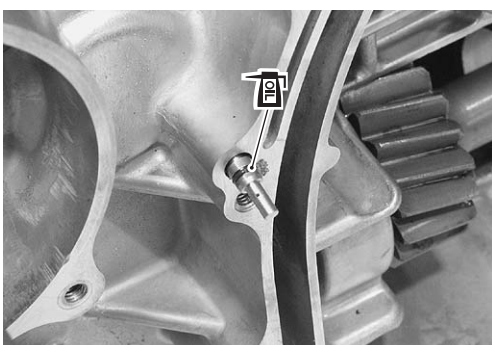

I931H1140224-02

Automatic Transmission


Install the automatic transmission component parts (1). Refer to "V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A" and "Clutch Shoe Removal and Installation: in Section 5A".

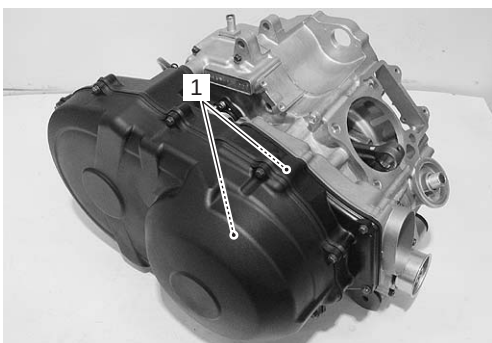

I931H1140225-01


Crank Balancer Drive Gear

- Install the pin (1).

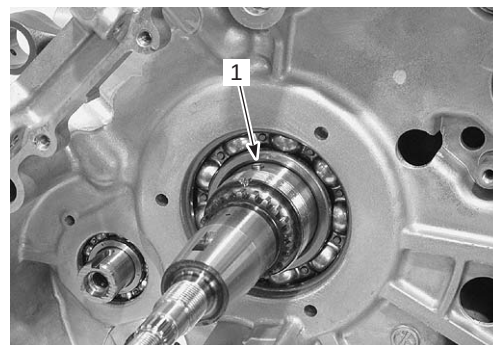

I931H1140226-01

- Install the crank balancer drive gear (2) and washer (3).

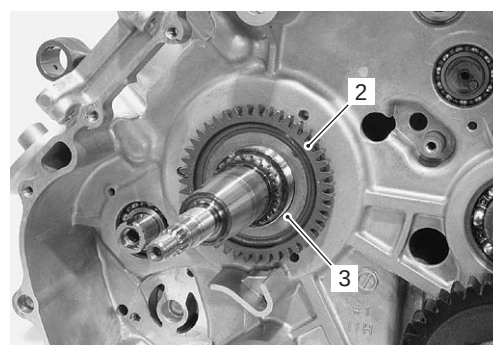

I931H1140227-01

- Hold the crank balancer drive gear with the special tools and tighten the crank balancer drive gear nut to the specified torque with the special tool.

⚠ CAUTION


Do not reuse the crank balancer drive gear nut.

Special tool

- 🔧 (A): 09920-53740 (Clutch sleeve hub holder)
- 🔧 (B): 09924-52460 (Socket (52 mm))
- 🔧 : 09920-31020 (Extension handle)

Tightening torque


Crank balancer drive gear nut (a): 150 N·m (15.0 kgf-m, 108.5 lbf-ft)

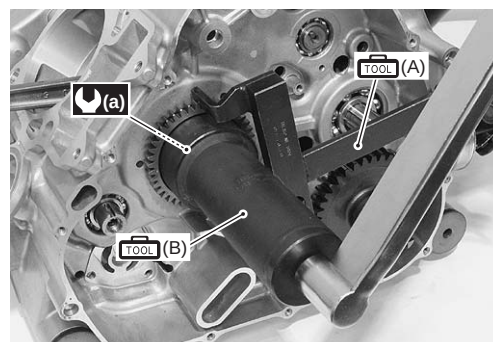

I931H1140228-01

1D-56 Engine Mechanical:

- Lock the crank balancer drive gear nut with a center punch.

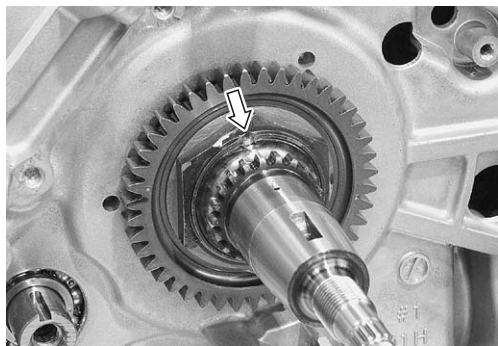


I931H1140229-01

Oil Pump

- Apply thread lock to the oil pump mounting screws and tighten them.

 : Thread lock cement 99000-32110 (THREAD LOCK CEMENT SUPER 1322 or equivalent)

- Install the washer (1) and pin (2).

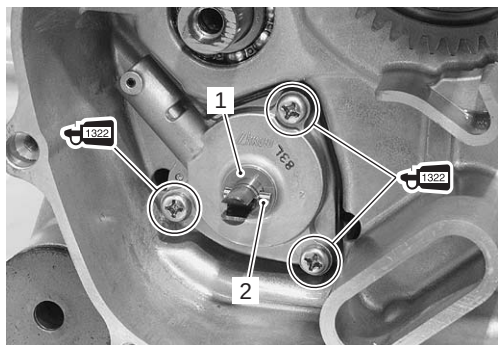

I931H1140230-01


- Install the oil pump driven gear (3) and snap ring (4).

CAUTION

Never reuse a snap ring (4).


Special tool

 : 09900-06107 (Snap ring remover (Open type))

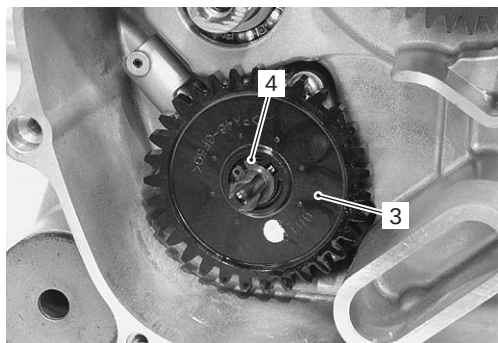

I931H1140231-01

- Install the key (5) and oil pump drive gear (6).

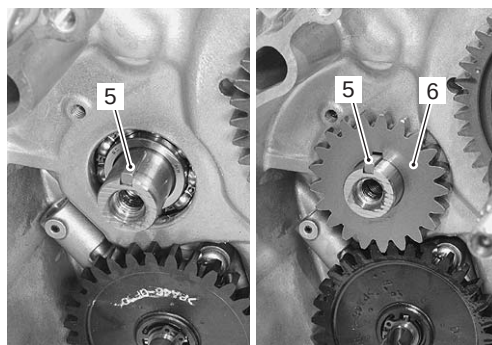


I931H1140233-01

Crank Balancer Driven Gear

- Install the crank balancer driven gear (1).

NOTE

Align the punch mark "A" of the crank balancer drive gear with the punch mark "B" of the crank balancer driven gear (1).

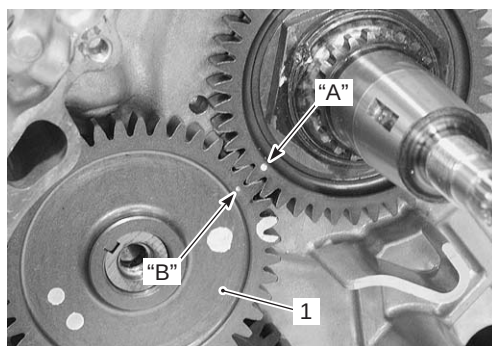

I931H1140234-01

- Apply thread lock to the crank balancer driven gear bolt.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- Hold the crank balancer drive gear with the special tools and tighten the crank balancer driven gear bolt to the specified torque.


Special tool

 (A): 09920-53740 (Clutch sleeve hub holder)

 : 09920-31020 (Extension handle)

Tightening torque


Crank balancer driven gear bolt (a): 50 N·m (5.0 kgf-m, 36.0 lbf-ft)

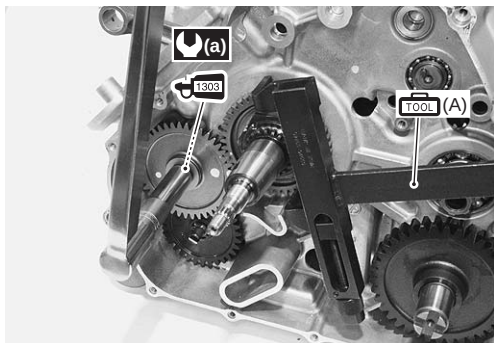

I931H1140235-02

Cam Chain

- Install the cam chain (1) onto the crankshaft sprocket.

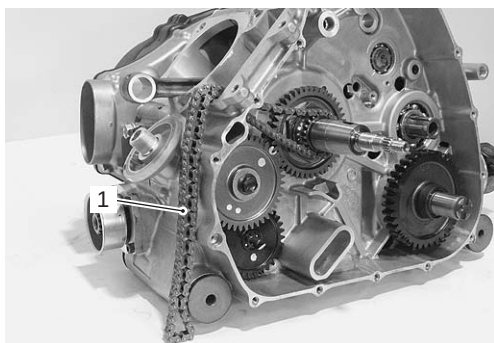

I931H1140232-01

Transfer Output Drive Gear


- Install the drive gear spacer (1) and output shaft spacer (2).
- Install the transfer output drive gear (3) and snap ring (4).

CAUTION

Never reuse a snap ring (4).

Special tool

 : 09900-06107 (Snap ring remover (Open type))

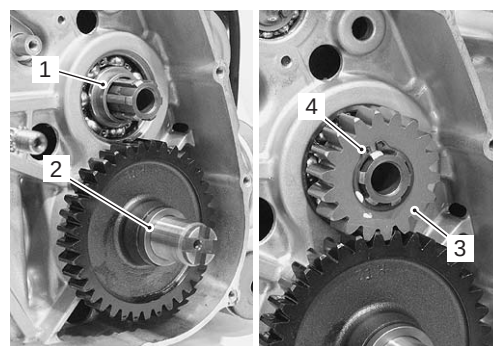

I931H1140236-02


Gearshift System

- Install the gearshift cam stopper (1), bolt (2), washer (3) and return spring (4).

NOTE

Hook the return spring end "A" to the gearshift cam stopper (1).

- Check the gearshift cam stopper moves smoothly.

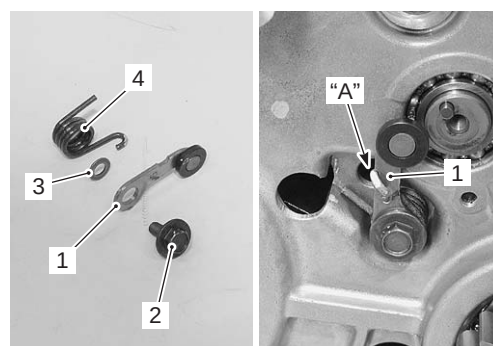


I931H1140237-02

- Install the gearshift cam stopper plate (5).

NOTE

Align the gearshift cam pin "B" with the gearshift cam stopper plate hole "C".

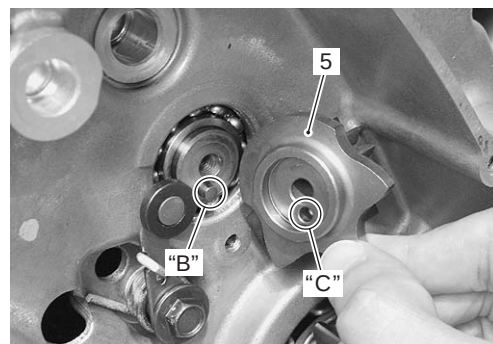

I931H1140238-01

- Install the washers (6).




I931H1140239-02

- Install the gearshift shaft (7).

NOTE


Align the punch mark "D" of the gearshift shaft (7) with the punch mark "E" of gearshift cam stopper plate.

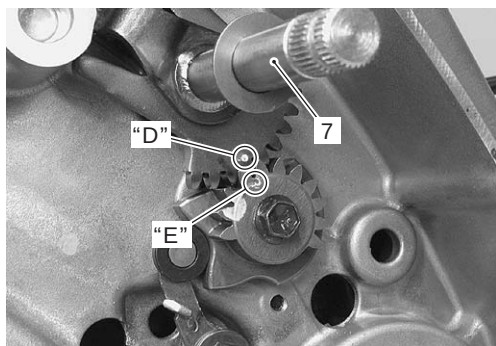

I931H1140240-02

Starter Driven Gear


- Apply engine oil to the starter driven gear bearing.
- Install the starter driven gear (1) and key (2).

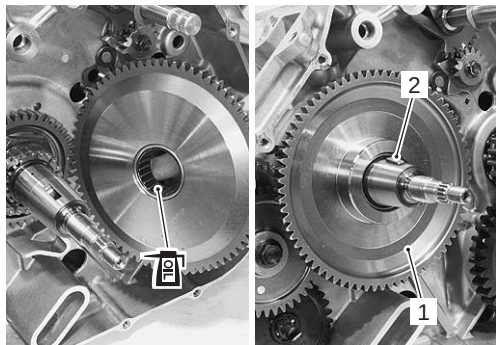

I931H1140241-01


Starter Idle Gear

- Install the shaft (1) and starter idle gear No. 2 (2).

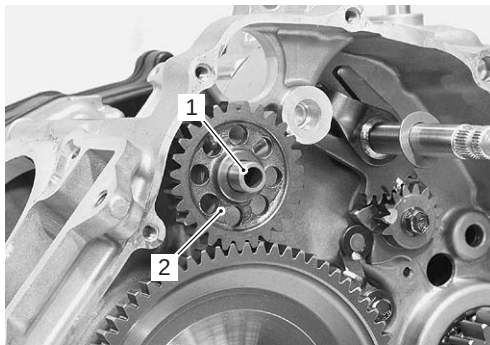

I931H1140242-01


- Install the shaft (3) and starter idle gear No. 1 (4).

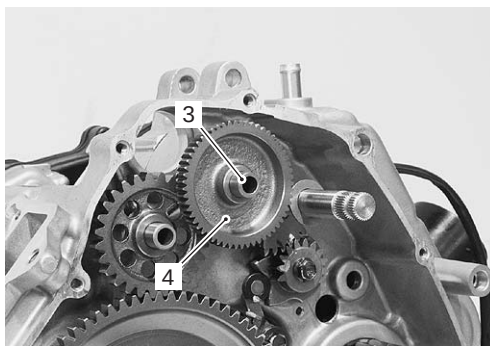

I931H1140243-01

Generator

Install the generator component parts (1). Refer to "Generator Removal and Installation: in Section 1J".

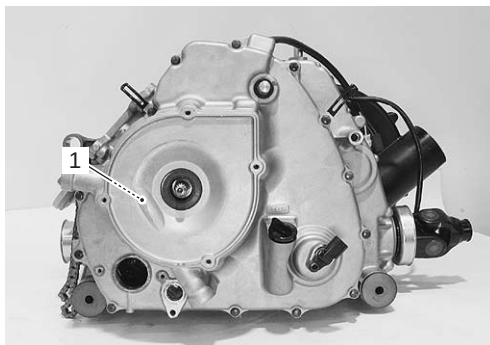

I931H1140244-01

Left Crankshaft Spacer


- Apply grease to the O-ring and lip of the oil seal.

CAUTION

Replace the O-ring with a new one.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Install the left crankshaft spacer.

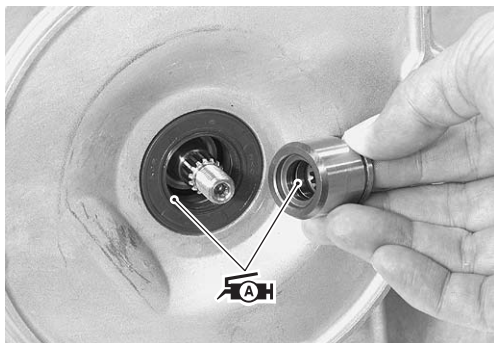

I931H1140245-01


- Hold the left crankshaft spacer with the special tool and tighten the left crankshaft spacer nut to the specified torque.

Special tool

 (A): 09930-44530 (Rotor holder)

Tightening torque

Left crankshaft spacer nut (a): 38 N·m (3.8 kgf-m, 27.5 lbf-ft)

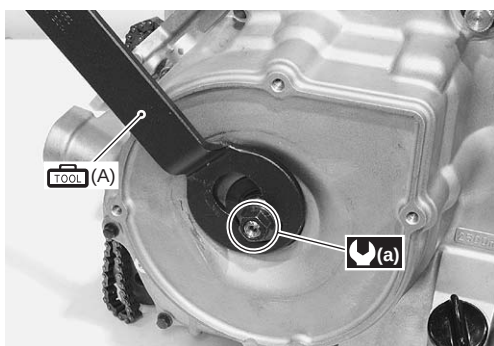

I931H1140246-01

Water Pump


- Apply grease to the O-rings.

CAUTION

Replace the O-rings with new ones.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Install the water pump with the slot on the pump shaft end "A" securely engaged with the flat "B" on the oil pump shaft.

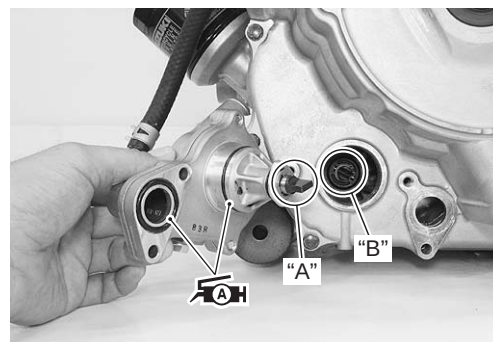


I931H1140247-01

- Tighten the water pump mounting bolts to the specified torque.

Tightening torque


Water pump mounting bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

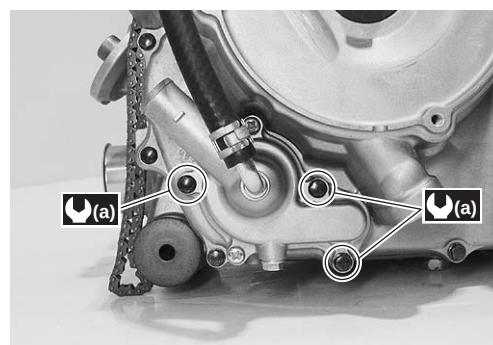

I931H1140248-01

Oil Filter / Starter Motor

Install a new oil filter (1) and starter motor (2). Refer to “Engine Oil and Filter Replacement: in Section 0B” and “Starter Motor Removal and Installation: in Section 1I”.

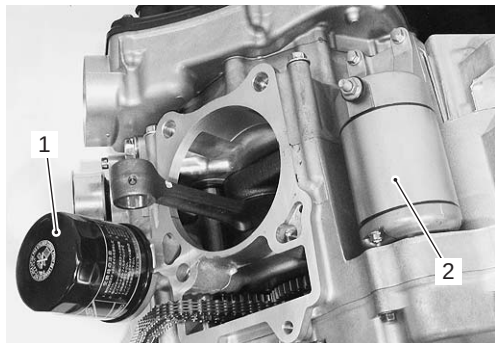

I931H1140287-01

Engine Top Side

Assemble the engine top side (1). Refer to “Engine Top Side Assembly (Page 1D-22)”.



I931H1140249-01

Conrod and Crankshaft Inspection

B931H21406036

Refer to “Engine Bottom Side Disassembly (Page 1D-46)”.

Refer to “Engine Bottom Side Assembly (Page 1D-52)”.

Conrod Small End I.D.

Measure the conrod small end inside diameter with the dial calipers.


If conrod small end inside diameter exceeds the service limit, replace the conrod.

Special tool

 (A): 09900-20605 (Dial calipers (10 – 34 mm))

Conrod small end I.D.

Service limit: 20.040 mm (0.7890 in)

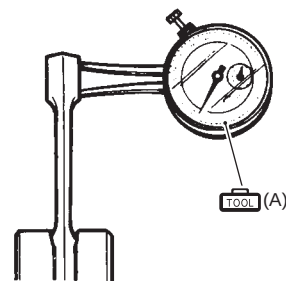

I831G1140292-02

Conrod Deflection

Wear on the big end of the conrod can be estimated by checking the movement of the small end of the rod. This method can also check the extent of wear on the parts of the conrod's big end.

Special tool


 (A): 09900-20701 (Dial gauge chuck)

 (B): 09900-20607 (Dial gauge)

 (C): 09900-21304 (V blocks)

Conrod deflection

Service Limit: 3.0 mm (0.12 in)

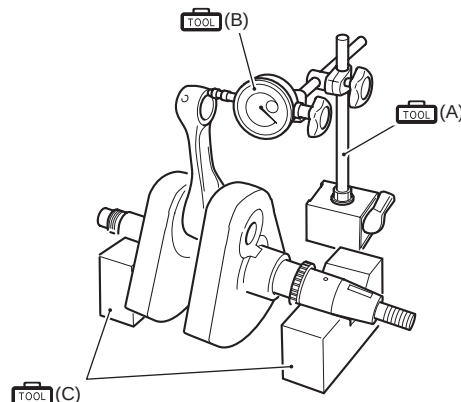

I831G1140293-01

Conrod Big End Side Clearance


Check the conrod big end side clearance with the thickness gauge. If the clearance exceeds the limit, replace the crankshaft assembly and conrod with a new one.

Special tool

 (A): 09900-20803 (Thickness gauge)

Conrod big end side clearance

Service limit: 1.0 mm (0.04 in)

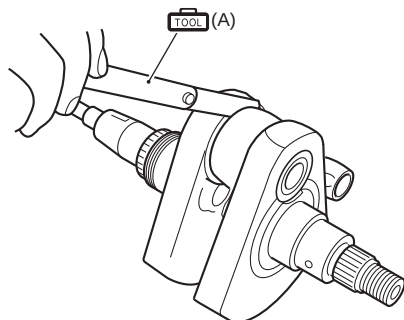

I831G1140294-01

Crankshaft Runout

Support the crankshaft using V-blocks and measure the crankshaft runout using the dial gauge, as shown. If the runout exceeds the service limit, replace the crankshaft with a new one.

NOTE

- Place the crankshaft onto the V-blocks so that it becomes horizontally.
- Measure the runout from the tips of the crankshaft.

Special tool


 (A): 09900-20607 (Dial gauge)

 : 09900-20701 (Dial gauge chuck)

 : 09900-21304 (V blocks)

Crankshaft runout

Service limit: 0.08 mm (0.003 in)

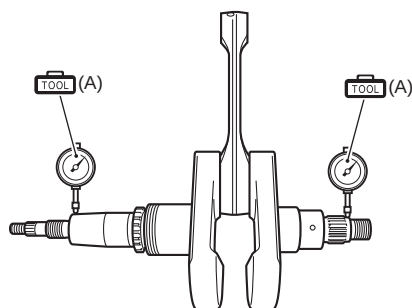


I931H1140250-01

Width Between Crankshaft Webs

B931H21406037

Measure the width between crankshaft webs "a".

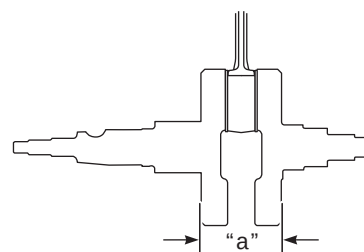

I931H1140251-01

Width between crankshaft webs "a"


Standard: 70.9 – 71.1 mm (2.79 – 2.80 in)

Crankshaft Oil Seal and Driveshaft Spacer Oil Seal Inspection


B931H21406038

Refer to "Engine Bottom Side Disassembly (Page 1D-46)".

Refer to "Engine Bottom Side Assembly (Page 1D-52)". Check the oil seals for damage. If any damage is found, replace the oil seal with a new one. Refer to "Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation (Page 1D-62)".

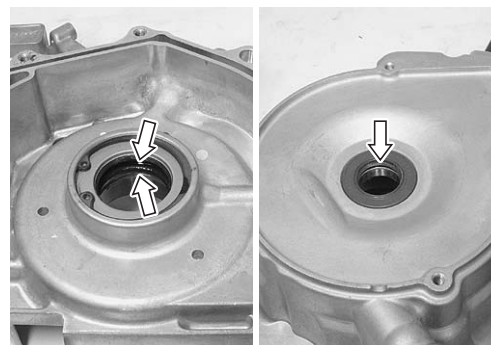Crankshaft oil seal

I931H1140252-01

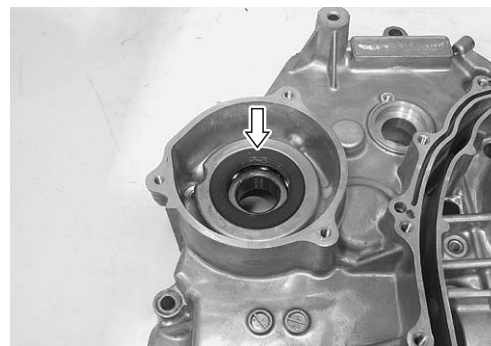Driveshaft spacer oil seal


I931H1140253-01

Bearing (Crankcase and Generator Cover)
Inspection

Refer to “Engine Bottom Side Disassembly (Page 1D-46)”.

Refer to “Engine Bottom Side Assembly (Page 1D-52)”. Rotate the bearing inner race by finger to inspect for abnormal play, noise and smooth rotation while the bearings are in the crankcase. Replace the bearing if there is anything unusual. Refer to “Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation (Page 1D-62)”.


Left crankcase

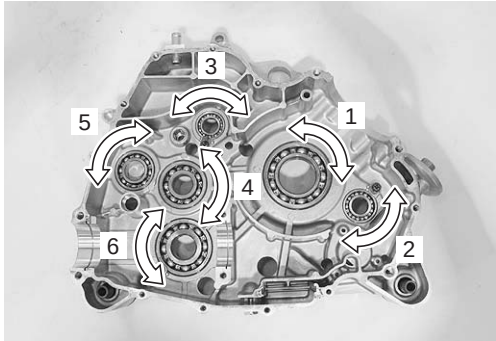

I931H1140254-02

1. Crankshaft bearing (LH)	4. Countershaft bearing (LH)
2. Crank balancer bearing (LH)	5. Driveshaft bearing (LH)
3. Gearshift bearing	6. Output shaft bearing (RH)


Right crankcase

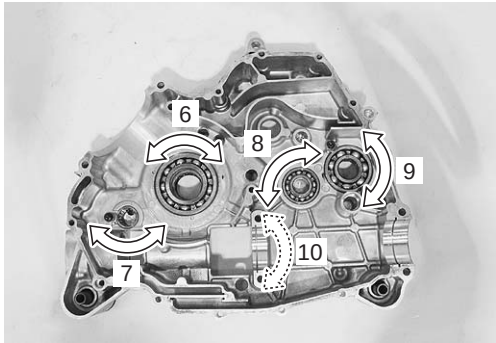

I931H1140255-02

6. Crankshaft bearing (RH)	9. Driveshaft bearing (RH)
7. Crank balancer bearing (RH)	10. Front output shaft bearing (Rear)
8. Countershaft bearing (RH)	

Generator cover

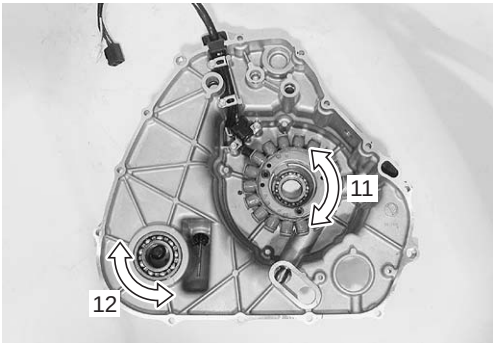

I931H1140256-01

11. Crankshaft spacer bearing	12. Output shaft bearing (LH)
-------------------------------	-------------------------------

Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation


B931H21406040

Removal

- 1) Remove the engine assembly from the frame. Refer to “Engine Assembly Removal (Page 1D-13)”.
- 2) Remove the engine top side. Refer to “Engine Top Side Disassembly (Page 1D-18)”.
- 3) Disassemble the engine bottom side. Refer to “Engine Bottom Side Disassembly (Page 1D-46)”.

Left crankcase

- 1) Remove the each bearing retainer.

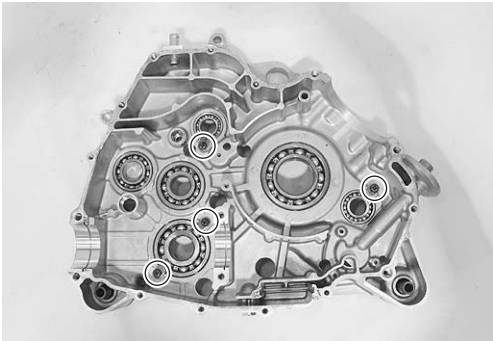


I931H1140257-01

- 2) Remove the driveshaft bearing (1) with the special tool.

Special tool

TOOL (A): 09921-20240 (Bearing remover set)

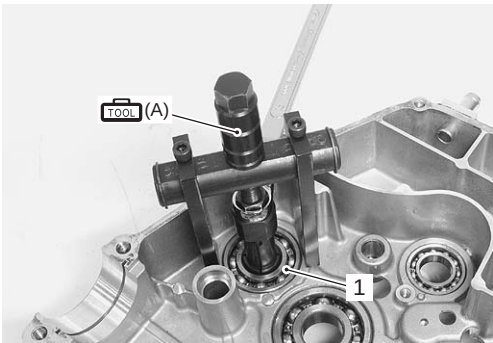


I931H1140258-01

- 3) Remove the other bearings (2) with the special tool.

Special tool

 (B): 09913-70210 (Bearing installer set (10 - 75))

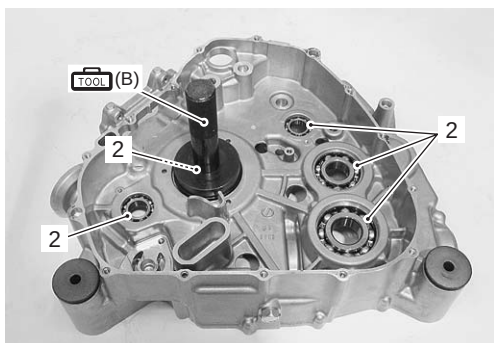


I931H1140259-01

Right crankcase

- 1) Remove the driveshaft spacer oil seal (1) with the special tool.

Special tool

 (A): 09913-50121 (Oil seal remover)

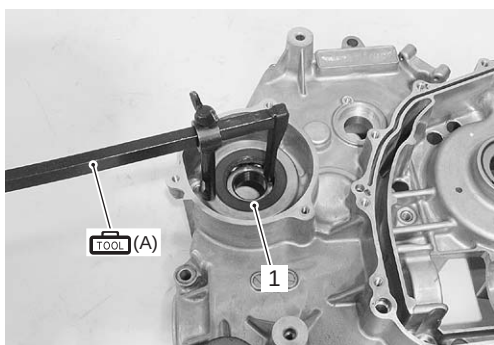


I931H1140260-01

- 2) Remove the snap ring (2).

Special tool

 : 09900-06108 (Snap ring remover (Close type))

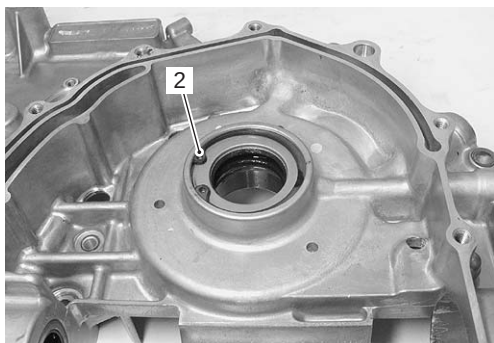


I931H1140261-01

- 3) Remove the crankshaft oil seals (3) and (4) with the special tool.


Special tool

 (A): 09913-50121 (Oil seal remover)

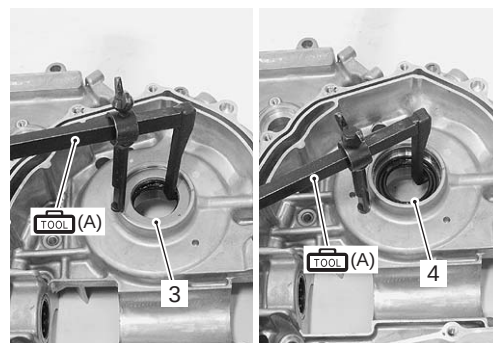

I931H1140262-01

- 4) Remove the bearing retainers.

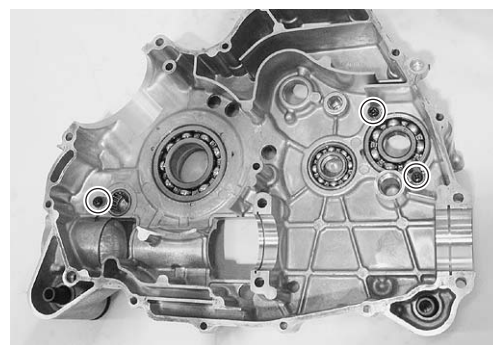


I931H1140264-01

- 5) Remove the each bearing (5) with the special tool.

Special tool

 (B): 09921-20240 (Bearing remover set)

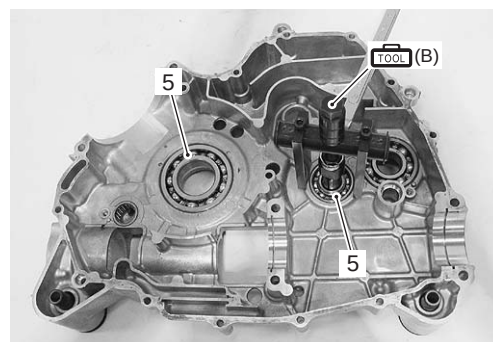


I931H1140263-01

- 6) Remove the each bearing (6) with the special tool.

Special tool

TOOL (C): 09913-70210 (Bearing installer set (10 – 75))

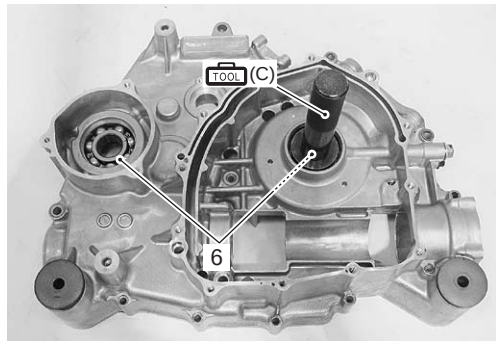


I931H1140265-01

- 7) Remove the front output shaft bearing (7) with the special tools.

Special tool

TOOL (D): 09923-74511 (Bearing remover)

TOOL (E): 09930-30104 (Rotor remover sliding shaft)

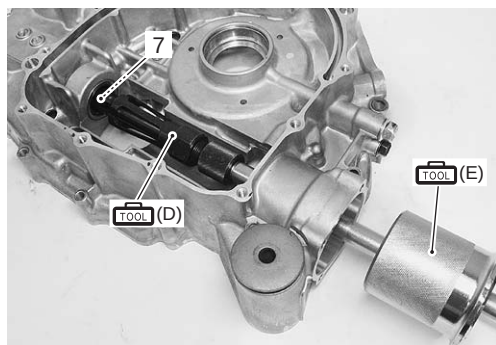


I931H1140266-02

Generator cover

- 1) Remove the crankshaft oil seal (1) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)

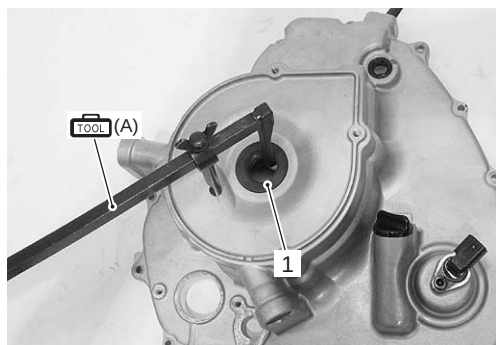


I931H1140267-01

- 2) Remove the generator stator. Refer to “Generator Removal and Installation: in Section 1J”.

- 3) Remove the snap ring (2) with the special tool.

Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

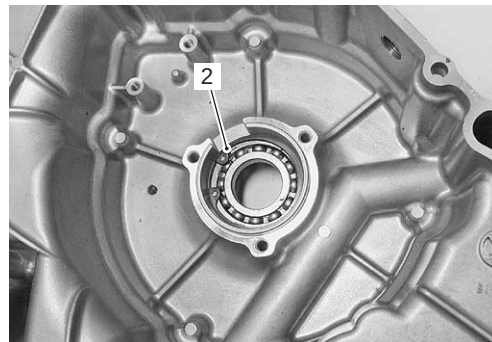


I931H1140268-01

- 4) Remove the each bearing (3) with the special tool.

Special tool

TOOL (B): 09921-20240 (Bearing remover set)

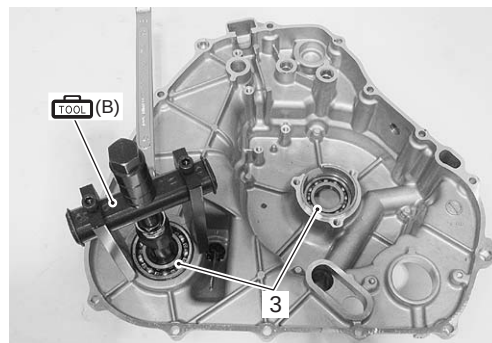


I931H1140269-01

- 5) Remove the oil seal (4) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)

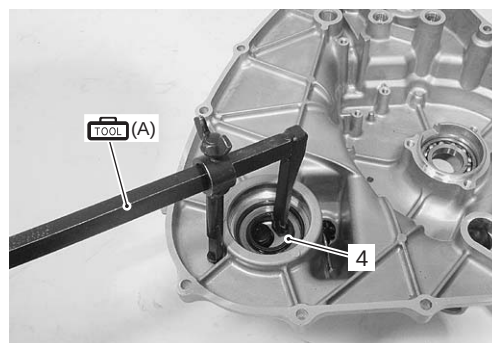

I931H1140270-01

Installation


⚠ CAUTION

The removed bearing, oil seal and snap ring must be replaced with new ones.

Generator cover

- 1) Install the oil seal (1) with suitable socket.
- 2) Apply grease to the lip of oil seal (1).

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

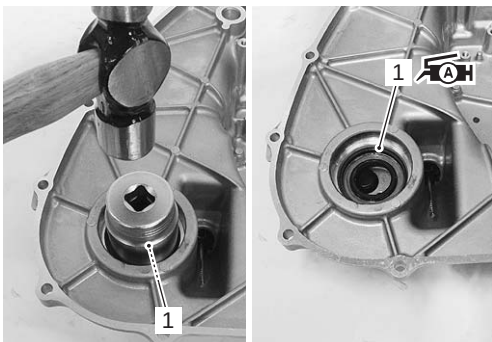


I931H1140271-01

- 3) Install the each bearing (2) with the special tool.

Special tool

 **(A): 09913-70210 (Bearing installer set (10 - 75))**

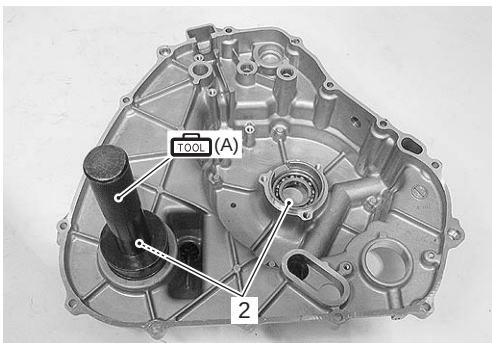


I931H1140272-01

- 4) Install the snap ring (3).

Special tool

 **: 09900-06108 (Snap ring remover (Close type))**

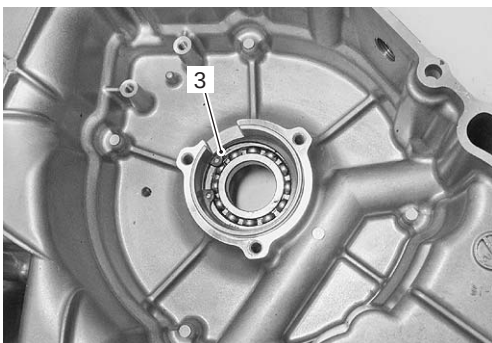

I931H1140273-01


- 5) Install the generator stator. Refer to "Generator Removal and Installation: in Section 1J".
- 6) Install the crankshaft oil seal (4) with the special tool.

Special tool

 **(A): 09913-70210 (Bearing installer set (10 - 75))**

- 7) Apply grease to the lip of oil seal (4).

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

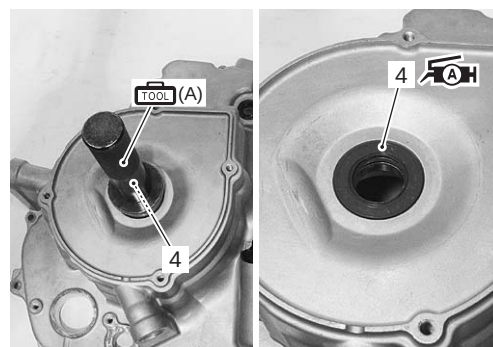

I931H1140274-01

Right crankcase


- 1) Install the each bearing (1) with the special tool.

NOTE


The stamped mark side of the bearing faces inside of crankcase.

Special tool

 **(A): 09913-70210 (Bearing installer set (10 - 75))**

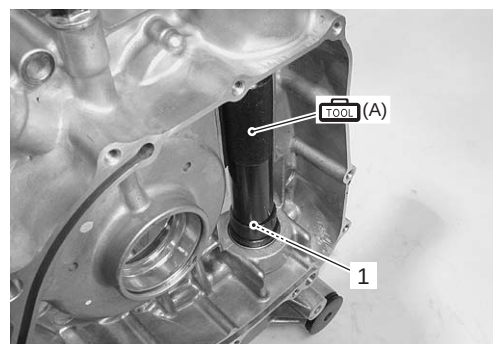


I931H1140275-01

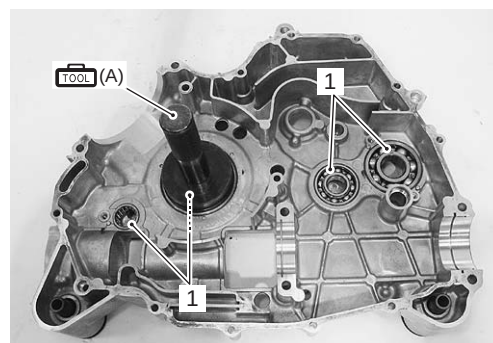

I931H1140276-02

- 2) Apply thread lock to the bearing retainer screws and tighten them.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

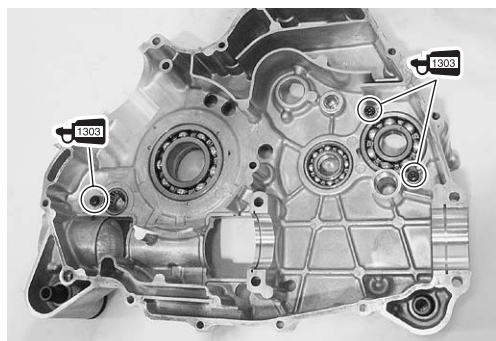

I931H1140277-01

- 3) Install the crankshaft oil seal No. 1 (2) with the special tool.

NOTE


The plate side of the crankshaft oil seal No. 1 (2) inside of the crankcase.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

- 4) Apply grease to the lip of oil seal (2).

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

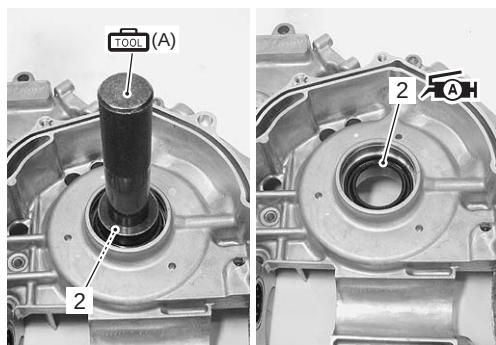

I931H1140278-02

- 5) Install the crankshaft oil seal No. 2 (3) with the special tool.

NOTE


The plate side of the crankshaft oil seal No. 2 (3) faces outside of the crankcase.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))


- 6) Apply grease to the lip of oil seal (3).

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

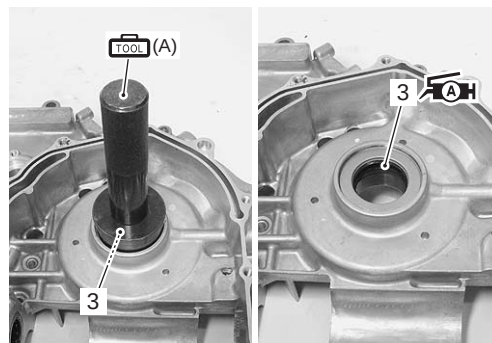

I931H1140279-02

- 7) Install the snap ring (4).

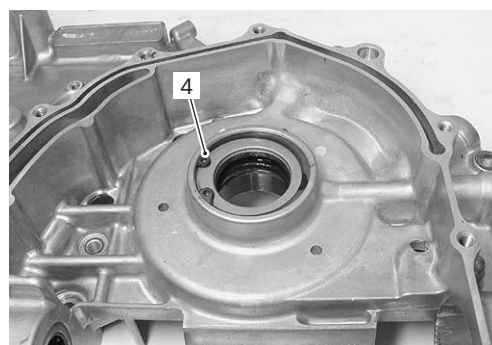

I931H1140280-01


- 8) Install the driveshaft spacer oil seal (5) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

- 9) Apply grease to the lip of oil seal (5).

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

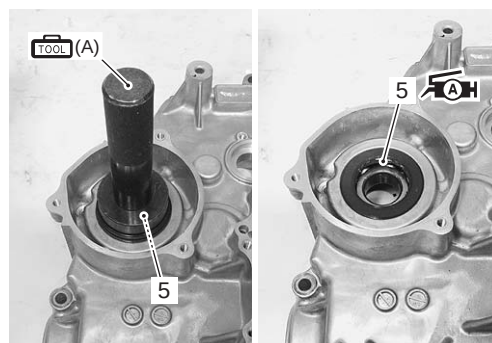

I931H1140281-02

Left crankcase


- 1) Install the each bearing (1) with the special tool.

NOTE

The stamped mark side of the bearing faces inside of crankcase.

Special tool


 (A): 09913-70210 (Bearing installer set (10 – 75))

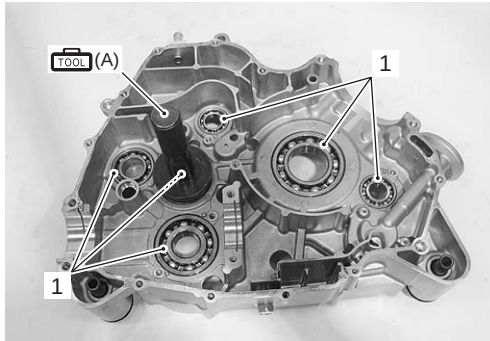

I931H1140282-01

- 2) Apply thread lock to the bearing retainer screws and tighten them.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

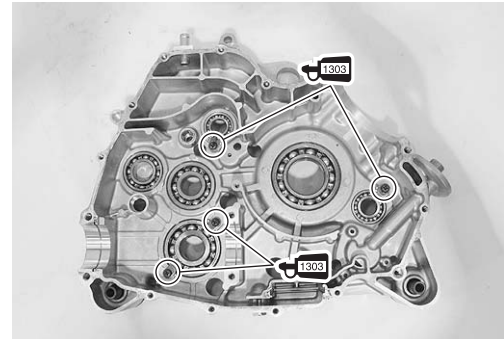

I931H1140283-01

Specifications

Service Data**Valve + Valve Guide**

Unit: mm (in)

B931H21407001

Item		Standard	Limit
Valve diam.	IN.	30.6 (1.20)	—
	EX.	27.0 (1.06)	—
Valve clearance (When cold)	IN.	0.05 – 0.10 (0.002 – 0.004)	—
	EX.	0.17 – 0.22 (0.007 – 0.009)	—
Valve guide to valve stem clearance	IN.	0.010 – 0.037 (0.0004 – 0.0015)	—
	EX.	0.030 – 0.057 (0.0012 – 0.0022)	—
Valve guide I.D.	IN. & EX.	5.000 – 5.012 (0.1969 – 0.1973)	—
Valve stem O.D.	IN.	4.975 – 4.990 (0.1959 – 0.1965)	—
	EX.	4.955 – 4.970 (0.1951 – 0.1957)	—
Valve stem deflection	IN. & EX.	—	0.35 (0.014)
Valve stem runout	IN. & EX.	—	0.05 (0.002)
Valve head thickness	IN. & EX.	—	0.5 (0.02)
Valve stem end length	IN. & EX.	—	2.3 (0.09)
Valve seat width	IN. & EX.	0.9 – 1.1 (0.035 – 0.043)	—
Valve head radial runout	IN. & EX.	—	0.03 (0.001)
Valve spring free length	IN. & EX.	—	38.8 (1.53)
Valve spring tension	IN. & EX.	182 – 210 N (18.6 – 21.4 kgf, 41.0 – 47.2 lbs) at length 31.5 mm (1.24 in)	—

1D-68 Engine Mechanical:**Camshaft + Cylinder Head**

Unit: mm (in)

Item	Standard		Limit
Cam height	IN.	33.45 – 33.50 (1.317 – 1.319)	33.15 (1.305)
	EX.	33.47 – 33.52 (1.318 – 1.320)	33.17 (1.306)
Camshaft journal oil clearance	Camshaft end side	0.028 – 0.059 (0.0011 – 0.0023)	0.150 (0.0059)
	Other side	0.032 – 0.066 (0.0013 – 0.0026)	
Camshaft journal holder I.D.	Camshaft end side	17.512 – 17.525 (0.6894 – 0.6900)	—
	Other side	22.012 – 22.025 (0.8666 – 0.8671)	
Camshaft journal O.D.	Camshaft end side	17.466 – 17.484 (0.6876 – 0.6883)	—
	Other side	21.959 – 21.980 (0.8645 – 0.8654)	
Camshaft runout	—		0.10 (0.004)
Rocket arm I.D.	IN. & EX.	12.000 – 12.018 (0.4724 – 0.4731)	
Rocket arm shaft O.D.	IN. & EX.	11.973 – 11.984 (0.4714 – 0.4718)	
Cylinder head distortion	—		0.05 (0.002)
Cylinder head cover distortion	—		0.05 (0.002)

Cylinder + Piston + Piston Ring

Unit: mm (in)

Item	Standard			Limit
Compression pressure (Automatic-decomp. actuated)	Approx. 1 000 kPa (10.0 kgf/cm ² , 142 psi)			—
Piston-to-cylinder clearance	0.030 – 0.040 (0.0012 – 0.0016)			0.120 (0.0047)
Cylinder bore	87.500 – 87.515 (3.4449 – 3.4455)			Nicks or Scratches
Piston diam.	87.465 – 87.480 (3.4435 – 3.4441) Measure at 15 mm (0.6 in) from the skirt end.			87.380 (3.4402)
Cylinder distortion	—			0.05 (0.002)
Piston ring free end gap	1st	Approx. 6.2 (0.24)		4.9 (0.19)
	2nd	2R	Approx. 12.0 (0.47)	9.6 (0.38)
Piston ring end gap	1st	0.08 – 0.20 (0.003 – 0.008)		0.50 (0.020)
	2nd	2R	0.10 – 0.25 (0.004 – 0.010)	0.50 (0.020)
Piston ring-to-groove clearance	1st	—		0.180 (0.0071)
	2nd	—		0.150 (0.0059)
Piston ring groove width	1st	0.78 – 0.80 (0.0307 – 0.0315)		—
		1.30 – 1.32 (0.051 – 0.052)		—
	2nd	1.01 – 1.03 (0.040 – 0.041)		—
	Oil	2.51 – 2.53 (0.099 – 0.100)		—
Piston ring thickness	1st	0.71 – 0.76 (0.028 – 0.030)		—
		1.08 – 1.10 (0.0425 – 0.0433)		—
	2nd	2R	0.97 – 0.99 (0.038 – 0.039)	—
Piston pin bore I.D.	20.002 – 20.008 (0.7875 – 0.7877)			20.030 (0.7886)
Piston pin O.D.	19.992 – 20.000 (0.7871 – 0.7874)			19.980 (0.7866)

Conrod + Crankshaft

Unit: mm (in)

Item	Standard		Limit
Conrod small end I.D.	20.006 – 20.014 (0.7876 – 0.7880)		20.040 (0.7890)
Conrod deflection	—		3.0 (0.12)
Conrod big end side clearance	0.10 – 0.65 (0.004 – 0.026)		1.0 (0.04)
Conrod big end width	24.95 – 25.00 (0.982 – 0.984)		—
Crank web to web width	70.9 – 71.1 (2.79 – 2.80)		—
Crankshaft runout	—		0.08 (0.003)

Tightening Torque Specifications

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Air cleaner box mounting bolt	4.5	0.45	3.0	☞ (Page 1D-7)
ISC valve mounting screw	2	0.2	1.5	☞ (Page 1D-12)
Fuel delivery pipe mounting screw	5	0.5	3.5	☞ (Page 1D-13)
Engine mounting nut	60	6.0	43.5	☞ (Page 1D-17)
Engine mounting damper stopper bolt	23	2.3	16.5	☞ (Page 1D-17) / ☞ (Page 1D-29)
Cylinder head bolt (M10) (Initial)	25	2.5	18.0	☞ (Page 1D-25)
Cylinder base head bolt (M10) (Final)	37	3.7	27.0	☞ (Page 1D-25)
Cylinder head bolt (M8)	25	2.5	18.0	☞ (Page 1D-25)
Cylinder head nut	25	2.5	18.0	☞ (Page 1D-25)
Camshaft sprocket bolt	15	1.5	11.0	☞ (Page 1D-26)
Cylinder head cover bolt	10	1.0	7.0	☞ (Page 1D-27) / ☞ (Page 1D-30)
Valve clearance inspection cap bolt	10	1.0	7.0	☞ (Page 1D-27)
Cam chain tension adjuster mounting bolt	10	1.0	7.0	☞ (Page 1D-28)
Cam chain tension adjuster cap bolt	8	0.8	6.0	☞ (Page 1D-28)
TDC plug	23	2.3	16.5	☞ (Page 1D-28)
Rocker arm shaft bolt	28	2.8	20	☞ (Page 1D-37)
Water bypass union	12	1.2	8.5	☞ (Page 1D-40)
Intake pipe bolt	9	0.9	6.5	☞ (Page 1D-40)
Cam chain tensioner bolt	13	1.3	9.5	☞ (Page 1D-41)
Crankcase bolt (M6)	10	1.0	7.0	☞ (Page 1D-54)
Crankcase bolt (M8)	26	2.6	19.0	☞ (Page 1D-54)
Crank balancer drive gear nut	150	15.0	108.5	☞ (Page 1D-55)
Crank balancer driven gear bolt	50	5.0	36.0	☞ (Page 1D-57)
Left crankshaft spacer nut	38	3.8	27.5	☞ (Page 1D-59)
Water pump mounting bolt	10	1.0	7.0	☞ (Page 1D-59)

NOTE

The specified tightening torque is described in the following.

“Air Cleaner Inlet Sheet Construction (Page 1D-6)”

“Throttle Body Components (Page 1D-8)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material

B931H21408001





Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 1D-27) / ☞ (Page 1D-40) / ☞ (Page 1D-54) / ☞ (Page 1D-54) / ☞ (Page 1D-54) / ☞ (Page 1D-59) / ☞ (Page 1D-59) / ☞ (Page 1D-65) / ☞ (Page 1D-65) / ☞ (Page 1D-66) / ☞ (Page 1D-66) / ☞ (Page 1D-66)
Molybdenum oil	MOLYBDENUM OIL SOLUTION	—	☞ (Page 1D-22) / ☞ (Page 1D-24) / ☞ (Page 1D-26) / ☞ (Page 1D-39) / ☞ (Page 1D-39)
Sealant	SUZUKI BOND No.1215 or equivalent	P/No.: 99000–31110	☞ (Page 1D-53)
	SUZUKI BOND No.1207B or equivalent	P/No.: 99000–31140	☞ (Page 1D-23) / ☞ (Page 1D-40)
	SUZUKI BOND No.1216B or equivalent	P/No.: 99000–31230	☞ (Page 1D-27)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 1D-26) / ☞ (Page 1D-56) / ☞ (Page 1D-66) / ☞ (Page 1D-67)
	THREAD LOCK CEMENT SUPER 1322 or equivalent	P/No.: 99000–32110	☞ (Page 1D-40) / ☞ (Page 1D-56)













NOTE

Required service material is also described in the following.
 “Throttle Body Components (Page 1D-8)”











Special Tool











B931H21408002

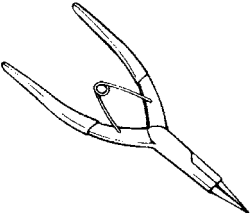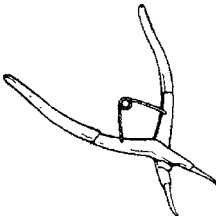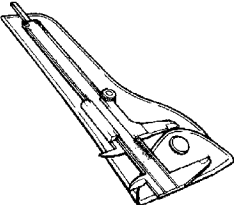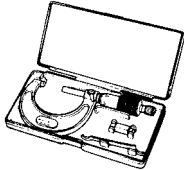09900–06107 Snap ring remover (Open type) ☞ (Page 1D-48) / ☞ (Page 1D-49) / ☞ (Page 1D-56) / ☞ (Page 1D-57)		09900–06108 Snap ring remover (Close type) ☞ (Page 1D-63) / ☞ (Page 1D-64) / ☞ (Page 1D-65)	
09900–20101 Vernier calipers (150 mm) ☞ (Page 1D-35) / ☞ (Page 1D-42) / ☞ (Page 1D-43)		09900–20202 Micrometer (25 – 50 mm) ☞ (Page 1D-29)	

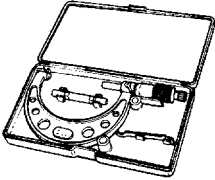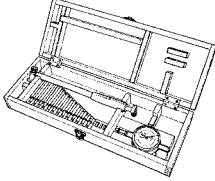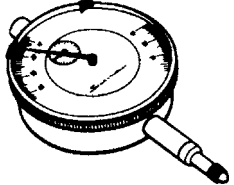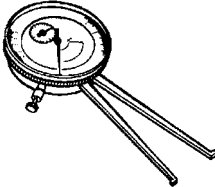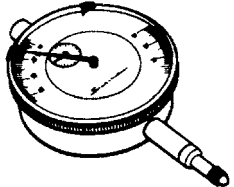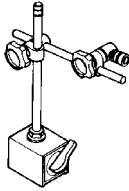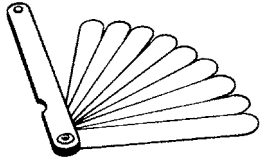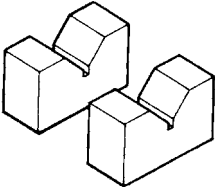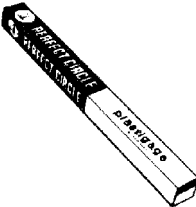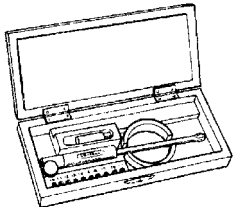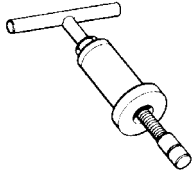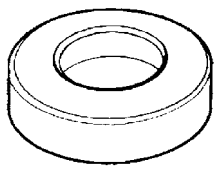09900–20204 Micrometer (75 – 100 mm) ☞ (Page 1D-34) 	09900–20205 Micrometer (0 – 25 mm) ☞ (Page 1D-31) / ☞ (Page 1D-35) / ☞ (Page 1D-35) / ☞ (Page 1D-37) / ☞ (Page 1D-42) 
09900–20530 Cylinder gauge set ☞ (Page 1D-32) 	09900–20602 Dial gauge ☞ (Page 1D-30) / ☞ (Page 1D-35) 
09900–20605 Dial calipers (10 – 34 mm) ☞ (Page 1D-37) / ☞ (Page 1D-60) 	09900–20607 Dial gauge ☞ (Page 1D-29) / ☞ (Page 1D-41) / ☞ (Page 1D-41) / ☞ (Page 1D-42) / ☞ (Page 1D-60) / ☞ (Page 1D-61) 
09900–20701 Dial gauge chuck ☞ (Page 1D-29) / ☞ (Page 1D-41) / ☞ (Page 1D-41) / ☞ (Page 1D-42) / ☞ (Page 1D-60) / ☞ (Page 1D-61) 	09900–20803 Thickness gauge ☞ (Page 1D-32) / ☞ (Page 1D-34) / ☞ (Page 1D-35) / ☞ (Page 1D-37) / ☞ (Page 1D-41) / ☞ (Page 1D-61) 
09900–21304 V blocks ☞ (Page 1D-29) / ☞ (Page 1D-41) / ☞ (Page 1D-41) / ☞ (Page 1D-60) / ☞ (Page 1D-61) 	09900–22301 Plastigauge ☞ (Page 1D-30) 
09900–22302 Plastigauge ☞ (Page 1D-30) 	09900–22403 Small bore gauge (18 – 35 mm) ☞ (Page 1D-30) / ☞ (Page 1D-35) 
09910–32812 Crankshaft installer ☞ (Page 1D-52) 	09910–32820 Crankshaft installer attachment ☞ (Page 1D-52) 

 1D-72 Engine Mechanical:

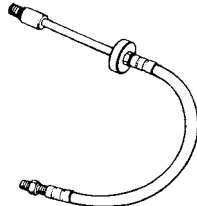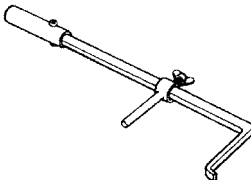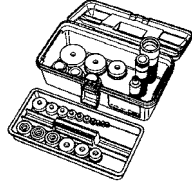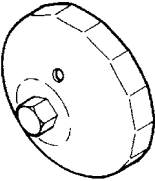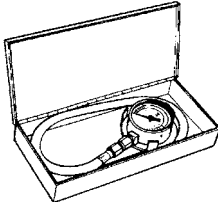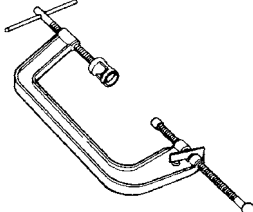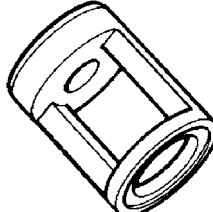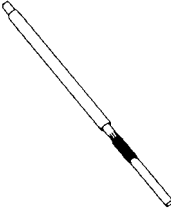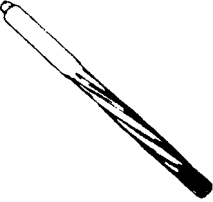09913-10750 Compression gauge adapter ☞ (Page 1D-2) 	09913-50121 Oil seal remover ☞ (Page 1D-63) / ☞ (Page 1D-63) / ☞ (Page 1D-64) / ☞ (Page 1D-64) 
09913-70210 Bearing installer set (10 – 75) ☞ (Page 1D-66) / ☞ (Page 1D-66) / ☞ (Page 1D-67) / ☞ (Page 1D-63) / ☞ (Page 1D-64) / ☞ (Page 1D-65) / ☞ (Page 1D-65) / ☞ (Page 1D-65) / ☞ (Page 1D-66) 	09915-40620 Oil filter wrench ☞ (Page 1D-47) 
09915-64512 Compression gauge ☞ (Page 1D-2) 	09916-10911 Valve lapper set ☞ (Page 1D-43) 
09916-14510 Valve lifter ☞ (Page 1D-38) / ☞ (Page 1D-39) 	09916-14910 Valve lifter attachment ☞ (Page 1D-38) / ☞ (Page 1D-39) 
09916-34542 Reamer handle ☞ (Page 1D-44) / ☞ (Page 1D-45) 	09916-34570 Valve guide reamer (5.0 mm) ☞ (Page 1D-45) 
09916-34580 Valve guide reamer (10.8 mm) ☞ (Page 1D-44) 	09916-44310 Valve guide installer & remover ☞ (Page 1D-44) / ☞ (Page 1D-45) 
09916-53370 Valve guide installer attachment ☞ (Page 1D-45) 	09916-84511 Tweezer ☞ (Page 1D-38) / ☞ (Page 1D-39) 

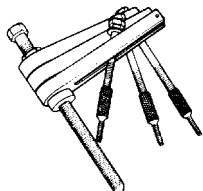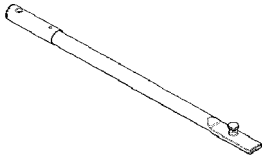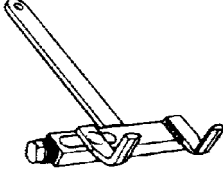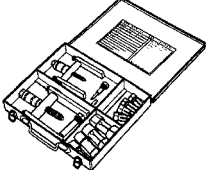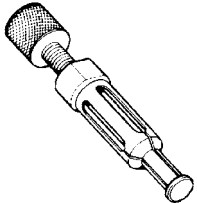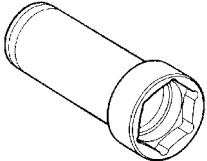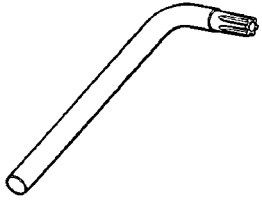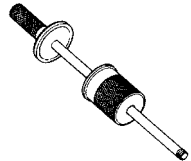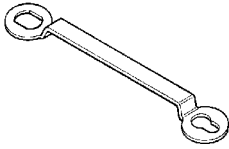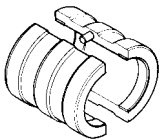09920-13120 Crankshaft remover 🔧 (Page 1D-51) / 🔧 (Page 1D-52) 	09920-31020 Extension handle 🔧 (Page 1D-49) / 🔧 (Page 1D-49) / 🔧 (Page 1D-55) / 🔧 (Page 1D-57) 
09920-53740 Clutch sleeve hub holder 🔧 (Page 1D-49) / 🔧 (Page 1D-49) / 🔧 (Page 1D-55) / 🔧 (Page 1D-57) 	09921-20240 Bearing remover set 🔧 (Page 1D-62) / 🔧 (Page 1D-63) / 🔧 (Page 1D-64) 
09923-74511 Bearing remover 🔧 (Page 1D-64) 	09924-52460 Socket (52 mm) 🔧 (Page 1D-49) / 🔧 (Page 1D-55) 
09930-11950 Torx wrench (5 mm) 🔧 (Page 1D-12) 	09930-30104 Rotor remover sliding shaft 🔧 (Page 1D-64) 
09930-44530 Rotor holder 🔧 (Page 1D-47) / 🔧 (Page 1D-59) 	09941-53610 Front fork oil seal hammer 🔧 (Page 1D-52) 

 
Precautions for Engine Oil

Refer to “**Fuel and Oil Recommendation:** in Section 0A”.

Schematic and Routing Diagram


Engine Lubrication System Chart Diagram

B931H21502001




Engine Lubrication Circuit Diagram

B931H21502002

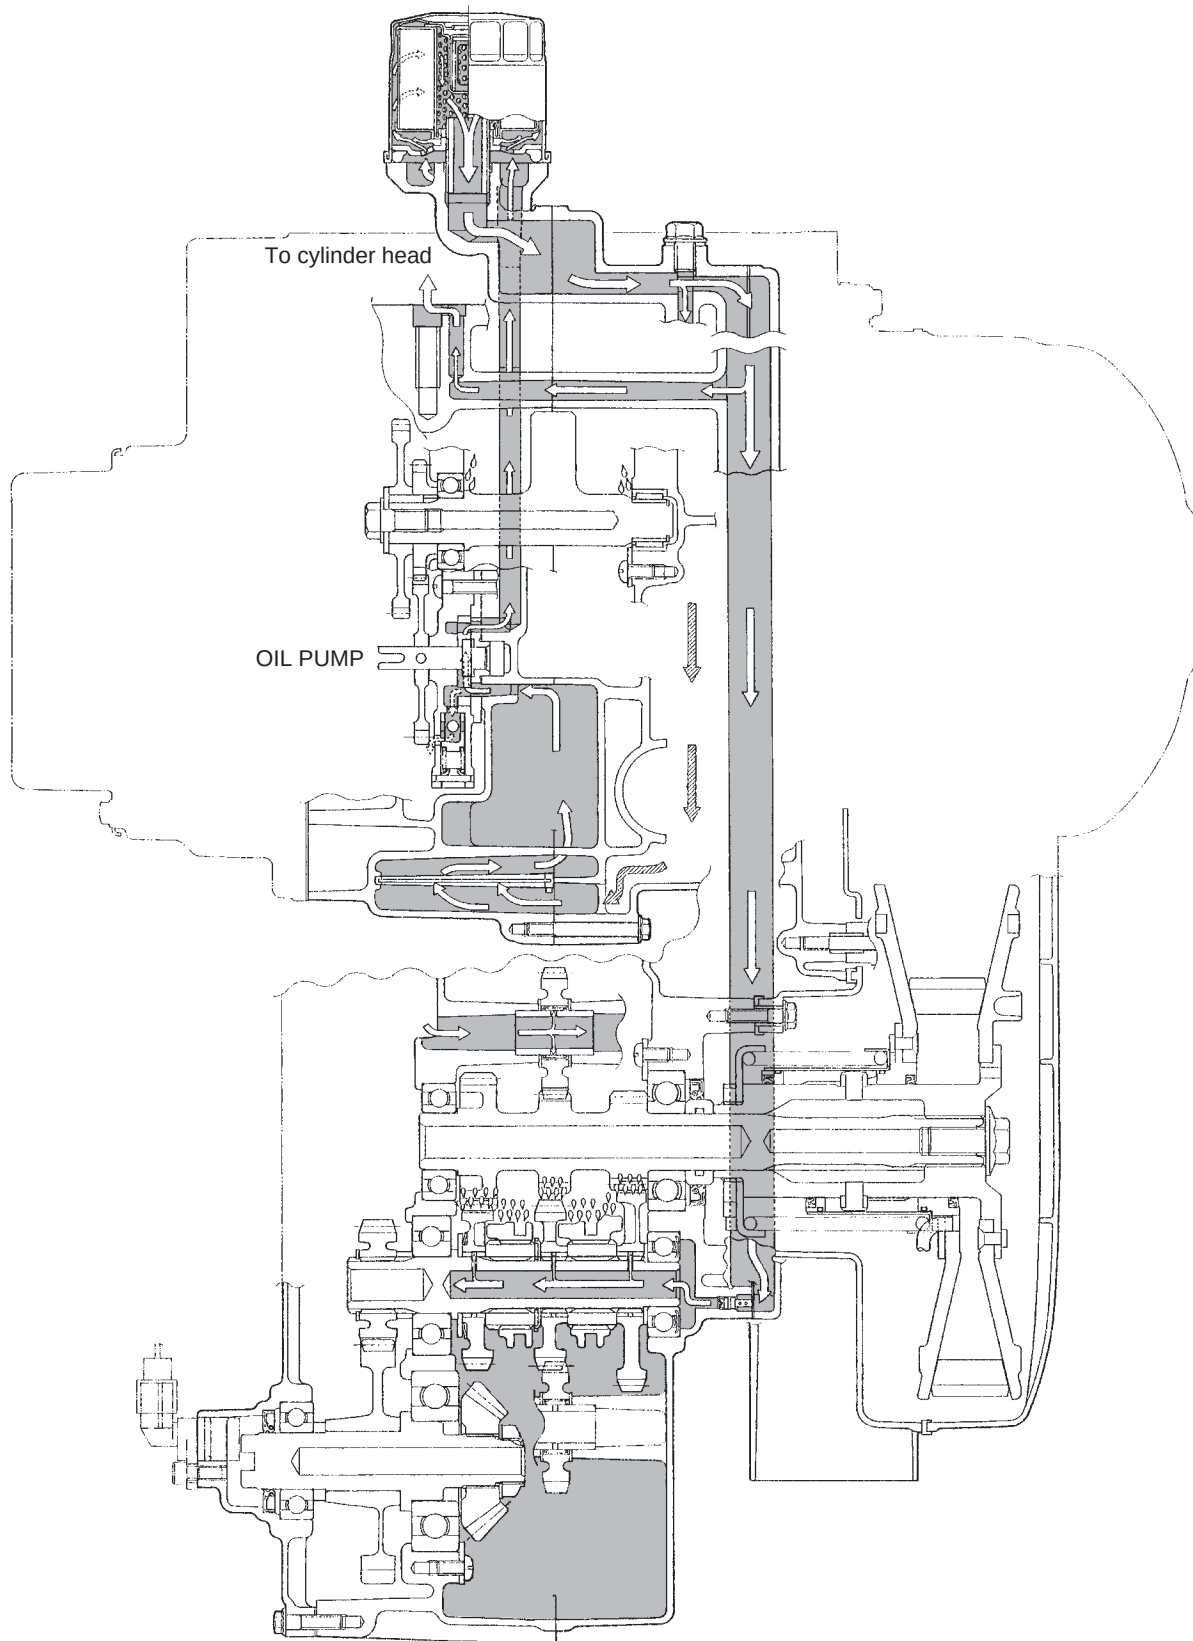

I931H1150002-03

1E-3 Engine Lubrication System:

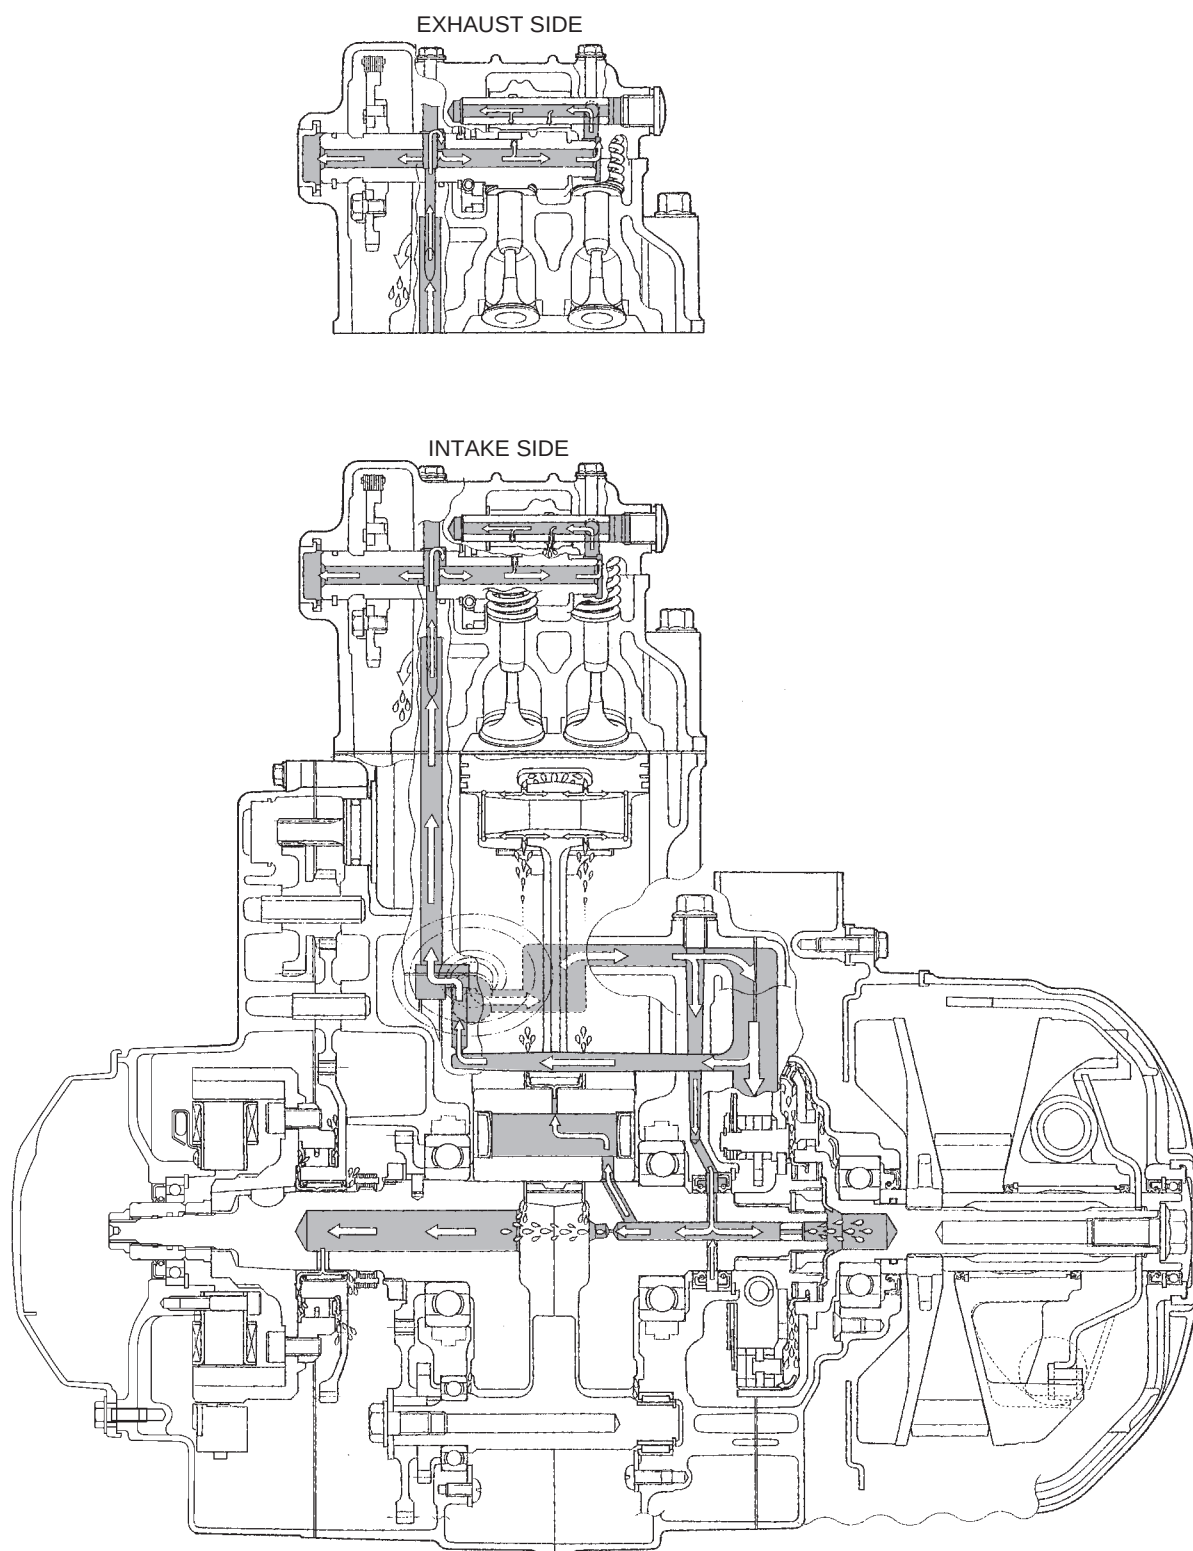

I931H1150003-02

Diagnostic Information and Procedures

Engine Lubrication Symptom Diagnosis

B931H21504001

Condition	Possible cause	Correction / Reference Item
Engine overheats	Insufficient amount of engine oil.	Check level and add.
	Defective oil pump.	Replace.
	Clogged oil circuit.	Clean.
	Incorrect engine oil.	Change.
Exhaust smoke is dirty or thick	Excessive amount of engine oil.	Check level and drain.
Engine lacks power	Excessive amount of engine oil.	Check level and drain.

Oil Pressure Check

B931H21504002

Check the engine oil pressure periodically. This will give a good indication of the condition of the moving parts.

NOTE

Before checking the oil pressure, check the following.

- Oil level (Refer to “Engine Oil and Filter Replacement: in Section 0B”.)
- Oil leaks (If leak is found, repair it.)
- Oil quality (If oil is discolored or deteriorated, replace it.)

- 1) Remove the right inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Remove the belt cooling intake duct. Refer to “V-belt Cooling Duct Removal and Installation: in Section 5A”.
- 3) Remove the main oil gallery plug (1).



I931H1150004-01

- 4) Install the oil pressure gauge and attachment into the main oil gallery.


- 5) Connect the tachometer to the high-tension cord.

Special tool

(A): 09915-74511 (Oil pressure gauge (600 kPa))

(B): 09915-74533 (Oil pressure gauge adapter)

: 09900-26006 (Engine tachometer)

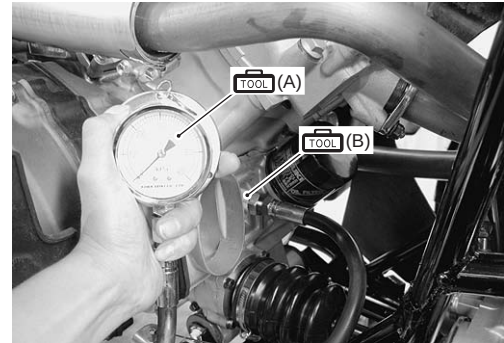

I931H1150005-01

- 6) Warm up the engine as follows:
Summer: 10 min. at 2 000 r/min
Winter: 20 min. at 2 000 r/min
- 7) After warm up, increase the engine speed to 3 000 r/min (Observe the tachometer), and read the oil pressure gauge.
If the oil pressure is lower or higher than the specification, the following causes may be considered.

Oil pressure specification

80 – 120 kPa (0.8 – 1.2 kgf/cm², 11 – 17 psi) at 3 000 r/min, Oil temp. at 60 °C (140 °F)

High oil pressure	Low oil pressure
• Engine oil viscosity is too high. • Clogged oil passage. • Combination of the above items.	• Clogged oil filter. • Oil leakage from the oil passage. • Damaged O-ring. • Defective oil pump. • Combination of the above items.

1E-5 Engine Lubrication System:

- 8) Stop the engine and remove the oil pressure gauge and attachment.
- 9) Reinstall the main oil gallery plug (1) and tighten it to the specified torque.

⚠ CAUTION

Use a new gasket to prevent oil leakage.

Tightening torque

Main oil gallery plug (a): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)



I931H1150006-01

- 10) Check the engine oil level. Refer to **“Engine Oil and Filter Replacement: in Section 0B”**.
- 11) Reinstall the removed parts.

Repair Instructions

Engine Oil and Filter Replacement

B931H21506001

Refer to **“Engine Oil and Filter Replacement: in Section 0B”**.

Engine Oil Level Inspection

B931H21506002


Refer to **“Engine Oil and Filter Replacement: in Section 0B”**.

Oil Sump Filter Removal and Installation

B931H21506003

Removal

- 1) Remove the engine assembly from the frame. Refer to **“Engine Assembly Removal: in Section 1D”**.
- 2) Remove the engine top side. Refer to **“Engine Top Side Disassembly: in Section 1D”**.
- 3) Separate the left and right crankcase. Refer to **“Engine Bottom Side Disassembly: in Section 1D”**.
- 4) Remove the oil sump filter (1).

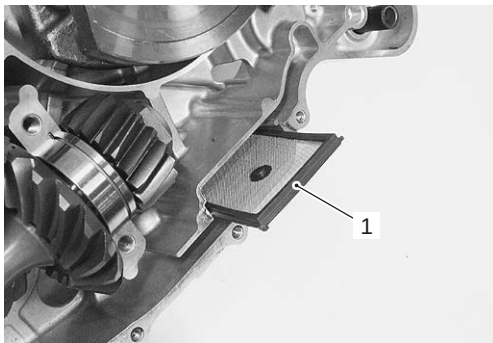

I931H1150007-01


Installation

Install the oil sump filter in the reverse order of removal. Pay attention to the following points:

- Install the oil sump filter (1).

NOTE

Fit the projection “A” of the oil sump filter in the concave portion of the crankcase.

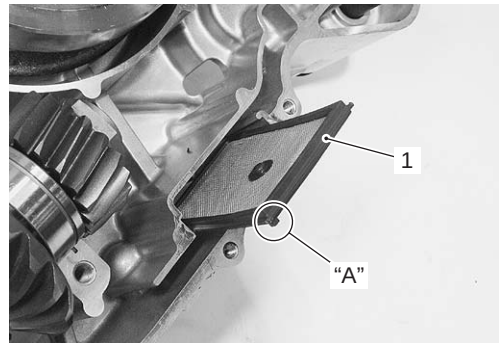

I931H1150008-01

Oil Sump Filter Inspection and Cleaning


B931H21506004

Inspect the oil sump filter in the following procedures:

- 1) Remove the oil sump filter. Refer to "Oil Sump Filter Removal and Installation (Page 1E-5)".
- 2) If the oil sump filter is clogged with sediment or rust, clean the oil sump filter using compressed air.

NOTE

When the filter is dirtied excessively, replace the oil sump filter with a new one.

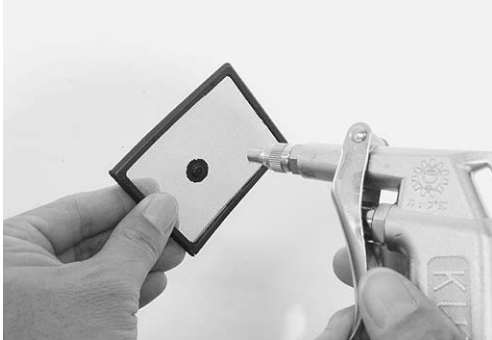

I931H1150009-01

- 3) Install the oil sump filter. Refer to "Oil Sump Filter Removal and Installation (Page 1E-5)".


Oil Jet Removal and Installation

B931H21506005

Removal

- 1) Remove the clutch cover and gasket. Refer to "Clutch Shoe Removal and Installation: in Section 5A".

- 2) Remove the oil jet (1).

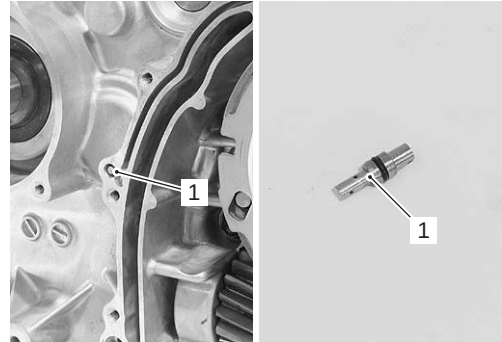

I931H1150010-02


Installation

Install the oil jet in the reverse order of removal. Pay attention to the following point:

- Apply engine oil to the O-ring and install it.

⚠ CAUTION


Use a new O-ring to prevent oil leakage.

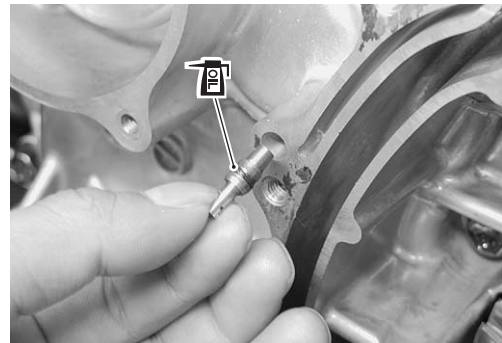

I931H1150011-01

Oil Pump Construction

B931H21506006

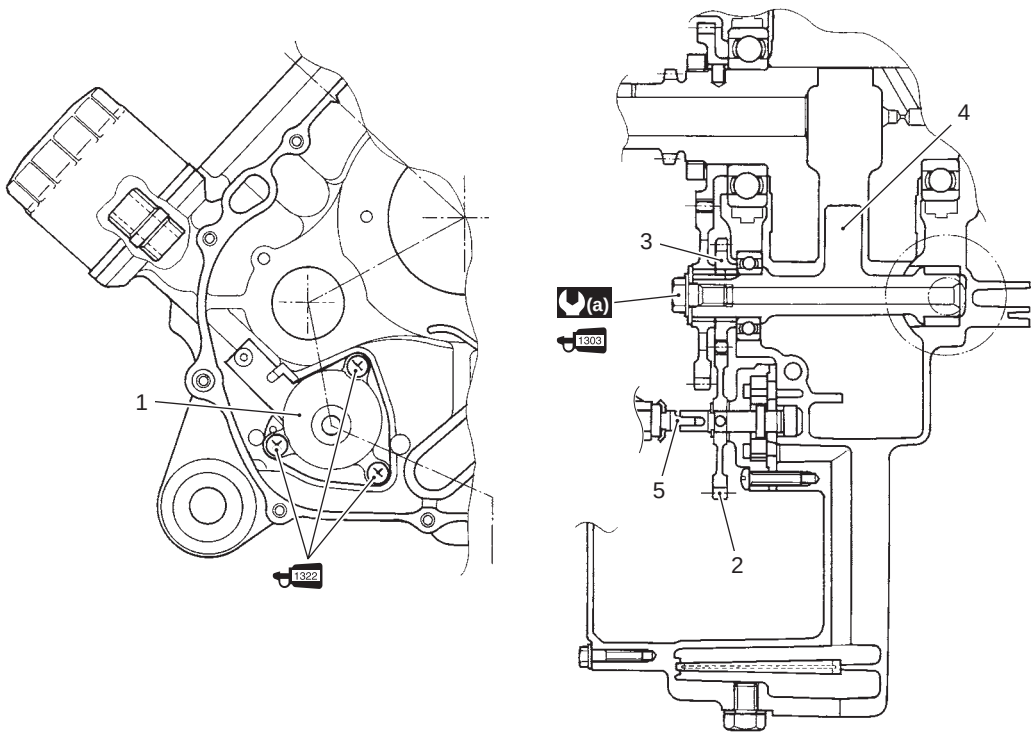

I931H1150025-01

1. Oil pump	5. Water pump shaft
2. Oil pump driven gear	(a) : 50 N·m (5.0 kgf-m, 36.0 lbf-ft)
3. Oil pump drive gear	1303 : Apply thread lock to the thread part.
4. Crank balancer shaft	1322 : Apply thread lock to the thread part.

Oil Jet Inspection

B931H21506007

Refer to “Oil Jet Removal and Installation (Page 1E-6)”. Make sure that the oil jet is not clogged. If it is clogged, clean the oil passage using a wire of the proper size and compressed air.




I931H1150012-01

Oil Pump Removal and Installation

B931H21506008


Removal

- 1) Drain the engine oil. Refer to “Engine Oil and Filter Replacement: in Section 0B”.
- 2) Remove the starter idle gear No. 1 (1) and No. 2 (2). Refer to “Starter Idle Gear / Starter Clutch Removal and Installation: in Section 1I”.
- 3) Remove the generator rotor assembly (3) and starter driven gear (4). Refer to “Generator Removal and Installation: in Section 1J” and “Starter Idle Gear / Starter Clutch Removal and Installation: in Section 1I”.

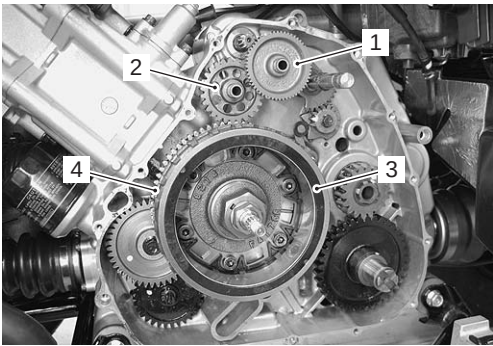


I931H1150013-01

4) Install the left crankshaft spacer (5).

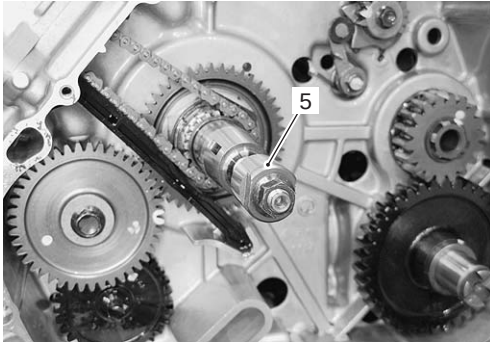

I931H1150014-01

5) Hold the crankshaft spacer (5) and remove the crank balancer driven gear bolt and washer.

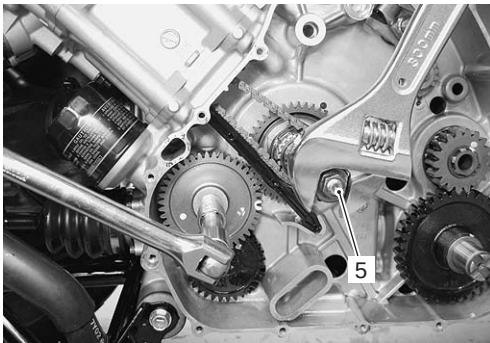


I931H1150015-01

6) Remove the snap ring (6) and oil pump driven gear (7).


Special tool

 : 09900-06107 (Snap ring remover (Open type))

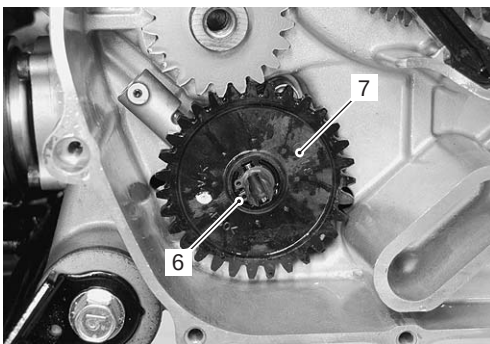

I931H1150017-01

7) Remove the pin (8), washer (9) and oil pump (10).

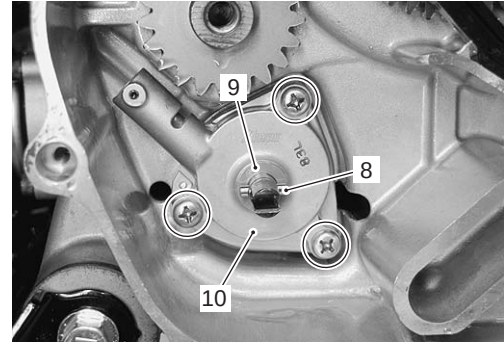


I931H1150018-01

Installation

Install the oil pump in the reverse order of removal. Pay attention to the following points:

- Apply thread lock to the oil pump mounting screws.

 : Thread lock cement 99000-32110 (THREAD LOCK CEMENT SUPER 1322 or equivalent)

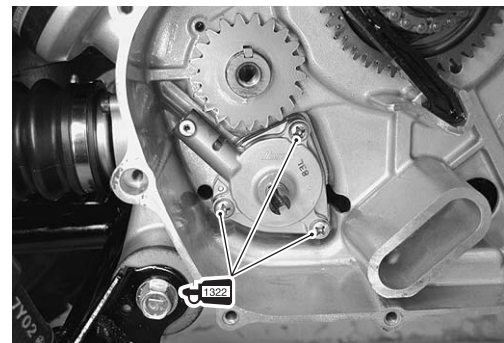

I931H1150019-01


- Install the snap ring (1) and oil pump drive gear (2).

⚠ CAUTION

Use a new snap ring (1).

Special tool

 : 09900-06107 (Snap ring remover (Open type))

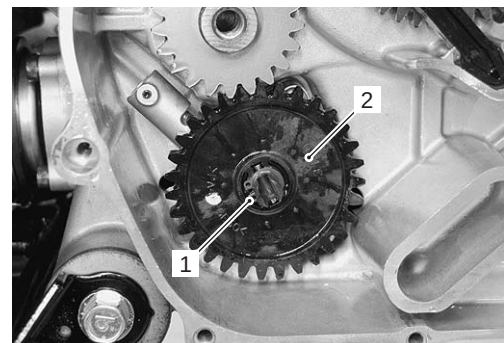


I931H1150020-01

1E-9 Engine Lubrication System:

- Install the crank balancer driven gear (3).

NOTE

Align the punch mark "A" of crank balancer drive gear with the punch marks "B" of each crank balancer driven gear as shown.

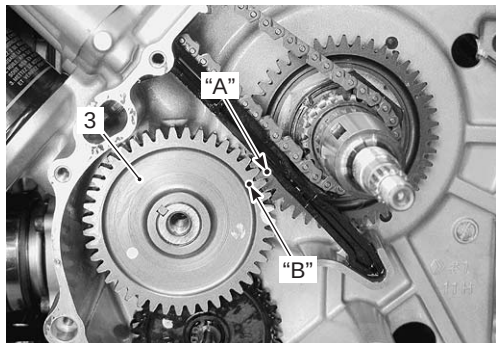

I931H1150021-03

- Apply thread lock super to the oil pump driven gear bolt (4).

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)




I931H1150022-02

- Hold the crank shaft spacer (5) and tighten the crank balancer driven gear bolt (4) to the specified torque.

Tightening torque

Crank balancer driven gear bolt (a): 50 N·m (5.0 kgf-m, 36.0 lbf-ft)

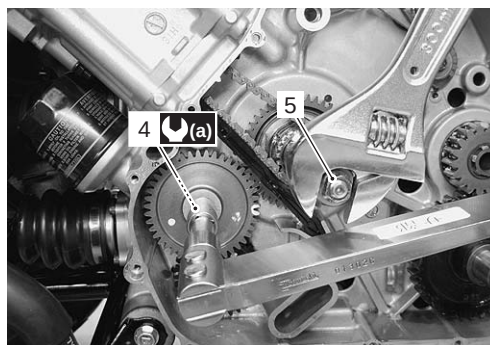

I931H1150023-04

Oil Pump Inspection

B931H21506009

Inspect the oil pump in the following procedures:

- 1) Remove the oil pump. Refer to "Oil Pump Removal and Installation (Page 1E-7)".
- 2) Rotate the oil pump by hand and check that it moves smoothly. If it does not move smoothly, replace the oil pump assembly.

⚠ CAUTION

Do not attempt to disassemble the oil pump assembly.
The oil pump is available only as an assembly.



I931H1150024-01

- 3) Install the oil pump. Refer to "Oil Pump Removal and Installation (Page 1E-7)".

Specifications

Service Data

B931H21507001

Oil Pump

Item	Standard	Limit
Oil pressure (at 60 °C, 140 °F)	80 – 120 kPa (0.8 – 1.2 kgf/cm ² , 11 – 17 psi) at 3 000 r/min	—

Oil

Item	Specification	Note
Engine oil type	SAE 10 W-40, API SF/SG or SH/SJ with JASO MA	
Engine oil capacity	Change	2 500ml (2.6/2.2 US/Imp qt)
	Filter change	2 700 ml (2.9/2.4 US/Imp qt)
	Overhaul	3 200 ml (3.4/2.8 US/Imp qt)

Tightening Torque Specifications

B931H21507002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Main oil gallery plug	18	1.8	13.0	☞ (Page 1E-5)
Crank balancer driven gear bolt	50	5.0	36.0	☞ (Page 1E-9)

NOTE

The specified tightening torque is described in the following.
 “Oil Pump Construction (Page 1E-7)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material

B931H21508001





Material	SUZUKI recommended product or Specification		Note
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 1E-9)
	THREAD LOCK CEMENT SUPER 1322 or equivalent	P/No.: 99000–32110	☞ (Page 1E-8)

NOTE

Required service material is also described in the following.
 “Oil Pump Construction (Page 1E-7)”

Special Tool

B931H21508002

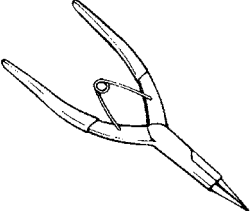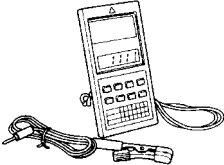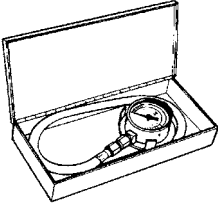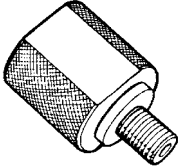09900-06107 Snap ring remover (Open type) ☞ (Page 1E-8) / ☞ (Page 1E-8)		09900-26006 Engine tachometer ☞ (Page 1E-4)	
09915-74511 Oil pressure gauge (600 kPa) ☞ (Page 1E-4)		09915-74533 Oil pressure gauge adapter ☞ (Page 1E-4)	

Engine Cooling System

Precautions

Precautions for Engine Cooling System

B931H21600001

⚠ WARNING

- You can be injured by boiling fluid or steam if you open the radiator cap when the engine is hot. After the engine cools, wrap a thick cloth around cap and carefully remove the cap by turning it a quarter turn to allow pressure to escape and then turn the cap all the way off.
- The engine must be cool before servicing the cooling system.
- Coolant is harmful:
 - If it comes in contact with skin or eyes, flush with water.
 - If swallowed accidentally, induce vomiting and call physician immediately.
 - Keep it away from children.

Precautions for Engine Coolant

B931H21600002

Refer to “Engine Coolant Recommendation: in Section 0A”.

General Description

Engine Coolant Description

B931H21601001

⚠ CAUTION


- Use a high quality ethylene glycol base anti-freeze, mixed with distilled water. Do not mix an alcohol base anti-freeze and different brands of anti-freeze.
- Do not put in more than 60% anti-freeze or less than 50%. (Refer to Fig. 1 and 2.)

At the time of manufacture, the cooling system is filled with a 50:50 mixture of distilled water and ethylene glycol anti-freeze. This 50:50 mixture will provide the optimum corrosion protection and excellent heat protection, and will protect the cooling system from freezing at temperatures above -31°C (-24°F). If the vehicle is to be exposed to temperatures below -31°C (-24°F), this mixing ratio should be increased up to 55% or 60% according to the figure.

Anti-freeze Proportioning Chart


Anti-freeze density	Freezing point
50%	-31°C (-24°F)
55%	-40°C (-40°F)
60%	-55°C (-67°F)

Fig.1: Engine coolant density-freezing point curve

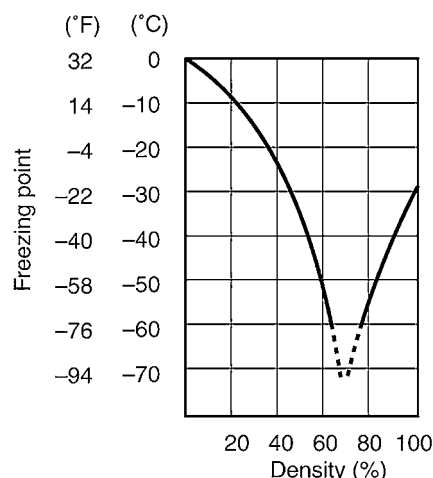

I310G1160001-01

Fig.2: Engine coolant density-boiling point curve

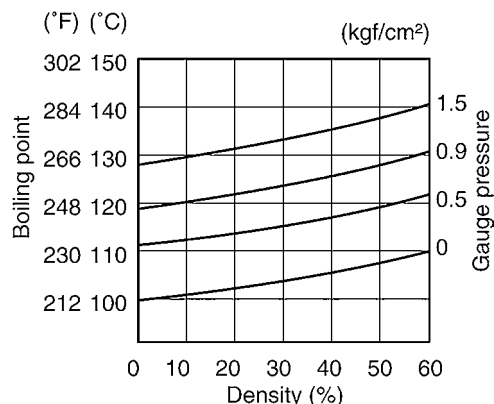


I310G1160002-01

Schematic and Routing Diagram

Cooling Circuit Diagram


B931H21602001

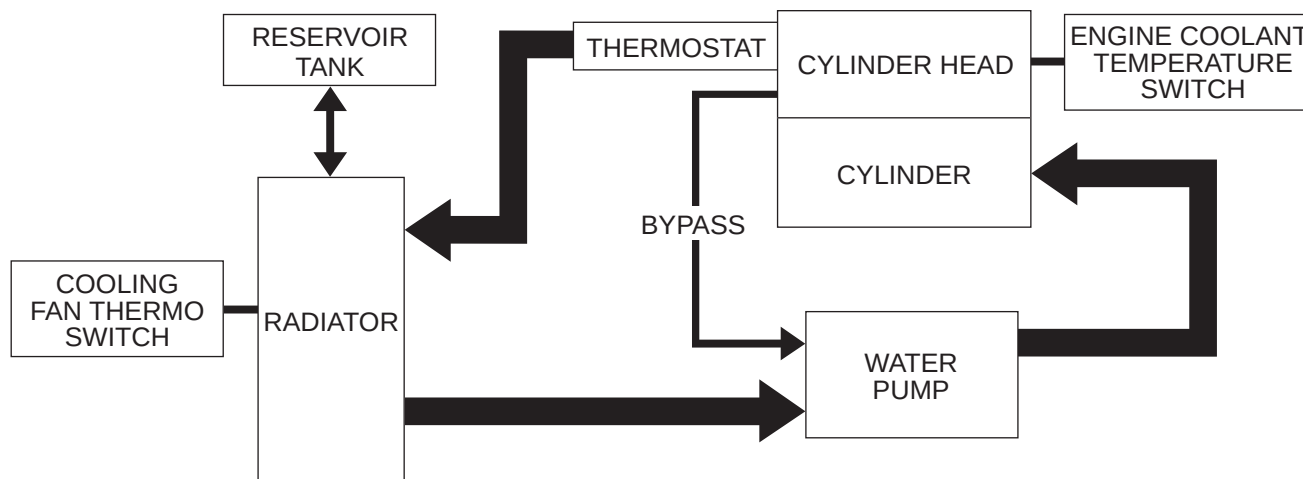

I831G1160001-02

Water Hose Routing Diagram

B931H21602002

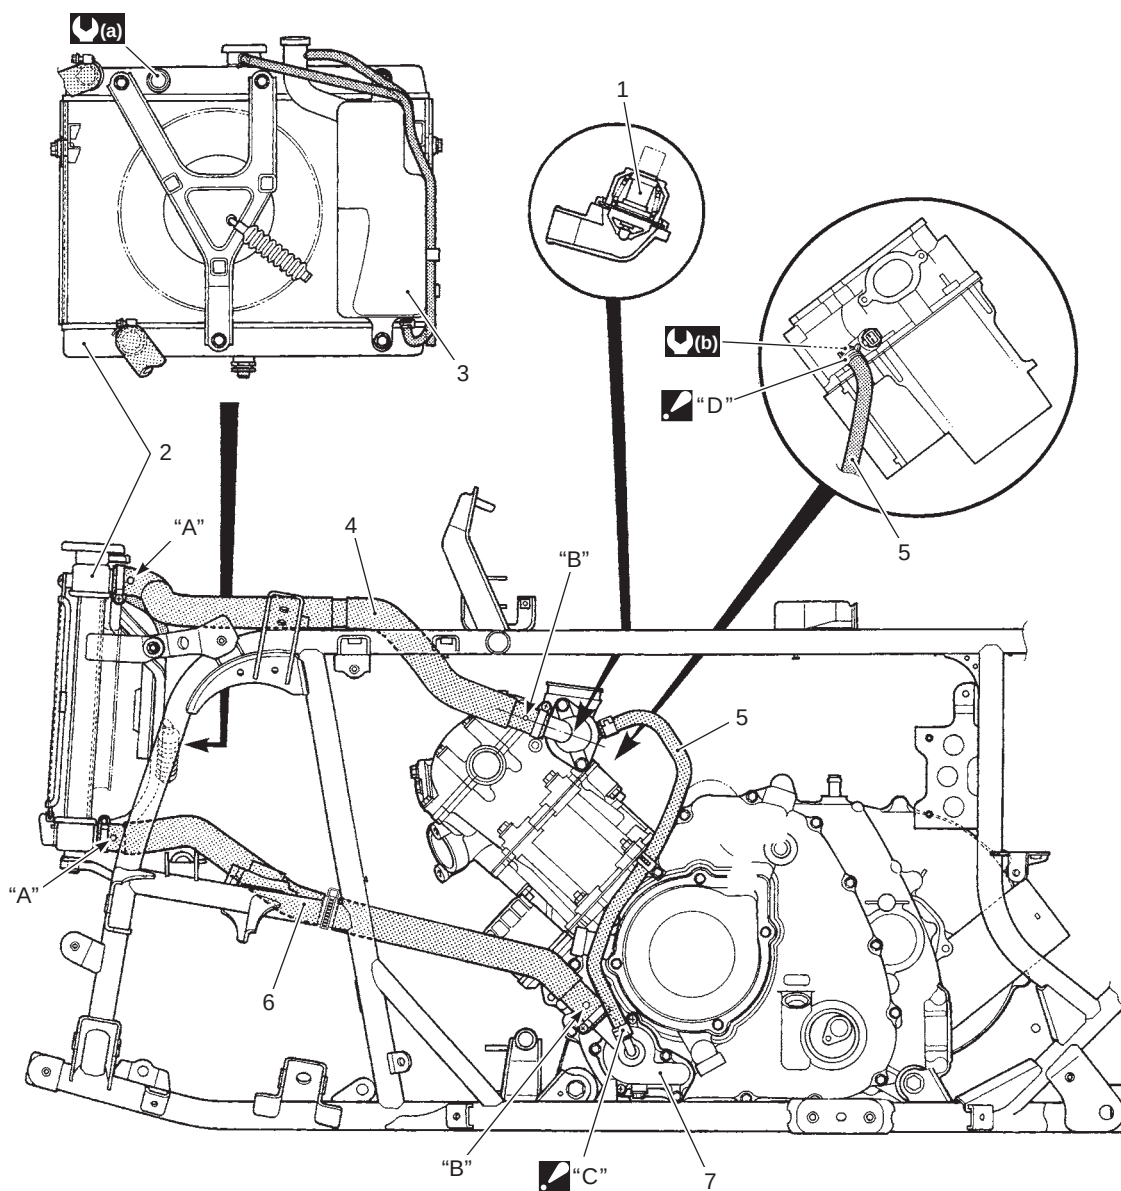

I931H1160057-01

1. Thermostat	6. Radiator outlet hose	▣ "D": Face the tip of the clip to upper.
2. Radiator	7. Water pump	⚙️ (a) : 17 N·m (1.7 kgf-m, 12.5 lbf-ft)
3. Reservoir tank	"A": Yellow mark	⚙️ (b) : 12 N·m (1.2 kgf-m, 8.5 lbf-ft)
4. Radiator inlet hose	"B": White mark	
5. Bypass hose	▣ "C": Face the tip of the clip to forward.	

Diagnostic Information and Procedures

Engine Cooling Symptom Diagnosis

B931H21604001

Condition	Possible cause	Correction / Reference Item
Engine overheats	Not enough engine coolant.	Add engine coolant.
	Radiator core clogged with dirt or scale.	Clean.
	Faulty cooling fan.	Repair or replace.
	Defective cooling fan thermo-switch.	Replace.
	Clogged water passage.	Clean.
	Air trapped in the cooling circuit.	Bleed air.
	Defective water pump.	Replace.
	Use of incorrect engine coolant.	Replace.
	Defective thermostat.	Replace.
	Defective ECT sensor.	Replace.
	Defective ECM.	Replace.
Engine over cools	Defective cooling fan thermo-switch.	Replace.
	Extremely cold weather.	Put on radiator cover.
	Defective thermostat.	Replace.
	Defective ECT sensor.	Replace.
	Defective ECM.	Replace.

Repair Instructions

Cooling Circuit Inspection

B931H21606001

⚠ WARNING


- Do not open the radiator cap when the engine is hot, as you may be injured by escaping hot liquid or vapor.
- When removing the radiator cap tester, put a rag on the filler to prevent the engine coolant from spraying out.

Inspect the cooling circuit in the following procedures:


- 1) Remove the radiator cap lid (1) and radiator cap (2).
- 2) Connect the radiator tester (3) to the filler.
- 3) Pressurize the cooling system with 120 kPa (1.2 kgf/cm, 17 psi) of pressure, and then check if it holds the pressure for 10 seconds.

⚠ CAUTION

Do not exceed the radiator cap release pressure, or the radiator cap and subsequently the radiator, can be damaged.

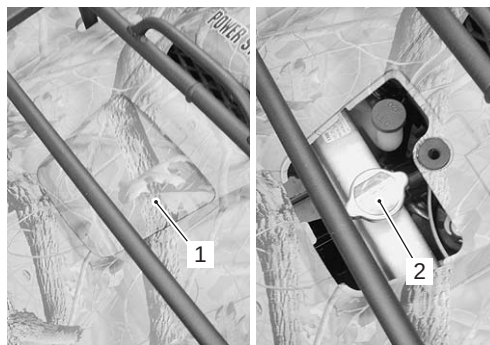

I931H1160001-01

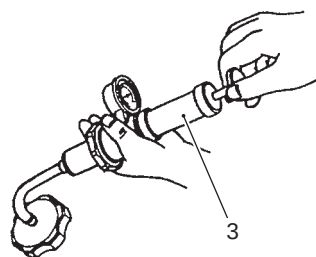

I831G1160005-01


- 4) After finishing the cooling circuit inspection, reinstall the removed parts.

Radiator Cap Inspection

B931H21606002

Inspect the radiator cap in the following procedures:

- 1) Remove the radiator cap. Refer to "Cooling Circuit Inspection (Page 1F-4)".
- 2) Attach the radiator cap (1) to the radiator tester (2) as shown in the figure.

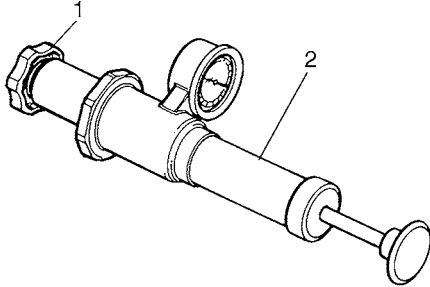

I718H1160033-01

- 3) Slowly apply pressure to the radiator cap. If the radiator cap does not hold the pressure for at least 10 seconds, replace it with a new one.

Radiator cap release pressure

110 – 140 kPa (1.1 – 1.4 kgf/cm², 15.6 – 19.9 psi)

- 4) After finishing the radiator cap inspection, reinstall the removed parts.

Radiator Inspection and Cleaning


B931H21606003

Radiator Hose

Refer to "Cooling System Inspection: in Section 0B".

Radiator

Inspect the radiator for water leaks. If any defects are found, replace the radiator with a new one. If the fins are bent or dented, repair them by carefully straightening them with the blade of a small screwdriver.

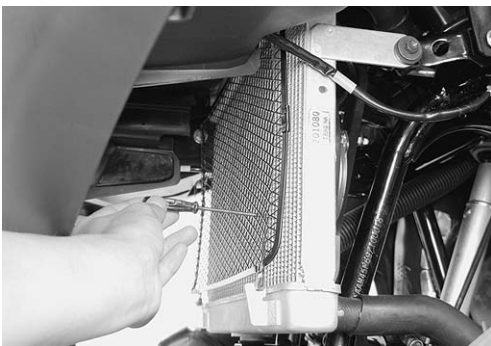

I931H1160002-01

Radiator Cleaning

Blow out any foreign matter that is stuck in the radiator fins using compressed air.

⚠ CAUTION

- Make sure not to bend the fins when using compressed air.
- Always apply compressed air from the engine side of engine. If compressed air is applied from the front side, dirt will be forced into the pores of radiator.




I931H1160058-01

Radiator / Cooling Fan Assembly Removal and Installation

B931H21606004


Removal

- 1) Remove the left inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the hoses (1).
- 3) Remove the reservoir tank (2).

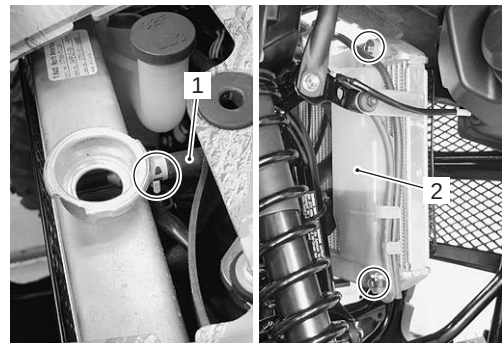

I931H1160004-01


- 4) Disconnect the inlet hose (3) and outlet hose (4).
- 5) Remove the radiator mounting bolts (5).

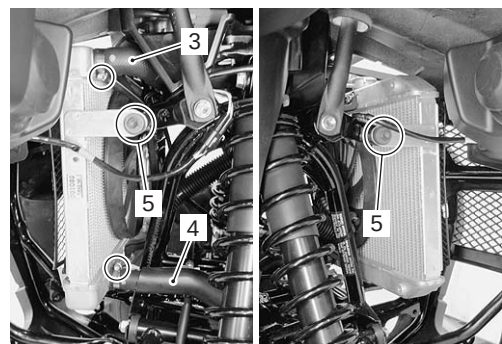

I931H1160005-02

1F-6 Engine Cooling System:


- 6) Disconnect the cooling fan thermo-switch coupler (6) and cooling fan motor coupler (7).

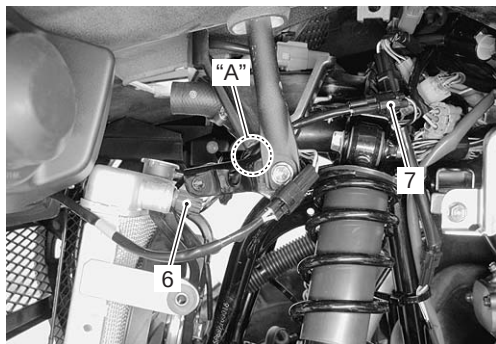

I931H1160006-02


"A": Clamp position

- 7) Remove the radiator (8).

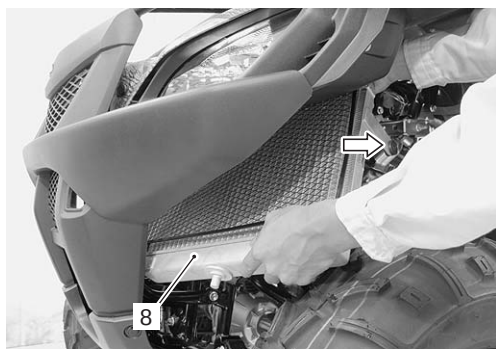


I931H1160007-01

- 8) Remove the radiator cover (9).

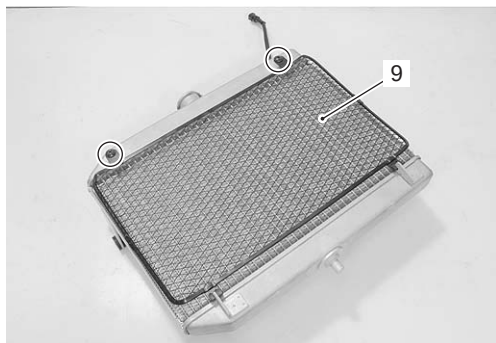

I931H1160008-01

- 9) Remove the cooling fan assembly (10).
10) Remove the cooling fan thermo-switch (11).

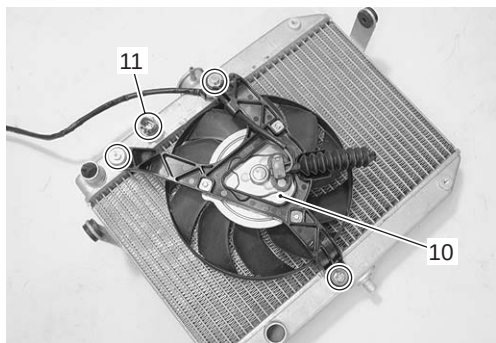

I931H1160010-01


Installation

Install the cooling fan assembly and radiator in the reverse order of removal. Pay attention to the following points:

- Install the cooling fan thermo switch. Refer to "Cooling Fan Thermo-switch Removal and Installation (Page 1F-8)".
- Tighten the cooling fan assembly mounting bolts (1) to the specified torque.

Tightening torque

Cooling fan assembly mounting bolt (a): 8.4 N·m (0.84 kgf-m, 6.0 lbf-ft)

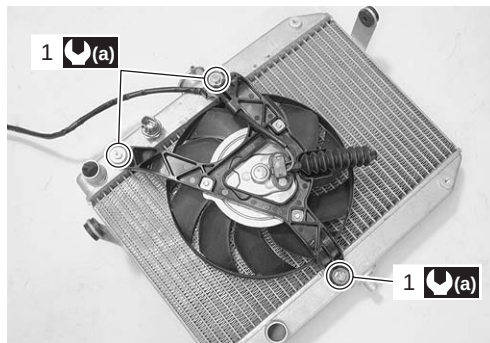

I931H1160011-02

- Connect the radiator hoses securely. Refer to "Water Hose Routing Diagram (Page 1F-3)".
- Pour engine coolant. Refer to "**Cooling System Inspection: in Section 0B**".
- Bleed air from the cooling circuit. Refer to "**Cooling System Inspection: in Section 0B**".

Water Hose Removal and Installation

B931H21606005

Removal

- 1) Drain engine coolant. Refer to "**Cooling System Inspection: in Section 0B**".
- 2) Remove the front fender and left side cover. Refer to "**Front Side Exterior Parts Removal and Installation: in Section 9D**".
- 3) Remove the water hose as shown in the water hose routing diagram. Refer to "Water Hose Routing Diagram (Page 1F-3)".

Installation


- 1) Install the water hose as shown in the water hose routing diagram. Refer to "Water Hose Routing Diagram (Page 1F-3)".
- 2) Pour engine coolant and bleed air from the cooling circuit. Refer to "**Cooling System Inspection: in Section 0B**".
- 3) Reinstall the removed parts.

Cooling Fan Inspection

B931H21606006

Inspect the cooling fan in the following procedures:

- 1) Disconnect the cooling fan motor coupler (1).

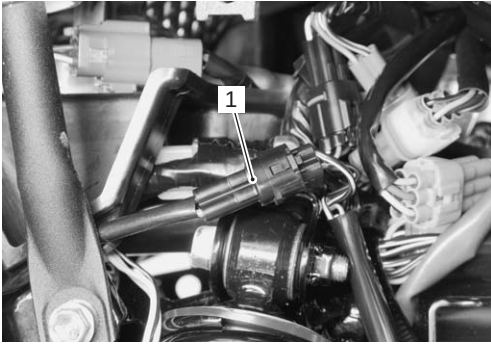


I931H1160012-01

- 2) Test the cooling fan motor for load current with an ammeter connected as shown in the figure. If the fan motor does not turn, replace the cooling fan assembly with a new one. Refer to "Radiator / Cooling Fan Assembly Removal and Installation (Page 1F-5)".

NOTE

- When making this test, it is not necessary to remove the cooling fan.
- Make sure that the battery has a capacity enough to supply the motor with 12 V.
- With the motor running at full speed, the ammeter should indicate an amperage not higher than 5.0 A.

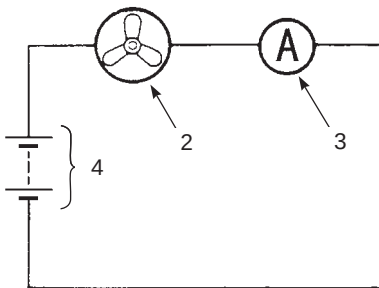

I718H1160048-01

2. Fan motor	3. Ammeter	4. Battery
--------------	------------	------------


- 3) Connect the cooling fan motor coupler.

Radiator Reservoir Tank Removal and Installation

B931H21606007


Removal

- 1) Remove the radiator cap lid (1).

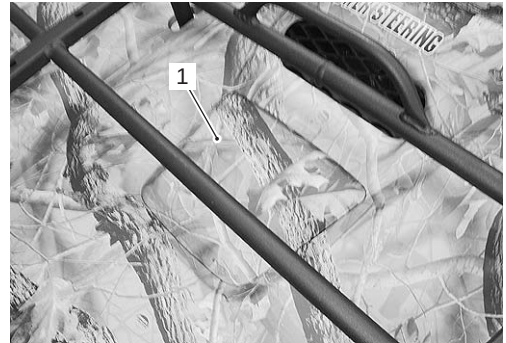

I931H1160059-01

- 2) Disconnect the hose (2).
- 3) Remove the reservoir tank (3).
- 4) Drain engine coolant.

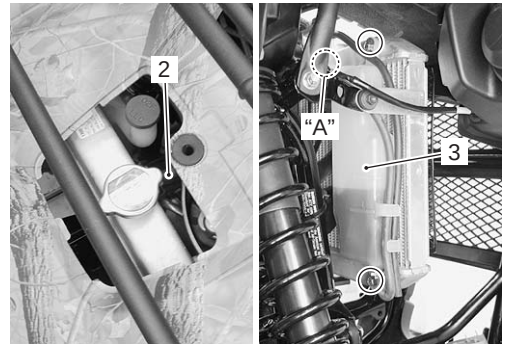


I931H1160013-03

"A": Clamp position

Installation

Install radiator reservoir tank in the reverse order of removal. Pay attention to the following points:

- Connect the radiator reservoir tank hose securely. Refer to "Water Hose Routing Diagram (Page 1F-3)".
- Fill the reservoir tank to the upper level.

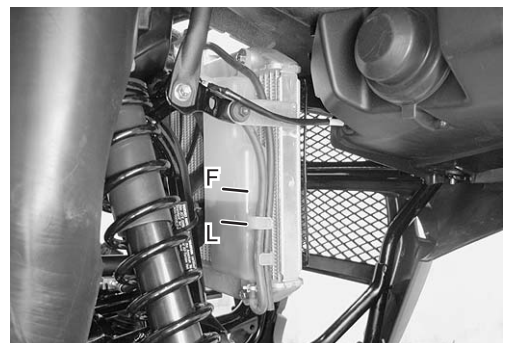

I931H1160014-01

Radiator Reservoir Tank Inspection

B931H21606008

Inspect the radiator reservoir tank coolant leaks. If any defects are found, replace the radiator reservoir tank with a new one.




I931H1160015-01

Water Hose Inspection


B931H21606009

Inspect the water hoses in the following procedures:


- 1) Remove the left side cover and engine side cover. Refer to **"Front Side Exterior Parts Removal and Installation: in Section 9D"** and **"Rear Side Exterior Parts Removal and Installation: in Section 9D"**.
- 2) Check the water hoses for crack, damage or engine coolant leakage. If any defects are found, replace the radiator hose with a new one.
- 3) Any leakage from the connecting section should be corrected by proper tightening. Refer to "Water Hose Routing Diagram (Page 1F-3)".

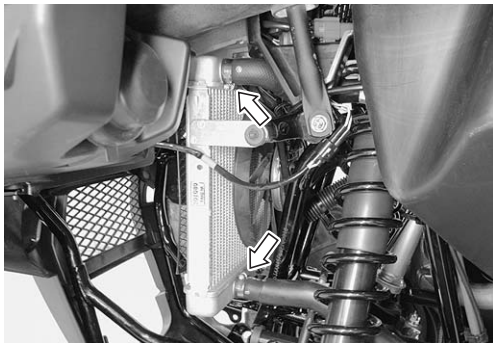

I931H1160016-01

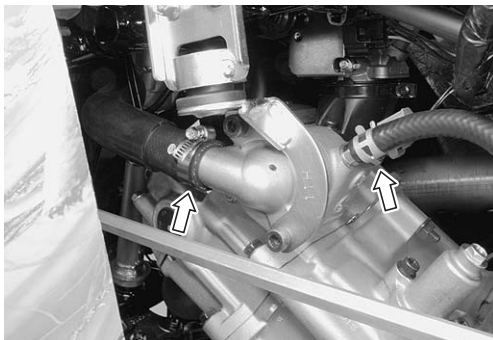

I931H1160017-01

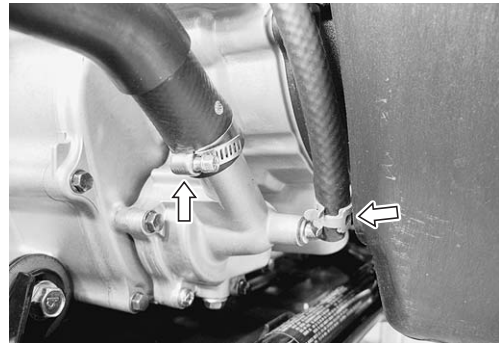

I931H1160018-01

- 4) After finishing the water hose inspection, reinstall the removed parts.

ECT Sensor Removal and Installation

B931H21606010

Refer to **"ECT Sensor Removal and Installation: in Section 1C"**.

ECT Sensor Inspection

B931H21606011


Refer to **"ECT Sensor Inspection: in Section 1C"**.

Cooling Fan Thermo-switch Removal and Installation

B931H21606012

Removal

- 1) Drain engine coolant. Refer to **"Cooling System Inspection: in Section 0B"**.
- 2) Remove the radiator. Refer to "Radiator / Cooling Fan Assembly Removal and Installation (Page 1F-5)".
- 3) Remove the cooling fan thermo-switch (1).

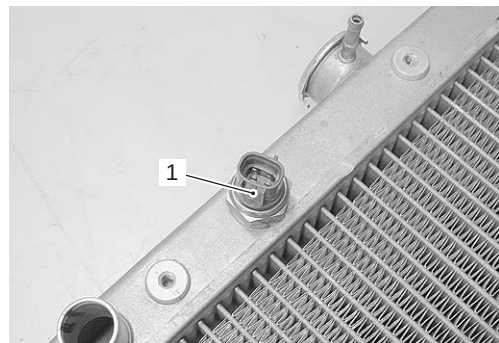

I931H1160019-01

Installation

Install the cooling fan thermo-switch in the reverse order of removal. Pay attention to the following points:

- Apply engine coolant to the O-ring.

⚠ CAUTION

Replace the removed O-ring with a new one.




I931H1160020-01

- Tighten the cooling fan thermo-switch (1) to the specified torque.

Tightening torque

Cooling fan thermo-switch (a): 17 N·m (1.7 kgf-m, 12.5 lbf-ft)

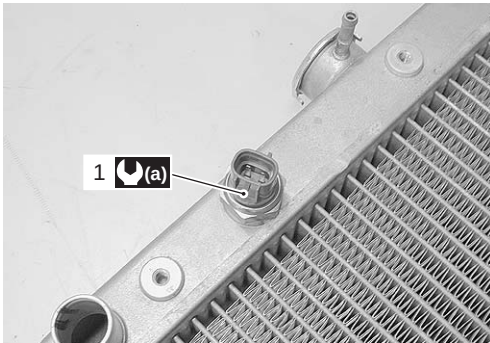

I931H1160021-01

- Install the radiator. Refer to "Radiator / Cooling Fan Assembly Removal and Installation (Page 1F-5)".
- Pour engine coolant. Refer to "**Cooling System Inspection: in Section 0B**".
- Bleed air from the cooling circuit. Refer to "**Cooling System Inspection: in Section 0B**".

Cooling Fan Thermo-switch Inspection


B931H21606013

Inspect the cooling fan thermo-switch in the following procedures:

- 1) Remove the cooling fan thermo-switch. Refer to "Cooling Fan Thermo-switch Removal and Installation (Page 1F-8)".
- 2) Check the thermo-switch closing or opening temperatures by testing it at the bench as shown in the figure.
- 3) Connect the thermo-switch (1) to a circuit tester and place it in the water "A" contained in a pan, which is placed on the stove.
- 4) Heat the water to raise its temperature slowly and read the column thermometer (2) when the switch closes or opens. If any abnormality is found, replace the cooling fan thermo-switch with a new one.

⚠ CAUTION

- Take special care when handling the cooling fan thermo-switch. Do not subject it to strong blows or allow it to be dropped.
- Do not contact the cooling fan thermo-switch (1) and the column thermometer (2) with a pan.

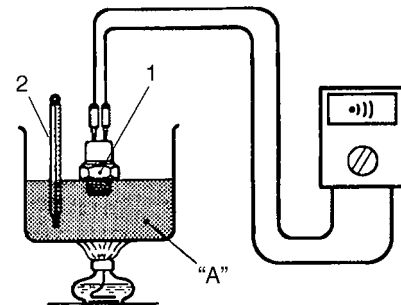

I705H1160033-03

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity test (•)))

Cooling fan thermo-switch operating temperature

Standard (OFF → ON): Approx. 93 °C (199 °F)

Standard (ON → OFF): Approx. 87 °C (189 °F)


- 5) Reinstall the cooling fan thermo-switch. Refer to "Cooling Fan Thermo-switch Removal and Installation (Page 1F-8)".

Thermostat Removal and Installation

B931H21606014


Removal

- 1) Drain a small amount of engine coolant. Refer to **“Cooling System Inspection: in Section 0B”**.
- 2) Move the gearshift-rod (1) by removing the gearshift arm. Refer to **“Shift Lever Assembly Removal and Installation: in Section 5A”**.

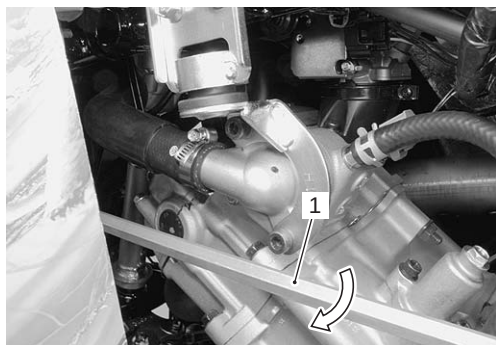


I931H1160023-01

- 3) Place a rag under the thermostat cover.
- 4) Remove the thermostat case (2).

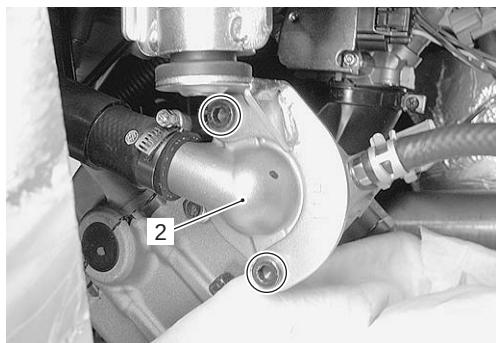

I931H1160022-02

- 5) Remove the thermostat (3).

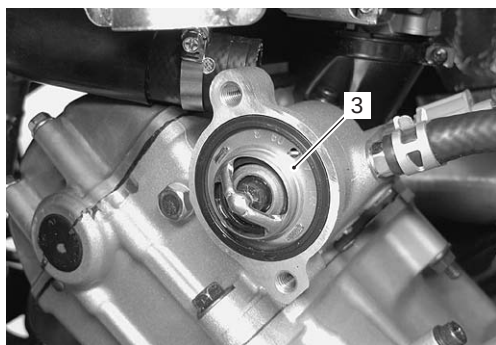

I931H1160024-01


Installation

Install the thermostat in the reverse order of removal. Pay attention to the following points:


- Apply engine coolant to the rubber seal on the thermostat.
- Install the thermostat.

NOTE

- Align the protrusions on the thermostat with the groove on the cylinder head.
- The jiggle valve of the thermostat faces up.

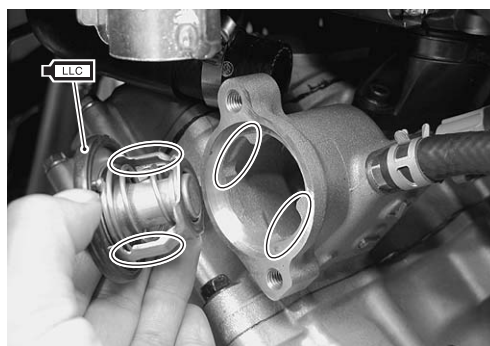


I931H1160025-01

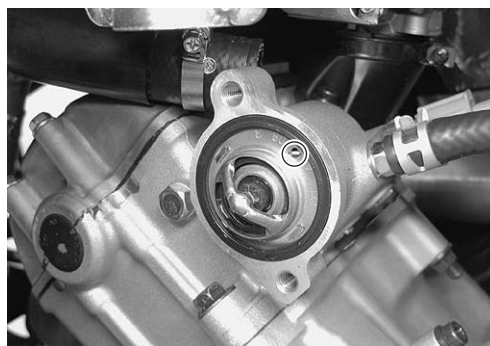

I931H1160026-01

- Tighten the thermostat cover bolts (1).

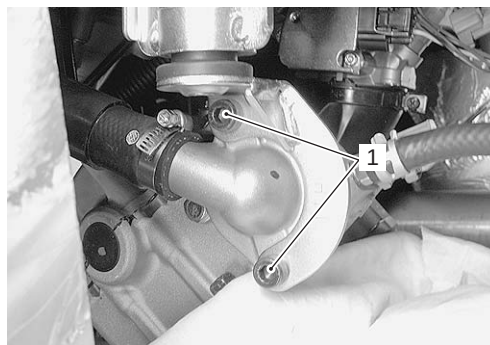

I931H1160027-02

- Pour engine coolant. Refer to **“Cooling System Inspection: in Section 0B”**.
- Bleed air from the cooling circuit. Refer to **“Cooling System Inspection: in Section 0B”**.

Thermostat Inspection

B931H21606015

Inspect the thermostat in the following procedures:

- 1) Remove the thermostat. Refer to "Thermostat Removal and Installation (Page 1F-10)".
- 2) Inspect the thermostat pellet for signs of cracking.




I931H1160028-01

- 3) Test the thermostat at the bench for control action.

⚠ CAUTION

- Do not contact the thermostat (1) and the column thermometer (2) with a pan.
- As the thermostat operating response to water temperature change is gradual, do not raise water temperature too quickly.
- The thermostat with its valve open even slightly under normal temperature must be replaced.

- 4) Immerse the thermostat (1) in the water contained in a beaker and note that the immersed thermostat is in suspension.
- 5) Heat the water by placing the beaker on a stove and observe the rising temperature on a thermometer (2).

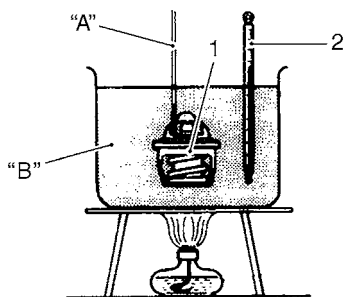

I705H1160030-03

"A": String	"B": Water
-------------	------------

- 6) Read the thermometer just when opening the thermostat. If this reading, which is the temperature level at which the thermostat valve begins to open, is out of the standard value, replace the thermostat with a new one.


Thermostat valve opening temperature

Standard: 80.5 – 83.5 °C (177 – 182 °F)

- 7) Keep on heating the water to raise its temperature.
- 8) Just when the water temperature reaches specified value, the thermostat valve should have been lifted by at least 8 mm (0.31 in). A thermostat failing to satisfy either of the two requirements (start-to-open temperature and valve lift) must be replaced.

Thermostat valve lift "a"

Standard: 8 mm (0.31 in) and over at 95 °C (203 °F)

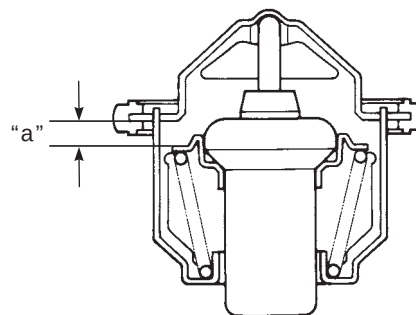


I931H1160029-01

- 9) Install the thermostat. Refer to "Thermostat Removal and Installation (Page 1F-10)".

Water Pump Components

B931H21606016

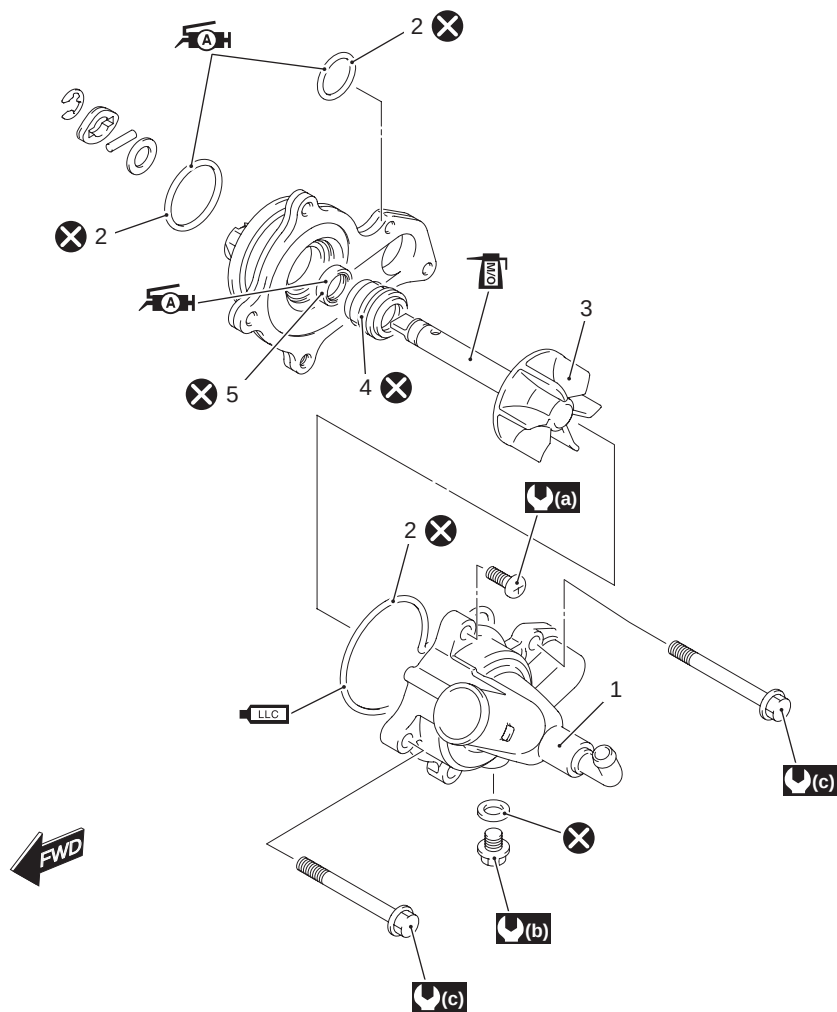

I931H1160056-03

1. Water pump cover	4. Mechanical seal	(b) : 13 N-m (1.3 kgf-m, 9.5 lbf-ft)	T : Apply molybdenum oil.
2. O-ring	5. Oil seal	(c) : 10 N-m (1.0 kgf-m, 7.0 lbf-ft)	LLC : Apply engine coolant.
3. Impeller	(a) : 6 N-m (0.6 kgf-m, 4.5 lbf-ft)	AH : Apply grease.	X : Do not reuse.

Water Pump Removal and Installation

B931H21606017


Removal

NOTE

Before draining engine oil and engine coolant, inspect engine oil and coolant leakage between the water pump and crankcase. If engine oil is leaking, visually inspect the oil seal and O-ring. If engine coolant is leaking, visually inspect the mechanical seal and seal washer. Refer to “Water Pump Related Parts Inspection (Page 1F-17)”.

- 1) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Remove the left mud guard. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 3) Drain engine oil and coolant. Refer to “Engine Oil and Filter Replacement: in Section 0B” and “Cooling System Inspection: in Section 0B”.

- 4) Disconnect the outlet hose (1) and water bypass hose (2).
- 5) Remove the water pump assembly (3).

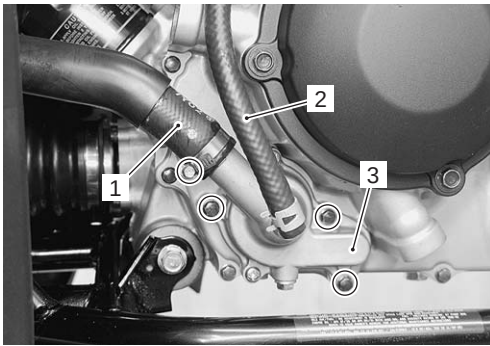

I931H1160030-01

Installation

Install the water pump in the reverse order of removal. Pay attention to the following points:


- Apply grease to the O-rings.

⚠ CAUTION

Replace the O-rings with the new ones.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Install the water pump assembly with the slot on the pump shaft end "A" securely engaged with the flat "B" on the oil pump shaft.

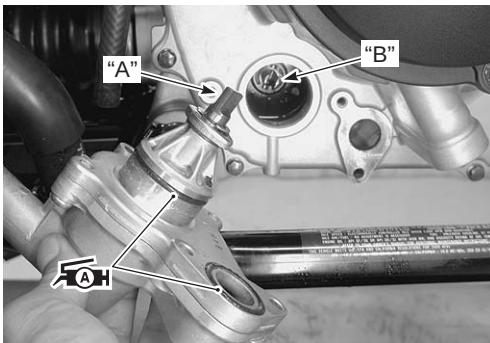


I931H1160031-01

- Tighten the water pump mounting bolts (4) to the specified torque.

Tightening torque

Water pump mounting bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

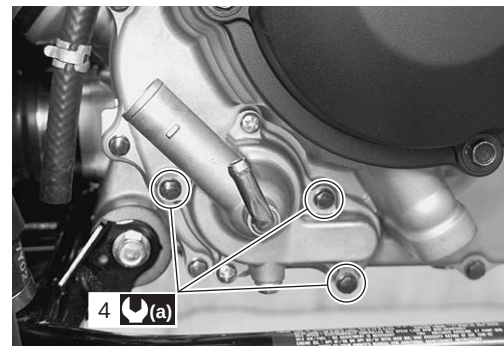

I931H1160032-02

- Connect the water hoses securely. Refer to "Water Hose Routing Diagram (Page 1F-3)".
- Pour engine oil and coolant. Refer to "**Engine Oil and Filter Replacement: in Section 0B**" and "**Cooling System Inspection: in Section 0B**".
- Bleed air from the cooling circuit. Refer to "**Front Differential Gear Oil Inspection: in Section 0B**".


Water Pump Disassembly and Assembly

B931H21606018

Refer to "Water Pump Removal and Installation (Page 1F-12)".

Disassembly

- 1) Remove the O-rings (1).

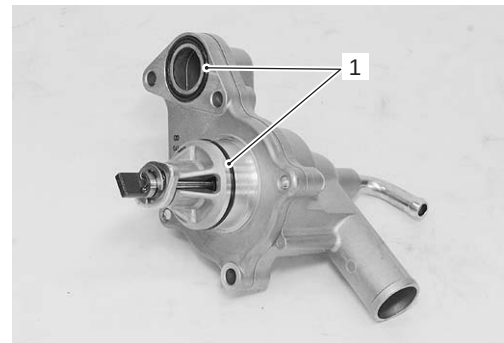

I931H1160033-01

- 2) Remove the water pump cover (2).



I931H1160034-01


1F-14 Engine Cooling System:

- 3) Remove the O-ring (3).




I931H1160035-01

- 4) Remove the E-ring (4) and cap (5).

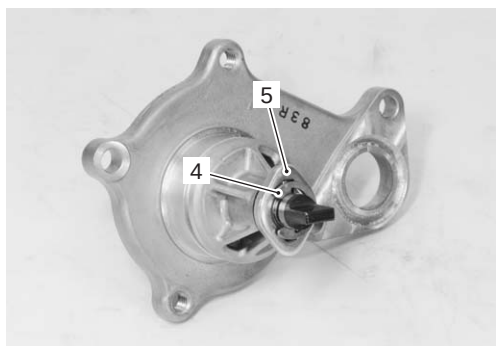


I931H1160036-01

- 5) Remove the pin (6) and washer (7).

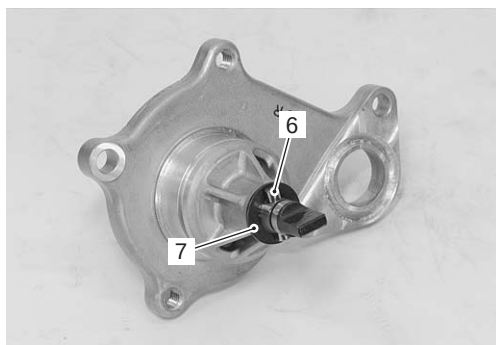


I931H1160037-01

- 6) Remove the impeller (8).

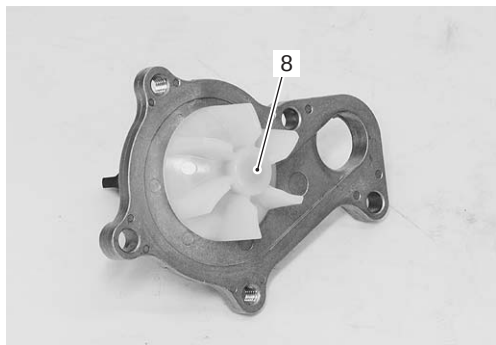

I931H1160038-01

- 7) Remove the mechanical seal ring (9) and rubber seal (10) from the impeller.

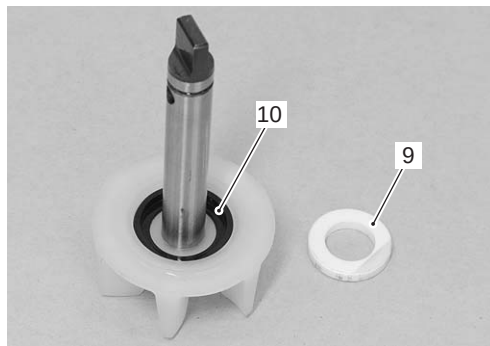

I931H1160039-01

- 8) Remove the mechanical seal with the special tool.

NOTE

If there is no abnormal condition, the mechanical seal removal is not necessary.

Special tool

 (A): 09921-20240 (Bearing remover set)




I931H1160040-01

- 9) Remove the oil seal (11).

NOTE

If there is no abnormal condition, the oil seal removal is not necessary.

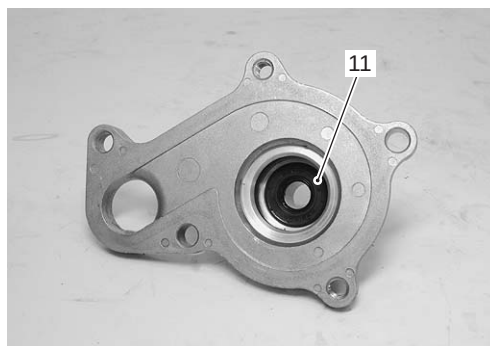

I931H1160041-01

Assembly

- 1) Install the oil seal with the special tool.

⚠ CAUTION


Replace the oil seal with a new one.

NOTE

The stamped mark on the oil seal should face mechanical seal side.

Special tool


 (A): 09913-70210 (Bearing installer set (10 – 75))

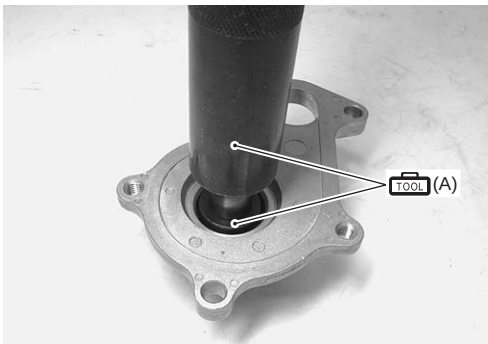

I931H1160042-01

- 2) Apply a small quantity of the grease to the oil seal lip.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

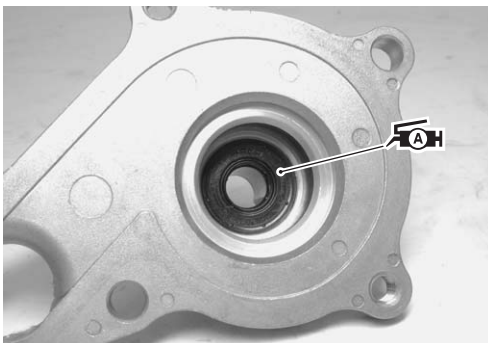

I931H1160043-01

- 3) Install a new mechanical seal using a suitable size socket wrench.

⚠ CAUTION

Replace the mechanical seal with a new one.

NOTE

On the new mechanical seal, the sealer "A" has been applied.



I931H1160044-01




I931H1160045-01

- 4) Install the rubber seal (1) into the impeller.
- 5) After wiping off the oily or greasy matter from the mechanical seal ring (2), install it into the impeller.

NOTE

The paint marked side "B" of mechanical seal ring faces the rubber seal.

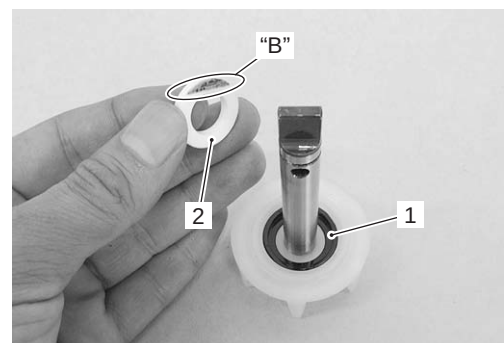

I931H1160046-01

1F-16 Engine Cooling System:


- 6) Apply silicone grease to the mechanical seal ring (2).

 **Grease 99000-25100 (SUZUKI SILICONE GREASE or equivalent)**

- 7) Apply molybdenum solution to the impeller shaft.


M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

- 8) Install the impeller shaft to the water pump body.

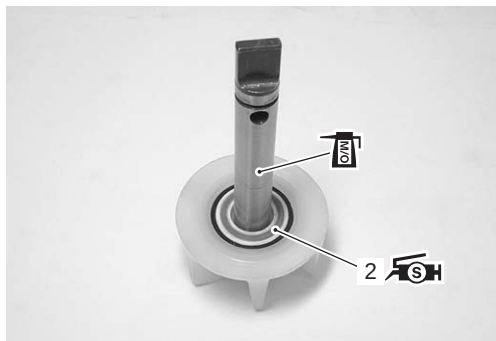

I931H1160047-01

- 9) Install the washer (3) and pin (4) to the impeller shaft.

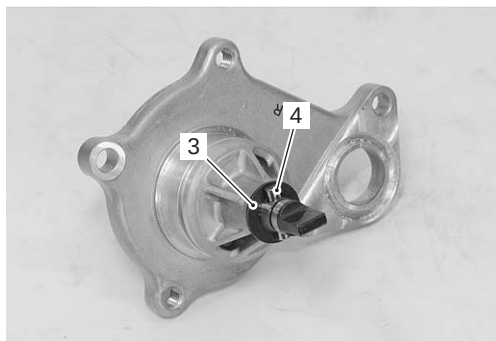

I931H1160054-01

- 10) Install the cap (5) and E-ring (6).



I931H1160055-01

- 11) Install a new O-ring (7) and apply engine coolant to it.

CAUTION

Use a new O-ring to prevent engine coolant leakage.




I931H1160048-02

- 12) Fit the water pump cover and tighten the water pump cover screws (8) to the specified torque.

Tightening torque

Water pump cover screw (a): 5.5 N·m (0.55 kgf-m, 4.0 lbf-ft)

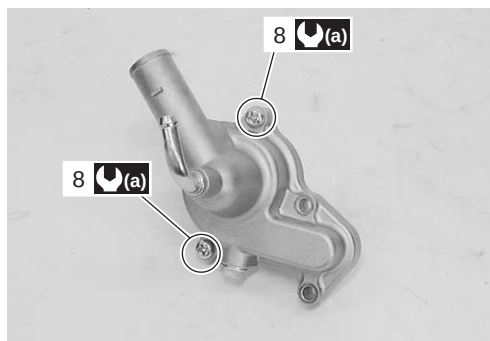

I931H1160049-02

Water Pump Related Parts Inspection

B931H21606019

Refer to "Water Pump Disassembly and Assembly (Page 1F-13)".

Mechanical Seal

Visually inspect the mechanical seal for damage, with particular attention given to the sealing face. Replace the mechanical seal that shows indications of leakage.



I931H1160050-01

Oil Seal


Visually inspect the oil seal for damage, with particular attention given to the lip. Replace the oil seal that shows indications of leakage.



I931H1160051-01

Impeller

Visually inspect the impeller and its shaft for damage. Replace the impeller if necessary.

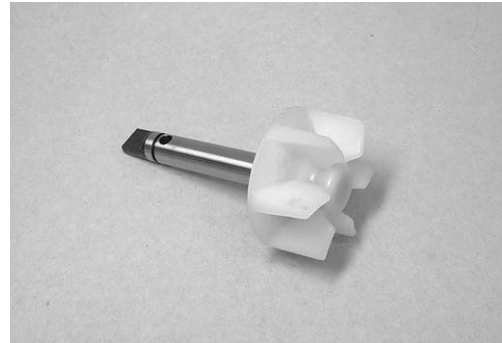

I931H1160052-01

Impeller Shaft Journal

Visually inspect the journal for damage or scratch. Replace the water pump body if necessary.



I931H1160053-01

Specifications

Service Data

B931H21607001

Thermostat + Radiator + Fan + Coolant

Item	Standard		Note
Thermostat valve opening temperature	80.5 – 83.5 °C (177 – 182 °F)		—
Thermostat valve lift	8 mm (0.31 in) and over at 95 °C (203 °F)		—
ECT sensor resistance	20 °C (68 °F)	Approx. 2.45 kΩ	—
	50 °C (122 °F)	Approx. 0.811 kΩ	—
	80 °C (176 °F)	Approx. 0.318 kΩ	—
	110 °C (230 °F)	Approx. 0.142 kΩ	—
Radiator cap valve opening pressure	110 – 140 kPa (1.1 – 1.4 kgf/cm ² , 15.6 – 19.9 psi)		—
Cooling fan thermo-switch operating temperature	OFF → ON	Approx. 93 °C (199 °F)	—
	ON → OFF	Approx. 87 °C (189 °F)	—
Engine coolant type	Use an antifreeze/coolant compatible with aluminum radiator, mixed with distilled water only, at the ratio of 50:50.		—
Engine coolant	Reservoir	Approx. 250 ml (0.26/0.22 US/lmp qt)	—
	Engine	Approx. 2 200 ml (2.32/1.94 US/lmp qt)	—

Tightening Torque Specifications

B931H21607002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Cooling fan assembly mounting bolt	8.4	0.84	6.0	☞ (Page 1F-6)
Cooling fan thermo-switch	17	1.7	12.5	☞ (Page 1F-9)
Water pump mounting bolt	10	1.0	7.0	☞ (Page 1F-13)
Water pump cover screw	5.5	0.55	4.0	☞ (Page 1F-16)

NOTE

The specified tightening torque is described in the following.

“Water Hose Routing Diagram (Page 1F-3)”

“Water Pump Components (Page 1F-12)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H21608001




Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 1F-13) / ☞ (Page 1F-15)
	SUZUKI SILICONE GREASE or equivalent	P/No.: 99000–25100	☞ (Page 1F-16)
Molybdenum oil	MOLYBDENUM OIL SOLUTION	—	☞ (Page 1F-16)

NOTE

Required service material is also described in the following.
 “Water Pump Components (Page 1F-12)”

Special Tool

B931H21608002

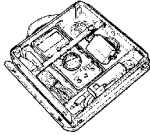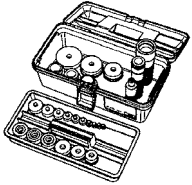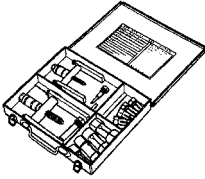09900–25008 Multi circuit tester set ☞ (Page 1F-9) 	09913–70210 Bearing installer set (10 – 75) ☞ (Page 1F-15) 
09921–20240 Bearing remover set ☞ (Page 1F-14) 	

Fuel System

Precautions

Precautions for Fuel System

B931H21700001

⚠ WARNING

- Keep away from fire or spark.
 - During disassembling, use care to minimize spillage of gasoline.
 - Spilled gasoline should be wiped off immediately.
 - Work in a well-ventilated area.
-

⚠ CAUTION

- To prevent the fuel system (fuel tank, fuel hose, etc.) from contamination with foreign particles, blind all openings.
 - After removing the throttle body, tape the cylinder intake section to prevent foreign particles from entering.
-

General Description


Fuel System Description

B931H21701001

Fuel System

The fuel delivery system consists of the fuel tank (1), fuel pump (2), fuel mesh filter (3), fuel feed hose (4), fuel delivery pipe (5) (including fuel injector) and fuel pressure regulator (6). There is no fuel return hose. The fuel in the fuel tank (1) is pumped up by the fuel pump (2) and pressurized fuel flows into the injector (7) installed in the fuel delivery pipe (5). Fuel pressure is regulated by the fuel pressure regulator (6). As the fuel pressure applied to the fuel injector (7) (the fuel pressure in the fuel delivery pipe) is always kept at absolute fuel pressure of 300 kPa (3.0 kgf/cm², 43 psi), the fuel is injected into the throttle body in conic dispersion when the injector (7) opens according to the injection signal from the ECM.

The fuel relieved by the fuel pressure regulator (6) flows back to the fuel tank (1).

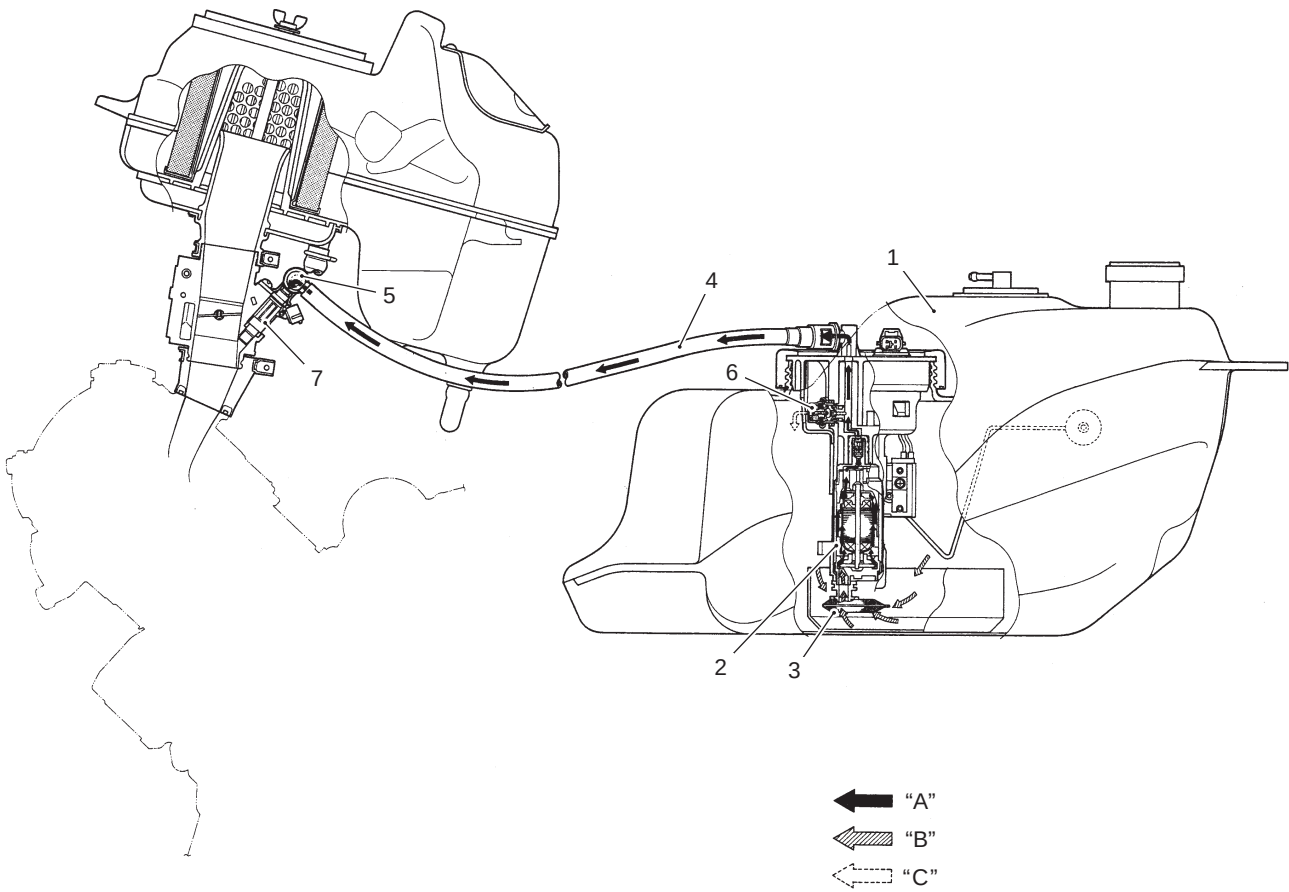


I831G1170001-01

1. Fuel tank	4. Fuel feed hose	7. Fuel injector	"C": Relieved fuel
2. Fuel pump	5. Fuel delivery pipe	"A": Pressurized fuel	
3. Fuel mesh filter	6. Fuel pressure regulator	"B": Before-pressurized fuel	

Schematic and Routing Diagram

Fuel Hose Routing Diagram

B931H21702001

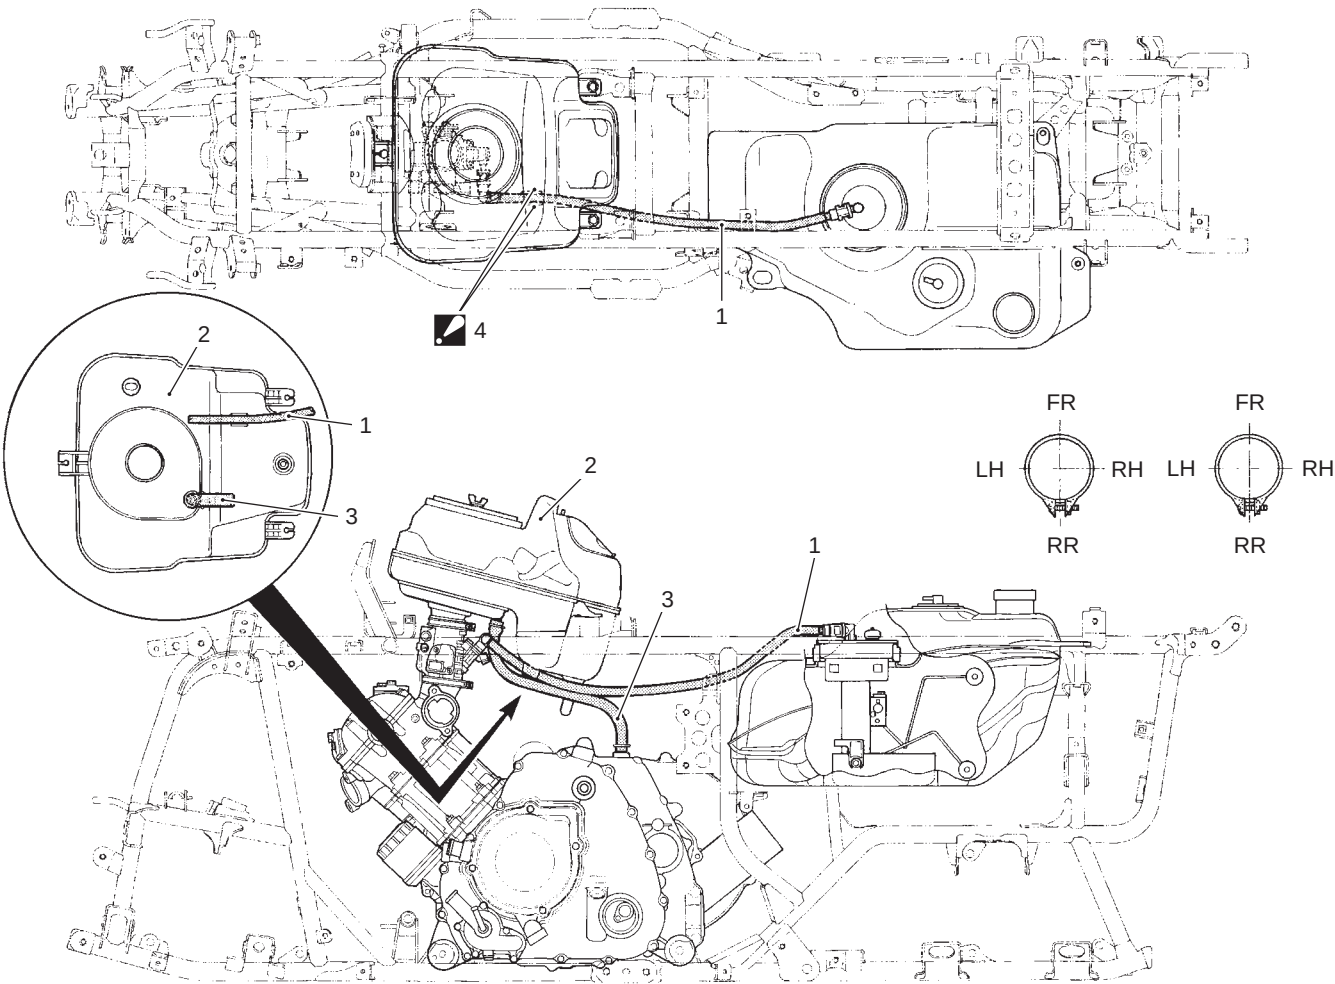


I931H1170028-01

1. Fuel hose	3. PCV hose
2. Air cleaner box	4. Pass the fuel hose between the air cleaner guide.

Fuel Tank Breather Hose Routing Diagram

B931H21702002

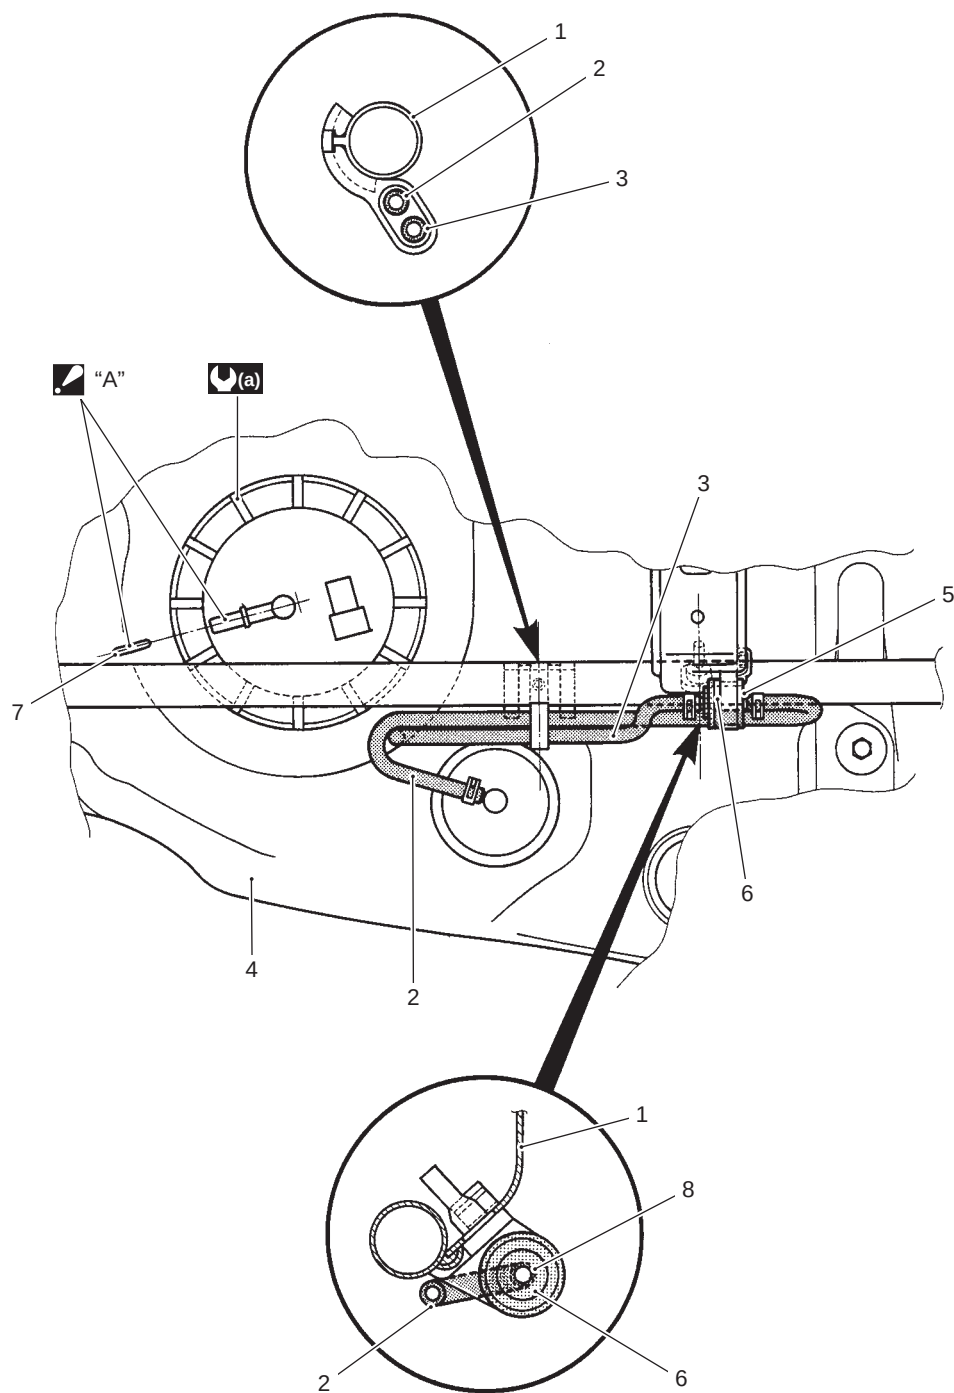

I831G1170003-04

1. Frame	5. Valve (Black)	▲ "A": Align the fuel pump nipple with the mark.
2. Fuel tank breather hose	6. Valve (Orange)	⚙️(a) : 35 N·m (3.5 kgf·m, 25.5 lbf·ft)
3. Check valve hose	7. Mark	
4. Fuel tank	8. Fuel tank pressure control valve	

Diagnostic Information and Procedures

Fuel System Diagnosis

B931H21704001

Condition	Possible cause	Correction / Reference Item
Engine will not start or is hard to start (No fuel reaching the intake manifold)	Clogged fuel filter or fuel hose.	<i>Clean or replace.</i>
	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective fuel injectors.	<i>Replace.</i>
	Defective fuel pump relay.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Open-circuited wiring connections.	<i>Check and repair.</i>
Engine will not start or is hard to start (Incorrect fuel/air mixture)	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Defective TP sensor.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective IAP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
	Defective ECT sensor.	<i>Replace.</i>
	Defective IAT sensors.	<i>Replace.</i>
Engine stalls often (Incorrect fuel/air mixture)	Dirty throttle body.	<i>Clean.</i>
	Defective IAP sensor or circuit.	<i>Repair or replace.</i>
	Clogged fuel filter.	<i>Clean or replace.</i>
	Defective fuel pump.	<i>Replace.</i>
	Defective fuel pressure regulator.	<i>Replace.</i>
	Damaged or cracked vacuum hose.	<i>Replace.</i>
	Defective ECT sensor.	<i>Replace.</i>
	Defective thermostat.	<i>Replace.</i>
Engine stalls often (Fuel injector improperly operating)	Defective IAT sensor.	<i>Replace.</i>
	Defective fuel injectors.	<i>Replace.</i>
	No injection signal from ECM.	<i>Repair or replace.</i>
	Open or short circuited wiring connection.	<i>Repair or replace.</i>
Engine runs poorly in high speed range (Defective control circuit or sensor)	Defective battery or low battery voltage.	<i>Replace or recharge.</i>
	Low fuel pressure.	<i>Repair or replace.</i>
	Defective TP sensor.	<i>Replace.</i>
	Defective IAT sensor.	<i>Replace.</i>
	Defective IAP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>
Engine lacks power (Defective control circuit or sensor)	Defective CKP sensor.	<i>Replace.</i>
	Low fuel pressure.	<i>Repair or replace.</i>
	Defective TP sensor.	<i>Replace.</i>
	Defective IAT sensor.	<i>Replace.</i>
	Defective CKP sensor.	<i>Replace.</i>
	Defective IAP sensor.	<i>Replace.</i>
	Defective ECM.	<i>Replace.</i>

Repair Instructions

Fuel Pressure Inspection

B931H21706001

⚠ WARNING

- Keep away from fire or spark.
- Spilled gasoline should be wiped off immediately.
- Work in a well-ventilated area.

Inspect the fuel pressure in the following procedures:

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Remove the left side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Place a rag under the fuel feed hose and disconnect fuel feed hose (1) from the fuel delivery pipe.



I931H1170002-01

- 4) Install the special tools between the fuel feed hose (1) and fuel delivery pipe.


Special tool

 (A): 09940-40211 (Fuel pressure gauge adapter)

 (B): 09940-40220 (Fuel pressure gauge attachment)

 (C): 09915-77331 (Oil pressure gauge (1000 kPa))

 (D): 09915-74521 (Adapter hose)

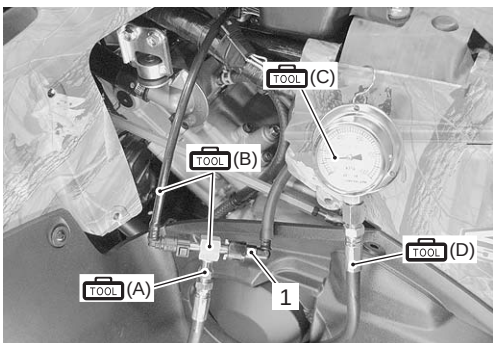

I931H1170003-01

- 5) Turn the ignition ON and check for fuel pressure.

Fuel pressure

Approx. 294 kPa (2.9 kgf/cm², 41 psi)

If the fuel pressure is lower than the specification, check for the followings:

- Fuel hose leakage
- Clogged fuel filter
- Pressure regulator
- Fuel pump

If the fuel pressure is higher than the specification, check for the followings:

- Fuel pump
- Pressure regulator

- 6) Remove the special tools.

⚠ WARNING

Before removing the special tools, turn the ignition switch OFF and release the fuel pressure slowly.

- 7) Reinstall the removed parts.

Fuel Pump Inspection

B931H21706002

Turn the ignition switch ON and check that the fuel pump operates for a few seconds.

If the fuel pump motor does not make operating sound, inspect the fuel pump circuit connections or inspect the fuel pump relay and TO sensor. Refer to “Fuel Pump Relay Inspection (Page 1G-7)” and “**TO Sensor Inspection: in Section 1C**”.

If the fuel pump relay, TO sensor and fuel pump circuit connections are OK, the fuel pump may be faulty, replace the fuel pump with a new one. Refer to “Fuel Pump Assembly Removal and Installation (Page 1G-9)”.

Fuel Discharge Amount Inspection

B931H21706003

⚠ WARNING


- Keep away from fire or spark.
- Spilled gasoline should be wiped off immediately.
- Work in a well-ventilated area.

Inspect the fuel discharge amount in the following procedures:

- 1) Remove the rear fender. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.

1G-7 Fuel System:

- 2) Place a rag under the fuel feed hose (1) and disconnect fuel feed hose from the fuel pump.

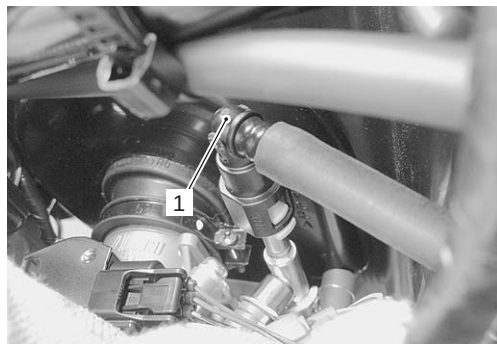


I931H1170004-01

- 3) Place the measuring cylinder and insert the fuel feed hose end into the measuring cylinder.



I931H1170005-02

- 4) Disconnect the fuel pump lead wire coupler (2).

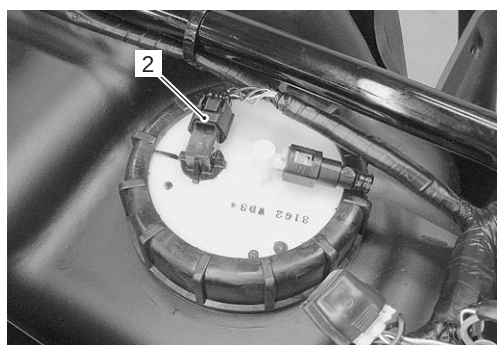

I931H1170006-01

- 5) Connect a proper lead wire into the fuel pump lead wire coupler (fuel pump side) and apply 12 V to the fuel pump (between (+) Y/R wire and (-) B/W wire) for 10 seconds and measure the amount of fuel discharged.


If the discharge amount is out of the specification, the probable cause may be failure of the fuel pump or clogged fuel filter.

NOTE

The battery must be in fully charged condition.

Fuel discharge amount

55.5 ml (1.88/1.95 US/Imp oz) and more/10 sec.

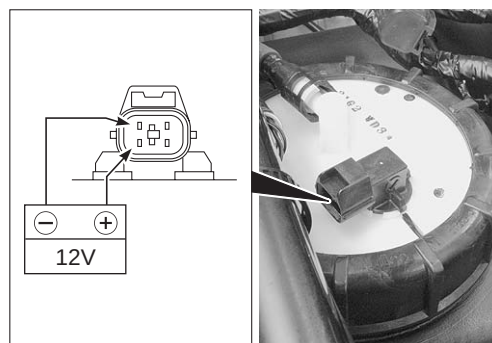

I931H1170007-02

- 6) After finishing the fuel discharge inspection, reinstall the rear fender. Refer to **"Rear Side Exterior Parts Removal and Installation: in Section 9D"**.


Fuel Pump Relay Inspection

B931H21706004

Refer to **"Electrical Components Location: in Section 0A"**.

Inspect the fuel pump relay in the following procedures:

- 1) Remove the seat. Refer to **"Seat Removal and Installation: in Section 9D"**.
- 2) Remove the fuel pump relay (1).

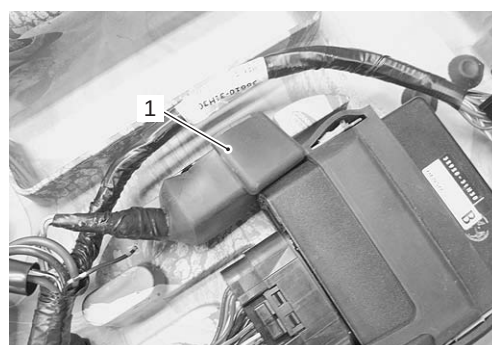

I931H1170008-01


- 3) First, check for insulation with the tester between terminals "A" and "B". Next, check for continuity between "A" and "B" with 12 V voltage applied, positive (+) to terminal "C" and negative (-) to terminal "D". If continuity does not exist, replace the relay with a new one.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity test (•)))

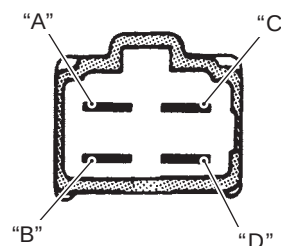

I718H1170013-01

Fuel Hose Inspection

B931H21706005


Refer to "Fuel Line Inspection: in Section 0B".

Fuel Feed Hose Removal and Installation

B931H21706006

Removal

- 1) Remove the rear fender. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the fuel feed hose (1).

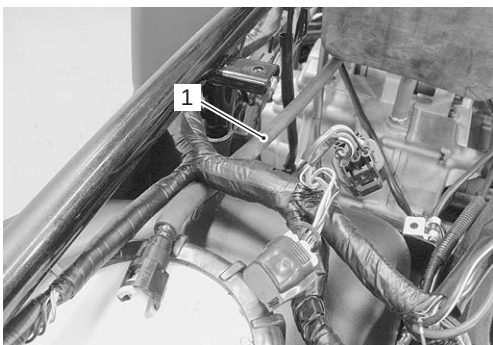

I931H1170009-01

Installation

- 1) Install the fuel feed hose as shown in the fuel hose routing diagram. Refer to "Fuel Hose Routing Diagram (Page 1G-3)".
- 2) Install the rear fender. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".

Fuel Level Gauge Inspection

B931H21706007

Refer to "Fuel Level Gauge Inspection: in Section 9C".

Fuel Level Indicator Inspection

B931H21706008

Refer to "Fuel Level Indicator Inspection: in Section 9C".

Fuel Tank Removal and Installation


B931H21706009

Removal

⚠ WARNING


- Keep away from fire or spark.
- Spilled gasoline should be wiped off immediately.
- Work in a well-ventilated area.

- 1) Remove the rear fender. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Remove the fuel tank outer cover. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".
- 3) Place a rag under the fuel feed hose and disconnect the fuel feed hose (1) from the fuel pump.
- 4) Disconnect the fuel pump lead wire coupler (2) and fuel tank breather hose (3).

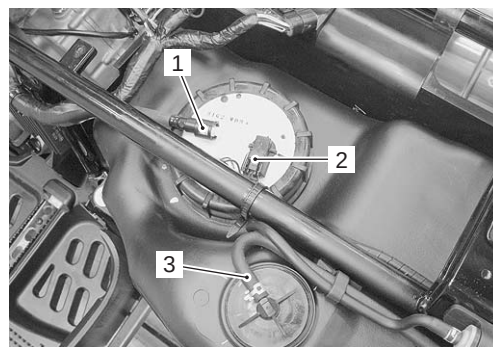

I931H1170010-01

- 5) Remove the fuel tank mounting bolts.
- 6) Remove the fuel tank from the left side.

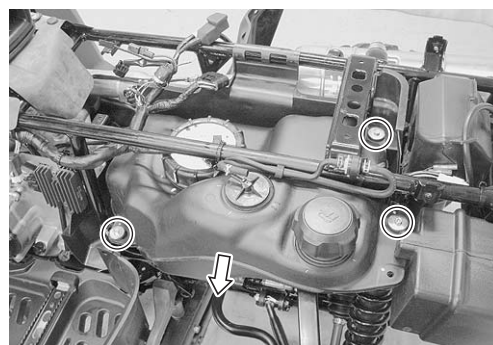

I931H1170011-01

- 7) Remove the fuel tank lower cover (4).




I931H1170012-01

Installation

Install the fuel tank in the reverse order of removal.

Fuel Pump Components

B931H21706010

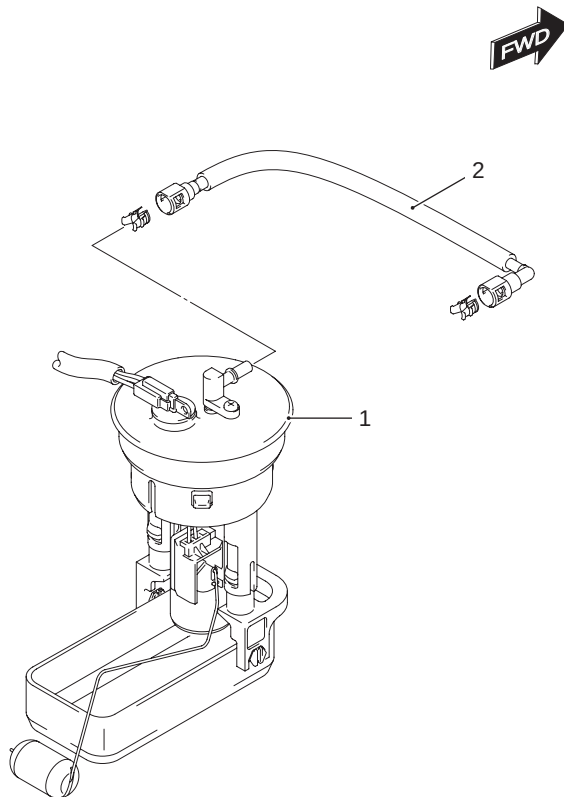

I831G1170004-01

1. Fuel pump	2. Fuel feed hose
--------------	-------------------

Fuel Pump Assembly Removal and Installation

B931H21706011

Removal

⚠ WARNING


- Spilled gasoline should be wiped off immediately.
- Keep away from fire or spark.
- Work in a well-ventilated area.

- 1) Remove the fuel tank. Refer to "Fuel Tank Removal and Installation (Page 1G-8)".
- 2) Remove the fuel pump retainer (1) with the special tool.

Special tool

 (A): 09941-51012 (Ring locknut wrench)

- 3) Remove the fuel pump assembly (2).

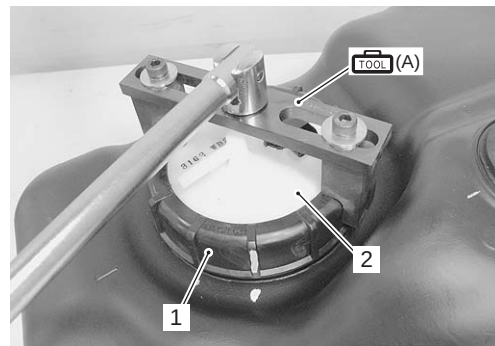

I931H1170013-01

Installation


Install the fuel pump assembly in the reverse order of removal.

Pay attention to the following points:

- Install the fuel pump gasket (1).

⚠ CAUTION

If there are wear or damage, replace the gasket (1) with a new one.

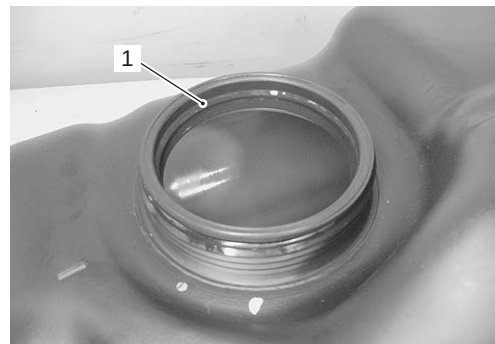

I931H1170014-01


- Align the fuel pump nipple (2) with alignment mark "A" on the fuel tank.
- Tighten the fuel pump retainer with the special tool to the specified torque.

Special tool

 (A): 09941-51012 (Ring locknut wrench)

Tightening torque

Fuel pump retainer: 35 N·m (3.5 kgf-m, 25.5 lbf-ft)

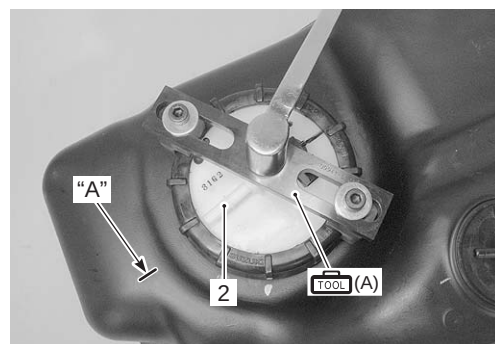

I931H1170015-01


Fuel Pump Disassembly and Assembly

B931H21706012

Refer to "Fuel Pump Assembly Removal and Installation (Page 1G-9)".

Disassembly

Remove the fuel cup holder (1) with a (–) screw driver.

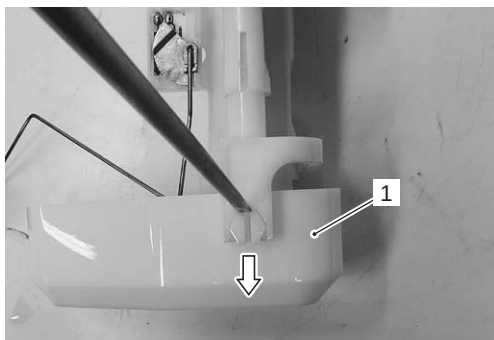

I831G1170020-01

Assembly

Assemble the fuel tank pump in the reverse order of the disassembly.

Fuel Mesh Filter Inspection and Cleaning


B931H21706013

Inspect the fuel mesh filter in the following procedures:

- 1) Remove the fuel cup holder. Refer to "Fuel Pump Disassembly and Assembly (Page 1G-10)".
- 2) If the fuel mesh filter is clogged with foreign particles, it hinders smooth gasoline flow resulting in loss of engine power.

NOTE

When the fuel mesh filter is dirtied excessively, replace the fuel mesh filter with a new one.

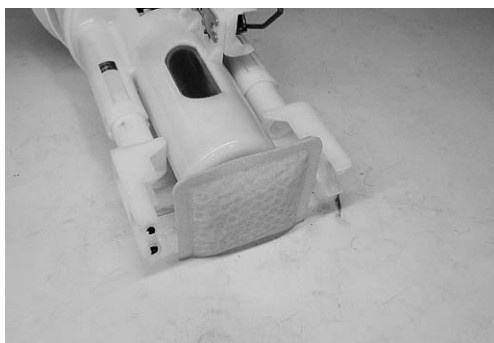

I931H1170016-01

- 3) After finishing the fuel mesh filter inspection, reinstall the fuel cup holder and fuel pump assembly. Refer to "Fuel Pump Assembly Removal and Installation (Page 1G-9)".

Fuel Injector Inspection and Cleaning

B931H21706014

Inspect the fuel injector in the following procedures:

- 1) Remove the fuel injector. Refer to "Fuel Injector / Fuel Delivery Pipe Removal and Installation (Page 1G-10)".
- 2) Check the fuel injector filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in the fuel lines and fuel tank.



I931H1170017-01

- 3) Install the fuel injector. Refer to "Fuel Injector / Fuel Delivery Pipe Removal and Installation (Page 1G-10)".

Fuel Injector / Fuel Delivery Pipe Removal and Installation

B931H21706015

Removal


⚠ WARNING

- Spilled gasoline should be wiped off immediately.
- Keep away from fire or spark.
- Work in a well-ventilated area.

- 1) Remove the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Remove the air cleaner box. Refer to "Air Cleaner Box Removal and Installation: in Section 1D".


1G-11 Fuel System:

- 3) Place a rug under the fuel feed hose (1) and disconnect the fuel feed hose (1) from the fuel delivery pipe.
- 4) Disconnect the injector coupler (2).

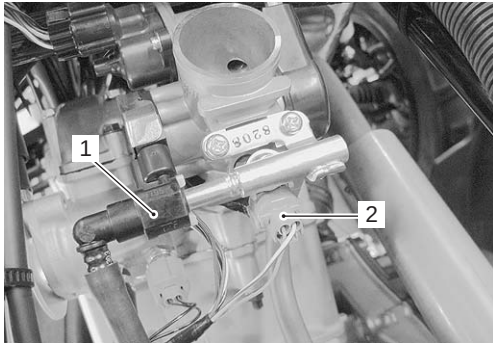


I931H1170018-01

- 5) Remove the fuel delivery pipe (3) with the injector (4).

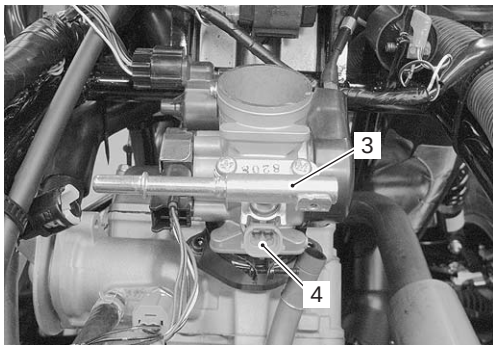

I931H1170019-01

- 6) Remove the fuel injector (4) from the fuel delivery pipe.

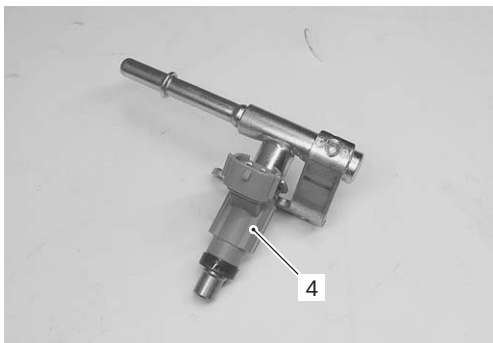

I931H1170027-01

Installation


Install the fuel injector/fuel delivery pipe in the reverse order of removal.

Pay attention to the following points:

- Apply a thin coat of engine oil to the new cushion seal (1) and O-ring (2).

⚠ CAUTION

Replace the cushion seal and O-ring with the new ones.

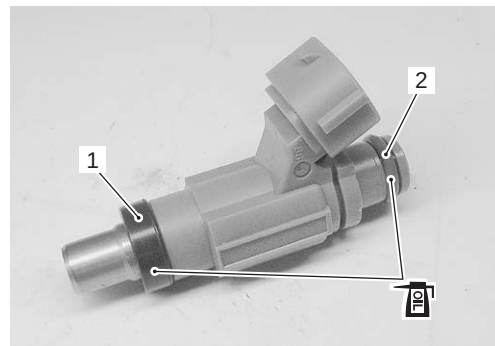

I931H1170021-01


- Install the fuel injector (3) by pushing it straight to the delivery pipe (4).

⚠ CAUTION

Never turn the injector while pushing it.

NOTE

Align the coupler "A" of injector with boss "B" of the delivery pipe.

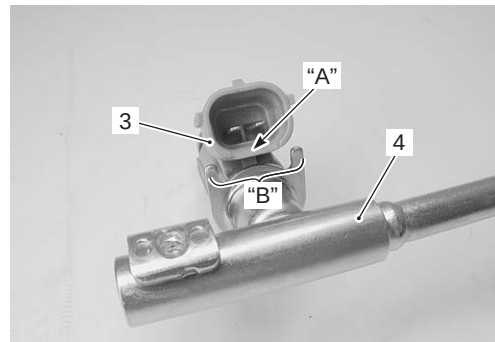

I931H1170020-01

- Install the fuel delivery pipe assembly (5) to the throttle body assembly.


⚠ CAUTION

Never turn the fuel injector while installing it.

- Tighten the fuel delivery pipe mounting screws to the specified torque.

Tightening torque

Fuel delivery pipe mounting screw (a): 5 N·m (0.5 kgf-m, 3.5 lbf-ft)

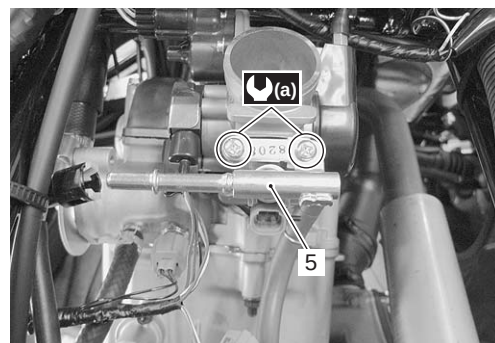


I931H1170022-01

Fuel Tank Pressure Control (FTPC) Valve Removal and Installation


B931H21706016

Removal

- 1) Remove the rear carrier. Refer to “**Rear Carrier Removal and Installation: in Section 9E**”.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Remove the side covers, left and right. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 4) Remove the engine side cover. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 5) Remove the mud guard mounting screws (1) and fasteners (2).

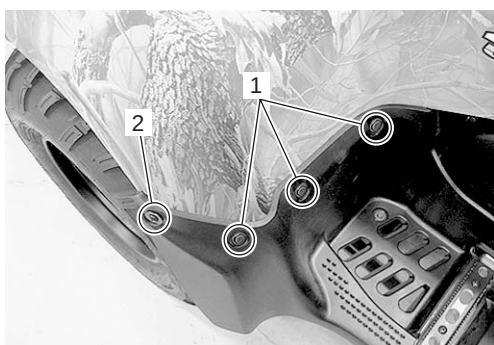

I931H1170023-03

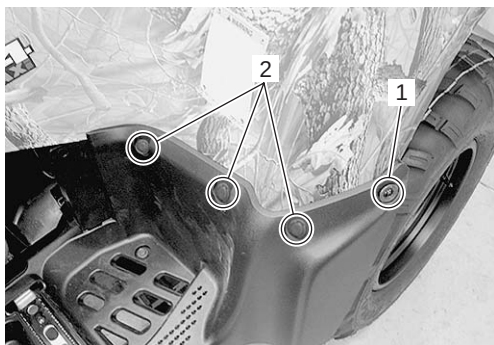


I931H1170026-03

- 6) Remove the fuel tank cap (3).


⚠ CAUTION

To prevent the fuel tank from contamination with foreign particles, blind opening.

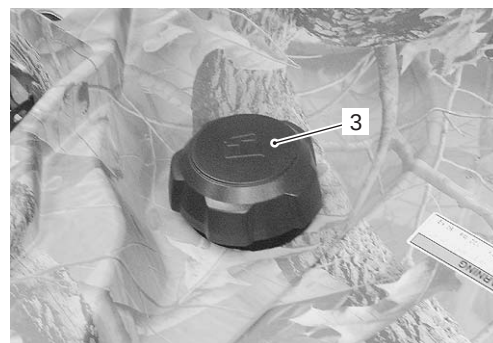

I931H1170024-03

- 7) Move the rear fender upside.
- 8) Disconnect the check valve hose (4) and fuel tank breather hose (5).
- 9) Remove the FTPC valve (6).

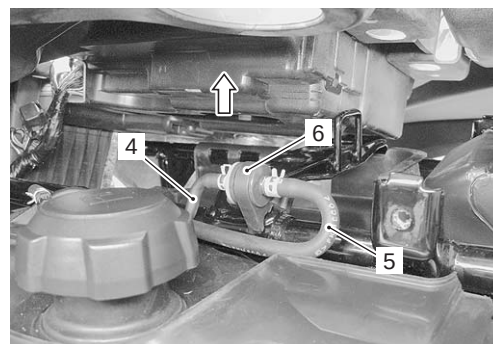

I931H1170025-04

Installation

Install the FTPC valve in the reverse order of removal, pay attention to the following points.


- Install the FTPC valve as shown in the fuel tank breather hose routing diagram. Refer to “**Fuel Tank Breather Hose Routing Diagram (Page 1G-4)**”.

Fuel Tank Pressure Control (FTPC) Valve Inspection

B931H21706017

Inspect the FTPC valve in the following procedures:

- 1) Remove the FTPC valve. Refer to "Fuel Tank Pressure Control (FTPC) Valve Removal and Installation (Page 1G-12)".
- 2) Check the FTPC valve if air can pass through smoothly when blown from the orange color side and not from the other side. If abnormal condition is found, replace the FTPC valve with a new one.

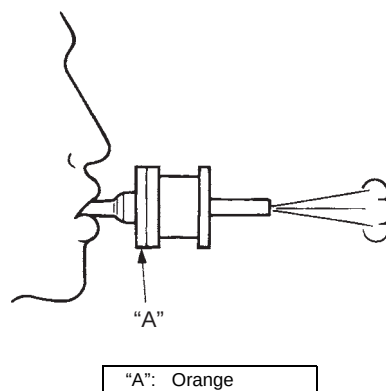

I705H1170014-02

- 3) After finishing the FTPC valve inspection, reinstall the FTPC valve. Refer to "Fuel Tank Pressure Control (FTPC) Valve Removal and Installation (Page 1G-12)".

Specifications

Service Data

B931H21707001

Injector + Fuel Pump + Fuel Pressure Regulator

Item	Specification	Note
Injector resistance	11 – 13 Ω at 20 °C (68 °F)	—
Fuel pump discharge amount	55.5 ml (1.88/1.95 US/Imp oz) and more/10 sec.	—
Fuel pressure regulator operating set pressure	Approx. 294 kPa (2.9 kgf/cm ² , 41 psi)	—

Fuel

Item	Specification	Note
Fuel type	Use only unleaded gasoline of at least 87 pump octane (R/2 + M/2) or 91 octane or higher rated by the Research Method. Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10% ethanol, or less than 5% methanol with appropriate cosolvents and corrosion inhibitor is permissible.	P-28, 33
	Gasoline used should be graded 91 octane or higher. An unleaded gasoline type is recommended.	Others
Fuel tank capacity	17.5 L (4.6/3.8 US/Imp gal)	

Tightening Torque Specifications

B931H21707002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Fuel pump retainer	35	3.5	25.5	☞ (Page 1G-9)
Fuel delivery pipe mounting screw	5	0.5	3.5	☞ (Page 1G-11)

NOTE

The specified tightening torque is described in the following.
 "Fuel Tank Breather Hose Routing Diagram (Page 1G-4)"





Reference:

For the tightening torque of fastener not specified in this section, refer to "Tightening Torque List: in Section 0C".

Special Tools and Equipment

Special Tool

B931H21708001

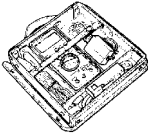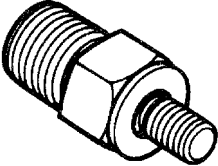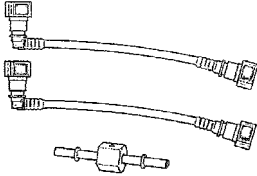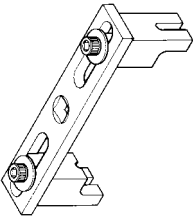09900–25008 Multi circuit tester set 🔧 (Page 1G-7)		09915–74521 Adapter hose 🔧 (Page 1G-6)	
09915–77331 Oil pressure gauge (1000 kPa) 🔧 (Page 1G-6)		09940–40211 Fuel pressure gauge adapter 🔧 (Page 1G-6)	
09940–40220 Fuel pressure gauge attachment 🔧 (Page 1G-6)		09941–51012 Ring locknut wrench 🔧 (Page 1G-9) / 🔧 (Page 1G-9)	

Ignition System

General Description

Override Switch Description

B931H21801001

The override switch allows the rider to increase the power available by overriding the normal speed limiter in forward Differential Lock or Reverse. For example, the rider may need to use extra power when stuck in the mud. To override the normal speed limiter the rider must push the override button and hold it in. When the switch button is released, engine speed will once again be limited by the speed limiter.

In forward Differential Lock mode, the override mode can be used for an indefinite period of time simply by holding the button in continuously.



I931H1180001-01

Operation


- 1) Set the diff-lock position or "R" (Reverse) position.
- 2) Operate the override switch while pushing it.

Schematic and Routing Diagram

Ignition System Diagram

B931H21802001

Refer to "Wire Color Symbols: in Section 0A".

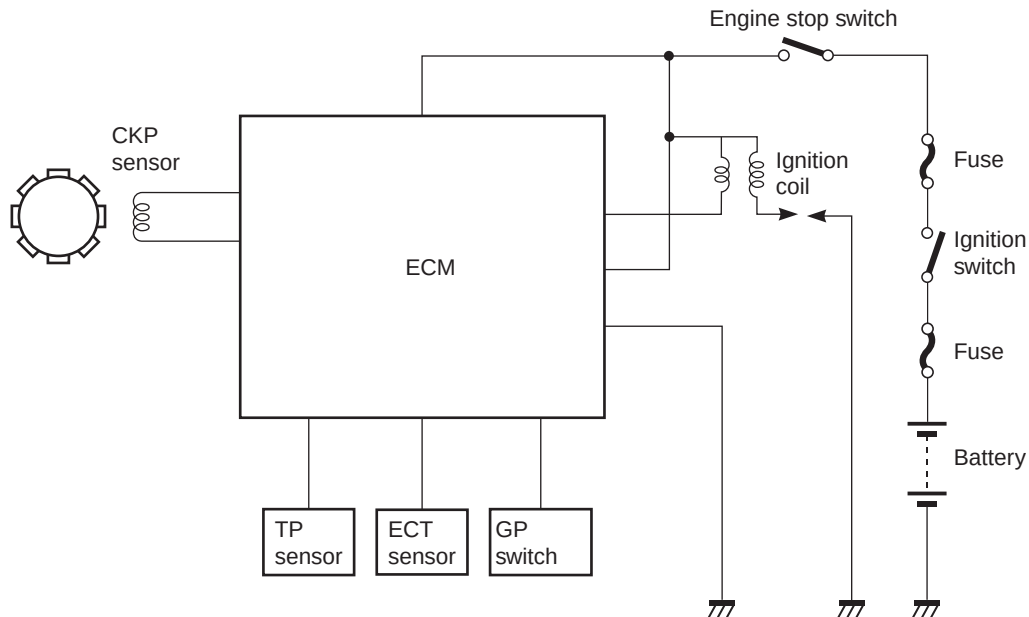

I831G1180004-04

Ignition System Components Location

B931H21802002

Refer to "Electrical Components Location: in Section 0A".

Diagnostic Information and Procedures

Ignition System Symptom Diagnosis

B931H21804001

Condition	Possible cause	Correction / Reference Item
Spark plug not sparking	Damaged spark plug.	Replace.
	Fouled spark plug.	Clean or replace.
	Wet spark plug.	Clean and dry or replace.
	Defective ignition coil.	Replace.
	Defective CKP sensor.	Replace.
	Defective ECM.	Replace.
	Open-circuited wiring connections.	Repair or replace.
	Open or short in high-tension cord.	Replace.
Engine stalls easily (No spark)	Fouled spark plug.	Clean or replace.
	Defective CKP sensor.	Replace.
	Defective ECM.	Replace.
Spark plug is wet or quickly becomes fouled with carbon	Excessively rich air/fuel mixture.	Inspect FI system.
	Excessively high idling speed.	Inspect FI system.
	Incorrect gasoline.	Change.
	Dirty air cleaner element.	Clean or replace.
	Incorrect spark plug.	Change to correct spark plug.
Spark plug quickly becomes fouled with oil or carbon	Worn piston rings.	Replace.
	Worn piston.	Replace.
	Worn cylinder.	Rebore or replace.
	Excessive valve-stem to valve-guide clearance.	Replace.
	Worn valve stem oil seals.	Replace.
Spark plug electrodes overheat or burn	Incorrect spark plug.	Change to correct spark plug.
	Overheated engine.	Tune-up.
	Loose spark plug.	Tighten.
	Excessively lean air/fuel mixture.	Inspect FI system.

No Spark or Poor Spark

B931H21804002

Troubleshooting

NOTE

- Check that the transfer is in neutral and the engine stop switch is in the "RUN" position. Check that the fuse is not blown and the battery is fully-charged before diagnosing.
- Check that the emergency switch is securely connected to the vehicle (For P-17).

Step	Action	Yes	No
1	Check the ignition system couplers for poor connections. <i>Is there connection in the ignition system couplers?</i>	Go to step 2.	Poor connection of couplers.
2	Measure the battery voltage between input lead wires (O/W and B/W) at the ECM with the ignition switch in the "ON" position. <i>Is the voltage OK?</i>	Go to Step 3.	• Faulty ignition switch. • Faulty wire harness. • Broken wire harness or poor connection of related circuit couplers.
3	Measure the ignition coil primary peak voltage. Refer to "Ignition Coil and Plug Cap Inspection (Page 1H-4)". NOTE This inspection method is applicable only with the multi-circuit tester and the peak volt adaptor. <i>Is the peak voltage OK?</i>	Go to step 4.	Go to step 5.

1H-3 Ignition System:

Step	Action	Yes	No
4	Inspect the spark plug. Refer to “ Spark Plug Inspection and Cleaning: in Section 0B ”. <i>Is the spark plug OK?</i>	Go to Step 5.	Faulty spark plug.
5	Inspect the ignition coil. Refer to “Ignition Coil and Plug Cap Inspection (Page 1H-4)”. <i>Is the ignition coil OK?</i>	Go to step 6.	Faulty ignition coil.
6	Measure the CKP sensor peak voltage and its resistance. Refer to “CKP Sensor Inspection (Page 1H-5)”. NOTE The CKP sensor peak voltage inspection is applicable only with the multi-circuit tester and peak volt adaptor. <i>Are the peak voltage and resistance OK?</i>	- Faulty ECM. - Open or short circuit in wire harness. - Poor connection of ignition wire harness.	- Faulty CKP sensor. - Metal particles or foreign material being stuck on the CKP sensor and rotor tip.

Repair Instructions

Spark Plug Cap and Spark Plug Removal and Installation

B931H21806001

Removal


⚠ WARNING

**The hot engine can burn you.
Wait until the engine is cool enough to touch.**

- 1) Turn the ignition switch OFF.
- 2) Remove the right side cover and right inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Disconnect the spark plug cap (1).
- 4) Remove the spark plug with a spark plug wrench.

Special tool

TOOL (A): 09930-10121 (Spark plug wrench set)

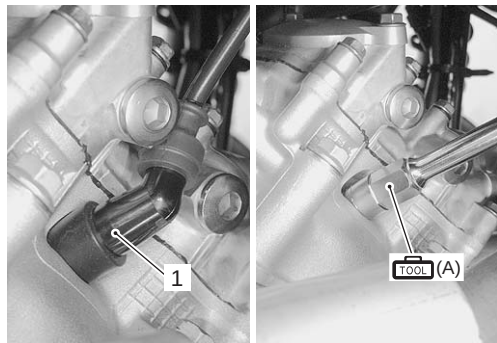

I931H1180002-01

Installation

Install the spark plug in the reverse order of removal. Pay attention to the following points:

- Screw the spark plug into the cylinder head with fingers, and then tighten them to the specified torque.

⚠ CAUTION

Do not cross thread or over tighten the spark plug, or such an operation will damage the aluminum threads of the cylinder head.

Special tool

TOOL : 09930-10121 (Spark plug wrench set)

Tightening torque

Spark plug: 11 N·m (1.1 kgf-m, 8.0 lbf-ft)

Spark Plug Inspection and Cleaning

B931H21806002

Refer to “**Spark Plug Inspection and Cleaning: in Section 0B**”.

Ignition Coil and Plug Cap Inspection

B931H21806003

Refer to "Electrical Components Location: in Section 0A".

Ignition Coil Primary Peak Voltage

- 1) Remove the right side cover and right inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the spark plug cap. Refer to "Spark Plug Cap and Spark Plug Removal and Installation (Page 1H-3)".
- 3) Connect the new spark plug to spark plug cap and ground it to the cylinder head.

NOTE

Be sure that the spark plug is connected properly and the battery used is in fully-charged condition.



I931H1180003-01

- 4) Connect the multi-circuit tester with the peak voltage adaptor as follows:

⚠ CAUTION

Before using the multi-circuit tester and peak voltage adaptor, refer to the appropriate instruction manual.

NOTE


Do not disconnect the ignition coil lead wires.

Special tool


(A): 09900-25008 (Multi-circuit tester set)

Tester knob indication: Voltage (---)

	((+) Probe)	((-) Probe)
Ignition coil	W/B lead wire terminal	B/W lead wire terminal or Ground

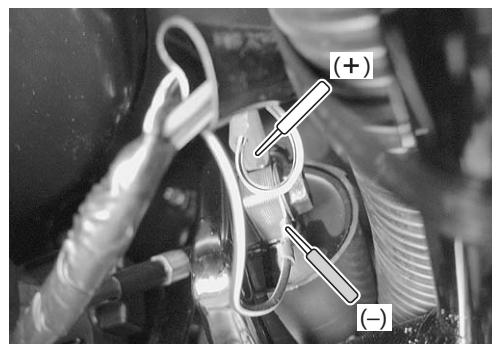

I931H1180004-01

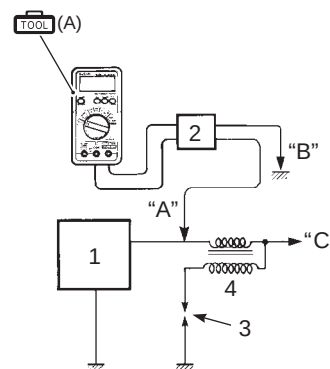

I831G1180002-01

1. ECM	"A": (+) probe
2. Peak voltage adaptor	"B": (-) probe
3. New spark plug	"C": Battery
4. Ignition coil	

- 5) Measure the ignition coil primary peak voltage in the following procedures:

- a) Shift the transfer to the neutral, turn the ignition switch ON.
- b) Press the starter button and allow the engine to crank for a few seconds, and then measure the ignition coil primary peak voltage.

- 6) Repeat the b) procedure few times and measure the highest peak voltage.

If the voltage is lower than standard range, inspect the ignition coil and the CKP sensor.

Ignition coil primary peak voltage 80 V and more

- 7) After measuring the ignition coil primary peak voltage, reinstall the removed parts.

Ignition Coil Resistance

- 1) Disconnect the spark plug cap. Refer to "Ignition Coil and Plug Cap Inspection (Page 1H-4)".
- 2) Disconnect the ignition coil lead wire.
- 3) Measure the ignition coil resistance in both the primary and secondary coils. If the resistance is not within the standard range, replace the ignition coil with a new one.

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)


Tester knob indication

Resistance (Ω)

Ignition coil resistance

Primary: 0.1 – 0.6 Ω ((+) terminal – (-) Ground)

Secondary: 12 – 19 k Ω (Spark plug cap – (-) terminal)

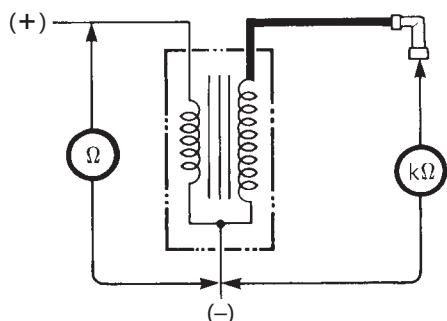

I831G1180007-01


- 4) After measuring the ignition coil resistance, reinstall the removed parts.

Ignition Coil Removal and Installation

B931H21806004

Removal

- 1) Remove the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the spark plug cap.
- 3) Disconnect the lead wire (1) and remove the ignition coil (2).

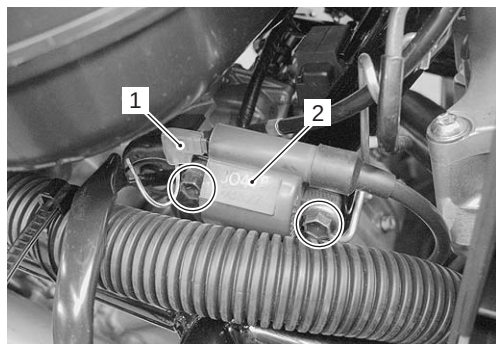

I931H1180005-01

Installation

Install the ignition coil in the reverse order of removal.

CKP Sensor Inspection

B931H21806005


Refer to "Electrical Components Location: in Section 0A".

CKP Sensor Peak Voltage

- 1) Remove the left side cover and engine side cover. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the CKP sensor coupler (1).

NOTE

Be sure that all of the couplers are connected properly and the battery is fully-charged.

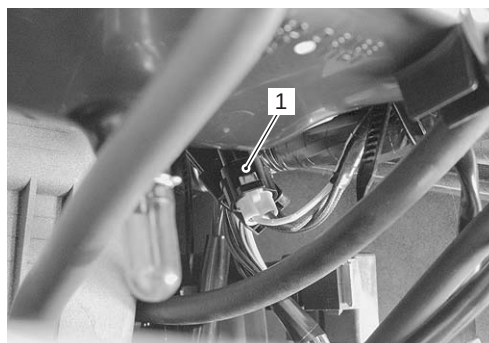

I931H1180006-01

- 3) Connect the multi-circuit tester with the peak volt adaptor as follows:

CAUTION


Before using the multi-circuit tester and peak voltage adaptor, refer to the appropriate instruction manual.

Special tool

TOOL (A): 09900-25008 (Multi-circuit tester set)

Tester knob indication: Voltage (---)

CKP sensor	(+) Probe	(-) Probe
	BI	W

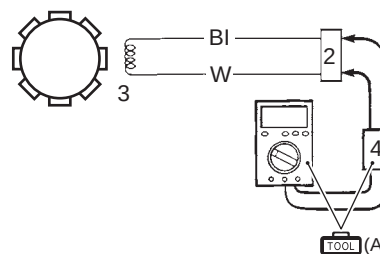

I831G1180003-01

2. CKP sensor coupler	4. Peak voltage adaptor
3. CKP sensor	

- 4) Measure the CKP sensor peak voltage in the following procedures:
 - a) Shift the transfer to the neutral, turn the ignition switch ON.
 - b) Press the starter button and allow the engine to crank for a few seconds, and then measure the CKP sensor peak voltage.
- 5) Repeat the b) procedure a few times and measure the highest CKP sensor peak voltage.

CKP sensor peak voltage
5.0 V and more (Blue – White)

- 6) If the peak voltage is within the specification, check the continuity between the CKP sensor coupler and ECM coupler.


⚠ CAUTION

Normally, use the needle pointed probe to the backside of the lead wire coupler to prevent the terminal bend and terminal alignment.

- 7) After measuring the CKP sensor peak voltage, reinstall the removed parts.

CKP Sensor Resistance

- 1) Remove the left side cover and engine side cover. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the CKP sensor coupler (1).

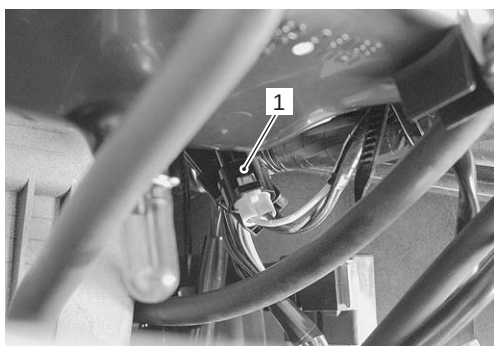


I931H1180007-01

- 3) Measure the resistance between the lead wires and ground. If the resistance is not within the standard range, replace the CKP sensor with a new one. Refer to “CKP Sensor Removal and Installation (Page 1H-6)”.

Tester knob indication
Resistance (Ω)

CKP sensor resistance
170 – 250 Ω (Blue – White)
 ∞ Ω (Blue – Ground)

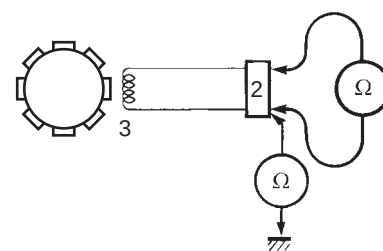

I718H1180008-02

2. CKP sensor coupler	3. CKP sensor
-----------------------	---------------

- 4) After measuring the CKP sensor resistance, reinstall the removed parts.

CKP Sensor Removal and Installation

B931H21806006


Refer to “Generator Removal and Installation: in Section 1J”.

Engine Stop Switch Inspection

B931H21806007

Inspect the engine stop switch in the following procedures:

- 1) Turn the ignition switch OFF.
- 2) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 3) Disconnect the handlebar switch coupler (1).

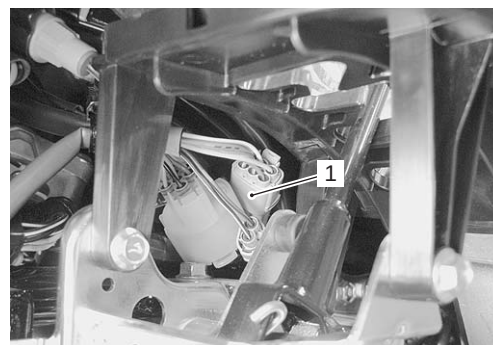

I931H1180008-01

- 4) Inspect the engine stop switch for continuity with a tester.
 If any abnormality is found, replace the handlebar switch assembly with a new one. Refer to “Handlebars Removal and Installation: in Section 6B”.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication
Continuity ($\bullet$))

Color Position	O	O/W
RUN ()		
OFF ()		


I831G1180009-01

1H-7 Ignition System:

- 5) After finishing the engine stop switch inspection, reinstall the removed parts.
- Ignition Switch Inspection**
B931H21806008
Refer to “Ignition Switch Inspection: in Section 9C”.

Ignition Switch Removal and Installation
B931H21806009

- Removal**
- 1) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the ignition switch coupler (1).

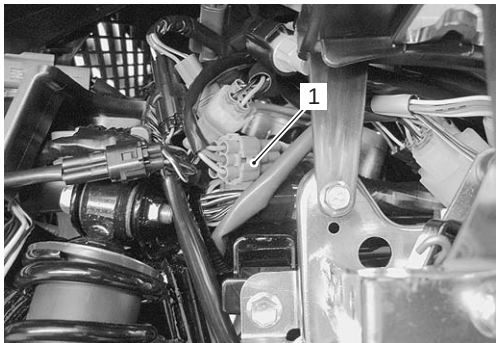

I931H1180009-01


- 3) Remove the combination meter cover. Refer to “Combination Meter Removal and Installation: in Section 9C”.
- 4) Disconnect the clamp and remove the ignition switch (2).



I931H1180010-01

- Installation**
- Install the ignition switch in the reverse order of removal. Pay attention to the following point:
- Route the wiring harness properly. Refer to “Wiring Harness Routing Diagram: in Section 9A”.

- Override Switch Inspection**
B931H21806010
- 1) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the override switch read wire coupler.

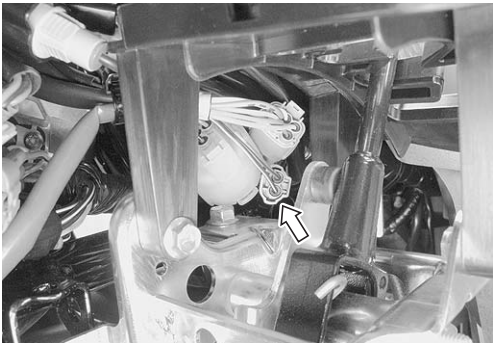

I931H1180011-01

- 3) Check the continuity B/W wire and Br wire of the override switch and pushing the override switch. If any abnormality is found, replace the left handle switch assembly with a new one.

Special tool
TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication
Continuity (•)))



I931H1180001-01

Color Position	B/W	BI/B
PUSH		

I831G1180014-02

Emergency Switch Inspection (For P-17)

B931H21806011

Inspect the emergency switch for continuity with a tester.
If any abnormality is found, replace the emergency switch assembly with a new one. Refer to **“Wiring Harness Routing Diagram: in Section 9A”**.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•))

Color Position	O	O/G
SET		
SECEDE		

I931H1180012-01

Emergency Switch Removal and Installation (For P-17)

B931H21806012

Removal

Disconnect the coupler and remove the emergency switch as shown in the wiring harness routing diagram. Refer to **“Wiring Harness Routing Diagram: in Section 9A”**.

Installation

Install the emergency switch in the reverse order of removal.

Specifications

Service Data

B931H21807001

Electrical

Unit: mm (in)

Item	Specification		Note
Spark plug	Type	NGK: CR6E DENSO: U20ESR-N	
	Gap	0.7 – 0.8 (0.028 – 0.031)	
Spark performance	Over 8 (0.3) at 1 atm.		
CKP sensor resistance	170 – 250 Ω		
CKP sensor peak voltage	5.0 V and more		
Ignition coil resistance	Primary	0.1 – 0.6 Ω	Terminal – Ground
	Secondary	12 – 19 k Ω	Plug cap – Terminal
Ignition coil primary peak voltage	80 V and more		When cranking

Tightening Torque Specifications

B931H21807002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Spark plug	11	1.1	8.0	☞ (Page 1H-3)



Reference:

For the tightening torque of fastener not specified in this section, refer to **“Tightening Torque List: in Section 0C”**.

Special Tools and Equipment

Special Tool

B931H21808001

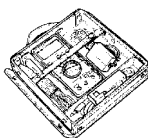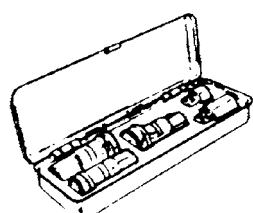09900–25008 Multi circuit tester set ☞ (Page 1H-4) / ☞ (Page 1H-5) / ☞ (Page 1H-5) / ☞ (Page 1H-6) / ☞ (Page 1H-7) / ☞ (Page 1H-8)		09930–10121 Spark plug wrench set ☞ (Page 1H-3) / ☞ (Page 1H-3)	
--	---	---	---


Starting System

Schematic and Routing Diagram

Starting System Diagram

B931H21902001

Refer to "Wire Color Symbols: in Section 0A".

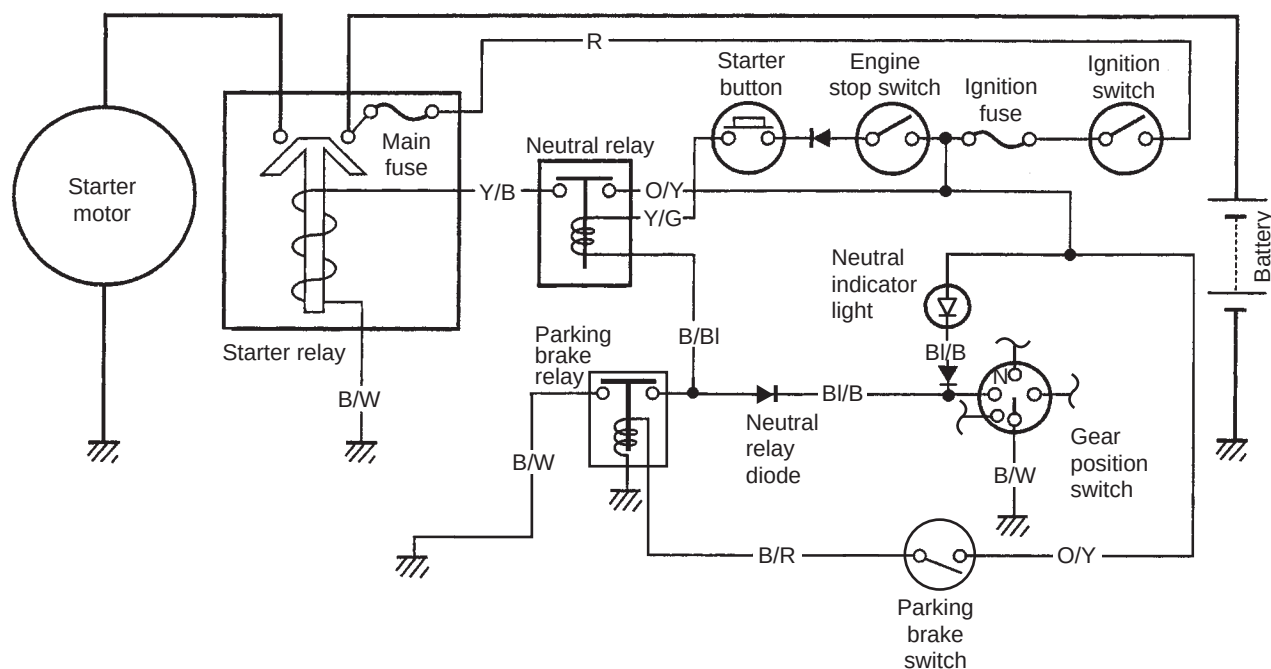

I831G1190001-01

Component Location

Starting System Components Location

B931H21903001

Refer to "Electrical Components Location: in Section 0A".

Diagnostic Information and Procedures

Starting System Symptom Diagnosis

B931H21904001

Condition	Possible cause	Correction / Reference Item
Starter button is not effective	Run down battery.	<i>Repair or replace.</i>
	Defective switch contacts.	<i>Replace.</i>
	Brushes not seating properly on starter motor commutator.	<i>Repair or replace.</i>
	Defective starter relay or neutral relay.	<i>Replace.</i>
	Defective main fuse or ignition fuse.	<i>Replace.</i>

Starter Motor will not Run

B931H21904002

NOTE

Make sure the fuses are not blown and the battery is fully-charged before diagnosing.

Troubleshooting

Step	Action	Yes	No
1	1) Shift the transfer to neutral. 2) Turn on the ignition switch with the engine stop switch in the "RUN" position and listen for a click from the starter relay when the starter button is pushed. <i>Is a click sound heard?</i>	Go to step 2.	Go to step 3.
2	Check if the starter motor runs when its terminal is connected to the battery (+) terminal. (Do not use thin "wire" because a large amount of current flows.) <i>Does the starter motor run?</i>	- Faulty starter relay. - Loose or disconnected starter motor lead wire. - Loose or disconnected between starter relay and battery (+) terminal.	Faulty starter motor.
3	Measure the starter relay voltage at the starter relay connectors (between Y/B (+) and B/W (-)) when the starter button is pushed. <i>Is the voltage OK?</i>	Go to Step 4.	- Faulty ignition switch. - Faulty engine stop switch. - Faulty neutral relay. - Faulty starter button. - Poor contact of connector. - Open circuit in wire harness.
4	Check the starter relay. Refer to "Starter Relay Inspection (Page 11-7)". <i>Is the starter relay OK?</i>	Poor contact of the starter relay.	Faulty starter relay.

Starter Motor Runs but Does not Crank the Engine

B931H21904003

The starter motor runs when the transfer is in neutral, but does not run when the transfer is in any position other than neutral, with the parking lever grasped firmly.

Step	Action	Yes	No
1	Check the parking brake switch. Refer to "Parking / Rear Brake Switch Inspection (Page 11-9)". <i>Is the parking brake switch OK?</i>	Go to Step 2.	Faulty parking brake switch.
2	Check the parking brake relay. Refer to "Parking Brake Relay Inspection (Page 11-9)". <i>Is the parking brake relay OK?</i>	- Open circuit in wire harness. - Poor contact of connector.	Faulty parking brake relay.

Engine Does not Turn Though the Starter Motor Runs


B931H21904004

- Faulty starter clutch

Repair Instructions

Starter Motor Components

B931H21906001

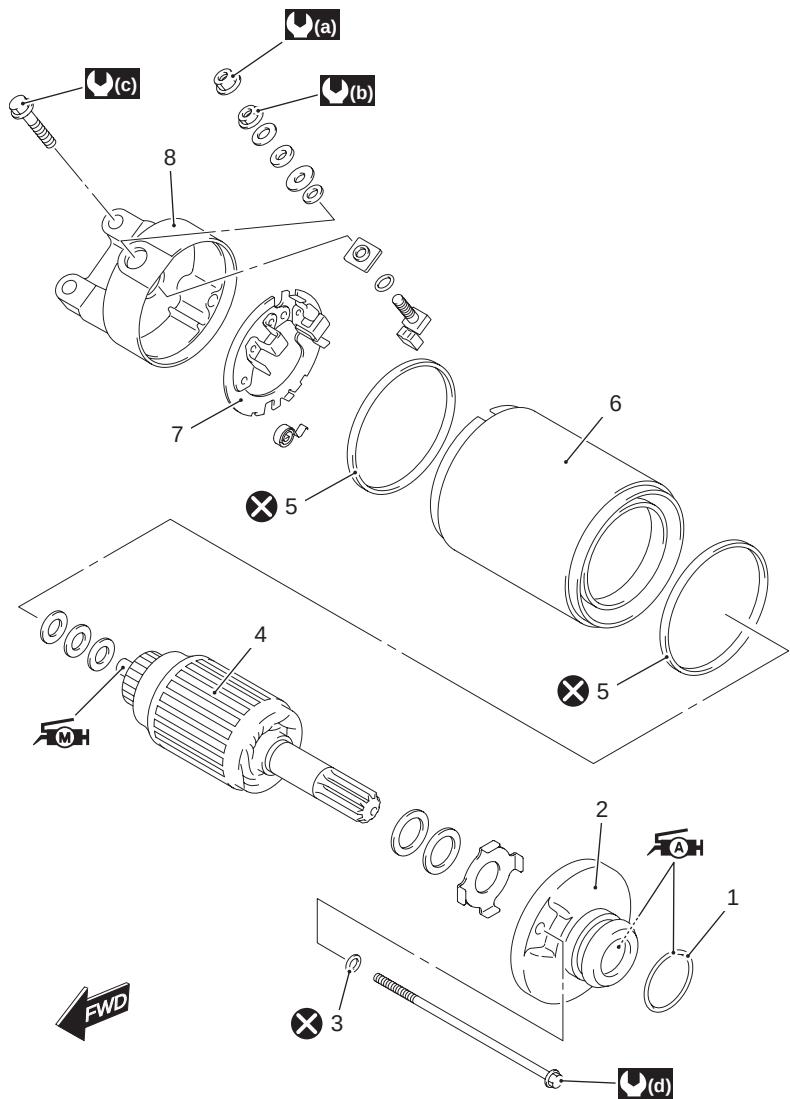

I931H1190037-02


1. O-ring	6. Starter motor case	(c) : 10 N-m (1.0 kgf-m, 7.0 lbf-ft)
2. Housing end (Inside)	7. Brush holder	(d) : 3.5 N-m (0.35 kgf-m, 2.5 lbf-ft)
3. O-ring	8. Housing end (Outside)	AH : Apply grease.
4. Armature	(a) : 6 N-m (0.6 kgf-m, 4.5 lbf-ft)	MH : Apply moly paste to sliding surface.
5. Square-ring	(b) : 7 N-m (0.7 kgf-m, 5.0 lbf-ft)	X : Do not reuse.

Starter Motor Removal and Installation

B931H21906002

Removal

- 1) Turn the ignition switch OFF and disconnect the battery (–) lead wire. Refer to “**Battery Removal and Installation: in Section 1J**”.
- 2) Remove the right side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Remove the starter motor lead wire (1).

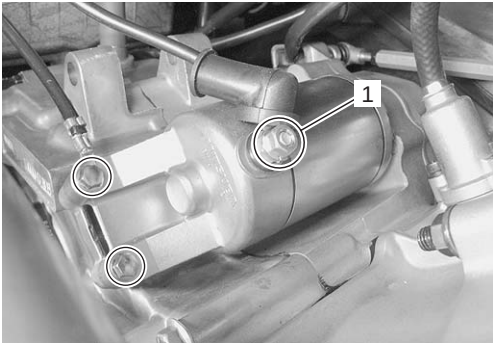

I931H1190001-01

- 4) Remove the starter motor.

Installation

Install the starter motor in the reverse order of removal. Pay attention to the following points:

- Apply grease to the starter motor O-ring.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

CAUTION

Replace the O-ring with a new one.




I931H1190002-01

- Tighten the starter motor mounting bolts (1) with the battery (–) lead wire (2) and starter motor lead wire mounting nut (3) to the specified torque. Refer to “Wiring Harness Routing Diagram: in Section 9A”.

Tightening torque

Starter motor mounting bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

Starter motor lead wire mounting nut (b): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

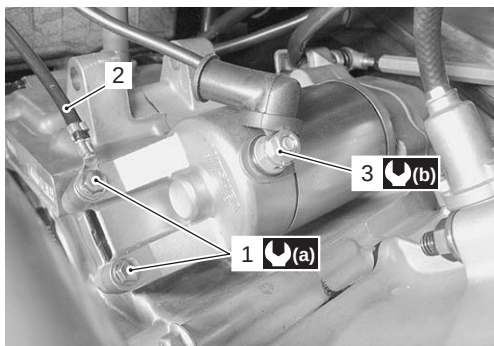

I931H1190003-01

Starter Motor Disassembly and Assembly

B931H21906003

Refer to “Starter Motor Removal and Installation (Page 1I-3)”.

Disassembly

Disassemble the starter motor as shown in the starter motor components diagram. Refer to “Starter Motor Components (Page 1I-3)”.

Assembly

Reassemble the starter motor in the reverse order of removal. Pay attention to the following points:

CAUTION

Replace the O-rings with new ones to prevent oil leakage and moisture.

- Tighten the brush holder mounting nut (1) to the specified torque.

Tightening torque

Starter motor brush holder mounting nut (a): 7 N·m (0.7 kgf-m, 5.0 lbf-ft)



I931H1190004-01

- Apply grease to the lip of the dust seal and bearing.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)



I931H1190005-01

- Fit the washer to the housing end correctly as shown in the figure.



I931H1190006-01

1I-5 Starting System:

- Apply a small quantity of moly paste to the armature shaft.

 **Moly paste 99000-25140 (SUZUKI Moly paste or equivalent)**



I931H1190007-01

- Align the match mark on the starter motor case with the match mark on the housing end.


NOTE

The groove side "A" of brush holder the housing end.


- Tighten the starter motor housing bolts (2) to the specified torque.

Tightening torque

Starter motor housing bolt (b): 3.5 N·m (0.35 kgf·m, 2.5 lbf·ft)

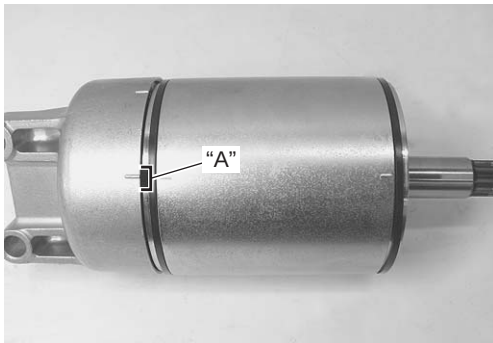

I931H1190008-02

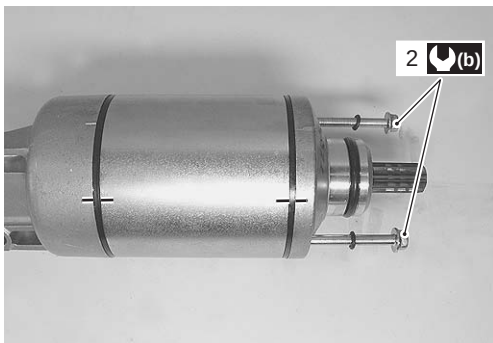

I931H1190009-02

Starter Motor Related Parts Inspection

B931H21906004

Refer to "Starter Motor Disassembly and Assembly (Page 1I-4)".

Carbon Brush

Inspect the carbon brushes for abnormal wear, cracks or smoothness in the brush holder.

If either carbon brush is defective, replace the brush holder set with a new one.


Measure the length "a" of the carbon brushes using a vernier calipers. If the measurement is less than the service limit, replace the housing end assembly with a new one.

Brush length "a"

Service limit: 6.5 mm (0.26 in)

Special tool

 **09900-20102 (Vernier calipers (200 mm))**

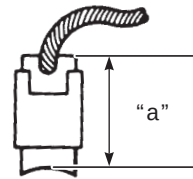

I831G1190065-01


Commutator

Inspect the commutator for discoloration, abnormal wear or undercut "A".

If the commutator is abnormally worn, replace the armature.

If the commutator surface is discolored, polish it with #400 sandpaper and wipe it using a clean, dry cloth.

If there is no undercut, scrape out the insulator (1) with a saw blade.

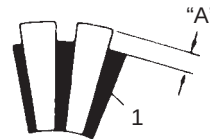

I649G1190016-02

Armature Coil

Measure for continuity between each segment. Measure for continuity between each segment and the armature shaft.


If there is no continuity between the segments or there is continuity between the segments and shaft, replace the armature with a new one.

Special tool

 (A): 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity set (•))

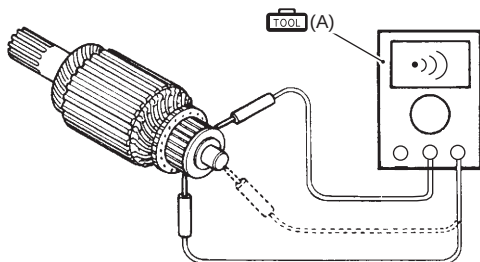

I649G1190017-03

Oil Seal

Check the seal lip for damage. If any damage is found, replace the housing end (Inside).



I931H1190010-01

Bearing

Check the bearing of housing end for damage. If any damage is found, replace the housing end.



I931H1190011-01


Starter Relay Removal and Installation

B931H21906005

Refer to “**Electrical Components Location: in Section 0A**”.


Removal

- 1) Turn the ignition switch OFF position.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Disconnect the battery (–) lead wire from the battery.
- 4) Pull the starter relay (1).
- 5) Disconnect the starter relay coupler (2) and remove the starter relay cover (3).

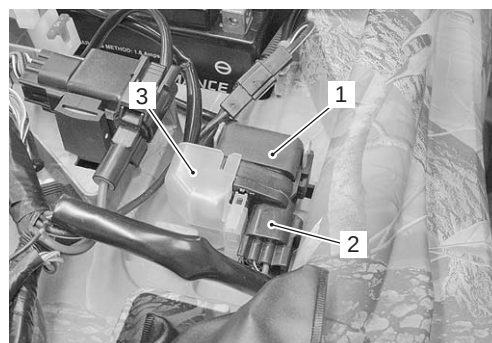

I931H1190012-01

- 6) Disconnect the starter motor lead wire (4) and battery (+) lead wire (5).
- 7) Remove the starter relay (1).

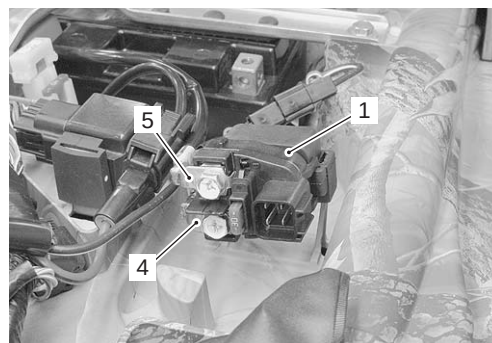

I931H1190013-01

Installation

Install the starter relay in the reverse order of removal.

Starter Relay Inspection

B931H21906006

Inspect the starter relay in the following procedures:

- 1) Remove the starter relay. Refer to "Starter Relay Removal and Installation (Page 1I-6)".
- 2) Apply 12 V to "A" and "B" terminals and check for continuity between the positive and negative terminals using the multi-circuit tester. If the starter relay clicks and continuity is found, the relay is OK.

⚠ CAUTION


Do not apply battery voltage to the starter relay for five seconds and more, since the relay coil may overheat and get damaged.

Special tool


TOOL (A): 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity test (•)))

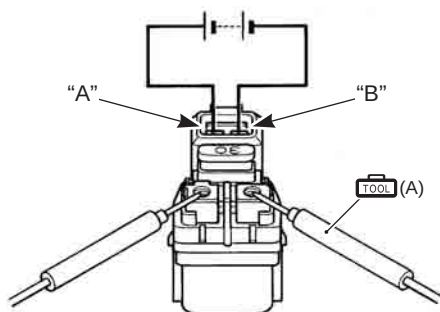

I649G1190021-04

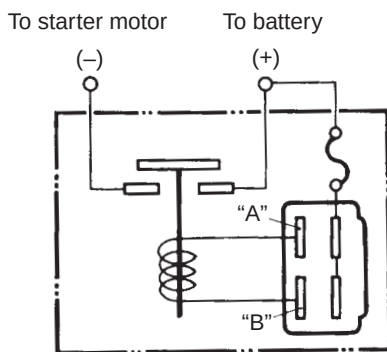

I823H1190040-02


- 3) Measure the relay coil resistance between the terminals using the multi-circuit tester. If the resistance is not within the specified value, replace the starter relay with a new one.

Special tool

TOOL (A): 09900-25008 (Multi-circuit tester set)

Starter relay resistance

3 – 5 Ω

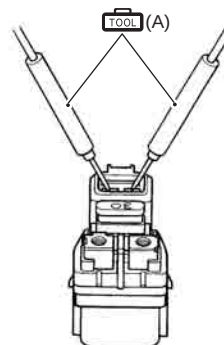

I649G1190023-03

- 4) Install the starter relay. Refer to "Starter Relay Removal and Installation (Page 1I-6)".


Neutral Relay Removal and Installation

B931H21906007

Refer to "Electrical Components Location: in Section 0A".

Removal

- 1) Turn the ignition switch OFF position.
- 2) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".
- 3) Remove the neutral relay (1).

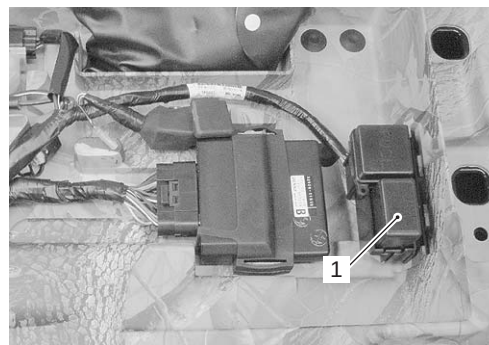

I931H1190014-01

Installation

Install the neutral relay in the reverse order of removal.

Neutral Relay Inspection

B931H21906008

Inspect the neutral relay in the following procedures:


- 1) Remove the neutral relay. Refer to "Neutral Relay Removal and Installation (Page 11-7)".
- 2) Check the insulation between "A" and "B" terminals using the multi-circuit tester.
- 3) Apply 12 V to terminals "C" and "D" ((+) to "C" and (-) to "D") and check the continuity between "A" and "B". If there is no continuity, replace the neutral relay with a new one.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity test (•))

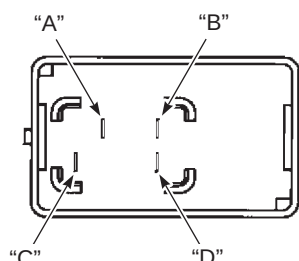

I831G1190016-02

- 4) Install the neutral relay. Refer to "Neutral Relay Removal and Installation (Page 11-7)".


Neutral Relay Diode Inspection

B931H21906009

Refer to "Electrical Components Location: in Section 0A".

Inspect the neutral relay diode in the following procedures:

- 1) Disconnect the neutral relay diode (1). (BI/B – B/BI wire)

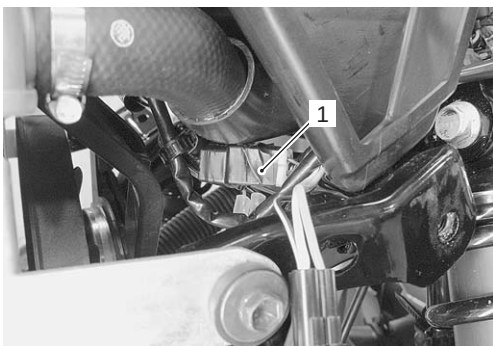

I931H1190015-01


- 2) Measure the voltage between the "A" and "B" terminals using the multi-circuit tester.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Diode test (→←)

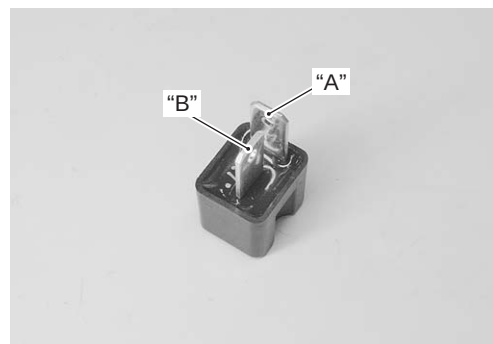

I931H1190016-01

		⊕ Probe of tester to:	
① Probe of tester to:		"B"	"A"
	"B"	—	1.4 V and more (Tester's battery voltage)
	"A"	0.3 – 0.6 V	—

I831G1190018-03

NOTE

If the multi circuit tester reads 1.4 V and below when the tester probes are not connected, replace its battery.


- 3) Connect the neutral relay diode.
- 4) Install the left inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".

Parking Brake Relay Removal and Installation

B931H21906010

Removal

- 1) Remove the rear fender. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the coupler (1) and remove the parking brake relay (2).

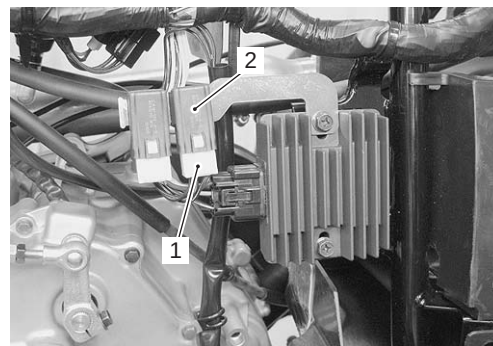

I931H1190017-01

Installation

Install the parking brake relay in the reverse order of removal.

Parking Brake Relay Inspection

B931H21906011

Inspect the parking brake relay in the following procedures:


- 1) Remove the parking brake relay. Refer to "Parking Brake Relay Removal and Installation (Page 11-8)".
- 2) Check the insulation between "A" and "B" terminals using the multi-circuit tester.
- 3) Apply 12 V to terminals "C" and "D" ((+) to "C" and (-) to "D") and check the continuity between "A" and "B". If there is no continuity, replace the parking brake relay with a new one.

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity test (•)))

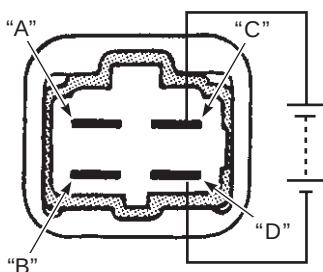

I831G1190020-01


- 4) Install the parking brake relay in the reverse order of removal.

Parking / Rear Brake Switch Inspection

B931H21906012

Inspect the parking brake switch in the following procedures:

- 1) Remove the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the parking/rear brake switch coupler (1).

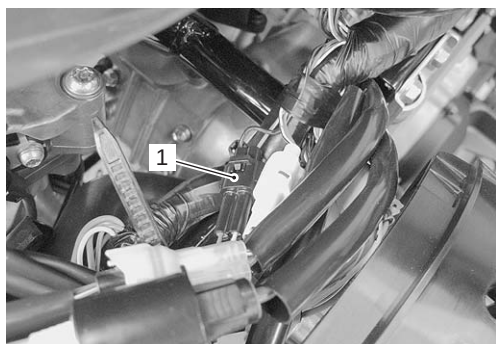

I931H1190018-01

- 3) Inspect the parking/rear brake switch for continuity with a tester. If any abnormality is found, replace the parking/rear brake switch with a new one. Refer to "Handlebars Removal and Installation: in Section 6B".

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

Color	W	Bl
Position		
ON		
OFF		

I831G1190022-01


- 4) After finishing the parking brake switch inspection, reinstall the removed parts.

Gear Position Switch Inspection

B931H21906013

Inspect the gear position switch in the following procedures:

- 1) Remove the left side cover and engine side cover. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the gear position switch coupler (1).

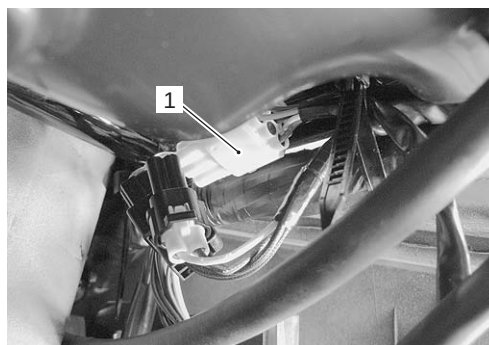

I931H1190019-01

- 3) Inspect the gear position switch for continuity with a tester. If any abnormality is found, replace the gear position switch with a new one. Refer to "Gear Position (GP) Switch Removal and Installation: in Section 3C".

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

Color	W	B/W	Bl	G	R
Position					
H					
L					
N					
R					

I931H1190020-01

- 4) After finishing the gear position switch inspection, reinstall the removed parts.

Starter Idle Gear / Starter Clutch Removal and Installation

B931H21906014


Removal

- 1) Drain engine oil. Refer to **“Engine Oil and Filter Replacement: in Section 0B”**.
- 2) Remove the generator cover (1). Refer to **“Generator Removal and Installation: in Section 1J”**.




I931H1190021-01

- 3) Remove the starter idle gear No. 1 (2) and starter idle gear No. 2 (3).

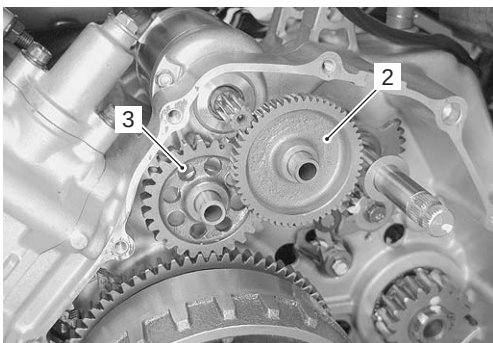


I931H1190022-01

- 4) Remove the generator rotor assembly. Refer to **“Generator Removal and Installation: in Section 1J”**.
- 5) Remove the key (4) and starter driven gear (5).

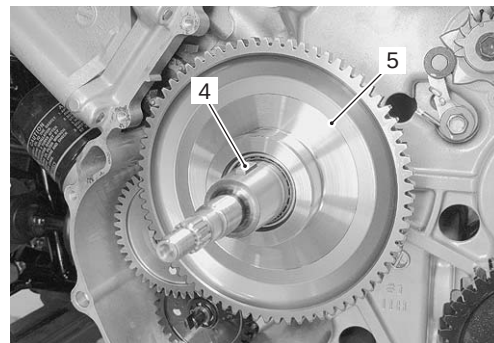


I931H1190023-01

- 6) Hold the generator rotor with a 36 mm offset wrench and remove the starter clutch bolts.

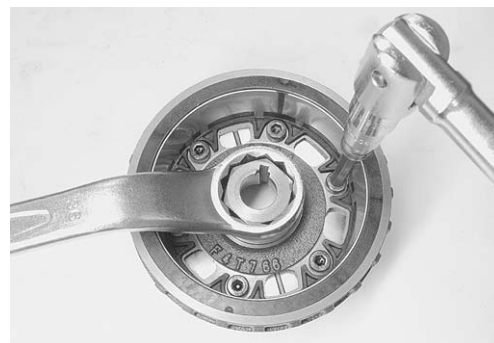

I931H1190024-01

- 7) Remove the one way clutch (6) from the guide (7).

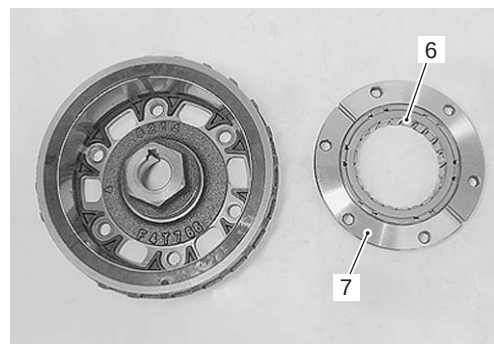

I931H1190025-02

1I-11 Starting System:


Installation

Install the starter clutch in the reverse order of removal. Pay attention to the following points:


- When inserting the one way clutch (1) into the guide (2), fit the flange "A" in the step of the guide (2).

NOTE

Be sure to seat the flange "A" of the one way clutch (1) to the guide (2).

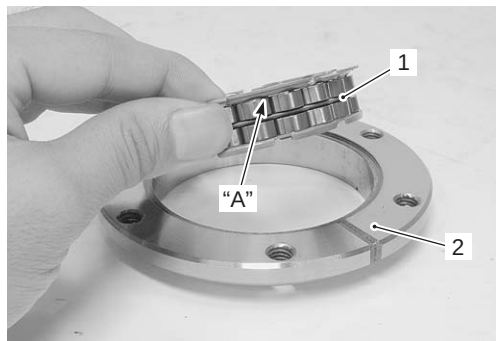


I931H1190026-01

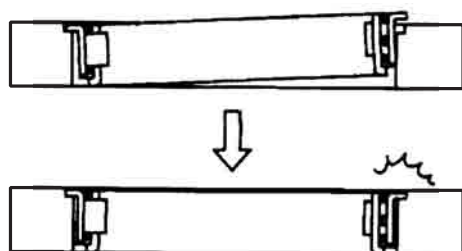

I718H1190031-01

- Install the guide (2) to the generator rotor.

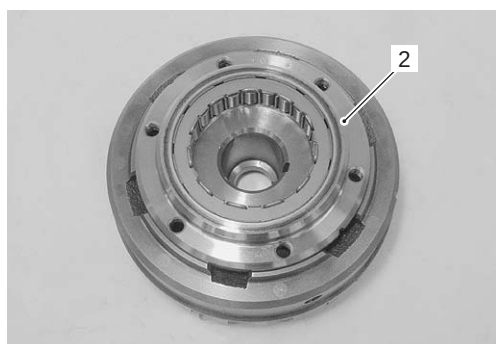


I931H1190027-01

- Apply thread lock to the bolts, and tighten them to the specified torque.

 : Thread lock cement 99000-32030
(THREAD LOCK CEMENT SUPER 1303 or equivalent)


Tightening torque

Starter clutch bolt (a): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

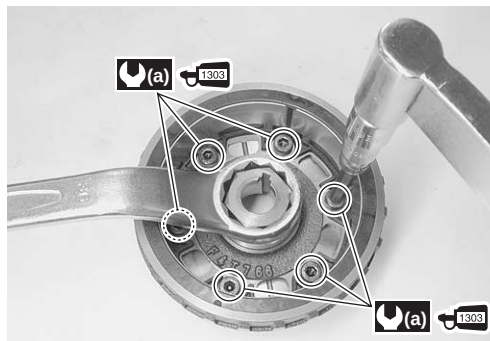


I931H1190028-01

- Apply engine oil to the bearing of the starter driven gear.

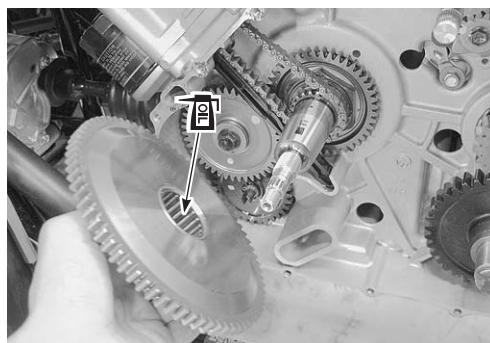

I931H1190029-01

- Install the generator rotor assembly onto crankshaft. Refer to "Generator Removal and Installation: in Section 1J".
- Install the starter idle gear No. 2 (3) and starter idle gear No. 1 (4).

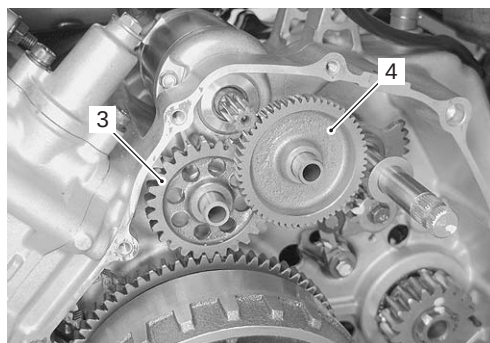

I931H1190030-01

Starter Driven Gear Bearing Removal and Installation


B931H21906015

Removal

- 1) Remove the starter driven gear. Refer to "Starter Idle Gear / Starter Clutch Removal and Installation (Page 1I-10)".
- 2) Remove the bearing with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

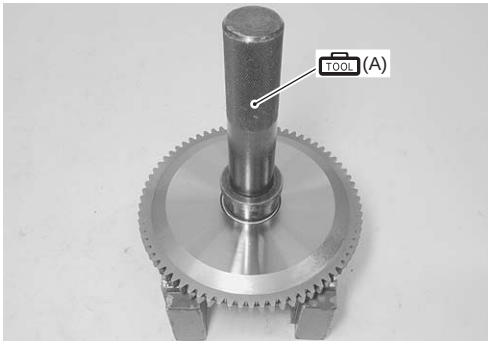

I931H1190031-01


Installation

Install the starter driven gear bearing in the reverse order of removal. Pay attention to following point:

- Install the bearing with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

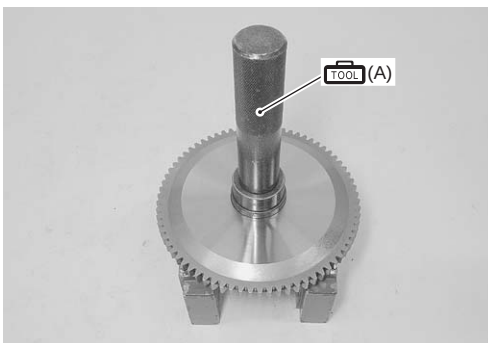

I931H1190032-01

Starter Related Parts Inspection

B931H21906016

Refer to "Starter Idle Gear / Starter Clutch Removal and Installation (Page 1I-10)".

Starter Clutch

- 1) Install the starter driven gear onto the starter clutch.
- 2) Turn the starter driven gear by hand to inspect the starter clutch for smooth movement. The gear turns in one direction only. If a large resistance is felt for rotation, inspect the starter clutch or the starter clutch contacting surface on the starter driven gear for wear or damage. If they are found to be damaged, replace the one way clutch with a new one.



I931H1190033-01

Starter Driven Gear Bearing

Inspect the starter driven gear bearing for wear or damage. If necessary, replace it with a new one.




I931H1190034-01

1I-13 Starting System:

Starter Idle Gear

Inspect the starter idle gear No. 1 (1) and No. 2 (2) for wear or damage. If any damage is found, replace it with a new one.

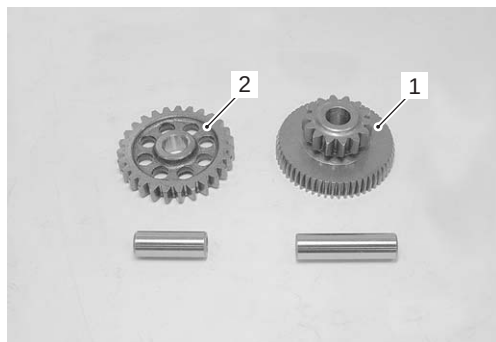

I931H1190035-01


Starter Button Inspection

B931H21906017

Inspect the starter button in the following procedures:

- 1) Remove the left inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.

- 2) Disconnect the handlebar switch coupler (1).

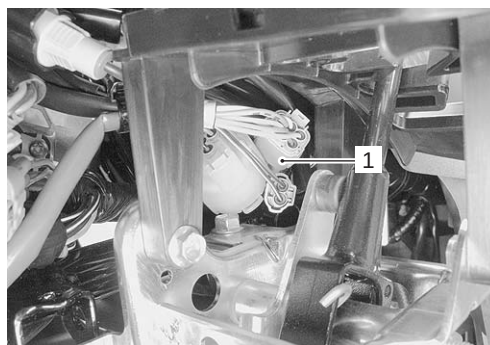

I931H1190036-01

- 3) Measure the voltage between Y/G and O lead wires.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Diode test ()

	Y/G (+) probe)	O (-) probe)
ON	0.4 – 0.6 V	
OFF	1.4 V and more (Tester's battery voltage)	

NOTE

If the tester reads 1.4 V and below when the tester probes are not connected, replace its battery.

Specifications

Service Data

B931H21907001

Unit: mm (in)

Item	Specification		Note
Starter motor brush length	Standard	10 (0.39)	
	Limit	6.5 (0.26)	
Starter torque limiter slip torque	Standard	41.2 – 62.8 N·m (4.2 – 6.4 kgf-m, 14.5 – 32.5 lbf-ft)	
Starter relay resistance	3 – 5 Ω		

B931H21907002

Tightening Torque Specifications

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Starter motor mounting bolt	10	1.0	7.0	☞ (Page 1I-4)
Starter motor lead wire mounting nut	6	0.6	4.5	☞ (Page 1I-4)
Starter motor brush holder mounting nut	7	0.7	5.0	☞ (Page 1I-4)
Starter motor housing bolt	3.5	0.35	2.5	☞ (Page 1I-5)
Starter clutch bolt	26	2.6	19.0	☞ (Page 1I-11)

NOTE

The specified tightening torque is described in the following.
“Starter Motor Components (Page 1I-3)”

Reference:

For the tightening torque of fastener not specified in this section, refer to **“Tightening Torque List: in Section 0C”**.

Special Tools and Equipment

Recommended Service Material

B931H21908001




Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 1I-4) / ☞ (Page 1I-4)
Moly paste	SUZUKI Moly paste or equivalent	P/No.: 99000–25140	☞ (Page 1I-5)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 1I-11)

NOTE

Required service material is also described in the following.
“Starter Motor Components (Page 1I-3)”

Special Tool

B931H21908002

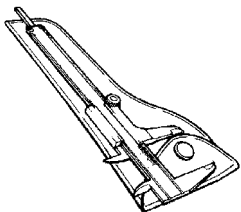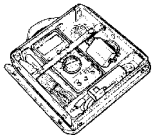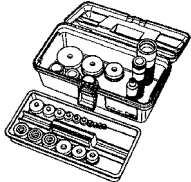
09900–20102 Vernier calipers (200 mm) ☞ (Page 1I-5) 	09900–25008 Multi circuit tester set ☞ (Page 1I-6) / ☞ (Page 1I-7) / ☞ (Page 1I-7) / ☞ (Page 1I-8) / ☞ (Page 1I-8) / ☞ (Page 1I-9) / ☞ (Page 1I-9) / ☞ (Page 1I-13) 
09913–70210 Bearing installer set (10 – 75) ☞ (Page 1I-12) / ☞ (Page 1I-12) 	

Charging System

Schematic and Routing Diagram

Charging System Diagram

B931H21A02001

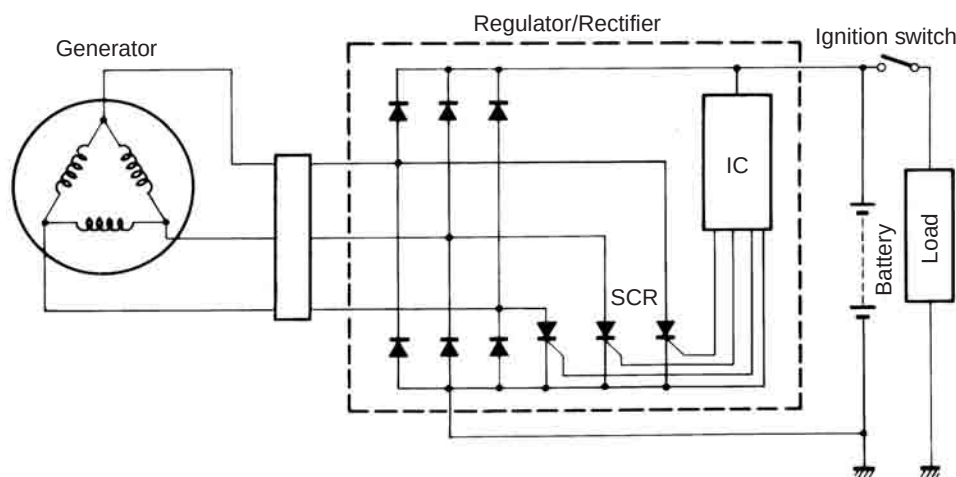

I718H11A0001-01

Component Location

Charging System Components Location

Refer to "Electrical Components Location: in Section 0A".

B931H21A03001

Diagnostic Information and Procedures

Charging System Symptom Diagnosis

B931H21A04001

Condition	Possible cause	Correction / Reference Item
Generator does not charge	Open- or short-circuited lead wires, or loose lead connections.	<i>Repair, replace or connect properly.</i>
	Short-circuited, grounded or open generator coil.	<i>Replace.</i>
	Short-circuited or punctured regulator/rectifier.	<i>Replace.</i>
Generator does charge, but charging rate is below the specification	Lead wires tend to get short- or open-circuited or loosely connected at terminals.	<i>Repair or retighten.</i>
	Grounded or open-circuited generator coil.	<i>Replace.</i>
	Defective regulator/rectifier.	<i>Replace.</i>
	Defective cell plates in the battery.	<i>Replace the battery.</i>
Generator overcharges	Internal short-circuit in the battery.	<i>Replace the battery.</i>
	Damaged or defective regulator/rectifier.	<i>Replace.</i>
	Poorly grounded regulator/rectifier.	<i>Clean and tighten ground connection.</i>
Unstable charging	Lead wire insulation frayed due to vibration, resulting in intermittent short-circuiting.	<i>Repair or replace.</i>
	Internally short-circuited generator.	<i>Replace.</i>
	Defective regulator/rectifier.	<i>Replace.</i>

Condition	Possible cause	Correction / Reference Item
Battery overcharges	Faulty regulator/rectifier.	<i>Replace.</i>
	Faulty battery.	<i>Replace.</i>
	Poor contact of generator lead wire coupler.	<i>Repair.</i>
Battery runs down quickly	Trouble in charging system.	<i>Check the generator, regulator/rectifier and circuit connections and make necessary adjustments to obtain specified charging operation.</i>
	Cell plates have lost much of their active materials a result of overcharging.	<i>Replace the battery and correct the charging system.</i>
	Internal short-circuit in the battery.	<i>Replace the battery.</i>
	Too low battery voltage.	<i>Recharge the battery fully.</i>
	Too old battery.	<i>Replace the battery.</i>
Battery "sulfation"	Incorrect charging rate. (When not in use battery should be checked at least once a month to avoid sulfation.)	<i>Replace the battery.</i>
	The battery was left unused in a cold climate for too long.	<i>Replace the battery if badly sulfated.</i>

Battery Runs Down Quickly

B931H21A04002

Troubleshooting

Step	Action	Yes	No
1	Check accessories which use excessive amounts of electricity. <i>Are accessories being installed?</i>	Remove accessories.	Go to Step 2.
2	Check the battery for current leakage. Refer to "Battery Current Leakage Inspection (Page 1J-3)". <i>Is the battery for current leakage OK?</i>	Go to Step 3.	• Short circuit of wire harness. • Faulty electrical equipment.
3	Measure the regulated voltage between the battery terminals. Refer to "Regulated Voltage Inspection (Page 1J-3)". <i>Is the regulated voltage OK?</i>	• Faulty battery. • Abnormal driving condition.	Go to Step 4.
4	Measure the resistance of the generator coil. Refer to "Generator Inspection (Page 1J-3)". <i>Is the resistance of generator coil OK?</i>	Go to Step 5.	• Faulty generator coil. • Disconnected lead wires.
5	Measure the generator no-load performance. Refer to "Generator Inspection (Page 1J-3)". <i>Is the generator no-load performance OK?</i>	Go to Step 6.	Faulty generator.
6	Inspect the regulator/rectifier. Refer to "Regulator / Rectifier Inspection (Page 1J-8)". <i>Is the regulator/rectifier OK?</i>	Go to Step 7.	Faulty regulator/rectifier.
7	Inspect wirings. <i>Is the wirings OK?</i>	Faulty battery.	• Short circuit of wire harness. • Poor contact of couplers.

Repair Instructions

Battery Current Leakage Inspection

B931H21A06001

Inspect the battery current leakage in the following procedures:

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Disconnect the (–) battery lead wire.
- 4) Measure the current between (–) battery terminal and the (–) battery lead wire using the multi-circuit tester. If the reading exceeds the specified value, leakage is evident.

⚠ CAUTION

- In case of a large current leak, turn the tester to high range first to avoid tester damage.
- Do not turn the ignition switch ON when measuring current.

Special tool


 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Current (— , 20 mA)

Battery current (Leak)

Under 2.6 mA

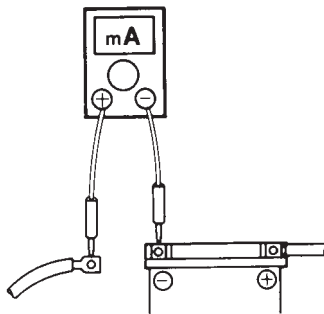

I649G11A0002-02

- 5) Connect the (–) battery terminal and install the seat.

Regulated Voltage Inspection

B931H21A06002

Inspect the regulated voltage in the following procedures:

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Start the engine and keep it running at 5 000 r/min with the dimmer switch turned HI position.

- 3) Measure the DC voltage between the (+) and (–) battery terminals using the multi-circuit tester. If the voltage is not within the specified value, inspect the generator and regulator/rectifier. Refer to “Generator Inspection (Page 1J-3)” and “Regulator / Rectifier Inspection (Page 1J-8)”.

NOTE

When making this test, be sure that the battery is fully charged condition.

Special tool


 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Voltage (—)

Regulated voltage (Charging output)

Standard: 13.5 – 15.0 V at 5 000 r/min

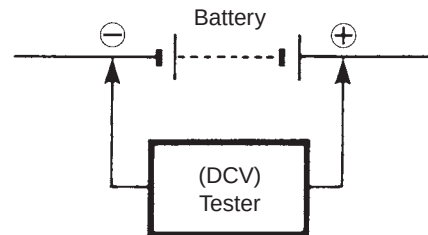

I649G11A0003-02

- 4) Install the seat.

Generator Inspection

B931H21A06003

Generator Coil Resistance

- 1) Remove the left side cover and engine side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Disconnect the generator coupler (1).



I931H11A0001-01

- 3) Measure the resistance between the three lead wires.
If the resistance is out of specified value, replace the stator with a new one. Also, check that the generator core is insulated properly.

NOTE

When making this test, it is not necessary to remove the generator.

Special tool

 : 09900-25008 (Multi-circuit tester set)


Tester knob indication

Resistance (Ω)

Generator coil resistance

0.1 – 1.0 Ω (B – B)

∞ Ω (B – Ground)

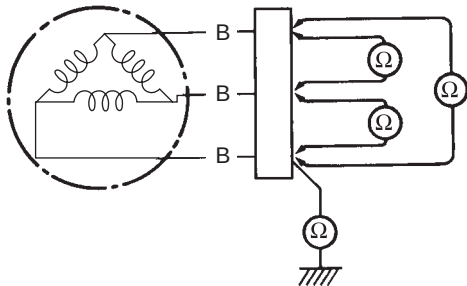

I931H11A0002-01

- 4) After finishing the inspection, reinstall the removed parts.

No-load Performance

- 1) Remove the side covers, left and right. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Connect the special tool to the high-tension cord.

Special tool

 (A): 09900-26006 (Engine tachometer)



I931H11A0003-01

- 3) Disconnect the generator coupler (1).



I931H11A0004-01

- 4) Start the engine and keep it running at 5 000 r/min.
- 5) Using the multi-circuit tester, measure the voltage between three lead wires.
If the tester reads under the specified value, replace the generator with a new one.

Special tool


 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Voltage ($\sim$)

Generator no-load performance (When engine is cold)

70 V (AC) and more at 5 000 r/min

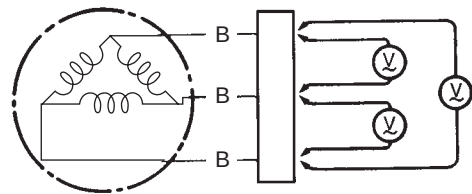

I931H11A0005-01

Generator Removal and Installation


B931H21A06004

Removal

- 1) Disconnect the (–) battery lead wire. Refer to “Battery Removal and Installation (Page 1J-11)”.
- 2) Drain engine oil. Refer to “Engine Oil and Filter Replacement: in Section 0B”.
- 3) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 4) Remove the left mud guard. Refer to “Rear Side Exterior Parts Removal and Installation: in Section 9D”.
- 5) Drain engine coolant. Refer to “Cooling System Inspection: in Section 0B”.
- 6) Remove the water pump assembly. Refer to “Water Pump Removal and Installation: in Section 1F”.


1J-5 Charging System:

- 7) Disconnect the gearshift lever arm (1) and speed sensor coupler (2).
- 8) Remove the recoil cover (3).

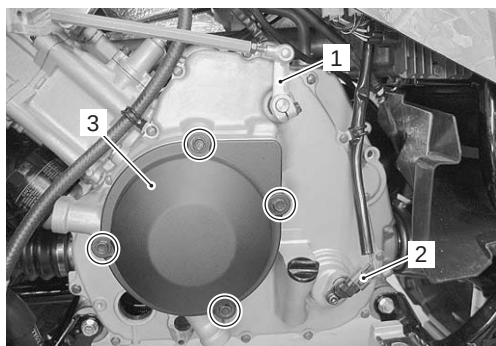

I931H11A0006-01

- 9) Disconnect the CKP sensor coupler (4) and generator coupler (5) and remove the clamp (6).

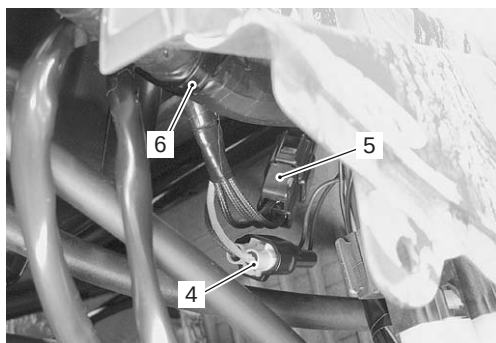


I931H11A0007-01

- 10) Hold the left crankshaft spacer (7) with the special tool.

Special tool


TOOL (A): 09930-44530 (Rotor holder)

- 11) Remove the left crankshaft spacer nut (8) and spacer (7).

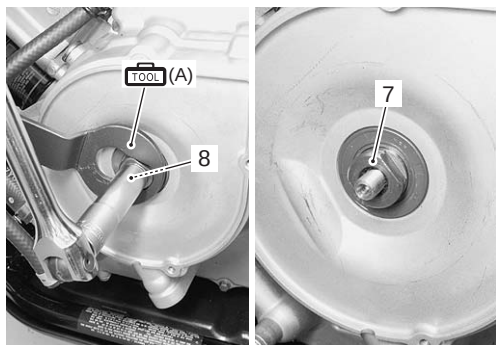


I931H11A0029-02

- 12) Remove the generator cover (9).

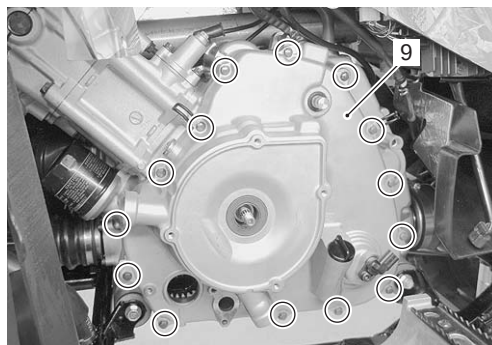


I931H11A0009-02

- 13) Remove the gasket (10) and dowel pins.

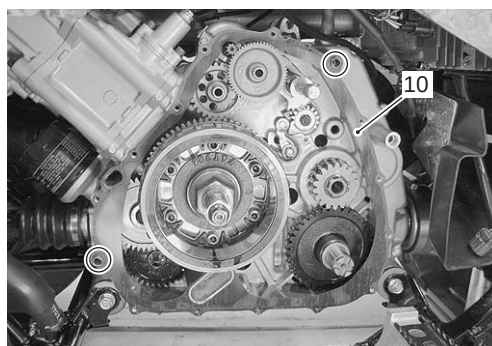

I931H11A0010-02

- 14) Hold the generator rotor with a 36 mm offset wrench, and remove the generator rotor nut.

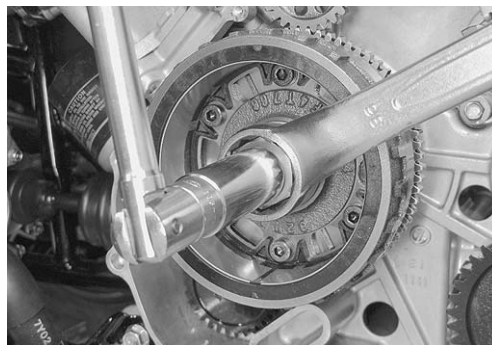


I931H11A0011-01

- 15) Install the special tool to the crankshaft end.

Special tool

TOOL (B): 09930-31921 (Rotor remover set)

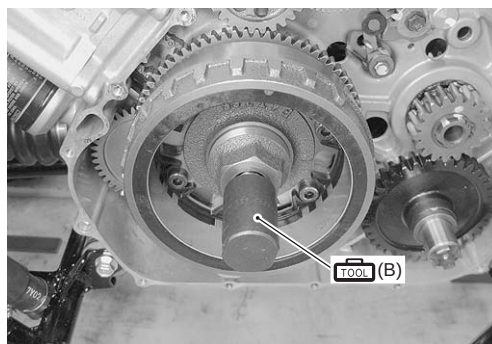

I931H11A0012-02


- 16) Remove the generator rotor assembly (11) with the special tool.

NOTE

Remove the starter clutch if necessary. Refer to "Starter Idle Gear / Starter Clutch Removal and Installation: in Section 1I".


Special tool

 (C): 09930-30721 (Rotor remover)

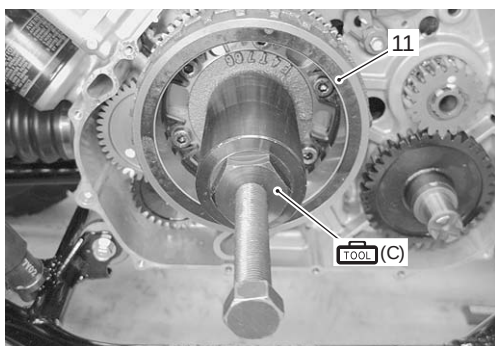


I931H11A0013-03

- 17) Remove the key (12).

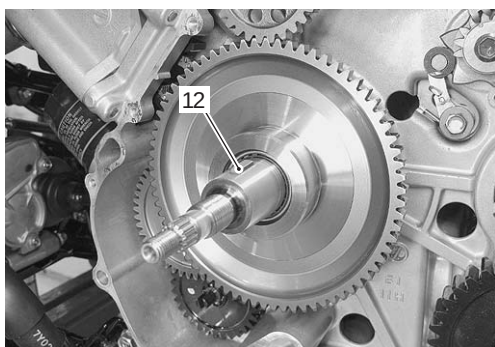

I931H11A0014-02

- 18) Remove the generator stator (13) along with the CKP sensor (14).

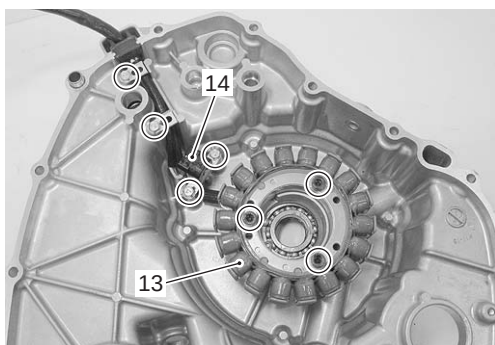

I931H11A0015-02

Installation

Install the generator in the reverse order of removal. Pay attention to the following points:

- Tighten the generator stator set bolts and CKP sensor mounting bolts to the specified torque.

NOTE


Be sure the grommet (1) is set to the generator cover.

Tightening torque

Generator stator set bolt (a): 11 N·m (1.1 kgf-m, 8.0 lbf-ft)


CKP sensor mounting bolt (b): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

Lead wire clamp bolt (c): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

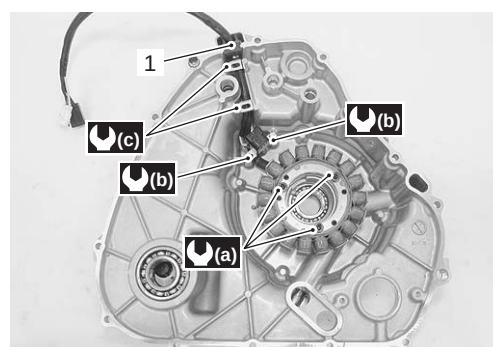

I931H11A0016-01

- Degrease the tapered portion "A" of generator rotor assembly and also the crankshaft "B". Use nonflammable cleaning solvent to wipe off oily or greasy matter to make these surfaces completely dry.
- Fit the key (2) in the key slot on the crankshaft.
- Install the generator rotor assembly onto crankshaft.

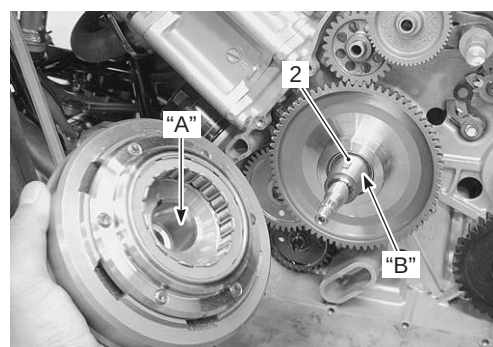


I931H11A0017-01

1J-7 Charging System:

- Hold the generator rotor and tighten the generator rotor nut (3) to the specified torque.

Tightening torque

Generator rotor nut (d): 140 N·m (14.0 kgf-m, 101.5 lbf-ft)

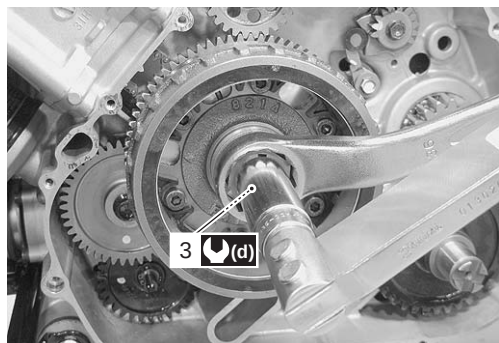


I931H11A0018-01

- Install the dowel pins and new gasket (4).

⚠ CAUTION

Use a new gasket (4) to prevent oil leakage.

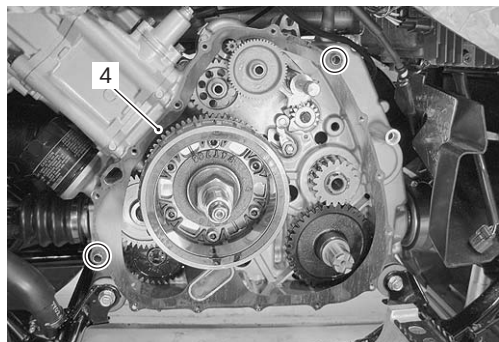

I931H11A0019-01


- Install the generator cover and tighten the generator cover bolts.

⚠ WARNING

Be careful not to pinch the finger between the generator cover and the crankcase.

⚠ CAUTION

Fit the clamp to the bolt "C".

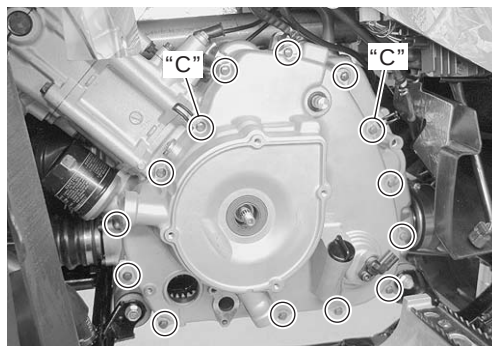


I931H11A0020-01

- Apply grease to the O-ring (5) and oil seal lip.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

⚠ CAUTION

Replace the O-ring (5) with a new one.

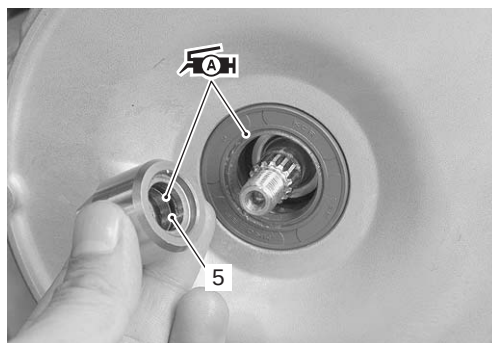

I931H11A0021-01


- Hold the left crankshaft spacer with the special tool and tighten the left crankshaft spacer nut (6) to the specified torque.

Special tool

 (A): 09930-44530 (Rotor holder)

Tightening torque

Left crankshaft spacer nut (e): 38 N·m (3.8 kgf-m, 27.5 lbf-ft)

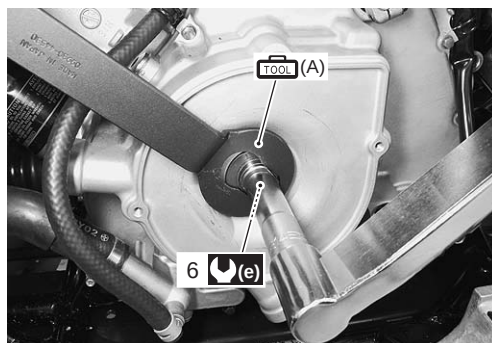


I931H11A0030-02

Regulator / Rectifier Inspection

Inspect the regulator/rectifier in the following procedures:

- 1) Turn the ignition switch OFF.
- 2) Remove the rear fender. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Disconnect the regulator/rectifier coupler (1) and remove the regulator/rectifier (2).

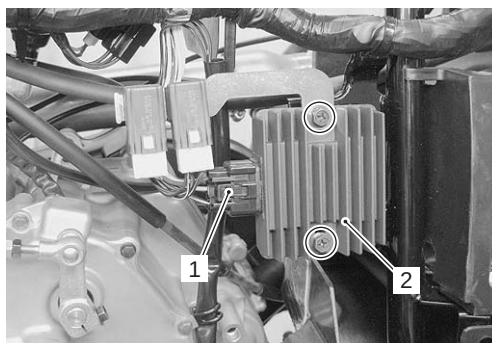

I931H11A0023-01

- 4) Measure the voltage between the terminals using the multi-circuit tester as indicated in the following table. If the voltage is not within the specified value, replace the regulator/rectifier with a new one.

NOTE


If the tester reads 1.4 V and below when the tester probes are not connected, replace its battery.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Diode test ()

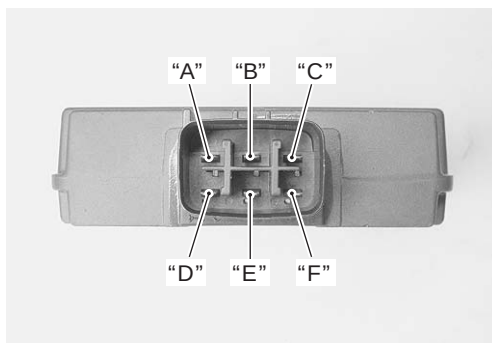

I931H11A0024-01


Unit: V

		"A"	"B"	"C"	"D"	"E"	"F"
(-) probe of tester to:	"A"	—	*	0.4 – 1.2	0.3 – 0.7	0.3 – 0.7	0.3 – 0.7
	"B"	*	—	*	*	*	*
	"C"	*	*	—	*	*	*
	"D"	*	*	0.3 – 0.7	—	*	*
	"E"	*	*	0.3 – 0.7	*	—	*
	"F"	*	*	0.3 – 0.7	*	*	—
*1.4 V and more (tester's battery voltage)							

- 5) Connect the regulator/rectifier coupler and reinstall the removed parts.

Battery Components

B931H21A06006

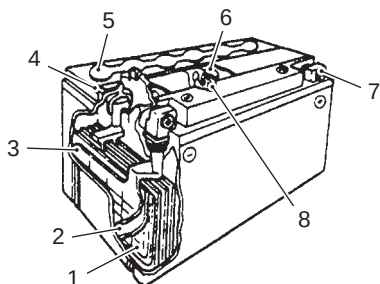

I649G11A0046-03

1. Anode plates	5. Stopper
2. Separator (Fiberglass plate)	6. Filter
3. Cathode plates	7. Terminal
4. Upper cover breather	8. Safety valve

Battery Charging

B931H21A06007


Initial Charging

Filling electrolyte

NOTE

When filling electrolyte, the battery must be removed from the vehicle and must be put on the level ground.

- 1) Remove the aluminum tape (1) which seals the battery filler holes "A".

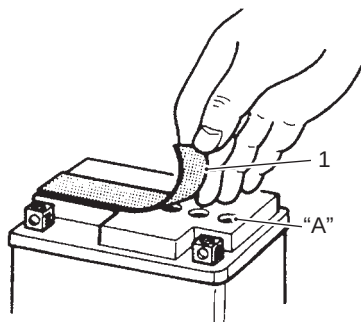


I649G11A0039-03

- 2) Remove the caps (2) from the electrolyte container.

NOTE

- Do not remove or pierce the sealed areas "B" of the electrolyte container.
- After filling the electrolyte completely, use the removed cap (2) as sealing caps of battery-filler holes.

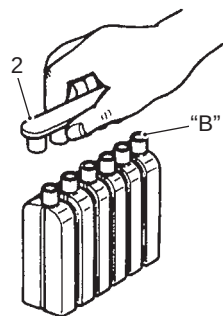


I649G11A0040-03

- 3) Insert the nozzles of the electrolyte container (3) into the electrolyte filler holes of the battery.

- 4) Hold the electrolyte container firmly so that it does not fall.


NOTE

Do not allow any of the electrolyte to spill.

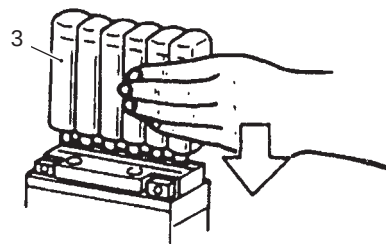

I649G11A0041-03


- 5) Make sure that air bubbles (4) rise to the top of each electrolyte container, and leave in this position for about more than 20 minutes.

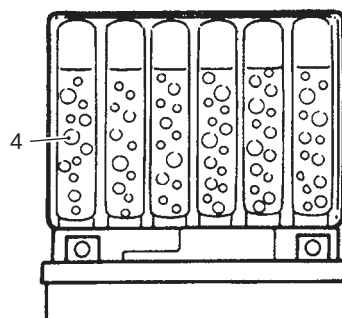

I649G11A0042-03

NOTE

If no air bubbles come out from a filler port, tap the bottom of the electrolyte container two or three times.
Never remove the container from the battery.

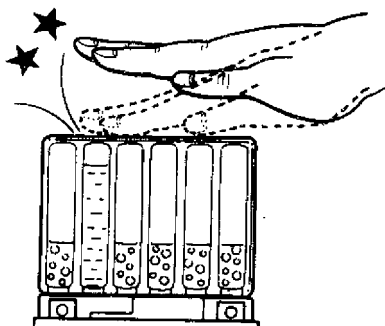


I310G11A0024-01

- 6) After confirming that the electrolyte has entered the battery completely, remove the electrolyte containers from the battery.
- 7) Wait for about 20 minutes.
- 8) Insert the caps (2) into the filler holes, pressing in firmly so that the top of the caps do not protrude above the upper surface of the battery's top cover.


⚠ CAUTION

- Once the caps are installed to the battery, do not remove the caps.
- Do not tap the caps with a hammer when installing them.

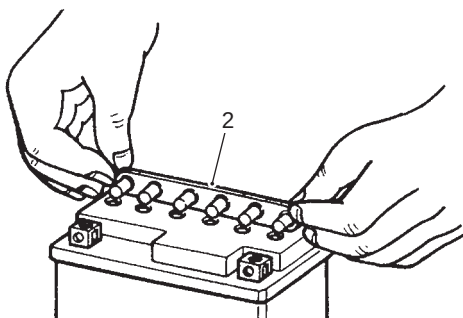


I718H11A0027-01

Correct

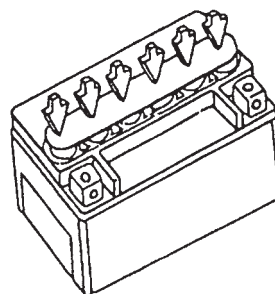

Incorrect

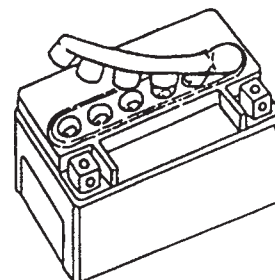

I649G11A0047-02

Charging

For initial charging, use the charger specially designed for MF battery.

⚠ CAUTION

- For charging the battery, make sure to use the charger specially designed for MF battery. Otherwise, the battery may be overcharged resulting in shortened service life.
- Do not remove the cap during charging.
- Position the battery with the cap facing upward during charging.

Battery Recharging

⚠ CAUTION

Do not remove the caps on the battery top while recharging.

NOTE


When the vehicle is not used for a long period, check the battery every 1 month to prevent the battery discharge.

- 1) Remove the battery from the vehicle. Refer to "Battery Removal and Installation (Page 1J-11)".
- 2) Measure the battery voltage using the multi-circuit tester.
If the voltage reading is less than the 12 V (DC), recharge the battery with a battery charger.

Recharging time

1.8 A for 5 to 10 hour

- 3) After recharging, wait at least 30 minutes and then measure the battery voltage using the multi-circuit tester.
If the battery voltage is less than 12.5 V, recharge the battery again.
If the battery voltage is still less than 12.5 V after recharging, replace the battery with a new one.

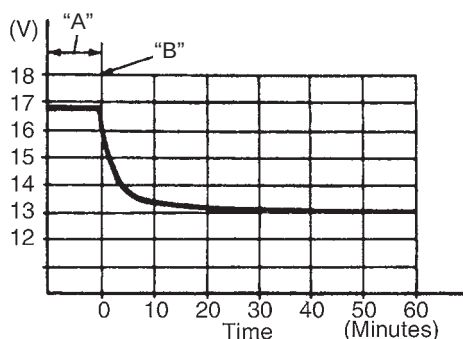


I649G11A0045-02

"A": Charging period

"B": Stop charging

- 4) Install the battery to the vehicle. Refer to "Battery Removal and Installation (Page 1J-11)".

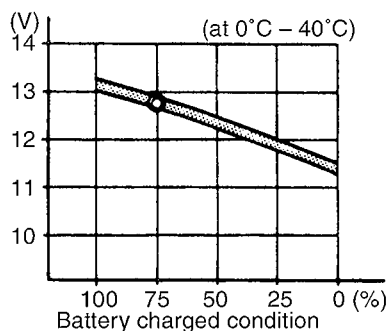


I705H11A0029-02

Battery Removal and Installation

B931H21A06008

Removal

- 1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".
- 2) Remove the battery stay (1).

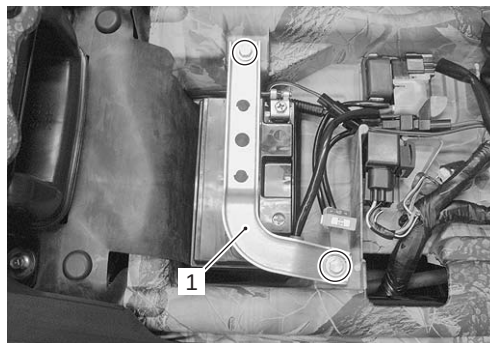


I931H11A0025-02

- 3) Disconnect the battery (-) lead wire (2).
- 4) Disconnect the battery (+) lead wire (3).

NOTE

Be sure to disconnect the battery (-) lead wire (2) first, then disconnect the battery (+) lead wire (3).

- 5) Remove the battery (4).

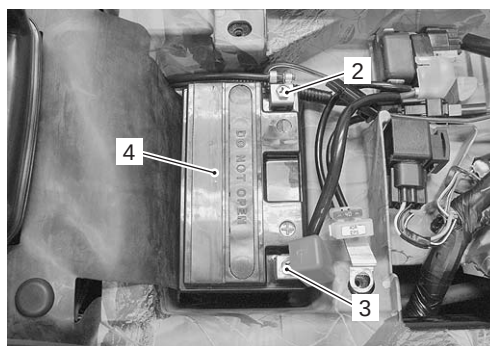

I931H11A0026-01

Installation


Install the battery in the reverse order of removal.
Pay attention to the following point:

⚠ CAUTION

Never use anything except the specified battery.

- Tighten the battery lead wire mounting bolts securely.
- Apply thread lock to the battery stay mounting bolts and tighten them securely.

**1322 : Thread lock cement 99000-32110
(THREAD LOCK CEMENT SUPER 1322 or equivalent)**

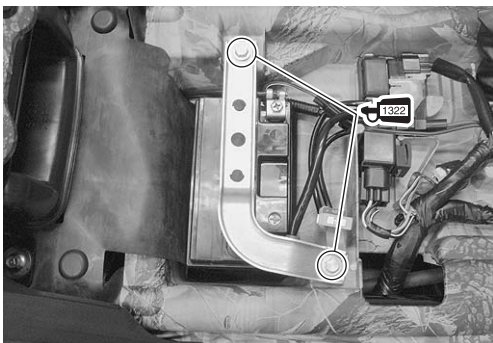

I931H11A0028-01

Battery Visual Inspection

B931H21A06009

Inspect the battery in the following procedures:

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Visually inspect the surface of the battery container. If any signs of cracking or electrolyte leakage from the sides of the battery have occurred, replace the battery with a new one.
If the battery terminals are found to be coated with rust or an acidic white powdery substance, clean the battery terminals with sandpaper.
- 3) Install the seat.

Specifications**Service Data**

B931H21A07001

Battery**⚠ CAUTION**

Never use anything except the specified battery.

Item	Specification	Note
Type designation	YTX20CH-BS	
Capacity	12 V, 64.8 kC (18 Ah)/10 HR	

Generator

Item	Specification	Note
Generator coil resistance	0.1 – 1.0 Ω	
Generator maximum output	Approx. 400 W at 5 000 r/min	
Generator no-load voltage (When engine is cold)	70 V (AC) and more at 5 000 r/min	
Regulated voltage	13.5 – 15.5 V at 5 000 r/min	

Tightening Torque Specifications

B931H21A07002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Generator stator set bolt	11	1.1	8.0	☞ (Page 1J-6)
CKP sensor mounting bolt	6	0.6	4.5	☞ (Page 1J-6)
Lead wire clamp bolt	6	0.6	4.5	☞ (Page 1J-6)
Generator rotor nut	140	14.0	101.5	☞ (Page 1J-7)
Left crankshaft spacer nut	38	3.8	27.5	☞ (Page 1J-7)

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment






Recommended Service Material

B931H21A08001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 1J-7)
Thread lock cement	THREAD LOCK CEMENT SUPER 1322 or equivalent	P/No.: 99000–32110	☞ (Page 1J-12)

Special Tool

B931H21A08002

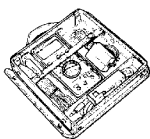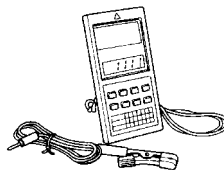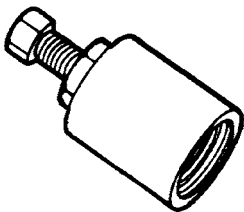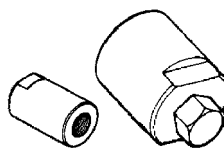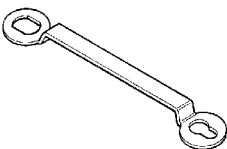09900–25008 Multi circuit tester set ☞ (Page 1J-3) / ☞ (Page 1J-3) / ☞ (Page 1J-4) / ☞ (Page 1J-4) / ☞ (Page 1J-8)		09900–26006 Engine tachometer ☞ (Page 1J-4)	
09930–30721 Rotor remover ☞ (Page 1J-6)		09930–31921 Rotor remover set ☞ (Page 1J-5)	
09930–44530 Rotor holder ☞ (Page 1J-5) / ☞ (Page 1J-7)			

Exhaust System

Precautions

Precautions for Exhaust System

B931H21B00001

⚠ WARNING

To avoid the risk of being burned, do not touch the exhaust system when the system is hot. Any service on the exhaust system should be performed when the system is cool.


⚠ CAUTION

Make sure that the exhaust pipe and muffler have enough clearance from the rubber parts and plastic parts to avoid melting.

Repair Instructions

Exhaust System Construction

B931H21B06001

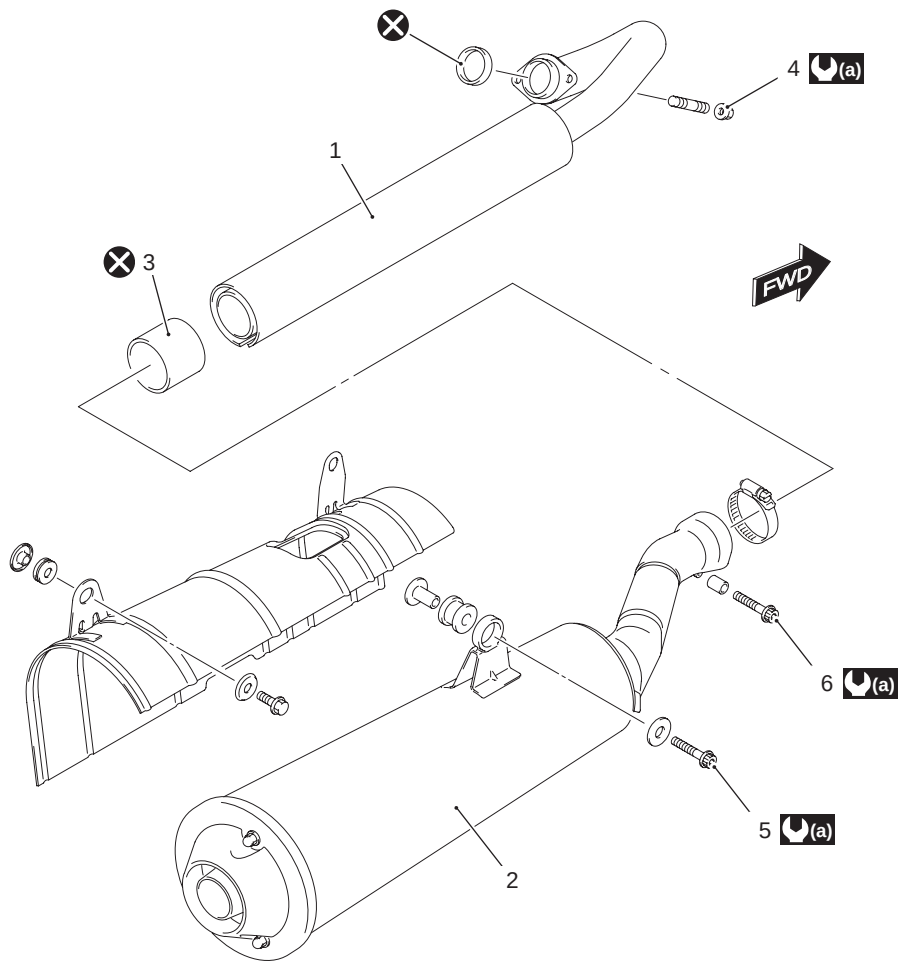

I931H11B0010-01


1. Exhaust pipe	4. Exhaust pipe nut	⚙(a) : 23 N·m (2.3 kgf·m, 16.5 lbf·ft)
2. Muffler	5. Exhaust pipe mounting bolt	⊗ : Do not reuse.
3. Connector	6. Muffler connecting bolt	

Exhaust Pipe / Muffler Removal and Installation

B931H21B06002

Removal

- 1) Remove the inner fenders and side covers, left and right. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the rear carrier. Refer to “**Rear Carrier Removal and Installation: in Section 9E**”.
- 3) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 4) Remove the engine side cover and rear fender. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 5) Loosen the muffler connecting bolt (1).

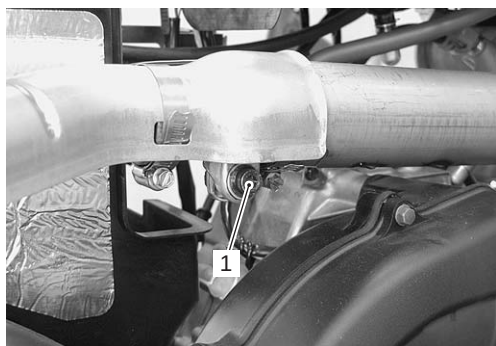


I931H11B0001-01

- 6) Remove the exhaust pipe (2).

NOTE

Support the exhaust pipe to prevent it from falling.

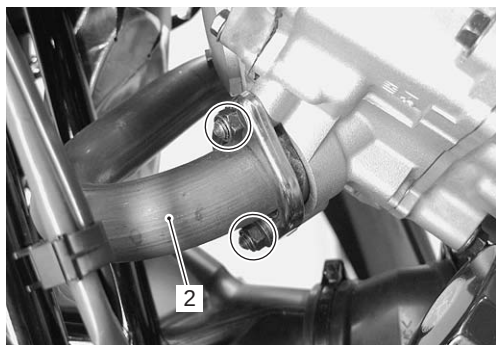


I931H11B0002-01

- 7) Remove the muffler (3).


NOTE

Support the muffler to prevent it from falling.

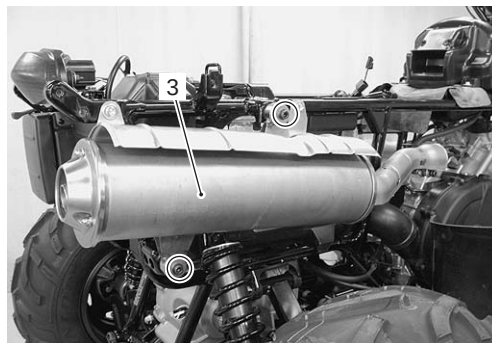

I931H11B0004-01

- 8) Remove the muffler cover (4).

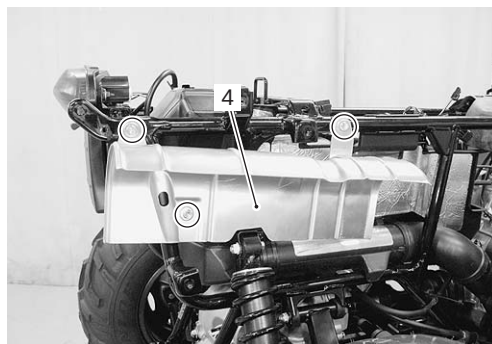

I931H11B0005-01

Installation


Install the exhaust pipe/muffler in the reverse order of removal.

Pay attention to the following points:

- Tighten the muffler mounting bolts (1) to the specified torque.

Tightening torque

Muffler mounting bolt (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

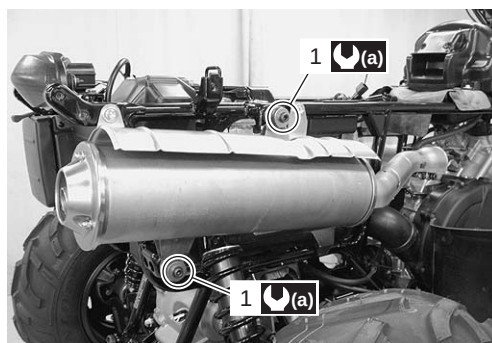


I931H11B0006-02

- Install the exhaust pipe gasket (2) and connector (3).

⚠ CAUTION

Replace the gasket and connector with new ones.

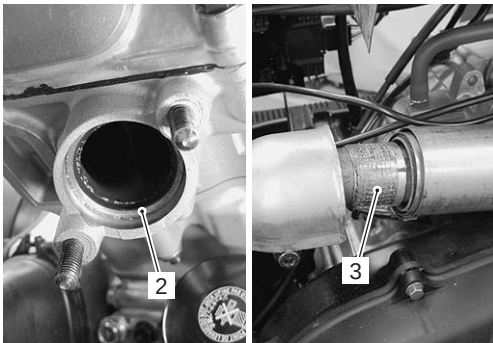


I931H11B0007-01

- Tighten the exhaust pipe nuts (4) and muffler connecting mounting bolt (5) to the specified torque.

Tightening torque

Exhaust pipe nut (b): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Muffler connecting bolt (c): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

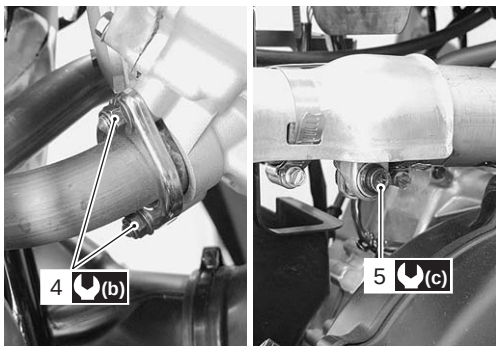

I931H11B0009-01

Exhaust System Inspection

B931H21B06003

Inspect the exhaust pipe connection and muffler connection for exhaust gas leakage and mounting condition. If any defects are found, replace the exhaust pipe assembly or muffler with a new one.

Check the exhaust pipe bolts, muffler connecting bolts and muffler mounting nut are tightened to their specified torque.

Refer to “Exhaust Pipe Bolt and Muffler Bolt Inspection: in Section 0B”.

Spark Arrester Inspection

B931H21B06004

Refer to “Spark Arrester Cleaning: in Section 0B”.

Specifications

Tightening Torque Specifications

B931H21B07001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Muffler mounting bolt	23	2.3	16.5	☞ (Page 1K-2)
Exhaust pipe nut	23	2.3	16.5	☞ (Page 1K-3)
Muffler connecting bolt	23	2.3	16.5	☞ (Page 1K-3)

NOTE

The specified tightening torque is described in the following.
“Exhaust System Construction (Page 1K-1)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Section 2

Suspension

CONTENTS

Precautions	2-1	Rear Suspension	2C-1
Precautions.....	2-1	Repair Instructions	2C-1
Precautions for Suspension	2-1	Rear Suspension Components	2C-1
Suspension General Diagnosis.....	2A-1	Rear Suspension Assembly Construction.....	2C-2
Diagnostic Information and Procedures.....	2A-1	Rear Shock Absorber Removal and	
Suspension and Wheel Symptom Diagnosis	2A-1	Installation	2C-3
Front Suspension	2B-1	Rear Suspension Inspection	2C-4
Repair Instructions	2B-1	Rear Shock Absorber Inspection	2C-4
Front Suspension Components	2B-1	Spring Pre-load Adjustment	2C-4
Front Suspension Assembly Construction	2B-2	Rear Wheel Hub / Suspension Knuckle	
Front Shock Absorber Removal and		Removal and Installation.....	2C-5
Installation	2B-3	Rear Hub Bearing Inspection	2C-6
Front Suspension Inspection	2B-3	Rear Hub Bearing Removal and Installation	2C-6
Front Shock Absorber Inspection.....	2B-3	Rear Suspension Arm Upper / Lower	
Spring Pre-load Adjustment	2B-4	Removal and Installation.....	2C-8
Front Wheel Hub / Steering Knuckle Removal		Rear Suspension Arm Related Parts	
and Installation	2B-4	Inspection	2C-10
Front Hub Bearing Inspection	2B-7	Rear Suspension Upper Arm Bushing and	
Front Hub Bearing Removal and Installation	2B-7	Inner Dust Seal Removal and Installation	2C-11
Front Suspension Upper / Lower Arm		Rear Suspension Lower Arm Bushing and	
Removal and Installation.....	2B-9	Inner Dust Seal Removal and Installation	2C-12
Steering Knuckle End Inspection	2B-10	Rear Suspension Knuckle Bushing and Inner	
Steering Knuckle End Removal and		Dust Seal Removal and Installation	2C-14
Installation	2B-11	Rear Stabilizer Removal and Installation	2C-15
Front Suspension Arm Related Parts		Stabilizer Parts Inspection.....	2C-16
Inspection.....	2B-12	Specifications	2C-17
Front Suspension Upper Arm Bushing and		Service Data.....	2C-17
Inner Dust Seal Removal and Installation.....	2B-13	Tightening Torque Specifications.....	2C-17
Front Suspension Lower Arm Bushing		Special Tools and Equipment	2C-17
Removal and Installation.....	2B-14	Recommended Service Material	2C-17
Specifications.....	2B-15	Special Tool	2C-18
Service Data	2B-15	Wheels and Tires	2D-1
Tightening Torque Specifications.....	2B-15	Precautions.....	2D-1
Special Tools and Equipment	2B-15	Precautions for Wheel and Tire.....	2D-1
Recommended Service Material	2B-15	Repair Instructions	2D-1
Special Tool	2B-16	Front and Rear Wheel Components	2D-1
		Front / Rear Wheel Removal and Installation	2D-2
		Tire Removal and Installation.....	2D-2
		Specifications	2D-4
		Service Data.....	2D-4
		Tightening Torque Specifications.....	2D-4

Precautions

Precautions

Precautions for Suspension

B931H22000001

Refer to “General Precautions: in Section 00”.

⚠ WARNING

All suspensions, bolts and nuts are an important part in that it could affect the performance of vital parts. They must be tightened to the specified torque periodically and if the suspension effect is lost, replace it with a new one.

⚠ CAUTION

Never attempt to heat, quench or straighten any suspension part. Replace it with a new one, or damage to the part may result.

NOTE

The right and left suspension related parts (shock absorbers, suspension arms and knuckles) are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

Suspension General Diagnosis

Diagnostic Information and Procedures

Suspension and Wheel Symptom Diagnosis

B931H22104001


Condition	Possible cause	Correction / Reference Item
Wobbly front wheel	Distorted wheel rim.	<i>Replace.</i>
	Worn hub bearings.	<i>Replace.</i>
	Defective or incorrect tire.	<i>Replace.</i>
	Loose front wheel nut.	<i>Tighten.</i>
	Worn front suspension bushings.	<i>Replace.</i>
	Loose front suspension fastener.	<i>Tighten.</i>
Front suspension too soft	Weak front shock absorber spring.	<i>Replace.</i>
	Front shock absorber leaks oil.	<i>Replace.</i>
	Improperly suspension setting.	<i>Adjust.</i>
Front suspension too stiff	Bent front shock absorber shaft.	<i>Replace.</i>
	Bent front upper or lower suspension arm.	<i>Replace.</i>
	Improperly suspension setting.	<i>Adjust.</i>
Front suspension too noisy	Loose front suspension fastener.	<i>Tighten.</i>
	Worn front suspension related bushings.	<i>Replace.</i>
Wobbly rear wheel	Distorted wheel rim.	<i>Replace.</i>
	Worn hub bearings.	<i>Replace.</i>
	Defective or incorrect tire.	<i>Replace.</i>
	Loose rear wheel nut.	<i>Tighten.</i>
	Worn rear suspension bushings.	<i>Replace.</i>
	Loose rear suspension fastener.	<i>Tighten.</i>
Rear suspension too soft	Weak rear shock absorber spring.	<i>Replace.</i>
	Rear shock absorber leaks oil.	<i>Replace.</i>
	Improperly suspension setting.	<i>Adjust.</i>
Rear suspension too stiff	Bent rear shock absorber shaft.	<i>Replace.</i>
	Bent rear upper or lower suspension arm.	<i>Replace.</i>
	Improperly suspension setting.	<i>Adjust.</i>
Rear suspension too noisy	Loose rear suspension fastener.	<i>Tighten.</i>
	Worn rear suspension related bushings.	<i>Replace.</i>

Front Suspension

Repair Instructions

Front Suspension Components

B931H22206001

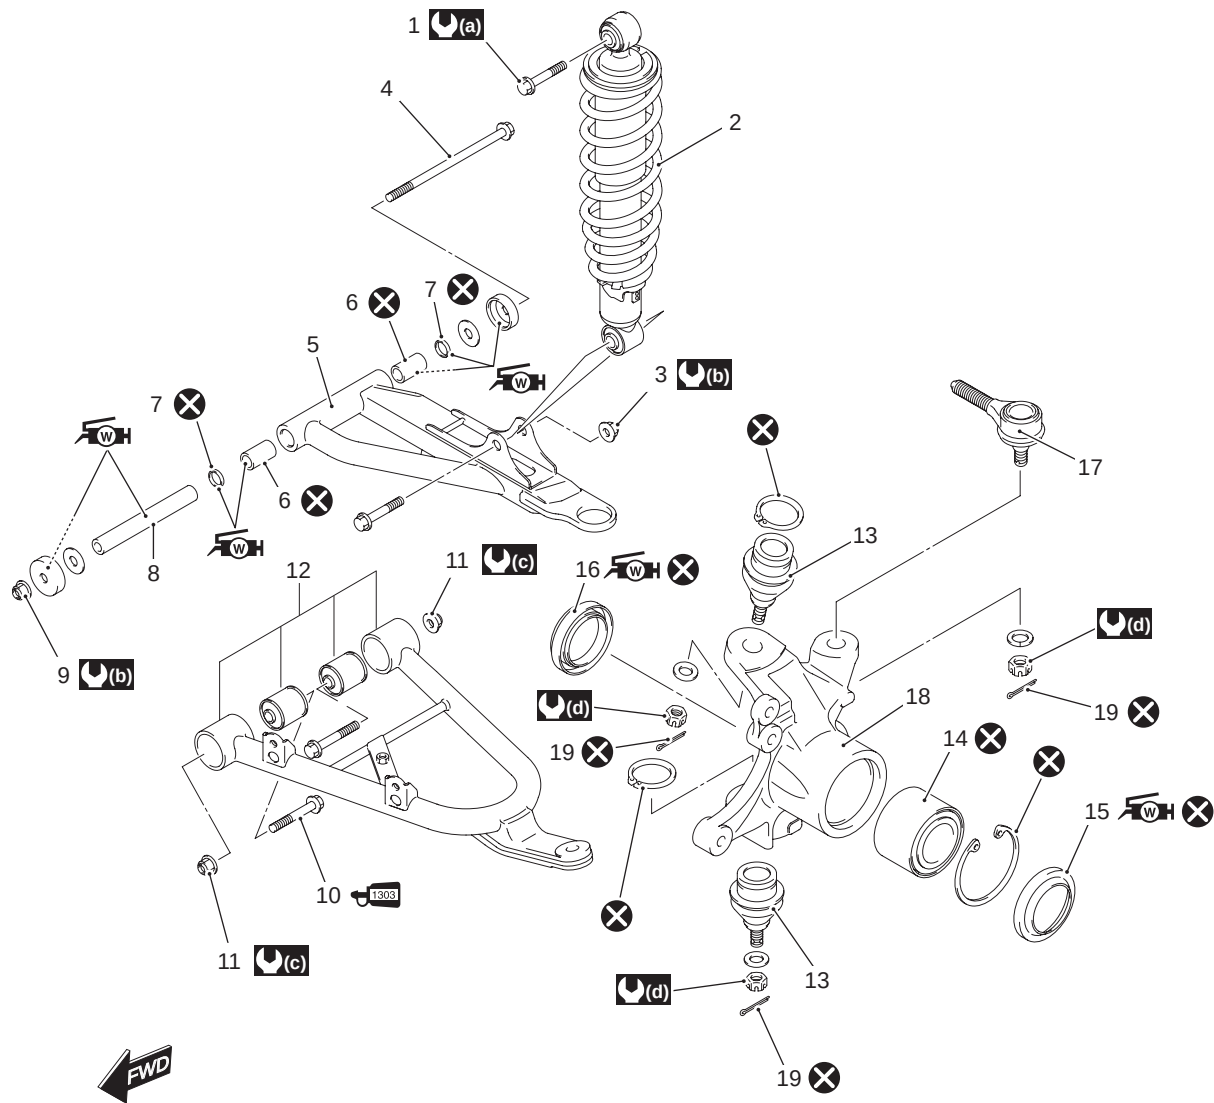


1931H1220054-02

1. Front shock absorber mounting bolt	10. Suspension arm pivot bolt (Lower)	19. Cotter pin
2. Front shock absorber	11. Suspension arm pivot nut (Lower)	: 55 N·m (5.5 kgf·m, 40.0 lbf·ft)
3. Front shock absorber mounting nut	12. Suspension lower arm set	: 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
4. Suspension arm pivot bolt (Upper)	13. Knuckle end	: 65 N·m (6.5 kgf·m, 47.0 lbf·ft)
5. Suspension upper arm	14. Hub bearing	: 29 N·m (2.9 kgf·m, 21.0 lbf·ft)
6. Bushing	15. Outer dust seal	: Apply water resistance grease.
7. Inner dust seal	16. Inner dust seal	: Apply thread lock to the thread part.
8. Spacer	17. Tie-rod end	: Do not reuse.
9. Suspension arm pivot nut (Upper)	18. Steering knuckle	

Front Suspension Assembly Construction

B931H22206002

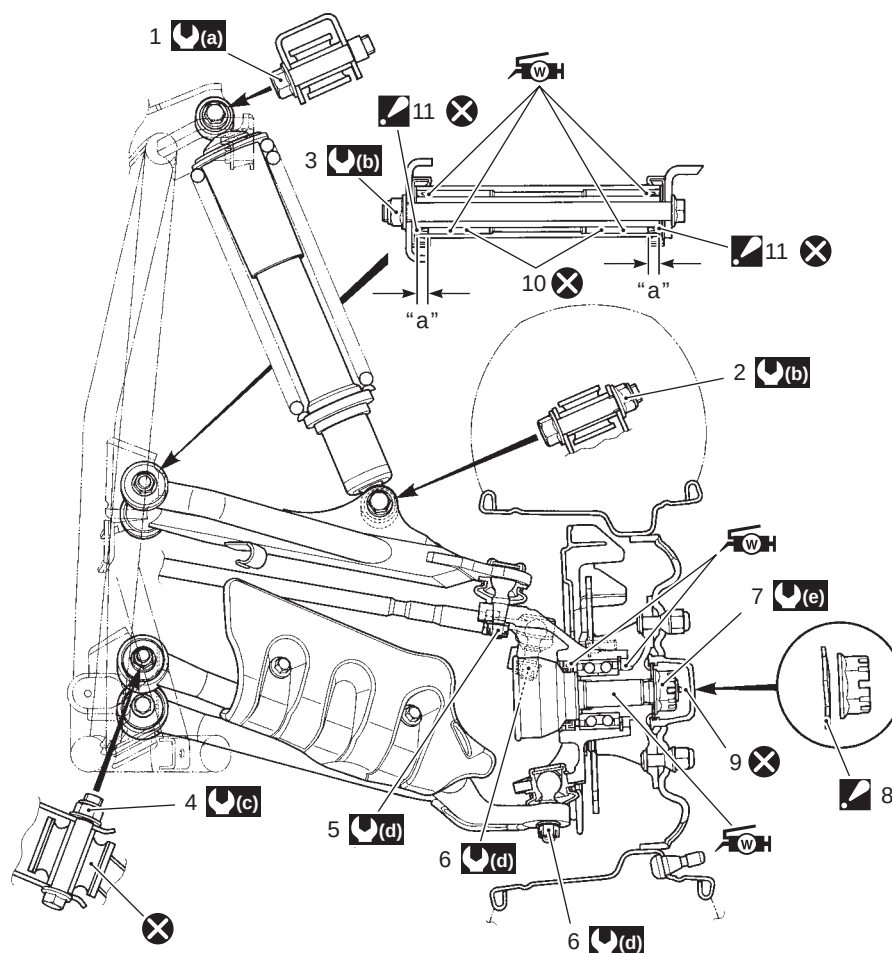

I931H1220055-01

1. Front shock absorber mounting bolt	11. Inner dust seal : Align the surface of dust seal with the edge of suspension arm.
2. Front shock absorber mounting nut	"a": 6.8 – 7.2 mm (0.27 – 0.28 in)
3. Front suspension arm pivot nut (Upper)	(a) : 55 N·m (5.5 kgf-m, 40.0 lbf-ft)
4. Front suspension arm pivot nut (Lower)	(b) : 60 N·m (6.0 kgf-m, 43.5 lbf-ft)
5. Tie-rod end nut	(c) : 65 N·m (6.5 kgf-m, 47.0 lbf-ft)
6. Steering knuckle end nut (Upper/Lower)	(d) : 29 N·m (2.9 kgf-m, 21.0 lbf-ft)
7. Front wheel hub nut	(e) : 110 N·m (11.0 kgf-m, 79.5 lbf-ft)
8. Washer : The conical side of washer faces outside.	: Apply water resistance grease.
9. Cotter pin	: Do not reuse.
10. Bushing	

Front Shock Absorber Removal and Installation


B931H22206003

⚠ CAUTION

Make sure that the vehicle is supported securely.

Removal

- 1) Remove the front wheel. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.
- 2) Remove the front shock absorber upper mounting bolt.
- 3) Remove the front shock absorber lower mounting nut and bolt.
- 4) Remove the right front shock absorber (1).

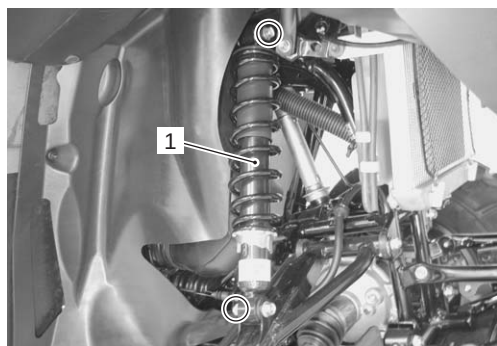


I931H1220001-01

- 5) Release the clip part “A” of the EPS control unit plate (2) with the special tool. Next lift the EPS control unit plate (2) (Left side only).

Special tool

TOOL (A): 09942-83110 (Clip remover)

- 6) Remove shock absorber upper mounting bolt (3).

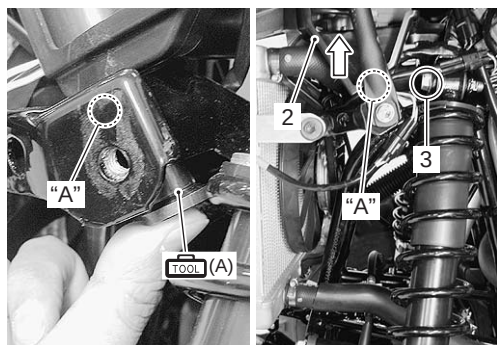

I931H1220053-03

- 7) Remove the left front shock absorber in the same manner of the right side.

Installation


Install the front shock absorber in the reverse order of removal. Pay attention to the following point:

- Tighten the mounting bolt and nut to the specified torque.

Tightening torque

Front shock absorber mounting bolt (Upper) (a): 55 N·m (5.5 kgf-m, 40.0 lbf-ft)

Front shock absorber mounting nut (Lower) (b): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

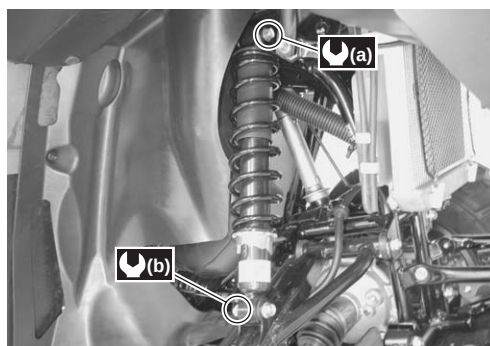

I931H1220002-02

Front Suspension Inspection

B931H22206004

Refer to “Suspensions Inspection: in Section 0B”.

Front Shock Absorber Inspection

B931H22206005

Inspect the front shock absorber in the following procedures:

- 1) Remove the front shock absorber. Refer to “Front Shock Absorber Removal and Installation (Page 2B-3)”.
- 2) Inspect the front shock absorber for damage and oil leakage, and absorber bushing for wear or damage. If any defects are found, replace the front shock absorber with a new one.

⚠ CAUTION

Do not attempt to disassemble the front shock absorber. It is unserviceable.



I931H1220003-01

- 3) Install the front shock absorber. Refer to "Front Shock Absorber Removal and Installation (Page 2B-3)".

Spring Pre-load Adjustment

B931H22206006

⚠ WARNING


Be sure to adjust the spring pre-load on the both suspensions equally.

- Turn the spring tension ring (1) to the desired position.

NOTE

Position 1 provides the softest spring tension and position 5 provides the stiffest.

STD position
2nd position

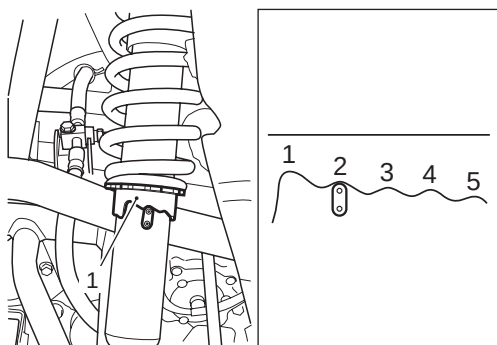

I931G1220058-01


- Install the removed parts.

Front Wheel Hub / Steering Knuckle Removal and Installation

B931H22206007

Removal

- 1) Remove the cotter pin (1) and loosen the hub nut (2).

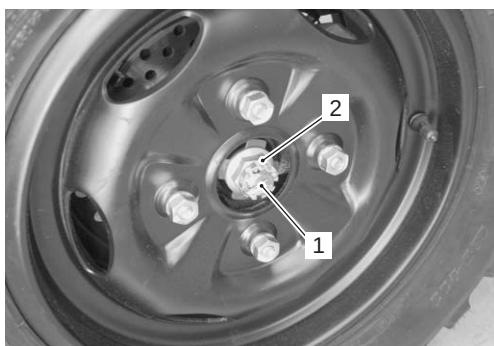


I931H1220004-01

- 2) Remove the front wheel assembly. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".

⚠ CAUTION

Make sure that the vehicle is supported securely.


- 3) Remove the front drive shaft cover (3).

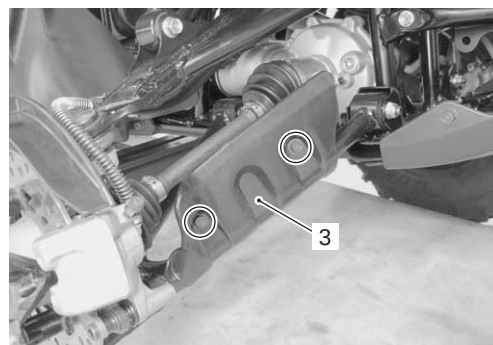

I931H1220005-01


- 4) Remove the brake caliper mounting bolt. Refer to "Front Brake Caliper Removal and Installation: in Section 4B".

- 5) Remove the front wheel hub (4) by removing hub nut (5) and washer (6).

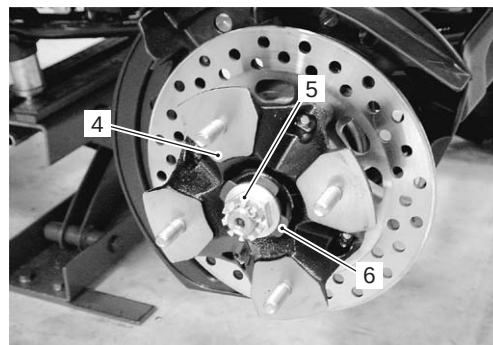


I931G1220008-01

- 6) Remove the front disc cover (7).

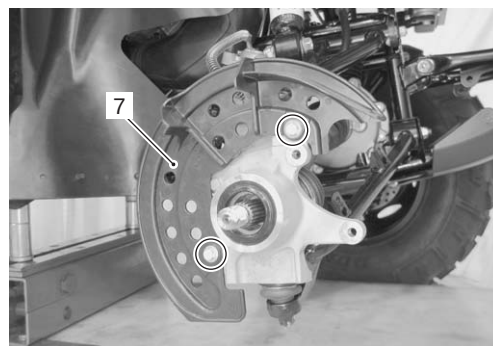

I931H1220006-01

- 7) Remove the cotter pin, tie-rod end nut and washer.

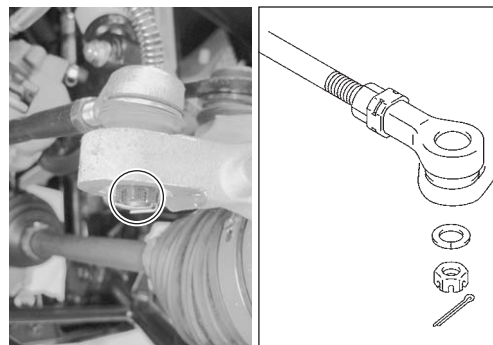

I931H1220007-01

2B-5 Front Suspension:


8) Disengage the tie-rod end (8) with the special tool.

⚠ WARNING

When using the tie-rod end remover, keep clear of the tie-rod end because it may come loose with some force and could strike you.


Special tool

 (A): 09942-72410 (Tie-rod end remover)

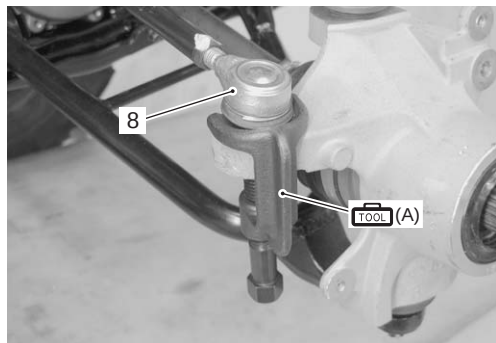


I931H1220008-01

9) Remove the cotter pins, knuckle end nuts and washers.

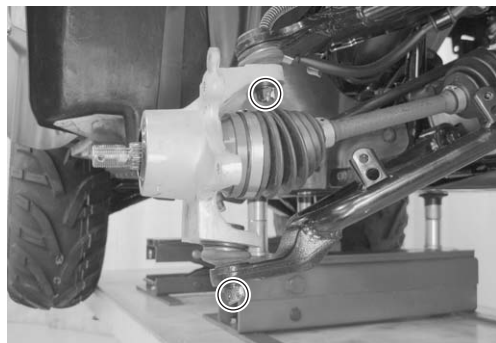


I931H1220009-01

10) Remove the steering knuckle end with a commercially available bearing joint remover.

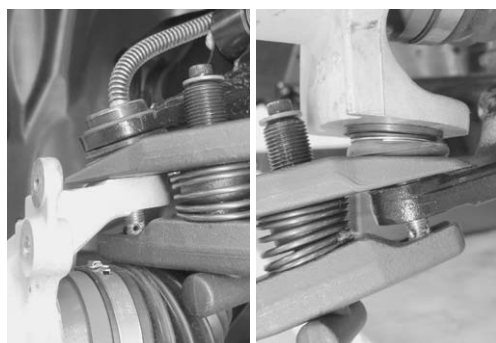

I931H1220010-01

11) Remove the steering knuckle (11).

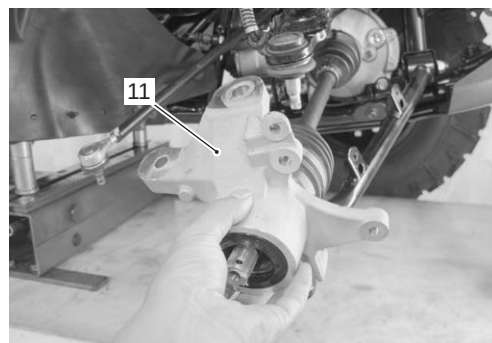

I931H1220011-03

Installation

Install the steering knuckle in the reverse order of removal. Pay attention to the following points:


- Clean up the steering knuckle end "A" and the mating surface "B" of the steering knuckle.

NOTE

Make surfaces free from moisture, oil, dust and other foreign materials.

- Apply grease to the lip of inner dust seal.

 : Grease 99000-25160 (Water resistance grease or equivalent)

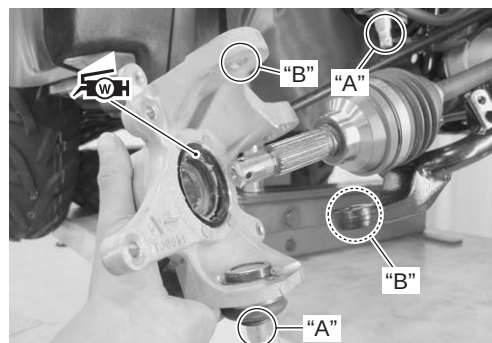

I931H1220012-01

- Install the washer (1) and tighten the knuckle end nuts (2) to the specified torque.


Tightening torque

Steering knuckle end nut (a): 29 N·m (2.9 kgf-m, 21.0 lbf-ft)


- Install the cotter pins (3).

⚠ CAUTION

The removed cotter pins (3) must be replaced with new ones.

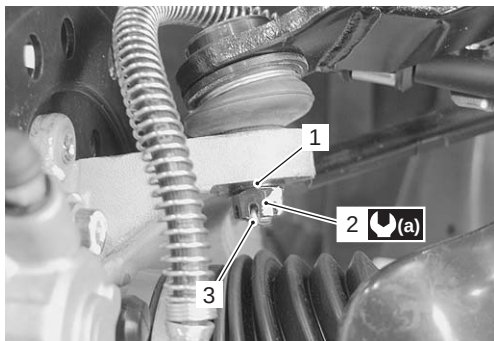

I931H1220013-02

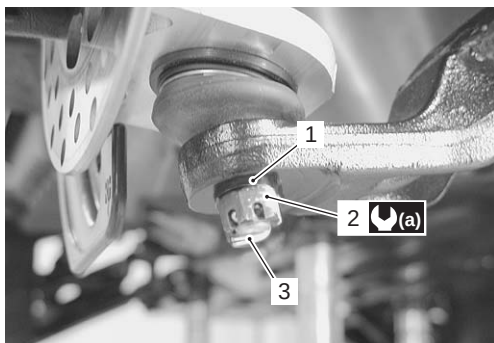

I931H1220014-02

- Clean up the tie-rod end and the mating surface of the steering knuckle.

NOTE

Make surfaces free from moisture, oil, dust and other foreign materials.

- Connect the tie-rod end (4) to the steering knuckle (5). Next, install the washer (6) and tighten the tie-rod end nut (7) to the specified torque.


Tightening torque

Tie-rod end nut (b): 29 N·m (2.9 kgf-m, 21.0 lbf-ft)

- Install the cotter pin (8).

⚠ CAUTION


The removed cotter pin (8) must be replaced with a new one.

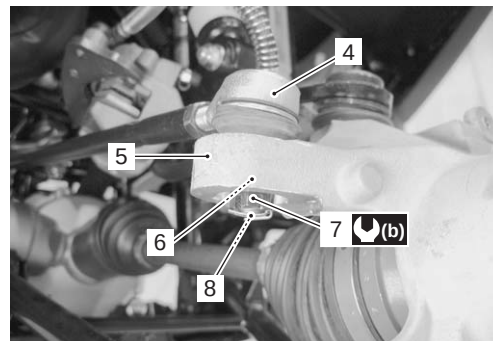

I931H1220015-02

- Apply thread lock to the brake disc cover mounting bolts (9) and tighten them.


 **1322** : Thread lock cement 99000-32110 (THREAD LOCK CEMENT SUPER 1322 or equivalent)

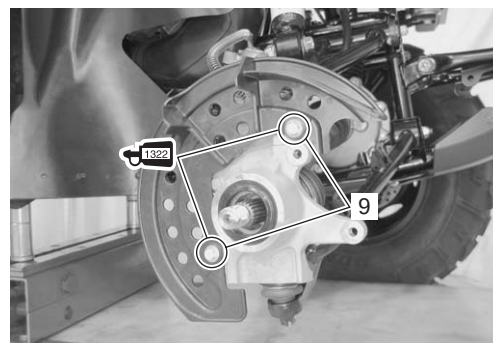

I931H1220016-01

- Apply grease to the wheel hub spline and lip of dust seal.

 **WH** : Grease 99000-25160 (Water resistance grease or equivalent)

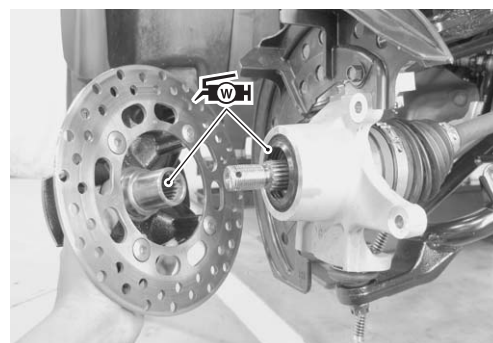


I931H1220017-01

2B-7 Front Suspension:

- Install the wheel hub (10), washer (11) and front hub nut (12).

NOTE

The conical side of washer (11) faces out side. Refer to "Front Suspension Assembly Construction (Page 2B-2)".

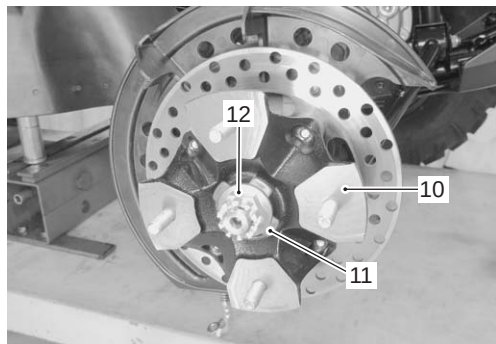

I931H1220018-01

- Install the brake caliper. Refer to "Front Brake Caliper Removal and Installation: in Section 4B".
- Install the front wheel assembly. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".
- Tighten the front hub nut (13) to the specified torque.

Tightening torque

Front hub nut (d): 110 N·m (11.0 kgf·m, 79.5 lbf·ft)

- Install the cotter pin (14).

⚠ CAUTION

The removed cotter pin (14) must be replaced with a new one.




I831G1220023-02

Front Hub Bearing Inspection

B931H22206008

Inspect the inner race play of the front hub bearing by hand while they are in the steering knuckle. Rotate the inner races by hand to inspect for abnormal noise and smooth rotation. If there is anything unusual, replace the front hub bearing with a new one.

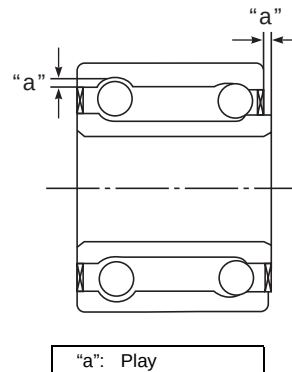

I831G1220024-02

Front Hub Bearing Removal and Installation

B931H22206009


Refer to "Front Wheel Hub / Steering Knuckle Removal and Installation (Page 2B-4)".

Removal

- Remove the outer dust seal (1) with the special tool.

Special tool

 (A): 09913-50121 (Oil seal remover)

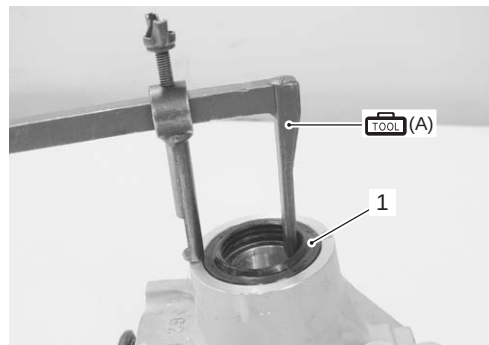

I931H1220019-01

- Remove the snap ring (2) with the special tool.

Special tool

 : 09900-06108 (Snap ring remover (Close type))




I931H1220020-01

- 3) Remove the inner dust seal (3) with the special tool.

Special tool

 (A): 09913-50121 (Oil seal remover)

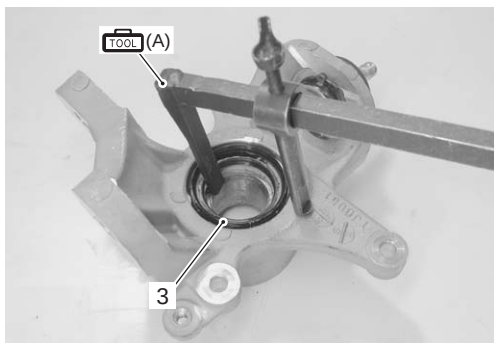


I931H1220021-01

- 4) Remove the wheel hub bearing (4), using the hydraulic press and special tool.

Special tool

 (B): 09913-70210 (Bearing installer set (10 – 75))

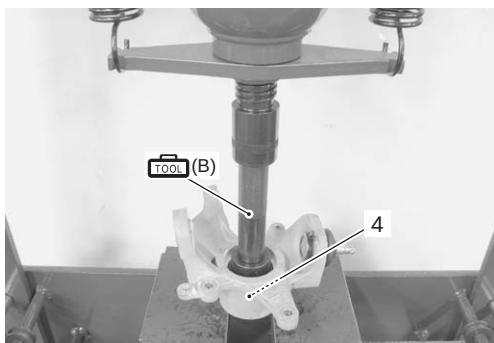

I931H1220022-01

Installation

Install the wheel hub bearing in the reverse order of removal. Pay attention to the following points:


- Install the wheel hub bearing (1), using the hydraulic press and special tool.

CAUTION

Never reuse wheel hub bearing (1).

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

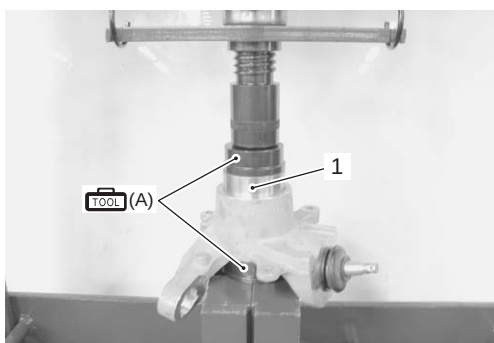

I931H1220023-01


- Install the snap ring (2) with the special tool.

CAUTION

Never reuse snap ring (2).

Special tool

 : 09900-06108 (Snap ring remover (Close type))

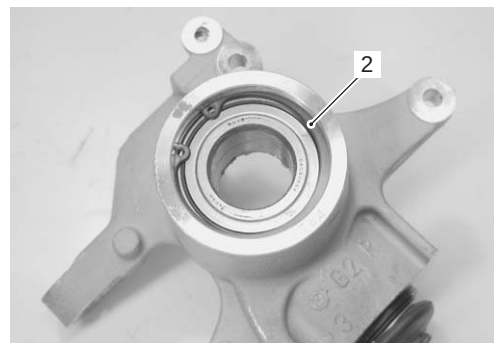

I931H1220024-01


- Install a new inner dust seal (3) using a suitable size socket wrench.

CAUTION

Replace the inner dust seal (3) with a new one.

- Apply grease to the lip of inner dust seal.

 : Grease 99000-25160 (Water resistance grease or equivalent)

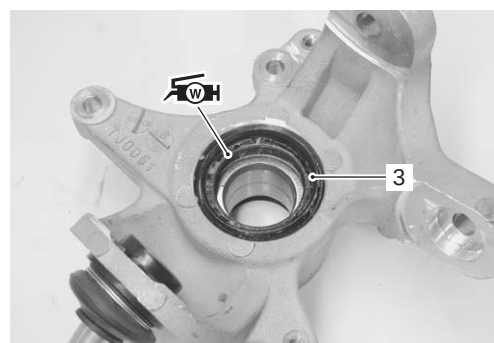

I931H1220025-01

2B-9 Front Suspension:


- Install a new outer dust seal (4) using a suitable size socket wrench.

CAUTION

Replace the outer dust seal (4) with a new one.

- Apply grease to the lip of outer dust seal (4).

 : Grease 99000-25160 (Water resistance grease or equivalent)

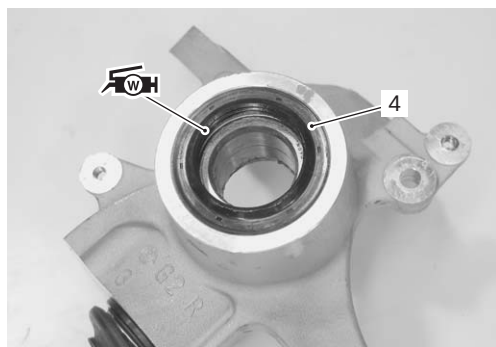


I931H1220026-01

Front Suspension Upper / Lower Arm Removal and Installation

B931H22206010


Removal

- 1) Remove the front wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.
- 2) Disconnect the brake hose. Refer to “Front Brake Hose Removal and Installation: in Section 4A”.
- 3) Remove the steering knuckle. Refer to “Front Wheel Hub / Steering Knuckle Removal and Installation (Page 2B-4)”.
- 4) Remove the front shock absorber lower mounting nut (1).

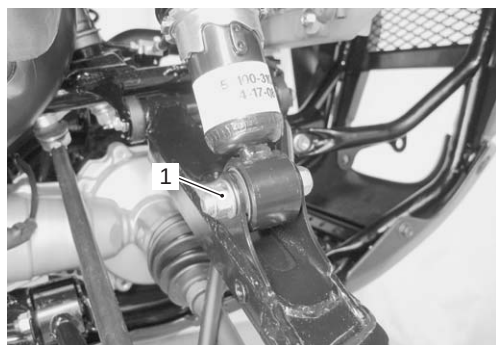


I931H1220027-02

- 5) Remove the suspension upper arm (2) by removing the suspension upper arm pivot bolt (3) and pivot nut (4).

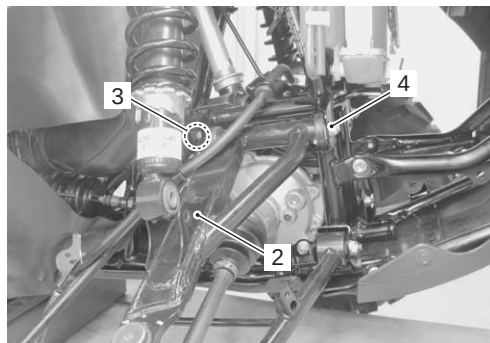

I931H1220028-01

- 6) Remove the suspension lower arm (5) by removing suspension lower arm pivot bolts (6) and pivot nuts (7).

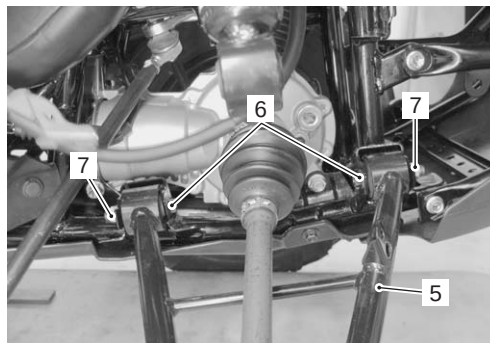


I931H1220029-01

Installation

- 1) Apply thread lock to the suspension lower arm pivot bolts (1).


 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- 2) Tighten the suspension lower arm pivot nuts (2).

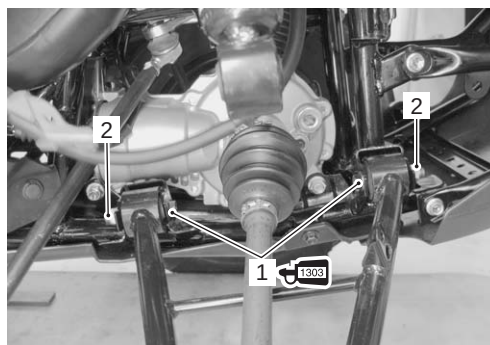

I931H1220031-03

- 3) Set the steering knuckle (3) and install the suspension upper arm (4).
- 4) Tighten the suspension upper arm pivot nut (5) and shock absorber mounting nut (6).
- 5) Tighten the steering knuckle end nut and tie-rod end nut, and then install the wheel hub. Refer to "Front Wheel Hub / Steering Knuckle Removal and Installation (Page 2B-4)".

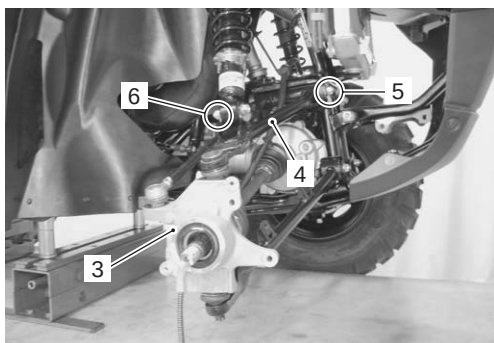


I931H1220032-01

- 6) Tighten the front shock absorber lower mounting nut (6) to the specified torque.

Tightening torque

Front shock absorber mounting nut (Lower) (a):
60 N·m (6.0 kgf-m, 43.5 lbf-ft)

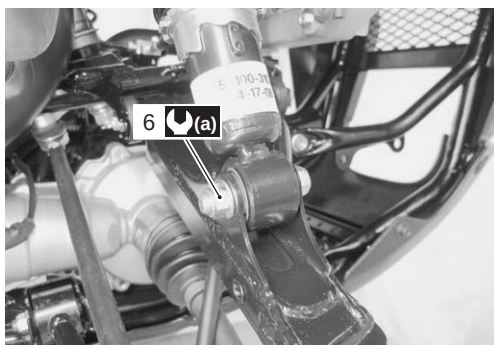

I931H1220033-02

- 7) Install the brake hose. Refer to "Front Brake Hose Removal and Installation: in Section 4A".
- 8) Install the inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 9) Install the front wheel assembly. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".

- 10) Keep a vehicle on a level ground. Next loosen each pivot nut and tighten them to the specified torque again.

Tightening torque

Suspension arm pivot nut (Lower): 65 N·m (6.5 kgf-m, 47.0 lbf-ft)

Suspension arm pivot nut (Upper): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

Steering Knuckle End Inspection

B931H22206011


- Inspect the steering knuckle end for wear or damage. If any defects are found, replace the front lower knuckle end with a new one.
- Inspect front lower knuckle end for movement. If there are any abnormalities, replace the front lower knuckle end with a new one.

UPPER



I931H1220034-01

LOWER

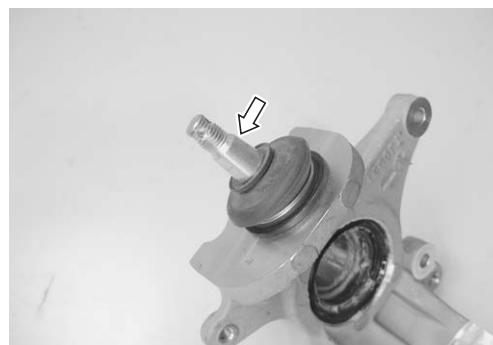

I931H1220035-01

2B-11 Front Suspension:

Steering Knuckle End Removal and Installation

B931H22206012

Refer to "Front Wheel Hub / Steering Knuckle Removal and Installation (Page 2B-4)" and "Front Suspension Upper / Lower Arm Removal and Installation (Page 2B-9)".


Removal

Upper

- Remove the snap ring (1) with the special tool.

Special tool

TOOL : 09900-06107 (Snap ring remover (Open type))

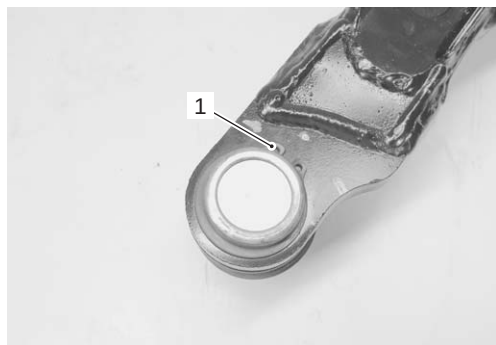


I931H1220036-01

- Remove the knuckle end (2) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

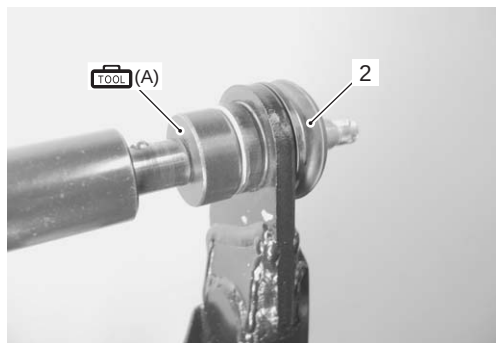


I931H1220037-01

Lower

- Remove the snap ring (1) with the special tool.

Special tool

TOOL : 09900-06107 (Snap ring remover (Open type))

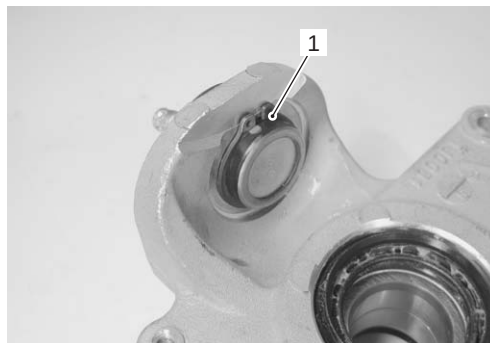


I931H1220038-01

- Remove the front lower knuckle end (2) with the special tools and vise as shown in the figure.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

TOOL (B): 09941-53610 (Front fork oil seal hammer)

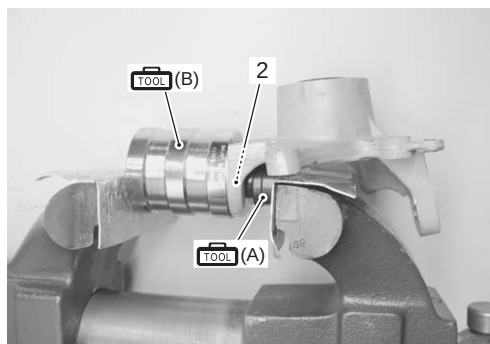

I931H1220039-01


Installation

Upper

- Install the knuckle end (1) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

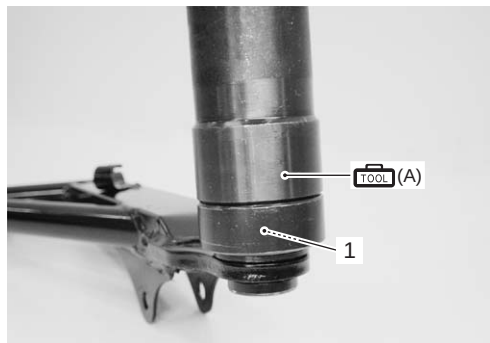

I831G1220045-01


- Install the snap ring (2) with the special tool.

⚠ CAUTION

Replace the snap ring (2) with a new one.

Special tool

🔧 : 09900-06107 (Snap ring remover (Open type))

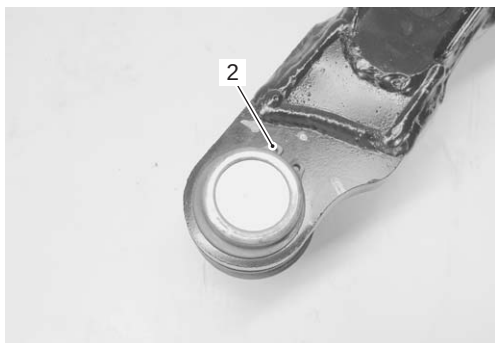


I931H1220040-01

Lower

- Install the knuckle end (1) with the special tool.

Special tool

🔧 (A): 09913-70210 (Bearing installer set (10 – 75))

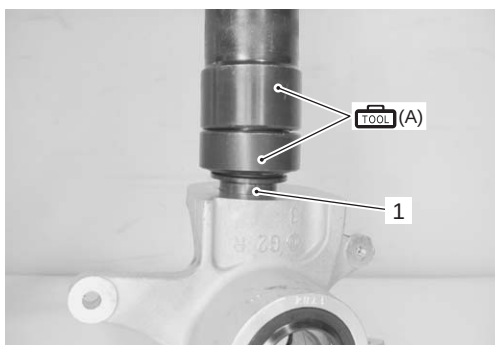

I931H1220041-01


- Install the snap ring (2) with the special tool.

⚠ CAUTION

Replace the snap ring (2) with a new one.

Special tool

🔧 : 09900-06107 (Snap ring remover (Open type))

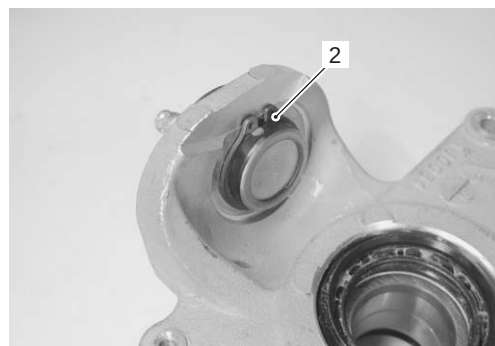

I931H1220042-01

Front Suspension Arm Related Parts Inspection


B931H22206013

Refer to "Front Suspension Upper / Lower Arm Removal and Installation (Page 2B-9)".

Upper arm

- 1) Inspect the following parts for wear or damage. If any defects are found, replace defective parts with new ones.

- Upper arm (1)
- Dust seal (2)
- Washer (3)
- Spacer (4)

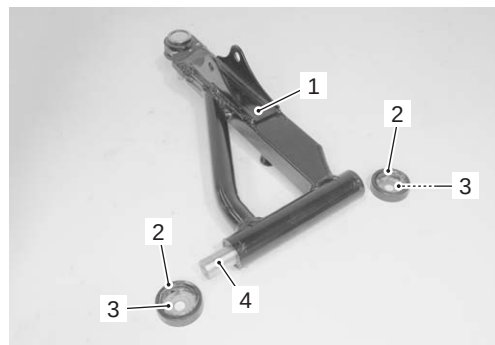

I931H1220043-01

- 2) Insert the spacer into bushings.

- 3) Check the play by moving the spacer up and down. If excessive play is noted, replace the bushing with a new one. Refer to "Front Suspension Upper Arm Bushing and Inner Dust Seal Removal and Installation (Page 2B-13)".




I931H1220044-01

2B-13 Front Suspension:

Lower arm

Inspect the front lower arm (1) and bushings (2) for bend or damage. If any defects are found, replace the defective parts with new ones. Refer to "Front Suspension Lower Arm Bushing Removal and Installation (Page 2B-14)".

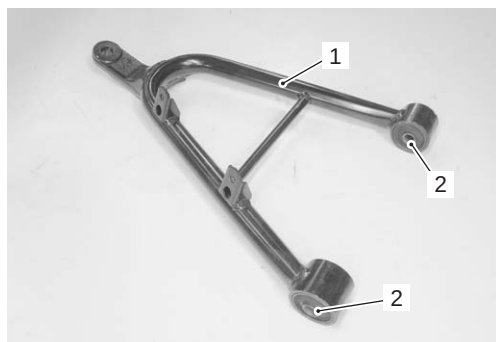

I931H1220045-01


Front Suspension Upper Arm Bushing and Inner Dust Seal Removal and Installation

B931H22206014

Refer to "Front Suspension Upper / Lower Arm Removal and Installation (Page 2B-9)".

Removal

- 1) Remove the following parts from the front upper arm.
 - Dust seal (1)
 - Washer (2)
 - Spacer (3)

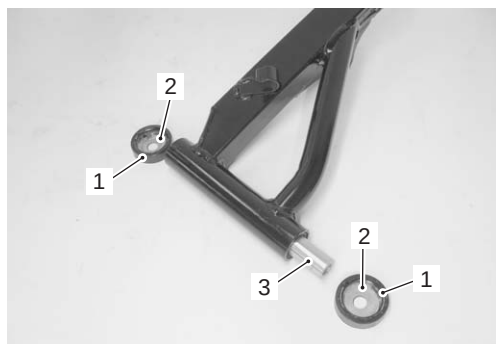


I931H1220046-01

- 2) Remove the front upper arm bushings (4) along with inner dust seals (5).

Special tool

 : 09923-73210 (Bearing remover)

 : 09930-30104 (Rotor remover slide shaft)

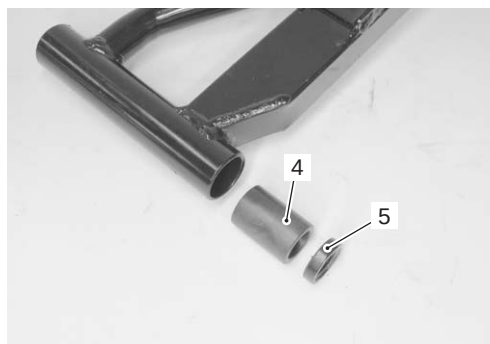

I931H1220047-01

Installation

- 1) Install the front upper arm bushings (1) and inner dust seals (2) with the special tool and suitable socket wrench.

NOTE


Position the bushings and dust seals by referring to "Front Suspension Assembly Construction (Page 2B-2)".

⚠ CAUTION


The removed bushings and dust seals must be replaced with new ones.

Special tool

 (A): 09941-34513 (Bearing installer)

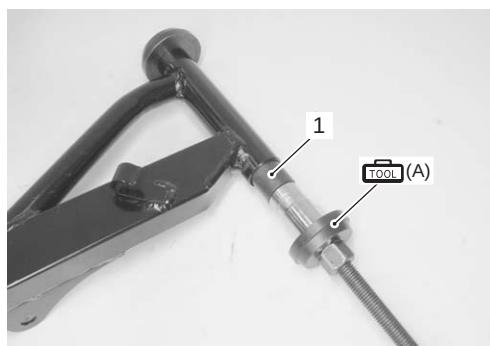

I931H1220048-01

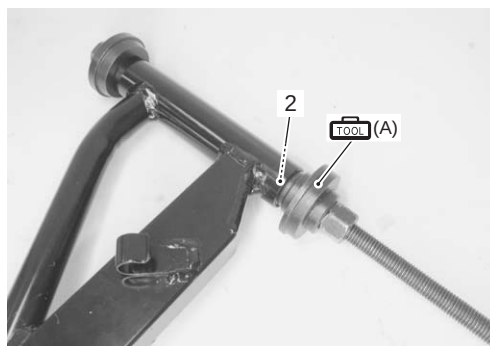


I931H1220049-01

- 2) Apply grease to the lip of inner dust seals, spacer (1) and inside of dust seals (2).

⚠️ WH : Grease 99000-25160 (Water resistance grease or equivalent)

- 3) Install the washers (3) to the dust seals (2) and install the spacer (1) and dust seals (2) to the front suspension upper arm.

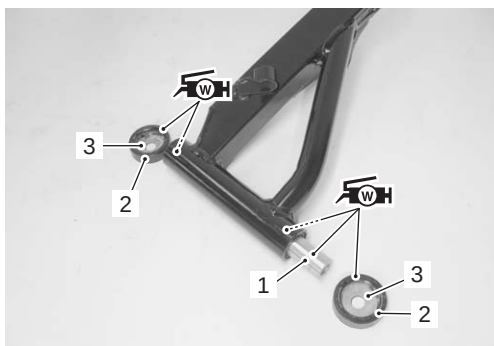

I931H1220050-02

Front Suspension Lower Arm Bushing Removal and Installation

B931H22206015


Refer to "Front Suspension Upper / Lower Arm Removal and Installation (Page 2B-9)".

Removal

Remove the front suspension lower arm bushings with the special tool and hydraulic press.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 – 75))

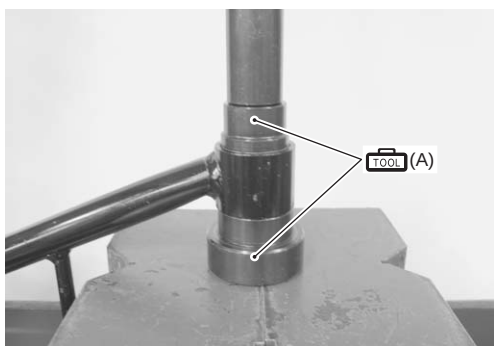

I931H1220051-01

Installation


Install the front suspension lower arm bushings with the special tool and hydraulic press.

⚠️ CAUTION

The removed bushings must be replaced with a new one.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 – 75))

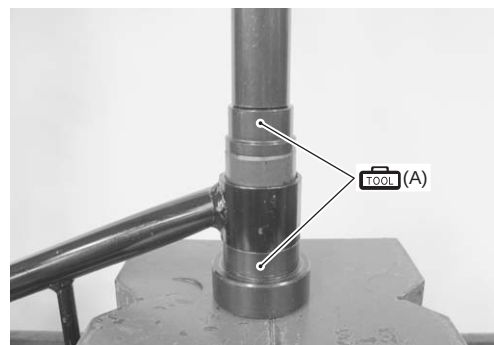

I931H1220052-01

Specifications

Service Data

B931H22207001

Suspension

Item	Standard	Limit
Front shock absorber spring adjuster	2/5 position	—

Tightening Torque Specifications

B931H22207002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front shock absorber mounting bolt (Upper)	55	5.5	40.0	☞ (Page 2B-3)
Front shock absorber mounting nut (Lower)	60	6.0	43.5	☞ (Page 2B-3) / ☞ (Page 2B-10)
Steering knuckle end nut	29	2.9	21.0	☞ (Page 2B-5)
Tie-rod end nut	29	2.9	21.0	☞ (Page 2B-6)
Front hub nut	110	11.0	79.5	☞ (Page 2B-7)
Suspension arm pivot nut (Lower)	65	6.5	47.0	☞ (Page 2B-10)
Suspension arm pivot nut (Upper)	60	6.0	43.5	☞ (Page 2B-10)

NOTE

The specified tightening torque is described in the following.

“Front Suspension Components (Page 2B-1)”

“Front Suspension Assembly Construction (Page 2B-2)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material

B931H22208001

Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease or equivalent	P/No.: 99000-25160	☞ (Page 2B-5) / ☞ (Page 2B-6) / ☞ (Page 2B-8) / ☞ (Page 2B-9) / ☞ (Page 2B-14)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000-32030	☞ (Page 2B-9)
	THREAD LOCK CEMENT SUPER 1322 or equivalent	P/No.: 99000-32110	☞ (Page 2B-6)

NOTE











Required service material is also described in the following.

“Front Suspension Components (Page 2B-1)”

“Front Suspension Assembly Construction (Page 2B-2)”

Special Tool

B931H22208002

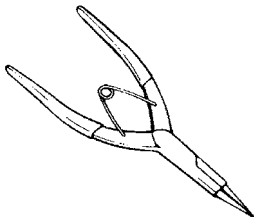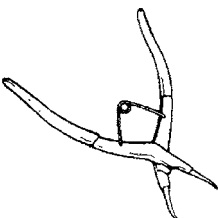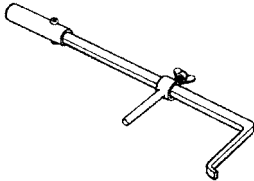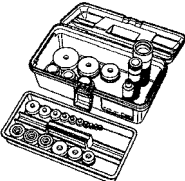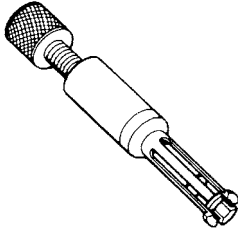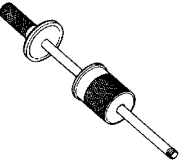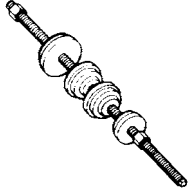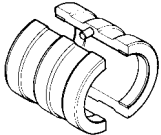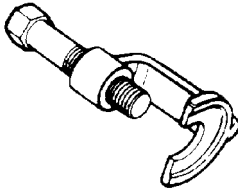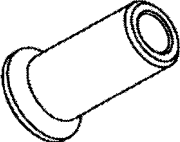
09900-06107 Snap ring remover (Open type) 🔧 (Page 2B-11) / 🔧 (Page 2B-11) / 🔧 (Page 2B-12) / 🔧 (Page 2B-12) 	09900-06108 Snap ring remover (Close type) 🔧 (Page 2B-7) / 🔧 (Page 2B-8) 
09913-50121 Oil seal remover 🔧 (Page 2B-7) / 🔧 (Page 2B-8) 	09913-70210 Bearing installer set (10 – 75) 🔧 (Page 2B-8) / 🔧 (Page 2B-8) / 🔧 (Page 2B-11) / 🔧 (Page 2B-11) / 🔧 (Page 2B-12) / 🔧 (Page 2B-14) / 🔧 (Page 2B-14) 
09923-73210 Bearing remover 🔧 (Page 2B-13) 	09930-30104 Rotor remover sliding shaft 🔧 (Page 2B-13) 
09941-34513 Bearing installer 🔧 (Page 2B-13) 	09941-53610 Front fork oil seal hammer 🔧 (Page 2B-11) 
09942-72410 Tie-rod end remover 🔧 (Page 2B-5) 	09942-83110 Clip remover 🔧 (Page 2B-3) 

Rear Suspension

Repair Instructions

Rear Suspension Components

B931H22306001

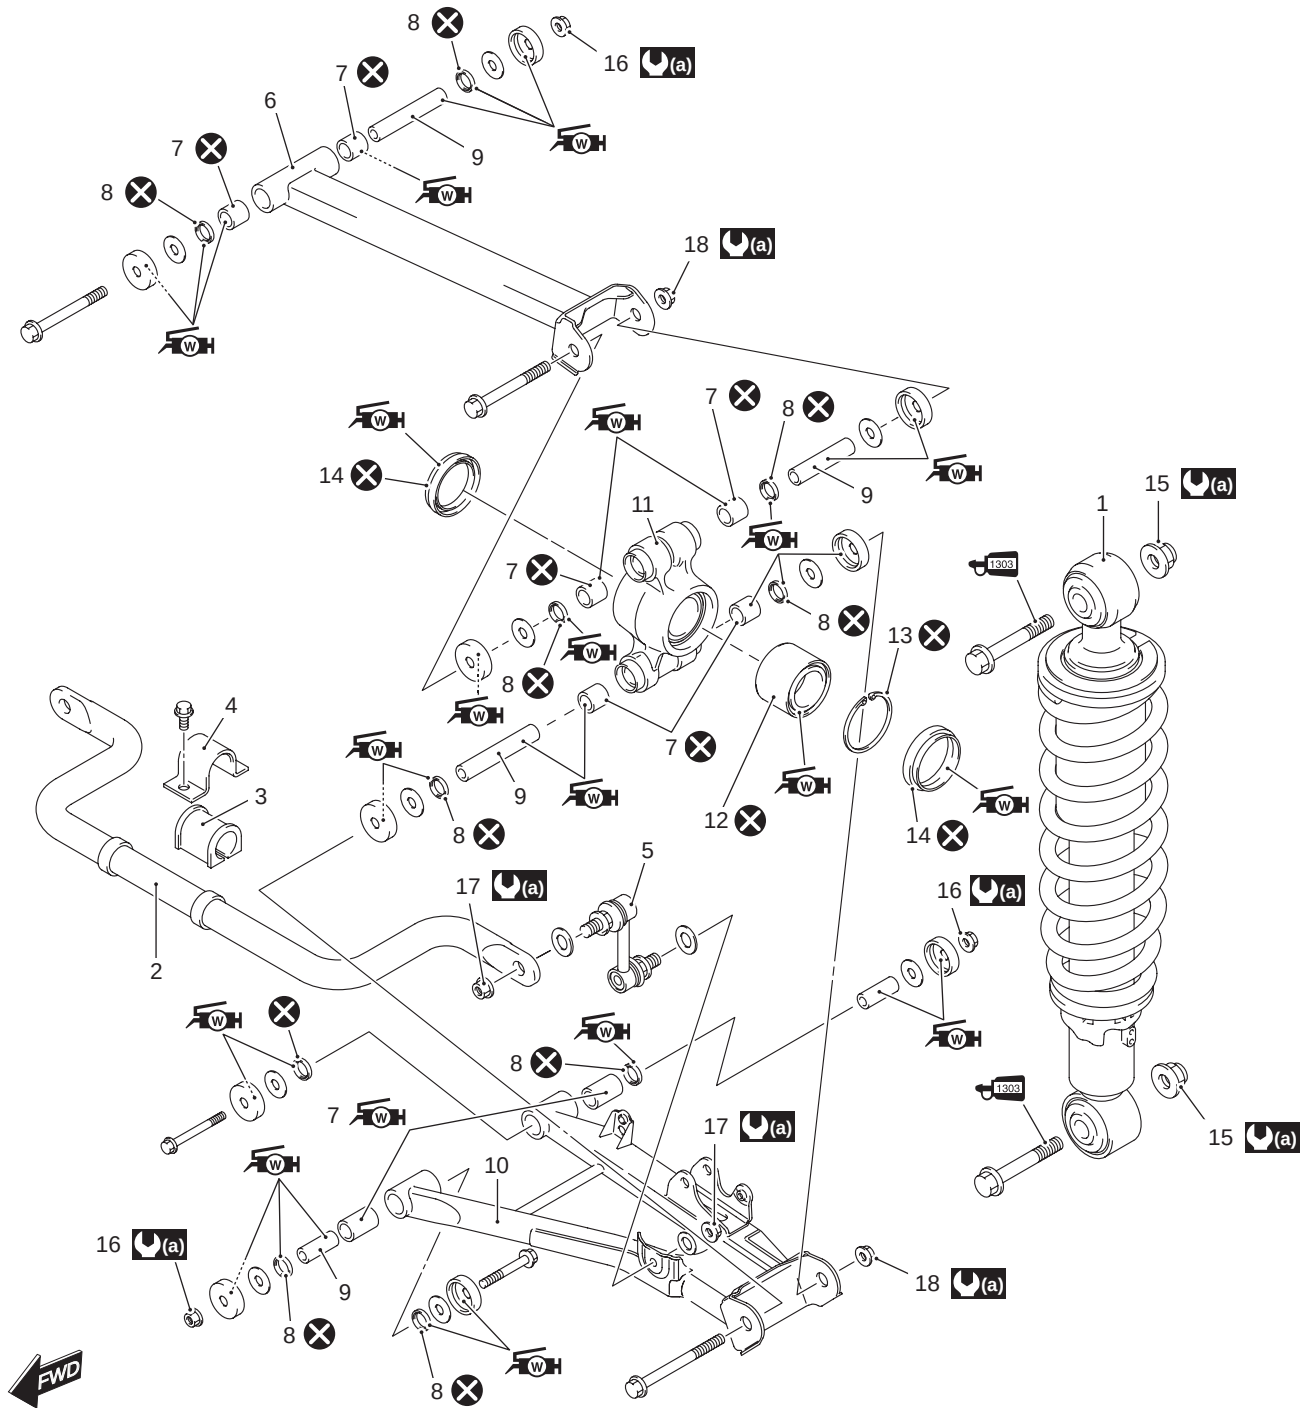


I931H1230056-06

1. Rear shock absorber	9. Spacer	17. Rear stabilizer joint nut
2. Rear stabilizer bar	10. Rear suspension arm (Lower)	18. Rear suspension knuckle nut
3. Rear stabilizer bracket	11. Rear suspension knuckle	(a) : 60 N·m (6.0 kgf-m, 43.5 lbf-ft)
4. Rear stabilizer bushing	12. Hub bearing	WH : Apply water resistance grease.
5. Rear stabilizer joint	13. Snap ring	1303 : Apply thread lock to thread part.
6. Rear suspension arm (Upper)	14. Dust seal	X : Do not reuse.
7. Bushing	15. Rear shock absorber mounting nut	
8. Inner dust seal	16. Rear suspension arm pivot nut	


Rear Suspension Assembly Construction

B931H22306002

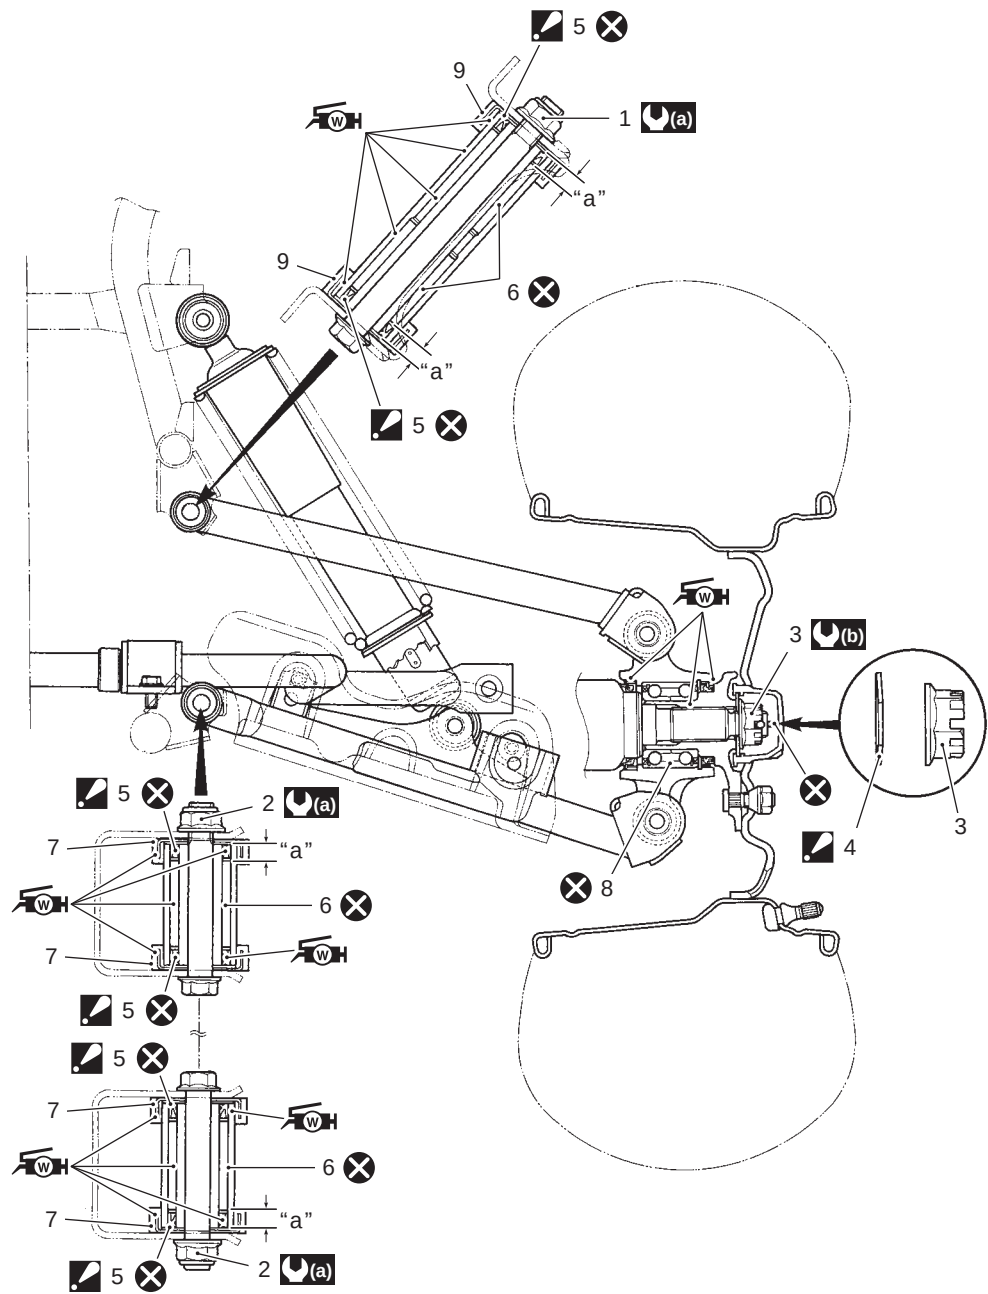

I931H1230060-04

1. Rear suspension arm pivot nut (Upper)	8. Rear hub bearing
2. Rear suspension arm pivot nut (Lower)	"a": 6.8 – 7.2 mm (0.27 – 0.28 in)
3. Rear wheel hub nut	⚙️(a) : 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
4. Washer : The conical side of washer faces outside.	⚙️(b) : 121 N·m (12.1 kgf·m, 87.5 lbf·ft)
5. Inner dust seal : Align the surface of dust seal with the edge of suspension arm.	WH : Apply water resistance grease.
6. Bushing	⊗ : Do not reuse.
7. Outer dust seal	

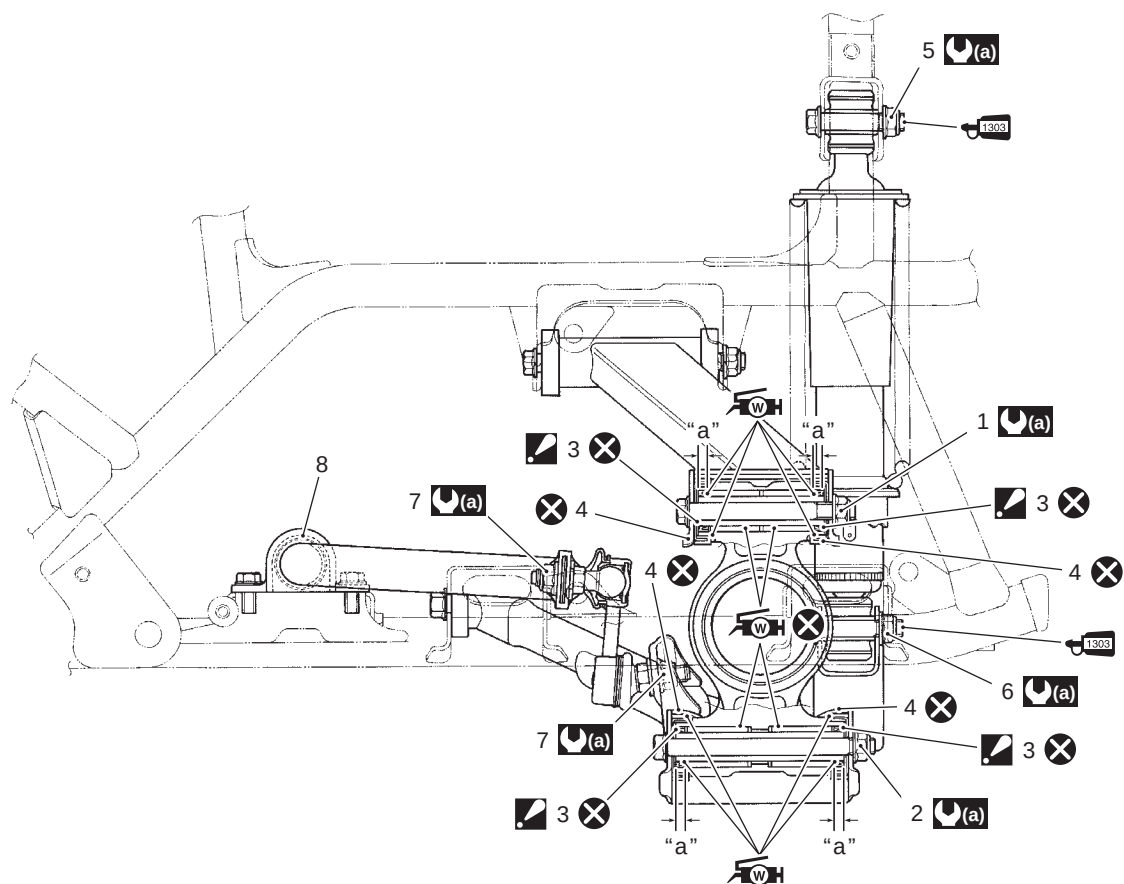

I931H1230061-05


1. Suspension knuckle nut (Upper)	8. Stabilizer bushing
2. Suspension knuckle nut (Lower)	"a": 6.8 – 7.2 mm (0.27 – 0.28 in)
3. Inner dust seal : Align the surface of dust seal with the edge of suspension arm.	(a) : 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
4. Outer dust seal	WH : Apply water resistance grease.
5. Rear shock absorber mounting nut (Upper)	1303 : Apply thread lock to the thread part.
6. Rear shock absorber mounting nut (Lower)	⊗ : Do not reuse.
7. Rear stabilizer joint nut	

Rear Shock Absorber Removal and Installation
B931H22306003

Removal


- 1) Place the vehicle on level ground and support the vehicle with a jack.
- 2) Remove the rear wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

- 3) Remove the rear drive shaft cover (1).

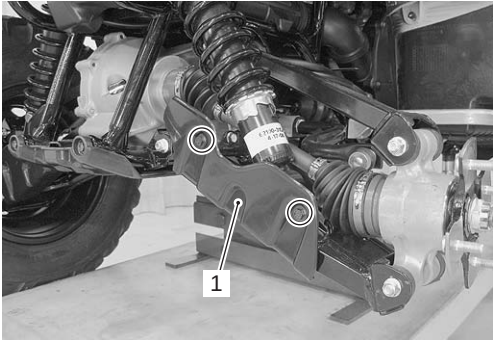

I931H1230001-01

- 4) Remove the shock absorber (2) by removing the shock absorber upper and lower mounting bolt and nut.

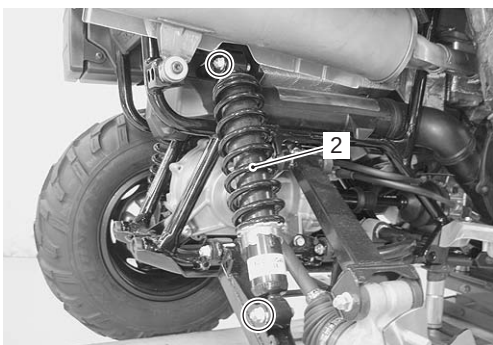

I931H1230002-01

Installation

Install the rear shock absorber in the reverse order of removal. Pay attention to the following points:

- Apply thread lock to the rear shock absorber mounting bolts.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- Tighten the rear shock absorber upper and lower mounting bolts and nuts.

Tightening torque

Rear shock absorber mounting nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)



I931H1230003-01

- Install the rear wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

Rear Suspension Inspection

B931H22306004

Refer to “Suspensions Inspection: in Section 0B”.

Rear Shock Absorber Inspection

B931H22306005

Inspect the rear shock absorber in the following procedures:

- 1) Remove the rear shock absorber. Refer to “Rear Shock Absorber Removal and Installation (Page 2C-3)”.

- 2) Inspect the rear shock absorber for damage and oil leakage, and absorber bushing for wear or damage. If any defects are found, replace the rear shock absorber with a new one.

⚠ CAUTION

Do not attempt to disassemble the rear shock absorber. It is unserviceable.



I931H1230004-01

- 3) Install the rear shock absorber. Refer to “Rear Shock Absorber Removal and Installation (Page 2C-3)”.

Spring Pre-load Adjustment

B931H22306006

⚠ WARNING

Be sure to adjust the spring pre-load on the both suspensions equally.

After installing the rear suspension, adjust the spring pre-load as follows:



- Turn the spring tension ring (1) to the desired position.

NOTE

Position 1 provides the softest spring tension and position 5 provides the stiffest.

STD Position

2nd position

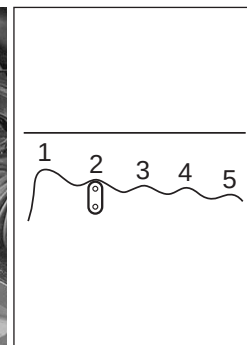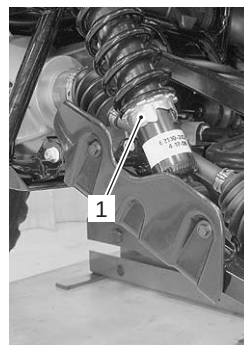

I931H1230005-01

Rear Wheel Hub / Suspension Knuckle Removal and Installation


B931H22306007

NOTE

The right and left suspension parts are installed procedure for one side is the same as that for the other side.

Removal

- 1) Remove the cotter pin (1) and loosen the hub nut (2).

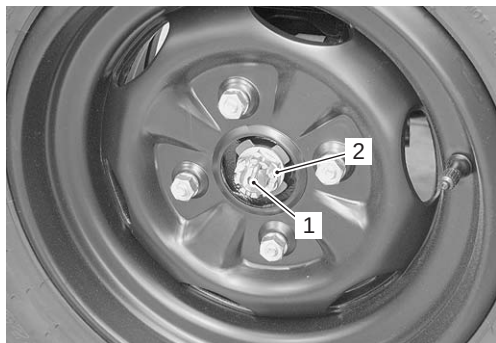


I931H1230006-01

- 2) Remove the rear wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

⚠ CAUTION


Make sure that the vehicle is supported securely.

- 3) Remove the hub nut (3), washer (4) and rear wheel hub (5).

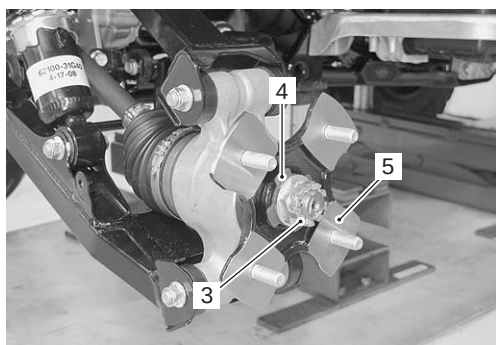

I931H1230007-01

- 4) Remove the suspension knuckle upper and lower bolts and nuts.
- 5) Remove the rear suspension knuckle (6).

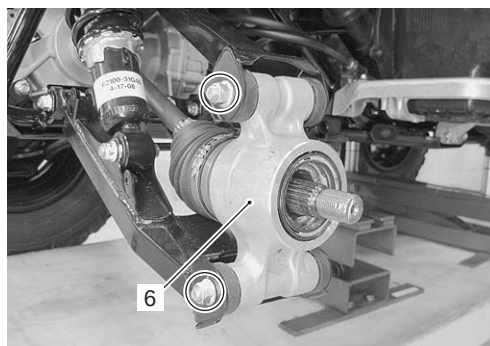


I931H1230008-01

Installation

- Apply grease to the lip of outer dust seal.

 **Grease 99000-25160 (Water resistance grease or equivalent)**


- Install the rear wheel hub (1) to the rear suspension knuckle (2).

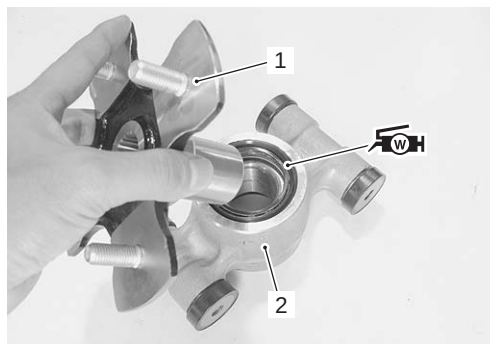

I931H1230009-01

- Apply grease to the lip of outer dust seal and rear wheel hub spline.

 **Grease 99000-25160 (Water resistance grease or equivalent)**

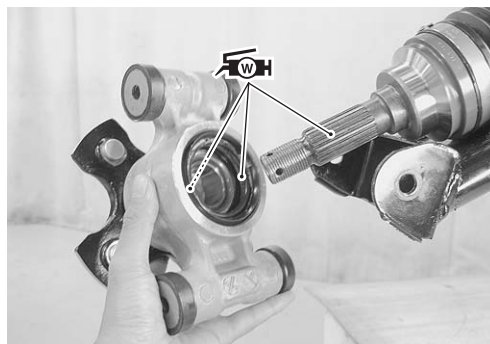


I931H1230010-01

- Tighten the rear knuckle nuts (3) to the specified torque.

Tightening torque

Rear suspension knuckle nut (Upper and Lower)
(a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

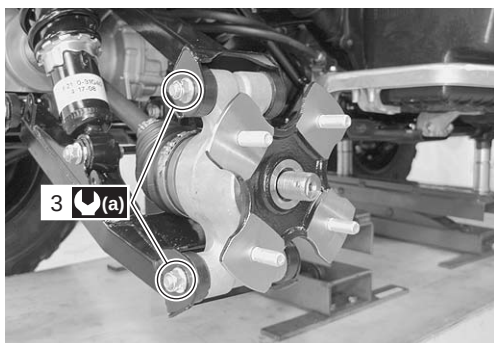


I931H1230011-01

- Install the washer (4) and hub nut (5).

NOTE

The conical side of washer (4) faces outside.
Refer to "Rear Suspension Assembly Construction (Page 2C-2)".

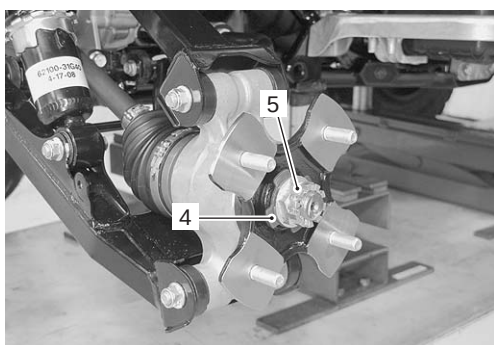

I931H1230012-01

- Install the rear wheel assembly. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".
- Tighten the hub nut (5) to the specified torque.

Tightening torque

Rear wheel hub nut (b): 121 N·m (12.1 kgf-m, 87.5 lbf-ft)

- Install the cotter pin (6).

⚠ CAUTION

The removed cotter pin (6) must be replaced with a new one.




I931H1230013-01

Rear Hub Bearing Inspection

B931H22306008

Inspect the inner race play of the rear hub bearing by hand while it is in the rear knuckle.

Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. If there is anything unusual, replace the rear hub bearing with a new one.

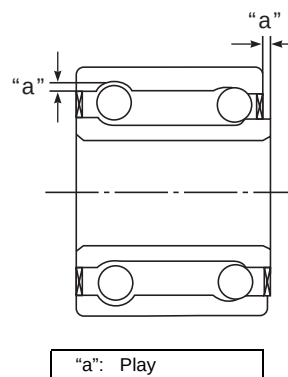

I831G1220024-02

"a": Play

Rear Hub Bearing Removal and Installation


B931H22306009

Removal

- Remove the outer dust seal (1) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)

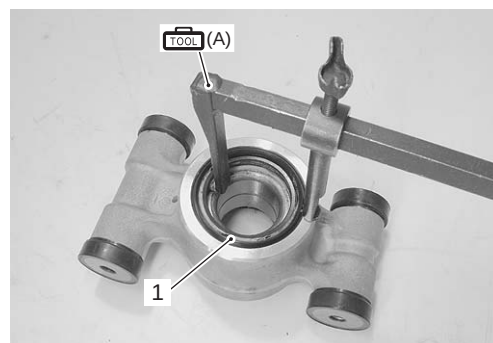


I931H1230014-01

2C-7 Rear Suspension:

2) Remove the snap ring (2) with the special tool.

Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

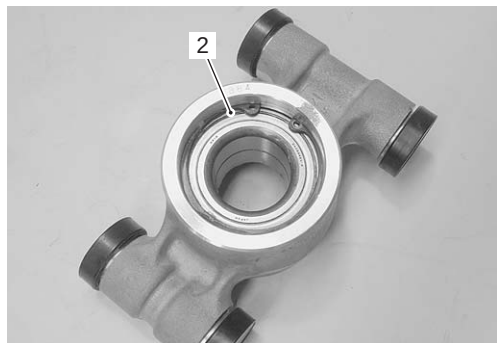


I931H1230015-01

3) Remove the inner dust seal (3) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)

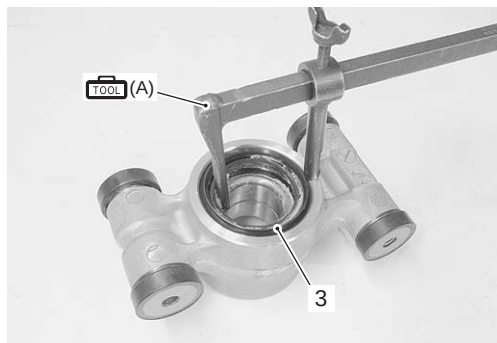


I931H1230016-01

4) Remove the hub bearing (4) using the hydraulic press and special tool.

Special tool

TOOL (B): 09913-70210 (Bearing installer set (10 - 75))

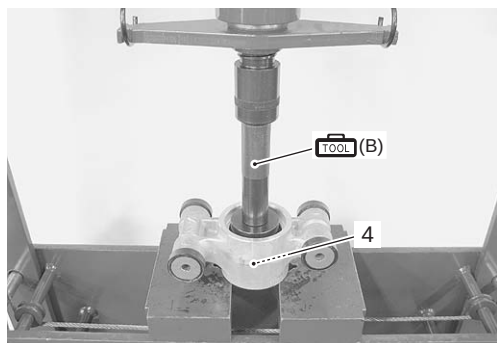

I931H1230017-01

Installation

Install the hub bearing in the reverse order of removal. Pay attention to the following points:

- Install the hub bearing (1) using the hydraulic press and special tool.

⚠ CAUTION


Never reuse wheel hub bearing.

NOTE


The sealed side "A" of hub bearing (1) faces inside.

Special tool

TOOL (A): 09913-75520 (Bearing installing tool)

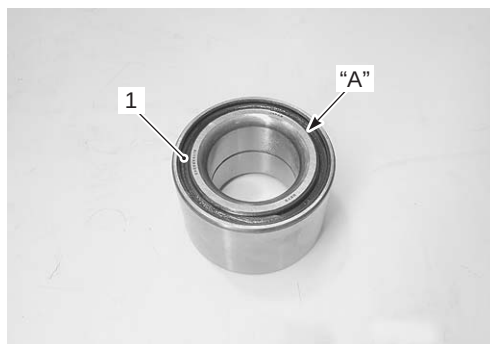

I931H1230018-01

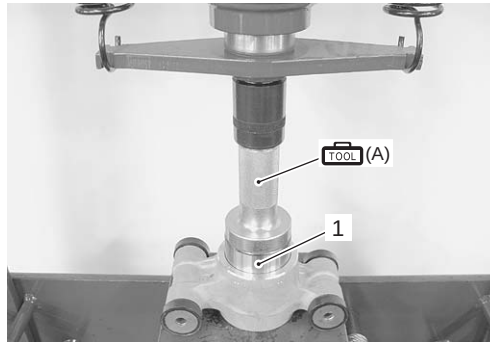

I931H1230019-02

- Install the snap ring (2) with the special tool.

⚠ CAUTION

Never reuse snap ring (2).

Special tool

 : 09900-06108 (Snap ring remover (Close type))



I831G1230021-01

- Install a new inner dust seal (3) using a suitable size socket wrench.

⚠ CAUTION

Replace the inner dust seal (3) with a new one.

- Apply grease to the lip of inner dust seal (3).

 : Grease 99000-25160 (Water resistance grease or equivalent)



I831G1230022-01

- Install a new outer dust seal (4) using a suitable size socket wrench.

⚠ CAUTION

Replace the outer dust seal (4) with a new one.

- Apply grease to the lip of outer dust seal (4).

 : Grease 99000-25160 (Water resistance grease or equivalent)



I831G1230023-02

Rear Suspension Arm Upper / Lower Removal and Installation

B931H22306010


Removal

- 1) Remove the rear wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

⚠ CAUTION

Make sure that the vehicle is supported securely.


- 2) Remove the rear drive shaft cover (1).

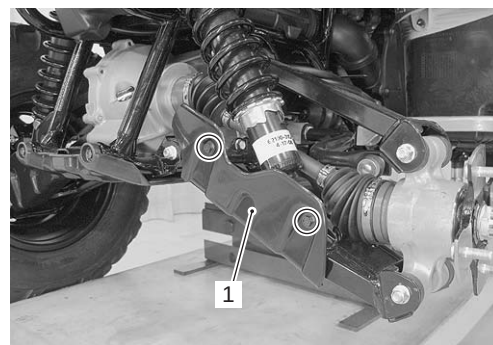

I931H1230020-01

- 3) Remove the rear suspension knuckle. Refer to “Rear Wheel Hub / Suspension Knuckle Removal and Installation (Page 2C-5)”.


- 4) Remove the rear upper suspension arm (2).

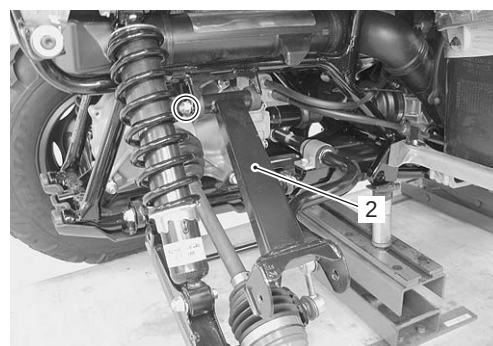

I931H1230021-01


2C-9 Rear Suspension:

- 5) Disconnect the stabilizer joint (3) from the rear suspension lower arm (4).
- 6) Remove the shock absorber mounting lower bolt (5) and nut (6).

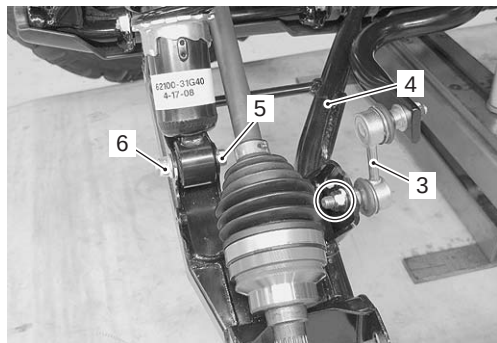

I931H1230022-01

- 7) Remove the rear suspension lower arm (4).

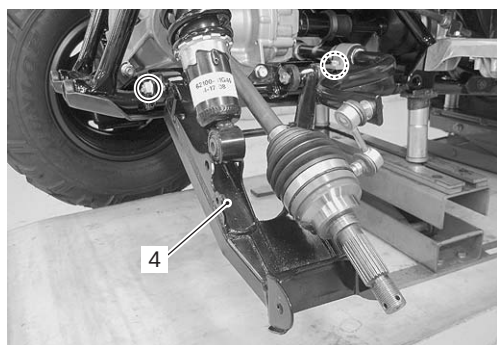


I931H1230023-01

Installation

Install the suspension arms in the reverse order of removal. Pay attention to the following points.

- Tighten the suspension arm pivot nuts (1).

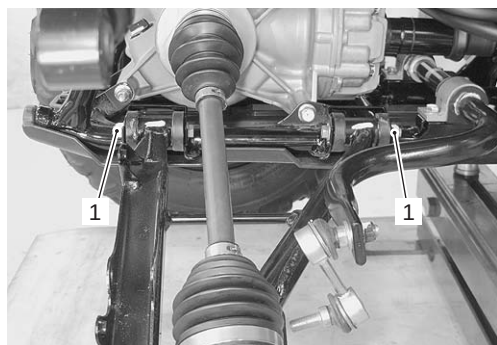

I931H1230024-02

- Apply thread lock to the shock absorber mounting bolts.

 : **Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)**

- Tighten the shock absorber mounting lower bolt and nut to the specified torque.


Tightening torque

Rear shock absorber mounting nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

- Connect the stabilizer joint by tightening the joint nut to the specified torque.


Tightening torque

Rear stabilizer joint nut (b): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

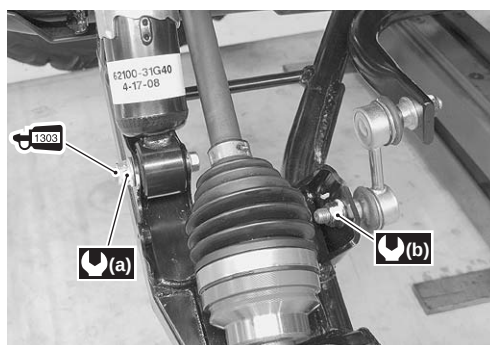

I931H1230025-02

- Tighten the suspension arm upper pivot nut (2).

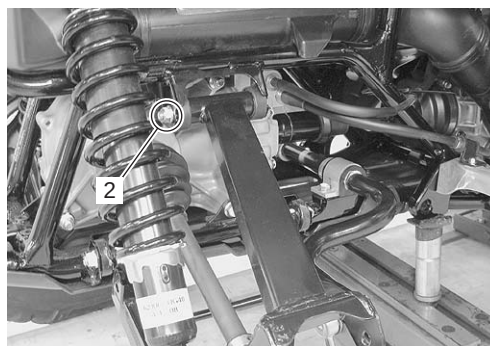

I931H1230026-03

- Install the rear suspension knuckle arm and wheel hub. Refer to "Rear Wheel Hub / Suspension Knuckle Removal and Installation (Page 2C-5)".

- Keep a vehicle on a level ground. Next loosen each pivot nut and tighten them to the specified torque again.

Tightening torque

Suspension arm lower pivot nut: 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

Suspension arm upper pivot nut: 60 N·m (6.0 kgf-m, 43.5 lbf-ft)


Rear Suspension Arm Related Parts Inspection

B931H22306011

Refer to "Rear Suspension Arm Upper / Lower Removal and Installation (Page 2C-8)".

Upper Arm

- 1) Inspect the following parts for wear or damage. If any defects are found, replace defective parts with new ones.
 - Suspension upper arm (1)
 - Dust seal (2)
 - Washer (3)
 - Spacer (4)

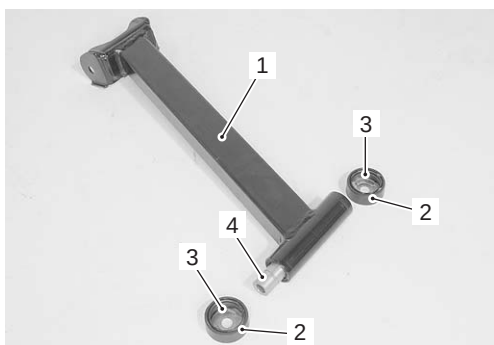

I931H1230027-02


- 2) Insert the spacer into bushings.
- 3) Check the play by moving the spacer up and down. If excessive play is noted, replace the bushings with a new one. Refer to "Rear Suspension Upper Arm Bushing and Inner Dust Seal Removal and Installation (Page 2C-11)".



I931H1230028-01


Lower Arm

- 1) Inspect the following parts for wear or damage. If any defects are found, replace defective parts with new ones.
 - Suspension lower arm (1)
 - Dust seal (2)
 - Washer (3)
 - Spacer (4)

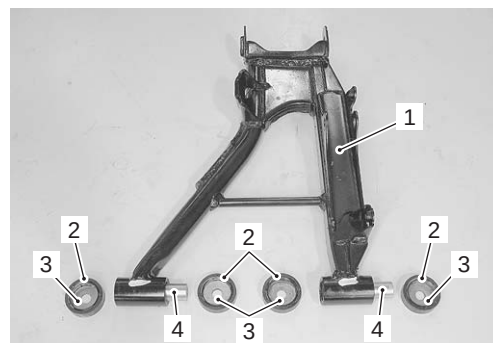

I931H1230029-01

- 2) Insert the spacer into bushings.
- 3) Check the play by moving the spacer up and down. If excessive play is noted, replace the bushings with a new one. Refer to "Rear Suspension Lower Arm Bushing and Inner Dust Seal Removal and Installation (Page 2C-12)".

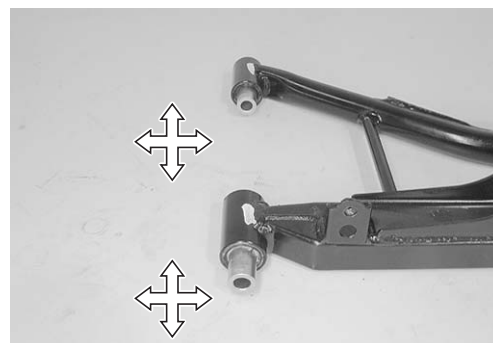


I931H1230030-01

2C-11 Rear Suspension:

Suspension Knuckle

1) Inspect the following parts for wear or damage. If any defects are found, replace defective parts with new ones.

- Suspension knuckle (1)
- Dust seal (2)
- Washer (3)
- Spacer (4)

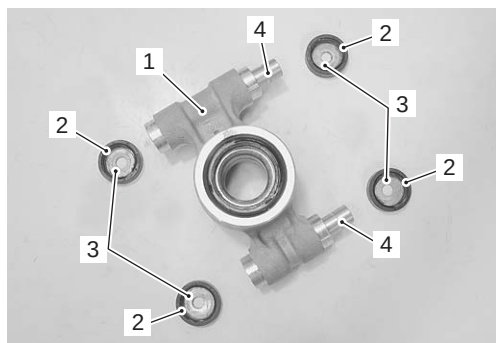

I931H1230031-01

2) Insert the spacer into bushings.

3) Check the play by moving the spacer up and down. If excessive play is noted, replace the bushings with a new one. Refer to "Rear Suspension Upper Arm Bushing and Inner Dust Seal Removal and Installation (Page 2C-11)".



I931H1230057-01

Rear Suspension Upper Arm Bushing and Inner Dust Seal Removal and Installation


B931H22306012

Refer to "Rear Suspension Arm Upper / Lower Removal and Installation (Page 2C-8)".

Removal

1) Remove the following parts from the rear suspension upper arm.

- Dust seal (1)
- Washer (2)
- Spacer (3)

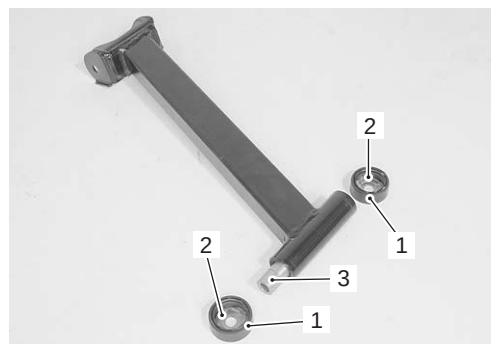


I931H1230032-01

2) Remove the rear upper suspension arm bushings (4) along with inner dust seals (5) with the special tools.

Special tool

 : 09923-73210 (Bearing remover)

 : 09930-30104 (Rotor remover slide shaft)

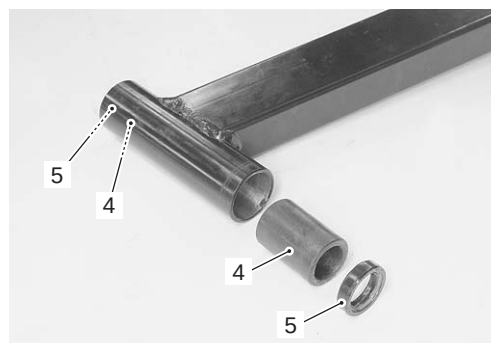

I931H1230033-01

Installation

- 1) Install the rear suspension upper arm bushings (1) and inner dust seals (2) with the special tool and suitable socket wrench.

NOTE


Position the bushings and dust seals by referring to "Rear Suspension Assembly Construction (Page 2C-2)".

⚠ CAUTION


The removed bushings and dust seals must be replaced with new ones.

Special tool

-  (A): 09941-34513 (Bearing installer)
 (B): 09924-84510 (Bearing installer set)

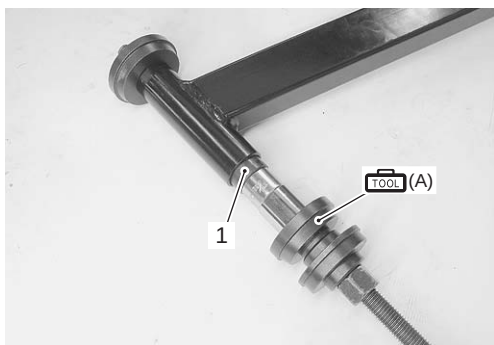

I931H1230034-01

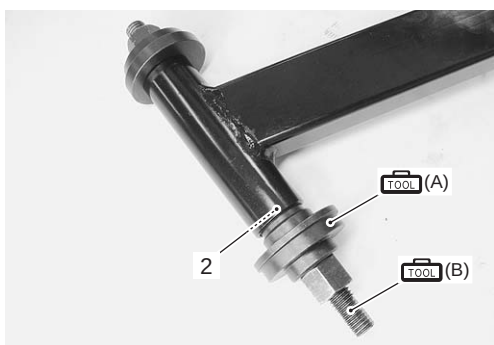


I931H1230035-01

- 2) Apply grease to the lip of inner dust seals, spacer (3) and inside of dust seals (4).

 : Grease 99000-25160 (Water resistance grease or equivalent)

- 3) Install the washers (5) and dust seals (4) to the rear suspension upper arm.

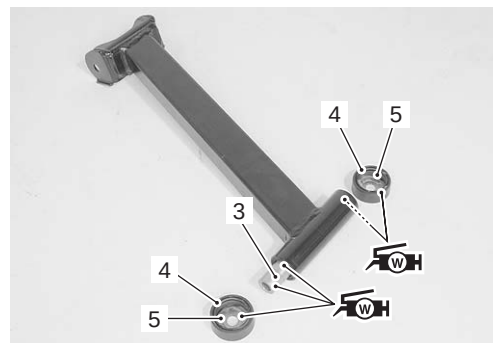

I931H1230036-01


Rear Suspension Lower Arm Bushing and Inner Dust Seal Removal and Installation

B931H22306013

Refer to "Rear Suspension Arm Upper / Lower Removal and Installation (Page 2C-8)".

Removal

- 1) Remove the following parts from the rear suspension lower arm.
 - Dust seal (1)
 - Washer (2)
 - Spacer (3)

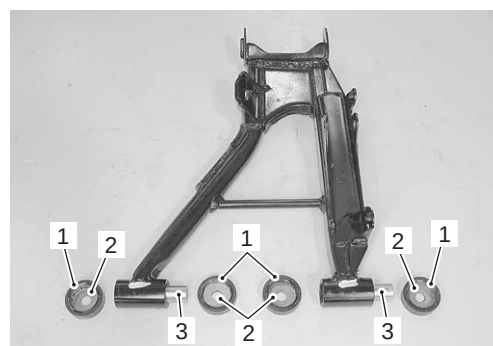

I931H1230037-01


2C-13 Rear Suspension:

- 2) Remove the rear suspension lower arm bushings (4) along with the inner dust seals (5) with the special tools.

Special tool

 : 09923-73210 (Bearing remover)

 : 09930-30104 (Rotor remover slide shaft)

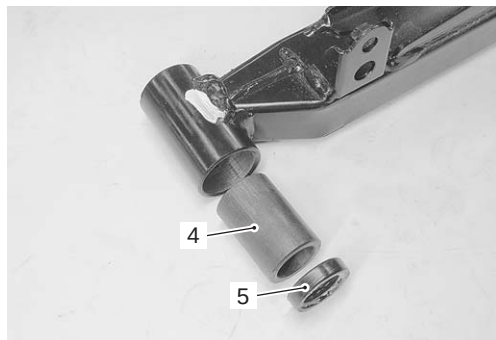


I931H1230038-01

- 3) Remove the another inner dust seal (6) with the special tool.

Special tool

 (A): 09943-88211 (Pinion bearing installer)

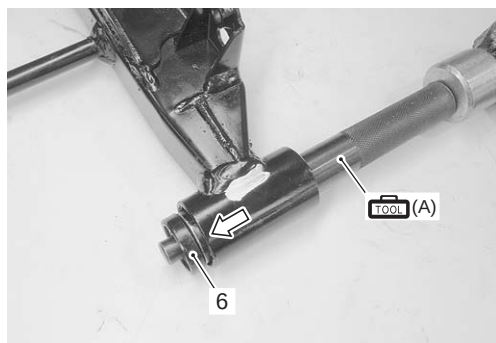

I931H1230039-01

Installation

- 1) Install the rear lower arm bushings (1) and inner dust seals (2) with the special tool and suitable socket.

NOTE

Position the bushings and dust seals by referring to "Rear Suspension Assembly Construction (Page 2C-2)".


⚠ CAUTION

The removed bushings and dust seals must be replaced with new ones.


Special tool

 (A): 09941-34513 (Bearing installer)

 (B): 09924-84510 (Bearing installer set)

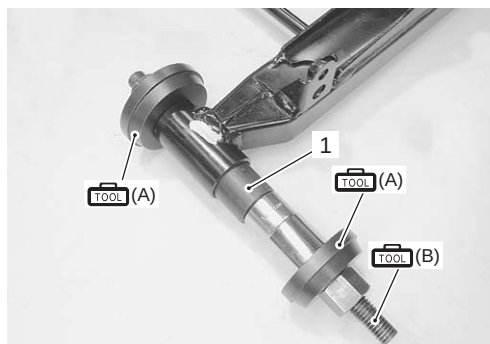

I931H1230040-01

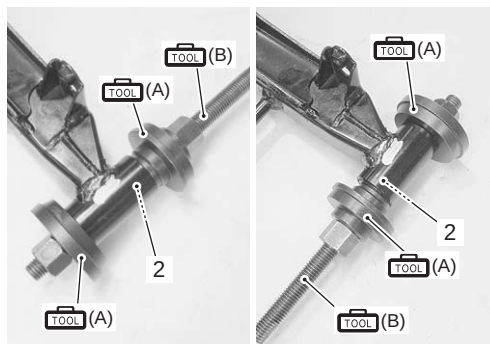


I931H1230041-01

- 2) Apply grease to the lip of inner dust seals, spacer (3) and inside of dust seals (4).

 : Grease 99000-25160 (Water resistance grease or equivalent)

- 3) Install the spacer (3), dust seals (4) and washers (5).

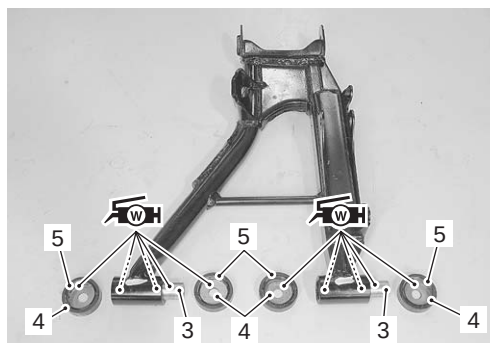

I931H1230058-01


Rear Suspension Knuckle Bushing and Inner Dust Seal Removal and Installation

B931H22306014

Refer to "Rear Wheel Hub / Suspension Knuckle Removal and Installation (Page 2C-5)".

Removal

- 1) Remove the following parts from the suspension knuckle.
 - Dust seal (1)
 - Washer (2)
 - Spacer (3)

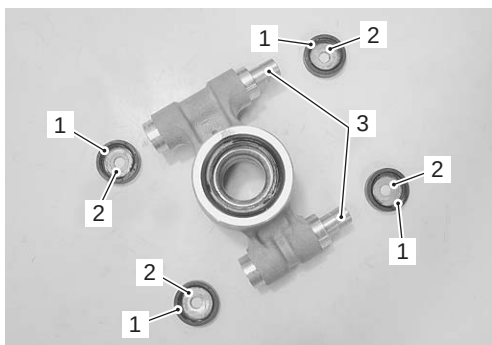


I931H1230042-01

- 2) Remove the suspension knuckle bushings (1) along with inner dust seals (2) with the special tools.

Special tool

-  : 09923-73210 (Bearing remover)
-  : 09930-30104 (Rotor remover slide shaft)

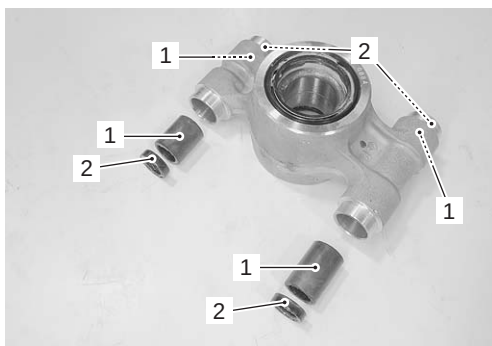

I931H1230043-01

Installation

- 1) Install the suspension knuckle bushings (1) and inner dust seals (2) with the special tool and suitable socket wrench.

NOTE


Position the bushings and dust seals by referring to "Rear Suspension Assembly Construction (Page 2C-2)".

⚠ CAUTION


The removed bushings and dust seals must be replaced with new ones.

Special tool

-  (A): 09941-34513 (Bearing installer)
-  (B): 09924-84510 (Bearing installer set)

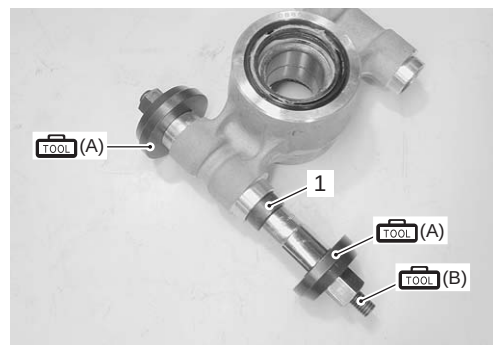

I931H1230044-01

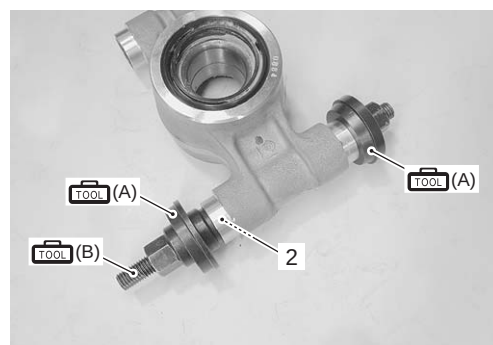


I931H1230045-01

2C-15 Rear Suspension:

- 2) Apply grease to the lip of the inner dust seals, spacer (1) and inside of dust seals (2).

 : Grease 99000-25160 (Water resistance grease or equivalent)

- 3) Install the spacers (1), dust seals (2) and washers (3).

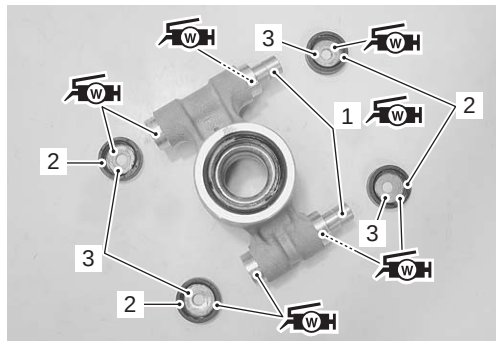

I931H1230046-01

Rear Stabilizer Removal and Installation

B931H22306015


Removal

- 1) Remove the rear wheels. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

CAUTION


Make sure that the vehicle is supported securely.

- 2) Disconnect the stabilizer joints (1) from the rear suspension lower arm and stabilizer bar.

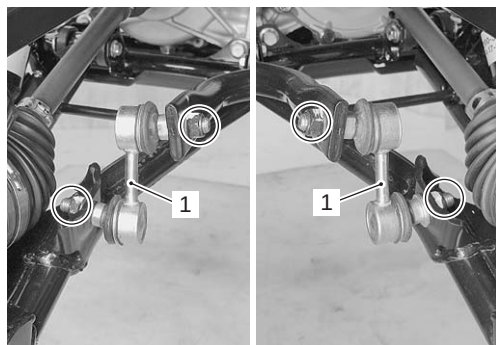


I931H1230047-01

- 3) Remove the stabilizer plates (2).

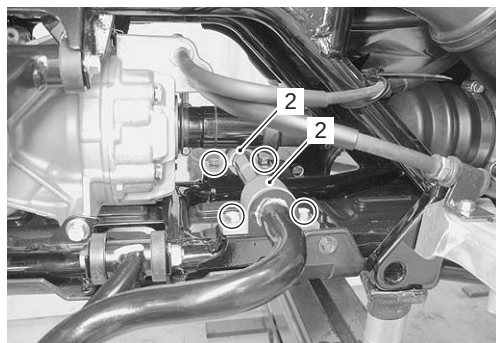


I931H1230048-01

- 4) Remove the stabilizer bar (3).

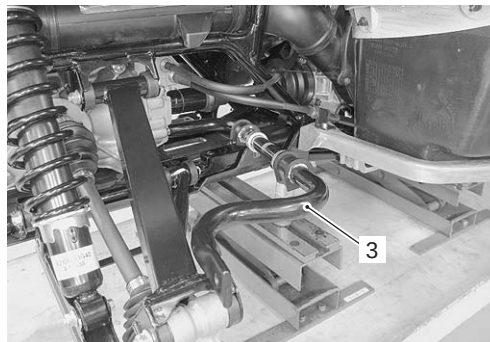

I931H1230049-01

- 5) Remove the stabilizer bushings (4).

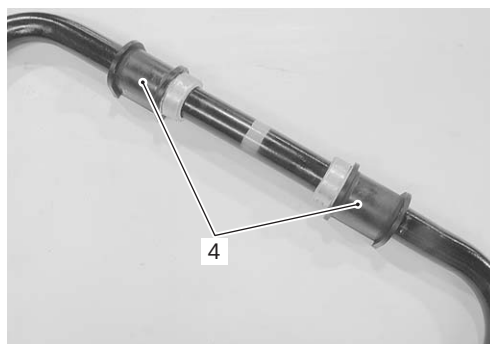


I931H1230050-01

Installation

Install the stabilizer in the reverse order of removal. Pay attention to the following points:


- Apply thread lock to the stabilizer plate mounting bolts and tighten the bolts securely.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

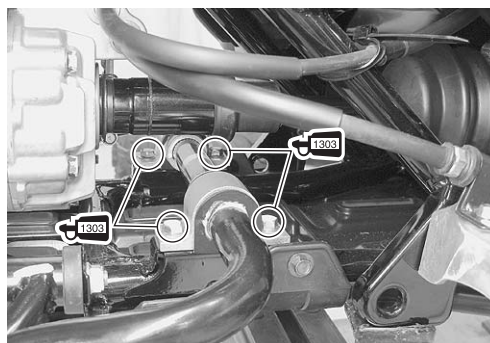

I931H1230051-01

- Install the washers (1) as shown.

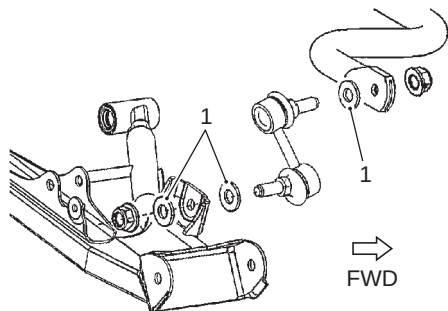


I931H1230059-02

- Tighten the stabilizer joint nuts (2) to the specified torque.

Tightening torque

Rear stabilizer joint nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

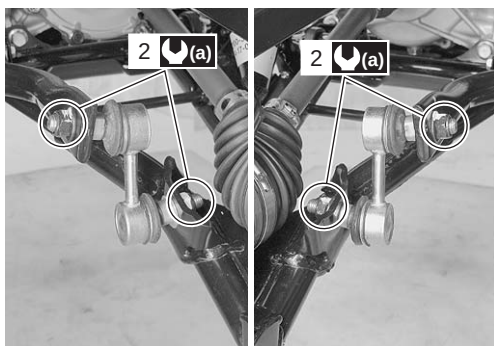

I931H1230052-01

Stabilizer Parts Inspection

B931H22306016

Refer to "Rear Stabilizer Removal and Installation (Page 2C-15)".

Stabilizer Bar

Inspect for damage or deformation. If any defects are found, replace the stabilizer bar with a new one.



I931H1230053-01

Stabilizer Bushing / Plate

Inspect the bushing and plate for wear or damage. If any defects are found, replace the bushing and/or plate with a new one.



I931H1230054-01

Stabilizer Joint

Inspect the stabilizer joint for wear or damage. If any defects are found, replace the stabilizer joint with a new one.

Inspect the stabilizer joint smooth movement. If there are any abnormalities, replace the stabilizer joint with a new one.

NOTE

Stabilizer joint (1) cannot be disassembled.



I931H1230055-01

Specifications

Service Data

B931H22307001

Suspension

Item	Standard	Limit
Rear shock absorber spring adjustor	2/5 position	—

Tightening Torque Specifications

B931H22307002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Rear shock absorber mounting nut	60	6.0	43.5	☞ (Page 2C-4) / ☞ (Page 2C-9)
Rear suspension knuckle nut (Upper and Lower)	60	6.0	43.5	☞ (Page 2C-6)
Rear wheel hub nut	121	12.1	87.5	☞ (Page 2C-6)
Rear stabilizer joint nut	60	6.0	43.5	☞ (Page 2C-9) / ☞ (Page 2C-16)
Suspension arm lower pivot nut	60	6.0	43.5	☞ (Page 2C-10)
Suspension arm upper pivot nut	60	6.0	43.5	☞ (Page 2C-10)

NOTE

The specified tightening torque is described in the following.

“Rear Suspension Components (Page 2C-1)”

“Rear Suspension Assembly Construction (Page 2C-2)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H22308001

Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease or equivalent	P/No.: 99000–25160	☞ (Page 2C-5) / ☞ (Page 2C-5) / ☞ (Page 2C-8) / ☞ (Page 2C-8) / ☞ (Page 2C-12) / ☞ (Page 2C-13) / ☞ (Page 2C-15)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 2C-4) / ☞ (Page 2C-9) / ☞ (Page 2C-15)









NOTE

Required service material is also described in the following.

“Rear Suspension Components (Page 2C-1)”

“Rear Suspension Assembly Construction (Page 2C-2)”

Special Tool

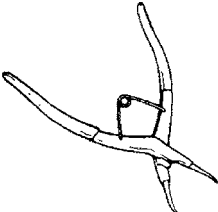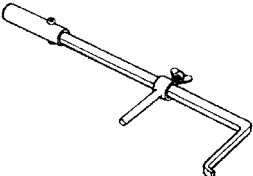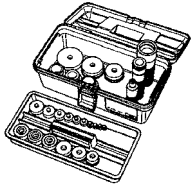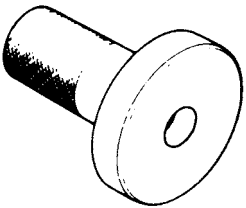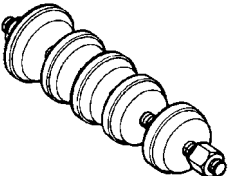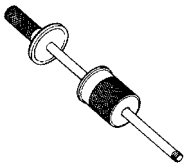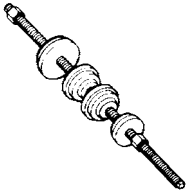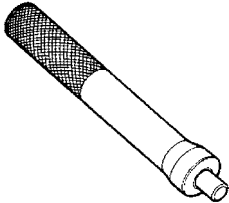09900-06108 Snap ring remover (Close type) (Page 2C-7) / (Page 2C-8)		09913-50121 Oil seal remover (Page 2C-6) / (Page 2C-7)	
09913-70210 Bearing installer set (10 – 75) (Page 2C-7)		09913-75520 Bearing installing tool (Page 2C-7)	
09923-73210 Bearing remover (Page 2C-11) / (Page 2C-13) / (Page 2C-14)		09924-84510 Bearing installer set (Page 2C-12) / (Page 2C-13) / (Page 2C-14)	
09930-30104 Rotor remover sliding shaft (Page 2C-11) / (Page 2C-13) / (Page 2C-14)		09941-34513 Bearing installer (Page 2C-12) / (Page 2C-13) / (Page 2C-14)	
09943-88211 Pinion bearing installer (Page 2C-13)			

Wheels and Tires

Precautions

Precautions for Wheel and Tire

B931H22400001


⚠ WARNING

- Proper tire pressure and proper tire loading are important factors. Over loading tire can lead to tire failure and loss of vehicle control.
- Using improper tires or tires with improper or uneven air pressure may affect tire wear and loss of vehicle control.
- Replace the wheel if find damage such as crack, nick or scratch.
- When tire replacement is necessary, the original equipment type tire should be used.
- Do not mix different types of tires on the same vehicle, because handling may be seriously affected and may result in loss of control.
- Replacement wheel must be equivalent to the original equivalent wheel.

Repair Instructions

Front and Rear Wheel Components

B931H22406001

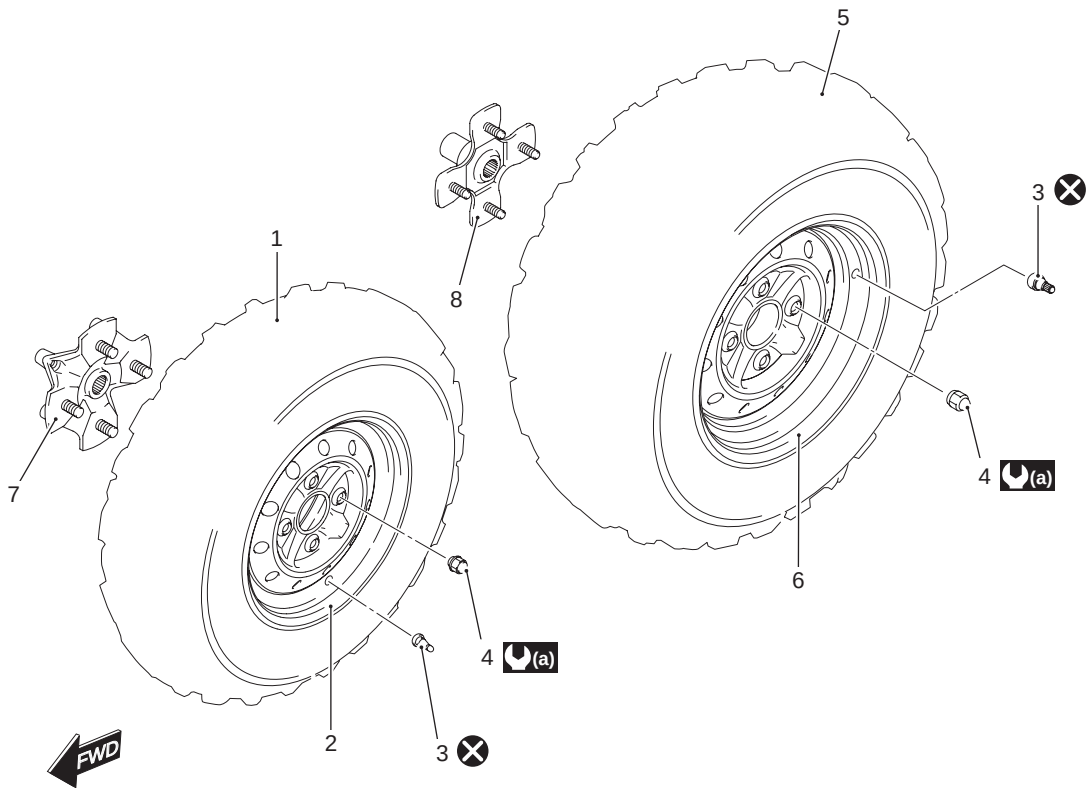

I831G1240001-01

1. Front tire	6. Rear wheel
2. Front wheel	7. Front wheel hub
3. Front wheel air valve	8. Rear wheel hub
4. Wheel nut	⚙️(a) : 60 N·m (6.0 kgf-m, 43.5 lbf-ft)
5. Rear tire	⚠ : Do not reuse.

Front / Rear Wheel Removal and Installation

B931H22406002

NOTE

The front and rear wheels are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

Removal

- 1) Place the vehicle on level ground.
- 2) Support the vehicle with a jack or wooden block.

⚠ CAUTION

Make sure that the vehicle is supported securely.

- 3) Remove the wheel.



I931H1240001-01

Installation

Install the wheel in the reverse order of removal. Pay attention to the following points:

- Install the wheel and tighten the wheel nuts temporarily.

⚠ WARNING

The directional arrow on the tire should point to the wheel rotation, when remounting the wheel.



I931H1240002-01


- Tighten the wheel set nuts to the specified torque.

NOTE

Tighten the wheel set nuts diagonally.

Tightening torque

Wheel set nut (Front and Rear) (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

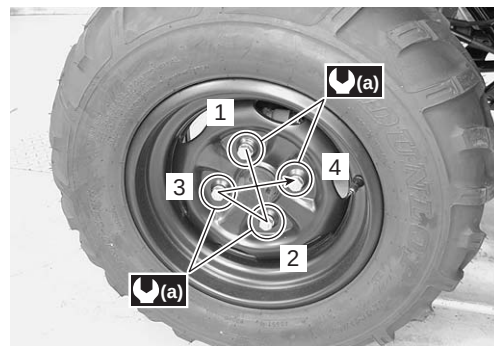

I931H1240003-02

Tire Removal and Installation


B931H22406003

- 1) Remove the wheel from vehicle. Refer to "Front / Rear Wheel Removal and Installation (Page 2D-2)".
- 2) After removing the air valve caps, release the tire pressure by depressing the valves.

NOTE

To properly remove the tire, if a pneumatic tire changer is not available, remove the tire as shown in the following procedures.

- 3) Dismount the bead from the rim completely as shown in the figure.

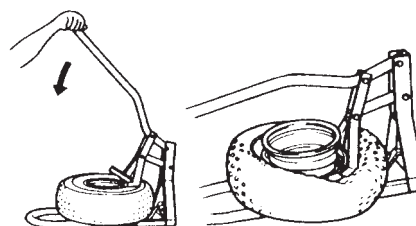


I831G1240005-01

2D-3 Wheels and Tires:

- 4) Separate the tire from the rim using a set of tire levers and rim protectors.

⚠ CAUTION

When using the tire levers, do not scratch or hit the sealing portion (hump) of the wheel or it may cause air-leakage.

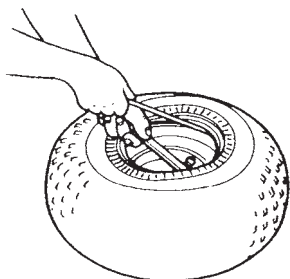


I831G1240006-01

- 5) After removing the tire, inspect the wheel if necessary.

Installation

- 1) Clean up the sealing portion of the rim.

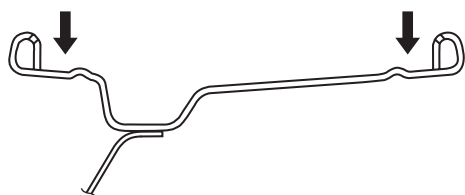


I831G1240007-02

- 2) Apply tire lubricant to the tire bead and the flange of the rim.

⚠ CAUTION

Never apply grease, oil or gasoline to the tire bead because they will deteriorate the tire.

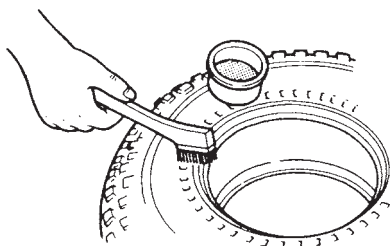


I831G1240008-01

⚠ CAUTION


The standard tire fitted on this vehicle is AT25 x 8-12 ☆☆ for the front and AT25 x 10-12 ☆☆ for the rear. The use of tires other than the standard may cause instability. It is highly recommended to use the specified tire.

- 3) Mount the tire on the rim by hand as shown in the figure.

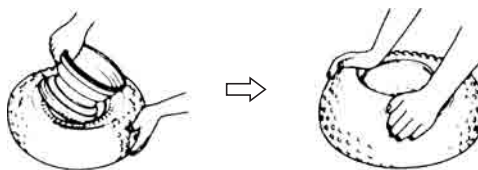

I831G1240009-02

- 4) When installing each tire, make sure the arrow "A" on the tire points in the direction of rotation. Also, make sure the outer side of the wheel rim is facing outward.

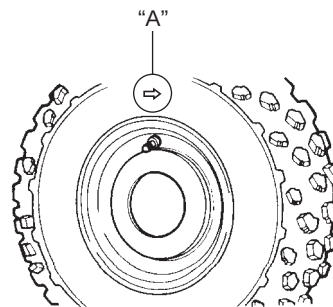

I831G1240010-01

- 5) Inflate the tire to seat the tire bead.


Maximum tire bead seat pressure

Front: 250 kPa (2.5 kgf/cm², 36 psi)

Rear: 250 kPa (2.5 kgf/cm², 36 psi)

⚠ CAUTION


Place the tire under a protective tire cage or similar protective covering device before inflating the tire. To minimize the possibility of tire damage when seating the tire bead, never exceed the MAXIMUM TIRE BEAD SEAT PRESSURE rating shown on the tire.

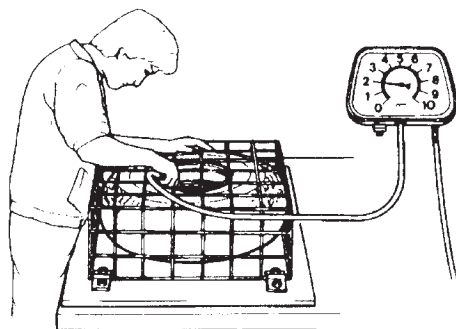

I831G1240011-02

NOTE

Check the “rim line” “B” cast on the tire sidewalls. It must be equidistant from the wheel rim all the way around. If the distance between the rim line and the wheel rim varies, this indicates that the bead is not properly seated. If this is so, deflate the tire completely, and unseat the tire bead on both sides. Then, coat the bead with clean water, and re-seat the tire.

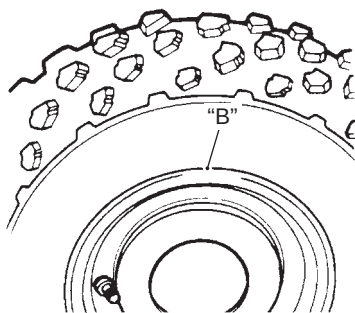

I831G1240012-02

6) Adjust the tire pressure to the specified pressure.

Cold inflation tire pressure

Front: 35 kPa (0.35 kgf/cm², 5.1 psi)

Rear: 30 kPa (0.30 kgf/cm², 4.4 psi)

Vehicle load capacity

172 kg (380 lbs)

⚠ CAUTION

Before inflating the tire, check the **MAXIMUM OPERATING PRESSURE** rating of the tire. This is indicated by a “☆” following the tire size shown on the sidewall. The number of “☆” on the tire indicates the maximum operating pressure.

Maximum operating pressure

☆: 25 kPa (0.25 kgf/cm², 3.6 psi)

☆☆: 35 kPa (0.35 kgf/cm², 5.1 psi)

☆☆☆: 45 kPa (0.45 kgf/cm², 6.5 psi)

Specifications

Service Data

B931H22407001

Tire

Item	Standard		Limit
Cold inflation tire pressure (Solo riding)	Front	35 kPa (0.35 kgf/cm ² , 5.1 psi)	—
	Rear	30 kPa (0.30 kgf/cm ² , 4.4 psi)	—
Tire size	Front	AT25 x 8-12 ☆☆, tubeless	—
	Rear	AT25 x 10-12 ☆☆, tubeless	—
Tire tread depth	Front	—	4.0 mm (0.16 in)
	Rear	—	4.0 mm (0.16 in)

Tightening Torque Specifications

B931H22407002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Wheel set nut (Front and Rear)	60	6.0	43.5	☞ (Page 2D-2)

NOTE

The specified tightening torque is described in the following.

“Front and Rear Wheel Components (Page 2D-1)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Driveline / Axle

Precautions3-1

Drive Chain / Drive Train / Drive Shaft... 3A-1

Repair Instructions3A-1

Recommended Service Material.....3A-8

Differential 3B-1

Repair Instructions	3B-2
Front Drive (Differential) Components	3B-2

Rear Drive Breather Hose Routing Diagram.....3B-22

Transfer 3C-1

Repair Instructions3C-2

Installation3C-15

Specifications.....3C-15

Special Tools and Equipment.....3C-16
 Recommended Service Material.....3C-16

Special Tool	3C-16	Driven / Drive Bevel Gear Shim Inspection and Adjustment	3D-12
Propeller Shafts.....	3D-1	Front Propeller Shaft Components.....	3D-15
Repair Instructions	3D-1	Front Propeller Shaft Removal and Installation	3D-16
Front Output Shaft Components	3D-1	Front Propeller Shaft Related Parts Inspection.....	3D-17
Front Output Shaft Removal and Installation	3D-1	Rear Propeller Shaft Components	3D-18
Front Output Shaft Disassembly and Assembly	3D-2	Rear Propeller Shaft Removal and Installation ..	3D-19
Front Output Shaft Related Parts Inspection	3D-5	Rear Propeller Shaft Related Parts Inspection ..	3D-22
Rear Output Shaft Components.....	3D-6	Specifications	3D-23
Rear Output Shaft / Drive Bevel Gear Removal and Installation.....	3D-6	Service Data.....	3D-23
Rear Output Shaft Disassembly and Assembly	3D-8	Tightening Torque Specifications.....	3D-23
Rear Output Shaft Related Parts Inspection	3D-12	Special Tools and Equipment	3D-24
		Recommended Service Material	3D-24
		Special Tool	3D-25

Precautions

Precautions

Precautions for Driveline / Axle

B931H23000001

Refer to “General Precautions: in Section 00”.

⚠ WARNING

Support the vehicle with a jack or wooden block when servicing the drive shafts and drive train.

Drive Chain / Drive Train / Drive Shaft

Diagnostic Information and Procedures

Drive Shaft Symptom Diagnosis


B931H23104001

Condition	Possible cause	Correction / Reference Item
Noisy Drive Shaft	Worn drive shaft joints.	Replace.
	Worn wheel hub bearings.	Replace.
	Loose wheel nuts.	Tighten.

Repair Instructions

Front Drive Shaft Components

B931H23106001

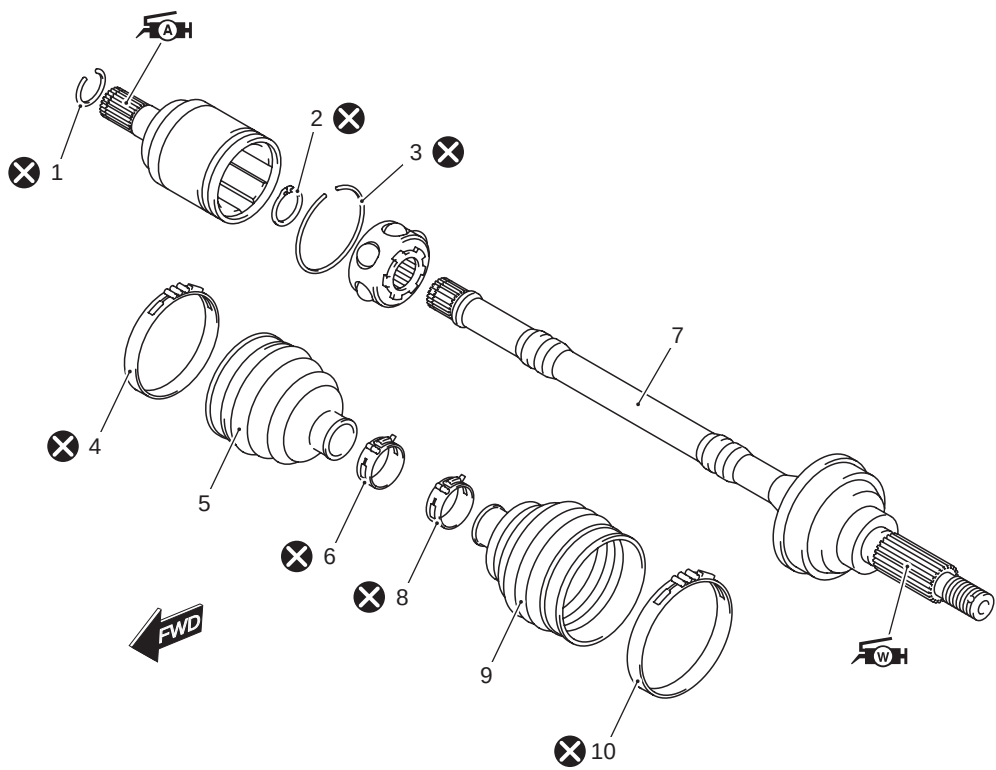

I931H1310012-03

1. Circlip	6. Inner boot band (Small)	: Apply grease.
2. Snap ring	7. Drive shaft	: Apply water resistance grease.
3. Stopper ring	8. Outer boot band (Small)	: Do not reuse.
4. Inner boot band (Large)	9. Outer boot	
5. Inner boot	10. Outer boot band (Large)	

Front Drive Shaft Assembly Removal and Installation


B931H23106002

Removal

- 1) Drain the front differential gear oil. Refer to “**Front Differential Gear Oil Inspection: in Section 0B**”.
- 2) Remove the front wheel. Refer to “**Front / Rear Wheel Removal and Installation: in Section 2D**”.
- 3) Remove the steering knuckle. Refer to “**Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B**”.
- 4) Hold the inboard joint (1) of the front drive shaft and tug the drive shaft horizontally.

NOTE

If it is difficult to remove the front drive shaft from the front differential gear case, use the suitable tool.

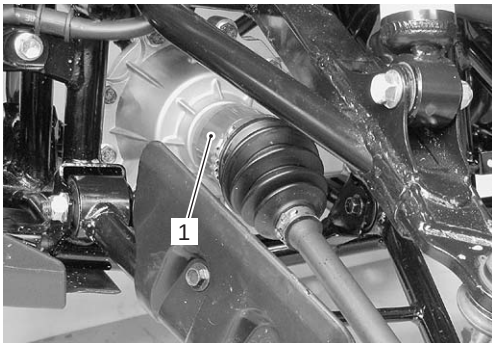

I931H1310001-02

Installation

Install the front drive shaft assembly in the reverse order of removal. Pay attention to the following points:

- Install a new circlip into the groove of front differential gear spline.

⚠ CAUTION

The removed circlip must be replaced with a new one.

- Apply grease to the spline of the front drive shafts.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

- Apply grease to the lip of the oil seal and install the front drive shafts to the front differential gear case.


 **Grease 99000-25160 (Water resistance grease or equivalent)**

⚠ CAUTION

Be careful not to damage the front differential gear case oil seals.

NOTE

After installing both drive shafts, make sure the stopper rings are seated properly by pulling both inboard joints lightly.

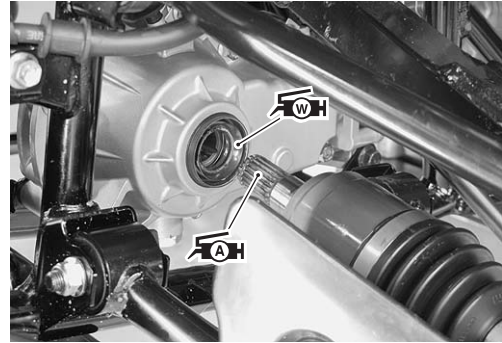

I931H1310002-03

- Install the steering knuckle. Refer to “**Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B**”.
- Install the front wheel. Refer to “**Front / Rear Wheel Removal and Installation: in Section 2D**”.
- Pour the front differential gear oil. Refer to “**Front Differential Gear Oil Inspection: in Section 0B**”.

Front Drive Shaft Disassembly and Assembly

B931H23106003


Refer to “Front Drive Shaft Assembly Removal and Installation (Page 3A-2)”.

Disassembly

⚠ CAUTION

Do not disassemble the wheel side joint. If any damages are found, replace it with a new one.


- 1) Remove the boot band of the differential side joint.

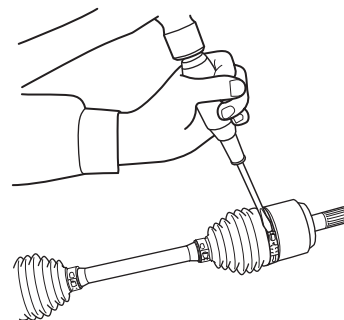

I931H1310003-03


3A-3 Drive Chain / Drive Train / Drive Shaft:

- 2) Slide the boot toward the center of the front drive shaft and remove the stopper ring from the outer race.

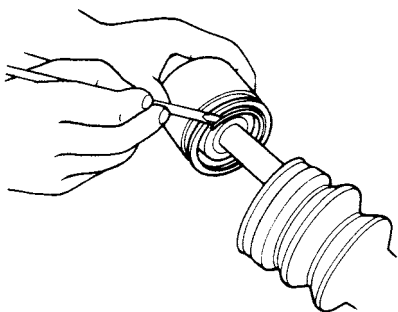

I831G1310006-01

- 3) Remove the outer race from the front drive shaft.

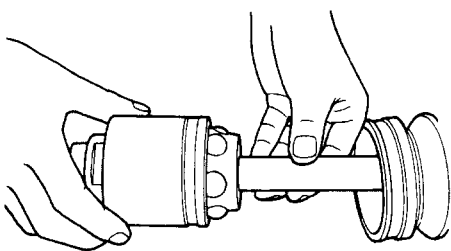


I831G1310007-01

- 4) Wipe off any grease and remove the snap ring.


Special tool

TOOL (A): 09900-06107 (Snap ring remover (Open type))

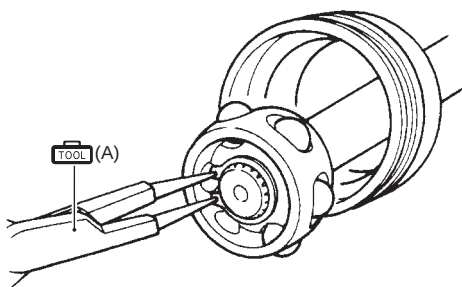


I831G1310022-01

- 5) Remove the cage from the front drive shaft.

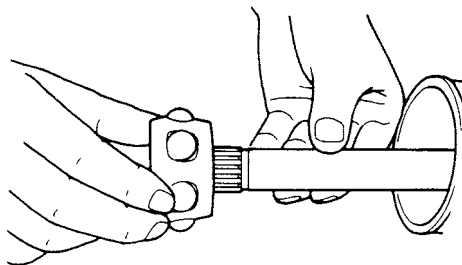

I831G1310009-01

- 6) Remove the boot band of the small diameter side.

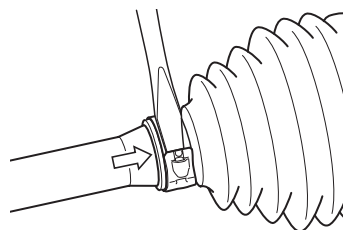

I931H1310004-02

Assembly


⚠ CAUTION

- Wash all parts before installation, clean the inside and outside of the boots with a cloth.
- Do not wash the boots in any commercially available degreaser, such as gasoline or kerosene. Washing in a degreaser causes deterioration of the boots.

- 1) Fit a boot on the drive shaft end, fitting the small diameter side of the boot to the shaft groove, fix its end with a new boot band.

⚠ CAUTION

Replace the boot band with a new one.

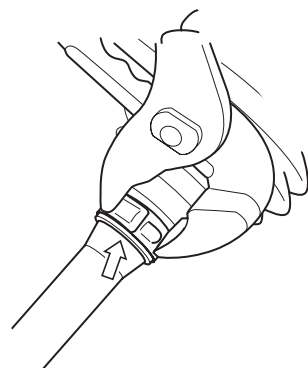


I931H1310005-02

- 2) Install the cage (1) on the shaft.

⚠ CAUTION

Install the cage with the large diameter side "A" facing the shaft end.

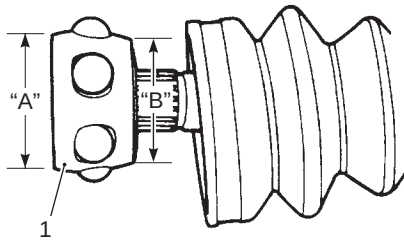

I831G1310012-02

"A": Large diameter

"B": Small diameter


- 3) Install the new snap ring to the cage.

⚠ CAUTION

Replace the snap ring with a new one.

Special tool

TOOL (A): 09900-06107 (Snap ring remover (Open type))

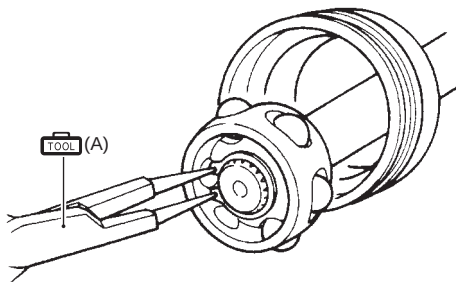


I831G1310023-01

- 4) Apply grease to the entire surface of the cage and the inside of the outer race.


	Position	
	Wheel side	Differential side
Grease: Quantity	60 g (2.1 oz)	60 g (2.1 oz)

NOTE

The tube of joint grease is included in the wheel side boot set or wheel side joint assembly of spare parts.

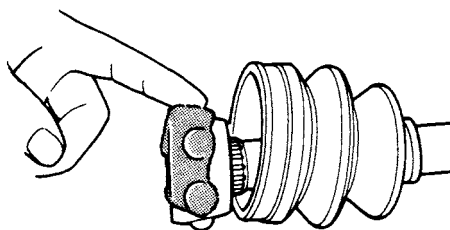

I831G1310013-01

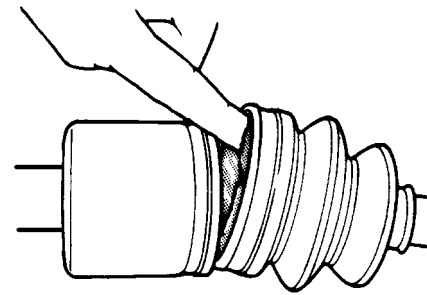


I831G1310014-01

- 5) Insert the cage into the outer race and install the new stopper ring to the groove of the outer race.



⚠ CAUTION

- **Replace the stopper ring with a new one.**
- **Position the opening of stopper ring "C" so that it will not be lined up with a ball.**

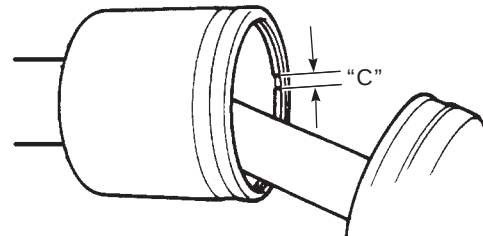

I831G1310015-01

- 6) After installing the boot on the outer race, insert a screw driver into the boot on the outer race side and allow air to enter the boot so that the air pressure in the boot becomes the same as the atmospheric pressure at the positions indicated in the figure.
- 7) Fix the boot on the outer race with a new boot band, taking care not to distort the boot.

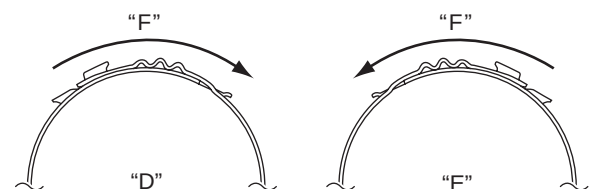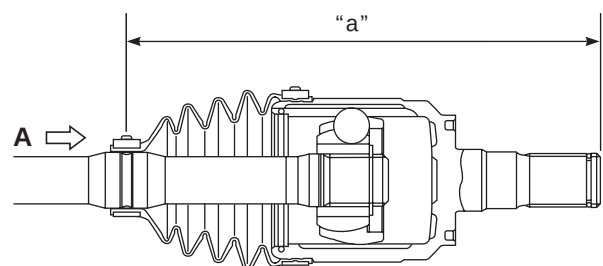

VIEW A

I931H1310006-03

"D": Right side	"F": Rotation direction
"E": Left side	"a": 182.1 mm (7.2 in)

3A-5 Drive Chain / Drive Train / Drive Shaft:

- 8) Install the circlip (2) into the groove of front drive shaft spline.

⚠ CAUTION

The removed circlip must be replaced with a new one.



I931H1310007-01

- 9) Inspect the axle play by using a push-and-pull motion given to the axle shaft and wheel spindle.



I931H1310008-01

Front Drive Shaft Inspection

B931H23106004

Inspect the front drive shaft in the following procedures:

- 1) Remove the front drive shaft assembly. Refer to "Front Drive Shaft Assembly Removal and Installation (Page 3A-2)".
- 2) Check the driveshaft boots for twist and grease leak. If any defects are found, replace the defective parts with new ones.
- 3) Inspect the boots, circlip and boot bands for wear or damage. If any damages are found, replace them with new ones.




I931H1310009-01

- 4) Install the front drive shaft assembly. Refer to "Front Drive Shaft Assembly Removal and Installation (Page 3A-2)".

Rear Drive Shaft Components

B931H23106005

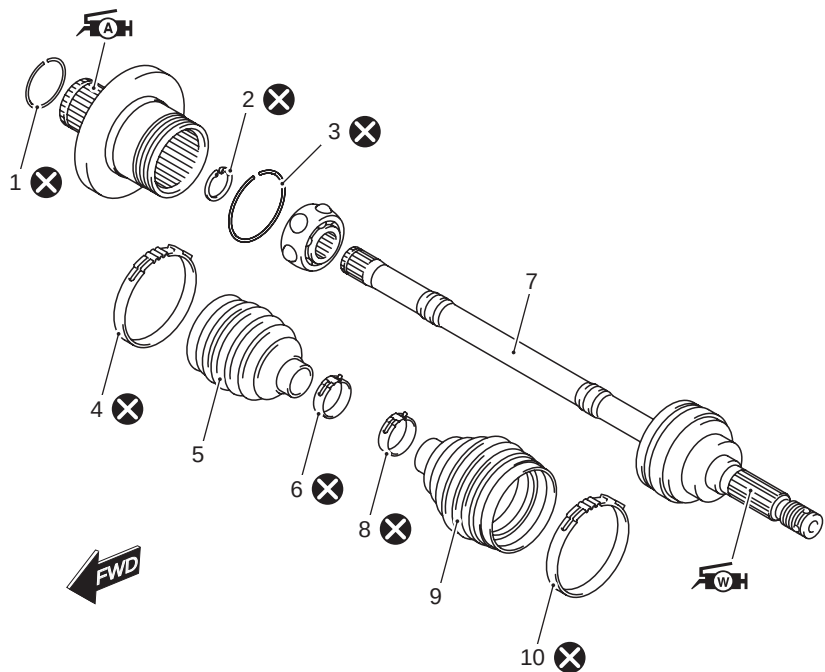

I931H1310013-04

1. Circlip	6. Inner boot band (Small)	: Apply grease.
2. Snap ring	7. Drive shaft	: Apply water resistance grease.
3. Stopper ring	8. Outer boot band (Small)	: Do not reuse.
4. Inner boot band (Large)	9. Outer boot	
5. Inner boot	10. Outer boot band (Large)	

Rear Drive Shaft Assembly Removal and Installation

B931H23106006


Removal

- 1) Drain the rear final gear oil. Refer to **“Final Gear Oil Inspection: in Section 0B”**.
- 2) Remove the rear wheel. Refer to **“Front / Rear Wheel Removal and Installation: in Section 2D”**.
- 3) Remove the rear wheel hub and rear suspension arm. Refer to **“Rear Wheel Hub / Suspension Knuckle Removal and Installation: in Section 2C”**.

- 4) Hold the in board joint (1) of the rear drive shaft and tug the drive shaft horizontally.

NOTE

If it is difficult to remove the rear drive shaft from the rear differential gear case, using the suitable tool.

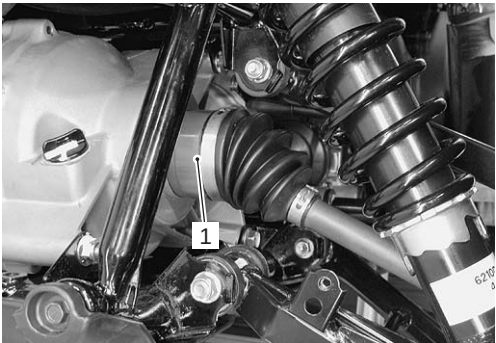

I931H1310014-02

Installation

Install the rear drive shaft in the reverse order of removal. Pay attention to the following points:

- Install a new circlip (1) into the groove of drive shaft spline.

CAUTION

The removed circlip must be replaced with a new one.

- Apply grease to the spline of the rear drive shafts.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- Apply grease to the lip of the oil seal and install the rear drive shafts to the rear final gear case.


 : Grease 99000-25160 (Water resistance grease or equivalent)

CAUTION

Be careful not to damage the front drive case oil seal.

NOTE

After installing both drive shafts, make sure the circlips (1) is seated properly by pulling both inboard joints lightly.

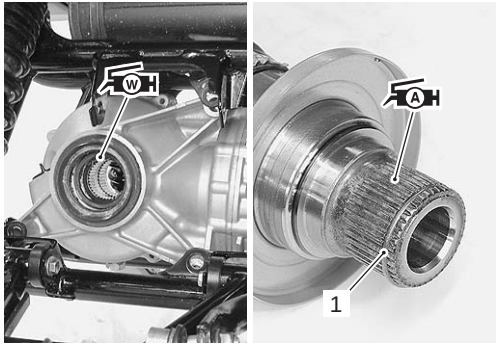


I931H1310011-03

Rear Drive Shaft Disassembly and Assembly

B931H23106007

Refer to “Rear Drive Shaft Assembly Removal and Installation (Page 3A-6)”.

Rear drive shaft disassembly and assembly are the same manner of front drive shaft disassembly and assembly except for the position of inner boot bond.

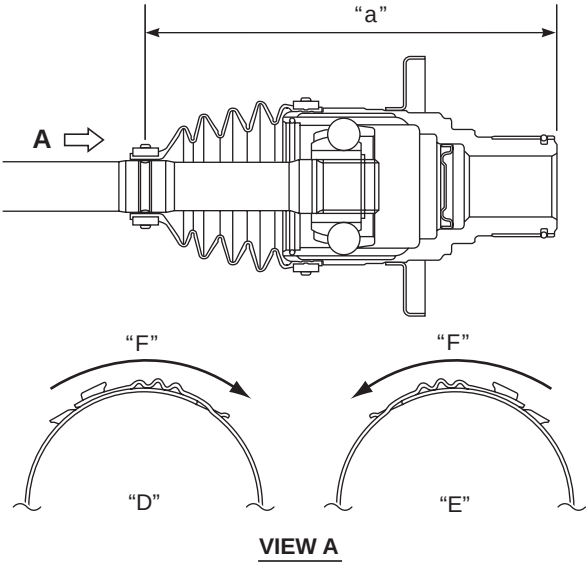

I931H1310015-02

"D": Right side	"F": Rotation direction
"E": Left side	"a": 166 mm (6.5 in)

Rear Drive Shaft Inspection

B931H23106008

Refer to “Rear Drive Shaft Assembly Removal and Installation (Page 3A-6)”.

Rear drive shaft inspection as the same manner of front drive shaft.

Special Tools and Equipment

Recommended Service Material

B931H23108001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000-25010	☞ (Page 3A-2) / ☞ (Page 3A-7)
	Water resistance grease or equivalent	P/No.: 99000-25160	☞ (Page 3A-2) / ☞ (Page 3A-7)

NOTE


Required service material is also described in the following.

“Front Drive Shaft Components (Page 3A-1)”

“Rear Drive Shaft Components (Page 3A-6)”

Special Tool

B931H23108002

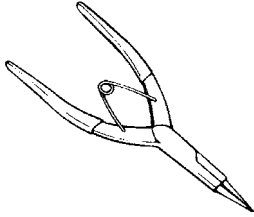09900-06107 Snap ring remover (Open type) ☞ (Page 3A-3) / ☞ (Page 3A-4)		
---	---	--

Differential

Diagnostic Information and Procedures

Drive Train Symptom Diagnosis

B931H23204001

Condition	Possible cause	Correction / Reference Item
Engine noisy (Noise seems to come from front/rear output shaft bevel gear, front drive (differential) bevel gear and rear drive bevel gear)	Worn or damage drive and driven bevel gears.	<i>Replace.</i>
	Excessive backlash.	<i>Adjust.</i>
	Improper tooth contact.	<i>Adjust.</i>
	Damage bearing.	<i>Replace.</i>
	Worn or rubbing gears.	<i>Replace.</i>
	Worn output shaft spline.	<i>Replace output shaft.</i>
	Too large front drive gear thrust clearance.	<i>Adjust or replace.</i>
	Too large rear drive gear thrust clearance.	<i>Adjust or replace.</i>
Power will not transmit from the engine to the front wheel	Broken drive and driven bevel gear teeth.	<i>Replace.</i>
	Worn or broken propeller shaft serration.	<i>Replace.</i>
	Broken or damaged front drive (differential) gear or pinion.	<i>Replace.</i>
	Improperly operated front differential shifting motor.	<i>Repair or replace.</i>
	Worn or damaged shifting sleeve, shaft and fork of the 2WD/4WD and diff-lock shifting.	<i>Replace.</i>
	Worn or damaged universal joint.	<i>Replace.</i>
	Worn or damaged front drive shaft or universal joint serration.	<i>Replace.</i>
Power will not transmit from the engine to the rear wheel	Broken drive and driven bevel gear teeth.	<i>Replace.</i>
	Broken rear output shaft.	<i>Replace.</i>
	Worn or broken rear drive shaft serration.	<i>Replace.</i>
	Worn or damaged coupling joint serration.	<i>Replace.</i>
	Broken or damaged rear drive and driven bevel gears.	<i>Replace.</i>
	Worn or damaged universal joint.	<i>Replace.</i>

DTC "C20" (P1752) Diff-lock Relay Circuit Malfunction


B931H23204002

Refer to "DTC "C20" (P1752): Diff-lock Relay Circuit Malfunction: in Section 1A".

Repair Instructions

Front Drive (Differential) Components

B931H23206001

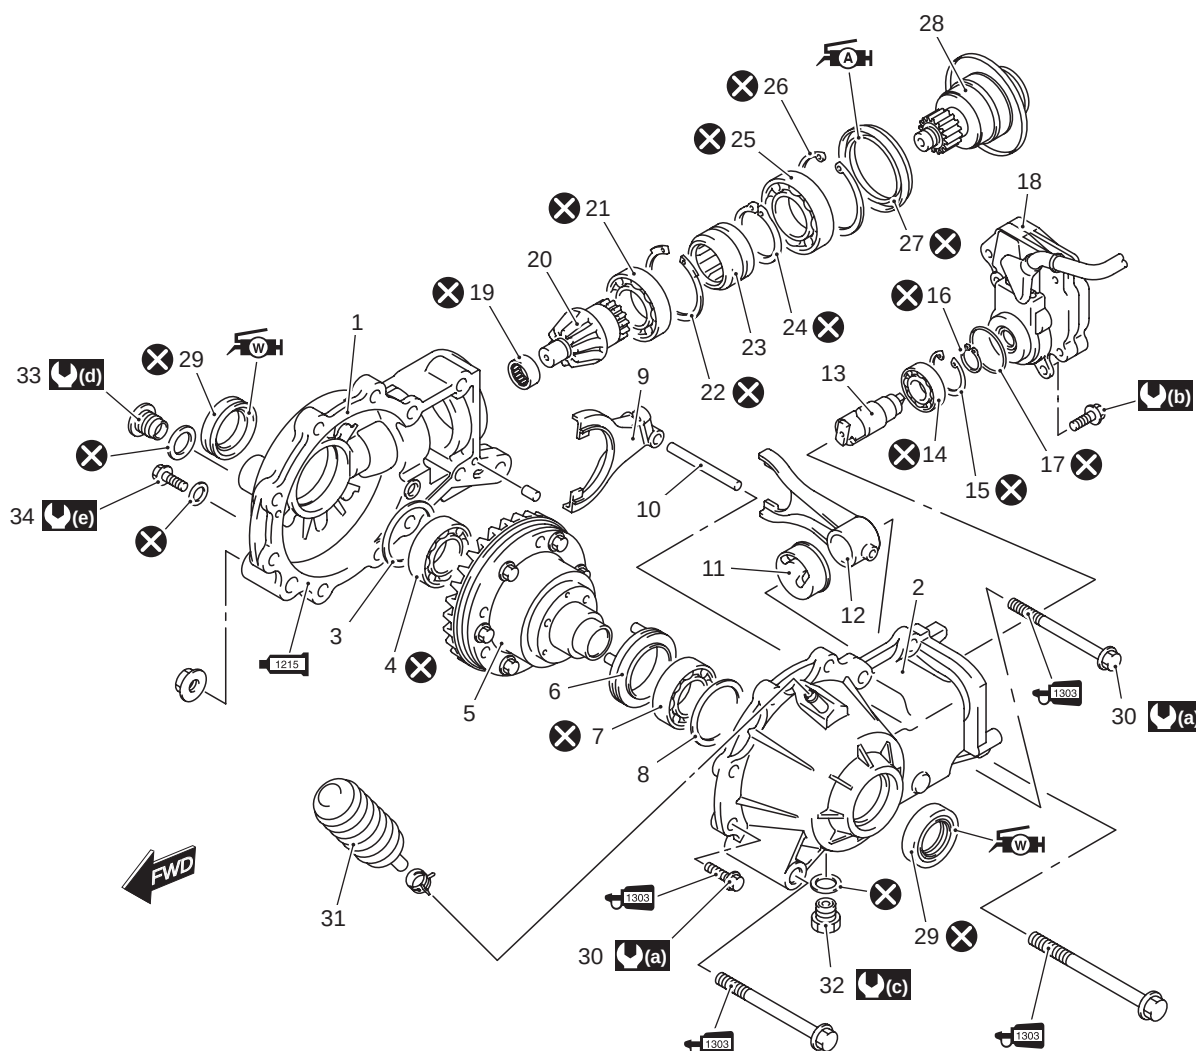


I931H1320095-04

1. Front drive (differential) gear case	16. Snap ring	31. Breather rubber case
2. Front drive (differential) gear case cover	17. O-ring	32. Oil drain plug
3. Shim (Right side)	18. 4WD/Diff-lock actuator	33. Oil filler plug
4. Bearing	19. Bearing	34. Oil level plug
5. Front drive (differential) gear assembly	20. Pinion gear	(a) : 22 N·m (2.2 kgf-m, 16.0 lbf-ft)
6. Diff-lock sleeve	21. Bearing	(b) : 10 N·m (1.0 kgf-m, 7.0 lbf-ft)
7. Bearing	22. Snap ring	(c) : 32 N·m (3.2 kgf-m, 23.0 lbf-ft)
8. Shim (Left Side)	23. Differential sleeve	(d) : 35 N·m (3.5 kgf-m, 25.5 lbf-ft)
9. Diff-lock fork	24. Snap ring	(e) : 8 N·m (0.8 kgf-m, 5.7 lbf-ft)
10. Diff-lock shaft	25. Bearing	Ⓐ: Apply grease.
11. Diff-lock cam	26. Snap ring	Ⓑ: Apply water resistance grease.
12. Differential fork	27. Dust seal	1215 : Apply bond.
13. Screw shaft	28. Input shaft	1303 : Apply thread lock to the thread part.
14. Bearing	29. Oil seal	ⓧ : Do not reuse
15. Snap ring	30. Front drive (differential) gear case cover bolt	

Front Drive (Differential) Construction

B931H23206002

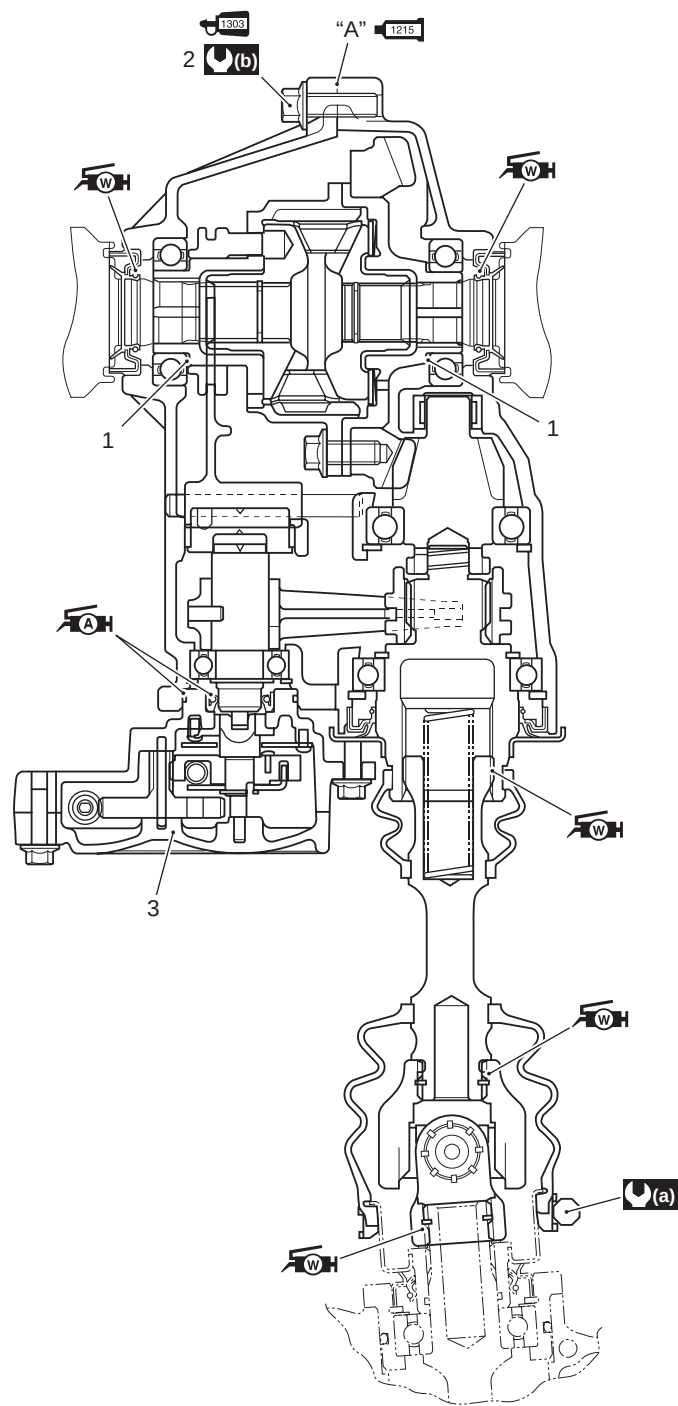

I931H1320001-03

1. Shim	(a) : 1.3 N·m (0.13 kgf·m, 0.94 lbf·ft)	1303 : Apply thread lock to the thread part.
2. Front drive (differential) case cover bolt	(b) : 22 N·m (2.2 kgf·m, 16.0 lbf·ft)	1215 : Apply bond to matching surface.
3. 2WD/4WD/Diff-lock actuator	A : Apply grease.	
"A": Matching surface	WH : Apply water resistance grease.	

Front Drive (Differential) Gear Oil Level Inspection

B931H23206003

Refer to "Front Differential Gear Oil Inspection: in Section 0B".

Front Drive (Differential) Gear Oil Replacement

B931H23206004

Refer to "Front Differential Gear Oil Inspection: in Section 0B".

Front Drive (Differential) Assembly Removal and Installation

B931H23206005


Removal

- 1) Remove the front wheels. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".
- 2) Drain front differential gear oil. Refer to "Front Differential Gear Oil Inspection: in Section 0B".
- 3) Remove the left inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 4) Disconnect the rear brake light switch lead wire coupler (1).



I931H1320002-01

- 5) Remove the lead wire from clamps.

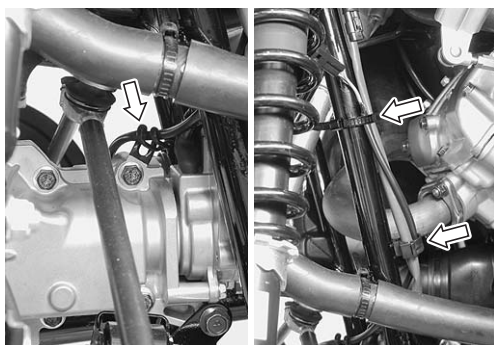

I931H1320003-01

- 6) Remove the clamps and disconnect the 4WD/diff-lock actuator lead wire coupler (2).




I931H1320004-01

- 7) Remove the drive shaft. Refer to "Front Drive Shaft Assembly Removal and Installation: in Section 3A".
- 8) Remove the front shock absorber. Refer to "Front Shock Absorber Removal and Installation: in Section 2B".
- 9) Remove the front drive (differential) mounting bolts and nuts.



I931H1320005-01

- 10) Move the suspension upper arm upward and remove the front drive (differential) assembly (3).

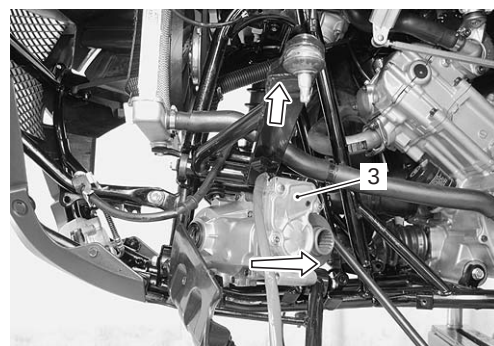

I931H1320006-01


3B-5 Differential:

Installation

Install the front drive (differential) assembly in the reverse order of removal. Pay attention to the following points:

- Apply grease to spline and inside of the front propeller shaft.

 : Grease 99000-25160 (Water resistance grease)

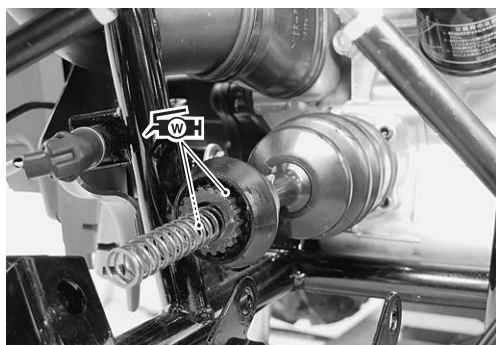


I931H1320007-01

- Apply thread lock to the bolts and tighten the nuts to the specified torque.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)


Tightening torque

Front drive (differential) mounting nut (a): 50 N·m (5.0 kgf-m, 36.0 lbf-ft)

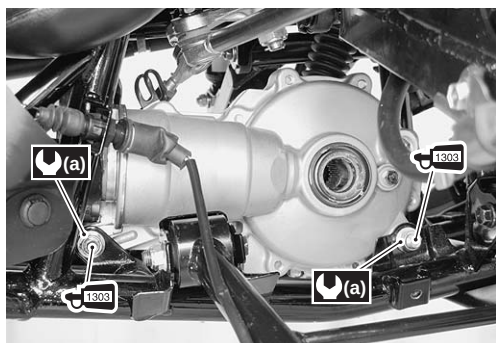

I931H1320099-01

- Attach the boot (1) to the input shaft.

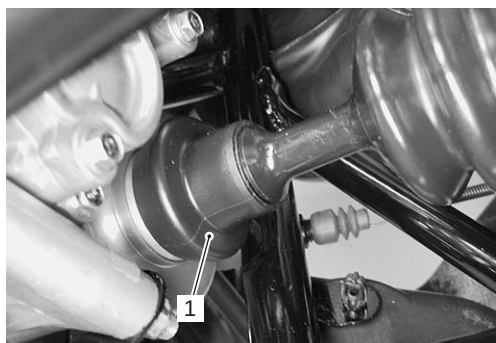

I931H1320009-01

- After installing the front drive (differential), check the wiring harness routing and pour the front differential gear oil. Refer to “**Wiring Harness Routing Diagram: in Section 9A**” and “**Front Differential Gear Oil Inspection: in Section 0B**”.


Front Drive (Differential) Assembly Disassembly and Assembly

B931H23206006

Refer to “Front Drive (Differential) Assembly Removal and Installation (Page 3B-4)”.

Disassembly

- 1) Remove the 4WD/diff-lock actuator assembly (1).

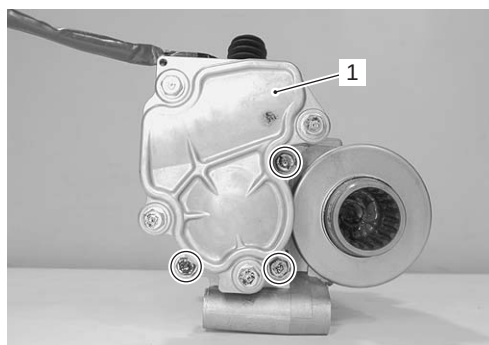

I931H1320010-01

- 2) Remove the breather case (2).



I931H1320011-01

- 3) Remove the front drive (differential) case cover bolts diagonally and evenly.




I931H1320012-01

- 4) Remove the front drive (differential) case housing (3) with the special tool.


Special tool

 (A): 09912-34510 (Cylinder disassembly ring tool)

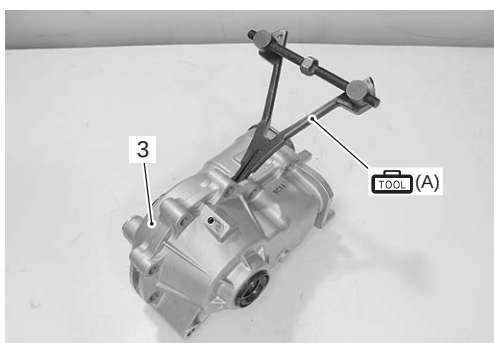


I931H1320013-01

- 5) Remove the front drive (differential) gear assembly (4) and shims.

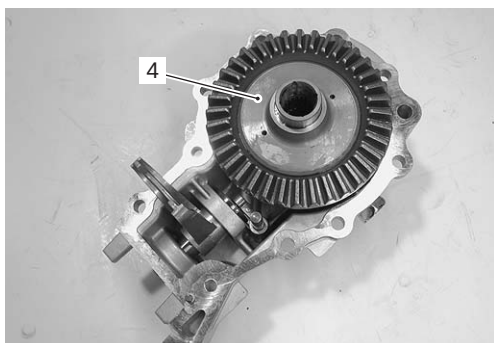


I931H1320014-01

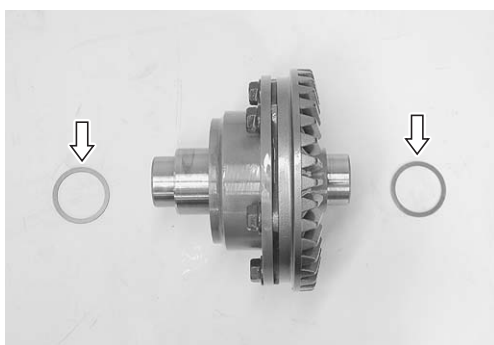

I931H1320015-01

- 6) Remove the diff-lock sleeve (5).

- 7) Remove the diff-lock fork shaft (6) and diff-lock fork (7).

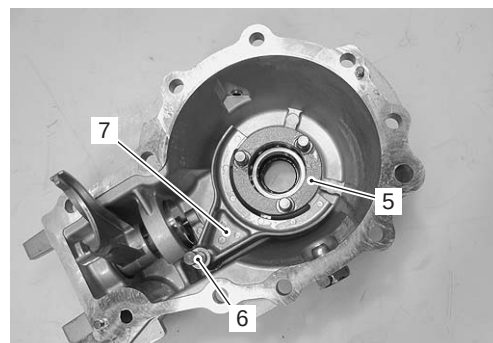


I931H1320016-02

- 8) Remove the snap ring (8).

Special tool


 : 09900-06108 (Snap ring remover (Close type))

- 9) Remove the screw shaft (9).

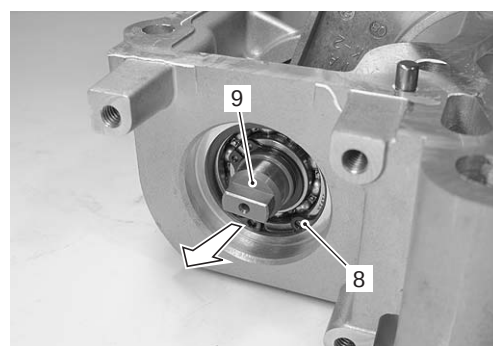

I931H1320018-02

- 10) Remove the differential fork (10).

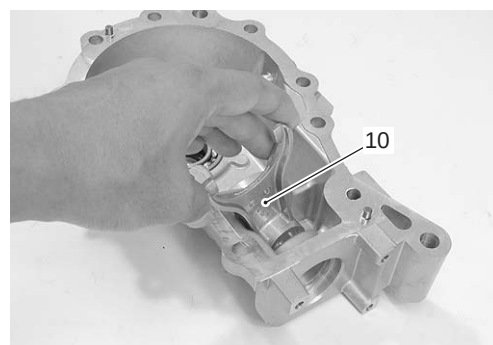

I931H1320019-01

3B-7 Differential:


11) Remove the snap ring (11) and bearing (12).

NOTE

There is no abnormal noise, the bearing removal is not necessary.


Special tool

TOOL : 09900-06107 (Snap ring remover (Open type))

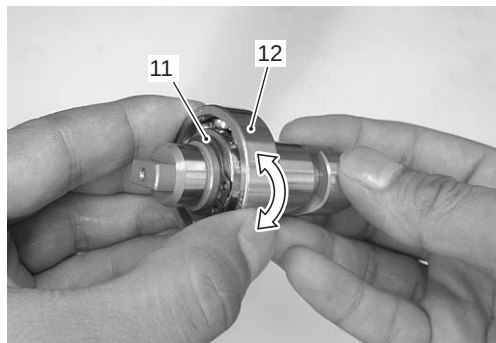

I931H1320020-02

12) Remove the diff-lock cam (13).

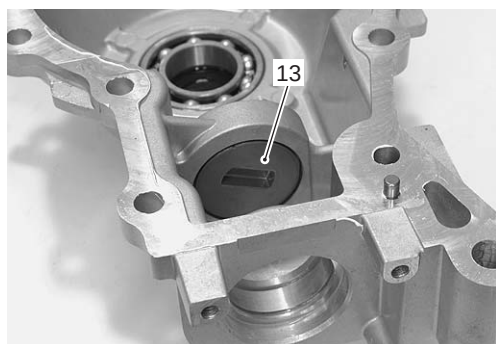


I931H1320021-01

13) Remove the bearing (14) and oil seal (15) with the special tools.

Special tool


TOOL (B): 09921-20240 (Bearing remover set)

TOOL (C): 09913-70210 (Bearing installer set (10 - 75))

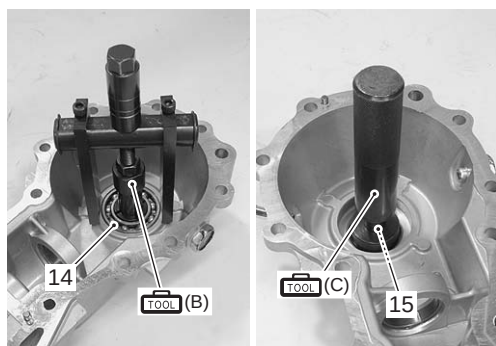

I931H1320022-01

14) Remove the dust seal cap (16) and dust seal (17).

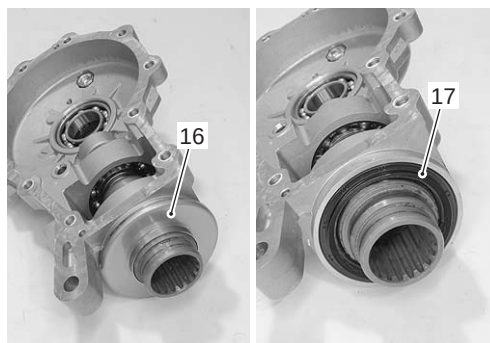


I931H1320023-01

15) Remove the snap ring (18) and input shaft (19).


Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

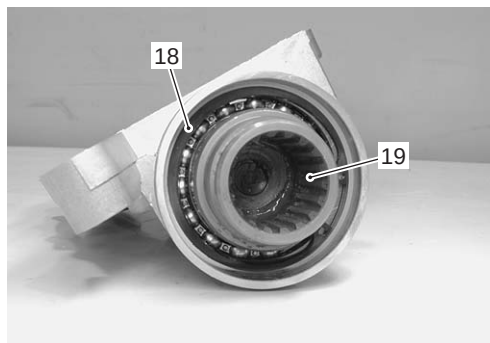

I931H1320024-01

16) Remove differential sleeve (20).

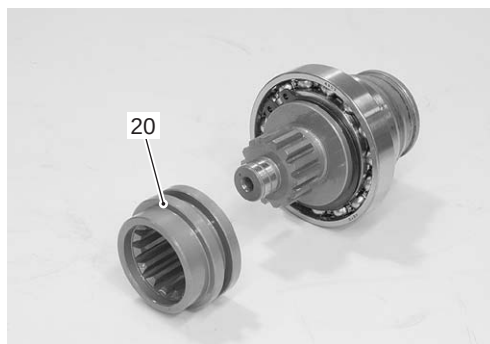

I931H1320025-01

- 17) Remove the snap ring (21) and input shaft bearing (22) with the special tool.


NOTE

If there is no abnormal noise, the bearing removal is not necessary.

Special tool

 : 09900-06107 (Snap ring remover (Open type))

 (D): 09913-60910 (Bearing and gear puller)

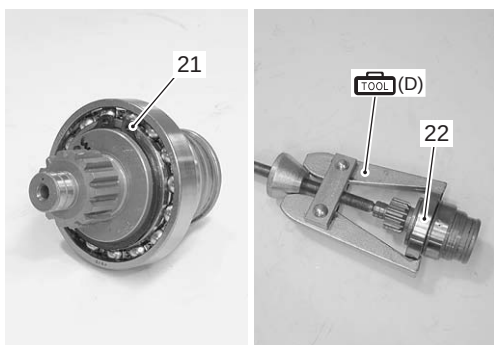


I931H1320026-01

- 18) Remove the snap ring (23) and pinion gear (24).

Special tool

 : 09900-06108 (Snap ring remover (Close type))

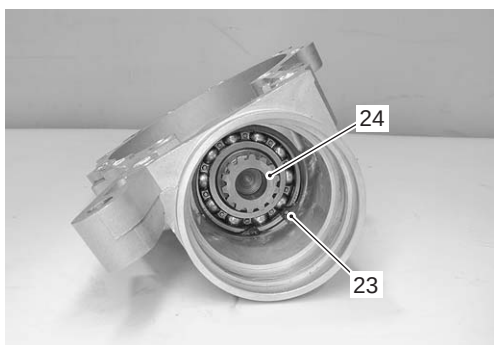

I931H1320027-01


- 19) Remove the pinion gear bearing (25) with the special tool.

NOTE

If there is no abnormal noise, the bearing removal is not necessary.

Special tool

 (D): 09913-60910 (Bearing and gear puller)

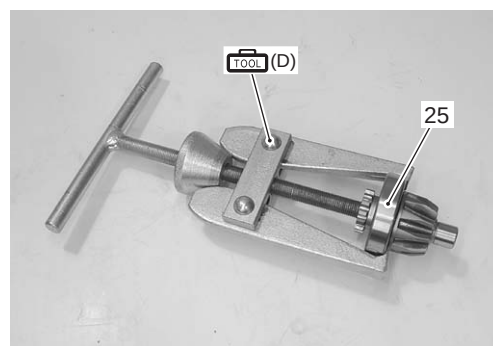

I931H1320028-02

- 20) Remove the pinion gear pilot bearing (26) with the special tools.

NOTE


If there is no abnormal noise, the bearing removal is not necessary.

Special tool

 (E): 09921-20240 (Bearing remover set)

 (F): 09944-66010 (Oil seal installer)

 (G): 09924-84521 (Bearing installer set)

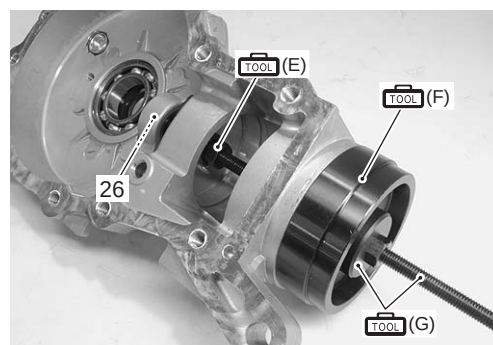


I931H1320029-01

- 21) Remove the bearing (27) and oil seal (28) with the special tools.

Special tool

 (B): 09921-20240 (Bearing remover set)

 (C): 09913-70210 (Bearing installer set (10 - 75))

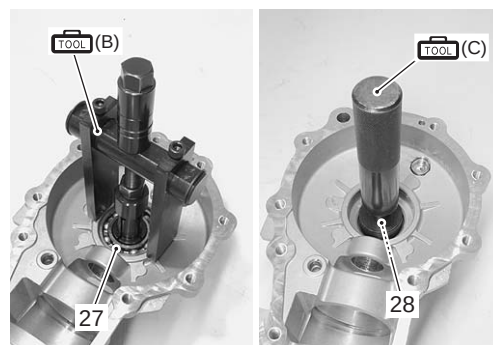

I931H1320030-01

Assembly


⚠ CAUTION

The removed oil seals, snap rings and bearings must be replaced with new ones.

- 1) Install the bearings (1) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

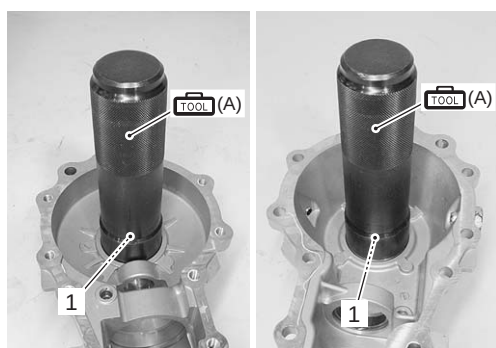


I931H1320031-01

- 2) Install the pinion gear pilot bearing (2) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

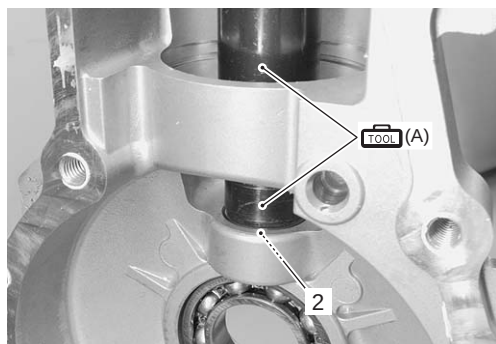


I931H1320032-02

- 3) Install the pinion gear bearing (3) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

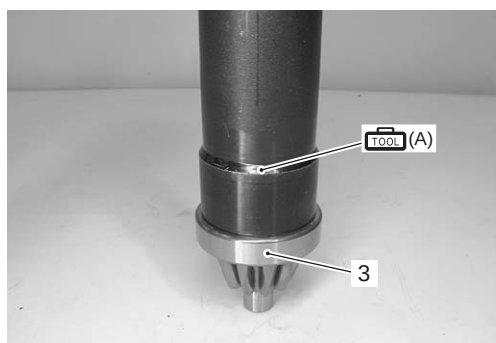


I931H1320033-01

- 4) Install the pinion gear (4) into the front drive (differential) gear case and fix the snap ring (5).

Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

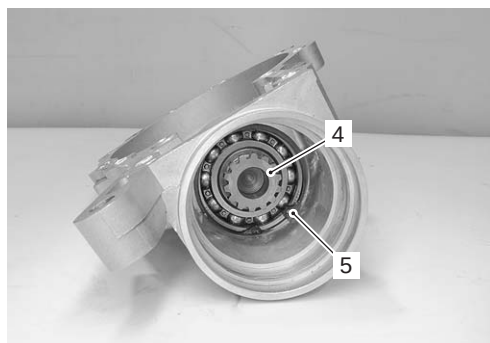

I931H1320034-01

- 5) Install the input shaft bearing (6) onto the input shaft with the special tool.


Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

- 6) Install the snap ring (7).


Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

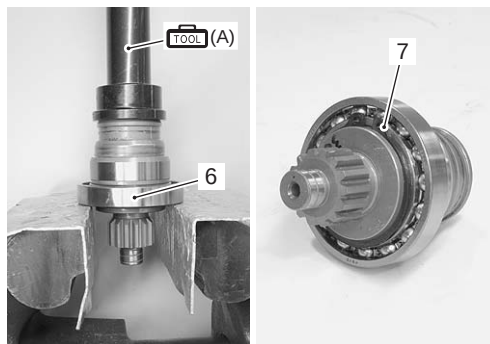

I931H1320035-01

- 7) Install the differential sleeve (8) to the input shaft (9).

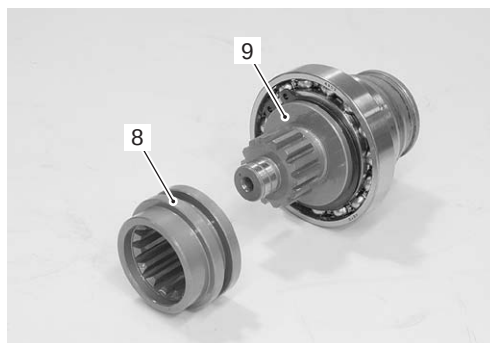


I931H1320036-01

- 8) Install the input shaft (9) and snap ring (10).

Special tool

TOOL : 09900-06107 (Snap ring remover (Open type))

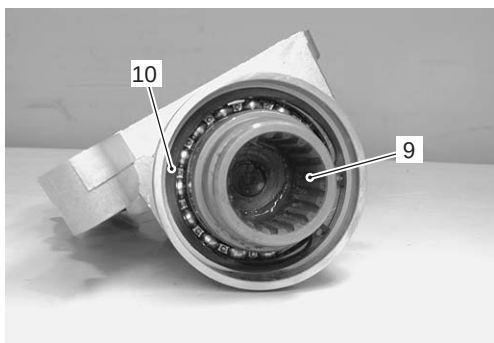

I931H1320093-01

- 9) Apply a small quantity of grease to the dust seal lip.

FAH : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)


- 10) Install the dust seal with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

TOOL (B): 09924-74520 (Oil seal installer and remover)

TOOL (C): 09924-74570 (Final drive gear bearing installer)

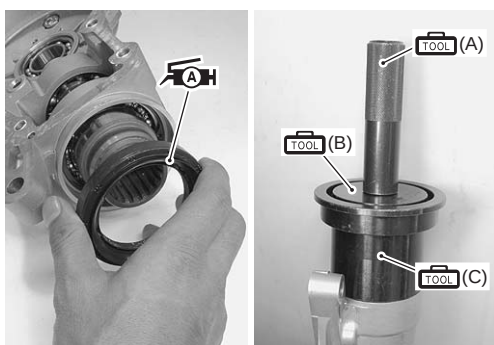


I931H1320037-01

- 11) Install the oil seal cap (11) with the special tool.

Special tool

TOOL (D): 09924-52460 (Socket (52 mm))

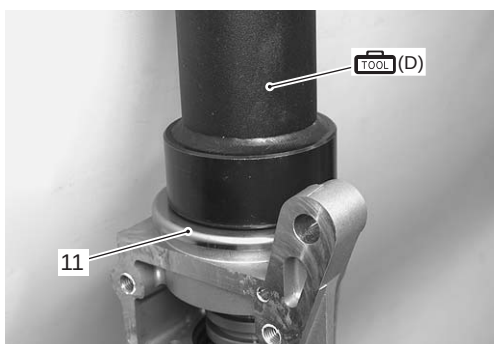

I931H1320038-01


- 12) Install the oil seals (12) into the front drive (differential) gear case cover with the special tool.

NOTE

Insert the oil seal until the specified value as shown in the figure.


Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

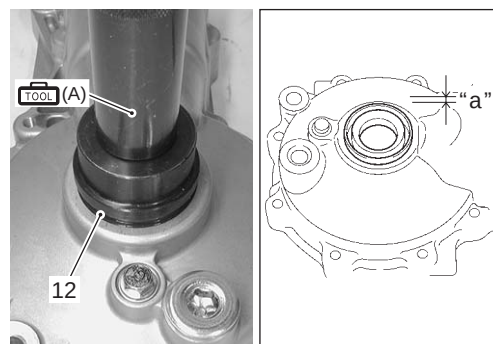

I931H1320039-01

"a": 4 mm (0.1574 in)

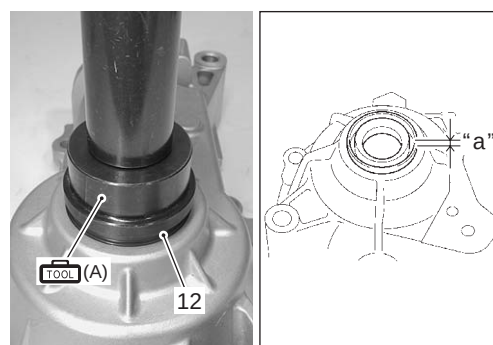

I931H1320040-01

"a": 4 mm (0.1574 in)

- 13) Install the diff-lock cam (13).




I931H1320096-01

3B-11 Differential:

14) Install the differential fork (14) and screw shaft (15).


NOTE

When installing the screw shaft (15), align the convex part "A" of differential fork (14) and groove "B" of screw shaft (15).

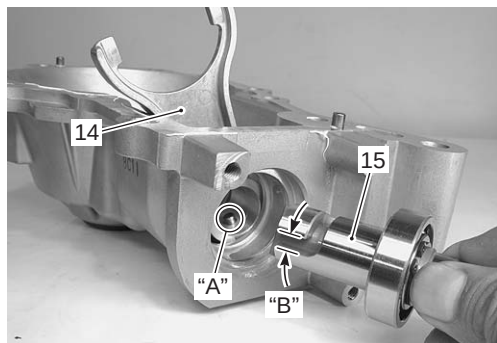


I931H1320094-02

15) Install the convex part "C" of screw shaft (15) to the concave part "D" of diff-lock cam (13).

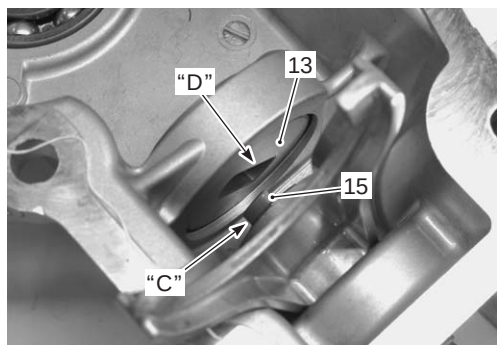


I931H1320041-02

16) Install the shims (16).

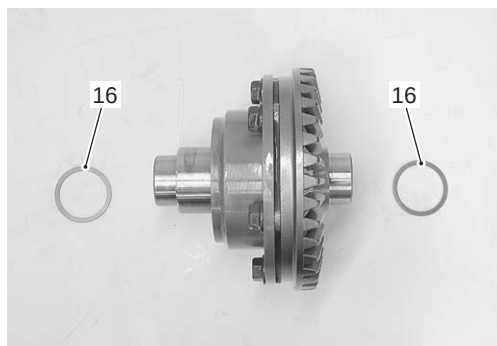


I931H1320042-01

17) Install the diff-lock fork (17) and diff-lock sleeve (18).

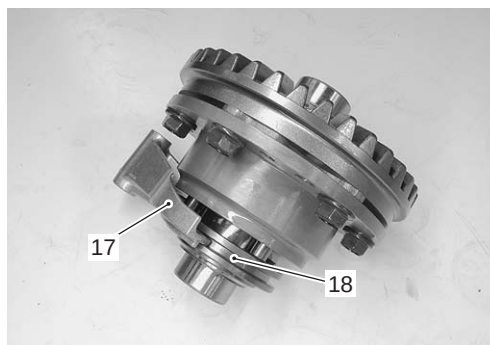


I931H1320043-01

18) Install the front drive (differential) gear assembly (19).

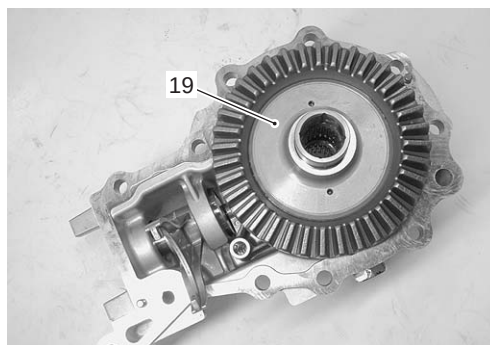


I931H1320044-01

19) Insert the convex part "E" of the diff-lock fork (17) and groove part "F" of the diff-lock cam (13).

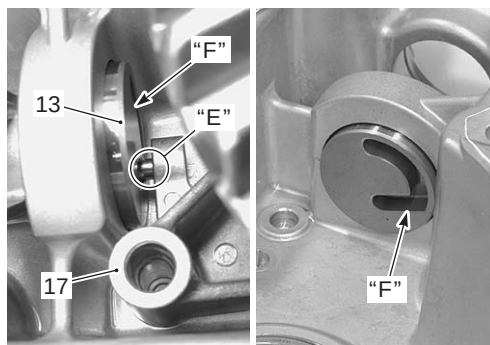

I931H1320045-03


20) Install the diff-lock fork shaft (20).

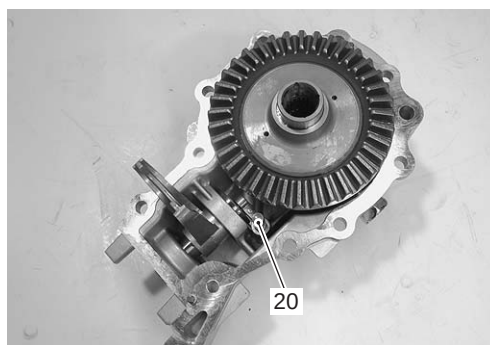

I931H1320046-01


- 21) Apply bond to the mating surface of the front drive (differential) case.

1215 : Sealant 99000-31110 (SUZUKI BOND No.1215 or equivalent)

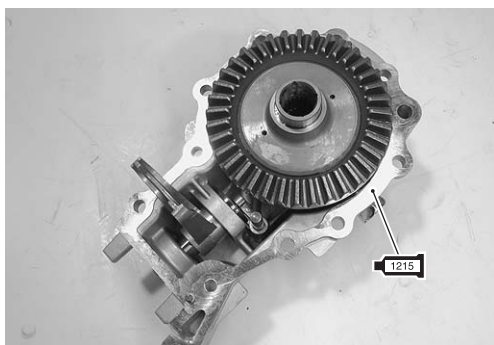

I931H1320047-01

- 22) Align the differential fork (21) and groove "G" of the differential sleeve when reassembling.

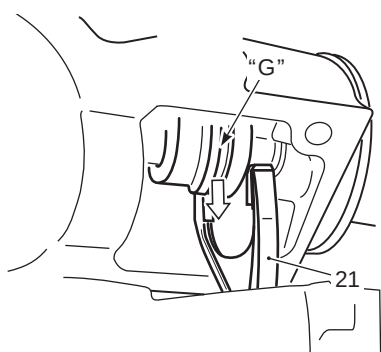

I931H1320048-01

- 23) Apply a small quantity of thread lock to the front drive (differential) case cover bolts (22) and tighten them to the specified torque diagonally.


NOTE

Fit clamp to the bolt "H".

1303 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

Tightening torque

Front drive (differential) case cover bolt (a): 22 N·m (2.2 kgf-m, 16.0 lbf-ft)

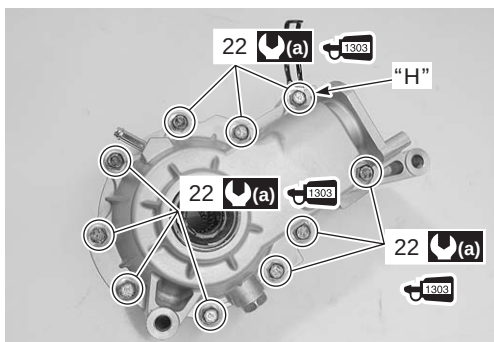


I931H1320049-02

- 24) Apply grease to the O-ring and lip of oil seal.

CAUTION

Replace the O-ring with a new one.

10H : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

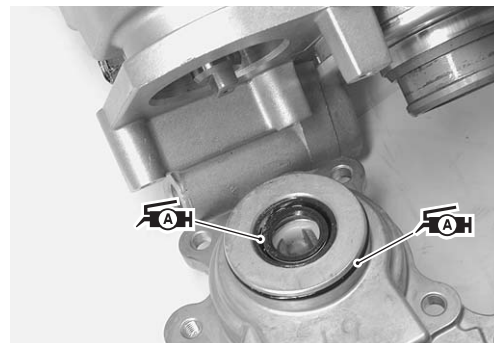


I931H1320050-01

- 25) Apply a small quantity of thread lock to the 4WD/diff-lock actuator mounting bolts (23) and tighten them to the specified torque.

1303 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

Tightening torque

4WD/Diff-lock actuator mounting bolt (b): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

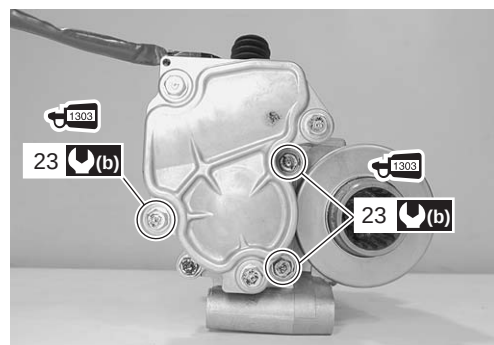

I931H1320051-01

- 26) Check the backlash and tooth contact. Refer to "Front Drive (Differential) Gear Shim Inspection and Adjustment (Page 3B-15)".
- 27) Install the Front drive (differential) assembly. Refer to "Front Drive (Differential) Assembly Removal and Installation (Page 3B-4)".

3B-13 Differential:

Front Drive (Differential) Related Parts Inspection

B931H23206007

Refer to "Front Drive (Differential) Assembly Disassembly and Assembly (Page 3B-5)".

Front Drive Gear Oil Seals


Inspect the lip of oil seal for wear or damage. If any defect is found, replace the oil seal with a new one.



I931H1320052-01

Pinion Gear Pilot Bearing

Inspect the bearing for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.

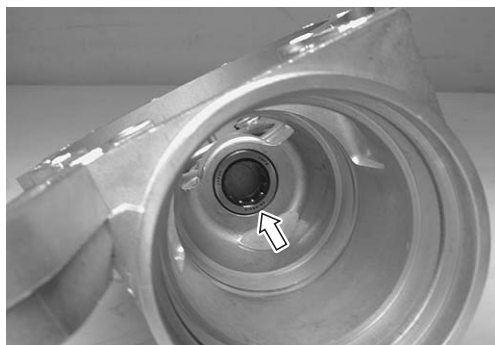

I931H1320053-01

Diff-lock Fork Shaft

Inspect the diff-lock fork shaft for wear or damage. If any defects are found, replace the diff-lock fork shaft with a new ones.



I931H1320054-01

Differential Fork and Diff-lock Fork

Inspect the shifting forks for wear or damage. If any defects are found, replace the shifting forks with new ones.



I931H1320055-01



I931H1320056-01

Screw Shaft

Inspect the rear screw shaft for wear or damage. If any defects are found, replace the screw shaft with a new one.



I931H1320063-01

Diff-lock Cam

Inspect the diff-lock cam for wear or damage. If any defects are found, replace the diff-lock cam with a new one.



I931H1320057-01

Differential Sleeve

Inspect the differential sleeve for wear or damage. If any defects are found, replace the differential sleeve with a new one.



I931H1320058-01

Diff-lock Sleeve

Inspect the diff-lock sleeve for wear or damage. If any defects are found, replace the diff-lock sleeve with a new one.



I931H1320059-01

Input Shaft

Inspect the input shaft for wear or damage. Inspect the input shaft bearing for abnormal noise and smooth rotation. If any defects are found, replace defective parts.



I931H1320060-01

Pinion Gear

Inspect the pinion gear for wear or damage. Inspect the pinion gear bearing for abnormal noise and smooth rotation. If any defects are found, replace defective parts.



I931H1320062-01

Front Drive (Differential) Gear

Inspect the front drive (differential) gear for stick or damage. If any defects are found, replace defective parts.




I931H1320064-01

Breather Rubber Case Inspection

B931H23206008

Inspect the breather rubber case for wear or damage. If any defects are found, replace the breather rubber case with a new one.

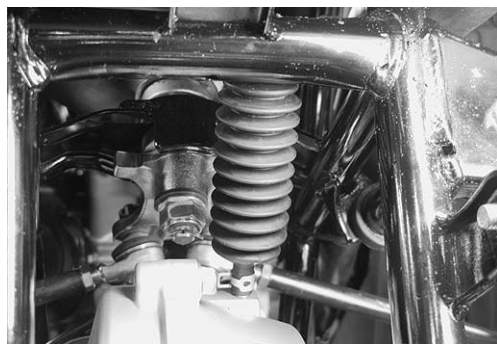

I931H1320065-01


Front Drive (Differential) Gear Shim Inspection and Adjustment

B931H23206009


Refer to "Front Drive (Differential) Assembly Disassembly and Assembly (Page 3B-5)".

Backlash

- Install the left and right side shim(s) and front drive (differential) gear assembly (1).

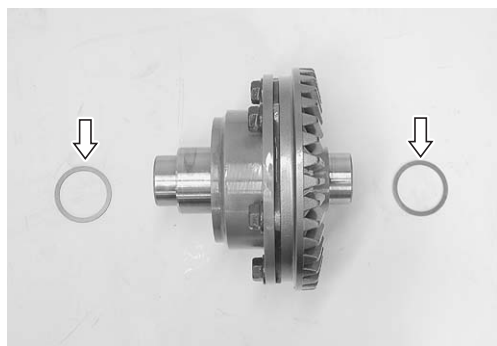

I931H1320066-01

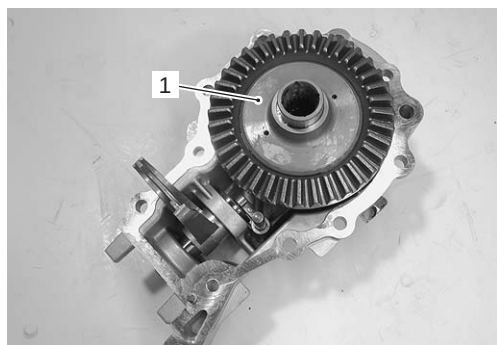

I931H1320067-01


- Install the front drive (differential) case (2) and tighten the bolts to the specified torque diagonally.

NOTE

At this time, it is not necessary to apply a sealant to the mating surface of the gear case.

Tightening torque

Front drive (differential) case bolt: 22 N·m (2.2 kgf-m, 16.0 lbf-ft)

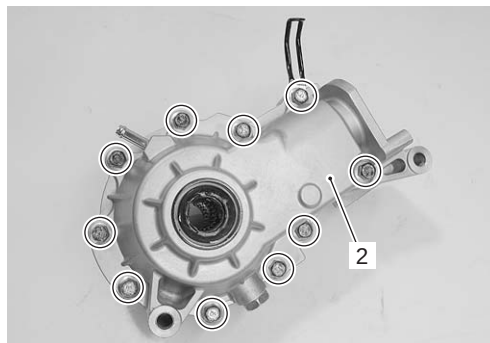


I931H1320068-01

- Remove the oil filler cap and measure the backlash of the differential ring gear using the horizontal type dial gauge and drive shaft (3) as shown in the figure.
- Take backlash readings at three places while turning the front drive (differential) gear slightly in each direction and securely holding the pinion gear. Rear the total backlash on the dial gauge.


Special tool

TOOL (A): 09900-20607 (Dial gauge)

TOOL (B): 09900-20701 (Dial gauge chuck)

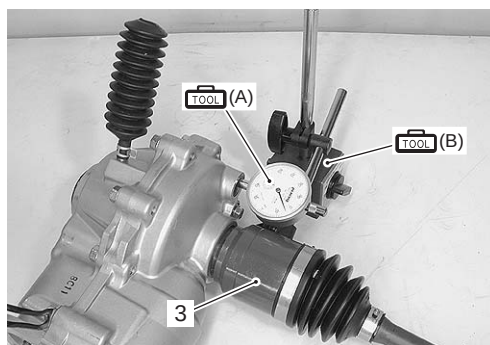

I931H1320069-01

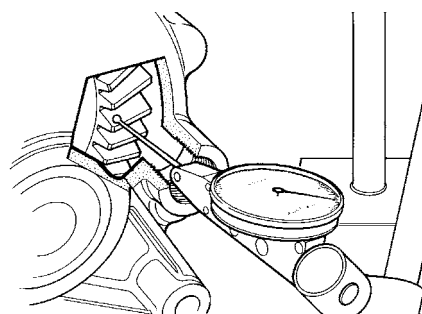

I831G1320062-01

Front drive (differential) gear backlash

Standard: 0.05 – 0.20 mm (0.0020 – 0.0080 in)

- Remove the dial gauge and turn the front drive (differential) gear 120°, then measure the backlash. Repeat this procedure once more and compare the difference of the three measurements. If the backlash should be re-checked until the backlash is within specification. Check the table at the appropriate shim thickness.

NOTE

Adjust the backlash by referring to the table at using the thickness of the removed shims as a guide.

Backlash	Shim adjustment
Under 0.05 mm (0.0020 in)	Increase shim thickness
0.05 – 0.20 mm (0.0020 – 0.008 in)	Correct
Over 0.20 mm (0.008 in)	Decrease shim thickness

List of shims (for right side)

Part No.	Shim thickness
27445-31HA0 (Shim set: 18 pcs.)	0.60 mm (0.0236 in)
	0.65 mm (0.0256 in)
	0.70 mm (0.0276 in)
	0.75 mm (0.0295 in)
	0.80 mm (0.0315 in)
	0.85 mm (0.0335 in)
	0.90 mm (0.0354 in)
	0.95 mm (0.0374 in)
	1.00 mm (0.0394 in)
	1.05 mm (0.0413 in)
	1.10 mm (0.0433 in)
	1.15 mm (0.0453 in)
	1.20 mm (0.0472 in)
	1.25 mm (0.0492 in)
	1.30 mm (0.0512 in)
	1.35 mm (0.0531 in)
	1.40 mm (0.0551 in)
	1.45 mm (0.0571 in)


- If the backlash is too small, replace the right side shim(s) with a thicker one. If the backlash is too large, replace the right side shim(s) with a thinner one. If the right side shim was changed with a 0.10 mm thicker shim, replace the left side shim with one that is 0.10 mm thinner.

Left Side Shim Selection

- Install the right side shim(s) (1) and front drive (differential) gear assembly.


NOTE

Do not install the left side shim(s) at this time.

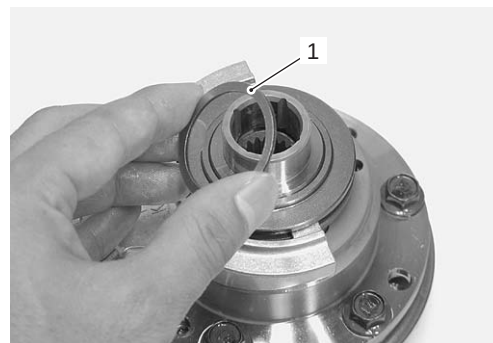

I931H1320070-01

- Put a few pieces of solder (2) (O.D.: 1.2 – 1.5 mm x L: 6 mm) on the shim (1), as shown in the figure.

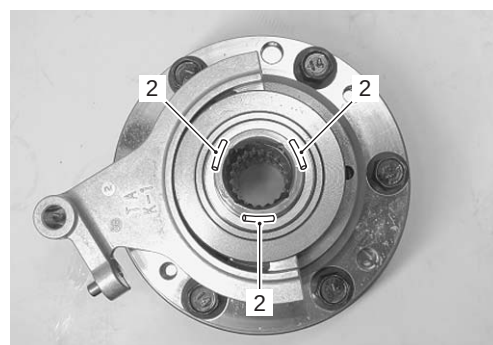


I931H1320071-01

- Install the front drive (differential) case (3) and tighten the bolts to the special torque diagonally.

Tightening torque

Front drive (differential) case bolt: 22 N·m (2.2 kgf-m, 16.0 lbf-ft)

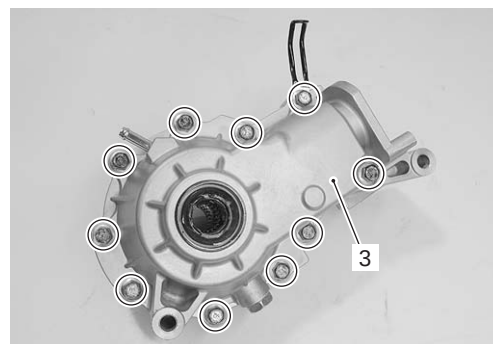


I931H1320072-01

3B-17 Differential:

- Remove the front drive (differential) case.
- Measure the thickness of compressed solder (2) with the micrometer.

Special tool

 (A): 09900-20205 (Micrometer (0 – 25 mm))

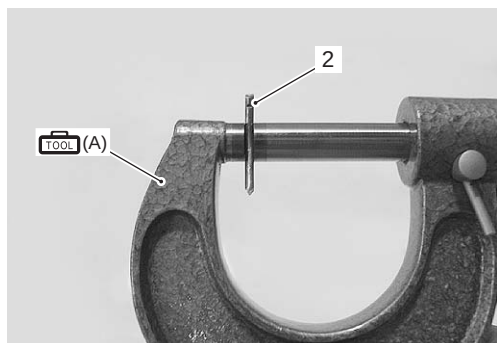

I931H1320073-01

- Select the proper size of shim(s) from the table, according the compressed solder thickness.

List of shims (for left side)

Part No.	Shim thickness
27445-31HA0 (Shim set: 18 pcs.)	0.60 mm (0.0236 in)
	0.65 mm (0.0256 in)
	0.70 mm (0.0276 in)
	0.75 mm (0.0295 in)
	0.80 mm (0.0315 in)
	0.85 mm (0.0335 in)
	0.90 mm (0.0354 in)
	0.95 mm (0.0374 in)
	1.00 mm (0.0394 in)
	1.05 mm (0.0413 in)
	1.10 mm (0.0433 in)
	1.15 mm (0.0453 in)
	1.20 mm (0.0472 in)
	1.25 mm (0.0492 in)
	1.30 mm (0.0512 in)
	1.35 mm (0.0531 in)
	1.40 mm (0.0551 in)
	1.45 mm (0.0571 in)


- After selecting the proper size of shim(s), check or adjust the backlash and tooth contact.

Tooth Contact

CAUTION

Make sure to check the backlash after the tooth contact has been adjusted, since it may have changed. Adjust the tooth contact and backlash until they are both within specification. If the correct tooth contact cannot be maintained when adjusting the backlash, replace the pinion gear and final drive (differential) gear as a set.

- Clean and degrease several teeth on the final drive (differential) gear and pinion gear, and the apply a coating of machinist's layout dye or paste to several teeth of the pinion gear.
- Install the left and right side shims and front drive (differential) assembly.

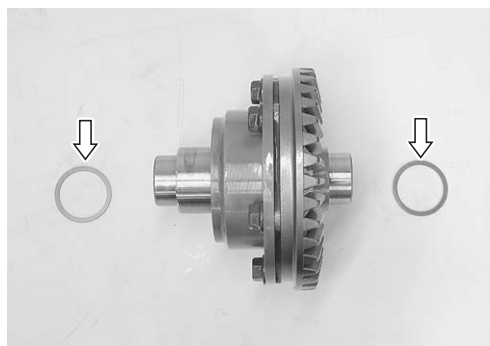

I931H1320066-01

- Install the front drive (differential) case and tighten the bolts to the specified torque diagonally.



Tightening torque

Front drive (differential) case bolt (a): 22 N·m (2.2 kgf-m, 16.0 lbf-ft)



I931H1320074-01

- Rotate the final drive (differential) gear several turns in each direction. This will provide a contact pattern on the coated teeth of final drive (differential) gear.
- Remove the final drive (differential) gear and compare the coated teeth to the examples shown in [A], [B] and [C].
- If tooth contact is found to be incorrect (example [A] and [C]), the shim must be changed and the tooth contact should be re-check until correct (example [B]).

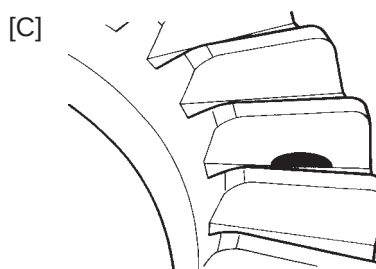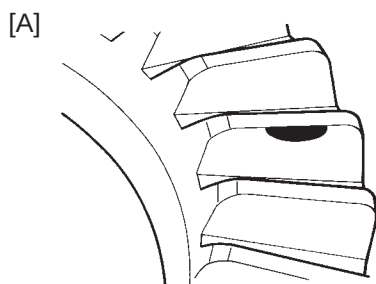

I831G1320046-01

[A]:	Incorrect (Contact at tooth top)
[B]:	Correct
[C]:	Incorrect (Contact at tooth root)


2WD / 4WD / Diff-lock System Inspection

B931H23206010

Actuator


Refer to "Front Drive (Differential) Assembly Removal and Installation (Page 3B-4)".

- 1) Remove the 2WD/4WD/Diff-lock actuator assembly (1).

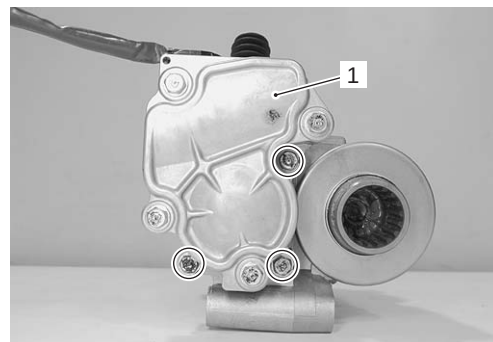

I931H1320075-01

- 2) Connect the 12 V battery to the actuator lead wires (BI wire and Y wire). If the motor does not run, replace the diff-lock/transfer actuator assembly with a new one.

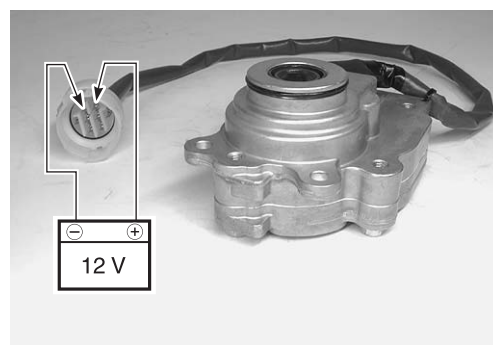


I931H1320076-01

Diff-lock Actuator Diode

Refer to "Electrical Components Location: in Section 0A".

- 1) Disconnect the diff-lock actuator diode (1) (W/B – W wire).

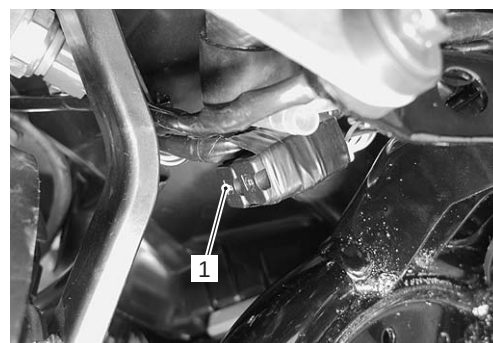

I931H1320077-01

3B-19 Differential:


- 2) Inspect the diff-lock actuator diode (1) as shown in the neutral relay diode inspection. Refer to “Neutral Relay Diode Inspection: in Section 1I”.



I931H1320078-01

2WD/4WD/Diff-lock Switch
Continuity check

- 1) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the 2WD/4WD/diff-lock switch coupler (1).

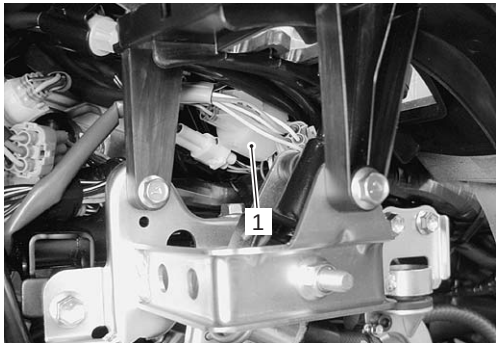

I931H1320079-01

- 3) Inspect the 2WD/4WD/diff-lock switch for continuity with a tester. If any abnormality is found, replace the left handlebar switch assembly with a new one. Refer to “Handlebars Removal and Installation: in Section 6B”.

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))


Position \ Color	Bl/R	O	B	W/Bl	Br	B/G	B/Y	B/W
2WD	○	○			○			
4WD	○	○	○	○				
Diff-lock			○	○	○	○	○	○

I931H1320080-02

- 4) After finishing the 4WD/diff-lock inspection, reinstall the removed parts.

SDS Operation Check

- 1) Check that the transfer selecting switch (diff-lock position switch (1) and diff-lock switch (2)) is turned OFF.
- 2) Set up the SDS tool. (Refer to the SDS operation manual for further details.)

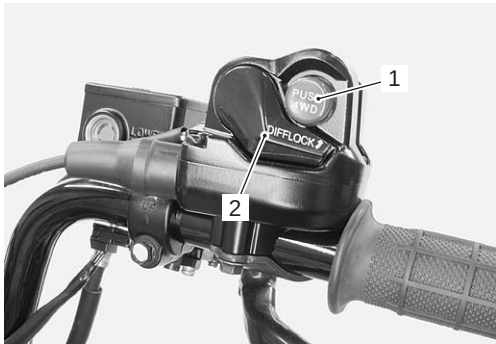

I931H1320081-01

3) Click the "Data monitor" button (3).



I831G1320073-02

4) Check that both "Differential lock position switch signal" and "Differential lock switch signal" are "Open".

☐ Differential lock relay	Off
☐ Fuel pump relay	On
☐ Starter signal	Off
☐ Neutral switch signal	GND
☐ Brake switch signal	Off
☐ Override switch signal	Open
☐ Ignition switch signal	On
☐ Differential lock position switch signal	Open
☐ Differential lock switch signal	Open

I931H1320097-01

5) Turn the transfer selecting switch (diff-lock position switch and diff-lock switch) ON position.

6) Check that both "Differential lock position switch signal" and "Differential lock switch signal" are "GND".


☐ Differential lock relay	On
☐ Fuel pump relay	On
☐ Starter signal	Off
☐ Neutral switch signal	GND
☐ Brake switch signal	Off
☐ Override switch signal	Open
☐ Ignition switch signal	On
☐ Differential lock position switch signal	GND
☐ Differential lock switch signal	GND

I931H1320098-01

If the transfer selecting switch dose not function properly, inspect the 4WD/diff-lock switch for continuity check.

Drive Relay

- 1) Remove the seat. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the drive relay (1).

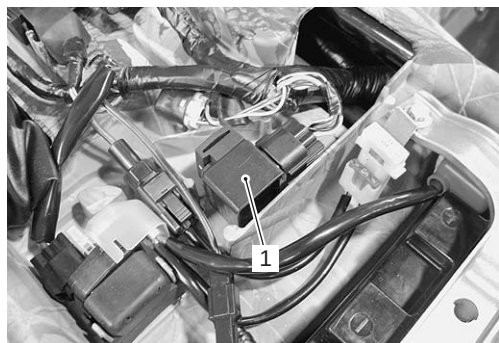


I931H1320082-01

- 3) Check the continuity between “A” and “D”, between “D” and “F” terminals with the multi-circuit tester. Check the insulation between “A” and “E”, between “E” and “F”. Apply 12 V to the terminals “C” and “E” ((+) to “E” and (–) to “C”), check the insulation between “D” and “F”.

Special tool

 : 09900–25008 (Multi-circuit tester set)

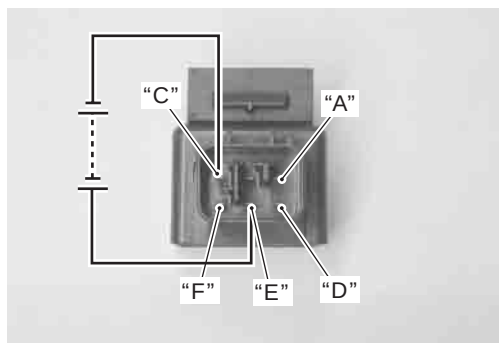


I831G1320077-03

- 4) Apply 12 V to the terminal “B” and “E” ((+) to “E” and (–) to “B”), check the insulation between “A” and “D”. If any abnormality is found, replace the 4WD/diff-lock relay with a new one.

Special tool

 : 09900–25008 (Multi-circuit tester set)

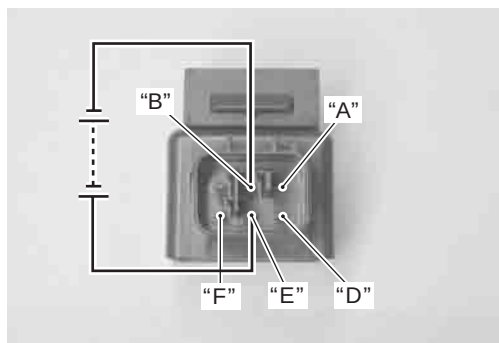

I831G1320078-03

Diff-lock Relay

- 1) Remove the left side cover and engine side cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**” and “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the diff-lock relay (1).




I931H1320083-01

- 3) Check the insulation between “A” and “B” terminals with the multi-circuit tester. Then Apply 12 V to the terminal “C” and “D” ((+) to “C” and (–) to “D”), check the continuity between “A” and “B”. If there is no continuity, replace the diff-lock relay with a new one.

Special tool


 : 09900–25008 (Multi-circuit tester set)

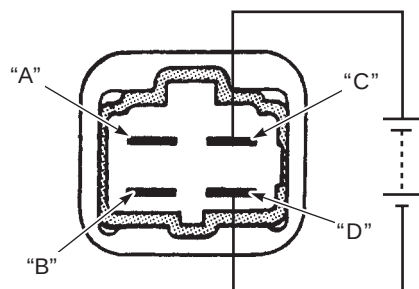

I831G1320079-02

Rear Drive Breather Hose Routing Diagram

B931H23206011

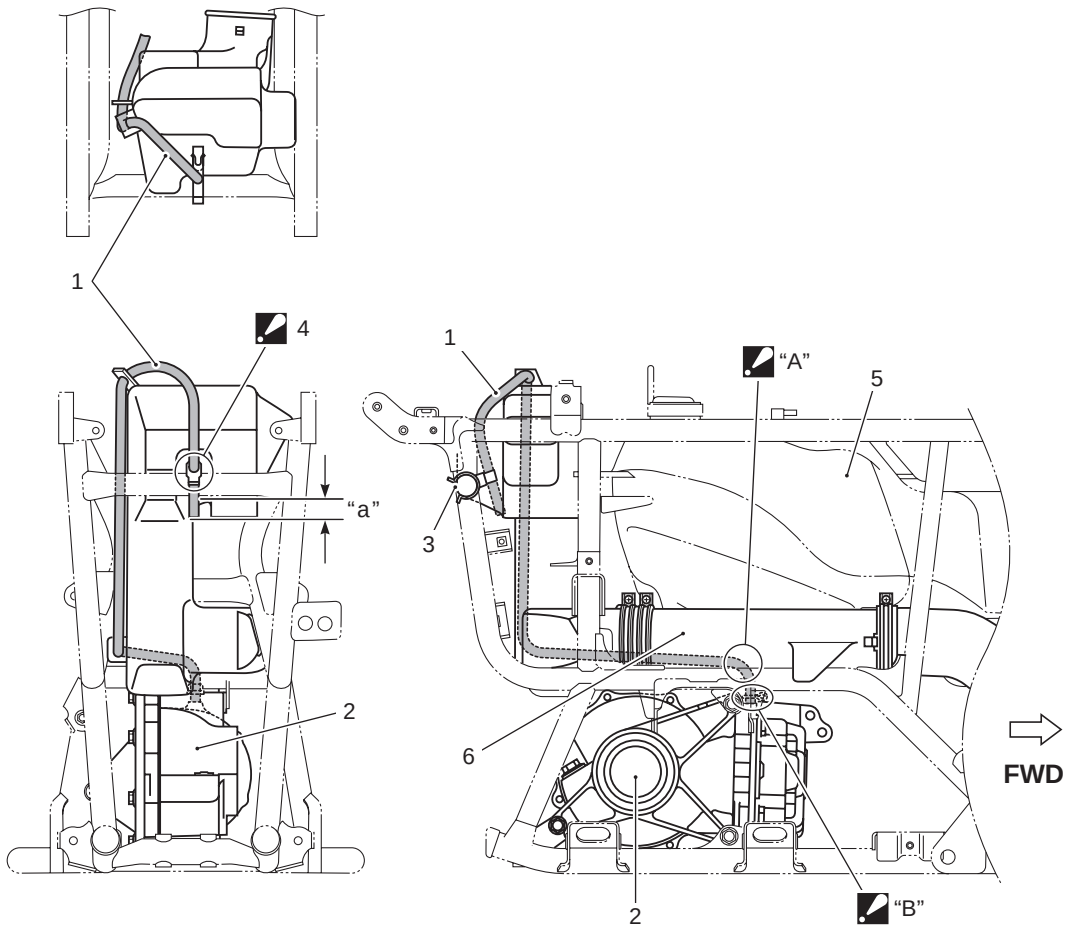


I831G1320145-02

1. Breather hose	6. V-belt cooling duct
2. Rear drive assembly	☑ "A": Press the breather hose between the fuel tank lower cover and belt cooling duct.
3. Clamp	☑ "B": Face the tip of clip to forward.
☑ 4. Clamp : Set the clamp to the concave of belt cooling duct.	"a": 20 – 30 mm (0.79 – 1.18 in)
5. Fuel tank	

Final Gear Components

B931H23206012

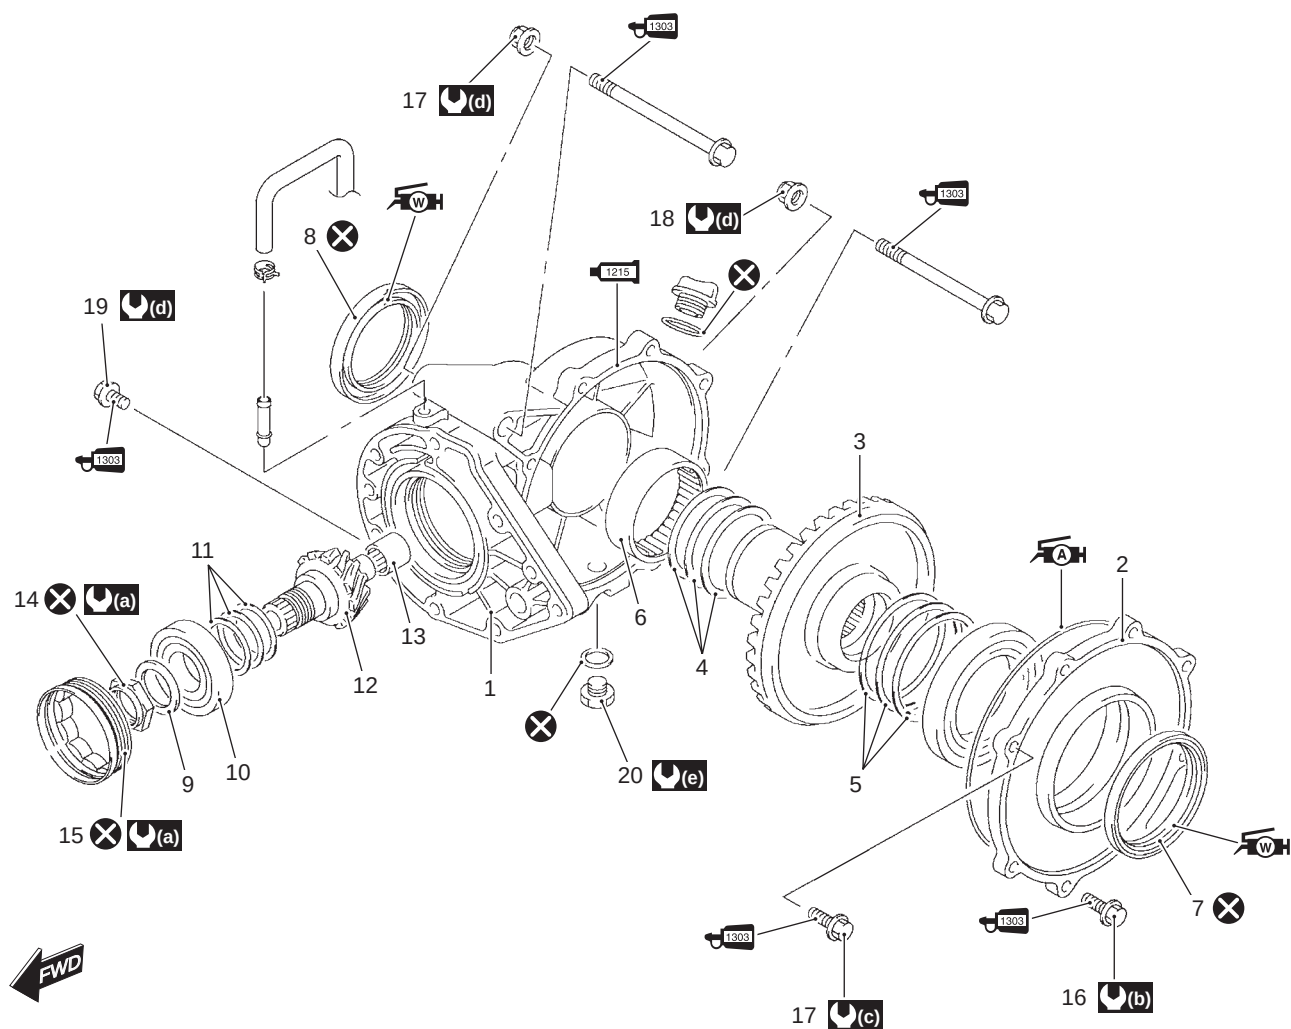


I831G1320080-08

1. Final gear case	11. Shim	: 100 N-m (10.0 kgf-m, 72.0 lbf-ft)
2. Final gear case cover	12. Final drive gear	: 26 N-m (2.6 kgf-m, 19.0 lbf-ft)
3. Final driven gear	13. Bearing	: 55 N-m (5.5 kgf-m, 40.0 lbf-ft)
4. Shim (Right side)	14. Final drive gear nut	: 65 N-m (6.5 kgf-m, 47.0 lbf-ft)
5. Shim (Left side)	15. Final drive stopper	: 23 N-m (2.3 kgf-m, 16.5 lbf-ft)
6. Bearing	16. Final drive gear case cover bolt (M8)	: Apply grease.
7. Oil seal	17. Final drive gear case cover bolt (M10)	: Apply water resistance grease.
8. Oil seal	18. Final gear case mounting nut	: Apply thread lock to the thread part.
9. Washer	19. Final gear case mounting bolt	: Apply bond to matching surface.
10. Bearing	20. Oil drain bolt	: Do not reuse.

Final Gear Construction

B931H23206013

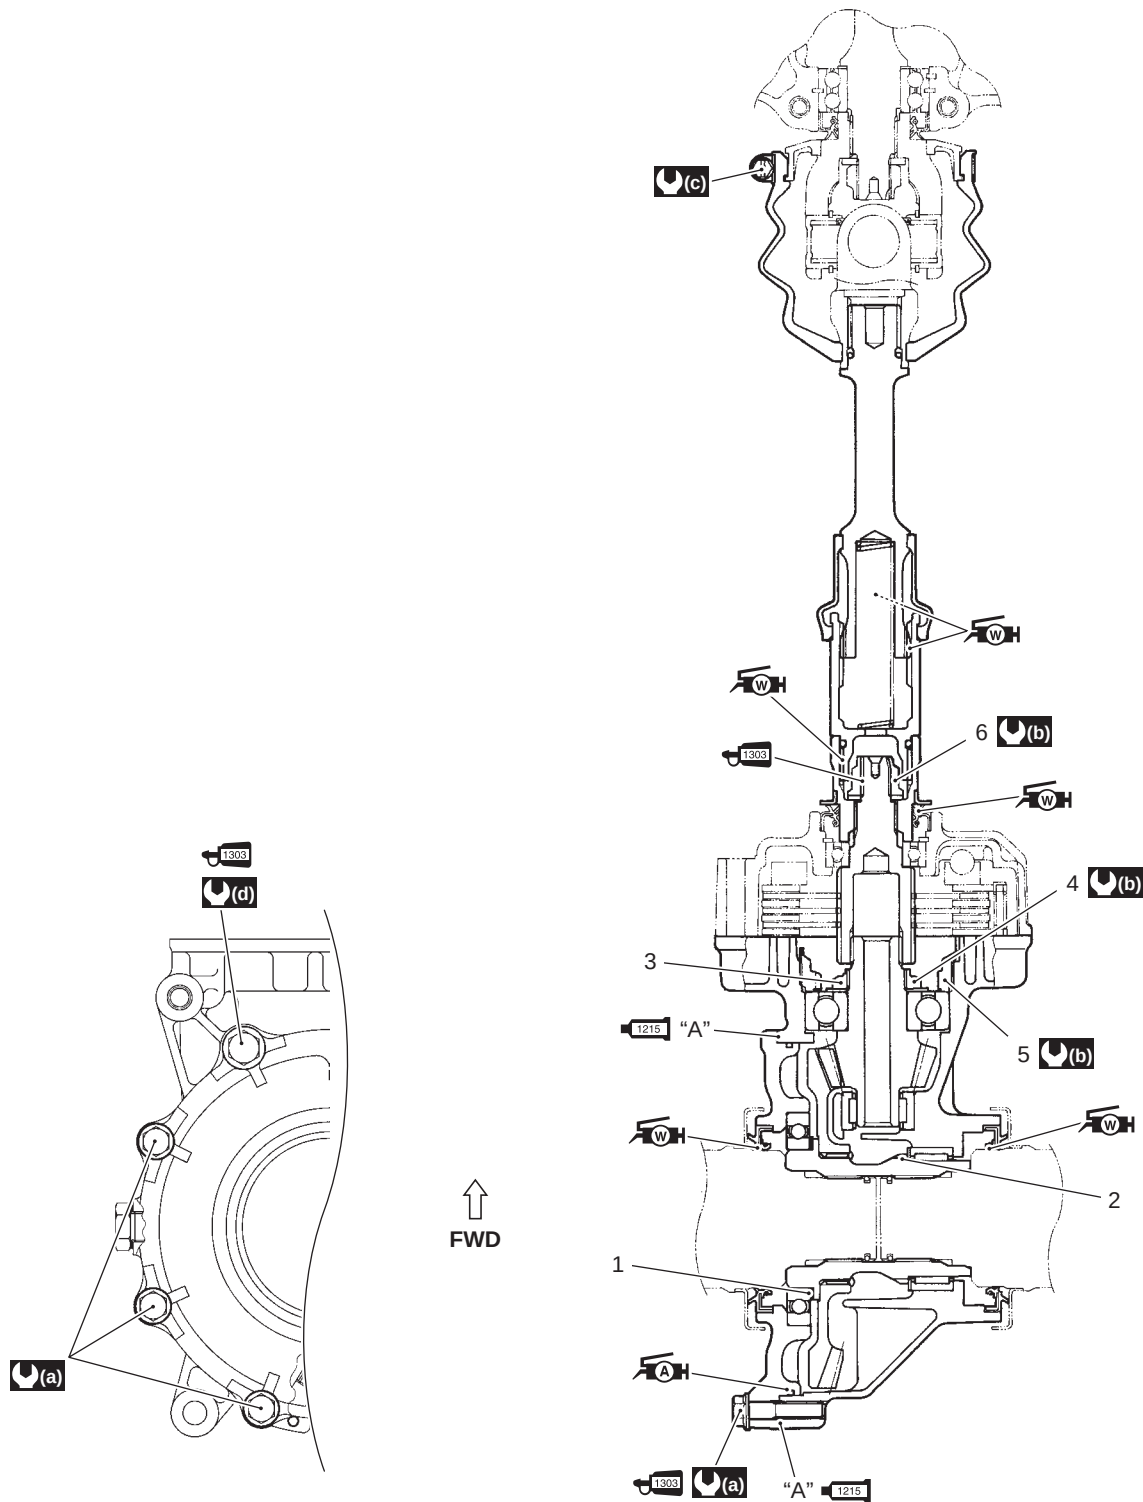

I931H1320084-05

1. Shim (Left side)	6. Lock-nut	(d) : 55 N-m (5.5 kgf-m, 40.0 lbf-ft)
2. Shim (Right side)	"A": Matching surface	A: Apply grease.
3. Final drive gear shim(s)	(a) : 26 N-m (2.6 kgf-m, 19.0 lbf-ft)	W: Apply water resistance grease.
4. Final drive gear nut	(b) : 100 N-m (10.0 kgf-m, 72.5 lbf-ft)	1303: Apply thread lock to thread part.
5. Final drive bearing stopper	(c) : 2 N-m (0.2 kgf-m, 1.5 lbf-ft)	1215: Apply bond.

Final Gear Oil Level Inspection

B931H23206014

Refer to "Final Gear Oil Inspection: in Section 0B".

Final Gear Oil Replacement

B931H23206015


Refer to "Final Gear Oil Inspection: in Section 0B".

Final Gear Assembly Removal and Installation

B931H23206016

Removal

- 1) Remove the trailer towing. Refer to "**Trailer Towing Removal and Instruction: in Section 9E**".
- 2) Remove the rear under cover. Refer to "**Under Cover Removal and Installation: in Section 9D**".
- 3) Drain the final gear oil. Refer to "**Final Gear Oil Inspection: in Section 0B**".
- 4) Remove the rear wheel. Refer to "**Front / Rear Wheel Removal and Installation: in Section 2D**".
- 5) Remove the rear suspension upper arms. Refer to "**Rear Suspension Arm Upper / Lower Removal and Installation: in Section 2C**".
- 6) Remove the rear drive shaft. Refer to "**Rear Drive Shaft Assembly Removal and Installation: in Section 3A**".
- 7) Remove the rear stabilizer. Refer to "**Rear Stabilizer Removal and Installation: in Section 2C**".
- 8) Remove the rear brake adjust nuts (1) and brake cables (2).

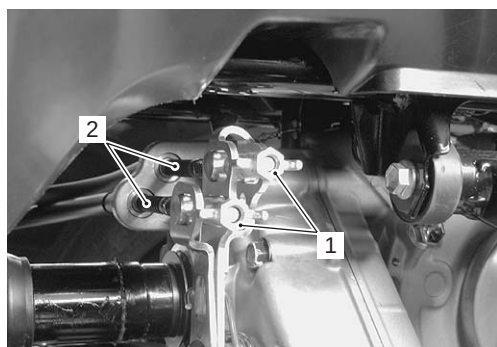

I931H1320085-01


- 9) Remove the V-belt outlet cooling duct. Refer to "**V-belt Cooling Duct Removal and Installation: in Section 5A**".

- 10) Disconnect the breather hose (3).




I931H1320086-01

- 11) Remove the final gear assembly mounting bolts and nuts.

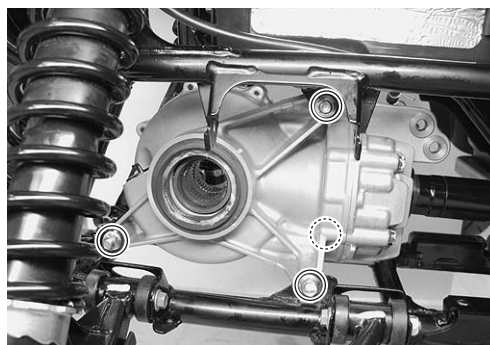

I931H1320087-02

- 12) Remove the rear final gear assembly for backward.

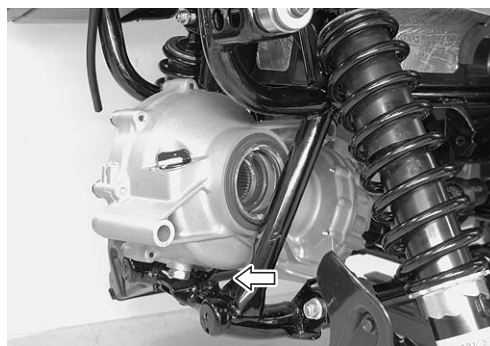


I931H1320088-01

Installation

Install the final gear assembly in the reverse order of removal. Pay attention to the following points:

- Apply 4.5 gram water resistance grease to the spline of the rear propeller shaft.

 : Grease 99000-25160 (Water resistance grease)

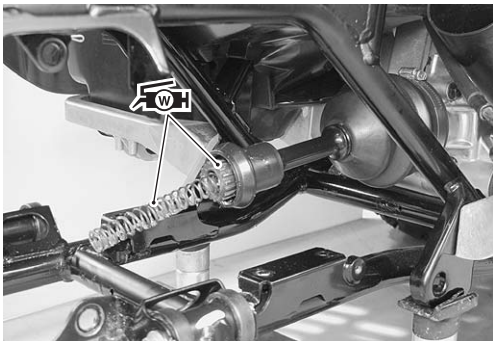

I931H1320089-01


- Install the final gear case assembly to the frame.
- Apply thread lock to the mounting bolts and tighten the rear final gear case mounting nuts (1) and bolts (2) to the specified torque.

Tightening torque

Final gear case mounting nut (a): 65 N·m (6.5 kgf-m, 47.0 lbf-ft)

Final gear case mounting bolt (b): 65 N·m (6.5 kgf-m, 47.0 lbf-ft)

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

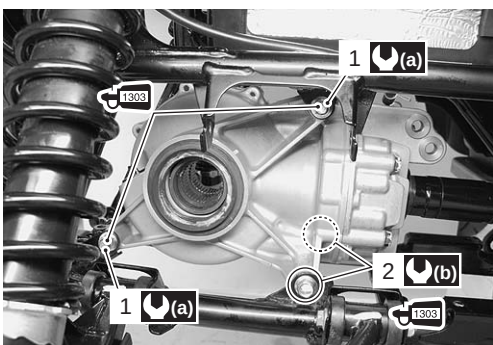

I931H1320090-01

- Install the rear stabilizer. Refer to “Rear Stabilizer Removal and Installation: in Section 2C”.
- Install the rear drive shafts. Refer to “Rear Drive Shaft Assembly Removal and Installation: in Section 3A”.
- Install the suspension upper arms. Refer to “Front Suspension Upper / Lower Arm Removal and Installation: in Section 2B”.
- Install the trailer towing. Refer to “Trailer Towing Removal and Instruction: in Section 9E”.

- Adjust the rear brake pedal free travel. Refer to “Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”.
- Adjust the parking brake lever play. Refer to “Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”.
- Pour the final gear oil. Refer to “Final Gear Oil Inspection: in Section 0B”.
- Install the V-belt outlet cooling duct. Refer to “V-belt Cooling Duct Removal and Installation: in Section 5A”.


Final Gear Assembly Disassembly and Assembly

B931H23206017

Refer to “Final Gear Assembly Removal and Installation (Page 3B-25)”.

Disassembly

- 1) Remove the rear brake assembly (1). Refer to “Rear Brake Assembly Removal and Installation: in Section 4C”.

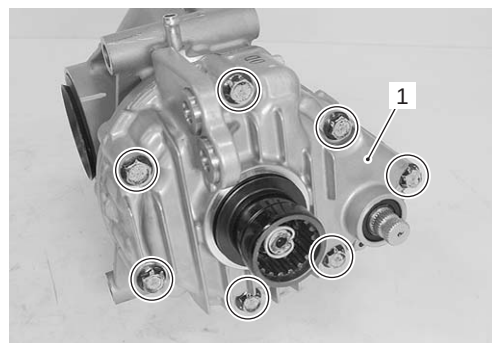

I931H1320091-01


- 2) Remove the final gear cover bolts.



I831G1320093-01


3B-27 Differential:

- 3) Remove the final gear cover (2) from the final gear case, by using two 5 mm screws.

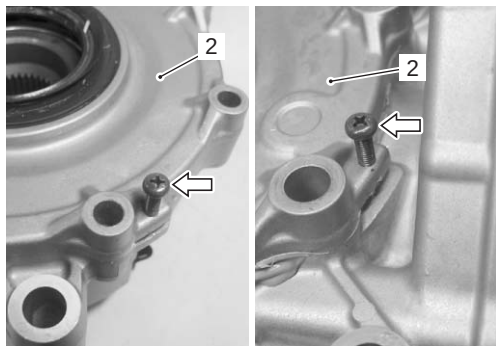


I931H1320092-01

- 4) Remove the O-ring (3) and final driven gear (4).

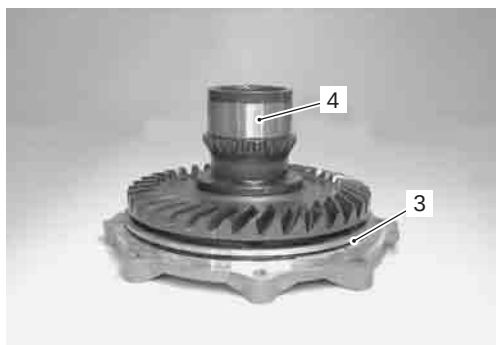

I831G1320095-01

- 5) Remove the shim(s) (5).

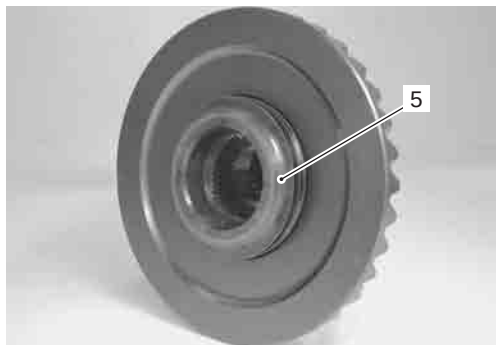


I831G1320096-02

- 6) Remove the oil seal (6) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)

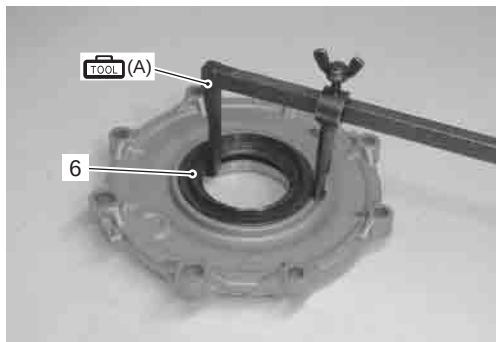

I831G1320097-01

- 7) Remove the final driven gear bearing (7) with the special tool.


NOTE

If there is no abnormal condition, the bearing removal is not necessary.

Special tool

TOOL (B): 09913-70210 (Bearing installer set (10 - 75))

TOOL (C): 09944-66010 (Oil seal installer)

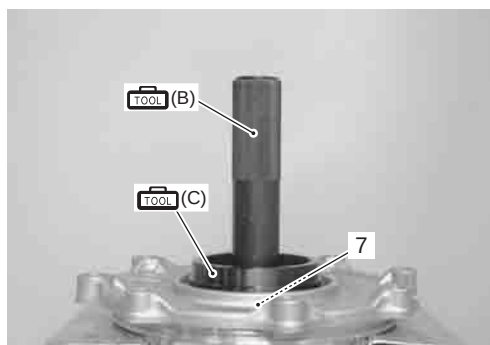

I831G1320098-01

- 8) Remove the shim(s).



I831G1320099-01

- 9) Remove the oil seal (8) with the special tool.

Special tool

TOOL (A): 09913-50121 (Oil seal remover)



I831G1320100-01

- 10) Remove the final driven gear bearing (9) with the suitable tool.


NOTE

If there is no abnormal condition, the bearing removal is not necessary.



I831G1320101-01

- 11) Unlock the final drive stopper (10) with a chisel.

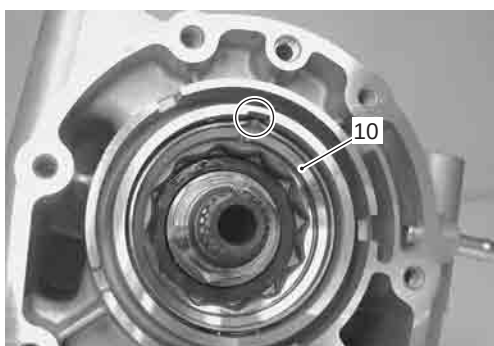


I831G1320102-01

- 12) Remove the final drive stopper (11) with the special tool.


Special tool

 (D): 09924-41830 (Bearing retainer wrench (50 mm))

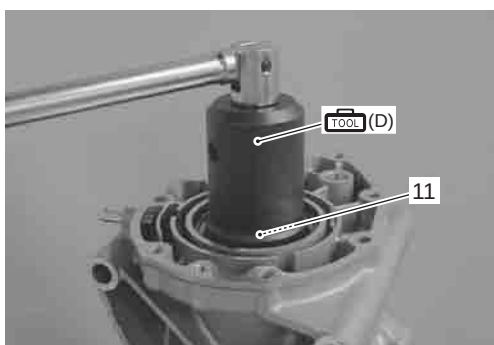


I831G1320103-01

- 13) Remove the final drive gear (12) and shim(s) (13).

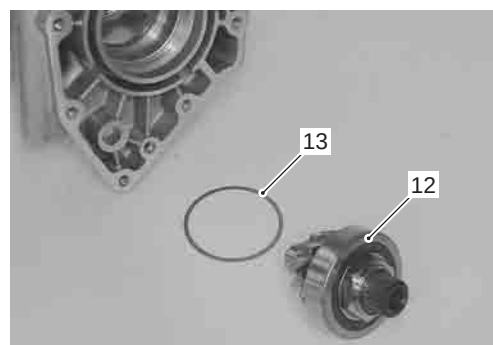

I831G1320104-01

- 14) Unlock the final drive gear nut (14) with a chisel.

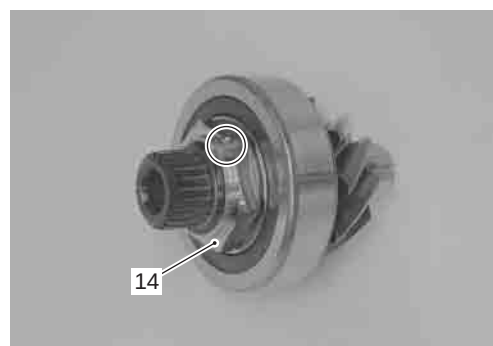


I831G1320105-01

- 15) Remove the final drive gear nut (14) with the special tool.

Special tool

 (E): 09924-52470 (Fixed final drive gear holder)


 (F): 09940-92430 (Rear axle nut wrench (36×36 mm))

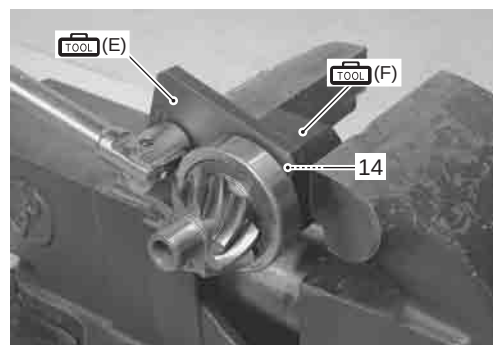

I831G1320106-02

3B-29 Differential:

16) Remove the washer (15).

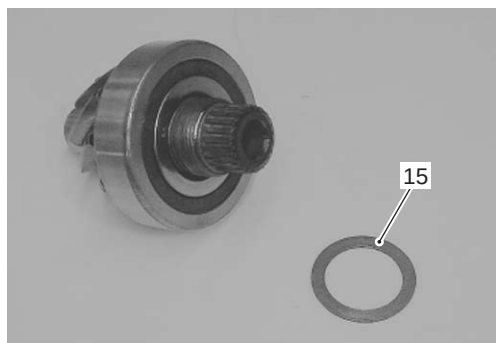

I831G1320107-02


17) Remove the bearing (16) and the upper inner race from the pinion gear with the special tool and suitable tool.

NOTE

If there is no abnormal condition, the bearing removal is not necessary.

Special tool

 (G): 09913-61510 (Bearing puller)

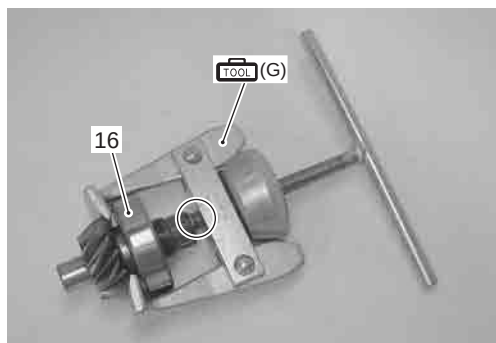


I831G1320108-01

18) Remove the lower inner race (17) with the special tool.

Special tool

 (H): 09913-60910 (Bearing and gear puller)

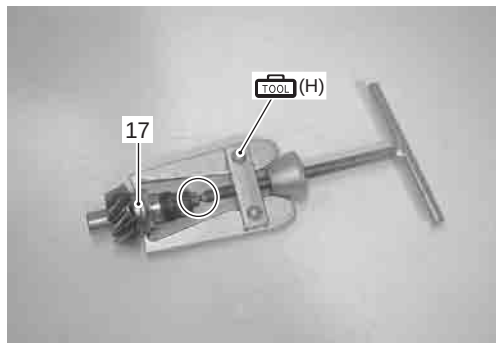

I831G1320110-01


19) Remove the final drive gear bearing (18) with the special tool.

NOTE

If there is no abnormal condition, the bearing removal is not necessary.

Special tool

 (I): 09921-20240 (Bearing remover set)

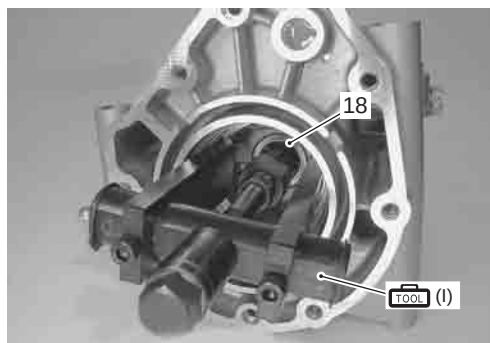

I831G1320111-01

Assembly

⚠ CAUTION


The removed oil seals, O-rings and bearings must be replaced with new ones.

- Install the gear case bearing to the gear case with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

 (B): 09924-84521 (Bearing installer set)

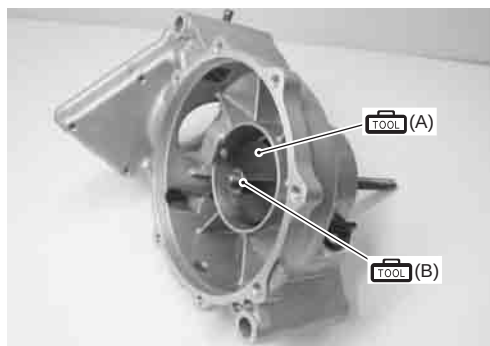


I831G1320112-01

- Install the final drive gear bearing (1) to the final gear case with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

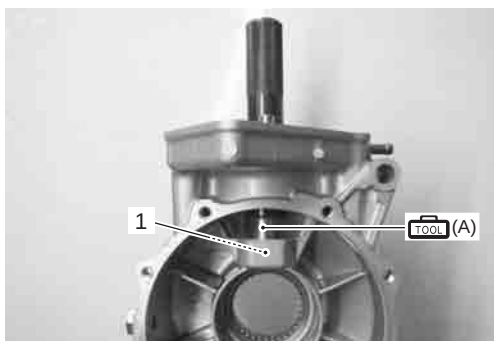


I831G1320113-01

- Install the final drive bearing (2) with the special tool.

Special tool

 (C): 09913-75520 (Bearing installing tool)

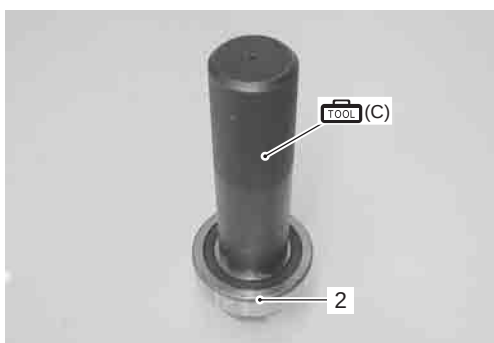


I831G1320114-03

- Install the washer (3) and final drive gear nut (4) to the final drive gear.

CAUTION

The removed final drive gear nut (4) must be replaced with a new one.

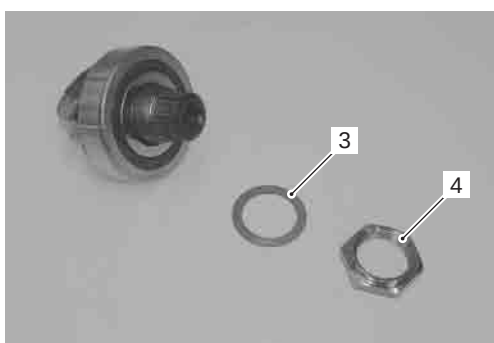

I831G1320115-01

- Tighten the final drive gear nut (4) to the specified torque with the special tool.


Tightening torque

Final drive gear nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

Special tool

 (D): 09924-52470 (Fixed final drive gear holder)

 (E): 09940-92430 (Rear axle nut wrench (36×36 mm))

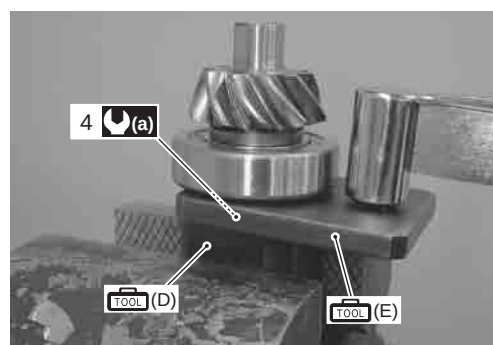


I831G1320116-02

- Lock the final drive gear nut with a center punch.



I831G1320117-01

- Install the shim(s) (5) and final drive gear (6) to the final gear case.

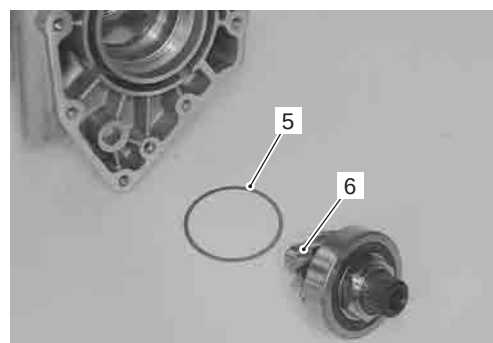

I831G1320118-02

3B-31 Differential:

- Tighten the final drive gear bearing stopper (7) to the specified torque with the special tool.

⚠ CAUTION


The removed final drive gear bearing stopper must be replaced with a new one.

Tightening torque

Final drive gear bearing stopper (b): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

Special tool

TOOL (F): 09924-41830 (Bearing retainer wrench (50 mm))

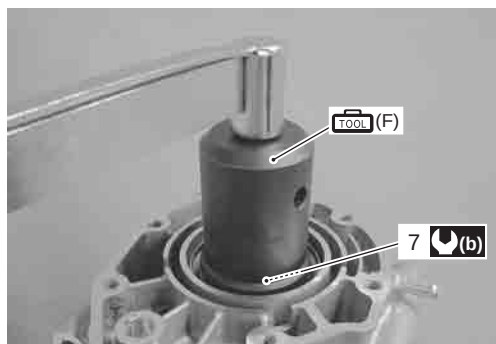

I831G1320119-02

- Lock the bearing stopper with a center punch.

NOTE

After the backlash and tooth contact have been checked or adjusted, stake the collar of bearing stopper into the notch.



I831G1320120-01


- Install the oil seal to the final gear case with the special tool.

Special tool

TOOL (G): 09951-15810 (Brake disk dust cover installer)

- Apply a small quantity of grease to the oil seal lip.

⚠ : Grease 99000-25160 (Water resistance grease)

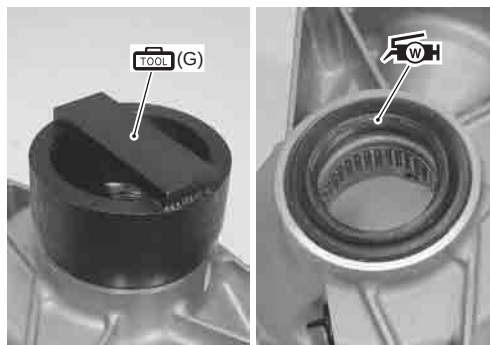

I831G1320121-03

- Install the final driven gear bearing cover with the special tool.

Special tool

TOOL (G): 09951-15810 (Brake disk dust cover installer)



I831G1320122-02


- Install the oil seal with the special tool.

Special tool

 (G): 09951-15810 (Brake disk dust cover installer)


- Apply a small quantity of grease to the oil seal lip.

 : Grease 99000-25160 (Water resistance grease)

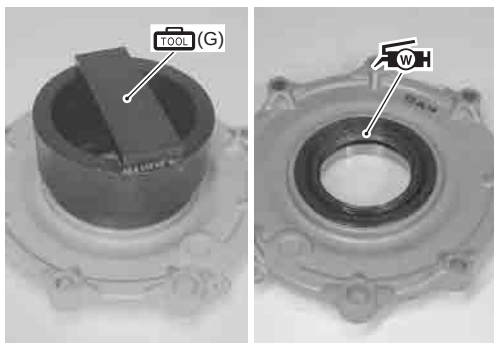

I831G1320123-03


- Install the final driven gear (8) and shim(s) (9) into the final gear case.

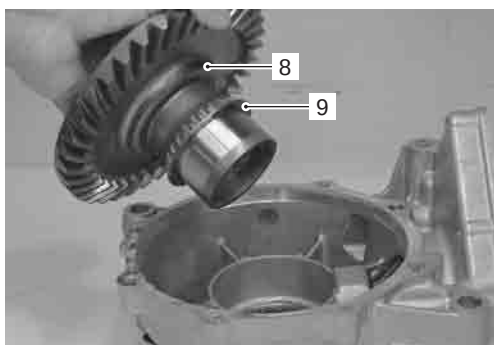

I831G1320124-01

- Install the shim(s) (10).
- Install the O-ring to the final gear cover (11).
- Apply a small quantity of grease to the O-ring.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

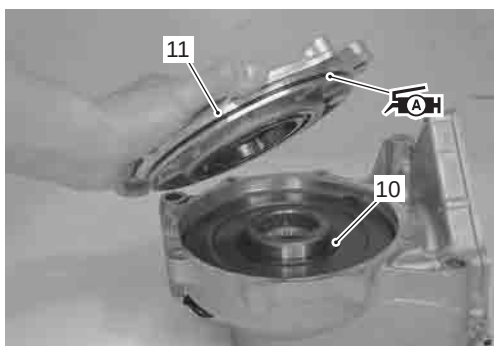

I831G1320125-01


- Apply a small quantity of thread lock to the final gear cover tools and tighten them to the specified torque diagonally.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

Tightening torque

Final gear cover bolt (M8) (c): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

Final gear cover bolt (M10) (d): 55 N·m (5.5 kgf-m, 40.0 lbf-ft)

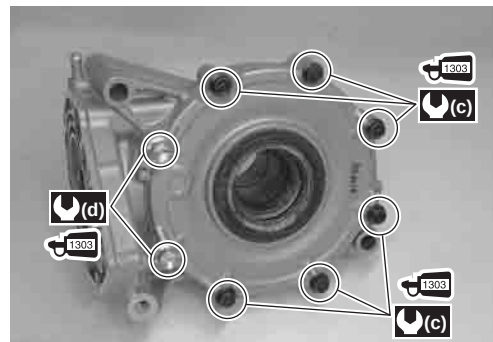

I831G1320126-01

- Check the backlash and tooth contact. Refer to "Final Gear Shim Inspection and Selection (Page 3B-33)".
- Install the rear brake assembly. Refer to "Rear Brake Assembly Removal and Installation: in Section 4C".


Final Gear Related Parts Inspection

B931H23206018

Refer to "Final Gear Assembly Removal and Installation (Page 3B-25)".

Final Driven Gear Oil Seal

Inspect the oil seals lip for damage or wear. If any defects are found, replace the oil seals with new ones.

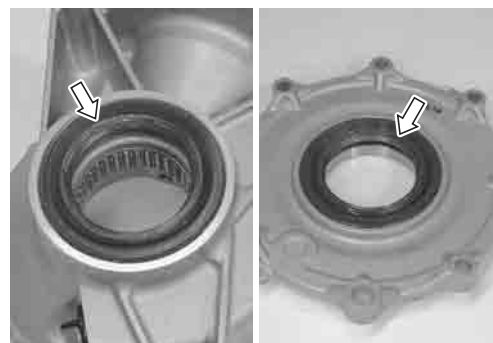

I831G1320127-01


3B-33 Differential:

Final Driven / Drive Gear Bering

Inspect the bearings for abnormal noise and smooth rotation. Replace the bearings if there is anything unusual.



I831G1320128-01

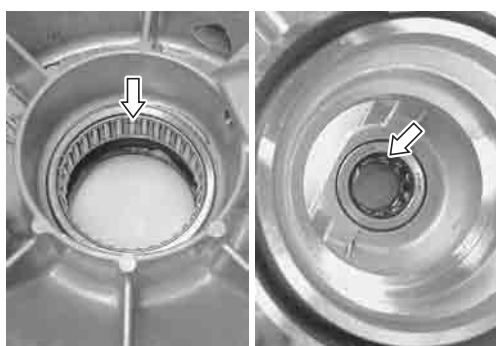

I831G1320129-01

Final Drive Gear

Inspect the final drive gear for wear or damage. Inspect the final drive gear bearing for abnormal noise and smooth rotation. If any defects are found, replace defective parts.



I831G1320130-01

Final Driven Gear

Inspect the final driven gear for wear or damage. If any defects are found, replace drive and driven gear as a set.



I831G1320131-01

Final Gear Shim Inspection and Selection

B931H23206019

Refer to "Final Gear Assembly Removal and Installation (Page 3B-25)".

Backlash

- Install the shim(s), final drive gear assembly and new final drive gear bearing stopper.
- Tighten the final drive gear bearing stopper (1) to the specified torque with the special tool.

NOTE


As this time, it is not necessary to bend the bearing stopper collar.

Special tool

 (A): 09924-41830 (Bearing retainer wrench (50 mm))


Tightening torque

Final drive gear bearing stopper (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

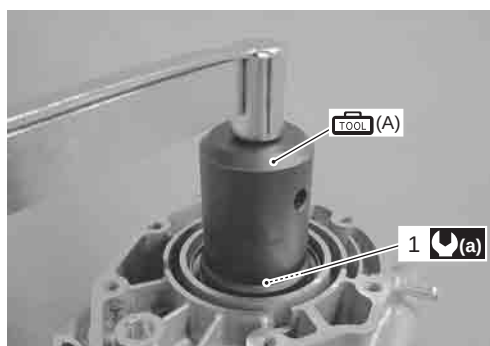

I831G1320132-01

- Install the left side shim(s) and final driven gear.

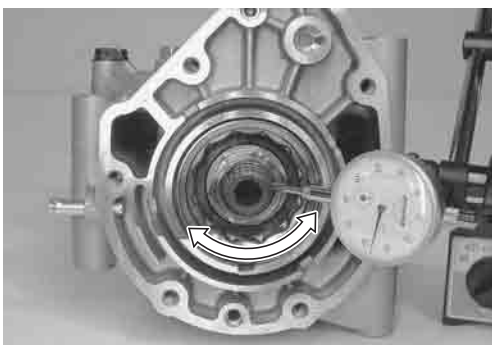

I831G1320133-01

Special tool

 : 09900-20607 (Dial gauge)

 : 09900-20701 (Dial gauge chuck)

Final gear backlash

Standard: 0.02 – 0.06 mm (0.0008 – 0.0024 in)
(without gear cover specification)

Standard: 0.08 – 0.15 mm (0.0031 – 0.0059 in) (gear cover assembled specification)

Measure the backlash with the dial gauge, as shown. Take backlash readings at several places while turning the gear shift in each direction and securely holding the final driven gear. If the backlash is not within specification, the shim must be changed and the backlash should be re-checked until the backlash is within specification. Check to the table for the appropriate shim thickness.

NOTE

Adjust the backlash by referring to the table at using the thickness of the removed shims as a guide.

Backlash	Shim adjustment
Under 0.02 mm (0.0008 in)	Increase shim thickness
0.02 – 0.06 mm (0.0008 – 0.0024 in)	Correct
Over 0.06 mm (0.0024 in)	Decrease shim thickness

List of shims (for right side)

	Part No.	Shim thickness
27327-31G00 (Shim set: 5 pcs.)	27327-31G00-030	0.30 mm (0.0118 in)
	27327-31G00-035	0.35 mm (0.0138 in)
	27327-31G00-040	0.40 mm (0.0157 in)
	27327-31G00-050	0.50 mm (0.0197 in)
	27327-31G00-060	0.60 mm (0.0236 in)

- Check the left side shim selection.

Left Side Shim Selection

- Put a few pieces of solder (O.D.: 1.2 – 1.5 mm x L: 6 mm) on the back side of final driven gear, as shown in the figure.

NOTE

Do not install the left side shim(s) at this time.



I831G1320134-01

- Install the final gear cover and tighten its bolts to the specified torque diagonally. Refer to "Final Gear Assembly Disassembly and Assembly (Page 3B-26)".

NOTE

- Do not install the new O-ring to the gear cover.**
- Do not apply a thread lock to the bolts.**



I831G1320135-01

3B-35 Differential:

- Remove the final gear cover.
- Measure the thickness of compressed solder with the micrometer.

Special tool

 : 09900-20205 (Micrometer (0 – 25 mm))

Shim thickness

Compressed solder thickness + 0.10 mm



I831G1320136-01

- Select the proper size of shim(s) from the table, according as the compressed solder thickness.


List of shims (for left side)

	Part No.	Shim thickness
27326-31G00 (Shim set: 5 pcs.)	27326-31G00-030	0.30 mm (0.0118 in)
	27326-31G00-035	0.35 mm (0.0138 in)
	27326-31G00-040	0.40 mm (0.0157 in)
	27326-31G00-050	0.50 mm (0.0197 in)
	27326-31G00-060	0.60 mm (0.0236 in)

After selecting the proper size of shim(s), check or adjust the backlash and tooth contact.

Tooth Contact

- Remove the final driven gear assembly (1).

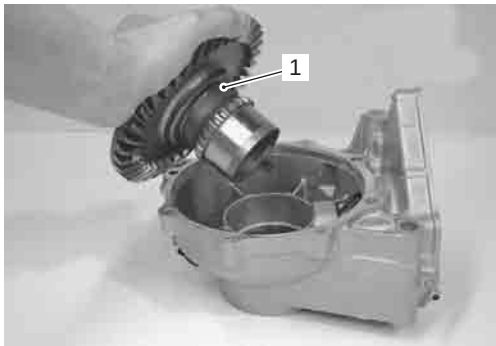


I831G1320137-01

- Clean and degrease several teeth on the final drive gear and final driven gear, and then apply a coating of machinist's layout dye or paste to several teeth of the final drive gear.



I831G1320138-01

- Install the left and right side shim(s) (2) and final driven gear assembly (1).

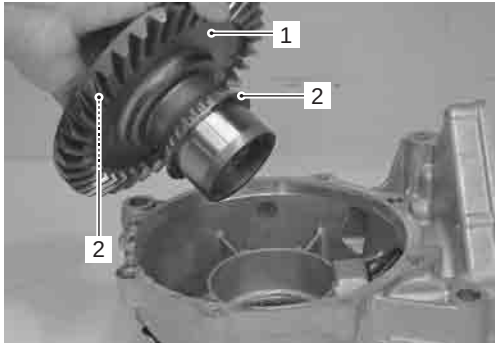

I831G1320139-01

- Install the final gear cover, and then tighten the bolts to the specified torque diagonally. Refer to "Final Gear Assembly Disassembly and Assembly (Page 3B-26)".

NOTE

At this time, it is not necessary to install the gear case cover's O-ring.



I831G1320140-01




I831G1320141-01

- Rotate the final driven gear several turns in each direction. This will provide connect pattern on the coated teeth of the gear.
- Remove the final drive gear and compare the coated teeth to the examples shown in [A], [B] and [C]. If tooth contact is found to be incorrect (examples [A] and [C]), the shim between the final drive gear bearing and gear case must be changed and the tooth contact should be re-checked until the tooth contact is found to be correct (example [B]).


Tooth contact	Shim adjustment
Contact at tooth top [A]	Decrease shim thickness
Contact at tooth top [C]	Increase shim thickness

⚠ CAUTION


Make sure to check the backlash and shim thickness after the tooth contact has been adjusted, since it may have changed. Adjust the tooth contact and backlash until they are both within specification. If the correct tooth contact cannot be maintained when adjusting the backlash, replace the final drive gear and final driven gear as a set.

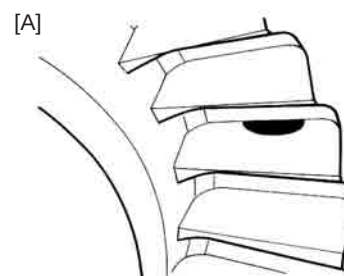

Incorrect (Contact at tooth top)

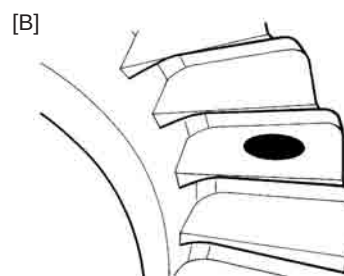

Correct

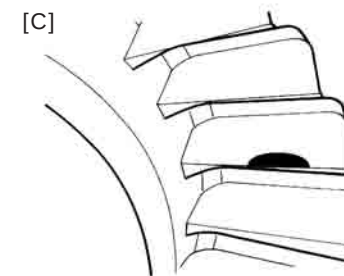

Incorrect (Contact at tooth root)

I831G1320142-02

List of shims (for final drive gear)

	Part No.	Shim thickness
27445-24A01 (Shim set: 5 pcs.)	27445-24A01-030	0.30 mm (0.0118 in)
	27445-24A01-035	0.35 mm (0.0138 in)
	27445-24A01-040	0.40 mm (0.0157 in)
	27445-24A01-050	0.50 mm (0.0197 in)
	27445-24A01-060	0.60 mm (0.0236 in)

Specifications

Service Data

B931H23207001

Drive Train

Unit: mm (in)

Item		Standard	Limit
Front drive (differential) gear backlash		0.05 – 0.20 (0.0020 – 0.0080)	—
Front gear backlash	Without gear cover specification	0.02 – 0.06 (0.0008 – 0.0024)	—
	Gear cover assembled specification	0.08 – 0.15 (0.0031 – 0.0059)	—

Tightening Torque Specifications

B931H23207002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front drive (differential) mounting nut	50	5.0	36.0	☞ (Page 3B-5)
Front drive (differential) case cover bolt	22	2.2	16.0	☞ (Page 3B-12)
4WD/Diff-lock actuator mounting bolt	10	1.0	7.0	☞ (Page 3B-12)
Front drive (differential) case bolt	22	2.2	16.0	☞ (Page 3B-15) / ☞ (Page 3B-16) / ☞ (Page 3B-17)
Final gear case mounting nut	65	6.5	47.0	☞ (Page 3B-26)
Final gear case mounting bolt	65	6.5	47.0	☞ (Page 3B-26)
Final drive gear nut	100	10.0	72.5	☞ (Page 3B-30)
Final drive gear bearing stopper	100	10.0	72.5	☞ (Page 3B-31) / ☞ (Page 3B-33)
Final gear cover bolt (M8)	26	2.6	19.0	☞ (Page 3B-32)
Final gear cover bolt (M10)	55	5.5	40.0	☞ (Page 3B-32)

NOTE

The specified tightening torque is described in the following.

“Front Drive (Differential) Components (Page 3B-2)”

“Front Drive (Differential) Construction (Page 3B-3)”

“Final Gear Components (Page 3B-23)”

“Final Gear Construction (Page 3B-24)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H23208001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000-25010	☞ (Page 3B-10) / ☞ (Page 3B-12) / ☞ (Page 3B-32)
	Water resistance grease	P/No.: 99000-25160	☞ (Page 3B-5) / ☞ (Page 3B-26) / ☞ (Page 3B-31) / ☞ (Page 3B-32)
Sealant	SUZUKI BOND No.1215 or equivalent	P/No.: 99000-31110	☞ (Page 3B-12)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000-32030	☞ (Page 3B-5) / ☞ (Page 3B-12) / ☞ (Page 3B-26) / ☞ (Page 3B-32)

NOTE

Required service material is also described in the following.

“Front Drive (Differential) Components (Page 3B-2)”








“Front Drive (Differential) Construction (Page 3B-3)”

“Final Gear Components (Page 3B-23)”















“Final Gear Construction (Page 3B-24)”

Special Tool

B931H23208002

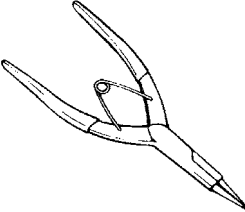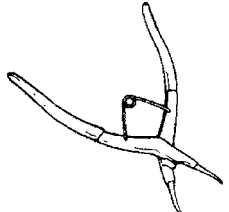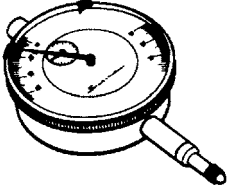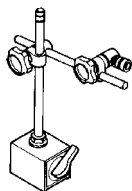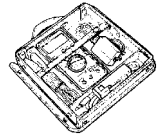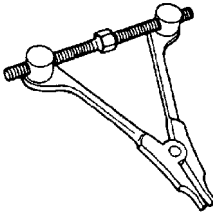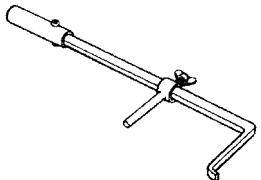09900-06107 Snap ring remover (Open type) ☞ (Page 3B-7) / ☞ (Page 3B-8) / ☞ (Page 3B-10)		09900-06108 Snap ring remover (Close type) ☞ (Page 3B-6) / ☞ (Page 3B-7) / ☞ (Page 3B-8) / ☞ (Page 3B-9) / ☞ (Page 3B-9)	
09900-20205 Micrometer (0 – 25 mm) ☞ (Page 3B-17) / ☞ (Page 3B-35)		09900-20607 Dial gauge ☞ (Page 3B-15) / ☞ (Page 3B-34)	
09900-20701 Dial gauge chuck ☞ (Page 3B-15) / ☞ (Page 3B-34)		09900-25008 Multi circuit tester set ☞ (Page 3B-19) / ☞ (Page 3B-21) / ☞ (Page 3B-21) / ☞ (Page 3B-21)	
09912-34510 Cylinder disassembly ring tool ☞ (Page 3B-6)		09913-50121 Oil seal remover ☞ (Page 3B-27) / ☞ (Page 3B-27)	

 3B-39 Differential:

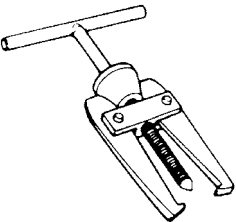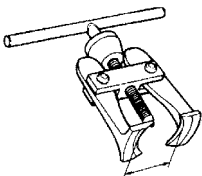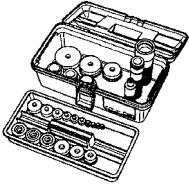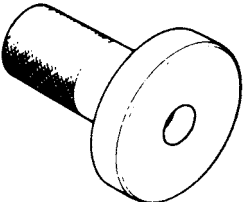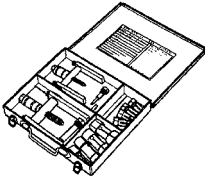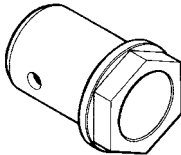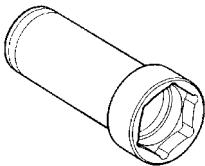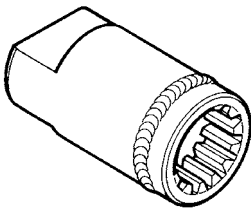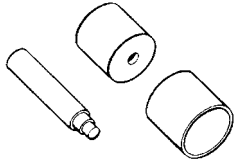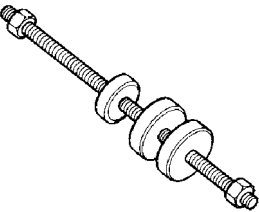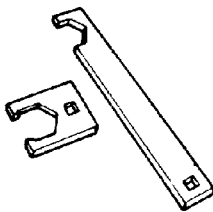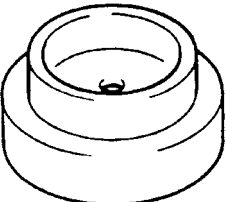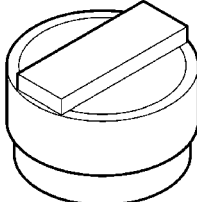09913-60910 Bearing and gear puller ☞ (Page 3B-8) / ☞ (Page 3B-8) / ☞ (Page 3B-29) 	09913-61510 Bearing puller ☞ (Page 3B-29) 
09913-70210 Bearing installer set (10 – 75) ☞ (Page 3B-7) / ☞ (Page 3B-8) / ☞ (Page 3B-9) / ☞ (Page 3B-9) / ☞ (Page 3B-9) / ☞ (Page 3B-10) / ☞ (Page 3B-10) / ☞ (Page 3B-27) / ☞ (Page 3B-29) / ☞ (Page 3B-30) 	09913-75520 Bearing installing tool ☞ (Page 3B-30) 
09921-20240 Bearing remover set ☞ (Page 3B-7) / ☞ (Page 3B-8) / ☞ (Page 3B-8) / ☞ (Page 3B-29) 	09924-41830 Bearing retainer wrench (50 mm) ☞ (Page 3B-28) / ☞ (Page 3B-31) / ☞ (Page 3B-33) 
09924-52460 Socket (52 mm) ☞ (Page 3B-10) 	09924-52470 Fixed final drive gear holder ☞ (Page 3B-28) / ☞ (Page 3B-30) 
09924-74520 Oil seal installer and remover ☞ (Page 3B-10) 	09924-74570 Final drive gear bearing installer ☞ (Page 3B-10) 
09924-84521 Bearing installer set ☞ (Page 3B-8) / ☞ (Page 3B-29) 	09940-92430 Rear axle nut wrench (36×36 mm) ☞ (Page 3B-28) / ☞ (Page 3B-30) 
09944-66010 Oil seal installer ☞ (Page 3B-8) / ☞ (Page 3B-27) 	09951-15810 Brake disk dust cover installer ☞ (Page 3B-31) / ☞ (Page 3B-31) / ☞ (Page 3B-32) 

Transfer

Diagnostic Information and Procedures

Transfer Symptom Diagnosis


B931H23304001

Condition	Possible cause	Correction / Reference Item
Engine is noisy (Noise seems to come from the transfer)	Worn or rubbing gear.	<i>Replace.</i>
	Worn transfer driveshaft or countershaft.	<i>Replace shaft.</i>
	Worn bearing.	<i>Replace.</i>
	Worn splines.	<i>Replace.</i>
Transfer will not shift back	Broken return spring on shift shaft.	<i>Replace.</i>
	Distorted or worn gearshift forks.	<i>Replace.</i>
	Rubbing or sticky gearshift shaft.	<i>Repair or replace.</i>
	Improperly adjusted shift rod.	<i>Adjust.</i>
Transfer jumps out of gear	Worn shifting gears on driveshaft or countershaft.	<i>Replace.</i>
	Distorted or worn gearshift forks.	<i>Replace.</i>
	Weakened return spring on gearshift cam stopper.	<i>Replace.</i>
	Worn gearshift cam stopper plate.	<i>Replace.</i>

Repair Instructions

Transfer Components

B931H23306001

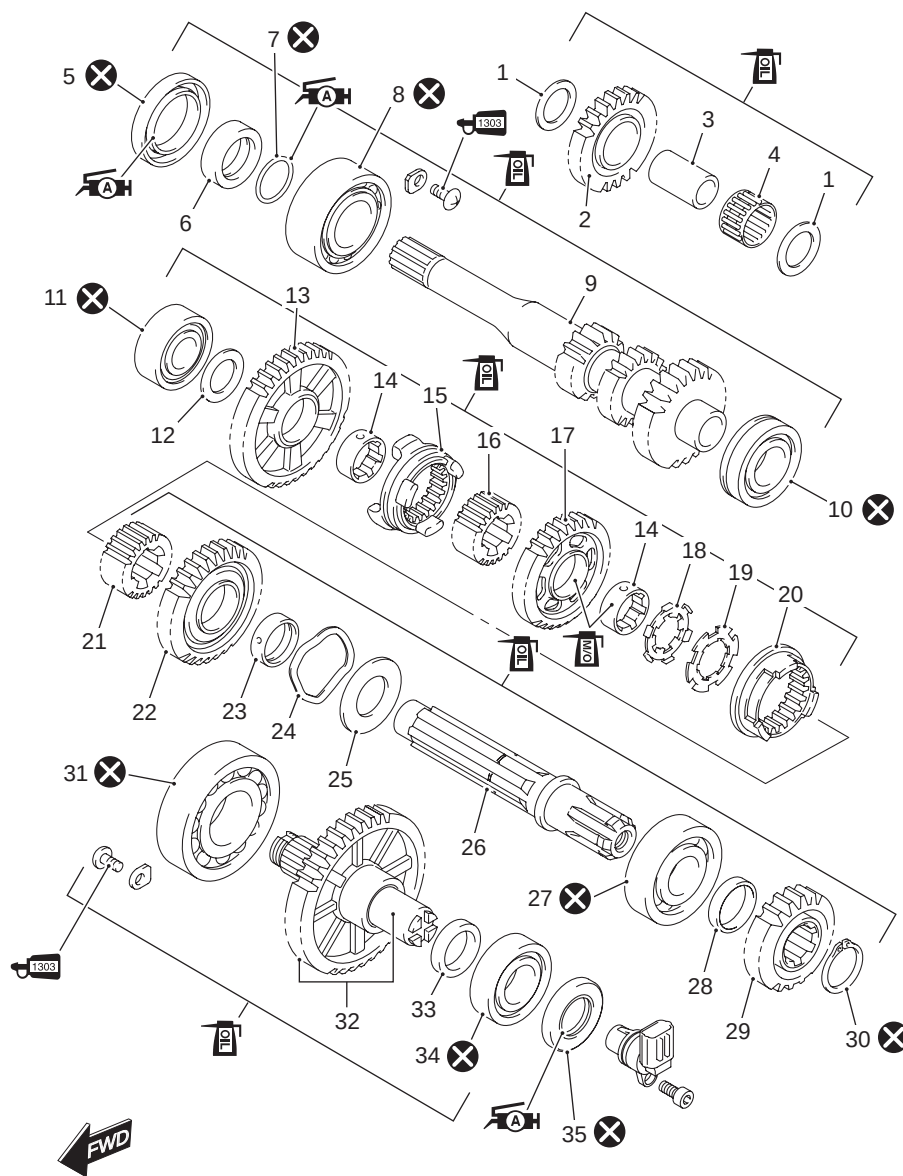

I931H1330001-04

1. Washer	15. Select sliding dog	29. Drive gear No. 2
2. Reverse idle gear	16. Reverse select spacer	30. Snap ring
3. Reverse idle gear shaft	17. Reverse driven gear	31. Output shaft bearing (Right side)
4. Reverse idle gear bearing	18. Lock washer	32. Transfer output drive gear/shaft
5. Driveshaft spacer oil seal	19. Lock washer	33. Spacer
6. Driveshaft spacer	20. High gearshift dog	34. Output shaft bearing (Left side)
7. O-ring	21. Select spacer	35. Oil seal
8. Driveshaft bearing (Right side)	22. High driven gear	: Apply grease.
9. Driveshaft	23. High driven gear bushing	: Apply engine oil.
10. Driveshaft bearing (Left side)	24. Wave washer	: Apply molybdenum oil solution.
11. Countershaft bearing (Right Side)	25. Washer	: Apply thread lock to the thread part.
12. Washer	26. Countershaft	: Do not reuse.
13. Low driven gear	27. Countershaft bearing (Left side)	
14. Driven gear bushing	28. Spacer	

Transfer Removal and Installation


B931H23306002

Removal

- 1) Remove the engine assembly from the frame. Refer to **"Engine Assembly Removal: in Section 1D"**.
- 2) Remove the engine top side. Refer to **"Engine Top Side Disassembly: in Section 1D"**.
- 3) Separate the crankcase with the special tool. Refer to **"Engine Bottom Side Disassembly: in Section 1D"**.


Special tool

 (A): 09920-13120 (Crankshaft remover)

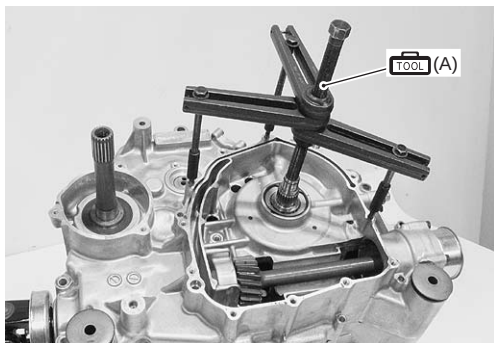


I931H1330002-01

- 4) Remove the gearshift fork shaft (1) and gearshift cam/shaft (2).

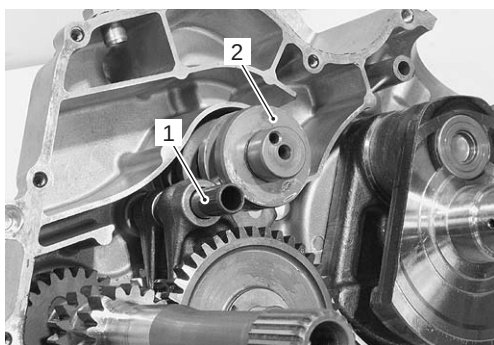


I931H1330003-01

- 5) Remove the gearshift forks (3).

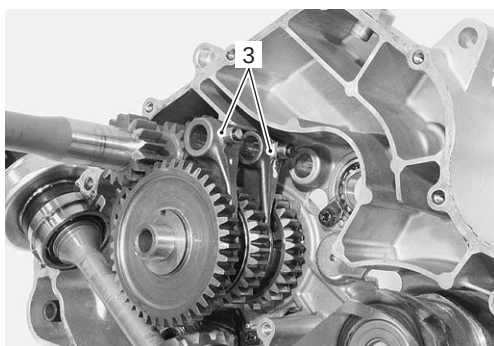


I931H1330004-01

- 6) Remove the countershaft assembly (4) and reverse idle gear (5).

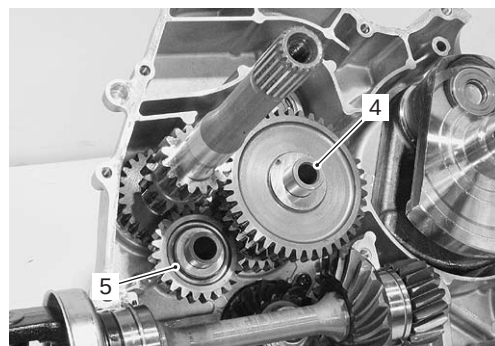


I931H1330005-01

- 7) Remove the driveshaft (6) with a plastic mallet by installing a suitable washer with the driven face bolt (7).

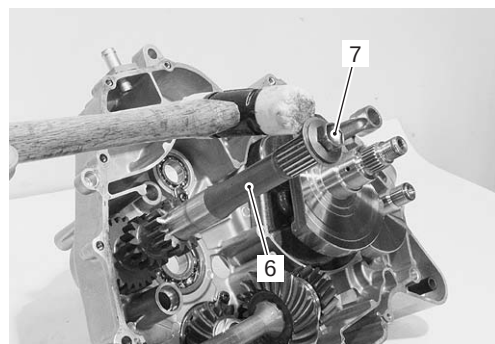

I931H1330006-02


- 8) Remove the rear output shaft (8). Refer to **"Rear Output Shaft / Drive Bevel Gear Removal and Installation: in Section 3D"**.

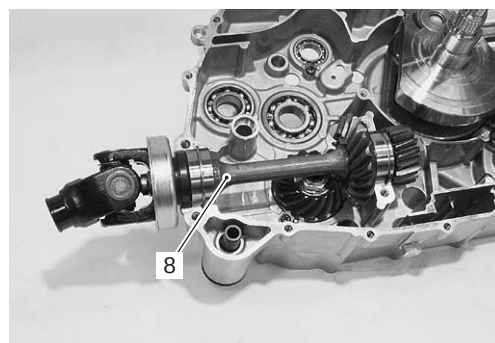

I931H1330007-01


3C-4 Transfer:

- 9) Remove the drive bevel gear (9). Refer to “**Rear Output Shaft / Drive Bevel Gear Removal and Installation: in Section 3D**”.

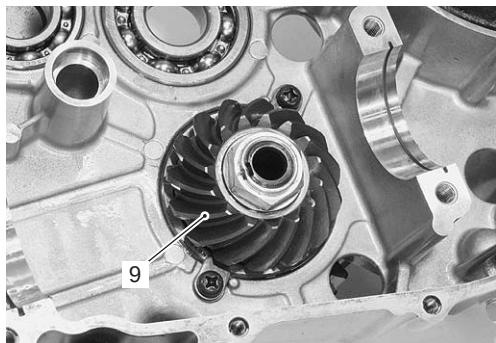

I931H1330008-01


- 10) Remove the transfer output shaft assembly (10) with a plastic mallet.

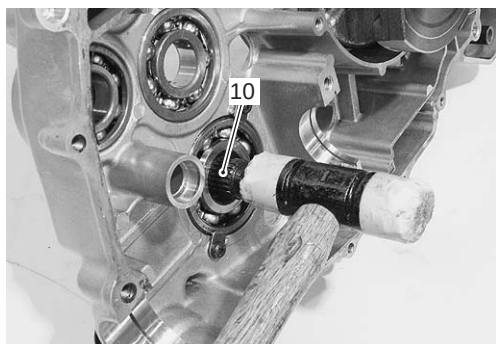

I931H1330009-01

⚠ CAUTION

The transfer output driven gear and transfer output shaft is available only as an assembly.

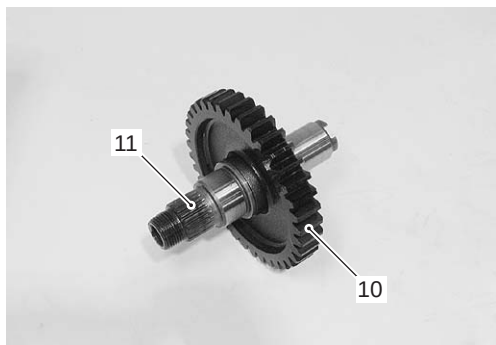

I931H1330010-01


Installation

Install the transfer in the reverse order of removal. Pay attention to the following points:

⚠ CAUTION


Apply engine oil to each gear and shaft.

- Install the transfer output shaft assembly (1) with a plastic mallet.

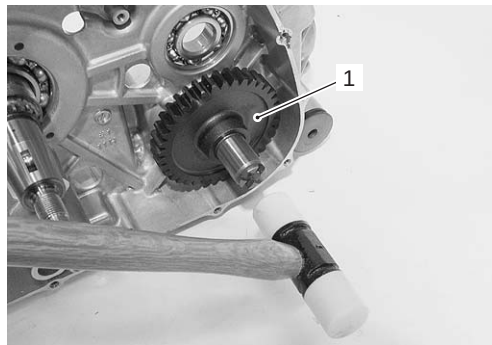

I931H1330011-01

- Install the shim(s) (2), drive bevel gear (3) and washer (4).

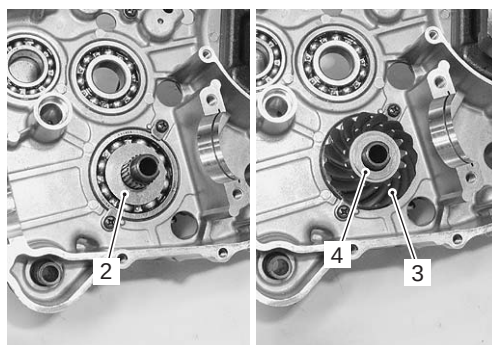

I931H1330012-01

- Hold the transfer output driven gear with the special tools and tighten the drive bevel gear nut (5) to the specified torque.

⚠ CAUTION

The removed drive bevel gear nut must be replaced with a new one.


Special tool

TOOL (A): 09920-53740 (Clutch sleeve hub holder)

TOOL (B): 09920-31020 (Extension handle)

Tightening torque


Rear output shaft drive bevel gear nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

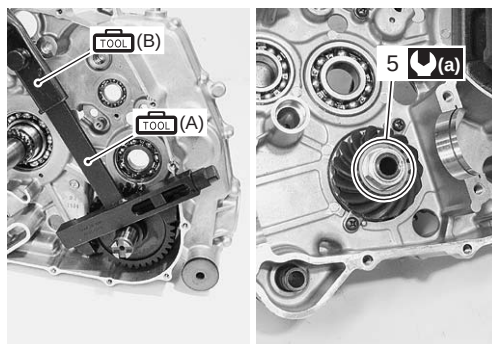

I931H1330013-01


NOTE

After the backlash and tooth contact have been checked or adjusted, lock the drive bevel gear nut with a center punch. Refer to "Driven / Drive Bevel Gear Shim Inspection and Adjustment: in Section 3D".

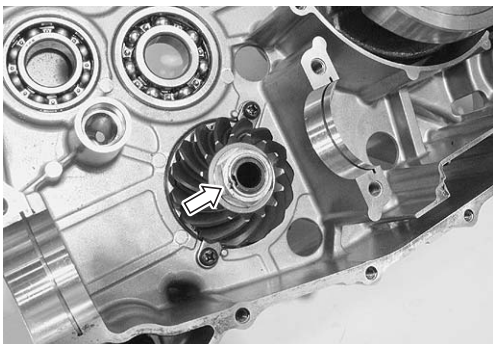


I931H1330014-01

- Install the rear output shaft. Refer to "Rear Output Shaft / Drive Bevel Gear Removal and Installation: in Section 3D".
- Install the driveshaft (6) with a plastic mallet.

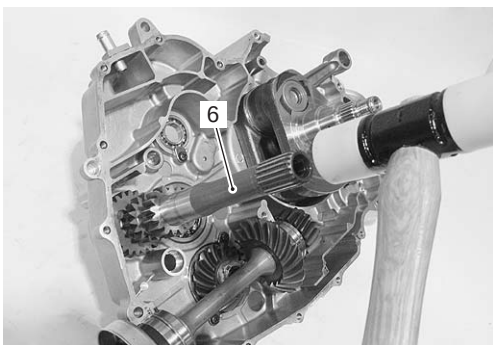

I931H1330015-01

- Install the countershaft assembly (7) and reverse idle gear (8). Refer to "Transfer Components (Page 3C-2)".

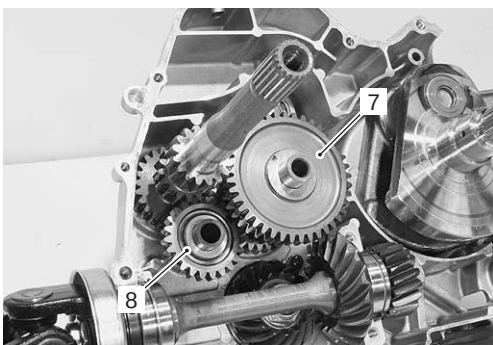

I931H1330016-01


- Install the gearshift fork (9) and reverse gearshift fork (10).

NOTE

Identify the shape of the shift forks and install them properly.




I931H1330017-01

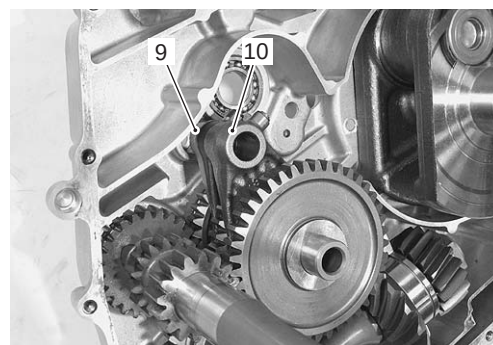


I931H1330018-02

- Install the gearshift cam/shaft (11) and gearshift fork shaft (12).

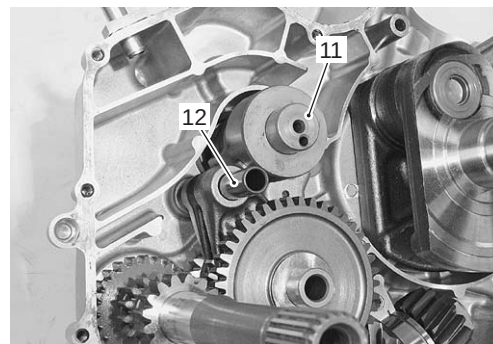

I931H1330019-01

- Assemble the engine. Refer to "Engine Bottom Side Assembly: in Section 1D" and "Engine Top Side Assembly: in Section 1D".
- Remount engine assembly. Refer to "Engine Assembly Installation: in Section 1D".

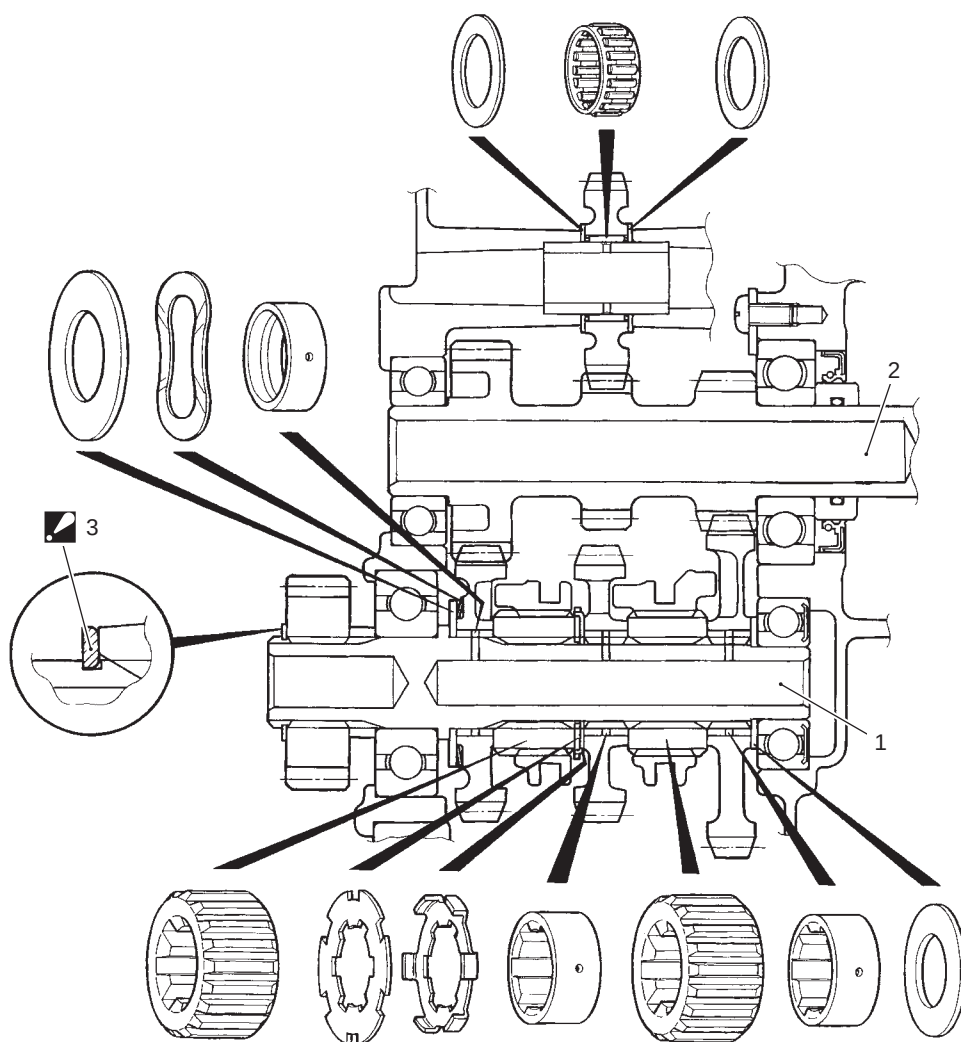

I931H1330052-01

1. Countershaft	2. Driveshaft	3. Snap ring : Assembly snap ring with edge side out.
-----------------	---------------	--

Transfer Disassembly and Assembly

B931H23306004

Refer to "Transfer Removal and Installation (Page 3C-3)".

Disassembly


⚠ CAUTION

Identify the position of each removed part.
Organize the parts in their respective groups
so that they can be reinstalled in their
original position.

Disassemble the transfer countershaft and reverse idle gear as shown in the transfer construction. Refer to "Transfer Construction (Page 3C-6)".

Pay attention to the following point:

- Remove the lock washer (1) by aligning the teeth "A" of the lock washer with the spline grooves "B".

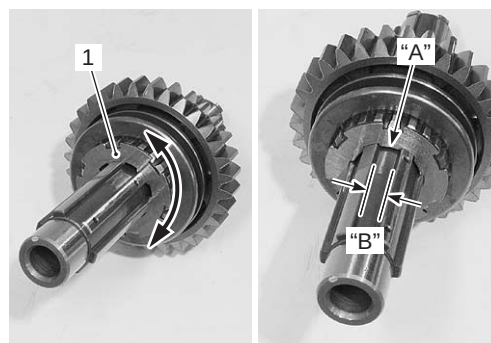

I931H1330020-04

Assembly

NOTE

- When reassembling the driven gears, attention must be given to the locations and positions of washers. The cross sectional view shows the correct position of the snap ring. Refer to "Transfer Construction (Page 3C-6)".
- Before installing the gears, coat lightly engine oil to the countershaft component parts.


Assemble the transfer (countershaft and reverse idle gear) in the reverse order of disassembly. Pay attention the following points:

- Before installing the high driven gear (1), set the wave washer (2) as shown.




I931H1330021-01

- Install the lock washer (3) onto the countershaft and position it so it fits into the groove "A".

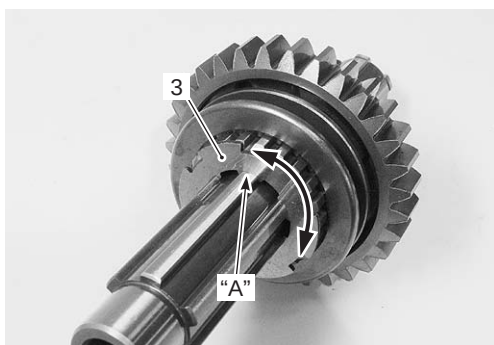

I931H1330022-05


- Fit the lock washer (4) onto the lock washer (3).

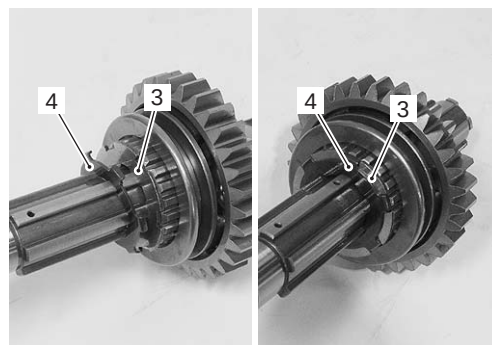


I931H1330023-02

- When installing the driven gear bushing onto the countershaft, align the shaft oil hole "B" with the bushing oil hole "C" as shown.
- Apply molybdenum oil solution to the driven gear bushing (5).

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

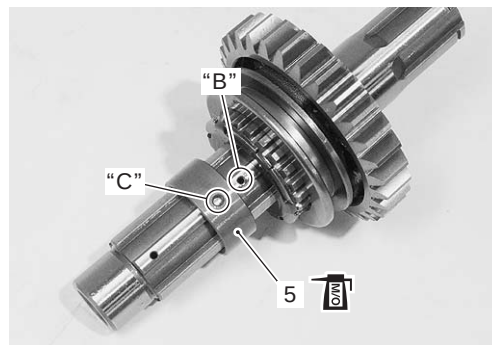

I931H1330024-02

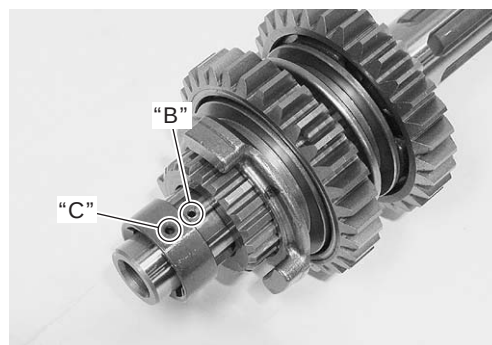

I931H1330025-02

Transfer Related Bearing Removal and Installation

B931H23306005

Refer to “Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation: in Section 1D” and “Transfer Disassembly and Assembly (Page 3C-6)”.

Transfer Related Parts Inspection

B931H23306006

Refer to “Transfer Removal and Installation (Page 3C-3)” and “Transfer Disassembly and Assembly (Page 3C-6)”.

Gearshift Fork to Groove Clearance

NOTE

The clearance for each gearshift fork plays an important role in the smoothness and positiveness of the shifting action.

Using a thickness gauge, check the gearshift fork clearance in the groove of its gear. If the clearance checked is noted to exceed the limit, replace the fork or its dog, or both.


Special tool

 (A): 09900-20803 (Thickness gauge)

Gearshift fork to gearshift fork groove clearance

Standard: 0.10 – 0.30 mm (0.0040 – 0.0120 in)

Service limit: 0.50 mm (0.020 in)

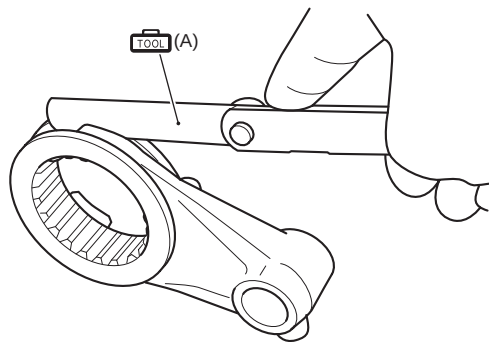

I831G1330066-01

Gearshift Fork Groove Width


Measure the gearshift fork groove width using the vernier calipers.

Special tool

 (A): 09900-20102 (Vernier calipers (200 mm))

Gearshift fork groove width

Standard (Reverse/Low & High): 5.5 – 5.6 mm (0.217 – 0.220 in)

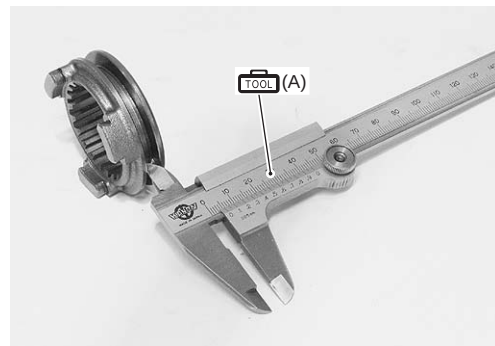

I931H1330026-01

Gearshift Fork Thickness


Measure the gearshift fork thickness using the vernier calipers.

Special tool

 (A): 09900-20102 (Vernier calipers (200 mm))

Gearshift fork thickness

Standard (Reverse/Low & High): 5.3 – 5.4 mm (0.209 – 0.213 in)

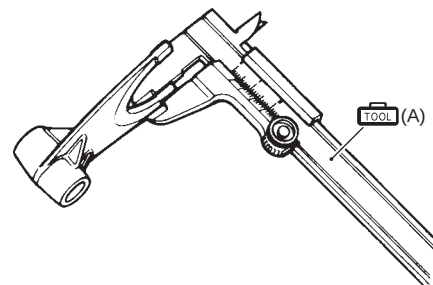

I649G1520058-03

Transfer Related Bearing

Reverse idle gear

Inspect the reverse idle gear shaft bearing for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.




I931H1330027-01

Driveshaft bearing / Countershaft bearing / Gearshift bearing
Refer to “Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation: in Section 1D”.

Oil Seal
Refer to “Oil Seal / Bearing (Crankcase and Generator Cover) Removal and Installation: in Section 1D”.


Gearshift Cam Components

B931H23306007

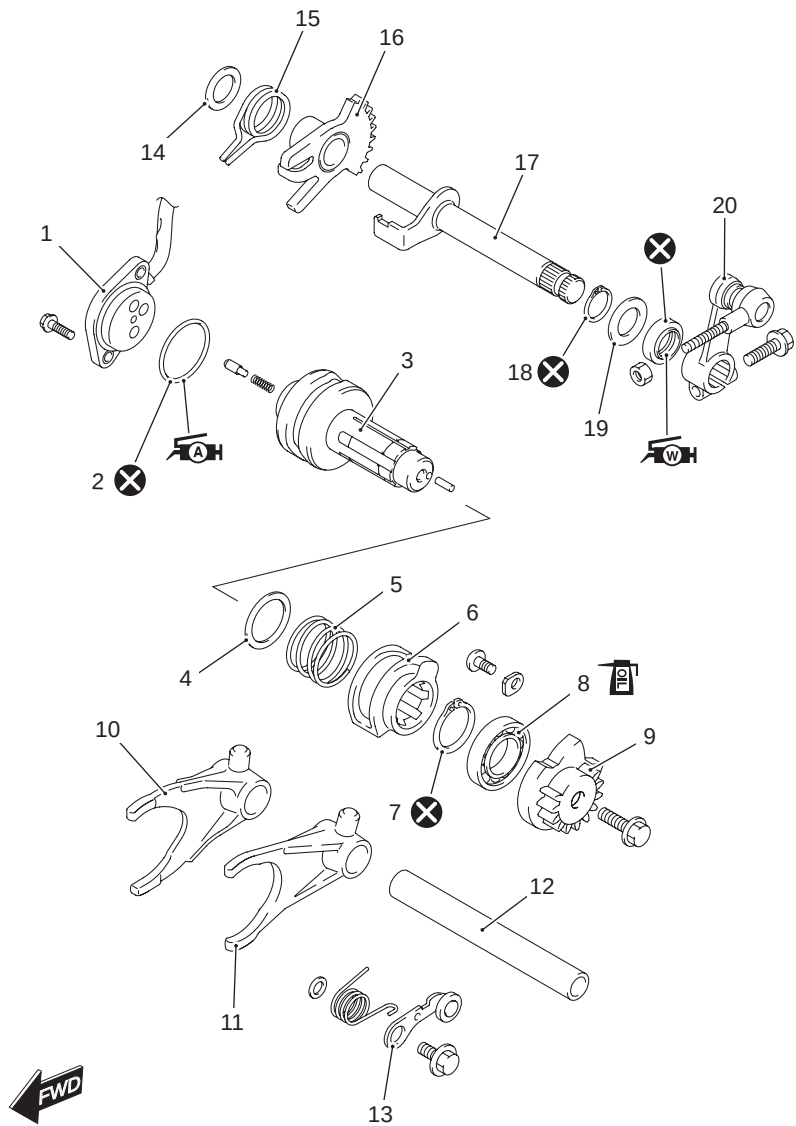

I931H1330053-01

1. Gear position switch	9. Gearshift cam stopper plate	17. Gearshift shaft No. 2
2. O-ring	10. Reverse gearshift fork	18. Snap ring
3. Gearshift shaft No. 1	11. High/Low gearshift fork	19. Washer
4. Washer	12. Gearshift fork shaft	20. Gearshift arm
5. Spring	13. Gearshift cam stopper	 : Apply grease.
6. Gearshift cam	14. Washer	 : Apply water resistance grease.
7. Snap ring	15. Shift arm return spring	 : Apply engine oil.
8. Bearing	16. Shift gear	 : Do not reuse.

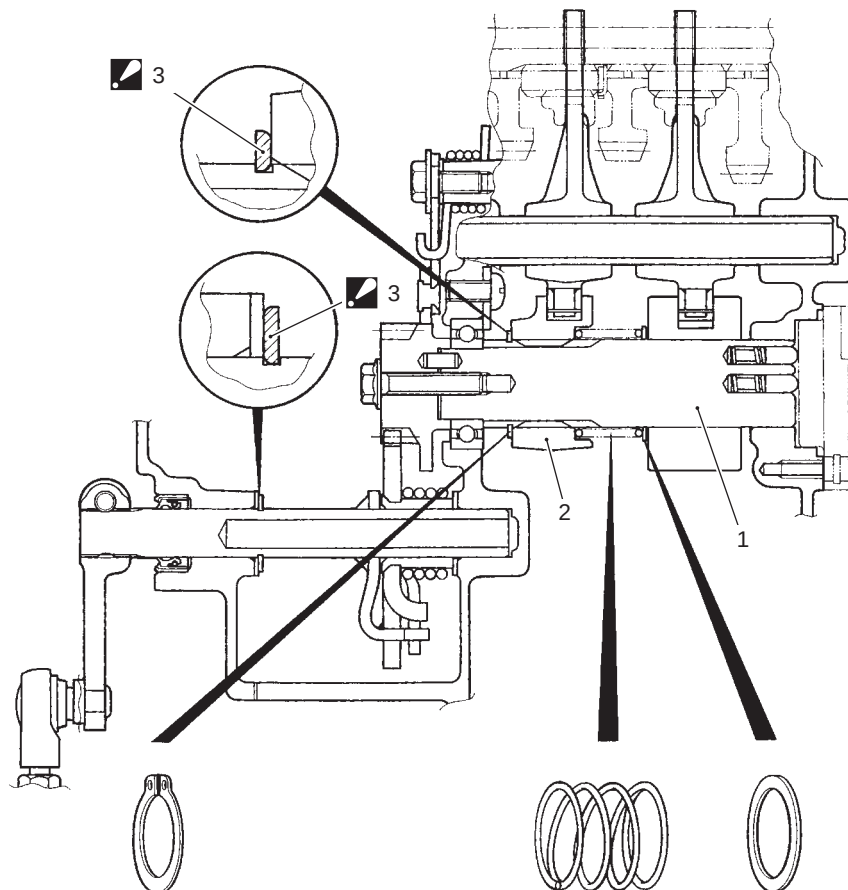

I931H1330054-01

1. Gearshift shaft No. 1	3. Snap ring : Assemble snap ring with sharp edge side out.
2. Gearshift cam	

Gearshift Cam Disassembly and Assembly

B931H23306009

Refer to "Transfer Removal and Installation (Page 3C-3)".

Disassembly

CAUTION

Identify the position of each removed part.
Organize the parts in their respective groups
so that they can be reinstalled in their
original positions.

1) Remove the snap ring (1) and gearshift cam (2).

Special tool

TOOL : 09900-06107 (Snap ring remover (Open type))



I931H1330028-02

- 2) Remove the spring (3) and washer (4).



I931H1330029-01

Assembly

Assemble the gearshift cam in the reverse order of disassembly. Pay attention to the following points:

NOTE

When reassembling the gearshift cam, attention must be given to the location and position of washer and snap ring. The cross sectional view shows the correct position of the cam, washer and snap ring. Refer to "Gearshift System Construction (Page 3C-10)".


⚠ CAUTION

- Never reuse a snap ring. After a snap ring has been removed from the shaft, it should be discarded and a new snap ring must be installed.
- When installing a new snap ring, do not expand the end gap larger than required to slip the snap ring over the shaft.
- After installing snap ring, make sure that it is completely seated in its groove and securely fitted.

- Install the gearshift cam (1) to the shaft.

⚠ CAUTION

Align the punch mark "A" of the gearshift cam with the punch mark "B" of the shaft.

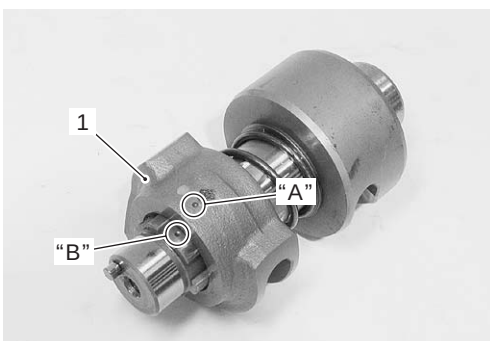


I931H1330030-01

- When installing a new snap ring (2), pay attention to its direction. Fit it to the side where the thrust is as shown in the figure.

Special tool

 : 09900-06107 (Snap ring remover (Open type))

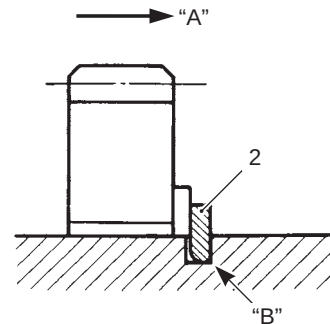

I931H1330051-01

2. Snap ring	"A": Thrust	"B": Sharp edge
--------------	-------------	-----------------

Gear Position (GP) Switch Inspection

B931H23306010


Refer to "Gear Position Switch Inspection: in Section 1I".

Gear Position (GP) Switch Removal and Installation

B931H23306011

Removal


- 1) Turn the ignition switch OFF.
- 2) Remove the left and right side cover. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 3) Remove the drive V-belt inner cover. Refer to "V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A".
- 4) Remove the clamp (1) and disconnect the gear position switch coupler (2).

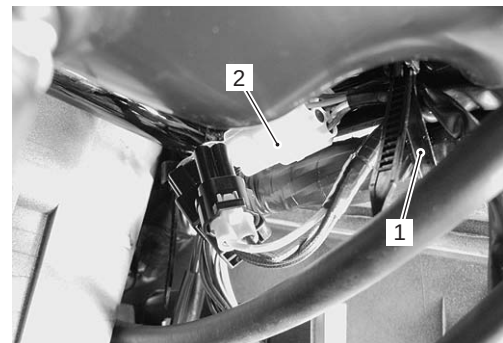

I931H1330031-01

3C-12 Transfer:

- 5) Disconnect the clamp and remove the gear position switch (3).

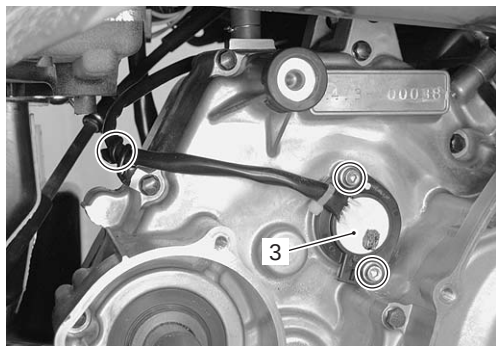

I931H1330032-01

Installation


Install the gear position switch in the reverse order of removal. Pay attention to the following points:

- Apply grease to the O-ring.

CAUTION


Replace the O-ring with a new one.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

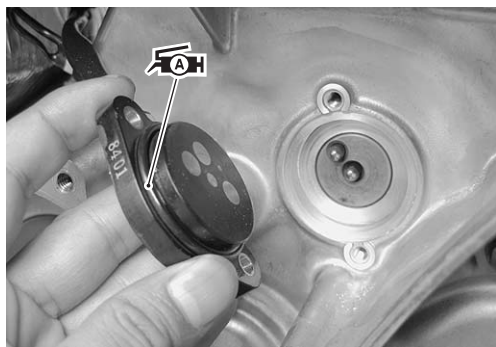

I931H1330033-01

- Tighten the gear position switch bolts (1).

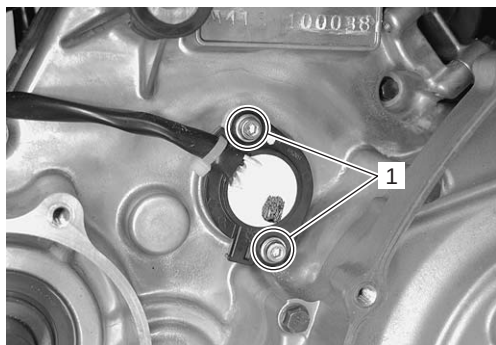

I931H1330034-01

- Route the gear position switch lead wire. Refer to **“Wiring Harness Routing Diagram: in Section 9A”**.
- Install the drive V-belt. Refer to **“V-belt Type Continuously Variable Automatic Transmission Removal and Installation: in Section 5A”**.
- Install the removed parts.


HI / LO Position Diode Inspection

B931H23306012

Refer to **“Electrical Components Location: in Section 0A”**.

Inspect the HI position diode and LO position diode in the following procedures:

- 1) Remove the left side cover. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.
- 2) Disconnect the HI position diode (1) and LO position diode (2).

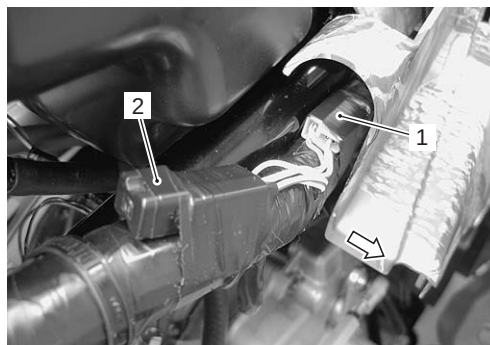

I931H1330035-01

- 3) Inspect the HI position diode (1) and LO position diode (2) as shown in the neutral relay diode inspection. Refer to **“Neutral Relay Diode Inspection: in Section 1I”**.



I931H1330050-01


Gearshift Shaft No. 2 / Gearshift Cam Plate Removal and Installation

B931H23306013

Removal

Refer to "Shift Lever Assembly Removal and Installation: in Section 5A".

- 1) Drain engine oil. Refer to "Engine Oil and Filter Replacement: in Section 0B".
- 2) Remove the generator cover. Refer to "Generator Removal and Installation: in Section 1J".
- 3) Remove the gearshift shaft No. 2 assembly (1).

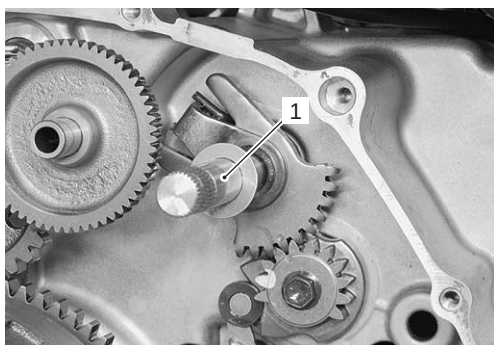


I931H1330036-02

- 4) Remove the following parts from the gearshift shaft No. 2 (2).
 - Washer (3)
 - Shift arm return spring (4)
 - Shift gear (5)
 - Snap ring (6)


Special tool

 : 09900-06107 (Snap ring remover (Open type))

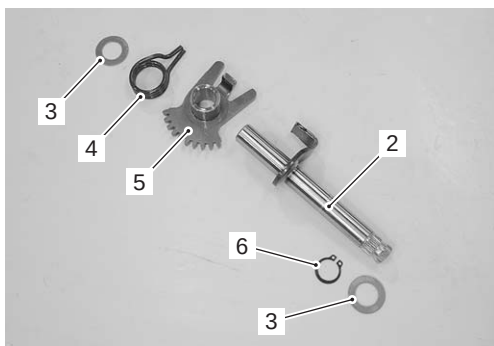

I931H1330037-02

- 5) Remove the gearshift cam stopper plate (7).
- 6) Remove the gearshift cam stopper (8).

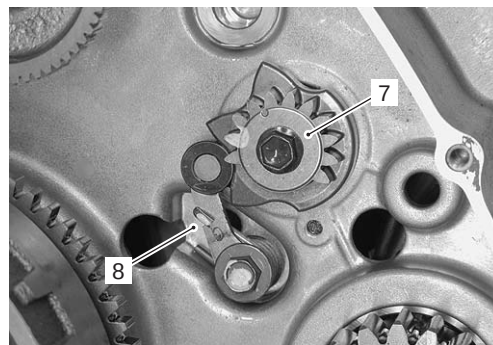

I931H1330038-02

Installation

Install the gearshift shaft No. 2 and gearshift cam plate in the reverse order of removal. Pay attention to the following points:

- Install the gearshift cam stopper (1), bolt (2), washer (3) and return spring (4).


NOTE

Hook the return spring end "A" to the gearshift cam stopper.


⚠ CAUTION

Make sure that the gearshift cam stopper moves smoothly.

- Tighten the gearshift cam stopper bolt (2) securely.

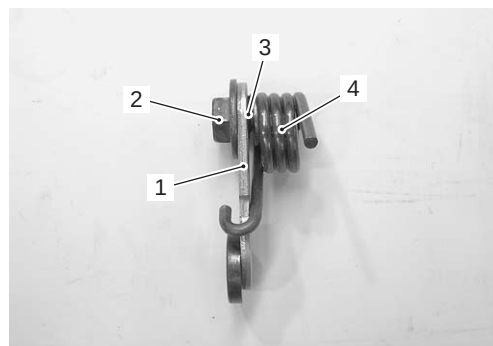

I931H1330039-01

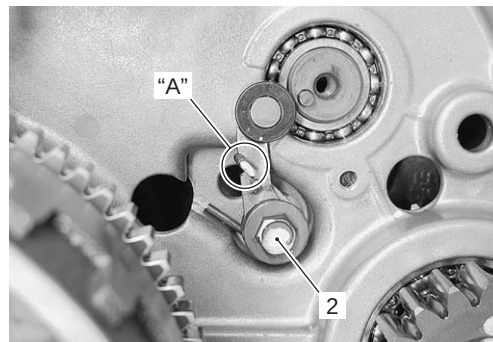


I931H1330040-01

3C-14 Transfer:


- Check the gearshift cam stopper moves smoothly.
- Locate the gearshift cam in the neutral position.
- Install the gearshift cam stopper plate (5).

NOTE

- **Align the gearshift cam pin “B” with the gearshift cam stopper plate hole “C”.**
- Tighten the gearshift cam stopper plate bolt securely.

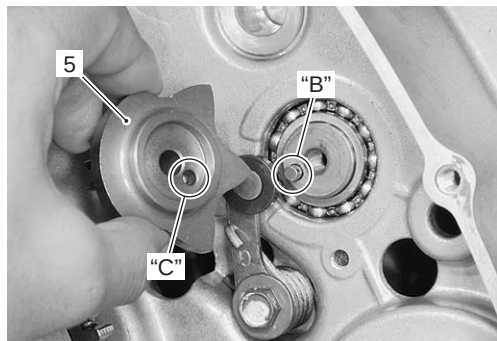


I931H1330041-01

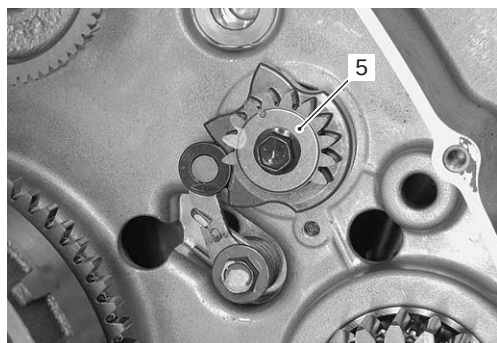

I931H1330042-01

- When installing the shift arm return spring, position the stopper “D” of gearshift shaft No. 2 and stopper “E” of shift gear between the return spring ends “F”.

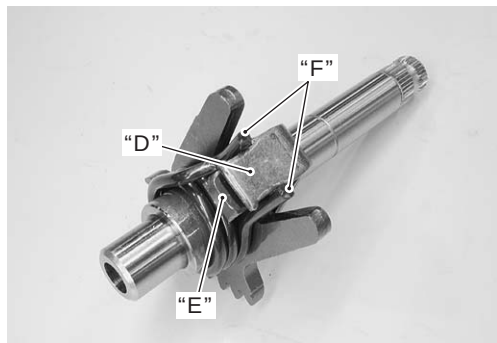


I931H1330043-01

- Install the snap ring (6) and washers (7).


⚠ CAUTION

The removed snap ring (6) must be replaced with new one.

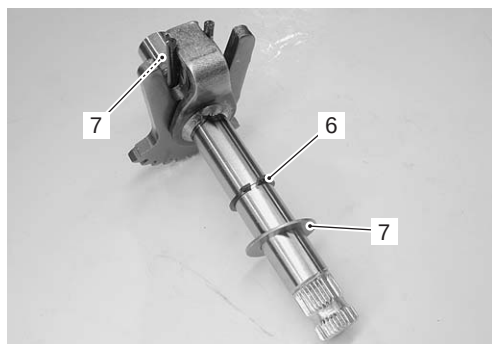

I931H1330044-02

- Install the gearshift shaft by aligning the punch mark “G” of shift gear with the match mark “H” of gearshift cam stopper plate.

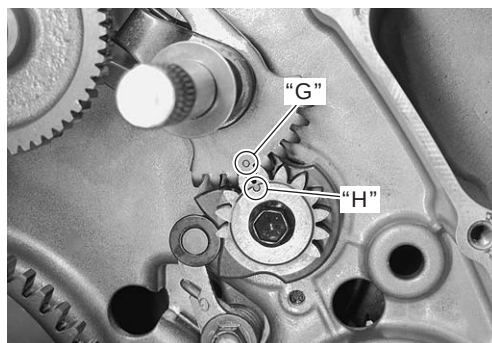

I931H1330045-01

- Install the generator cover. Refer to **“Generator Removal and Installation: in Section 1J”**.
- Pour engine coolant and engine oil. Refer to **“Cooling System Inspection: in Section 0B”** and **“Engine Oil and Filter Replacement: in Section 0B”**.

Gearshift Linkage Inspection

B931H23306014

Refer to “Gearshift Shaft No. 2 / Gearshift Cam Plate Removal and Installation (Page 3C-13)”.

Gearshift Shaft

Check the gearshift for bend or wear.

Check the return spring for damage or fatigue.

If any defects are found, replace the defective part(-s).



I931H1330046-01

Gearshift Shaft Oil Seal

Inspect the gearshift shaft oil seal lip for damage or wear. If any defect are found, replace the oil seal with a new one.




I931H1330047-01

Gearshift Shaft Oil Seal Removal and Installation

B931H23306015

Removal

- Remove the generator cover. Refer to “**Generator Removal and Installation: in Section 1J**”.
- Remove the gearshift shaft oil seal (1).

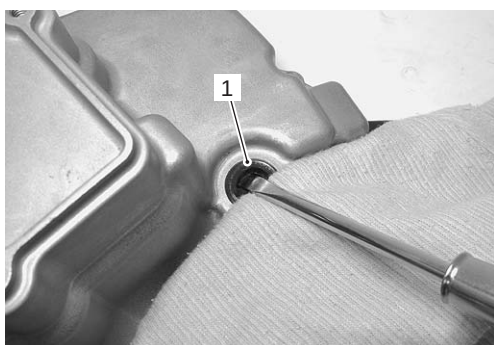

I931H1330048-01

Installation

Install the oil seal in the reverse order of removal. Pay attention to the following points:

⚠ CAUTION

The removed oil seal must be replaced with new one.


- Install the oil seal (1) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

- Apply grease to the lip of oil seal (1).

 : Grease 99000-25160 (Water resistance grease or equivalent)

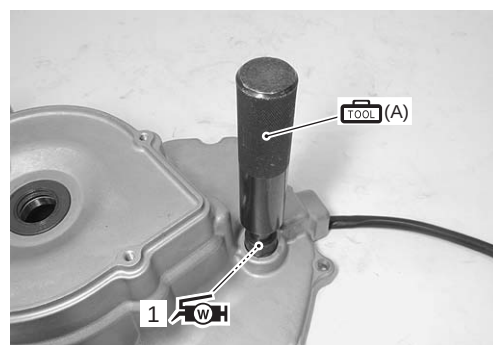

I931H1330049-02

- Install the generator cover. Refer to “**Generator Removal and Installation: in Section 1J**”.

Specifications

Service Data

B931H23307001

Drive Train

Unit: mm (in) Except ratio

Item		Standard	Limit
Automatic drive transmission ratio		Variable change (2.902 – 0.779)	—
Secondary reduction ratio		2.603 (37/18 x 19/15)	—
Final reduction ratio	Front	3.600 (36/10)	—
	Rear	3.600 (36/10)	—
Transfer gear ratio	Low	2.562 (41/16)	—
	High	1.240 (31/25)	—
	Reverse	2.000 (32/16)	—
Shift fork to groove clearance		0.10 – 0.30 (0.0040 – 0.0120)	0.50 (0.020)
Shift fork groove width	High	5.50 – 5.60 (0.217 – 0.220)	—
	Reverse	5.50 – 5.60 (0.217 – 0.220)	—
Shift fork thickness	High	5.30 – 5.40 (0.209 – 0.213)	—
	Reverse	5.30 – 5.40 (0.209 – 0.213)	—

Tightening Torque Specifications

B931H23307002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Rear output shaft drive bevel gear nut	100	10.0	72.5	☞ (Page 3C-4)

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material

B931H23308001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 3C-12)
	Water resistance grease or equivalent	P/No.: 99000–25160	☞ (Page 3C-15)
Molybdenum oil	MOLYBDENUM OIL SOLUTION	—	☞ (Page 3C-7)

NOTE








Required service material is also described in the following.

“Transfer Components (Page 3C-2)”

“Gearshift Cam Components (Page 3C-9)”

Special Tool

B931H23308002

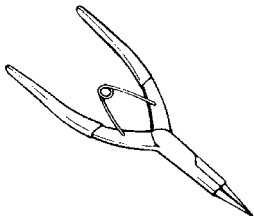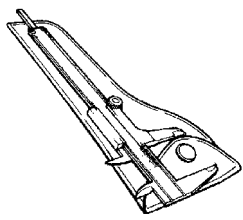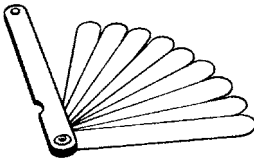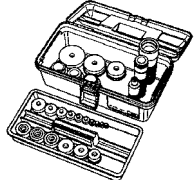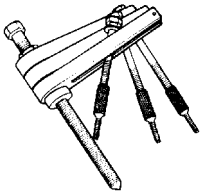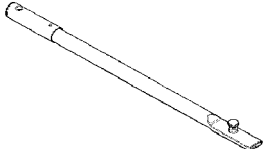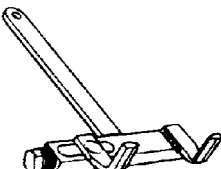
09900–06107 Snap ring remover (Open type) ☞ (Page 3C-10) / ☞ (Page 3C-11) / ☞ (Page 3C-13)		09900–20102 Vernier calipers (200 mm) ☞ (Page 3C-8) / ☞ (Page 3C-8)	
09900–20803 Thickness gauge ☞ (Page 3C-8)		09913–70210 Bearing installer set (10 – 75) ☞ (Page 3C-15)	
09920–13120 Crankshaft remover ☞ (Page 3C-3)		09920–31020 Extension handle ☞ (Page 3C-4)	
09920–53740 Clutch sleeve hub holder ☞ (Page 3C-4)			

Propeller Shafts

Repair Instructions

Front Output Shaft Components

B931H23406001

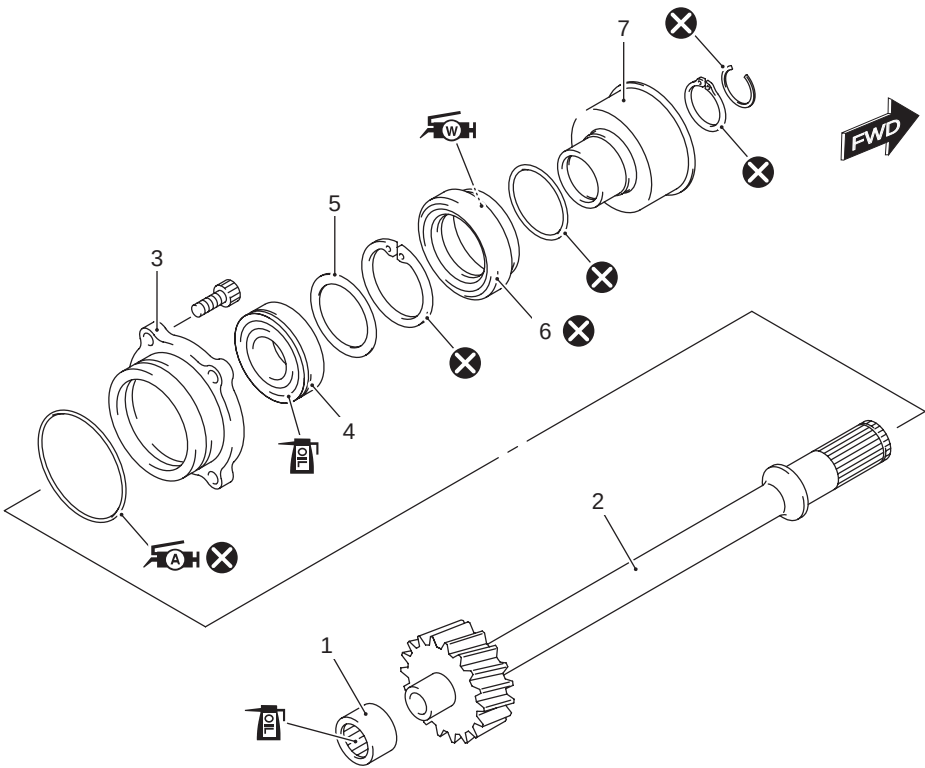

I931H1340001-01

1. Front output shaft bearing (Rear)	7. Front drive collar assembly
2. Front output shaft	 : Apply grease.
3. Front output shaft housing	 : Apply water resistance grease.
4. Front output shaft bearing (Front)	 : Apply engine oil.
5. Washer	 : Do not reuse.
6. Oil seal	

Front Output Shaft Removal and Installation


B931H23406002

Removal

- 1) Remove the engine assembly from the frame. Refer to **“Engine Assembly Removal: in Section 1D”**.
- 2) Remove the engine top side. Refer to **“Engine Top Side Disassembly: in Section 1D”**.
- 3) Separate the crankcase with the special tool. Refer to **“Engine Bottom Side Disassembly: in Section 1D”**.

Special tool

 (A): 09920-13120 (Crankcase separating tool)

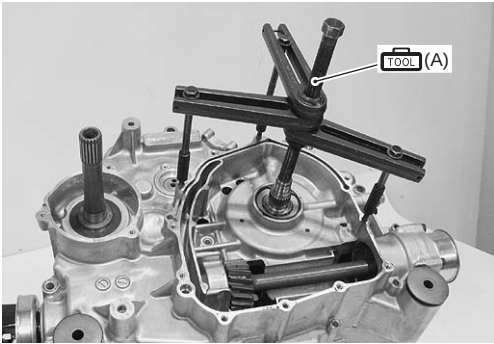

I931H1340002-01

3D-2 Propeller Shafts:

- 4) Remove the front output shaft (1) from the right crankcase.



I931H1340003-01

Installation

Install the front output shaft in the reverse order of removal. Pay attention to the following points:

NOTE

Apply engine oil to each rotating part before reassembling.

- Apply a small quantity of grease to the O-ring (1).

CAUTION


Replace the O-ring (1) with a new one.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**



I931H1340005-01

- Install the front output shaft to the right crankcase.
- Tighten the front output shaft bolts.

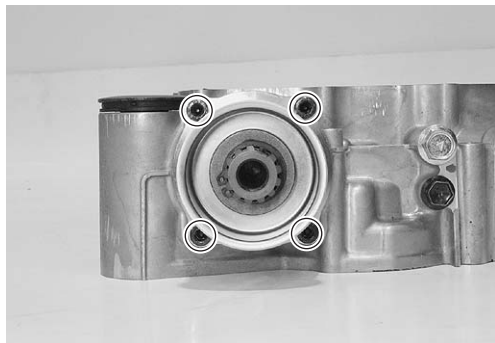

I931H1340006-01

Front Output Shaft Disassembly and Assembly

B931H23406003


Refer to "Front Output Shaft Removal and Installation (Page 3D-1)".

Disassembly

- 1) Remove the C-ring (1) and snap ring (2).


Special tool

 **09900-06107 (Snap ring remover (Open type))**

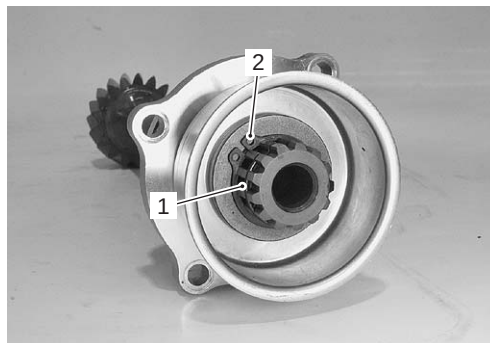

I931H1340007-01

- 2) Remove the front drive collar assembly (3), front output shaft housing (4) and O-ring (5).

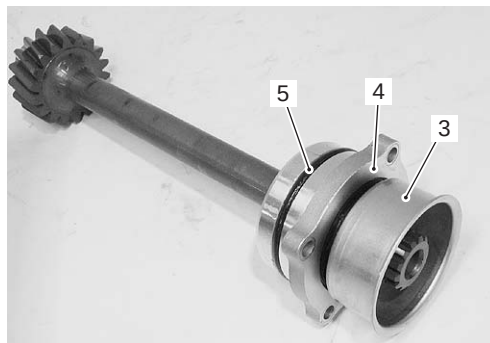



I931H1340008-01

- 3) Remove the front drive collar (6) from the output oil seal plate (7) with the special tool.

Special tool

 **(A): 09913-70210 (Bearing installer set (10 - 75))**

- 4) Remove the O-ring (8).

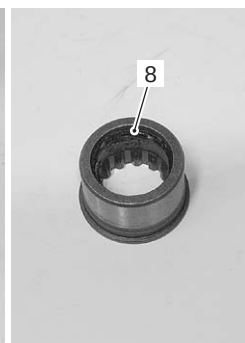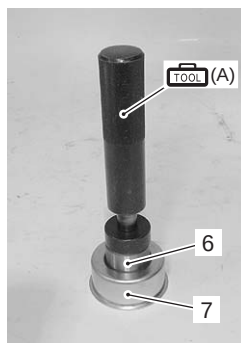


I931H1340009-03

- 5) Remove the oil seal (9) with the special tool.

Special tool

 (B): 09913-50121 (Oil seal remover)

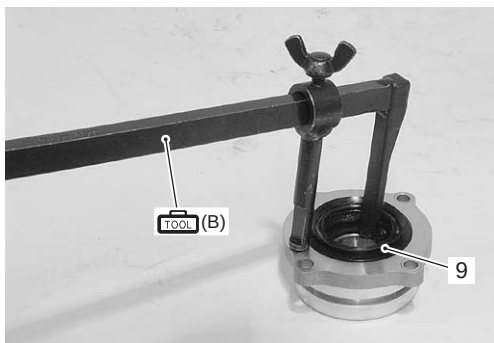


I931H1340010-01

- 6) Remove the snap ring (10) and washer (11).

Special tool

 : 09900-06108 (Snap ring remover (Close type))

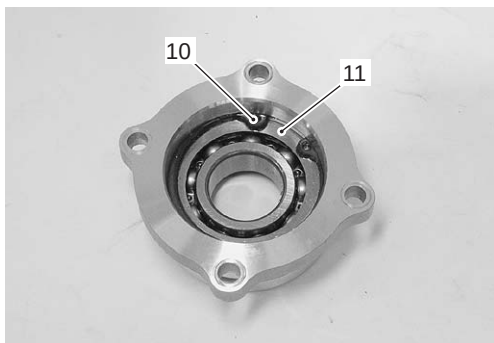

I931H1340011-01

- 7) Remove the front output shaft bearing (front) with the special tool.

NOTE

If there is no abnormal noise, the bearing removed is not necessary.

Special tool

 (C): 09921-20240 (Bearing remover set)



I931H1340012-01

- 8) Remove the front output shaft bearing (rear) with the special tools.


NOTE

If there is no abnormal noise, the bearing removed is not necessary.

Special tool

 (D): 09923-74511 (Bearing remover)

 (E): 09930-30104 (Rotor remover slide shaft)

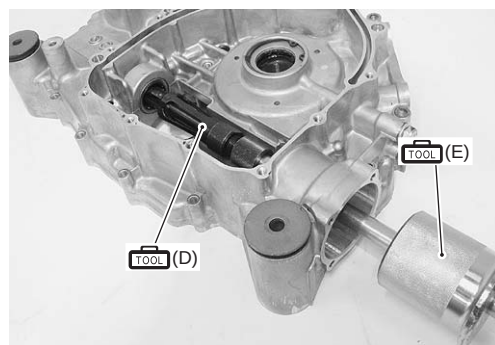

I931H1340013-01

Assembly


 CAUTION

The removed bearing, snap ring, oil seal, C-ring and O-ring must be replaced with new ones.

- 1) Install the front output shaft bearing (rear) (1) to the right crankcase with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

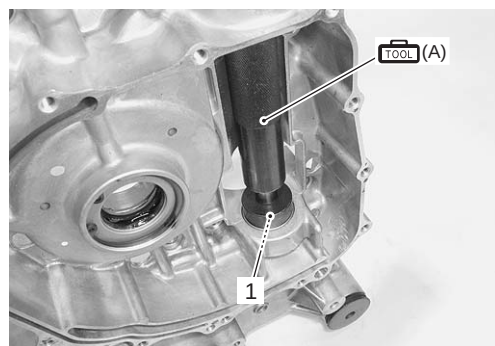


I931H1340014-01

3D-4 Propeller Shafts:

- 2) Install the front output shaft bearing (front) (2) to the front output shaft housing with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

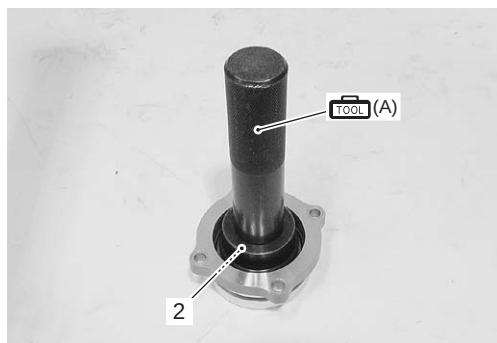


I931H1340015-01

- 3) Install the washer (3) and snap ring (4).

Special tool

 : 09900-06108 (Snap ring remover (Close type))

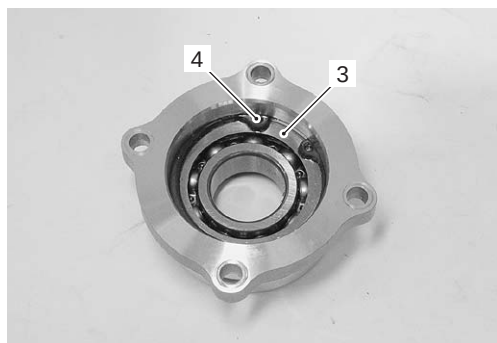


I931H1340016-01

- 4) Install the oil seal (5) with the suitable socket wrench.

- 5) Apply grease to the lip of oil seal (5).

 : Grease 99000-25160 (Water resistance grease or equivalent)

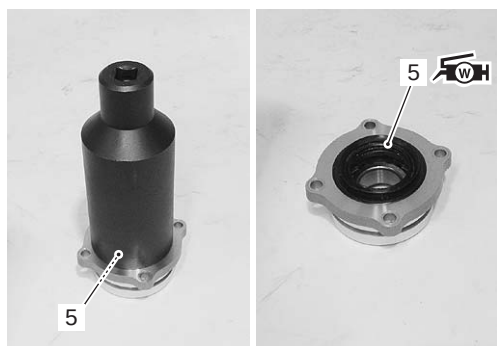

I931H1340017-02


- 6) Install the front drive collar (6) to the output oil seal plate (7) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

- 7) Install the O-ring (8) to the front drive collar (6).
8) Apply grease to the O-ring (8).

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

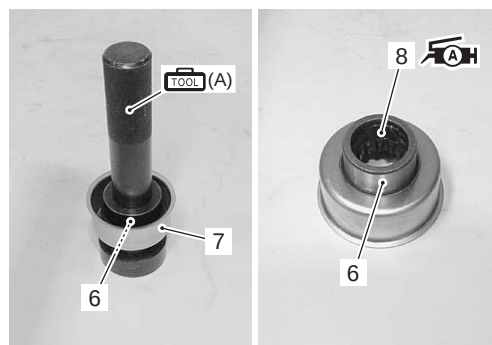


I931H1340018-01

- 9) Install the O-ring (9) and apply grease to it.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

- 10) Install the front output shaft housing (10) and front drive collar assembly (11) to the front output shaft.
11) Install the snap ring (12) and C-ring (13).

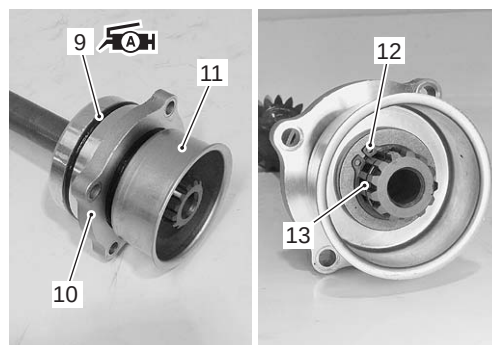

I931H1340019-01

Front Output Shaft Related Parts Inspection

B931H23406004

Refer to "Front Output Shaft Disassembly and Assembly (Page 3D-2)".

Front Output Shaft

Inspect the front output shaft for distortion.

If distortion is found, replace the front output shaft with a new one.

Inspect the gear of the front output shaft for wear or damage. If any defects are found, replace the drive and driven bevel gears as a set.



I931H1340020-01

Oil Seal

Visually inspect the oil seal for damage, with particular attention given to the lip.

Replace the oil seal that shows indications of leakage.



I931H1340021-01

Front Output Shaft Bearing

Inspect the front output shaft bearings for abnormal noise and smooth rotation.


Replace the bearings if there is anything unusual.



I931H1340022-01

Rear Output Shaft Components

B931H23406005

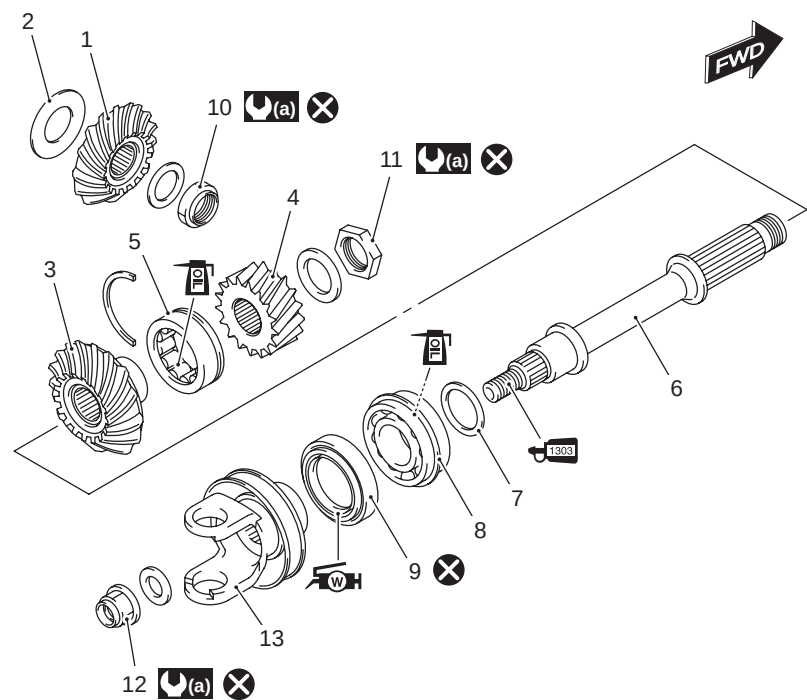

I931H1340023-02

1. Rear output shaft drive bevel gear	7. Shim	13. Yoke
2. Shim(s)	8. Bearing	(a) : 100 N-m (10.0 kgf-m 72.5 lbf-ft)
3. Rear output shaft driven bevel gear	9. Oil seal	: Apply water resistance grease.
4. Rear output shaft driven gear	10. Drive bevel gear nut	(1303) : Apply thread lock to the thread part.
5. Bearing	11. Rear output shaft driven gear nut	: Apply engine oil.
6. Rear output shaft	12. Rear output shaft nut	: Do not reuse.

Rear Output Shaft / Drive Bevel Gear Removal and Installation

B931H23406006

Removal


Rear output shaft

- 1) Remove the engine assembly from the frame. Refer to “Engine Assembly Removal: in Section 1D”.
- 2) Remove the engine top side. Refer to “Engine Top Side Disassembly: in Section 1D”.

- 3) Separate the crankcase with the special tool. Refer to “Engine Bottom Side Disassembly: in Section 1D”.


Special tool

(A): 09920-13120 (Crankcase separating tool)

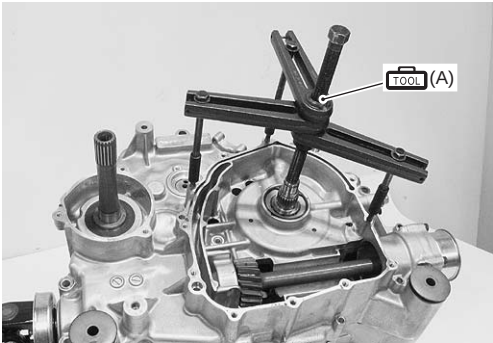


I931H1340024-01

- 4) Remove the rear output shaft (1).

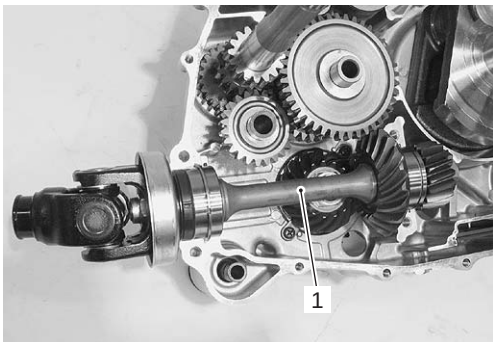

I931H1340025-01

- 5) Remove the C-ring (2).

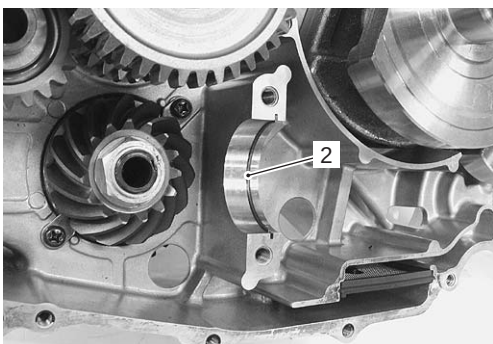

I931H1340026-01


Drive bevel gear

- 1) Remove the transfer component parts. Refer to "Transfer Removal and Installation: in Section 3C".
- 2) Unlock the drive bevel gear nut (1) with a chisel.
- 3) Hold the transfer output driven gear with the special tools and remove the drive bevel gear nut (1).

Special tool


 (A): 09920-53740 (Clutch sleeve hub holder)

 (B): 09920-31020 (Extension handle)

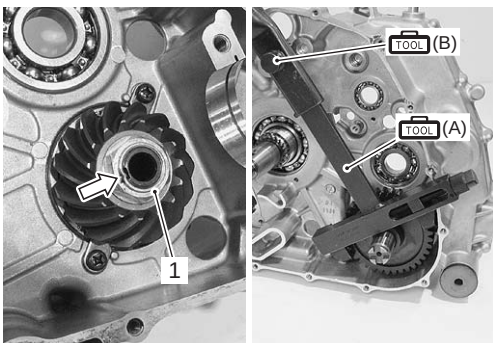


I931H1340027-01

- 4) Remove the washer (2), drive bevel gear (3) and shim(s) (4).

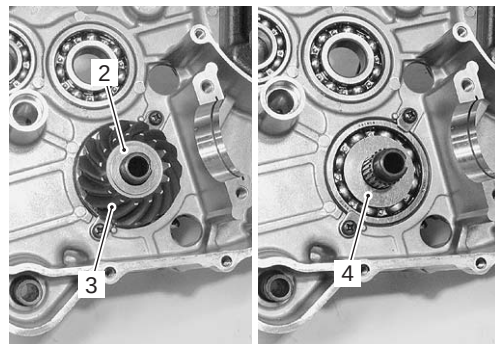

I931H1340028-01

- 5) Remove the transfer output shaft assembly (5) with a plastic mallet.

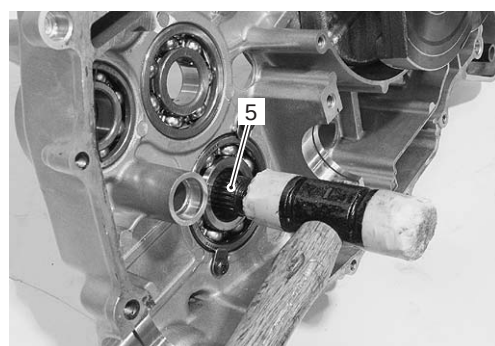


I931H1340029-01

Installation

Install the rear output shaft and drive bevel gear in the reverse order of removal. Pay attention to the following points:

Drive bevel gear

- Install the transfer output shaft assembly (1) with a plastic mallet.

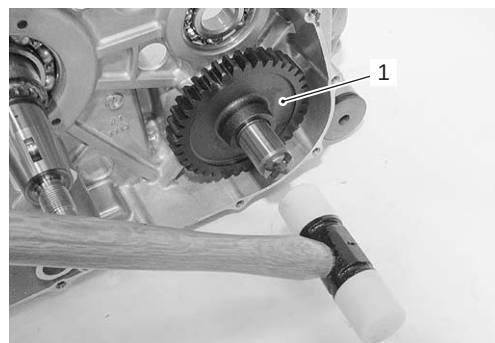

I931H1340030-01

3D-8 Propeller Shafts:

- Hold the transfer output driven gear with the special tools and tighten the drive bevel gear nut (2) to the specified torque.

⚠ CAUTION

The removed drive bevel gear nut must be replaced with a new one.

Special tool


TOOL (A): 09920-53740 (Clutch sleeve hub holder)

TOOL (B): 09920-31020 (Extension handle)

Tightening torque

Rear output shaft drive bevel gear nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

- After the backlash and tooth contact have been checked or adjusted, lock the drive bevel gear nut (2) with a center punch. Refer to "Driven / Drive Bevel Gear Shim Inspection and Adjustment (Page 3D-12)".

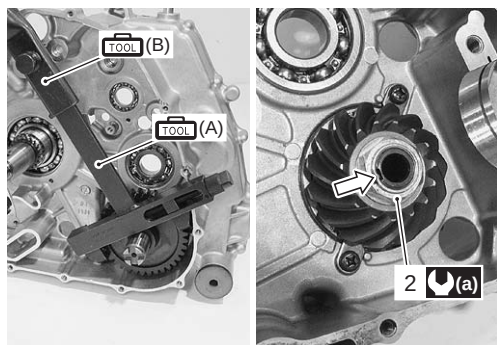


I931H1340031-01

Rear output shaft

- Install the rear output shaft (1).

NOTE

Be sure to fit the C-ring (2) and bearing knock-pin "A" on the bearing to the groove of the crankcase.

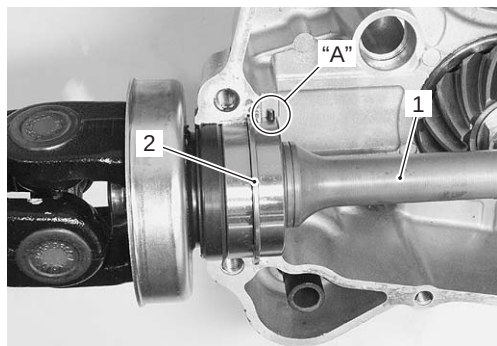

I931H1340032-02

- After installed rear output shaft, check the backlash and tooth contact. Refer to "Rear Output Shaft / Drive Bevel Gear Removal and Installation (Page 3D-6)".

Rear Output Shaft Disassembly and Assembly

B931H23406007

Refer to "Rear Output Shaft / Drive Bevel Gear Removal and Installation (Page 3D-6)".

Disassembly

- Remove the circlips (1) from the universal joint.




I931H1340033-01

- Remove the bearings (2) by tapping with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

- Remove the universal joint (3) along with the yoke (4).

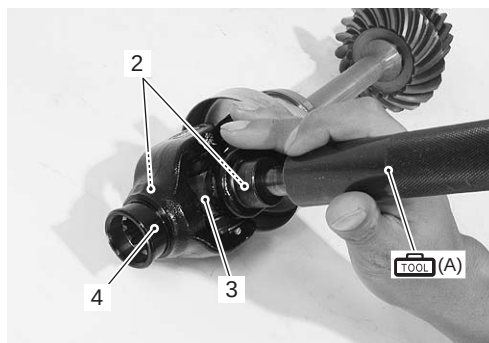


I931H1340034-02

- Remove the circlips (5).
- Remove the bearings (6) by tapping with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 - 75))

6) Remove the universal joint (3).

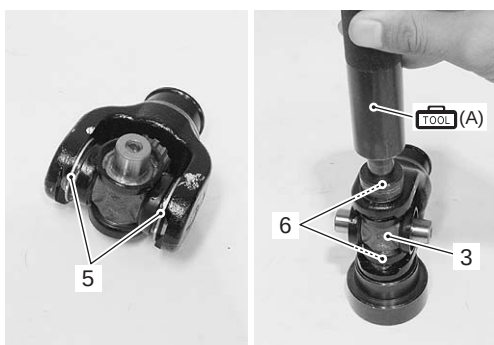

I931H1340035-01

7) Unlock the rear output shaft nut with a chisel.




I931H1340036-01

8) With the rear output shaft held immovable with a vise, remove the rear output shaft nut.



I931H1340037-01

9) Remove the washer (7), yoke (8), oil seal (9), bearing (10) and shim (11).

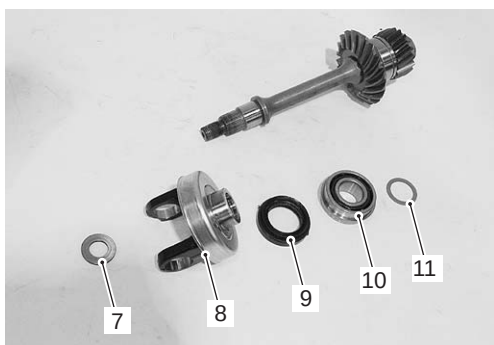

I931H1340038-01

10) Unlock the rear output shaft driven gear nut with a chisel.




I931H1340039-01

11) With the rear output shaft held immovable with a vise, remove the rear output shaft driven gear nut.



I931H1340040-01

12) Remove the washer (12), rear output shaft driven gear (13), bearing (14) and rear output shaft driven bevel gear (15).

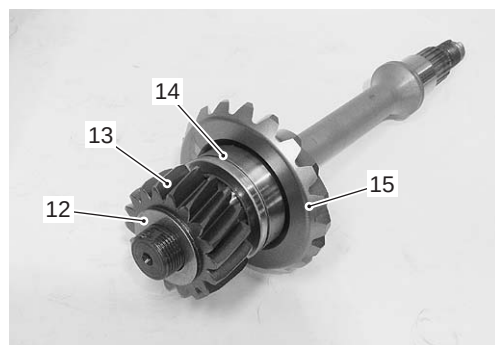

I931H1340041-01

3D-10 Propeller Shafts:

Assembly

Assemble the rear output shaft in the reverse order of disassembly. Pay attention to the following points:


NOTE

Apply engine oil to each running part before reassembling.

- Install the rear output shaft driven bevel gear (1) and bearing (2).

NOTE

The wider side "a" of the bearing should be positioned bevel gear side.

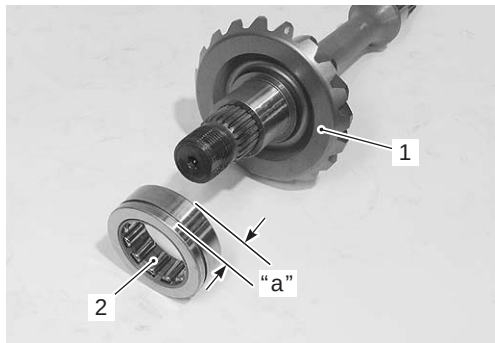

I931H1340042-01

- With the rear output shaft held immovable with a vise, tighten the rear output shaft driven gear nut (3) to the specified torque.

⚠ CAUTION

The removed rear output shaft driven gear nut must be replaced with a new one.


Tightening torque

Rear output shaft driven gear nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)



I931H1340043-01

- Lock the rear output shaft driven gear nut (3) with a center punch.

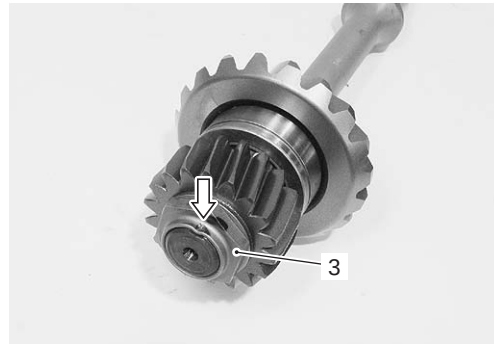


I931H1340044-01

- Install the shim (4) and bearing (5).

NOTE

The bearing knock-pin "A" should be positioned inside.

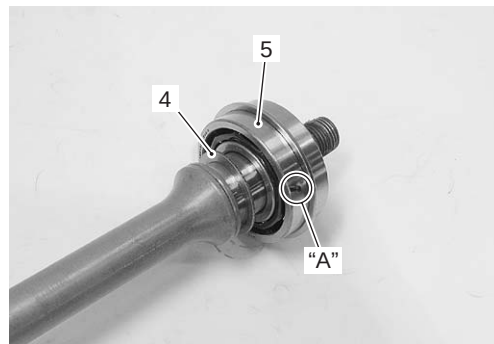

I931H1340045-01


- Apply grease to the lip of oil seal (6).

 : Grease 99000-25160 (Water resistance grease or equivalent)

- Install the oil seal (6) to the yoke (7).

⚠ CAUTION

Replace the oil seal (6) with a new one.

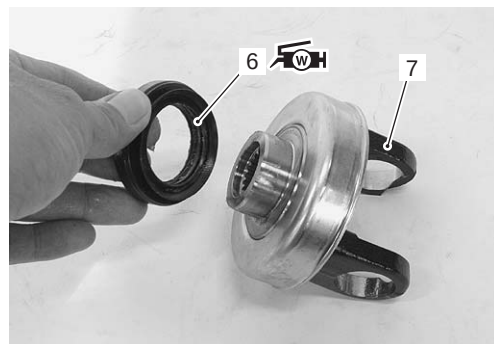

I931H1340046-01

- Apply thread lock to the thread part of the output shaft.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- With the rear output shaft held immovable with a vise, tighten the rear output shaft nut.

⚠ CAUTION

The removed rear output shaft nut must be replaced with a new one.

Tightening torque

Rear output shaft nut (b): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)



I931H1340047-01


- After the backlash and tooth contact have been checked or adjusted, lock the rear output shaft nut with a center punch. Refer to "Driven / Drive Bevel Gear Shim Inspection and Adjustment (Page 3D-12)".



I931H1340048-01

- Apply grease to the bearings and their lip of dust seal.

⚠ : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

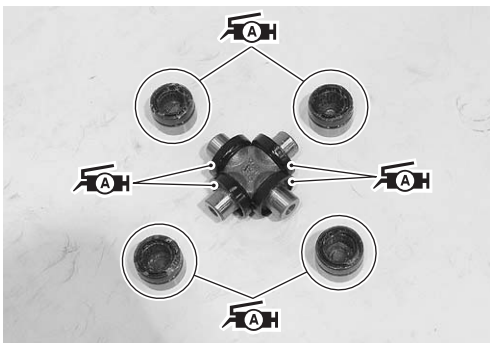


I931H1340049-01

- Install the universal joint (8) and yoke (9).
- Install the bearings (10) by tapping with the special tool.

Special tool

⚠ (A): 09913-70210 (Bearing installer set (10 – 75))

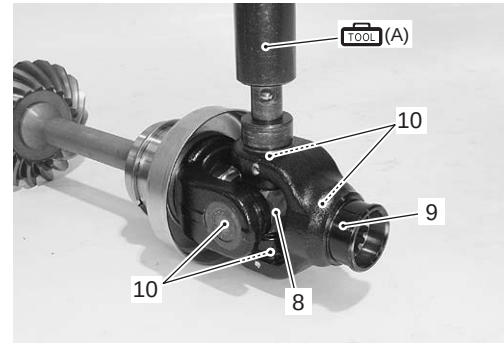


I931H1340050-01

- Install the circlips to the universal joint.

⚠ CAUTION

The removed circlips must be replaced with new ones.

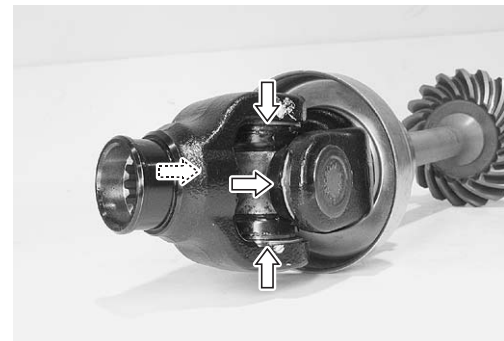

I931H1340051-01

- After reassembling the universal joint, check the joint movement smoothly. If a large resistance is felt to movement, tap the bearing with a plastic mallet lightly.



I931H1340052-04

3D-12 Propeller Shafts:

Rear Output Shaft Related Parts Inspection

B931H23406008

Refer to "Rear Output Shaft Disassembly and Assembly (Page 3D-8)".

Rear Output Shaft

Inspect the rear output shaft for wear or damage. If any defects are found, replace the rear output shaft with a new one.



I931H1340053-01

Rear Output Shaft Bevel Gear


Inspect the drive and driven bevel gear for wear or damage. If any defects are found, replace the drive and driven bevel gears as a set.



I931H1340054-01

Rear Output Shaft Driven Gear

Inspect the rear output shaft driven gear for wear or damage. If any defects are found, replace the rear output shaft driven gear with the new one.

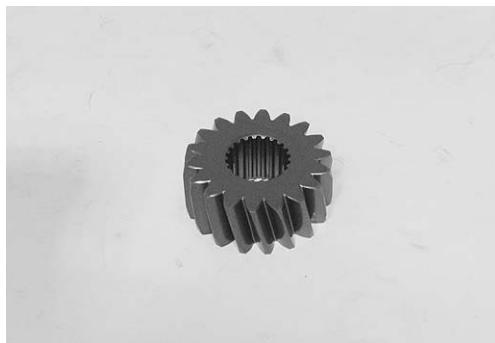

I931H1340055-01

Bearing

Inspect the rear output shaft bearing and rear driven bevel gear bearing for abnormal noise and smooth rotation. If any defects are found, replace the bearing with a new one.



I931H1340056-01

Universal Joint

Refer to "Rear Propeller Shaft Related Parts Inspection (Page 3D-22)".

Driven / Drive Bevel Gear Shim Inspection and Adjustment

B931H23406009


Refer to "Rear Output Shaft / Drive Bevel Gear Removal and Installation (Page 3D-6)".

Backlash

- 1) Place the rear output shaft on the left crankcase half and hold bearings with the special tool.

Special tool

 (A): 09921-21910 (Bearing holder set)

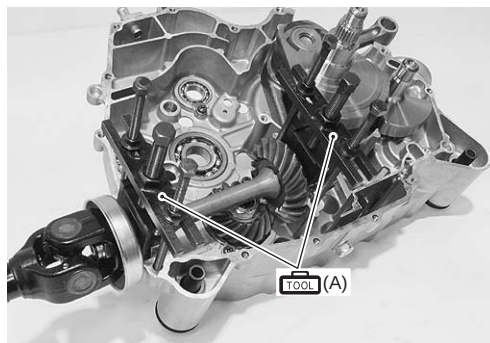


I931H1340057-02

- 2) Set the dial gauge on the drive bevel gear as shown.

Special tool

 (B): 09900-20607 (Dial gauge)

 (C): 09900-20701 (Dial gauge chuck)

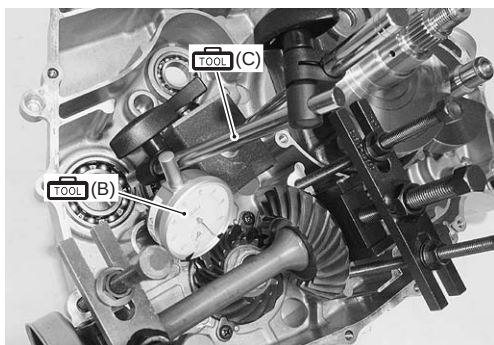


I931H1340058-01

- 3) Measure the backlash by turning the drive bevel gear shaft in each direction, reading the total backlash with the dial gauge. If the backlash is not within specification, the shim (1) must be changed and backlash should be re-checked until correct. Check the table at the appropriate shim thickness.

NOTE

Adjust the backlash by referring to the table at the using the thickness of the removed shim as a guide.

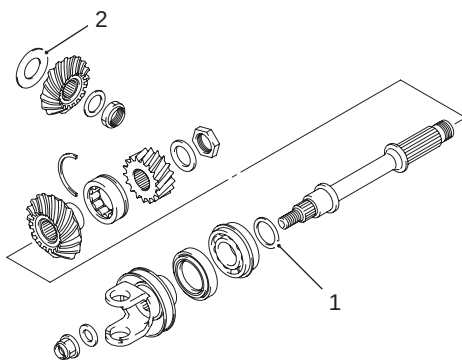

I931H1340059-01

- | |
|-----------------------------------|
| 1. Shim (for driven bevel gear) |
| 2. Shim(s) (for drive bevel gear) |

Rear output shaft bevel gear backlash

Standard: 0.03 – 0.15 mm (0.0001 – 0.006 in)

Backlash	Shim adjustment
Under 0.03 mm (0.001 in)	Increase shim thickness
0.03 – 0.15 mm (0.001 – 0.006 in)	Correct
Over 0.15 mm (0.006 in)	Decrease shim thickness

List of shims (for driven bevel gear)

Part No.	Shim thickness
24945-03G50-055	0.550 mm (0.022 in)
24945-03G50-058	0.575 mm (0.023 in)
24945-03G50-060	0.600 mm (0.024 in)
24945-03G50-063	0.625 mm (0.025 in)
24945-03G50-065	0.650 mm (0.026 in)
24945-03G50-068	0.675 mm (0.027 in)
24945-03G50-070	0.700 mm (0.028 in)
24945-03G50-073	0.725 mm (0.029 in)
24945-03G50-075	0.750 mm (0.030 in)
24945-03G50-078	0.775 mm (0.031 in)
24945-03G50-080	0.800 mm (0.031 in)
24945-03G50-083	0.825 mm (0.032 in)
24945-03G50-085	0.850 mm (0.033 in)
24945-03G50-088	0.875 mm (0.034 in)
24945-03G50-090	0.900 mm (0.035 in)
24945-03G50-093	0.925 mm (0.036 in)
24945-03G50-095	0.950 mm (0.037 in)
24945-03G50-098	0.975 mm (0.038 in)
24945-03G50-100	1.000 mm (0.039 in)
24945-03G50-103	1.025 mm (0.040 in)
24945-03G50-105	1.050 mm (0.041 in)
24945-03G50-108	1.075 mm (0.042 in)
24945-03G50-110	1.100 mm (0.043 in)
24945-03G50-113	1.125 mm (0.044 in)
24945-03G50-115	1.150 mm (0.045 in)
24945-03G50-118	1.175 mm (0.046 in)
24945-03G50-120	1.200 mm (0.047 in)
24945-03G50-123	1.225 mm (0.048 in)
24945-03G50-125	1.250 mm (0.049 in)
24945-03G50-128	1.275 mm (0.050 in)
24945-03G50-130	1.300 mm (0.051 in)
24945-03G50-133	1.330 mm (0.052 in)
24945-03G50-135	1.350 mm (0.053 in)
24945-03G50-138	1.375 mm (0.054 in)
24945-03G50-140	1.400 mm (0.055 in)


- 4) Check the tooth contact.

Tooth Contact

⚠ CAUTION

Make sure to check the backlash after the tooth contact has been adjusted, since it may have changed. Adjust the tooth contact and backlash until they are both within specification. If the correct tooth contact cannot be maintained when adjusting the backlash, replace the rear output shaft drive and driven bevel gears.

- 1) Remove the special tool and rear output shaft (1) from the left crankcase.

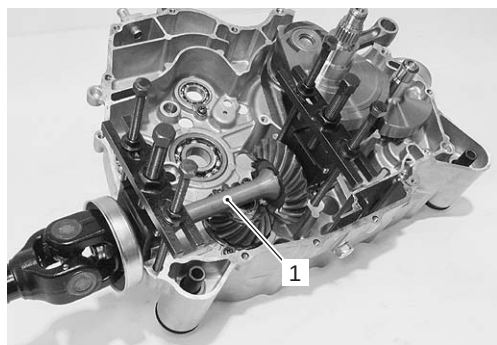


I931H1340060-01

- 2) Clean and degrease several teeth of the drive and driven bevel gears, and then apply a coating of machinist's layout dye or paste to several teeth of the rear output shaft driven bevel gear.
- 3) Install the rear output shaft.
- 4) Rotate the rear output shaft driven bevel gear several turns in both directions.


- 5) Remove the output shaft and inspect the coated teeth of the rear output shaft drive bevel gear. The tooth contact pattern should be as shown in [A], [B] and [C].

If tooth contact is found to be incorrect (examples [A] and [C]), the shim thickness between the rear output shaft drive bevel gear and bearing must be changed and the tooth contact re-checked until correct (examples [B]).


Tooth contact	Shim adjustment
Contact at tooth top [A]	Increase shim thickness
Contact at tooth root [C]	Decrease shim thickness

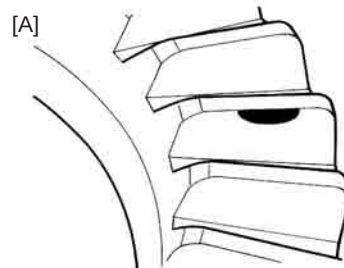

Incorrect (Contact at tooth top)

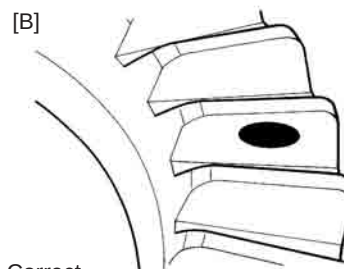

Correct

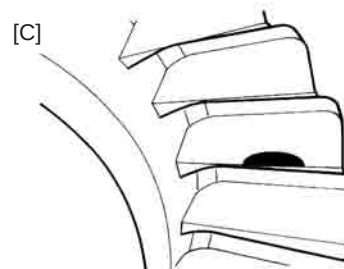

Incorrect (Contact at tooth root)

I831G1340095-02

List of shims (for drive bevel gear)

Part No.	Shim thickness	
24935-19B00-025: 0.25 mm (0.0098 in)	Combined shim	0.25+0.25=0.50 mm (0.0197 in)
		0.25+0.30=0.55 mm (0.0217 in)
		0.30+0.30=0.60 mm (0.0236 in)
		0.30+0.35=0.65 mm (0.0256 in)
0.35+0.35=0.70 mm (0.0276 in)		
0.25+0.25+0.25=0.75 mm (0.0295 in)		
0.25+0.25+0.30=0.80 mm (0.0315 in)		
0.25+0.25+0.35=0.85 mm (0.0335 in)		
24935-19B00-030: 0.30 mm (0.0118 in)		
24935-19B00-035: 0.35 mm (0.0138 in)		

Part No.	Shim thickness
24935-03G50-055	0.550 mm (0.0217 in)
24935-03G50-058	0.575 mm (0.0226 in)
24935-03G50-060	0.600 mm (0.0236 in)
24935-03G50-063	0.625 mm (0.0246 in)
24935-03G50-065	0.650 mm (0.0256 in)
24935-03G50-068	0.675 mm (0.0266 in)
24935-03G50-070	0.700 mm (0.0276 in)
24935-03G50-073	0.725 mm (0.0285 in)
24935-03G50-075	0.750 mm (0.0295 in)
24935-03G50-078	0.775 mm (0.0305 in)
24935-03G50-080	0.800 mm (0.0315 in)
24935-03G50-083	0.825 mm (0.0325 in)
24935-03G50-085	0.850 mm (0.0335 in)
24935-03G50-088	0.875 mm (0.0344 in)
24935-03G50-090	0.900 mm (0.0354 in)
24935-03G50-093	0.925 mm (0.0364 in)
24935-03G50-095	0.950 mm (0.0374 in)
24935-03G50-098	0.975 mm (0.0384 in)
24935-03G50-100	1.000 mm (0.0394 in)
24935-03G50-103	1.025 mm (0.0404 in)
24935-03G50-105	1.050 mm (0.0413 in)
24935-03G50-108	1.075 mm (0.0423 in)


Part No.	Shim thickness
24935-03G50-110	1.100 mm (0.0433 in)
24935-03G50-113	1.125 mm (0.0443 in)
24935-03G50-115	1.150 mm (0.0453 in)
24935-03G50-118	1.175 mm (0.0463 in)
24935-03G50-120	1.200 mm (0.0472 in)
24935-03G50-123	1.225 mm (0.0482 in)
24935-03G50-125	1.250 mm (0.0492 in)
24935-03G50-128	1.275 mm (0.0502 in)
24935-03G50-130	1.300 mm (0.0512 in)

Final Assembly

- 1) After adjusting the gear backlash and tooth contact correctly, remove the rear output shaft and drive bevel gear.
- 2) Clean off any machinist's dye or paste from the gear teeth, and lubricate the teeth with engine oil.
- 3) Install the drive bevel gear and rear output shaft. Refer to "Rear Output Shaft / Drive Bevel Gear Removal and Installation (Page 3D-6)".

Front Propeller Shaft Components

B931H23406010

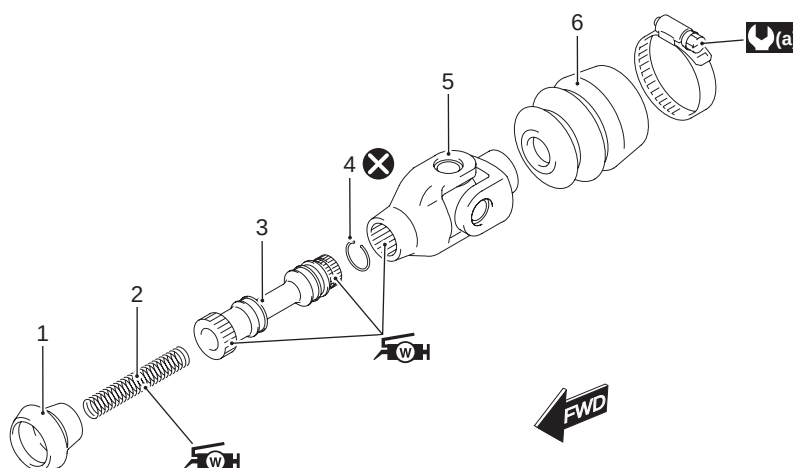

1. Boot	6. Boot
2. Front propeller shaft spring	(a) : 1.3 N·m (0.13 kgf-m, 1.0 lbf-ft)
3. Front propeller shaft	WH : Apply water resistance grease.
4. Circlip	⊗ : Do not reuse.
5. Universal joint	

I931H1340061-01

Front Propeller Shaft Removal and Installation


B931H23406011

Removal

- 1) Remove the front drive (differential) assembly. Refer to **"Front Drive (Differential) Assembly Removal and Installation: in Section 3B"**.
- 2) Remove the front propeller shaft spring (1) and front propeller shaft boot (2).
- 3) Loosen the boot clamp screw and remove the universal joint boot (3).


NOTE

Apply oil to the removing direction of the universal joint boot before removing.

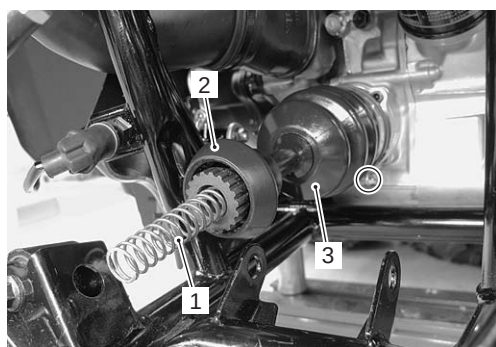

I931H1340062-01

- 4) Using a (–) screwdriver or the like into a notch of the universal joint and remove the front propeller shaft (4).

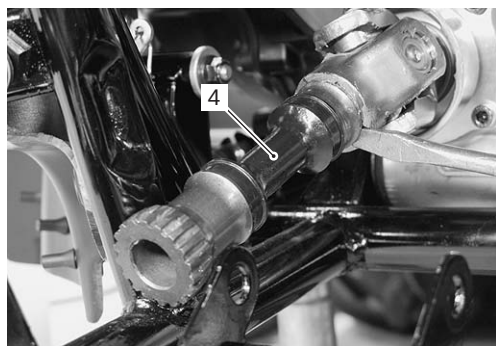


I931H1340063-01

- 5) Remove the universal joint (5) from the joint portion (at the engine side) with special tools.

Special tool

- (A): 09923–74511 (Bearing remover)
 (B): 09930–30104 (Rotor remover slide shaft)

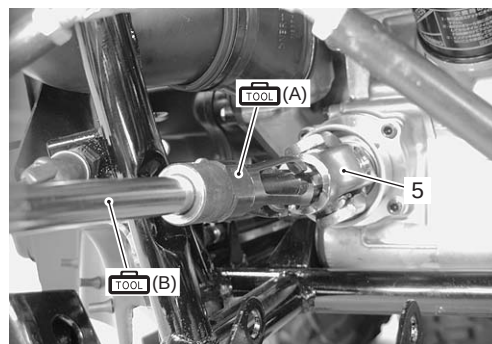


I931H1340064-01

Installation

⚠ CAUTION

The removed circlips must be replaced with new ones.

- 1) Fit the front propeller shaft boot (1) and universal joint boot (2) to the front propeller shaft groove.

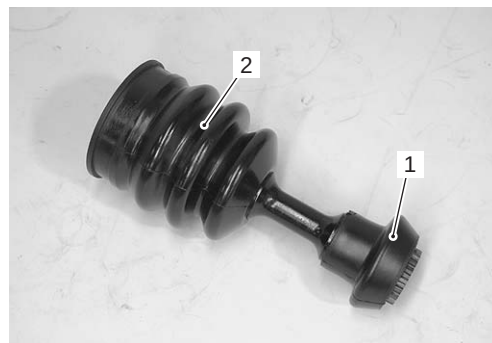


I931H1340065-01

- 2) Apply grease (approx. 4 grams) to the spline of universal joint and spline of the front propeller shaft.

: Grease 99000–25160 (Water resistance grease or equivalent)


- 3) Connect the propeller shaft to the universal joint.

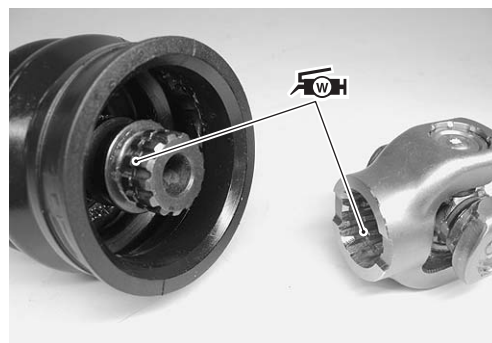

I931H1340066-02

- 4) Apply grease (approx. 4 grams) to the spline.

 **Grease 99000-25160 (Water resistance grease or equivalent)**

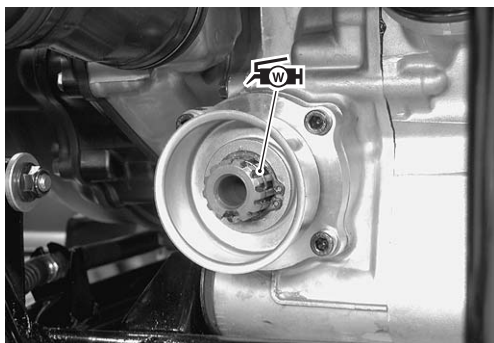

I931H1340067-01


- 5) Connect the universal joint to the joint portion (at the engine side).
- 6) Attach the boot to the front drive collar and tighten the boot clamp screw (3) to the specified torque.

Tightening torque

Front propeller shaft boot clamp screw (a): 1.3 N·m (0.13 kgf-m, 1.0 lbf-ft)

- 7) Install the front propeller shaft spring.
- 8) Apply grease (approx. 4 grams) to the spline of front propeller shaft and spring.

 **Grease 99000-25160 (Water resistance grease or equivalent)**

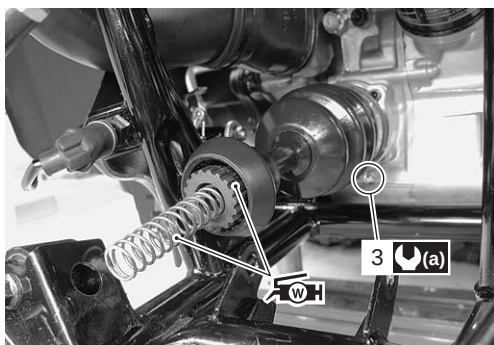

I931H1340068-01

- 9) Install the front drive (differential) assembly. Refer to "Front Drive (Differential) Assembly Removal and Installation: in Section 3B".

Front Propeller Shaft Related Parts Inspection

B931H23406012

Front Propeller Shaft

Inspect the front propeller shaft for wear or damage. If any defects are found, replace the front propeller shaft with a new one.



I931H1340069-01

Front Propeller Shaft Spring

Inspect the front propeller shaft spring for damage or fatigue. If any defects are found, replace the front propeller shaft spring with a new one.



I931H1340070-01

3D-18 Propeller Shafts:

Universal Joint

Inspect the play by turning the universal joint. If excessive play is noted, replace it with a new one.

⚠ CAUTION

Do not attempt to disassemble the universal joint.



I931H1340071-01

Boots


Inspect the front propeller shaft boot and universal joint boot for crack or damage. If any defects are found, replace the defect part with a new one.



I931H1340072-01

Rear Propeller Shaft Components

B931H23406013

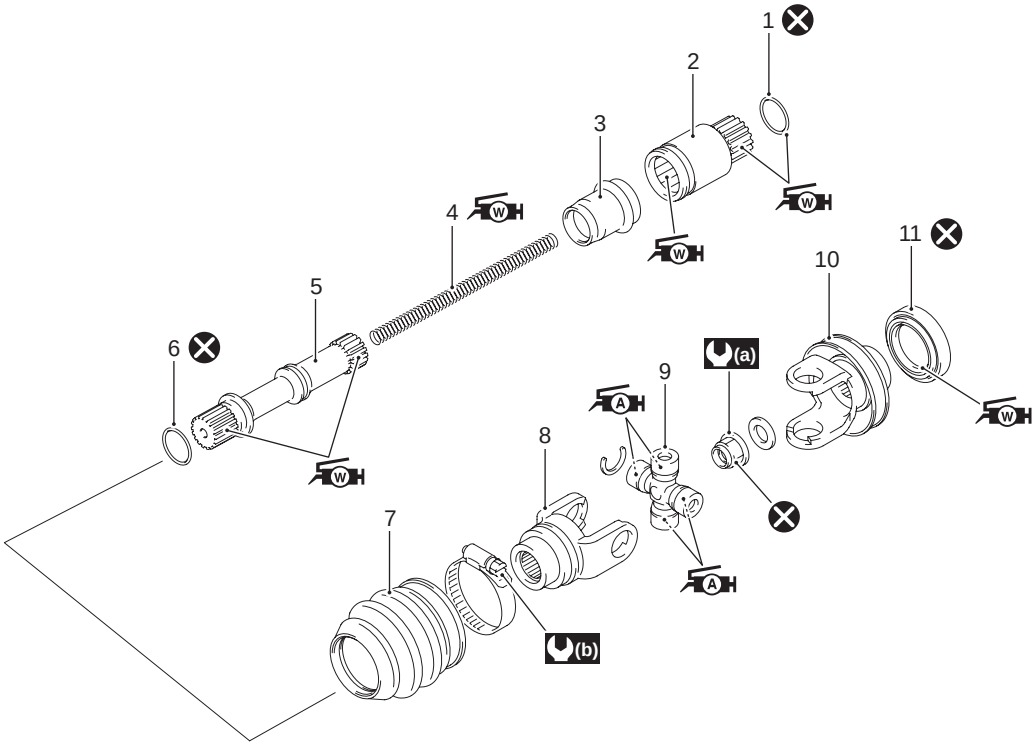

I931H1340073-01

1. O-ring	9. Universal joint set
2. Rear propeller shaft joint	10. Rear output shaft yoke
3. Rear propeller shaft boot	11. Oil seal
4. Rear propeller shaft spring	: 100 N·m (10.0 kgf·m, 72.5 lbf·ft)
5. Rear propeller shaft	: 2 N·m (0.2 kgf·m, 1.5 lbf·ft)
6. O-ring	: Apply water resistance grease.
7. Rear propeller shaft boot	: Apply grease.
8. Rear propeller shaft yoke	: Do not reuse.

Rear Propeller Shaft Removal and Installation

B931H23406014

Removal

- 1) Remove the final gear assembly. Refer to **“Final Gear Assembly Removal and Installation: in Section 3B”**.
- 2) Remove the rear propeller shaft joint (1).



I931H1340074-01

- 3) Remove the O-ring (2).




I931H1340075-01

- 4) Remove the rear propeller shaft spring (3).




I931H1340076-01

- 5) Draw out the rear propeller shaft (4).

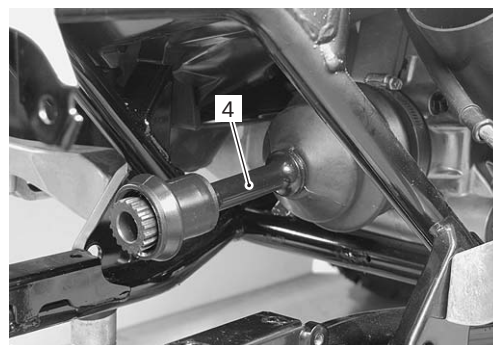

I931H1340077-01

- 6) Loosen the boot clamp screw and remove the rear propeller shaft boot (5).

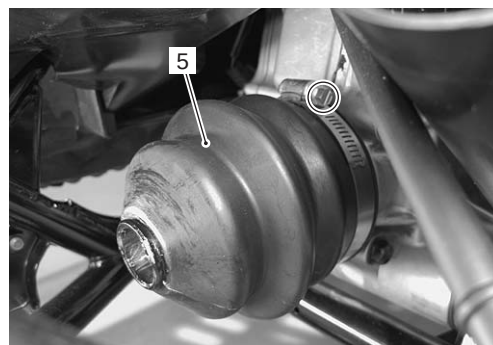


I931H1340078-01

- 7) Remove the rear propeller shaft joint boot (6).



I931H1340079-01


- 8) Remove the O-ring (7).

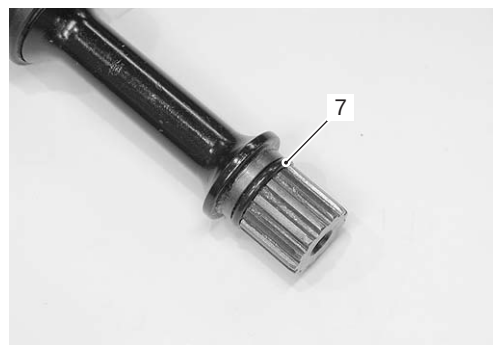

I931H1340080-01

3D-20 Propeller Shafts:

- 9) Remove the circlips (8) from the universal joint.

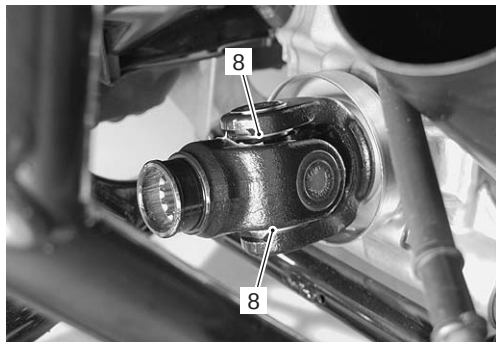


I931H1340081-01

- 10) Remove the bearings (9) by tapping with the special tool and remove the universal joint and propeller shaft yoke.


Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

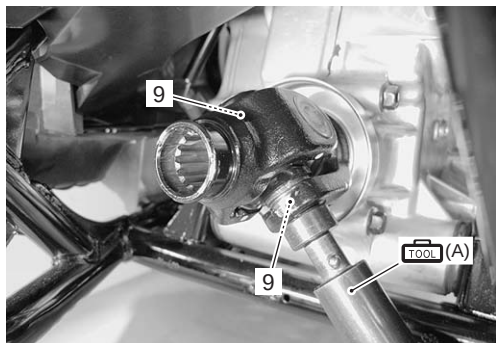

I931H1340082-01

- 11) Shift into the reverse gear.
12) Unlock the lock-nut (10) with a chisel and remove the lock-nut (10) and washer (11).
13) Remove the rear output shaft yoke (12).

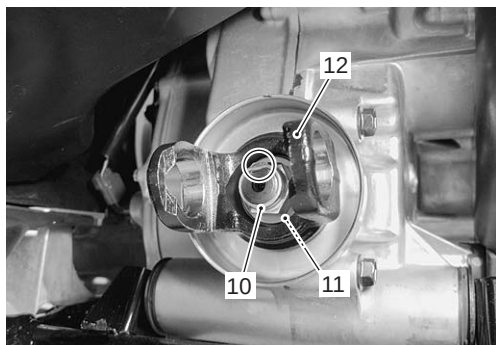

I931H1340083-01


Installation

⚠ CAUTION

The removed lock-nut, circlips and O-ring must be replaced with new ones.

- 1) Apply grease to lip of the oil seal.

 : Grease 99000-25160 (Water resistance grease or equivalent)

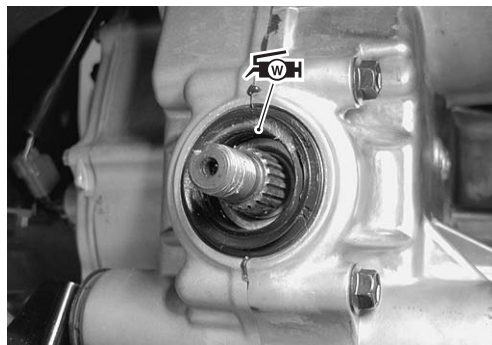

I931H1340084-01

- 2) Shift into the low gear.
3) Apply thread lock to the rear output shaft.


 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- 4) Install the rear output shaft yoke (1) and washer (2). Tighten the rear output shaft nut (3) to the specified torque.

Tightening torque

Rear output shaft nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

- 5) Lock the rear output shaft nut (3) with a center punch.

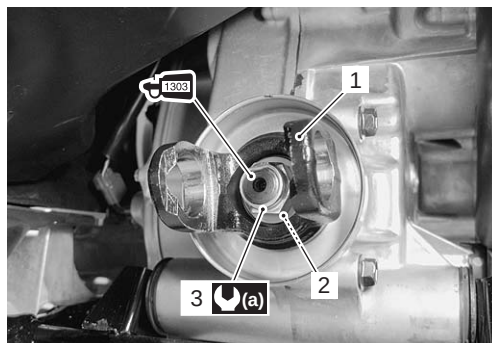


I931H1340085-01

- 6) Install the yoke (4).
- 7) Install the bearings (5) by tapping with the special tool.


Special tool

Tool (A): 09913-70210 (Bearing installer set (10 - 75))

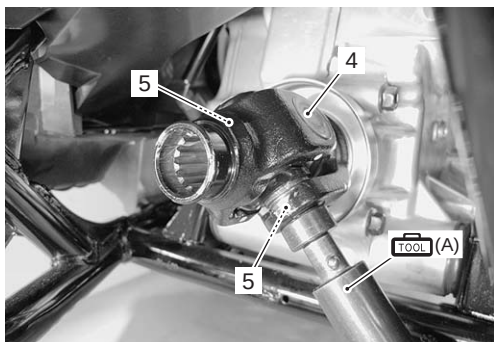

I931H1340086-02

- 8) Install the circlips (6) to the universal joint.

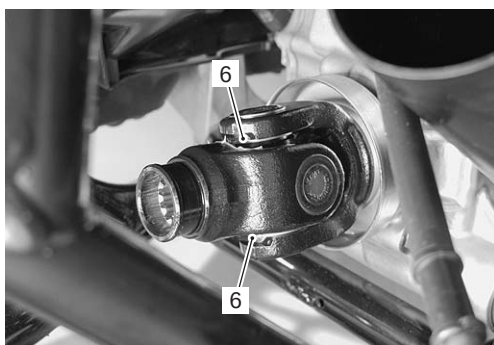


I931H1340087-02

- 9) Install the rear propeller shaft boot (7) and tighten the clamp screw (8) to the specified torque.


Tightening torque

Rear propeller shaft boot clamp screw (b): 2 N·m (0.2 kgf-m, 1.5 lbf-ft)

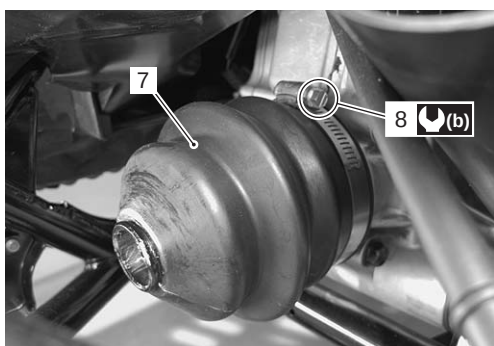

I931H1340089-03


- 10) Install the O-ring (9) to the rear propeller shaft.

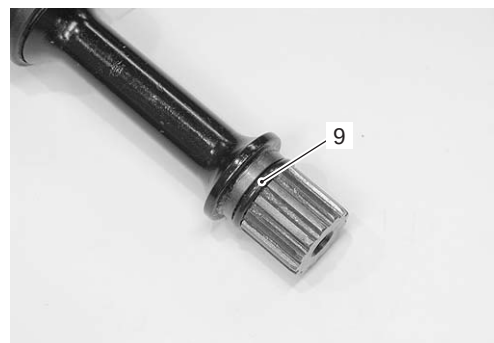

I931H1340088-02

- 11) Fit the rear propeller shaft joint boot (10) to the rear propeller shaft groove.
- 12) Apply resistance grease (approx. 4 grams) to the splines of the rear propeller shaft.

⚠: Grease 99000-25160 (Water resistance grease or equivalent)

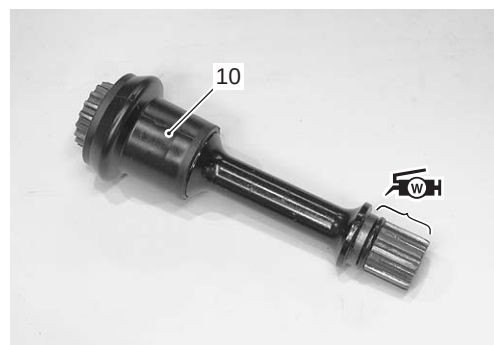


I931H1340090-02

- 13) Install the rear propeller shaft (11).
- 14) Apply grease (approx. 4 grams) to the spline of rear propeller shaft and propeller shaft spring (12).

⚠: Grease 99000-25160 (Water resistance grease or equivalent)

- 15) Install the rear propeller shaft spring (12).

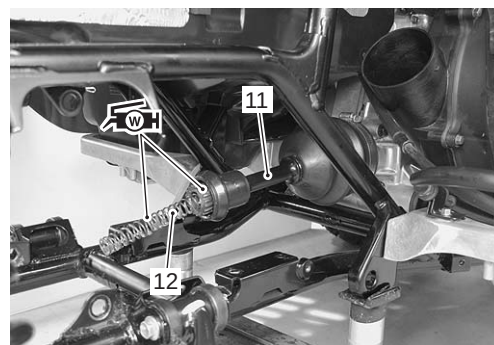

I931H1340091-02

3D-22 Propeller Shafts:

- 16) Install the O-ring (13) to the rear propeller shaft joint (14).
- 17) Apply grease (approx. 4 grams) to the spline of rear propeller shaft joint.

 : Grease 99000-25160 (Water resistance grease or equivalent)



I931H1340092-03

- 18) Install the rear propeller shaft joint (15).



I931H1340093-02

- 19) Install the final gear assembly. Refer to **“Final Gear Assembly Removal and Installation: in Section 3B”**.

Rear Propeller Shaft Related Parts Inspection

B931H23406015

Refer to “Rear Propeller Shaft Removal and Installation (Page 3D-19)”.

Rear Propeller Shaft / Rear Propeller Shaft Joint

Inspect the rear propeller shaft and rear propeller shaft joint for wear or damage. If any defects are found, replace it with a new one.



I931H1340094-01



I931H1340095-01

Boots

Inspect the rear output joint boot and propeller shaft joint boot for crack or damage. If any defects are found, replace the boot with a new one.




I931H1340096-01

Universal Joint


Inspect the universal joint in the following procedures:

- 1) Inspect the universal joint and outer surface of the bearing for scuffing, wear or damage. If any defects are found, replace the bearings and universal joint as a set.

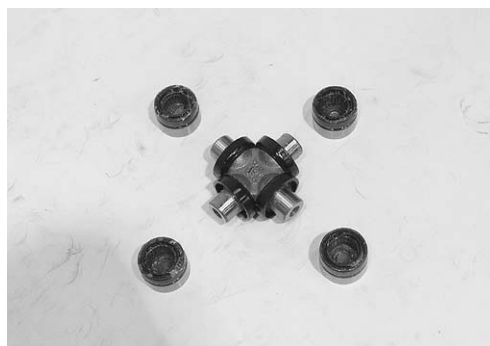

I931H1340097-01

- 2) Insert the universal joint to the bearing and check the play by turning the universal joint, as shown in the figure. If excessive play is found, replace the bearings and universal joint as a set.

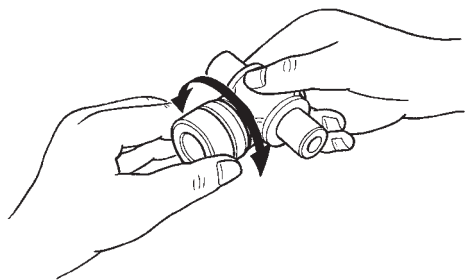

I831G1340094-01

Rear Propeller Shaft Spring

Inspect the rear propeller shaft spring for wear or damage. If any defects are found, replace it with a new one.



I931H1340098-01

Specifications

Service Data

B931H23407001

Drive Train

Unit: mm (in)

Item	Standard	Limit
Front/Rear output shaft bevel gear backlash	0.03 – 0.15 (0.001 – 0.006)	—

Tightening Torque Specifications

B931H23407002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Rear output shaft drive bevel gear nut	100	10.0	72.5	☞ (Page 3D-8)
Rear output shaft driven gear nut	100	10.0	72.5	☞ (Page 3D-10)
Rear output shaft nut	100	10.0	72.5	☞ (Page 3D-11) / ☞ (Page 3D-20)
Front propeller shaft boot clamp screw	1.3	0.13	1.0	☞ (Page 3D-17)
Rear propeller shaft boot clamp screw	2	0.2	1.5	☞ (Page 3D-21)

NOTE

The specified tightening torque is described in the following.

“Rear Output Shaft Components (Page 3D-6)”

“Front Propeller Shaft Components (Page 3D-15)”

“Rear Propeller Shaft Components (Page 3D-18)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H23408001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 3D-2) / ☞ (Page 3D-4) / ☞ (Page 3D-4) / ☞ (Page 3D-11)
	Water resistance grease or equivalent	P/No.: 99000–25160	☞ (Page 3D-4) / ☞ (Page 3D-10) / ☞ (Page 3D-16) / ☞ (Page 3D-17) / ☞ (Page 3D-17) / ☞ (Page 3D-20) / ☞ (Page 3D-21) / ☞ (Page 3D-21) / ☞ (Page 3D-22)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 3D-10) / ☞ (Page 3D-20)

NOTE

Required service material is also described in the following.















“Front Output Shaft Components (Page 3D-1)”

“Rear Output Shaft Components (Page 3D-6)”

“Front Propeller Shaft Components (Page 3D-15)”

“Rear Propeller Shaft Components (Page 3D-18)”

Special Tool

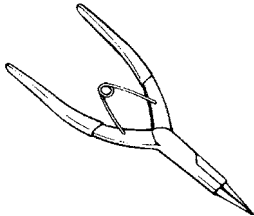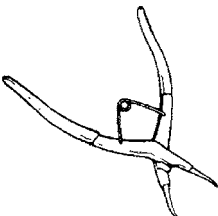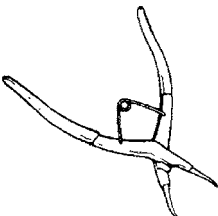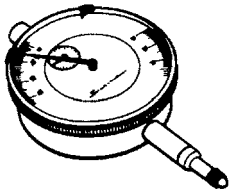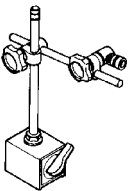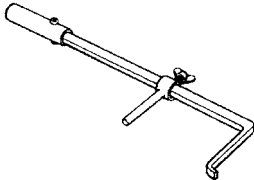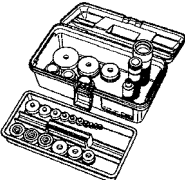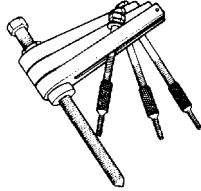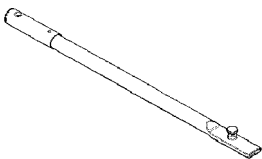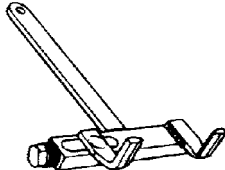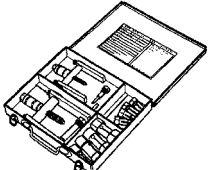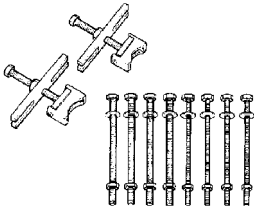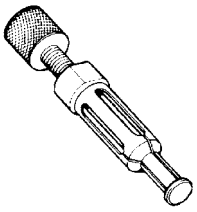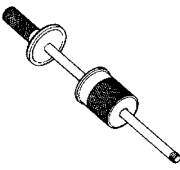09900-06107 Snap ring remover (Open type)  	09900-06108 Snap ring remover (Close type) 
09900-20607 Dial gauge 	09900-20701 Dial gauge chuck 
09913-50121 Oil seal remover 	09913-70210 Bearing installer set (10 – 75) 
09920-13120 Crankshaft remover 	09920-31020 Extension handle 
09920-53740 Clutch sleeve hub holder 	09921-20240 Bearing remover set 
09921-21910 Bearing holder set 	09923-74511 Bearing remover 
09930-30104 Rotor remover sliding shaft 	

Section 4

Brake

CONTENTS

Precautions	4-1	Repair Instructions	4B-1
Precautions.....	4-1	Front Brake Components	4B-1
Precautions for Brake System	4-1	Front Brake Pad Inspection.....	4B-2
Brake Fluid Information	4-1	Front Brake Pad Replacement.....	4B-2
Brake Control System and Diagnosis ...	4A-1	Front Brake Caliper Removal and Installation.....	4B-3
Schematic and Routing Diagram.....	4A-1	Front Brake Caliper Disassembly and	
Front Brake Hose Routing Diagram	4A-1	Assembly.....	4B-4
Rear Brake Cable Routing Diagram.....	4A-2	Front Brake Caliper Parts Inspection	4B-6
Diagnostic Information and Procedures	4A-3	Front Brake Disc Removal and Installation	4B-7
Brake Symptom Diagnosis.....	4A-3	Front Brake Disc Inspection	4B-7
Repair Instructions	4A-3	Specifications	4B-8
Brake Pedal Height Inspection and		Service Data.....	4B-8
Adjustment	4A-3	Tightening Torque Specifications	4B-8
Front Brake Light Switch Inspection	4A-3	Special Tools and Equipment	4B-8
Rear Brake Light Switch Inspection	4A-4	Recommended Service Material	4B-8
Rear Brake Light Switch Inspection and		Special Tool	4B-9
Adjustment	4A-4	Rear Brakes.....	4C-1
Parking / Rear Brake Light Switch Inspection	4A-4	Precautions.....	4C-1
Parking / Rear Brake Lever Switch Inspection	4A-4	Precautions for Rear Brake	4C-1
Brake Fluid Level Check	4A-4	Repair Instructions	4C-1
Front Brake Hose Inspection	4A-4	Rear Brake Components.....	4C-1
Air Bleeding from Front Brake Fluid Circuit.....	4A-5	Rear Brake Friction Plate Inspection.....	4C-2
Brake Fluid Replacement.....	4A-6	Rear Brake Friction Plate Replacement.....	4C-2
Front Brake Hose Removal and Installation.....	4A-7	Rear Brake Assembly Removal and	
Rear Brake Cable Removal and Installation	4A-7	Installation	4C-2
Front Brake Master Cylinder Components.....	4A-9	Rear Brake Disassembly and Assembly	4C-3
Front Brake Master Cylinder Assembly		Rear Brake Parts Inspection	4C-7
Removal and Installation.....	4A-9	Specifications	4C-9
Front Brake Master Cylinder / Brake Lever		Service Data.....	4C-9
Disassembly and Assembly	4A-11	Tightening Torque Specifications	4C-9
Front Brake Master Cylinder Parts Inspection ..	4A-12	Special Tools and Equipment	4C-10
Rear Brake Pedal Construction	4A-13	Recommended Service Material	4C-10
Rear Brake Pedal Removal and Installation	4A-13	Special Tool	4C-10
Specifications.....	4A-15	Parking Brake	4D-1
Service Data	4A-15	Schematic and Routing Diagram.....	4D-1
Tightening Torque Specifications.....	4A-15	Parking / Rear Brake Cable Routing Diagram	4D-1
Special Tools and Equipment	4A-16	Repair Instructions	4D-3
Recommended Service Material	4A-16	Parking / Rear Brake Inspection and	
Special Tool	4A-16	Adjustment	4D-3
Front Brakes	4B-1	Parking / Rear Brake Cable Removal and	
Precautions.....	4B-1	Installation	4D-3
Precautions for Front Brakes	4B-1	Parking / Rear Brake Lever Components	4D-4

4-ii Table of Contents

Parking / Rear Brake Lever Removal and Installation	4D-4	Specifications	4D-5
Parking / Rear Brake Light Switch Inspection	4D-4	Tightening Torque Specifications	4D-5
Parking / Rear Brake Relay Inspection	4D-4	Special Tools and Equipment	4D-5
		Recommended Service Material	4D-5

Precautions

Precautions

Precautions for Brake System

B931H24000001

Refer to “General Precautions: in Section 00”.

Brake Fluid Information

B931H24000002

⚠ WARNING

- This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use or mix different types of fluid, such as silicone-based or petroleum-based.
- Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or which has been stored for a long period of time.
- When storing brake fluid, seal the container completely and keep it away from children.
- When replenishing brake fluid, take care not to get dust into the fluid.
- When washing brake components, use new brake fluid. Never use cleaning solvent.
- A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or neutral detergent.

⚠ CAUTION


Immediately and completely wipe off any brake fluid contacting any part of the vehicle. The brake fluid reacts chemically with paint, plastics and rubber materials, etc., and will damage them severely.

Brake Control System and Diagnosis

Schematic and Routing Diagram

Front Brake Hose Routing Diagram

B931H24102001

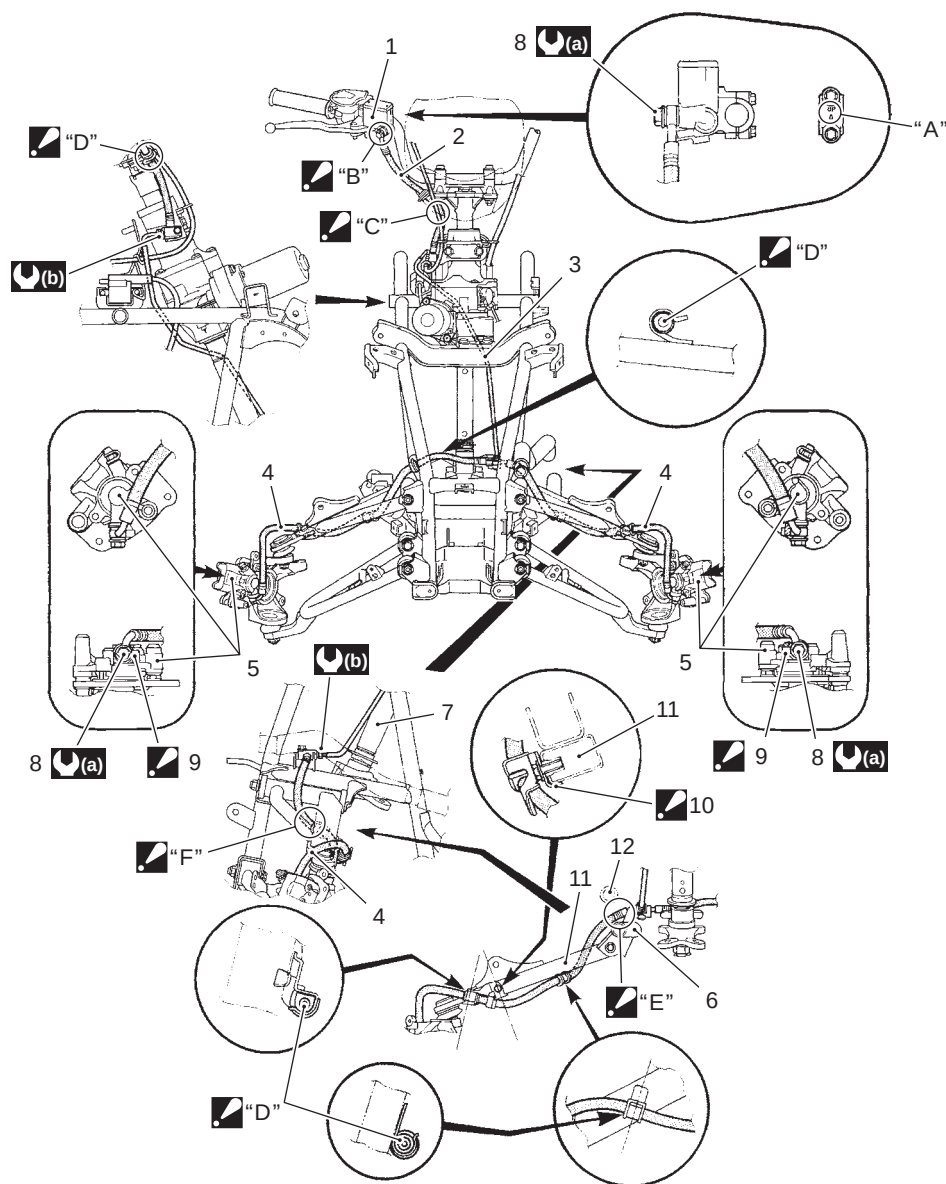


I931H1410043-05

1. Master cylinder	11. Suspension upper arm
2. Front brake hose No. 1	12. Radiator hose
3. Front brake pipe	"A": UP mark.
4. Front brake hose No. 2	☑ "B": After the brake hose union has contacted the reservoir bottom.
5. Front brake caliper	☑ "C": Pass the brake hose behind the throttle cable.
6. Frame	☑ "D": Fix the brake hose to the it guide firmly.
7. Steering shaft	☑ "E": Pass the brake hose No. 2 between the radiator lower hose and frame.
8. Union bolt	☑ "F": Pass the brake hose inside of the suspension arm.
☑ 9. Stopper : After the brake hose union has contacted the stopper, tighten the union bolt.	☑(a) : 23 N·m (2.3 kgf-m, 16.5 lbf-ft)
☑ 10. Stopper : After the brake hose clamp has contacted the suspension upper arm, tighten the stopper bolt.	☑(b) : 16 N·m (1.6 kgf-m, 11.5 lbf-ft)

Rear Brake Cable Routing Diagram

B931H24102002

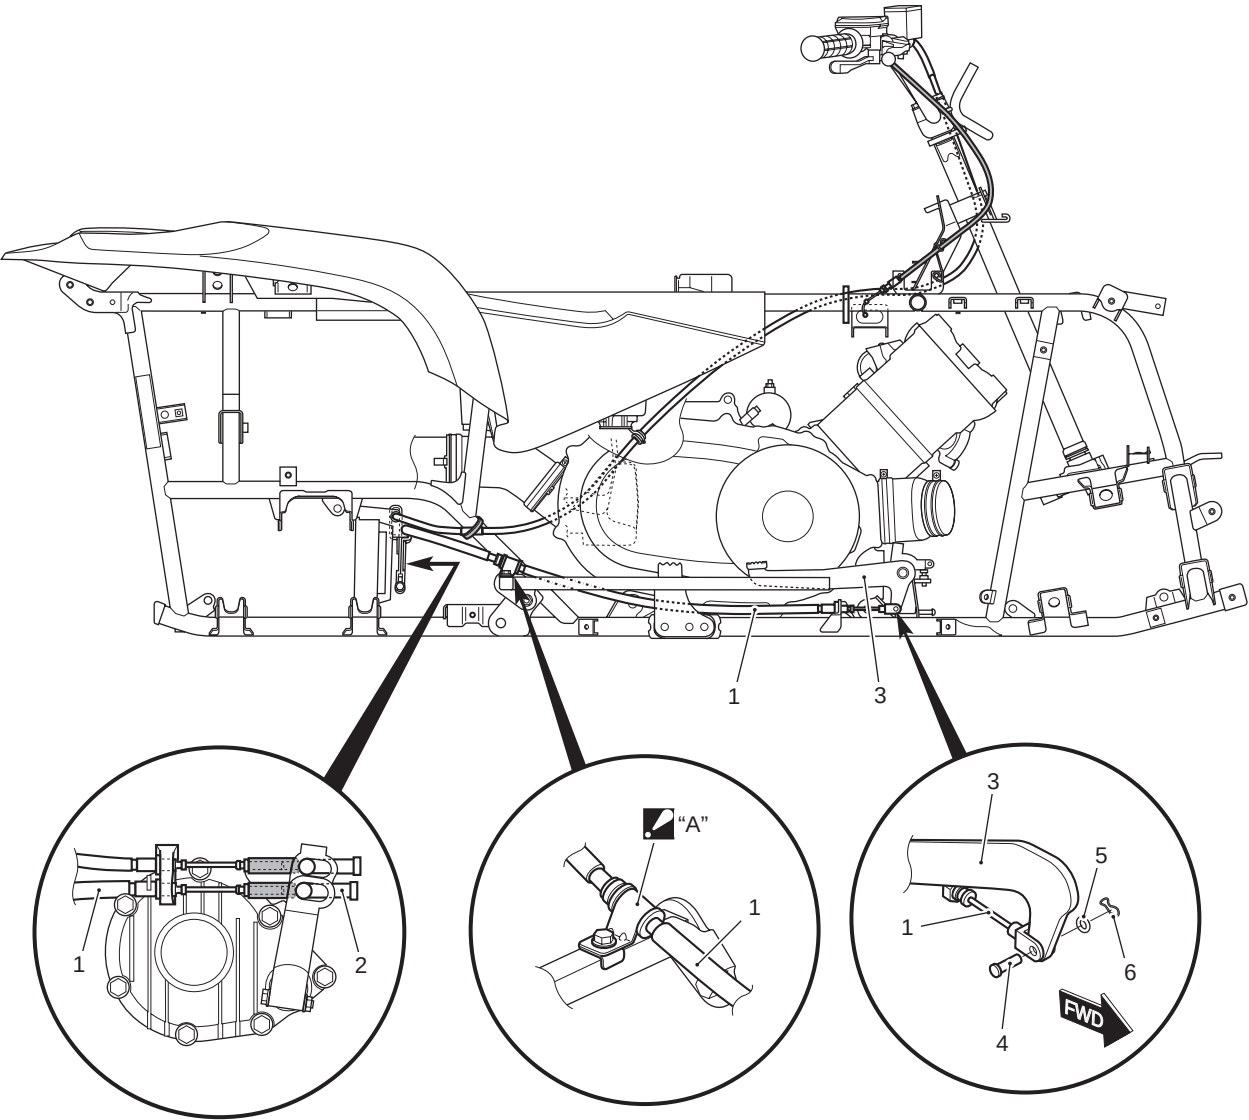

I931H1410044-02

1. Rear brake cable	3. Rear brake pedal	5. Washer	■ "A": Fix the rear brake cable to the footrest bar with clamp.
2. Adjust nut	4. Pin	6. Cotter pin	

Diagnostic Information and Procedures

Brake Symptom Diagnosis

B931H24104001

Condition	Possible cause	Correction / Reference Item
Insufficient brake power	Leakage of brake fluid from hydraulic system.	<i>Repair or replace.</i>
	Worn pads or friction plate.	<i>Replace.</i>
	Oil adhesion on friction surface of pads.	<i>Clean disc and pads.</i>
	Worn disc.	<i>Replace.</i>
	Air in hydraulic system.	<i>Bleed air.</i>
	Not enough brake fluid in the reservoir.	<i>Replenish.</i>
	Defective adjustment of rear brake.	<i>Adjust.</i>
Brake squeaking	Carbon adhesion on pad surface.	<i>Repair surface with sandpaper.</i>
	Tilted pad.	<i>Correct pad fitting or replace.</i>
	Damaged hub bearing.	<i>Replace.</i>
	Worn pads and disc.	<i>Replace.</i>
	Foreign material in brake fluid.	<i>Replace brake fluid.</i>
	Clogged return port of master cylinder.	<i>Disassemble and clean master cylinder.</i>
Excessive brake lever stroke	Air in hydraulic system.	<i>Bleed air.</i>
	Insufficient brake fluid.	<i>Replenish fluid to specified level; bleed air.</i>
	Improper quality of brake fluid.	<i>Replace with correct fluid.</i>
Leakage of brake fluid	Insufficient tightening of connection joints.	<i>Tighten to specified torque.</i>
	Cracked hose.	<i>Replace.</i>
	Worn piston and/or cup.	<i>Replace piston and/or cup.</i>
	Worn piston seal and dust seal.	<i>Replace piston seal and dust seal.</i>
Brake drags	Rusty part.	<i>Clean and lubricate.</i>
	Insufficient brake lever or brake pedal pivot lubrication.	<i>Lubricate.</i>

Repair Instructions

Brake Pedal Height Inspection and Adjustment

B931H24106001

Refer to “**Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B**”.

Front Brake Light Switch Inspection

B931H24106002

Inspect the front brake light switch in the following procedures:

- 1) Disconnect the front brake light switch lead coupler (1).



I931H1410001-01

- 2) Inspect the switch for continuity with a tester. If any abnormality is found, replace the front brake light switch with a new one. Refer to “Front Brake Master Cylinder / Brake Lever Disassembly and Assembly (Page 4A-11)”.

Special tool

TOOL : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

Color Position	Terminal (B/R)	Terminal (B/R)
ON		
OFF		

I931H1410002-01

- 3) Connect the front brake light switch lead coupler.

Rear Brake Light Switch Inspection

B931H24106003

Inspect the rear brake light switch in the following procedures:

- 1) Remove the left front inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the rear brake light switch lead coupler (1).



I931H1410003-01

- 3) Inspect the switch for continuity with a tester. If any abnormality is found, replace the rear brake light switch with a new one.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (●))

Color Position	Terminal (O)	Terminal (W/B)
ON		
OFF		

I831G1410032-03

- 4) Connect the rear brake light switch lead coupler (1).

Rear Brake Light Switch Inspection and Adjustment

B931H24106004

Check the rear brake light switch so that the brake light will come on just before pressure is felt when the brake pedal is depressed. If the brake light switch adjustment is necessary, turn the adjuster nut (1) in or out while holding the brake pedal.




I931H1410004-01

Parking / Rear Brake Light Switch Inspection

B931H24106005

Inspect the parking/rear brake light switch in the following procedures:

- 1) Remove the left inner fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Disconnect the parking/rear brake light switch read coupler (1).

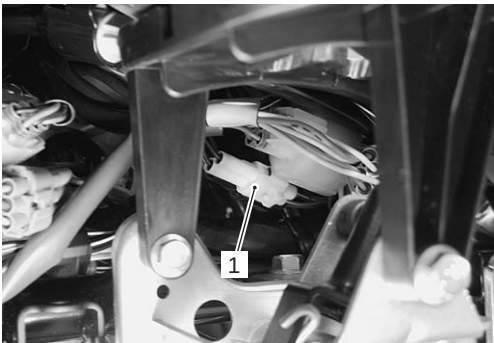

I931H1410005-01

- 3) Inspect the parking/rear brake light switch for continuity with a tester. If any abnormality is found, replace the parking/rear brake lever assembly with a new one. Refer to “Handlebars Removal and Installation: in Section 6B”.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Continuity (●))

Color Position	B	B
ON		
OFF		

I831G1410044-01

Parking / Rear Brake Lever Switch Inspection

B931H24106006

Refer to “Parking / Rear Brake Switch Inspection: in Section 1I”.

Brake Fluid Level Check

B931H24106007

Refer to “Front Brake System Inspection: in Section 0B”.

Front Brake Hose Inspection

B931H24106008

Refer to “Front Brake System Inspection: in Section 0B”.

Air Bleeding from Front Brake Fluid Circuit


B931H24106009

Air trapped in the brake fluid circuit acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus interferes with the full braking performance of the brake caliper. The presence of air is indicated by "sponginess" of the brake lever and also by lack of braking force. Considering the danger to which such trapped air exposes the machine and rider, it is essential that after remounting the brake and restoring the brake system to the normal condition, the brake fluid circuit be purged of air in the following manner:

⚠ CAUTION

- Make sure that the vehicle is supported securely.
- Handle brake fluid with care: the fluid reacts chemically with paint, plastic, rubber materials, etc.

- 1) Fill the master cylinder reservoir to the top of the inspection window. Place the reservoir cap to prevent dirt from entering.

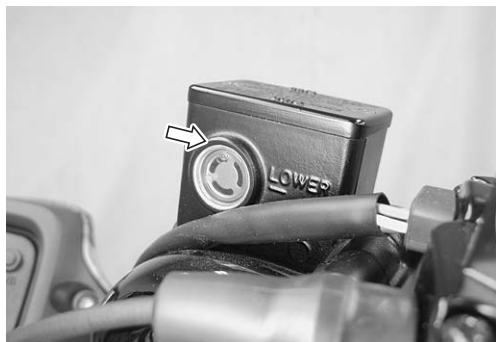


I931H1410006-01

- 2) Attach a hose to the air bleeder valve, and insert the free end of the hose into a receptacle.
- 3) Squeeze and release the brake lever several times in rapid succession and squeeze the lever fully without releasing it.



I931H1410007-01

- 4) Loosen the air bleeder valve by turning it a quarter of a turn so that the brake fluid runs into the receptacle, this will remove the tension of the brake lever causing it to touch the handlebar grip.

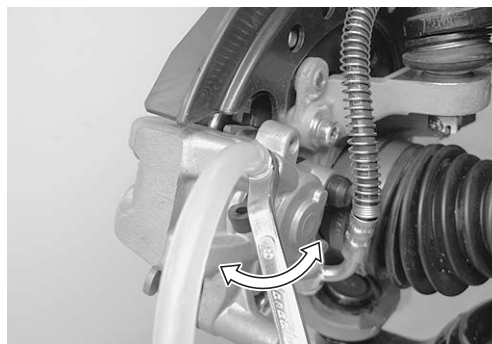

I931H1410008-01

- 5) Close the air bleeder valve, pump and squeeze the lever, and open the valve.
- 6) Repeat this process until the fluid flowing into the receptacle no longer contains air bubbles.


NOTE

While bleeding the brake system, replenish the brake fluid in the reservoir as necessary. Make sure that there is always some fluid visible in the reservoir.

- 7) Close the air bleeder valve and disconnect the hose.

Tightening torque

Front brake air bleeder valve (a): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

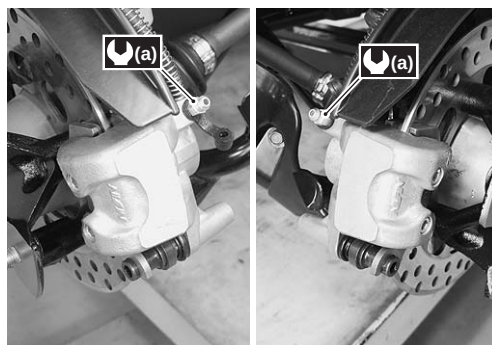

I931H1410050-01

- 8) Fill the reservoir with brake fluid to the upper mark of the reservoir.



I931H1410009-01

- 9) Install the reservoir cap.

Brake Fluid Replacement

B931H24106010

⚠ CAUTION

- Make sure that the vehicle is supported securely.
- Handle brake fluid with care: the fluid reacts chemically with paint, plastic, rubber materials, etc.

- 1) Support the vehicle on a level surface with a jack and keep the handlebars straight.
- 2) Remove the front wheels. Refer to “**Front / Rear Wheel Removal and Installation: in Section 2D**”.
- 3) Remove the brake fluid reservoir cap and diaphragm.
- 4) Suck up the old brake fluid as much as possible.




I931H1410010-01

- 5) Fill the reservoir with new brake fluid.

BF: Brake fluid (DOT 4)

- 6) Connect a clear hose to the air bleeder valve and insert the other end of the hose into a receptacle.

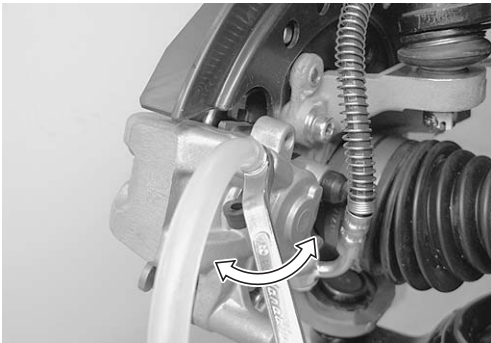

I931H1410011-01

- 7) Loosen the air bleeder valve and pump the brake lever until the old brake fluid flows out of the brake system.





I931H1410012-01

- 8) Close the air bleeder valves (1) and disconnect the clear hose.

Tightening torque

Front brake air bleeder valve (a): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

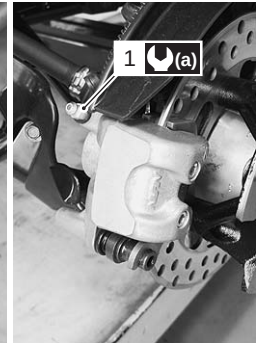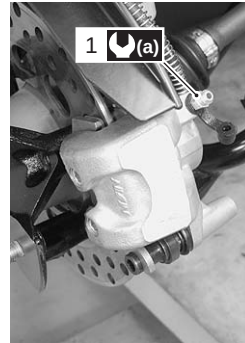

I931H1410013-01

- 9) Fill the reservoir with brake fluid.



I931H1410014-01

- 10) Install the reservoir cap.
- 11) Install the front wheels. Refer to “**Front / Rear Wheel Removal and Installation: in Section 2D**”.

Front Brake Hose Removal and Installation


B931H24106011

Removal

CAUTION

Make sure that the vehicle is supported securely.

- 1) Remove the front fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Drain brake fluid. Refer to “**Brake Fluid Replacement (Page 4A-6)**”.
- 3) Loosen the flare nuts (1) and disconnect the brake pipe.

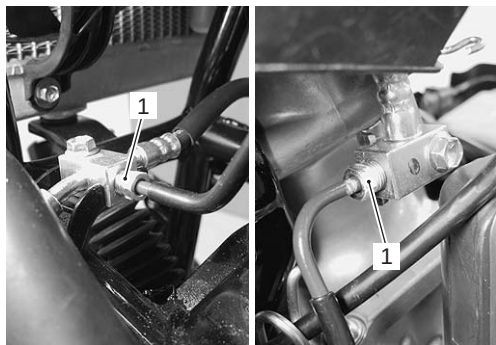

I931H1410045-01

- 4) Remove the front brake hoses as shown in the front brake hose routing diagram. Refer to “**Front Brake Hose Routing Diagram (Page 4A-1)**”.

Installation


CAUTION

The seal washers should be replaced with the new ones to prevent fluid leakage.

- 1) Install the front brake hose as shown in the front brake hose routing diagram. Refer to “**Front Brake Hose Routing Diagram (Page 4A-1)**”.
- 2) Tighten the brake flare nuts (1) to the specified torque.

Tightening torque

Brake pipe flare nut (a): 16 N·m (1.6 kgf-m, 11.5 lbf-ft)

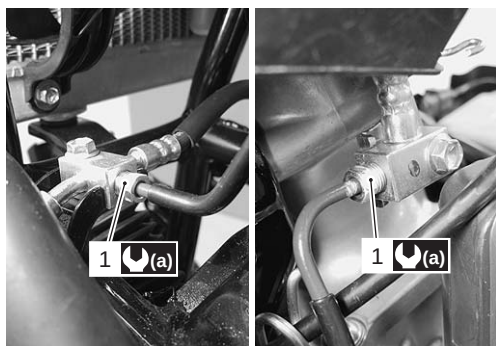

I931H1410046-01


- 3) Bleed air from the front brake system. Refer to “**Air Bleeding from Front Brake Fluid Circuit (Page 4A-5)**”.
- 4) Install the front fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.

Rear Brake Cable Removal and Installation

B931H24106012


Removal

- 1) Remove the right inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the right mud guard. Refer to “**Rear Side Exterior Parts Removal and Installation: in Section 9D**”.
- 3) Remove the cotter pin (1), washer (2) and pin (3).

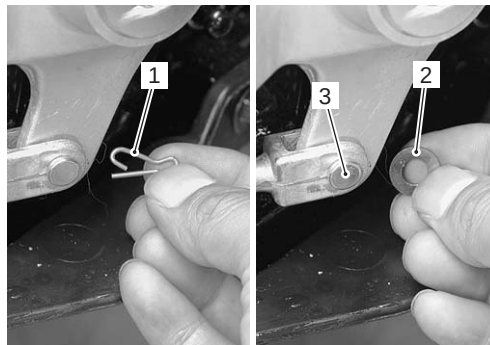


I931H1410017-01

- 4) Remove the rear brake cable bolt (4) from the right footrest.

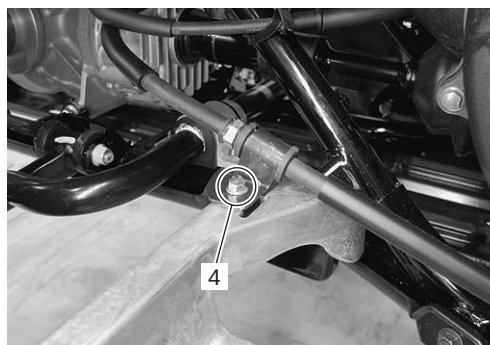


I931H1410018-01

- 5) Loosen the rear brake cable holder nut (5).

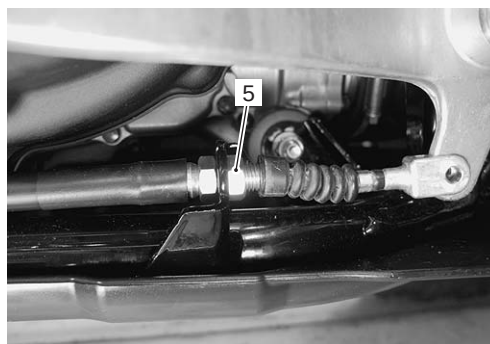


I931H1410019-01

6) Remove the rear brake cable (6).

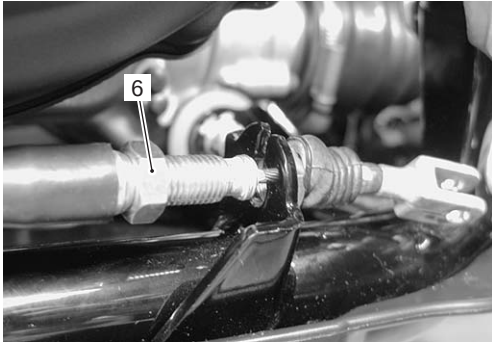

I931H1410020-01

7) Remove the rear brake cable adjuster nut (7) and cable (8).

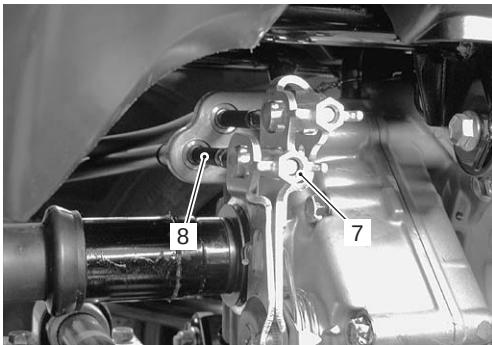


I931H1410021-01

Installation

- 1) Install the rear brake cable as shown in the rear brake cable routing diagram. Refer to "Rear Brake Cable Routing Diagram (Page 4A-2)".
- 2) Install the spring as shown in the figure.

NOTE

The large diameter "a" should face to the adjuster side.

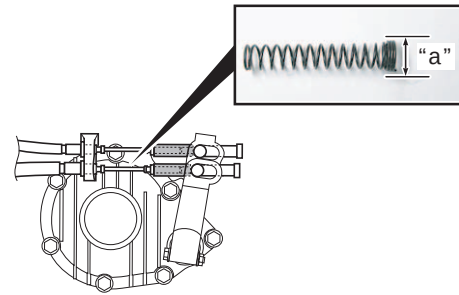


I931H1410049-03

- 3) After installed rear brake cable, adjust the adjuster nut. Refer to "Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B".
- 4) Install the removed parts.

Front Brake Master Cylinder Components

B931H24106013

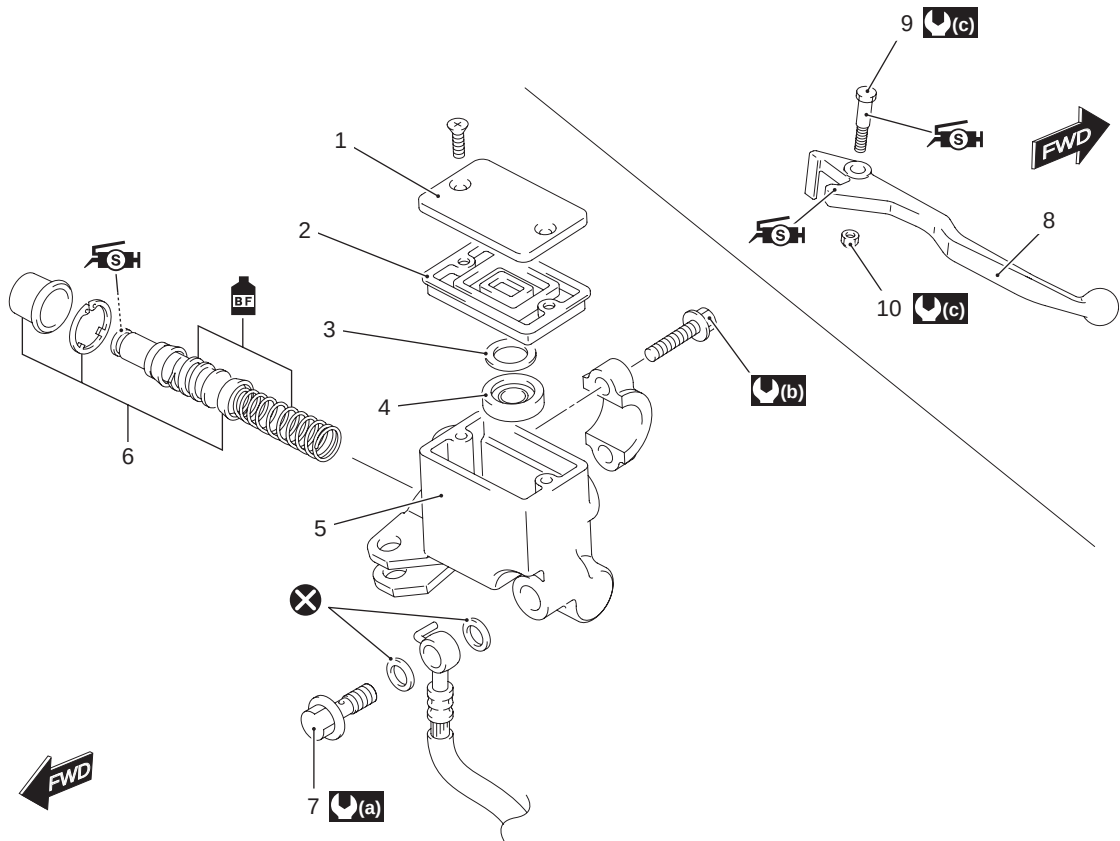

I931H1410047-01

1. Reservoir tank cap	7. Brake hose union bolt	 : 6 N·m (0.6 kgf-m, 4.5 lbf-ft)
2. Diaphragm	8. Brake lever	 : Apply silicone grease.
3. Plate	9. Brake lever pivot bolt	 : Apply brake fluid.
4. Separator	10. Brake lever pivot bolt lock-nut	 : Do not reuse.
5. Master cylinder	 : 23 N·m (2.3 kgf-m, 16.5 lbf-ft)	
6. Piston/Cup set	 : 10 N·m (1.0 kgf-m, 7.0 lbf-ft)	

Front Brake Master Cylinder Assembly Removal and Installation

B931H24106014

Removal

- 1) Drain brake fluid. Refer to “Brake Fluid Replacement (Page 4A-6)”.
- 2) Remove the throttle case assembly. Refer to “Handlebars Removal and Installation: in Section 6B”.

- 3) Disconnect the front brake light switch lead coupler (1).



I931H1410022-01

- 4) Place a rag underneath the brake hose union bolt (2) on the master cylinder to catch any spilt brake fluid.
- 5) Remove the brake hose union bolt (2) and disconnect the brake hose.



I931H1410023-01

- 6) Remove the master cylinder assembly (3).



I931H1410024-01


Installation

Install the front brake master cylinder in the reverse order of removal. Pay attention to the following points:


- When installing the master cylinder (1) onto the handlebars (2), align the master cylinder holder's mating surface "A" with the punch mark "B" on the handlebars (2) and tighten the upper holder bolt first. Refer to "**Steering / Handlebars Assembly Construction: in Section 6B**".

Tightening torque

Master cylinder holder bolt (Upper and Lower)
(a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)

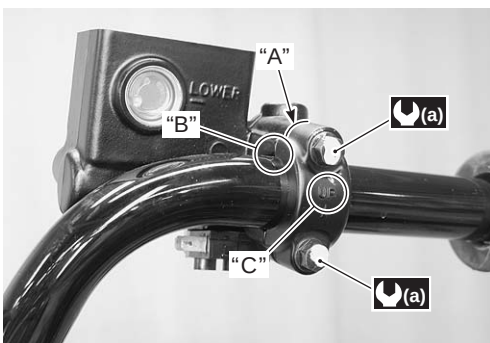

I931H1410025-01

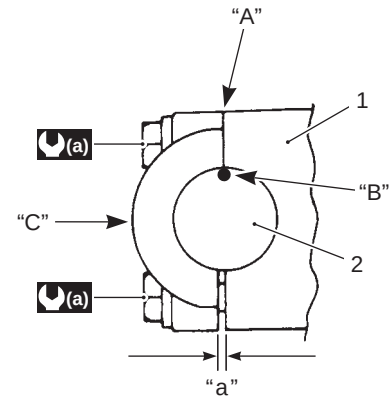

I831G1410024-02

"C": Up mark

"a": Clearance

- Set the brake hose union as shown in the front brake hose routing diagram. Refer to "Front Brake Hose Routing Diagram (Page 4A-1)".
- After setting the brake hose union to the stopper, tighten the union bolt (3) to the specified torque.

⚠ CAUTION

The seal washers should be replaced with the new ones to prevent fluid leakage.

Tightening torque

Brake hose union bolt (b): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)



I931H1410026-01

- Install the throttle case assembly. Refer to "**Handlebars Removal and Installation: in Section 6B**".
- Bleed air from the brake system. Refer to "Air Bleeding from Front Brake Fluid Circuit (Page 4A-5)".


Front Brake Master Cylinder / Brake Lever Disassembly and Assembly

B931H24106015

Refer to "Front Brake Master Cylinder Assembly
Removal and Installation (Page 4A-9)".


Disassembly

- 1) Remove the reservoir cap (1) and diaphragm (2).

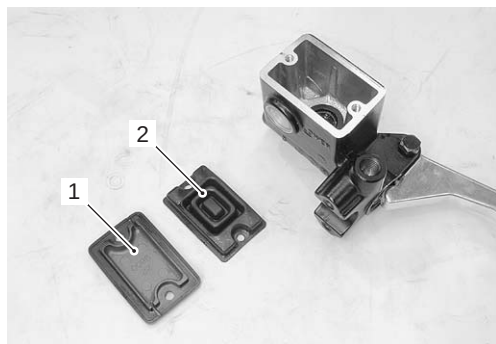

I931H1410039-01

- 2) Remove the brake lever (3) and brake light switch (4).

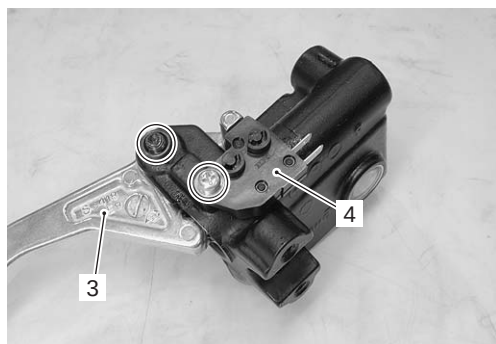


I931H1410040-01

- 3) Pull out the dust boot (5) and remove the snap ring (6) with a special tool.

Special tool


 : 09900-06108 (Snap ring remover (Close type))

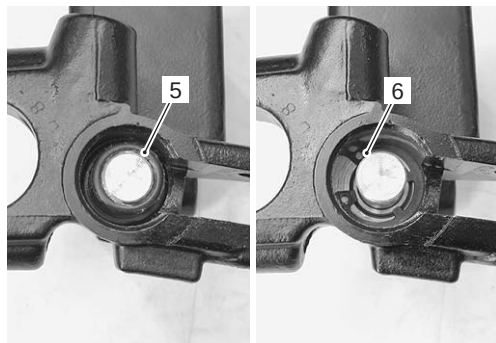

I931H1410041-01

- 4) Remove the following parts from the master cylinder.

- Secondary cup (7)
- Piston (8)
- Primary cup (9)
- Spring (10)

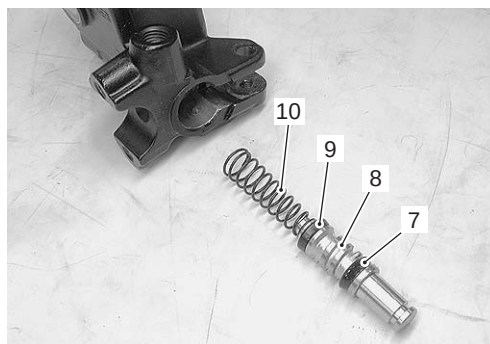

I931H1410042-01

Assembly

Assemble the master cylinder in the reverse order of disassembly. Pay attention to the following points:

CAUTION


- Wash the master cylinder components with new brake fluid before reassembly.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosene, etc.
- Apply brake fluid to the master cylinder bore and all of the master cylinder component to be inserted into the bore.

BF: Brake fluid (DOT 4)



I931H1410027-01


- When installing the brake light switch, align the projection on the switch with the hole in the master cylinder.

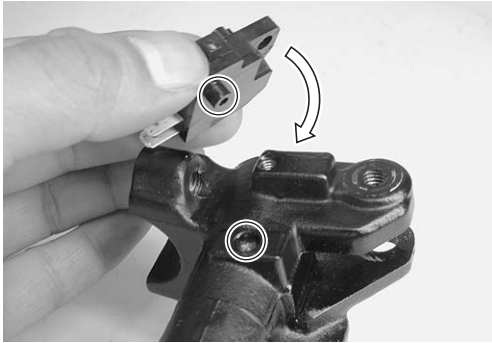

I931H1410028-01

- Apply grease to the brake lever pivot bolt.
- Apply grease to the contact point between piston and brake lever.

SH : Grease 99000-25100 (SUZUKI Silicone Grease or equivalent)

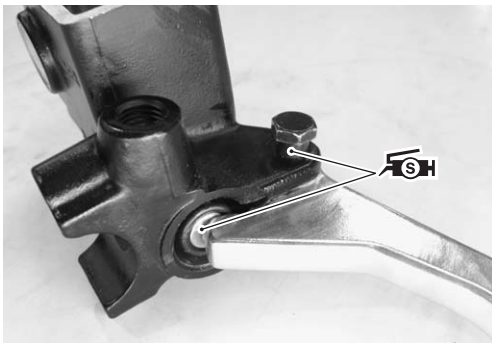


I931H1410029-01

- Tighten the pivot bolt and lock-nut to the specified torque.

Tightening torque

Brake lever pivot bolt (a): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

Brake lever pivot bolt lock-nut (b): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

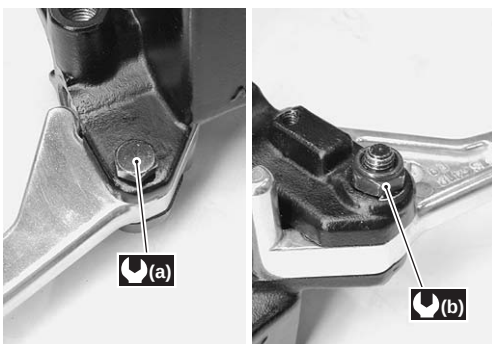

I931H1410030-01


Front Brake Master Cylinder Parts Inspection

B931H24106016

Refer to "Front Brake Master Cylinder / Brake Lever Disassembly and Assembly (Page 4A-11)".

Master Cylinder

Inspect the master cylinder bore for any scratches or other damage.

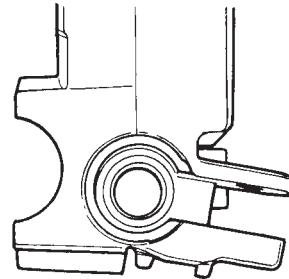

I649G1410027-02

Piston

Inspect the piston surface for any scratches or other damage.

Rubber Parts


Inspect the primary cup, secondary cup and dust boot for wear or damage.



I931H1410031-01

Rear Brake Pedal Construction

B931H24106017

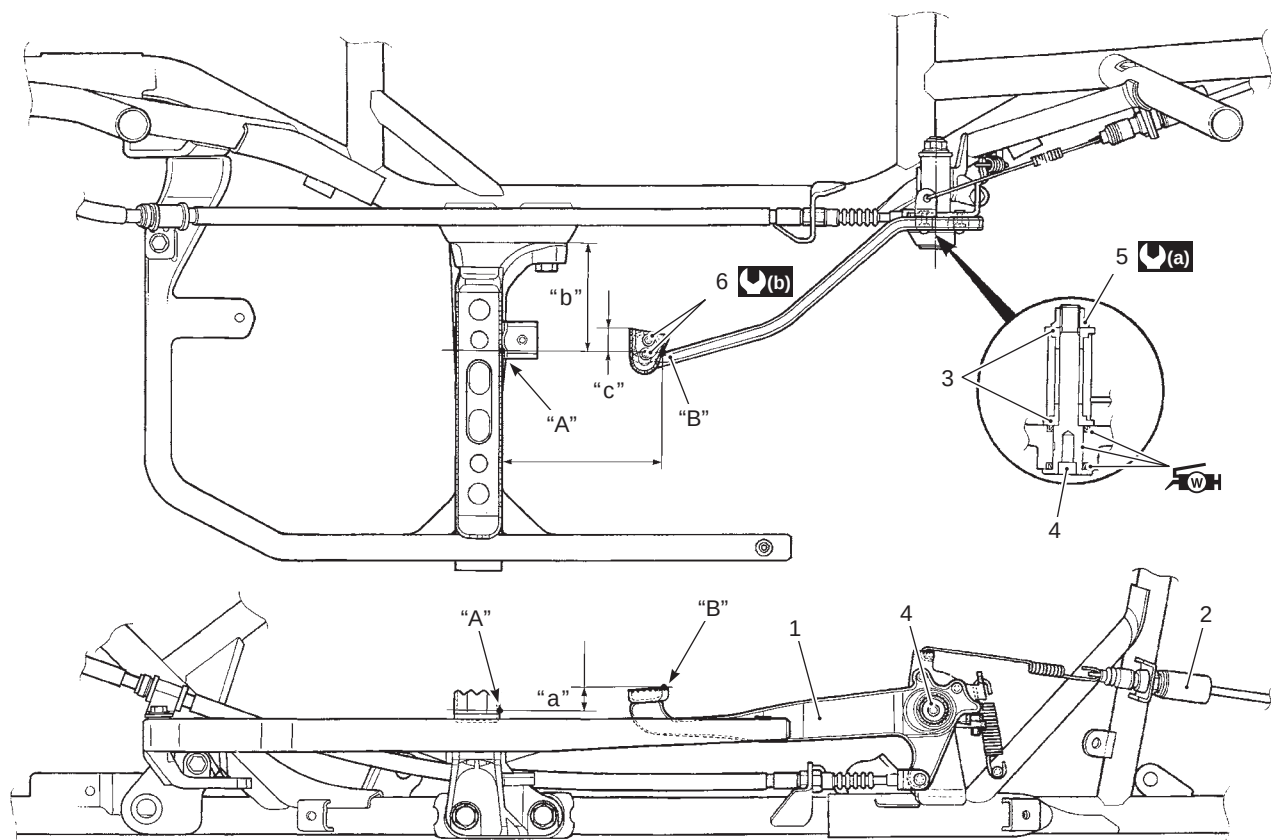

I931H1410048-03


1. Rear brake pedal	6. Rear brake pedal screw	"B": Anchoring point (Pedal side)
2. Rear brake light switch	"a": 12.5 – 22.5 mm (0.49 – 0.89 in)	(a) : 60 N·m (6.0 kgf·m, 43.5 lbf·ft)
3. Washer	"b": 83.2 mm (3.28 in)	(b) : 4.5 N·m (0.45 kgf·m, 3.0 lbf·ft)
4. Rear brake pedal shaft	"c": 17.5 mm (0.69 in)	W : Apply water resistance grease.
5. Rear brake pedal shaft nut	"A": Anchoring point (Footrest side)	

Rear Brake Pedal Removal and Installation

B931H24106018


Removal

- 1) Remove the right inner fender. Refer to **"Front Side Exterior Parts Removal and Installation: in Section 9D"**.
- 2) Remove the right mud guard. Refer to **"Rear Side Exterior Parts Removal and Installation: in Section 9D"**.
- 3) Remove the rear brake light switch spring (1).
- 4) Disconnect the rear brake cable (2). Refer to **"Rear Brake Cable Removal and Installation (Page 4A-7)"**.

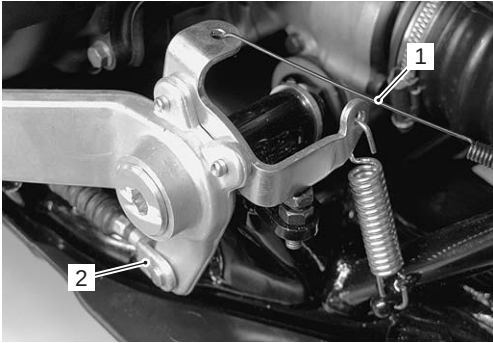

I931H1410032-01

- 5) Remove the rear brake pedal shaft (3).
- 6) Remove the rear brake pedal (4) and rear brake pedal spring (5).

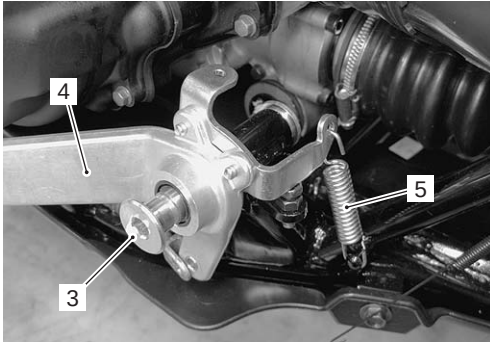


I931H1410033-01

- 7) Remove the dust seals (6) if necessary.


CAUTION

If there are wear or damage, replace the dust seals (6) with new ones.

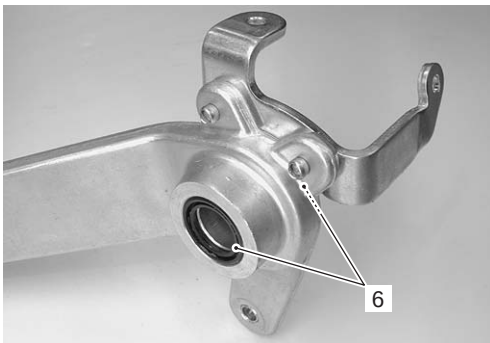

I931H1410037-01

- 8) Remove the washers (7).

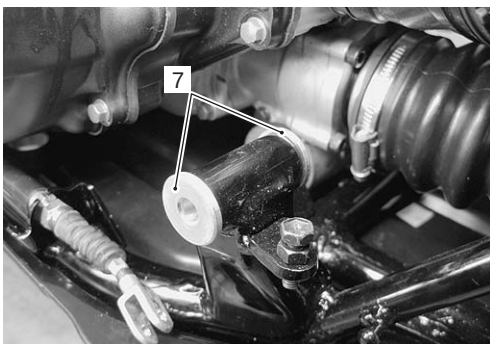

I931H1410038-01

Installation

Install the rear brake pedal in the reverse order of removal. Pay attention to the following points:

- Apply grease to the lip of dust seals and washers.

CAUTION

Never reuse the removed dust seals with new ones.

Grease 99000-25160 (Water resistance grease or equivalent)



I931H1410034-03

- Apply grease to the rear brake pedal shaft (1).

Grease 99000-25160 (Water resistance grease or equivalent)




I931H1410035-01

- Install the rear brake pedal shaft (1) and tighten the brake pedal nut (2) to the specified torque.

Tightening torque

Rear brake pedal shaft nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

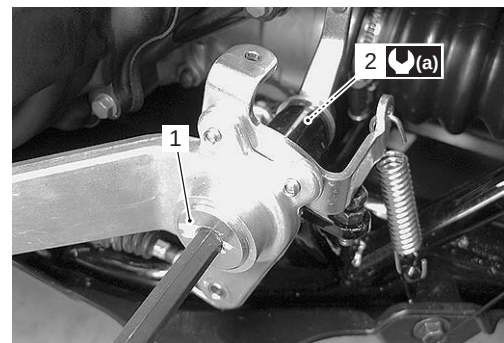

I931H1410036-02

- After installed rear brake cable, adjust the adjuster nut. Refer to "Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B".
- Install the removed parts.

Specifications

Service Data

B931H24107001

Brake

Unit: mm (in)

Item	Standard	Limit
Rear brake pedal height	12.5 – 22.5 (0.5 – 0.9)	—
Front master cylinder bore	12.700 – 12.743 (0.5000 – 0.5017)	—
Front master cylinder piston diam.	12.657 – 12.684 (0.4983 – 0.4994)	—

Oil

Item	Specification	Note
Brake fluid type	DOT 4	

Tightening Torque Specifications

B931H24107002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Front brake air bleeder valve	6	0.6	4.5	☞ (Page 4A-5) / ☞ (Page 4A-6)
Brake pipe flare nut	16	1.6	11.5	☞ (Page 4A-7)
Master cylinder holder bolt (Upper and Lower)	10	1.0	7.0	☞ (Page 4A-10)
Brake hose union bolt	23	2.3	16.5	☞ (Page 4A-10)
Brake lever pivot bolt	6	0.6	4.5	☞ (Page 4A-12)
Brake lever pivot bolt lock-nut	6	0.6	4.5	☞ (Page 4A-12)
Rear brake pedal shaft nut	60	6.0	43.5	☞ (Page 4A-14)

NOTE

The specified tightening torque is described in the following.

“Front Brake Hose Routing Diagram (Page 4A-1)”

“Front Brake Master Cylinder Components (Page 4A-9)”

“Rear Brake Pedal Construction (Page 4A-13)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H24108001

Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞ (Page 4A-6) / ☞ (Page 4A-11)
Grease	SUZUKI Silicone Grease or equivalent	P/No.: 99000-25100	☞ (Page 4A-12)
	Water resistance grease or equivalent	P/No.: 99000-25160	☞ (Page 4A-14) / ☞ (Page 4A-14)

NOTE



Required service material is also described in the following.

“Front Brake Master Cylinder Components (Page 4A-9)”

“Rear Brake Pedal Construction (Page 4A-13)”

Special Tool

B931H24108002

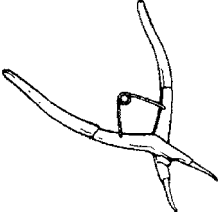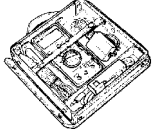09900-06108 Snap ring remover (Close type) ☞ (Page 4A-11)		09900-25008 Multi circuit tester set ☞ (Page 4A-3) / ☞ (Page 4A-4) / ☞ (Page 4A-4)	
---	---	--	---

Front Brakes

Precautions

Precautions for Front Brakes

B931H24200001

⚠ WARNING

When servicing the front brake system, place the vehicle on a level ground and support the vehicle with a jack.


NOTE

The right and left calipers, brake pads and discs are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

Repair Instructions

Front Brake Components

B931H24206001

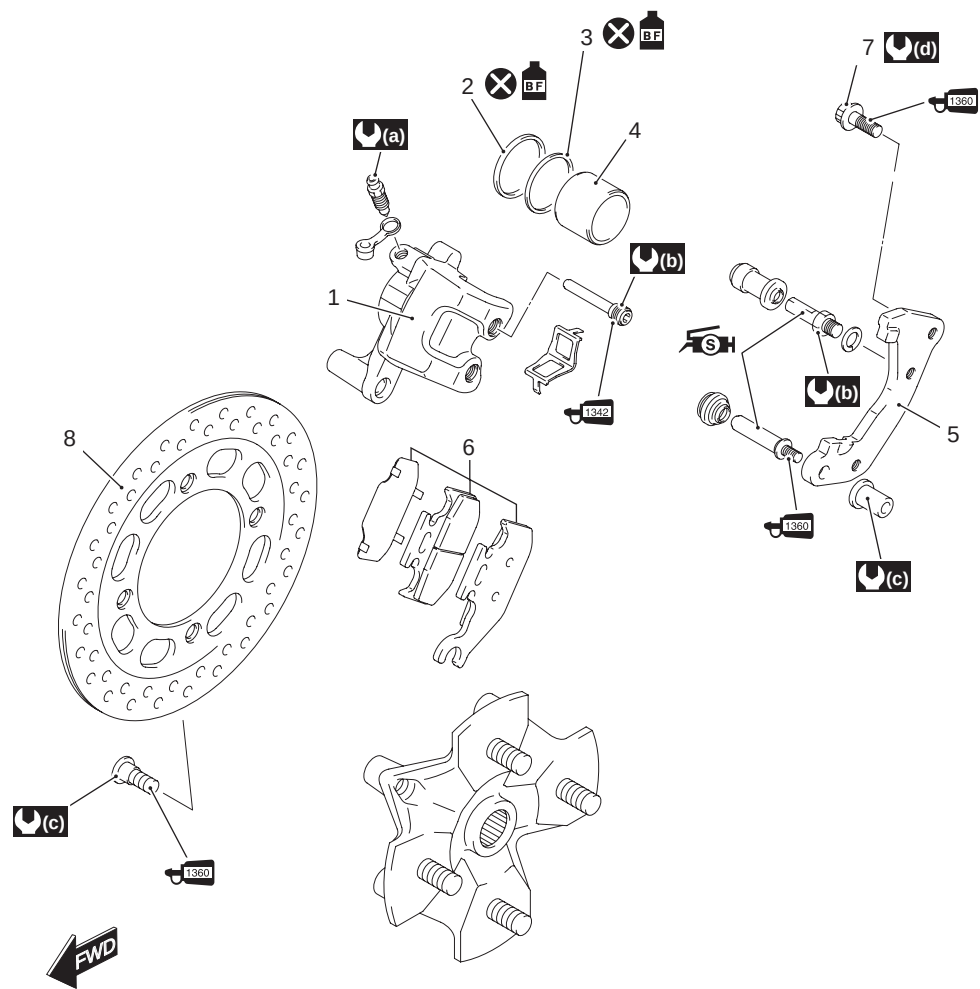

I931H1420024-03

1. Front brake caliper	7. Brake caliper mounting bolt	: Apply silicone grease.
2. Piston seal	8. Front brake disk	: Apply thread lock to the thread part.
3. Dust seal	: 6 N-m (0.6 kgf-m, 4.5 lbf-ft)	: Apply thread lock to the thread part.
4. Piston	: 18 N-m (1.8 kgf-m, 13.0 lbf-ft)	: Apply brake fluid.
5. Brake caliper holder	: 23 N-m (2.3 kgf-m, 16.5 lbf-ft)	: Do not reuse.
6. Front brake pad set	: 26 N-m (2.6 kgf-m, 19.0 lbf-ft)	



Front Brake Pad Inspection

B931H24206002

The extent of brake pads wear can be checked by observing the grooved limit line "A" on the pads. When the wear exceeds the grooved limit line, replace the pads with new ones. Refer to "Front Brake Pad Replacement (Page 4B-2)".

⚠ CAUTION

Replace the brake pad as a set, otherwise braking performance will be adversely affected.

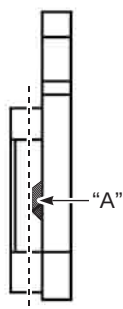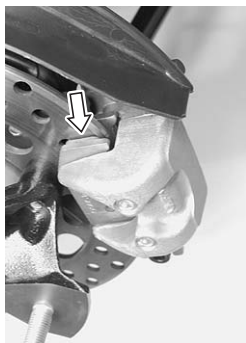

I931H1420001-02


Front Brake Pad Replacement

B931H24206003

- 1) Remove the front wheel assembly. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".
- 2) Remove the pad mounting pins (1).

NOTE

When removing the pads, push the piston all the way into the brake caliper.

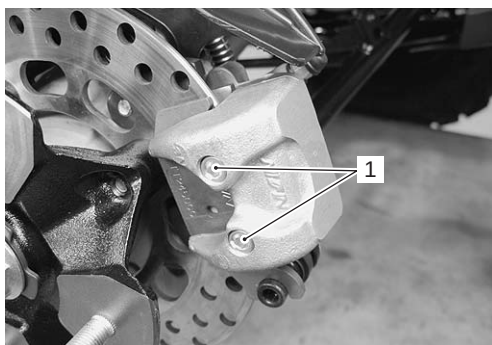


I931H1420002-01

⚠ CAUTION

Do not operate the brake lever while dismantling the pads.

- 3) Remove the front brake caliper by removing the brake caliper mounting bolts (2). Refer to "Front Brake Caliper Removal and Installation (Page 4B-3)".

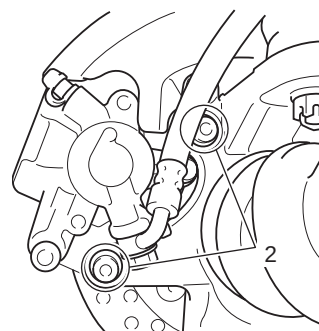

I831G1420031-01

- 4) Remove the brake pads.
- 5) Clean up the caliper especially around the caliper piston.
- 6) Install the new brake pads.

⚠ CAUTION

Replace the brake pads as a set, otherwise braking performance will be adversely affected.



I931H1420003-01

4B-3 Front Brakes:


- 7) Apply a small quantity of thread lock to the brake pad mounting pins (1).

 **1342** : Thread lock cement 99000-32050
(THREAD LOCK CEMENT 1342 or equivalent)

- 8) Tighten the front brake pad mounting pins (1) to the specified torque.

Tightening torque

Front brake pad mounting pin (a): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

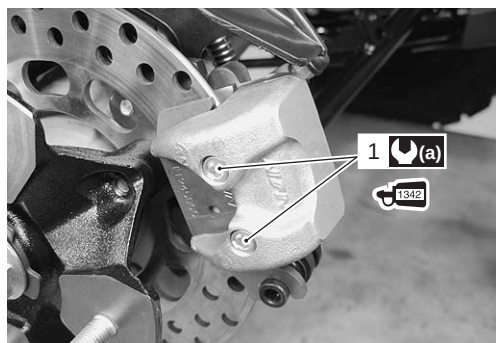

I931H1420004-03

NOTE

After replacing the brake pads, pump the brake lever several times to check for proper brake operation and then check the brake fluid level.

- 9) Install the front wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.

Front Brake Caliper Removal and Installation

B931H24206004


Removal

- 1) Remove the front wheel assembly.
- 2) Drain brake fluid. Refer to “Brake Fluid Replacement: in Section 4A”.
- 3) Remove the brake hose from the caliper by removing the union bolt (1) and catch the brake fluid in a suitable receptacle.

NOTE

Place a rag underneath the union bolt on the brake caliper to catch any spilt brake fluid.

- 4) Remove the brake caliper by removing the brake caliper mounting bolts (2).

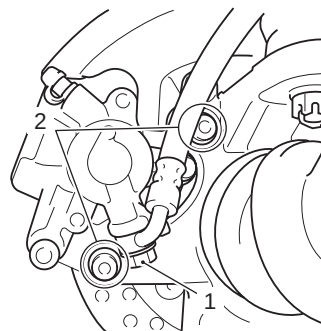

I831G1420032-01

Installation

Install the brake caliper in the reverse order of removal. Pay attention to the following points:


- Apply a small quantity of thread lock to the front brake caliper mounting bolts (1).

 **1360** : Thread lock cement 99000-32130
(THREAD LOCK CEMENT SUPER 1360 or equivalent)

- Tighten the brake caliper mounting bolts (1) to the specified torque.

Tightening torque

Brake caliper mounting bolt (a): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

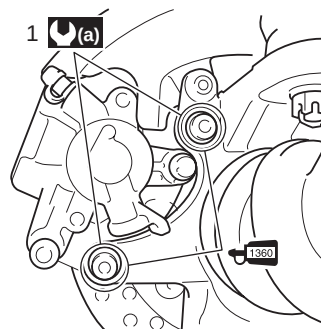

I931H1420025-01


- After setting the brake hose union to the stopper, tighten the union bolt (3) to the specified torque.

⚠ CAUTION

The seal washers (4) should be replaced with the new ones to prevent fluid leakage.

Tightening torque

Front brake hose union bolt (b): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

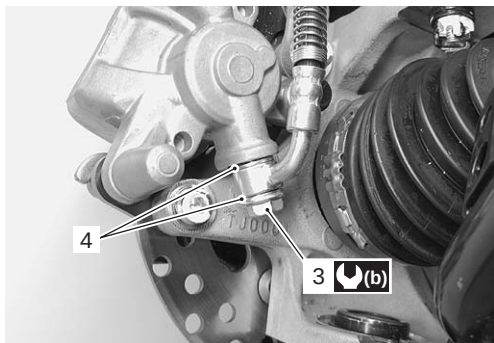

I931H1420005-01

- Bleed air from the brake system after installing the caliper. Refer to “Air Bleeding from Front Brake Fluid Circuit: in Section 4A”.
- Install the front wheel assembly. Refer to “Front / Rear Wheel Removal and Installation: in Section 2D”.
- Check the brake fluid leakage and brake operation.

⚠ WARNING

Brake fluid, if it leaks, will interfere with safe running and discolor painted surfaces. Check the brake hose and hose joints for cracks and fluid leakage.

Front Brake Caliper Disassembly and Assembly

B931H24206005

Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.


Disassembly

- Remove the brake caliper. Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.
- Remove the pad spring (1).



I931H1420006-01

- Remove the caliper holder (2) and rubber boots (3) from brake caliper.

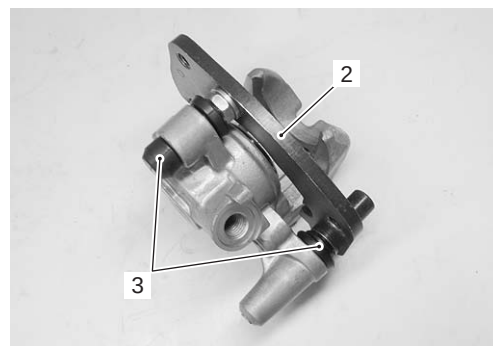

I931H1420007-02

- Place a rag over the brake caliper piston to prevent it from popping out and then force out the piston using compressed air.


⚠ CAUTION

Do not use high pressure air to prevent brake caliper piston damage.



I931H1420008-01


- Remove the caliper holder pin (4) and caliper holder slide pin (5) from caliper holder (2).

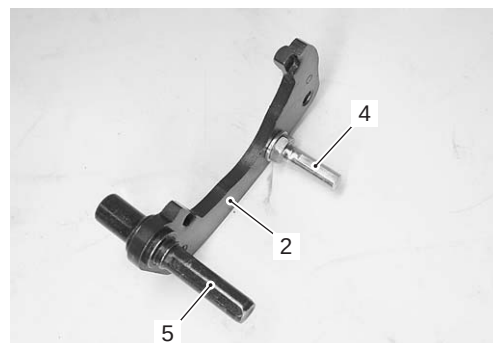

I931H1420010-01

4B-5 Front Brakes:

- 6) Remove the piston seal (6) and dust seal (7).

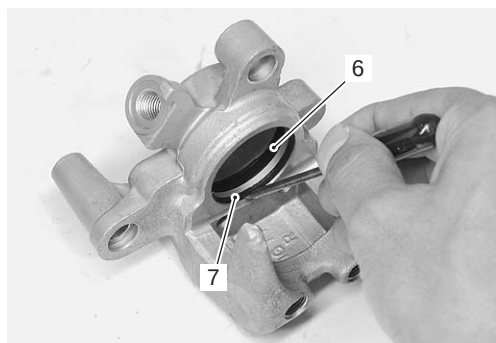

I931H1420009-02

Assembly

Assemble the caliper in the reverse order of disassembly. Pay attention to the following points:

- Wash the caliper bores and pistons with specified brake fluid. Particularly wash the dust seal groove and piston seal groove.

BF: Brake fluid (DOT 4)

⚠ CAUTION

- Wash the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine or the others.



I649G1430018-02


- Apply the brake fluid to piston seal (1) and dust seal (2).

⚠ CAUTION

Replace the piston seal (1) and dust seal (2) with new ones.

BF: Brake fluid (DOT 4)

- Install the piston seal as shown in the figure.

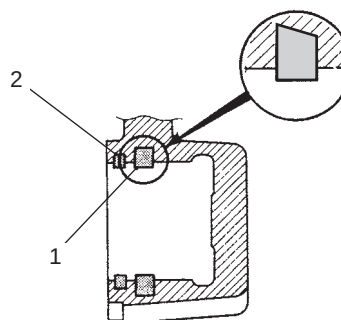

I831G1420018-03

- Apply thread lock to the caliper holder slide pin (3).


 **Thread lock cement 99000-32130 (THREAD LOCK CEMENT SUPER 1360 or equivalent)**

- Tighten the caliper holder slide pin (4) and caliper holder pin (5) to the specified torque.

Tightening torque

Caliper holder slide pin (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Caliper holder pin (b): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

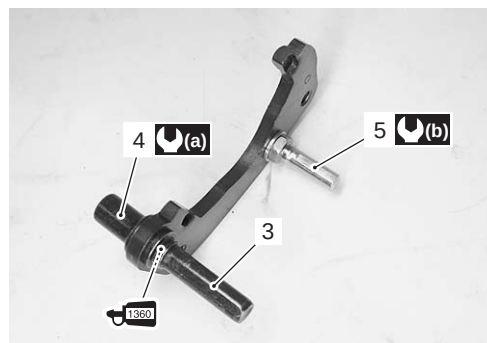


I931H1420026-01

- Apply silicon grease to the two pins.

 **Grease 99000-25100 (SUZUKI SILICONE GREASE or equivalent)**

- Install the brake caliper holder (6) to the brake caliper (7).

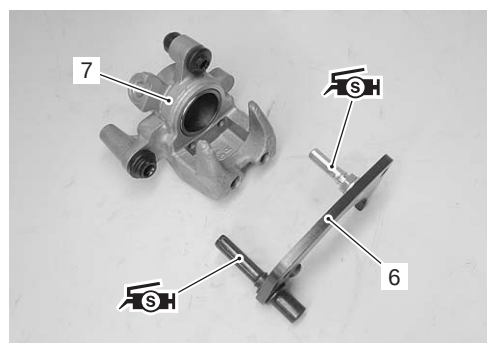

I931H1420012-01

- Install the brake caliper. Refer to "Front Brake Caliper Removal and Installation (Page 4B-3)".

Front Brake Caliper Parts Inspection

B931H24206006

Refer to "Front Brake Caliper Disassembly and Assembly (Page 4B-4)".

Brake Caliper Cylinder

Inspect the brake caliper cylinder wall for nicks, scratches or other damage. If any damage is found, replace the caliper with a new one.



I931H1420013-01

Brake Caliper Piston

Inspect the brake caliper piston surface for any scratches or other damage. If any damage is found, replace the piston with a new one.



I931H1420014-01

Boots

Inspect the boots for damage or wear. If any defects are found, replace them with new ones.



I931H1420015-01

Brake Pad Mounting Pin

Inspect the brake pad mounting pin for wear or other damage. If any damage is found, replace the mounting pin with a new one.



I931H1420016-02

Brake Pad Spring

Inspect the brake pad springs for damage or excessive bend. If any defects are found, replace them with new ones.



I931H1420017-01

Brake Caliper Holder

Inspect the brake caliper holder for damage. If any damage is found, replace the caliper holder with a new one.




I931H1420018-01

Front Brake Disc Removal and Installation

B931H24206007

Removal

- 1) Remove the front wheel assembly. Refer to “**Front / Rear Wheel Removal and Installation: in Section 2D**”.
- 2) Remove the front wheel hub. Refer to “**Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B**”.
- 3) Remove the brake disc (1) from the front wheel hub.

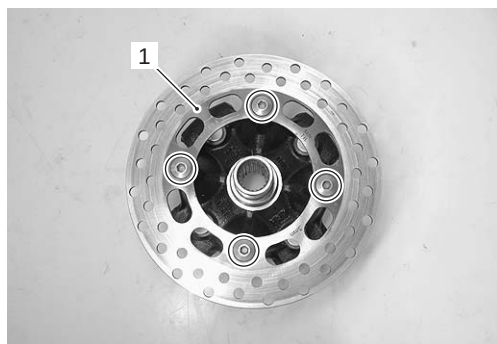

I931H1420019-01

Installation


Install the front brake disc in the reverse order of removal. Pay attention to the following points:

- Make sure that the brake discs are clean and free of any grease.
- Apply thread lock to the brake disc bolts (1) and tighten them to the specified torque.

1360 : Thread lock cement 99000–32130 (THREAD LOCK CEMENT SUPER 1360 or equivalent)

Tightening torque

Brake disc bolt (a): 23 N·m (2.3 kgf-m, 16.5 lbf-ft)

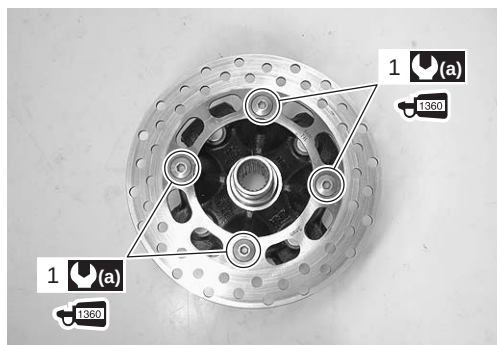

I931H1420020-01

Front Brake Disc Inspection

B931H24206008

Brake Disc Thickness

- 1) Dismount the front brake caliper. Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.


- 2) Check the brake disc for damage or cracks and measure the thickness using the micrometer.
- 3) Replace the brake disc if the thickness is less than the service limit or if defect is found.

Special tool

TOOL (A): 09900–20205 (Micrometer (0 – 25 mm))

Brake disc thickness

Service limit: 3.0 mm (0.12 in)

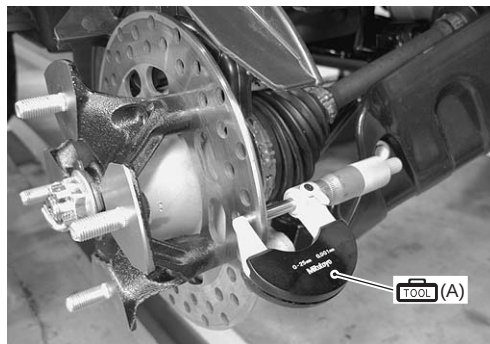

I931H1420021-01

- 4) Remount the front brake caliper. Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.

Brake Disc Runout

- 1) Dismount the front brake caliper. Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.
- 2) Measure the runout using the dial gauge. Replace the disc if the runout exceeds the service limit.


Special tool

TOOL (A): 09900–20607 (Dial gauge)

TOOL : 09900–20701 (Dial gauge chuck)

Brake disc runout

Service limit: 0.30 mm (0.012 in)

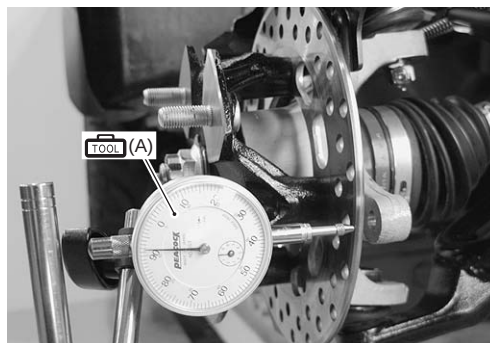

I931H1420022-01

- 3) Remount the front brake caliper. Refer to “Front Brake Caliper Removal and Installation (Page 4B-3)”.

Specifications

Service Data

B931H24207001

Brake

Unit: mm (in)

Item	Standard	Limit
Front brake disc thickness	—	3.0 (0.12)
Front brake disc runout	—	0.30 (0.012)
Front brake caliper cylinder bore	33.960 – 34.010 (1.3370 – 1.3390)	—
Front brake caliper piston diam.	33.878 – 33.928 (1.3338 – 1.3357)	—

Oil

Item	Specification	Note
Brake fluid type	DOT 4	

Tightening Torque Specifications

B931H24207002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front brake pad mounting pin	18	1.8	13.0	☞ (Page 4B-3)
Brake caliper mounting bolt	26	2.6	19.0	☞ (Page 4B-3)
Front brake hose union bolt	23	2.3	16.5	☞ (Page 4B-4)
Caliper holder slide pin	23	2.3	16.5	☞ (Page 4B-5)
Caliper holder pin	18	1.8	13.0	☞ (Page 4B-5)
Brake disc bolt	23	2.3	16.5	☞ (Page 4B-7)

NOTE

The specified tightening torque is described in the following.
 “Front Brake Components (Page 4B-1)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment

Recommended Service Material

B931H24208001



Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞ (Page 4B-5) / ☞ (Page 4B-5)
Grease	SUZUKI SILICONE GREASE or equivalent	P/No.: 99000–25100	☞ (Page 4B-5)
Thread lock cement	THREAD LOCK CEMENT 1342 or equivalent	P/No.: 99000–32050	☞ (Page 4B-3)
	THREAD LOCK CEMENT SUPER 1360 or equivalent	P/No.: 99000–32130	☞ (Page 4B-3) / ☞ (Page 4B-5) / ☞ (Page 4B-7)

NOTE

Required service material is also described in the following.
 “Front Brake Components (Page 4B-1)”

Special Tool

B931H24208002

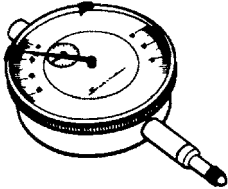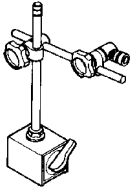09900-20205 Micrometer (0 – 25 mm)  (Page 4B-7) 	09900-20607 Dial gauge  (Page 4B-7) 
09900-20701 Dial gauge chuck  (Page 4B-7) 	

Rear Brakes

Precautions

Precautions for Rear Brake

B931H24300001


⚠ WARNING

When servicing the rear brake system, place the vehicle on a level ground and support the vehicle with a jack.

Repair Instructions

Rear Brake Components

B931H24306001

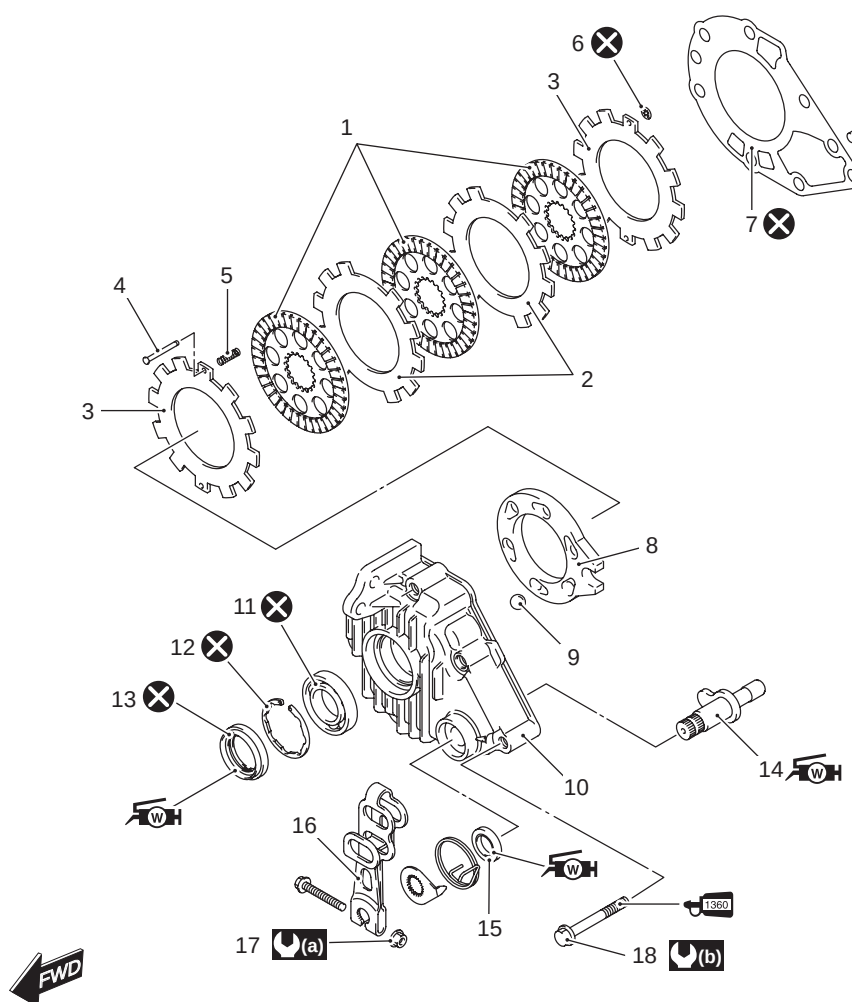

I931H1430023-01

1. Friction plate	9. Ball	17. Rear brake cam lever nut
2. Separator plate	10. Rear brake case	18. Rear brake case mounting bolt
3. Side plate	11. Bearing	(a) : 11 N·m (1.1 kgf-m, 8.0 lbf-ft)
4. Side plate pin	12. Snap ring	(b) : 26 N·m (2.6 kgf-m, 19.0 lbf-ft)
5. Side plate spring	13. Oil seal	WH : Apply water resistance grease.
6. Side plate stopper	14. Rear brake cam shaft	1360 : Apply thread lock to the thread part.
7. Gasket	15. Oil seal	⊗ : Do not reuse.
8. Pressure plate	16. Rear brake cam lever	

4C-2 Rear Brakes:

Rear Brake Friction Plate Inspection

B931H24306002

Refer to “Rear Brake Friction Plate Wear Limit Inspection: in Section 0B”.

Rear Brake Friction Plate Replacement

B931H24306003

Refer to “Rear Brake Disassembly and Assembly (Page 4C-3)”.


Rear Brake Assembly Removal and Installation

B931H24306004

Refer to “Final Gear Assembly Removal and Installation: in Section 3B”.


Removal

- 1) Remove the rear brake cam lever (1).

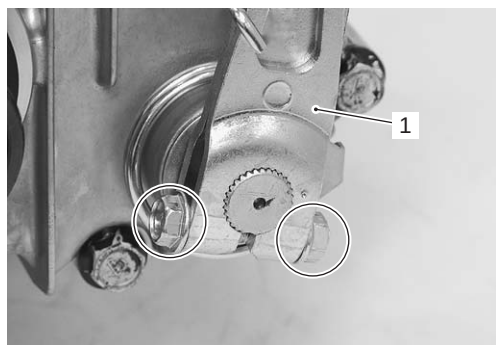


I931H1430026-01

- 2) Remove the brake lining indicator (2) and rear brake cam lever return spring (3).

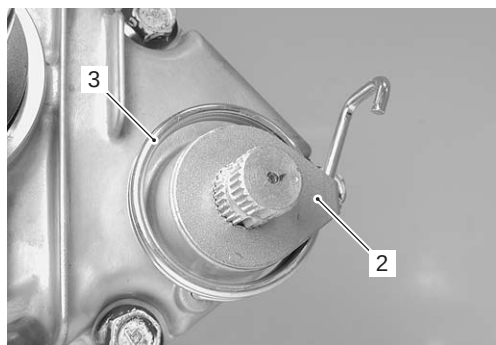

I931H1430001-01

- 3) Remove the rear brake case (4).

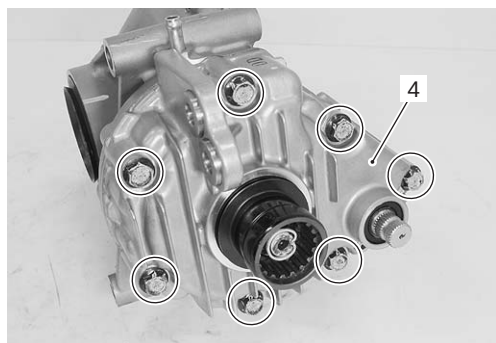


I931H1430002-01

Installation

- Fit the rear brake case gasket (1).

⚠ CAUTION

Replace the gasket (1) with a new one.

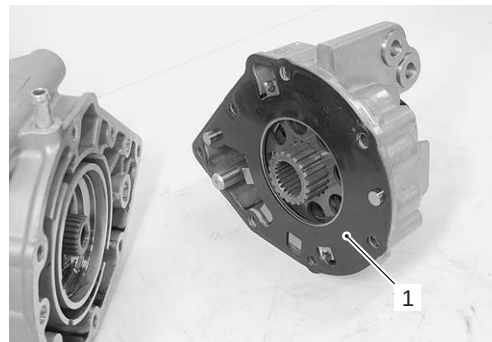


I931H1430004-01

- Install the rear brake case.
- Apply a small quantity thread lock to the rear brake case bolts (2).
- Tighten the bolts diagonally to the specified torque.

Tightening torque

Rear brake case bolt (a): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

 : Thread lock cement 99000-32130 (THREAD LOCK CEMENT SUPER 1360 or equivalent)

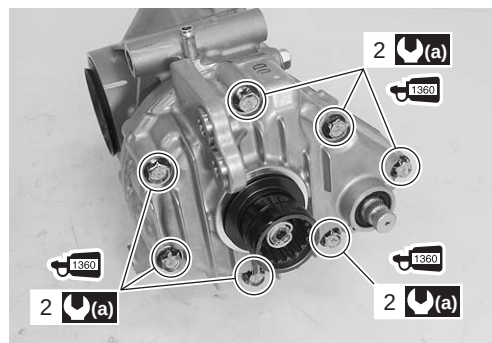


I931H1430003-02

- Install the return spring (3) and lining indicator (4).

NOTE

Align the boss of lining indicator (4) with wide spline on the brake cam shaft.

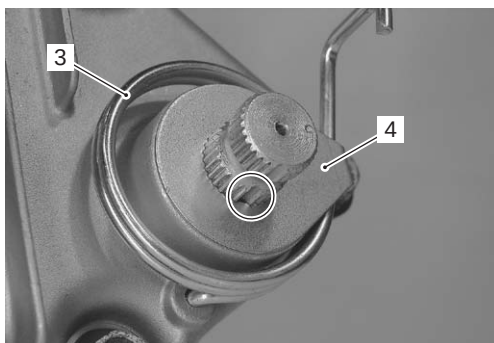

I831G1430008-01

- Install the rear brake cam lever (5) to the rear brake cam shaft.


NOTE

When installing the brake cam lever, align the punched mark "D" with "E".

- Tighten the cam lever nut (6) to the specified torque.

Tightening torque

Rear brake cam lever nut (b): 11 N·m (1.1 kgf-m, 8.0 lbf-ft)

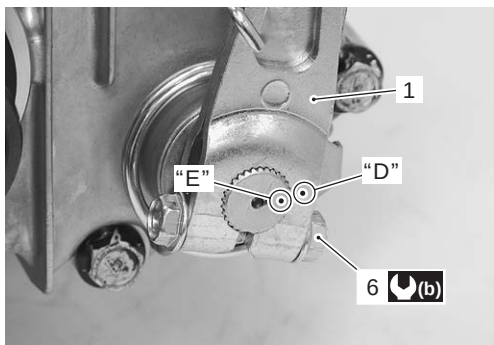

I931H1430024-02

- Install the final gear assembly. Refer to "Final Gear Assembly Removal and Installation: in Section 3B".


Rear Brake Disassembly and Assembly

B931H24306005

Refer to "Rear Brake Assembly Removal and Installation (Page 4C-2)".

Disassembly

- Remove the gasket (1) and dowel pins (2).

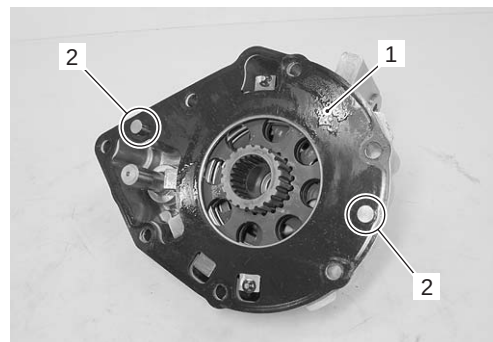

I931H1430005-01

- Remove the rear brake plates (3).




I931H1430006-01

- Remove the rear brake pressure plate (4) and balls.



I931H1430007-02

- Remove the rear brake cam shaft (5).

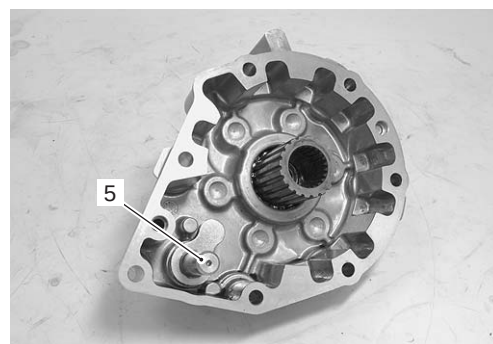

I931H1430008-02

4C-4 Rear Brakes:

- 5) Unlock the nut with a chisel.




I831G1430014-01

- 6) Remove the rear drive gear shaft nut (6) with the special tool and remove the washer (7).


Special tool

TOOL (A): 09924-52420 (Secondary bevel gear holder)

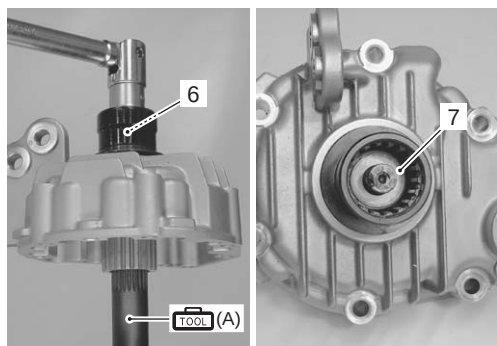

I931H1430009-01

- 7) Remove the rear drive gear shaft (8), with plastic mallet.

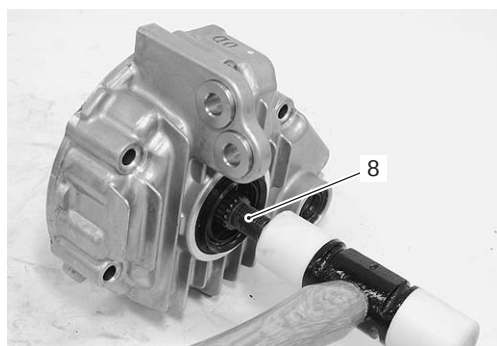


I931H1430010-01

- 8) Remove the oil seal (9) with the special tool.

Special tool

TOOL (B): 09913-50121 (Oil seal remover)

- 9) Remove the oil seal (10).

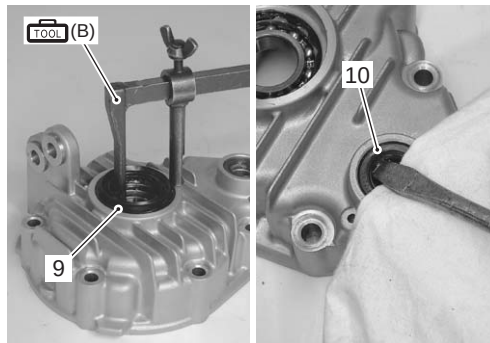


I931H1430011-01

- 10) Remove the snap ring (11) with the special tool.

Special tool

TOOL : 09900-06108 (Snap ring remover (Close type))

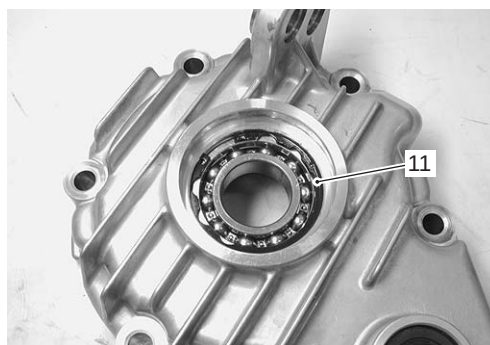


I931H1430012-01

- 11) Remove the bearing (12) with the special tool.


Special tool

TOOL (C): 09921-20240 (Bearing remover set)

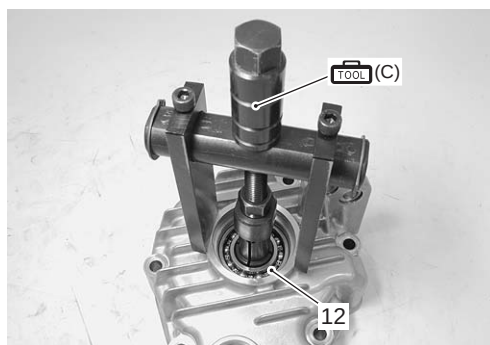


I931H1430013-01

- 12) Remove the side plate stopper (13).
- 13) Remove the side plate (14), pins (15) and springs (16).

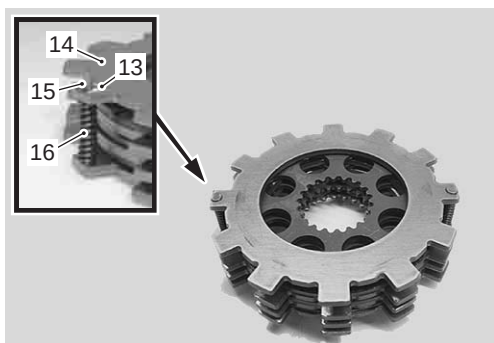

I831G1430043-03

- 14) Separate the friction plates (17) and separator plates (18).

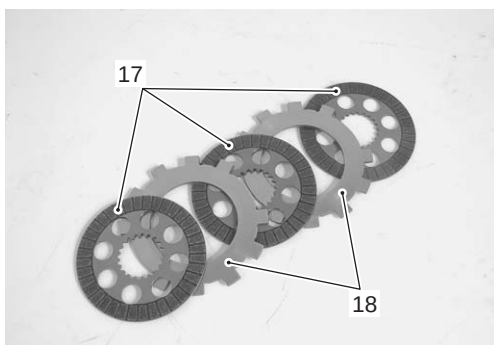

I931H1430015-02

Assembly


⚠ CAUTION

The removed oil seal, bearing and snap ring must be replaced with new ones.

- Install the rear brake in the reverse order of disassembly. Pay attention to the following points:
- Assemble the rear brake plates as shown in the figure.

⚠ CAUTION

Replace the removed side plate stopper (4) with a new one.

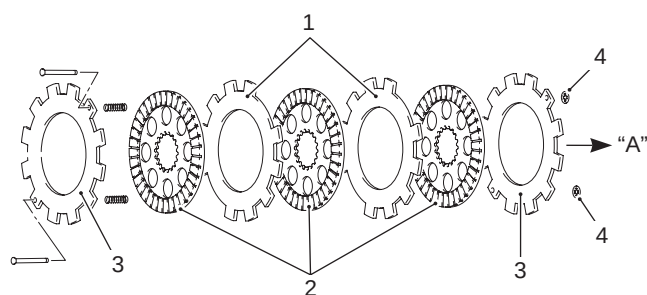

I831G1430022-04

1. Separator plate	4. Side plate stopper
2. Friction plate	"A": Direction of out side
3. Side plate	

- Apply final gear oil to the bearing (5) before installing it.
- Install the bearing with the special tool.


Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

NOTE

The stamped mark of bearing faces outside.

- Install the snap ring (6).

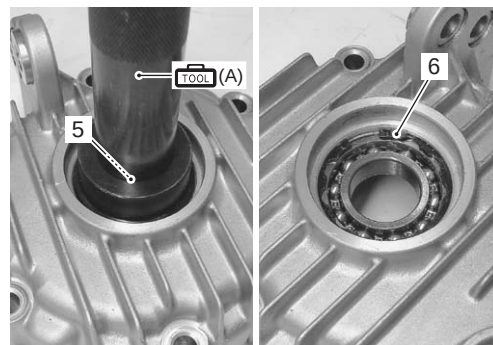


I831G1430023-03

- Install the oil seals (7) and (8) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

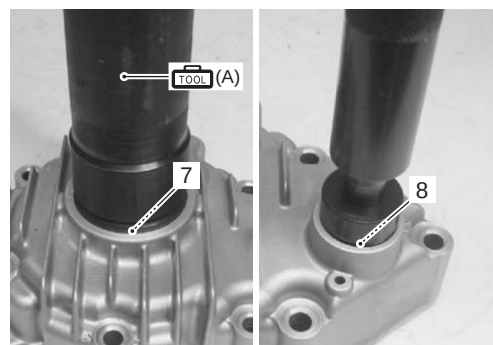

I831G1430024-05

4C-6 Rear Brakes:

- Apply grease to the lip of oil seals.

 **Grease 99000-25160 (Water resistance grease)**




I931H1430016-01

- Install the rear final drive gear shaft (9).

NOTE


If the rear final drive gear shaft not install easily, lightly tap it using a plastic mallet.

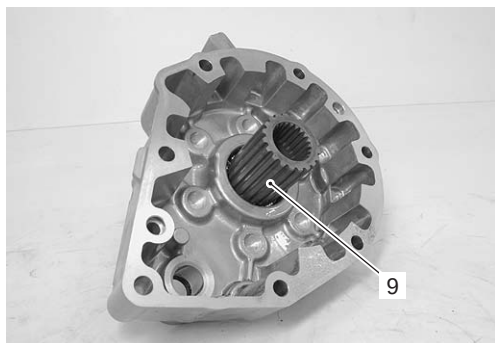

I931H1430017-01

- Install the rear brake cam shaft (10).
- Apply grease to the rear brake cam shaft.

 **Grease 99000-25160 (Water resistance grease)**

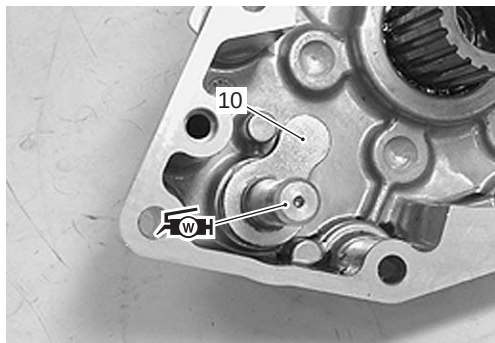

I931H1430018-01

- Install the rear propeller shaft coupling (11).
- Install the washer (12) and rear drive gear shaft nut (13).

CAUTION

The removed nut (13) must be replaced with a new one.


- Tighten the rear drive gear shaft nut (13) to the specified torque with the special tool.

Special tool

 (B): 09924-52420 (Secondary bevel gear holder)

Tightening torque

Rear propeller shaft coupling nut (a): 100 N·m (10.0 kgf-m, 72.5 lbf-ft)

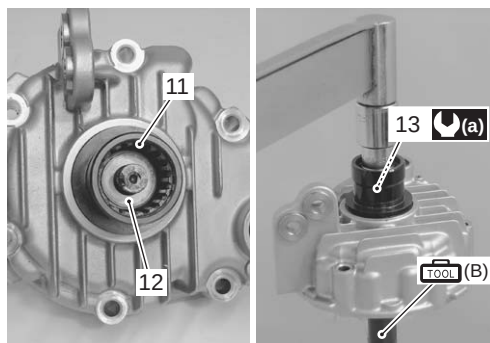

I831G1430028-06

- Bend the collar of the nut to the notch on the shaft of the rear propeller shaft coupling.




I831G1430029-01

- Install the balls and rear brake pressure plate (14).

NOTE

When installing the rear brake pressure plate (14), align its groove "A" with the cam "B" of rear brake cam shaft (10).

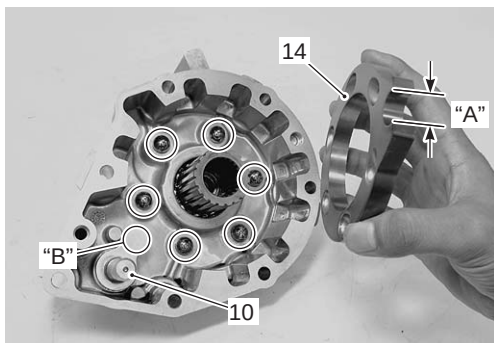


I931H1430019-01

- Install the rear brake plates (15), aligning the grooves "C" of the case.

NOTE

Align the side plate pin with groove "C" of the case as shown in the figure.

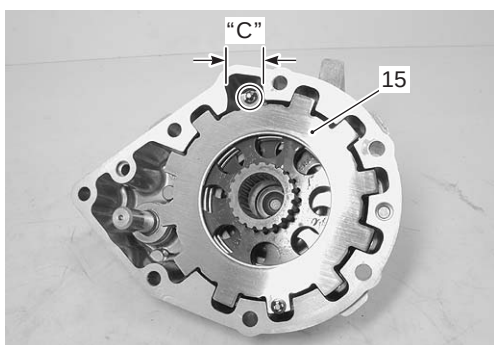


I931H1430020-01

- Install the dowel pins (16) and gasket (17).

⚠ CAUTION

The removed gasket must be replaced with a new one.

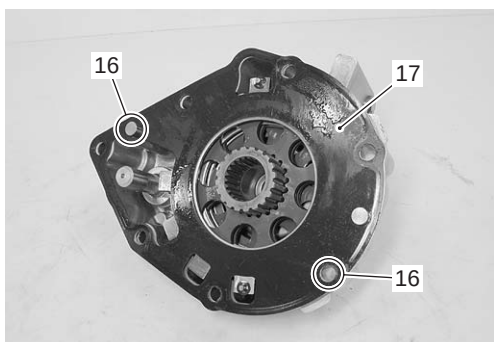

I931H1430021-01


Rear Brake Parts Inspection

B931H24306006

Refer to "Rear Brake Disassembly and Assembly (Page 4C-3)".

Rear Brake Cam Lever

Inspect the rear brake cam lever for wear or damage. If any wear or damage is found, replace it with a new one. Inspect the rear brake cam lever return spring for wear or damage. If any wear or damage is found, replace it with a new one.

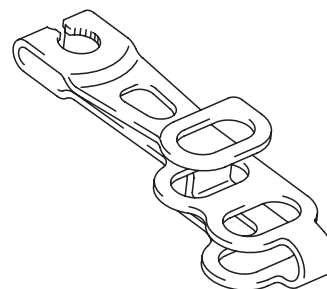

I931H1430025-01

Oil Seal

Inspect the oil seals for wear or damage. If any wear or damage is found, replace it with a new one.




I931H1430022-01

Bearing

Inspect the inner race play of the bearing by hand while it is in the rear brake case.

Turn the inner race by hand to inspect for abnormal noise or smooth rotation.

- If there is anything unusual, replace it with a new one.

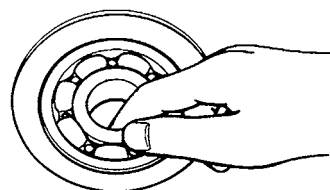

I649G1240015-02

4C-8 Rear Brakes:

Rear Brake Cam Shaft

Inspect the rear brake cam shaft for wear or damage. If any wear or damage is found, replace it with a new one.



I831G1430036-01

Rear Drive Gear Shaft


Inspect the rear drive gear shaft for wear or damage. If any defects are found, replace rear drive gear shaft with a new one.




I831G1430037-01

Rear Brake Side Plate / Rear Brake Friction Plate / Steel Plate

- Inspect the rear brake side plates (1), rear brake friction plates (2) and separator plates (3) for wear or damage. If any defects are found, replace them as a set.

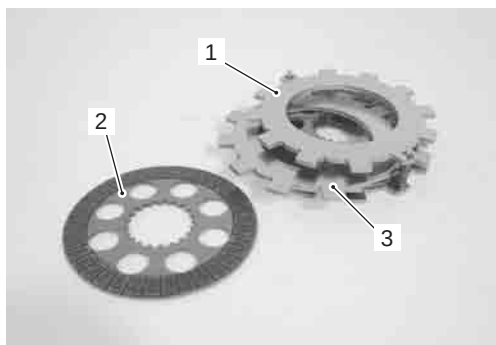

I831G1430038-01

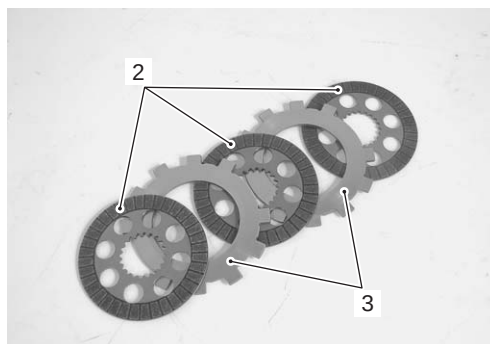


I831G1430039-01

- Measure the outer distance "a" between the side plates as shown in the figure. If the distance "a" is less than the specification, reassemble the rear brake plates using the new plate stoppers (4).

Outer distance "a"

Standard: 26.0 – 27.0 mm (1.02 – 1.06 in)

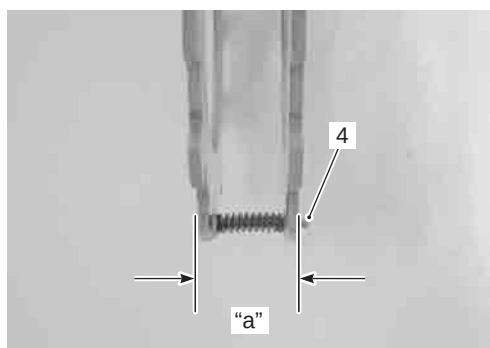


I831G1430040-04

Brake Side Plate Spring

- Measure the free length "a".
- If the free length "a" is shorter than the limit, replace the spring with a new one.

Brake side plate spring free length "a"

Service limit: 20.2 mm (0.80 in)

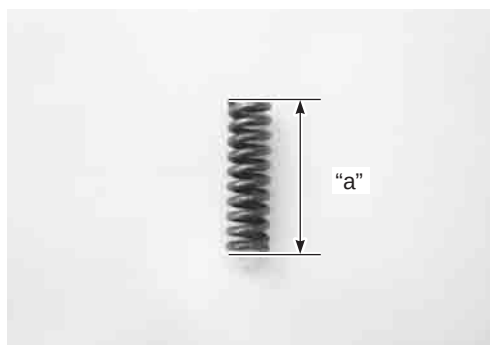

I831G1430041-02

Rear Brake Pressure Plate

Inspect the rear brake pressure plate for wear or damage. If any wear or damage is found, replace it with a new one.

Inspect the balls for wear or damage. If any wear or damage is found, replace them with new ones.



I831G1430042-01

Specifications

Service Data

B931H24307001

Brake

Unit: mm (in)

Item	Standard	Limit
Rear brake pedal free travel	20 – 30 (0.8 – 1.2)	—
Rear brake lever play	6 – 8 (0.2 – 0.3)	—
Rear brake outer distance	26.0 – 27.0 (1.02 – 1.06)	—
Brake side plate spring free length	21.3 (0.84)	20.2 (0.80)

Tightening Torque Specifications

B931H24307002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Rear brake case bolt	26	2.6	19.0	☞ (Page 4C-2)
Rear brake cam lever nut	11	1.1	8.0	☞ (Page 4C-3)
Rear propeller shaft coupling nut	100	10.0	72.5	☞ (Page 4C-6)

NOTE

The specified tightening torque is described in the following.
 “Rear Brake Components (Page 4C-1)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H24308001






Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease	P/No.: 99000–25160	☞ (Page 4C-6) / ☞ (Page 4C-6)
Thread lock cement	THREAD LOCK CEMENT SUPER 1360 or equivalent	P/No.: 99000–32130	☞ (Page 4C-2)

NOTE

Required service material is also described in the following.
 “Rear Brake Components (Page 4C-1)”

Special Tool

B931H24308002

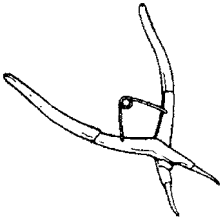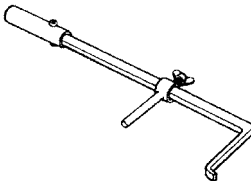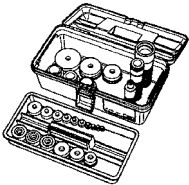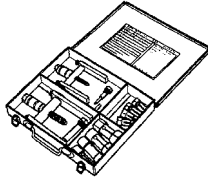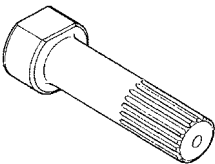
09900–06108 Snap ring remover (Close type) ☞ (Page 4C-4)		09913–50121 Oil seal remover ☞ (Page 4C-4)	
09913–70210 Bearing installer set (10 – 75) ☞ (Page 4C-5) / ☞ (Page 4C-5)		09921–20240 Bearing remover set ☞ (Page 4C-4)	
09924–52420 Secondary bevel gear holder ☞ (Page 4C-4) / ☞ (Page 4C-6)			

Parking Brake

Schematic and Routing Diagram


Parking / Rear Brake Cable Routing Diagram

B931H24402001

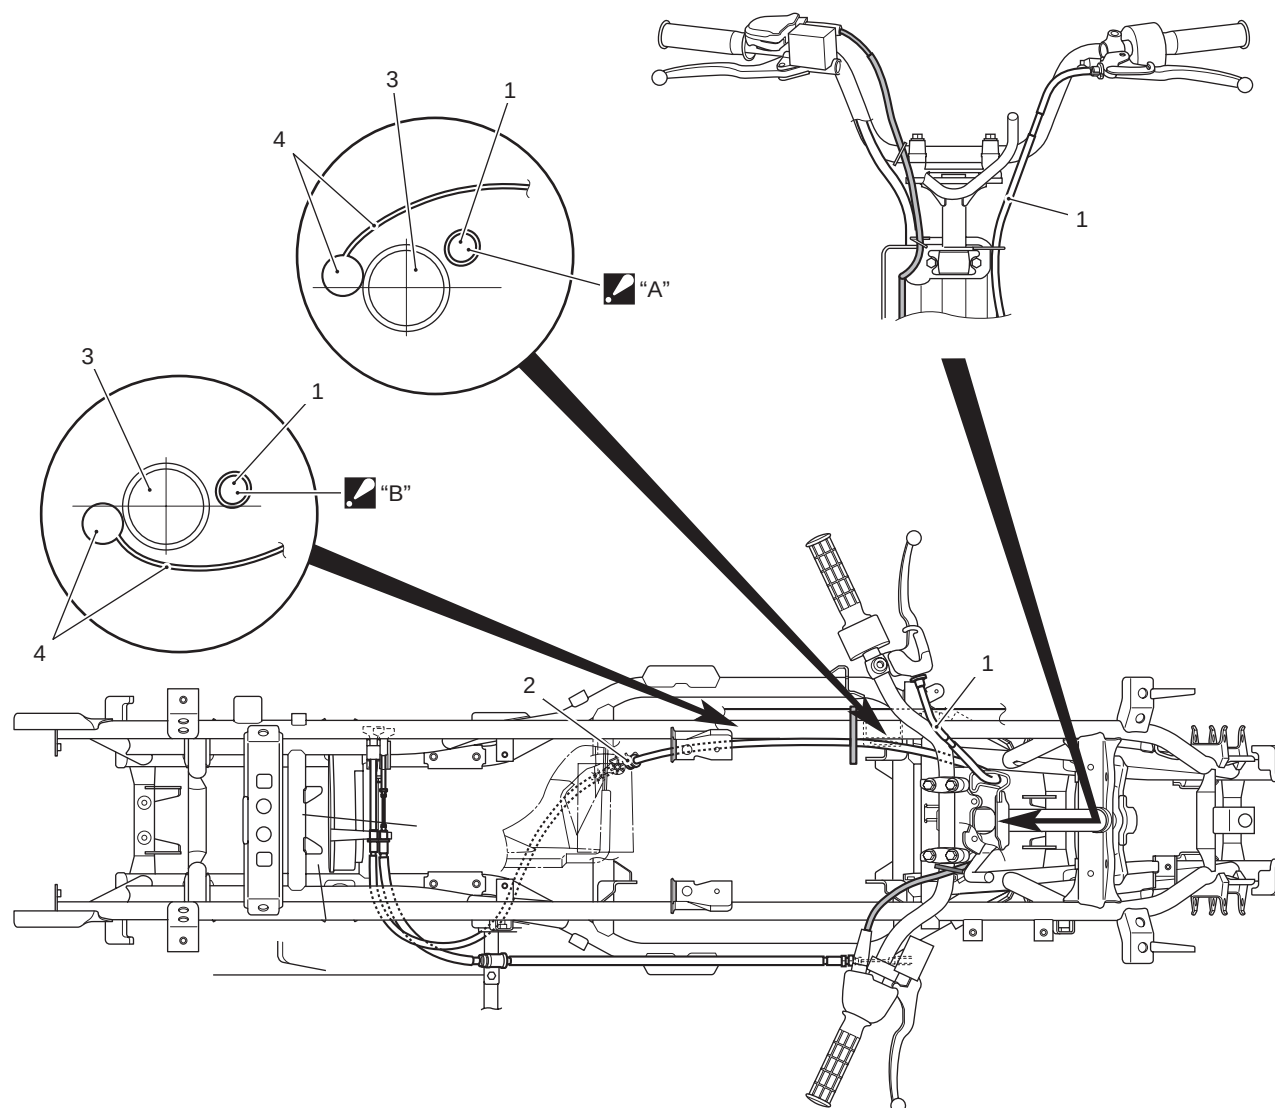

I931H1440001-03

1. Parking brake cable	4. Wiring harness
2. Parking brake cable guide	▣ "A": Pass the parking brake cable under the wiring harness.
3. Frame	▣ "B": Pass the parking brake cable over the wiring harness.

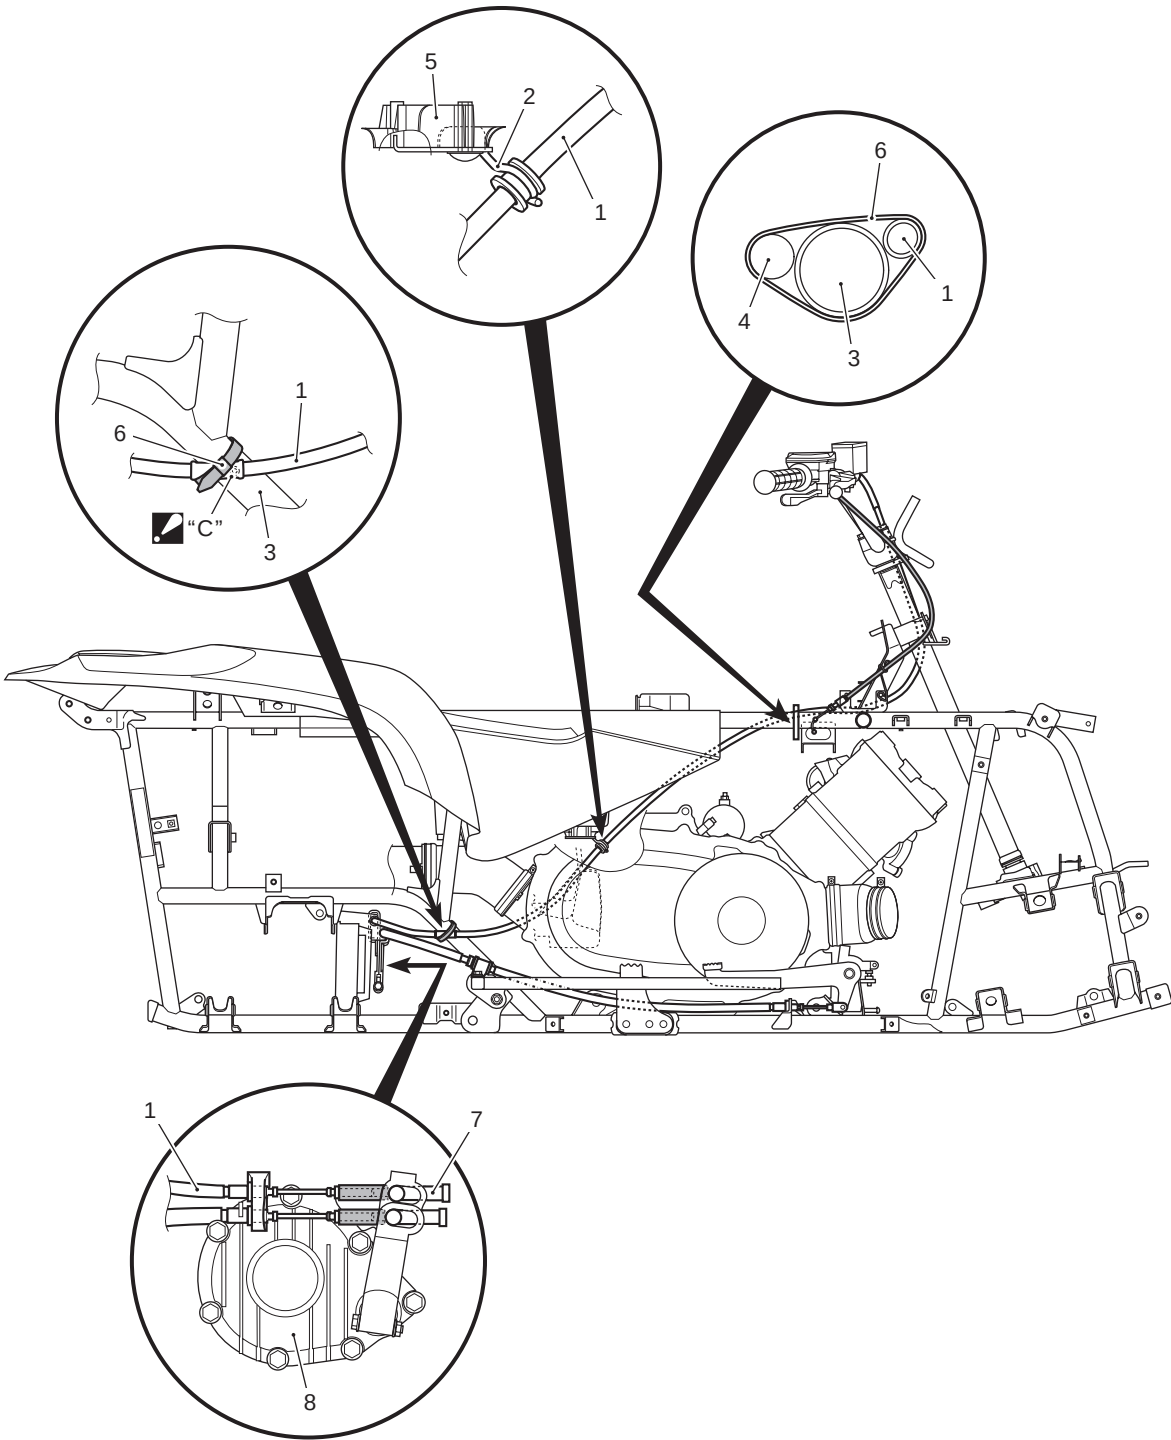

1. Parking brake cable	6. Clamp
2. Parking brake cable guide	7. Parking brake cable adjust nut
3. Frame	8. Rear brake assembly
4. Wiring harness	"C": Fix the rubber of parking brake cable with clamp.
5. Rear fender	

I931H1440002-02

Repair Instructions

Parking / Rear Brake Inspection and Adjustment

B931H24406001


Refer to “Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”.

Parking / Rear Brake Cable Removal and Installation

B931H24406002


Removal

- 1) Remove the seat. Refer to “Seat Removal and Installation: in Section 9D”.
- 2) Remove the front fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D” and “Front Carrier Removal and Installation: in Section 9E”.
- 3) Remove the air cleaner box. Refer to “Air Cleaner Box Removal and Installation: in Section 1D”.
- 4) Remove the clamps (3) and parking brake cable from the cable guide (2).

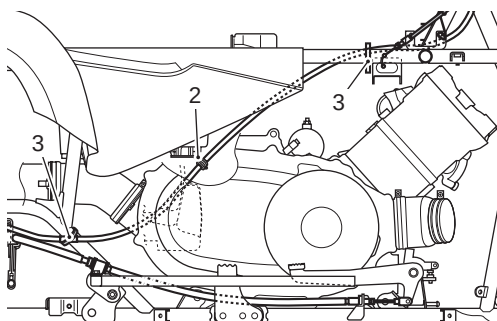


I931H1440003-01

- 5) Remove the parking brake cable adjuster nut (4) and parking brake cable (5).

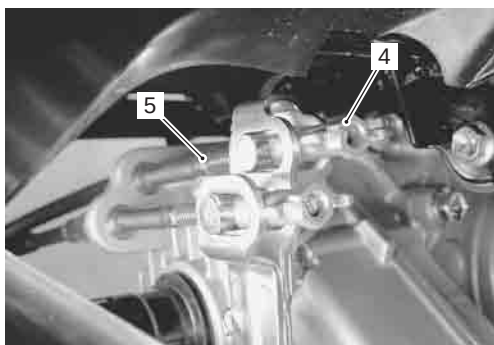


I831G1440004-01

- 6) Remove the parking brake cable (5) from the cable guide (6).

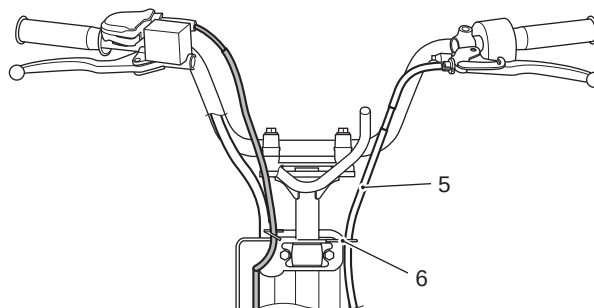

I931H1440004-02

- 7) Disconnect the parking brake cable (5).

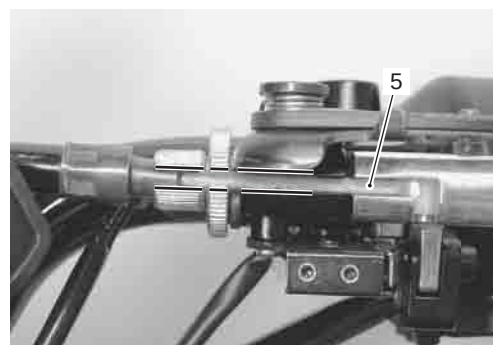

I831G1440006-02


- 8) Remove the parking brake cable from vehicle.

Installation

- 1) Install the parking brake cable as shown in the parking brake cable routing diagram. Refer to “Parking / Rear Brake Cable Routing Diagram (Page 4D-1)”.
- 2) Install the spring as shown in the figure.

NOTE

The large diameter “a” should face to the adjuster side.

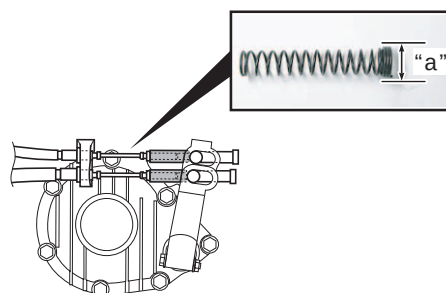


I931H1440005-03

- 3) Reinstall the removed parts.
- 4) After installing the parking brake cable, inspect or adjust the parking brake cable. Refer to “Rear Brake Pedal / Rear Brake (Parking Brake) Lever Inspection and Adjustment: in Section 0B”.

Parking / Rear Brake Lever Components

B931H24406003

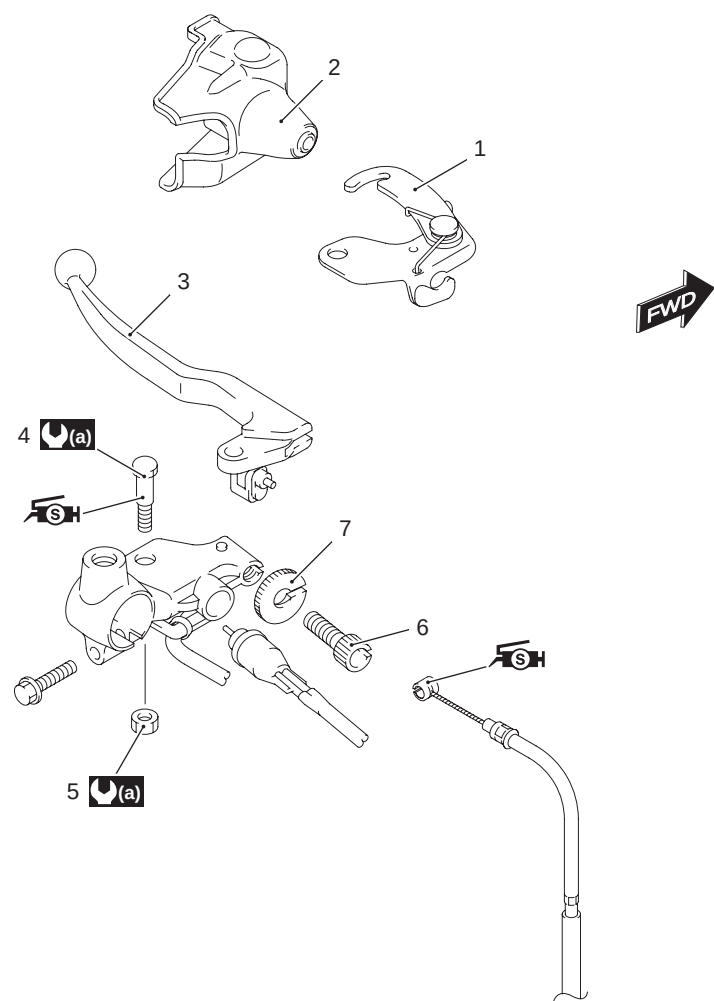

I831G1440007-01

1. Brake lever lock	4. Brake lever pivot bolt	7. Lock-nut
2. Brake lever cover	5. Brake lever pivot nut	U(a) : 6 N·m (0.6 kgf-m, 4.5 lbf-ft)
3. Brake lever	6. Adjuster	SH : Apply silicone grease.

Parking / Rear Brake Lever Removal and Installation

B931H24406004

Removal

Refer to “Handlebars Removal and Installation: in Section 6B”.

Installation

Refer to “Handlebars Removal and Installation: in Section 6B”.

Parking / Rear Brake Light Switch Inspection

B931H24406005

Refer to “Parking / Rear Brake Light Switch Inspection: in Section 4A”.

Parking / Rear Brake Relay Inspection

B931H24406006

Refer to “Parking Brake Relay Inspection: in Section 1I”.

Specifications

Tightening Torque Specifications

B931H24407001

NOTE

The specified tightening torque is described in the following.
 “Parking / Rear Brake Lever Components (Page 4D-4)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H24408001

NOTE

Required service material is also described in the following.
 “Parking / Rear Brake Lever Components (Page 4D-4)”

Section 5

Transmission / Transaxle

CONTENTS

Precautions	5-1	
Precautions.....	5-1	
Precautions for Transmission / Transaxle.....	5-1	
Automatic Transmission.....	5A-1	
Schematic and Routing Diagram.....	5A-1	
Drive Train System	5A-1	
Diagnostic Information and Procedures.....	5A-2	
Automatic Transmission Symptom Diagnosis.....	5A-2	
Repair Instructions	5A-3	
Automatic Transmission Components	5A-3	
V-belt Cooling Duct Construction	5A-4	
V-belt Cooling Duct Removal and Installation.....	5A-4	
Clutch Engagement and Lock-up Speed		
Inspection.....	5A-5	
V-belt Type Continuously Variable Automatic		
Transmission Removal and Installation	5A-5	
Movable Drive Face Disassembly and		
Assembly	5A-8	
Movable Driven Face Disassembly and		
Assembly	5A-10	
Drive V-belt Inspection	5A-14	
Movable / Fixed Drive Face Parts Inspection....	5A-14	
Movable / Fixed Driven Face Parts Inspection ..	5A-15	
Clutch Shoe Removal and Installation	5A-15	
Clutch Cover Disassembly and Assembly	5A-18	
Clutch Related Parts Inspection.....	5A-20	
Movable Drive Face Cover Disassembly and		
Assembly.....	5A-21	
Movable Driven Face Cover Parts Inspection...	5A-22	
Shift Lever Assembly Components	5A-23	
Gearshift Knob Removal and Installation.....	5A-23	
Shift Lever Assembly Removal and		
Installation	5A-23	
Shift Lever Disassembly and Assembly	5A-24	
Shift Rod Adjustment	5A-25	
Specifications	5A-25	
Service Data.....	5A-25	
Tightening Torque Specifications.....	5A-26	
Special Tools and Equipment	5A-26	
Recommended Service Material	5A-26	
Special Tool	5A-27	

Precautions

Precautions

Precautions for Transmission / Transaxle

B931H25000001


Refer to “General Precautions: in Section 00”.

Automatic Transmission

Schematic and Routing Diagram

Drive Train System

B931H25102001

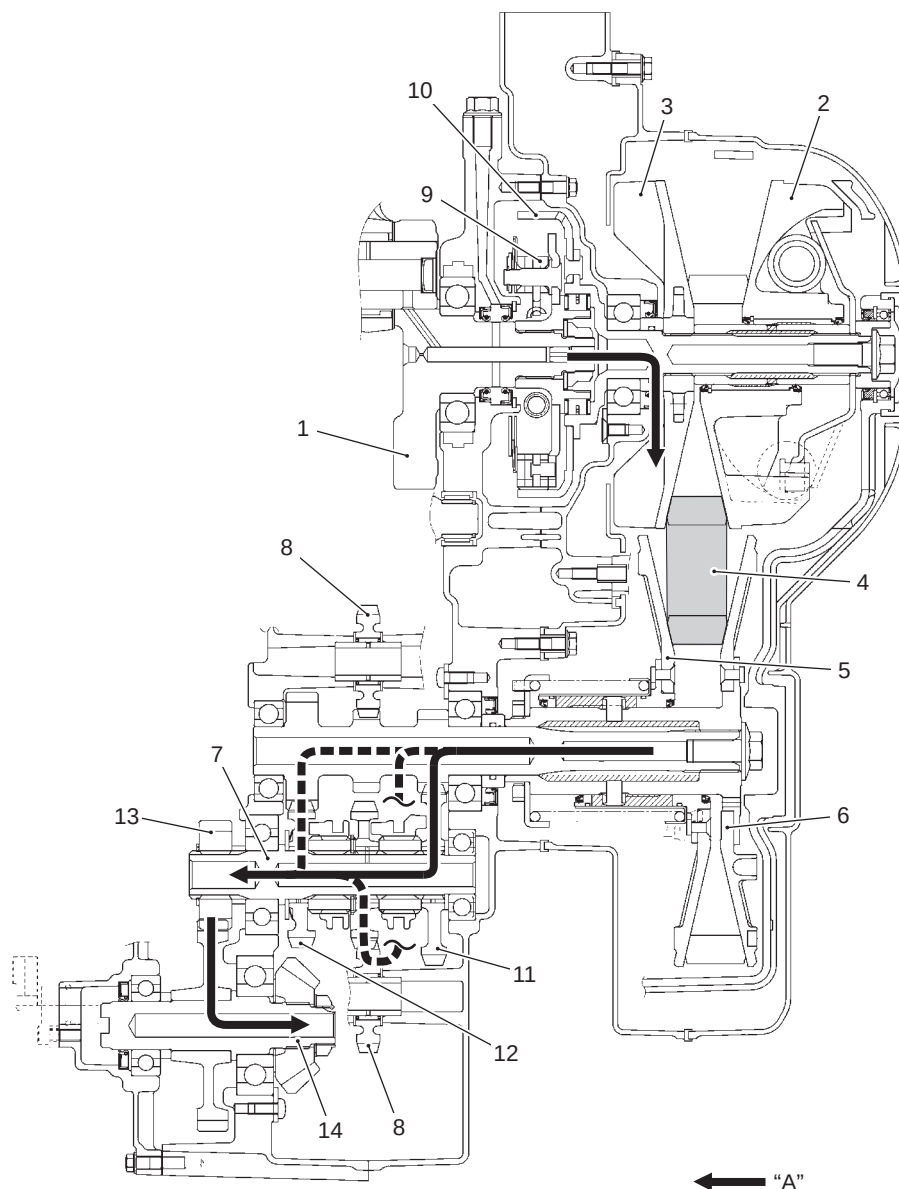

I931H1510001-03

1. Crankshaft	6. Fixed driven face	11. Low driven gear
2. Movable drive face	7. Transfer input shaft	12. High driven gear
3. Fixed drive face	8. Reverse idle gear	13. Transfer output drive gear
4. V-belt	9. Clutch shoe	14. Transfer output driven gear shaft
5. Movable driven face	10. Clutch housing	"A": Drive train route

Diagnostic Information and Procedures

Automatic Transmission Symptom Diagnosis


B931H25104001

Condition	Possible cause	Correction / Reference Item
Excessive engine noise	Gear worn or abnormal contact.	<i>Replace.</i>
	Spline worn.	<i>Replace.</i>
	Bearing worn or burned.	<i>Replace.</i>
V-belt slipping	V-belt slipping.	<i>Replace.</i>
	Pulley face worn.	<i>Replace.</i>
Clutch slipping	Clutch shoe worn.	<i>Replace.</i>
	Centrifugal weight operation failure.	<i>Repair or replace.</i>
	V-belt worn.	<i>Replace.</i>
Clutch dragging	Clutch shoe spring fatigued.	<i>Replace.</i>
	Movable driven face distorted.	<i>Replace.</i>

Repair Instructions

Automatic Transmission Components

B931H25106001

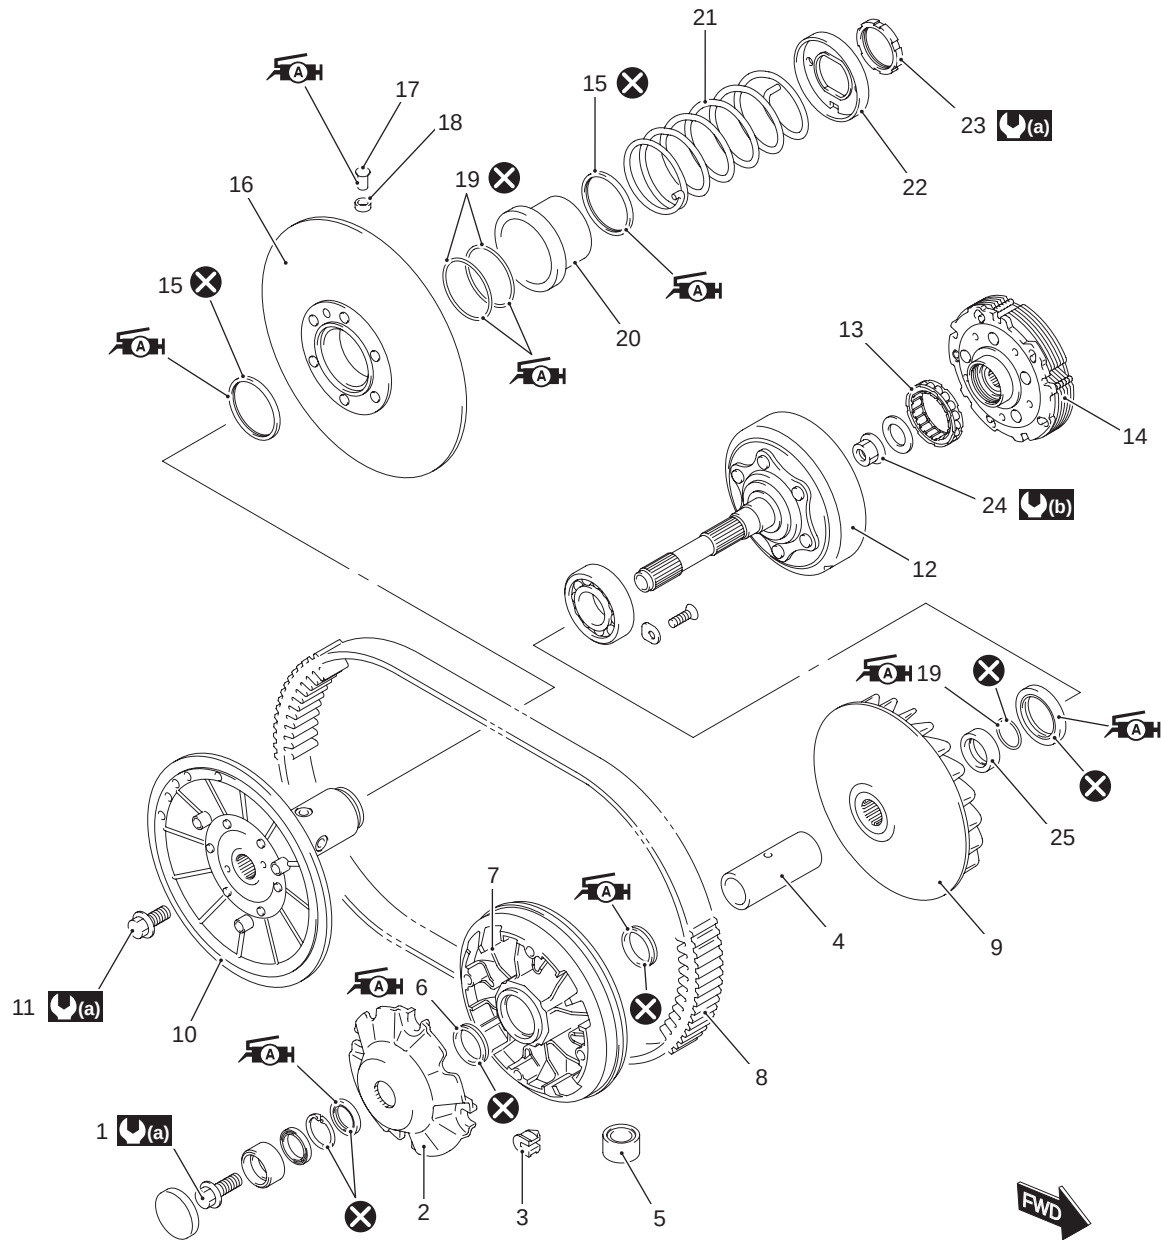


I931H1510106-03

1. Drive face bolt	11. Driven face bolt	21. Spring
2. Movable drive plate	12. Clutch housing	22. Spring plate
3. Damper	13. One way clutch	23. Movable driven face ring nut
4. Spacer	14. Clutch shoe assembly	24. Clutch shoe nut
5. Roller	15. Oil seal	25. Spacer
6. Oil seal	16. Movable driven face	(a) : 110 N·m (11.0 kgf-m, 79.5 lbf-ft)
7. Movable drive face	17. Pin	(b) : 150 N·m (15.0 kgf-m, 108.5 lbf-ft)
8. Drive V-belt	18. Spacer	: Apply grease.
9. Fixed drive face	19. O-ring	: Do not reuse.
10. Fixed driven face	20. Spring seat	

V-belt Cooling Duct Construction

B931H25106002

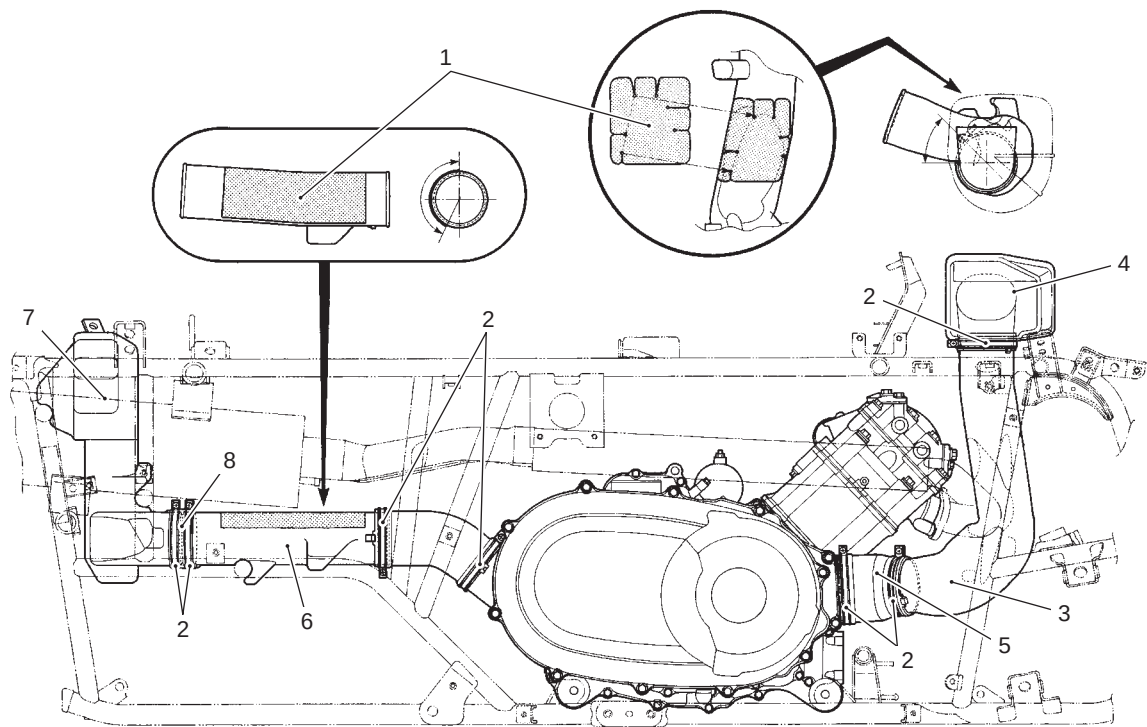

I931H1510105-02

1. Heat shield	3. Inlet belt cooling duct No. 1	5. Inlet belt cooling duct connector	7. Outlet belt cooling duct No. 2
2. Clamp	4. Inlet belt cooling duct No. 2	6. Outlet belt cooling duct No. 1	8. Outlet belt cooling duct connector

V-belt Cooling Duct Removal and Installation

B931H25106003


Removal

- 1) Remove the right inner fender. Refer to **"Front Side Exterior Parts Removal and Installation: in Section 9D"**.
- 2) Loosen the clamp screw and remove the inlet cooling duct assembly (1).




I931H1510002-01

- 3) Remove the rear cover (2).

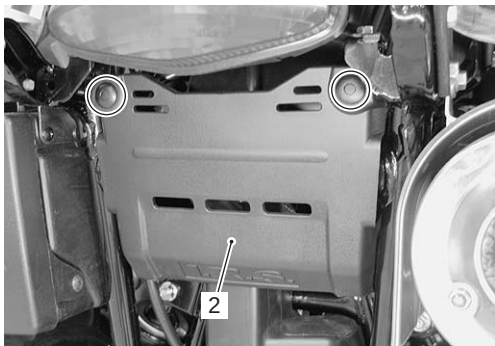


I931H1510003-01

- 4) Loosen the clamp and remove the outlet belt cooling duct No. 2 (3).

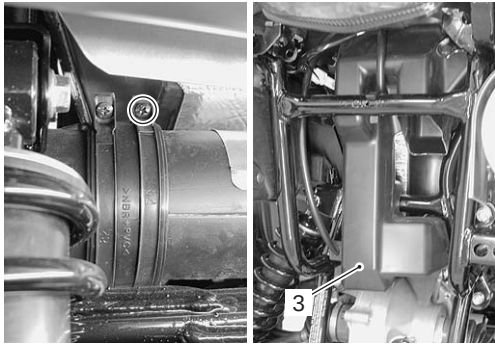

I931H1510004-01

- Remove the outlet belt cooling duct No. 1 (4) along with outlet belt cooling duct connector (5).

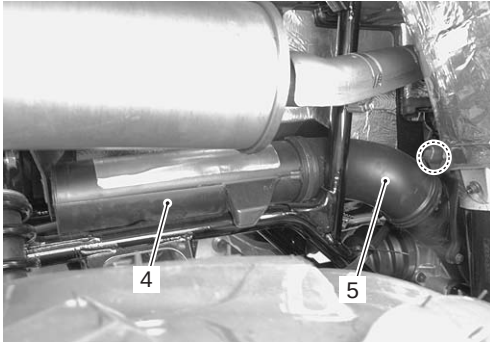

I931H1510005-01

Installation

- Install the V-belt cooling duct as shown in the V-belt cooling duct construction. Refer to "V-belt Cooling Duct Construction (Page 5A-4)".
- Install the removed parts.

Clutch Engagement and Lock-up Speed Inspection

B931H25106004

Refer to "Automatic Clutch Inspection: in Section 0B".

V-belt Type Continuously Variable Automatic Transmission Removal and Installation

B931H25106005

Removal

V-belt outer cover


- Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".
- Remove the right side cover. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- Remove the inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- Remove the footrest. Refer to "Footrest Removal and Installation: in Section 9E".
- Remove the brake pedal. Refer to "Rear Brake Pedal Removal and Installation: in Section 4A".
- Remove the V-belt outer cover (1).



I931H1510006-01

Movable drive face

- Remove the cap (1) and movable drive face cover (2).

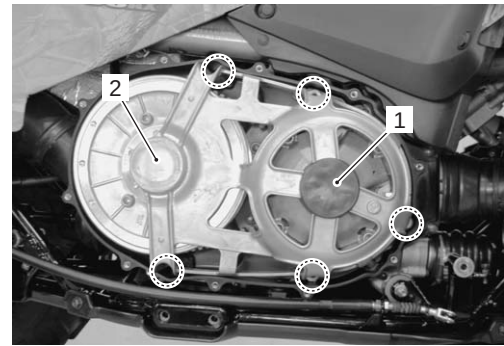


I931H1510007-01

- Hold the movable drive face with the special tool and remove the drive face bolt (3) and collar (4).


Special tool

 (A): 09930-40113 (Flywheel rotor holder)

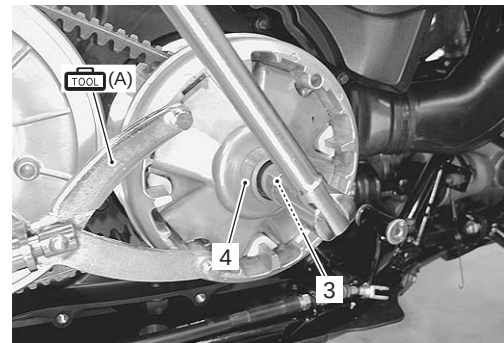

I931H1510008-01

- Remove the dowel pins (5).
- Remove the movable drive face assembly (6).

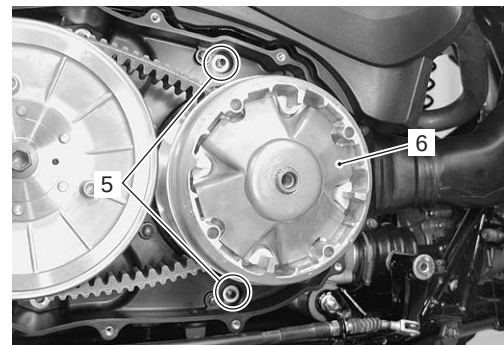

I931H1510009-01


5A-6 Automatic Transmission:

Movable driven face

- 1) Hold the movable driven face with the special tool and its remove the driven face bolt (1).
- 2) Remove the driven face assembly (2) and drive belt (3).

Special tool


 (A): 09930-40113 (Flywheel rotor holder)

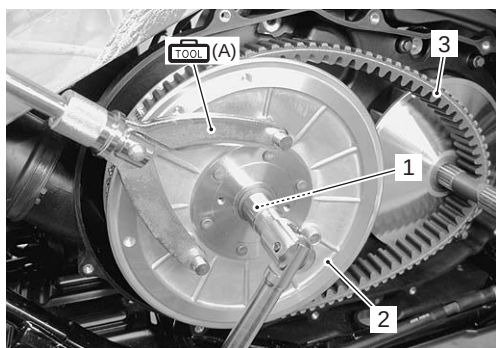

I931H1510010-02

Fixed drive face


Remove the fixed drive face (1).

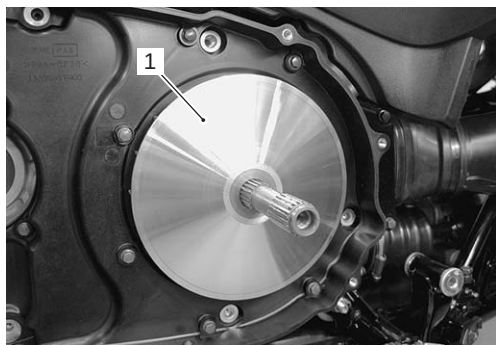

I931H1510011-01

V-belt inner cover

- Disconnect the front and rear V-belt cooling duct connector.
- Remove the V-belt inner cover (1).

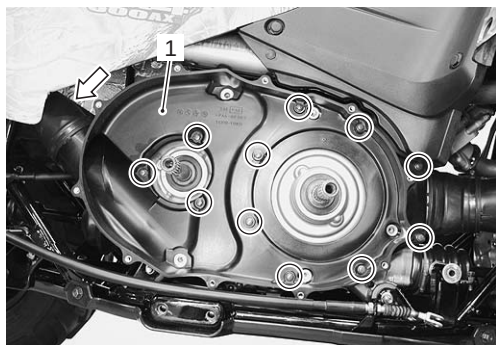

I931H1510102-02

Installation


Install the automatic transmission component parts in the reverse order of removal. Pay attention to the following points:

V-belt inner cover

- Install the V-belt inner cover (1).


CAUTION

If there are wear or damage, replace the gaskets (2) with new ones.

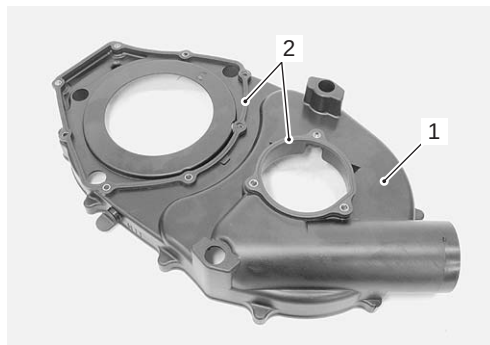

I931H1510063-01

- Install the outlet belt cooling duct connector (3).

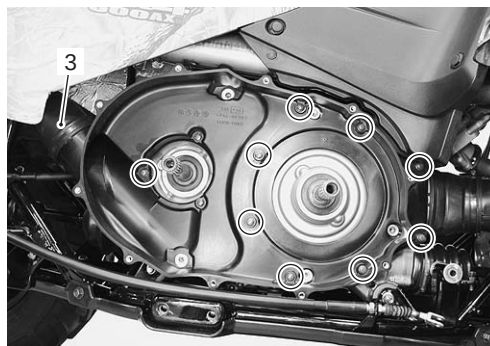


I931H1510103-03

Fixed drive face

Install the fixed drive face (1).

CAUTION

Degrease the fixed drive face. Use nonflammable cleaning solvent to wipe off oily or greasy matter and make its surfaces completely dry.

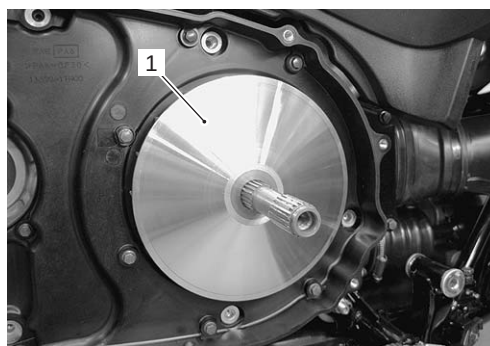


I931H1510011-01

Movable driven face / drive V-belt

- Install the drive belt (1), as low as possible, between the movable driven face and fixed driven face by tapping with a plastic mallet.

⚠ CAUTION

- The drive belt should be installed so that the arrows on the drive belt periphery point in the normal turning direction.
- The drive belt contact surface of the driven face should be thoroughly cleaned.

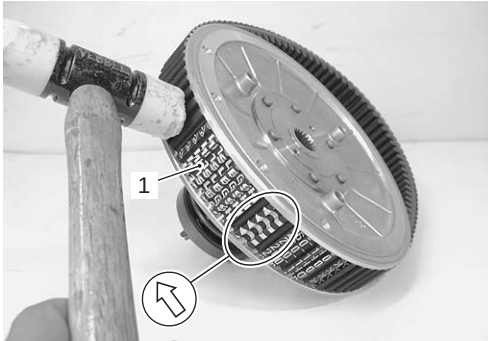

I931H1510012-01

- Apply grease in the groove of fixed driven face.

⚠ : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)




I931H1510013-01

- Install the driven face assembly (2).

⚠ CAUTION

Pull the center area "A" of upper and lower belt lines to be close to each other to prevent the belt from expanding.

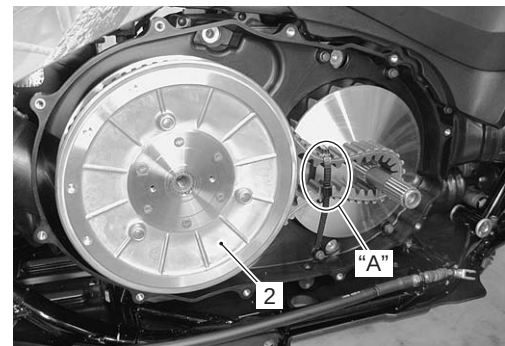

I931H1510014-01


- Tighten the driven face bolt (3) to the specified torque with the special tool.

Tightening torque

Movable driven face bolt (a): 110 N·m (11.0 kgf-m, 79.5 lbf-ft)

Special tool

TOOL (A): 09930-40113 (Flywheel rotor holder)

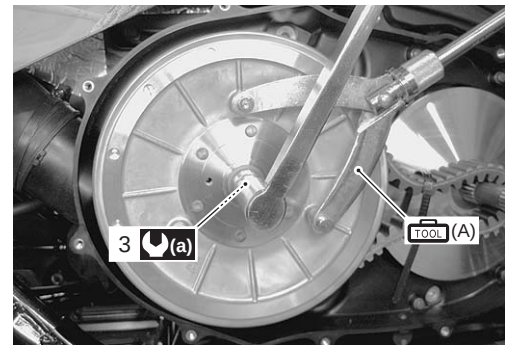


I931H1510015-01

Movable Drive Face

- Install the movable drive face assembly (1).

⚠ CAUTION

Degrease the movable drive face assembly (1). Use nonflammable cleaning solvent to wipe off oily or greasy matter and make its surfaces completely dry.

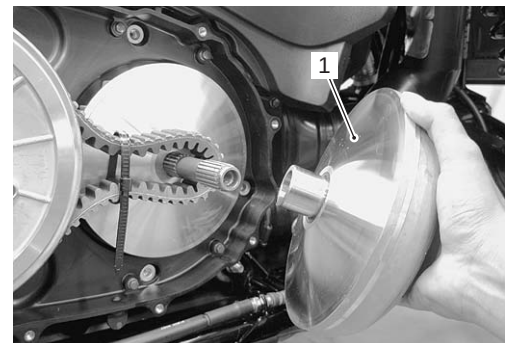

I931H1510016-01


5A-8 Automatic Transmission:

- Install the collar (2) and drive face bolt (3).

NOTE

The deep concave of the collar (2) faces outside.

- Install the dowel pins (4).

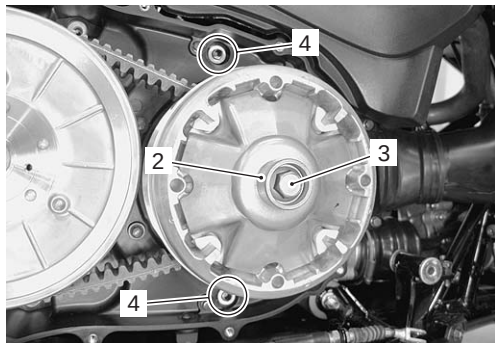

I931H1510017-02

- Tighten the movable drive face bolt (3) to the specified torque with the special tool.

Tightening torque

Movable drive face bolt (a): 110 N·m (11.0 kgf·m, 79.5 lbf·ft)

Special tool

 (A): 09930-40113 (Flywheel rotor holder)

NOTE

Turn the fixed drive face until the belt is seated in and driven faces will move together smoothly without slip.



I931H1510018-01

- Install the movable drive face cover (4) and cap (5).




I931H1510019-02

V-belt Outer Cover

- Install the V-belt outer cover (1).

CAUTION

If there are wear or damage, replace the gasket (2) with a new one.

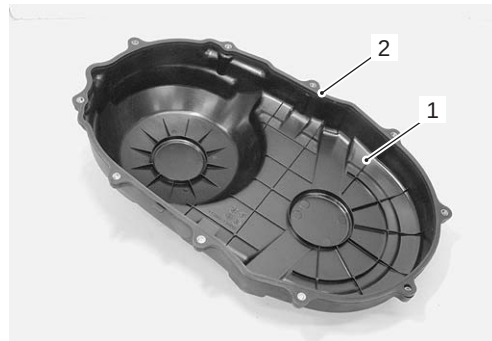

I931H1510020-01

- Install the V-belt outer cover.



I931H1510021-01


Movable Drive Face Disassembly and Assembly

B931H25106006

Refer to "Automatic Transmission Components (Page 5A-3)" and "V-belt Type Continuously Variable Automatic Transmission Removal and Installation (Page 5A-5)".


Disassembly

- 1) Remove the spacer (1).

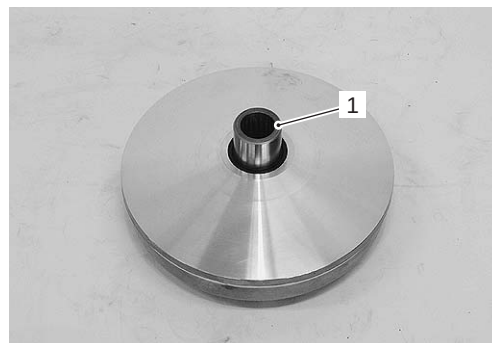


I931H1510022-01

- 2) Remove the movable drive plate (2) and rollers (3).

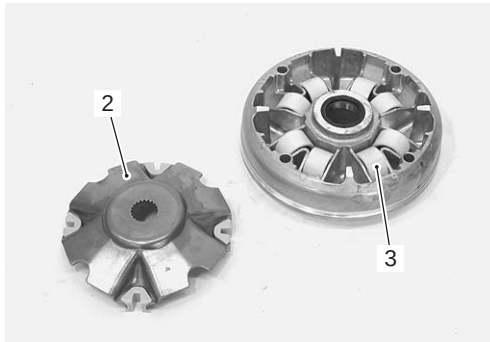

I931H1510023-01

- 3) Remove the dampers (4).

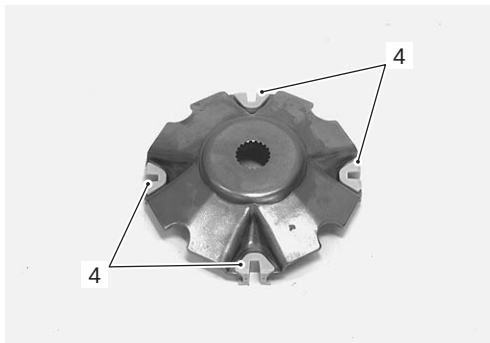


I931H1510024-01

- 4) Remove the oil seals (5) and (6).

NOTE

If there are no abnormal conditions, the oil seals removal are not necessary.

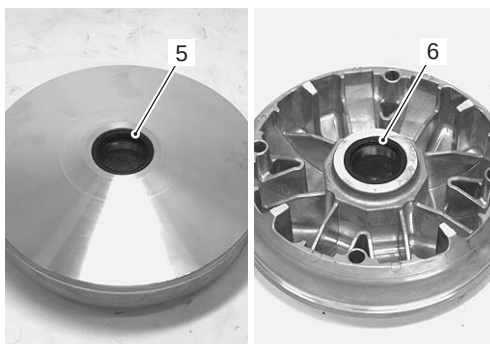

I931H1510025-01

Assembly


- 1) Install the oil seals with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 - 75))

NOTE

The removed oil seals must be replaced with new ones.

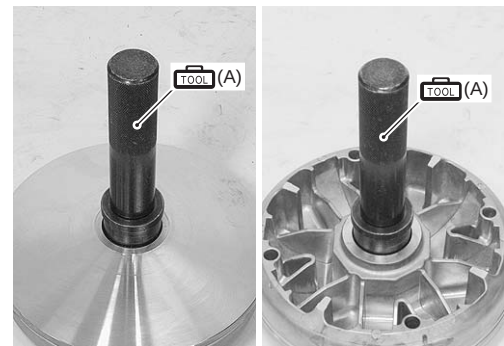


I931H1510026-01

- 2) Apply grease to the lip of oil seals and inside grease groove "A" of the movable drive face.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**


CAUTION

- Wipe off any excess grease thoroughly.
- Take care not to apply grease to the contact surface of the drive belt.

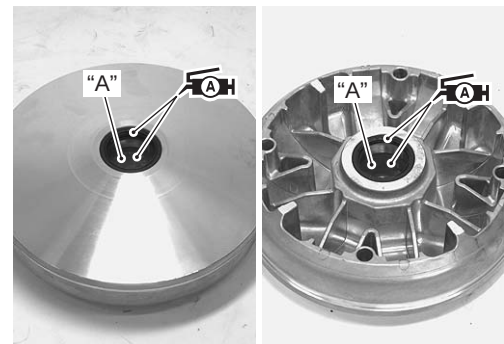

I931H1510027-01


- 3) Assemble the rollers (1) to the movable drive face (2).
- 4) Assemble the four dampers (3) to the movable drive plate (4).

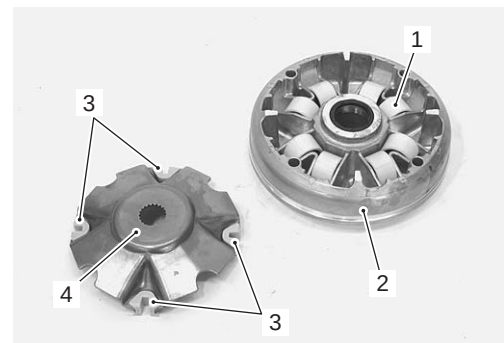

I931H1510028-01

5A-10 Automatic Transmission:


- 5) Assemble the movable plate (4) to the movable drive face (2).

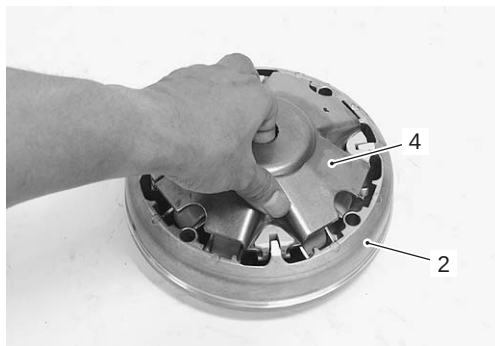

I931H1510029-02

- 6) Apply grease to the inside groove of the spacer (5).

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

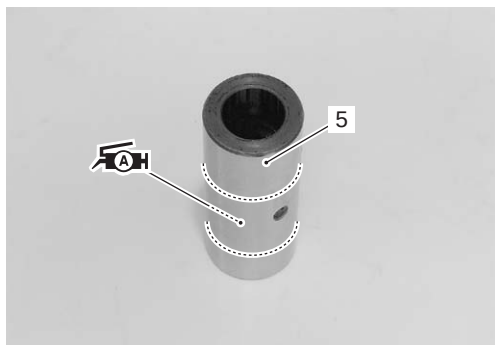

I831G1510032-02

- 7) Install the spacer (6).

NOTE

When installing the spacer, press down the movable drive face plate so as not to cause the rollers to come out of position.



I931H1510030-01

Movable Driven Face Disassembly and Assembly

B931H25106007

Refer to "Automatic Transmission Components (Page 5A-3)" and "V-belt Type Continuously Variable Automatic Transmission Removal and Installation (Page 5A-5)".

Disassembly

- 1) Hold the driven face assembly (1) with the special tool and vise, loosen the movable driven face ring nut (2) with the special tool.


WARNING

Do not remove the movable driven face ring nut before attaching the clutch spring compressor.

Special tool

 (A): 09917-23711 (Ring nut socket wrench)

 (B): 09924-52450 (Fixed driven face holder)

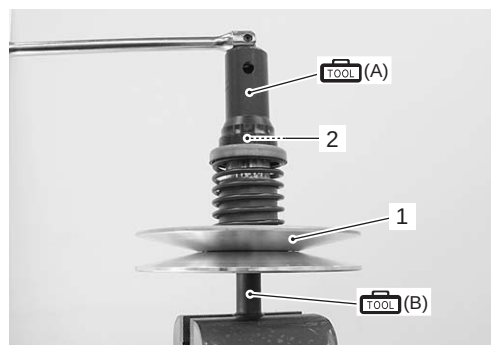

I931H1510031-01

- 2) Set the special tool to the driven face assembly (1) and compress the driven face assembly by turning in the special tool handle.


NOTE

Make sure to insert the spring end "A" into the slot "B" of the special tool as shown in the figure.


Special tool

 (C): 09922-31430 (Clutch spring compressor)

3) Remove the movable driven face ring nut (2).

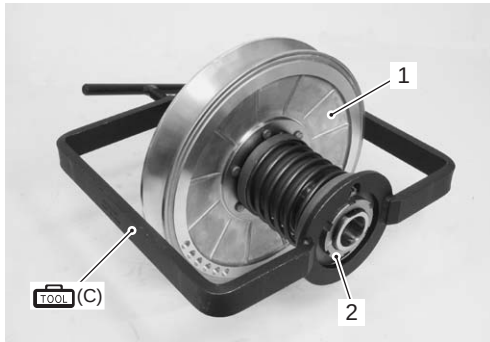

I931H1510032-01

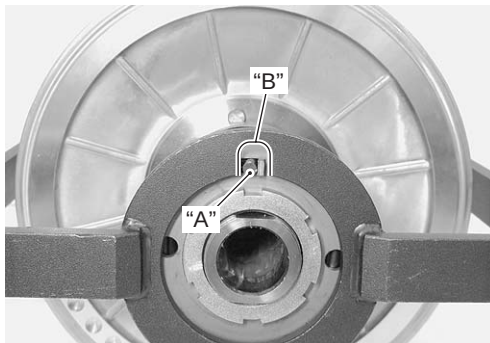


I931H1510033-01

⚠ WARNING



Since a high spring force applies to the movable driven face, care must be used so as not to cause the movable driven face to come off abruptly.

- 1) Loosen the special tool handle slowly and remove the special tool.
- 2) Remove the spring plate (3) and spring (4).

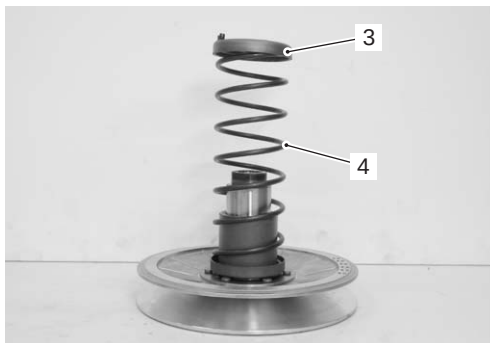



I931H1510034-01

3) Remove the spring seat (5) and O-rings (6).

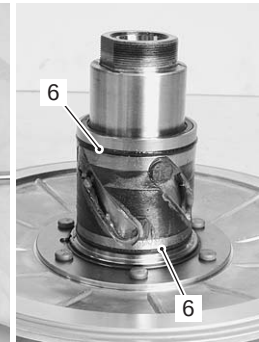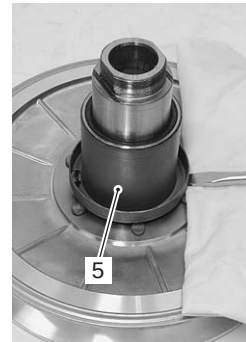

I931H1510035-01

4) Remove the pins (7) and rollers (8).

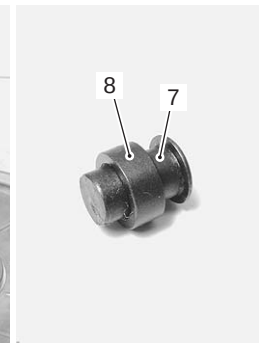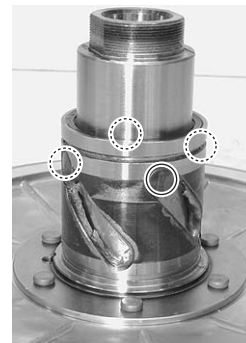

I931H1510036-01

5) Remove the movable driven face (9).




I931H1510037-01

6) Remove the oil seals (10) and (11) from the movable driven face.

NOTE

If there are no abnormal conditions, the oil seals removal are not necessary.

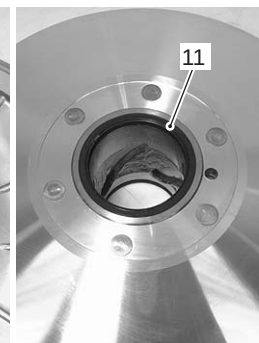

I931H1510038-01

5A-12 Automatic Transmission:

Assembly

Assemble the movable driven face in the reverse order of disassembly. Pay attention to the following points:


- Install the oil seals (1) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

CAUTION

The removed oil seals must be replaced with new ones.

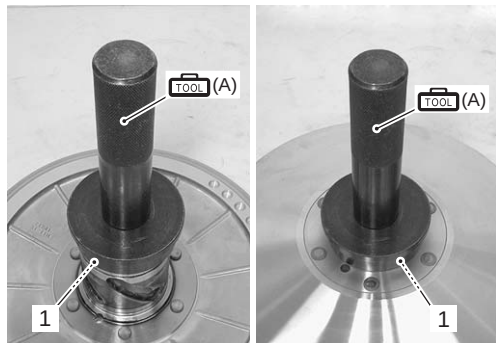

I931H1510039-01

- Install the O-rings (2) to the movable driven face.
- Apply grease to the lip of oil seals, O-rings and inside groove of movable driven face.


CAUTION

Replace the O-rings (2) with new ones.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

CAUTION

- Wipe off any excess grease thoroughly.
- Take care not to apply grease to the contact surface of the drive belt.

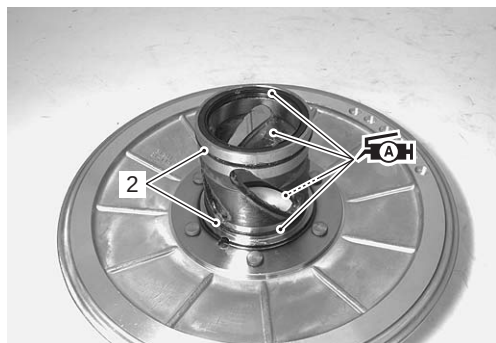


I931H1510040-01

- Install the movable driven face (3) to the fixed driven face (4).
- Apply grease to the pin grooves of the movable driven face.

 : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)


CAUTION

To prevent damaging the oil seal lip from during installation, slide the lip using a 0.1-mm steel sheet as a guide.

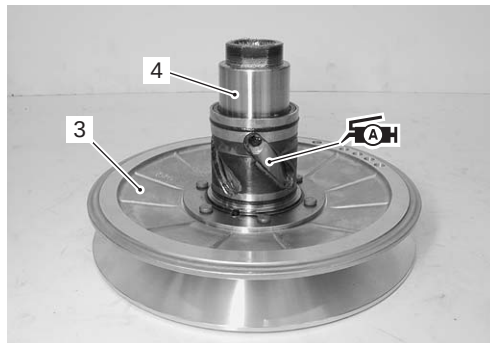


I931H1510041-01

- Install the rollers (5) and pins (6).

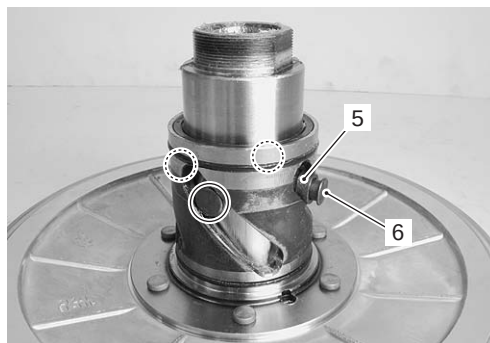

I931H1510042-02

- Install the spring seat (7) aligning the hole "A" with the hole "B".

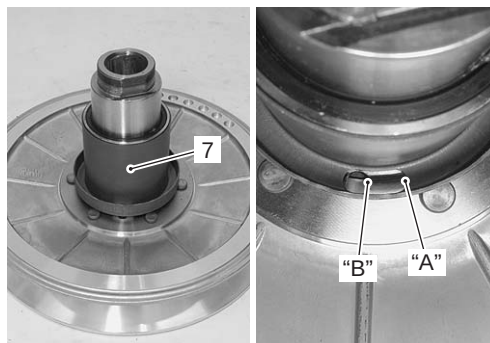


I931H1510043-01

- Install the spring (8) and spring plate (9) by aligning the spring ends with the holes.

NOTE

When installing the spring (8), set the paint mark side of the spring (8) to the movable driven face side.

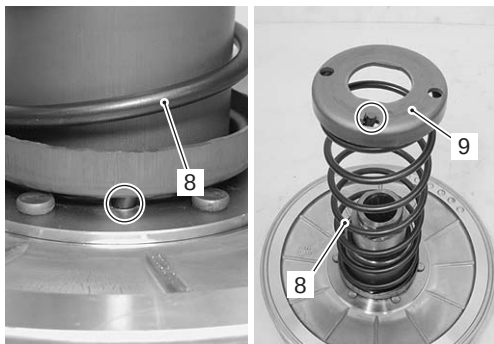

I931H1510044-01


- Compress the spring (8) with the special tool.

Special tool


 (B): 09922-31430 (Clutch spring compressor)

NOTE

Make sure to insert the spring end "A" into the slot "B" of the special tool as shown in the figure.

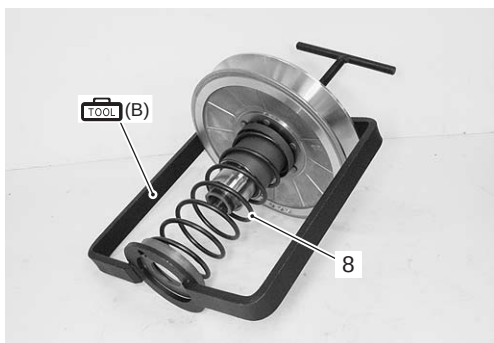


I931H1510045-01

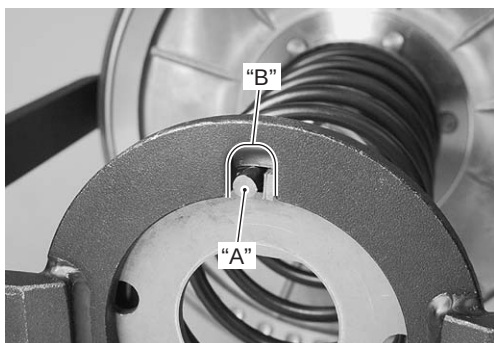

I931H1510046-01

- Tighten the movable driven face ring nut (10) temporarily.
- Remove the special tool from the movable driven face assembly.

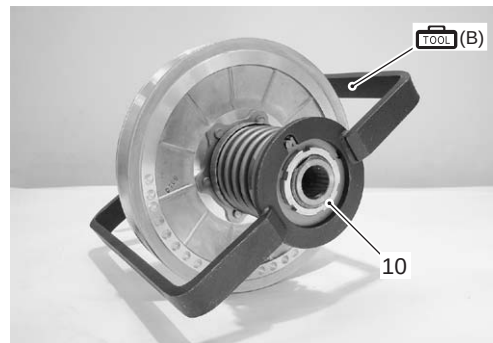

I831G1510049-01

- Tighten the movable driven face ring nut (10) to the specified torque with the special tools.


Tightening torque

Movable driven face ring nut (a): 110 N·m (11.0 kgf-m, 79.5 lbf-ft)

Special tool

 (C): 09917-23711 (Ring nut socket wrench)

 (D): 09924-52450 (Fixed driven face holder)

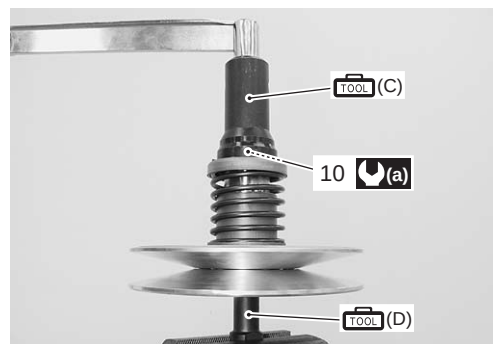

I931H1510048-01

Drive V-belt Inspection

B931H25106008

Inspect that the drive belt is free from any greasy substance.

Inspect the contact surface of the drive belt for cracks or damage and measure the width of the drive belt with the vernier calipers.

If any defects are found or measurement exceeds the service limit, replace the drive belt with a new one.

⚠ CAUTION

If grease or oil is present on the surface of the drive belt, degrease the belt thoroughly.


Drive V-belt width

Standard: 31.1 mm (1.22 in)

Service limit: 30.1 mm (1.18 in)

Special tool

TOOL (A): 09900-20101 (Vernier calipers (150 mm))

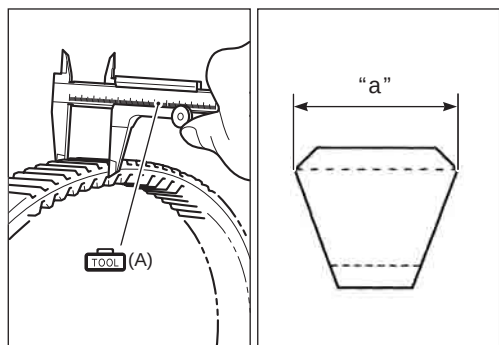

I831G1510051-02

Movable / Fixed Drive Face Parts Inspection

B931H25106009

Movable / Fixed Drive Face

Inspect the drive faces for any abnormal conditions such as stepped wear or discoloration caused by burning.

If any damages are found, replace the drive faces with new ones.



I931H1510049-01

Roller

Inspect each roller and their sliding surface for wear or damage.

If any defects are found, replace the rollers as a set.

NOTE

The rollers must always be changed as a set.




I931H1510050-01

Damper

Inspect the dampers for wear or damage.

If any defects are found, replace the dampers with new ones.

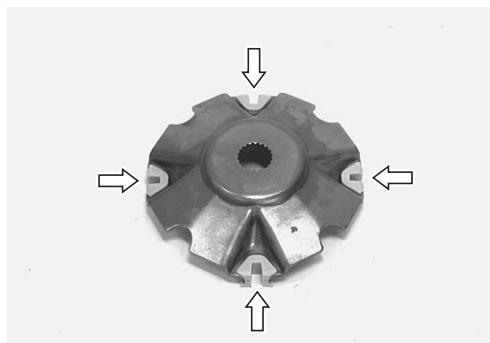


I931H1510051-01

Oil Seal

Inspect the lip of the oil seal for wear or damage.

If any damages are found, replace the oil seal with a new one.

Refer to "Movable Driven Face Disassembly and Assembly (Page 5A-10)".

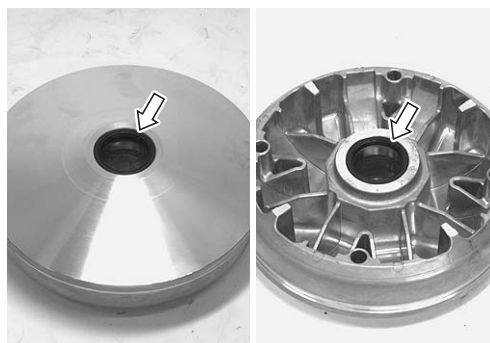

I931H1510052-01

Movable / Fixed Driven Face Parts Inspection

B931H25106010

Movable / Fixed Driven Face

Inspect the driven face for any abnormal conditions, such as stepped wear or discoloration caused by burning.

If any defects are found, replace them with new ones.



I931H1510053-01

Movable Driven Pin and Spacer

Inspect the movable driven pin and spacer for abnormal wear or damage. If any defects are found, replace the pin and spacer with a new one.



I931H1510054-01


Movable Driven Spring

Measure the spring free length with the vernier calipers.

- If the length is shorter than the service limit, replace the spring with a new one.

Movable driven face spring free length


Service limit: 204.3 mm (8.04 in)

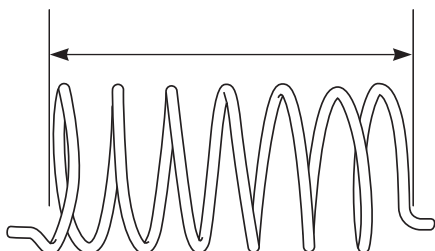

I831G1510059-02

O-ring and Oil Seal

Inspect the O-rings and oil seals for wear or damage. If any defects are found, replace the O-rings and oil seals with new ones.

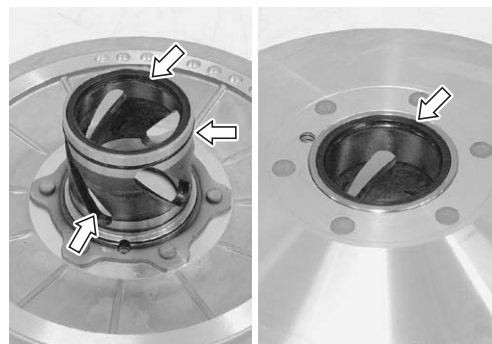

I831G1510060-01


Clutch Shoe Removal and Installation

B931H25106011

Refer to "V-belt Type Continuously Variable Automatic Transmission Removal and Installation (Page 5A-5)".


Removal

- 1) Drain the engine oil. Refer to "**Engine Oil and Filter Replacement: in Section 0B**".
- 2) Remove the outlet cooling duct connector (1) from the V-belt inner cover (2).
- 3) Remove the V-belt inner cover (2).

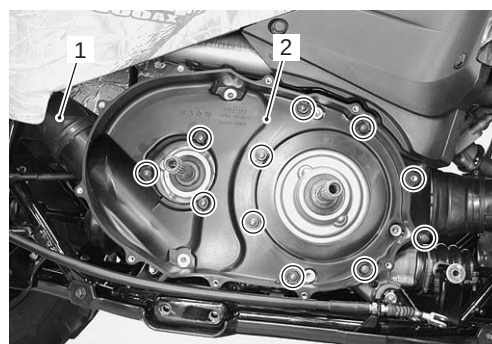

I931H1510055-01


- 4) Remove the inlet cooling duct connector (3) from the clutch housing case (4).
- 5) Remove the clutch cover (4) along with the clutch housing (5).

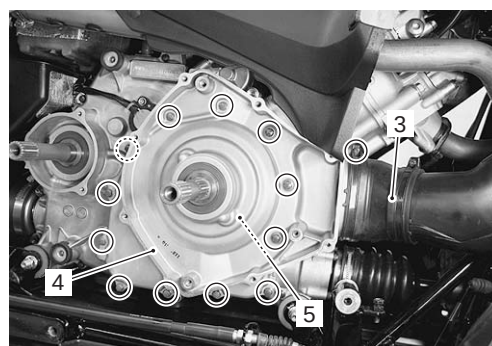

I931H1510056-01

5A-16 Automatic Transmission:

- 6) Remove the dowel pins (6) and gasket (7).
- 7) Remove the one way clutch (8).

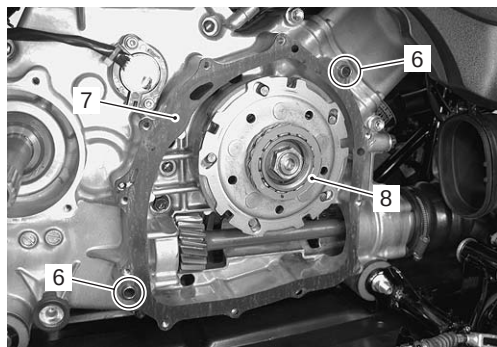


- 8) Hold the clutch shoe with the special tools and remove the clutch shoe nut (9).

⚠ CAUTION


The clutch shoe nut (9) has left-hand threads.

Special tool

- TOOL (A): 09930-40113 (Flywheel rotor holder)
- TOOL (B): 09930-40120 (Rotor holder attachment (A))

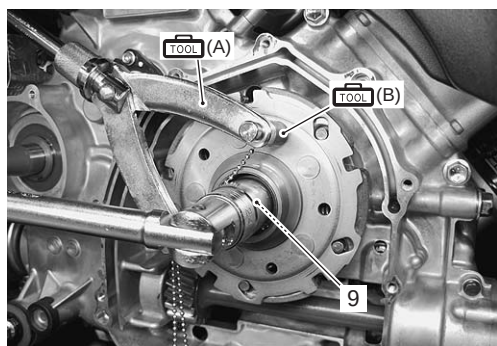


- 9) Remove the washer (10).

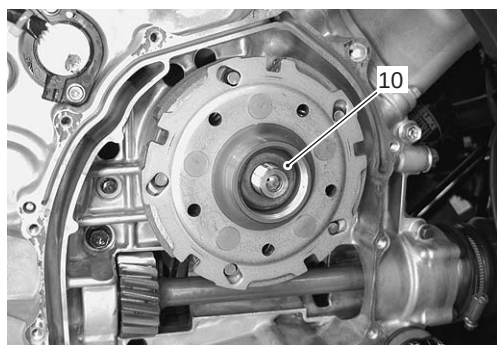

- 10) Remove the clutch shoe (11) with the special tools.

Special tool

- TOOL (C): 09930-30104 (Rotor remover slide shaft)
- TOOL (D): 09920-33540 (Clutch shoe remover)

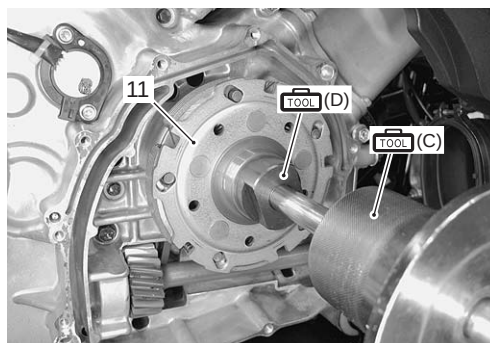



Installation

Install the clutch shoe in the reverse order of removal. Pay attention to the following points:

- Install the clutch shoe (1) and washer (2).

NOTE

Install the washer (2) as shown in the figure.

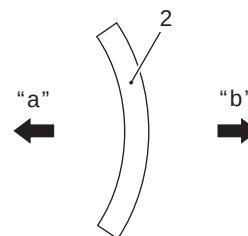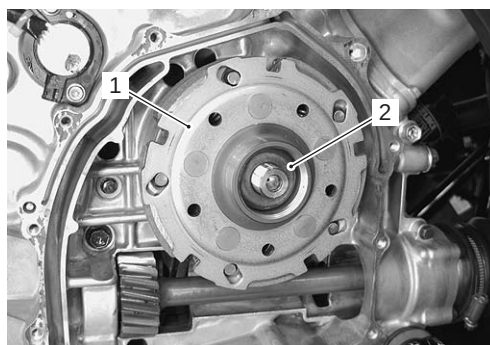

"a": Clutch shoe side

"b": Clutch shoe nut side


- Apply a small quantity of thread lock to the clutch shoe nut (3).

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- Install the clutch shoe nut (3).

NOTE

The clutch shoe nut (3) has left-hand threads.

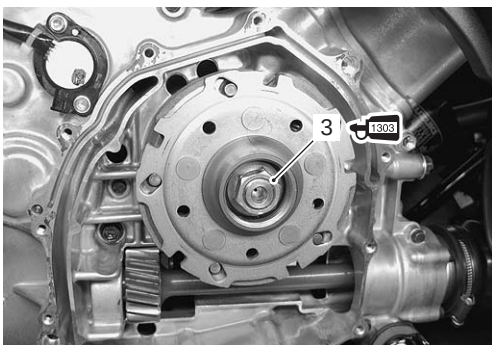

I931H1510064-01

- Tighten the clutch shoe nut (3) to the specified torque with the special tools.


Tightening torque

Clutch shoe nut (a): 150 N·m (15.0 kgf-m, 108.5 lbf-ft)

Special tool

 (A): 09930-40113 (Flywheel rotor holder)

 (B): 09930-40120 (Rotor holder attachment (A))

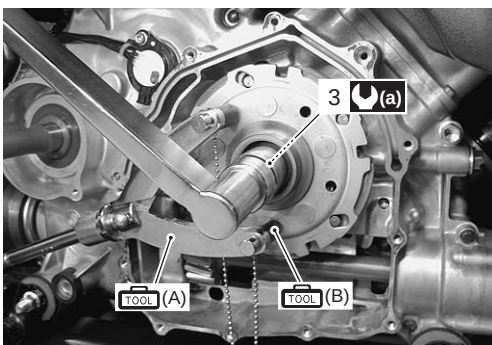


I931H1510065-01


- Apply molybdenum oil solution to the inside of the one way clutch (4).

M/O: Molybdenum oil (MOLYBDENUM OIL SOLUTION)

- Install the one way clutch (4) with facing the "OUTSIDE" mark "A" outside.

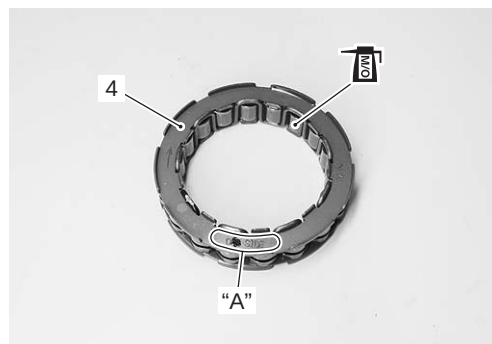

I931H1510066-01

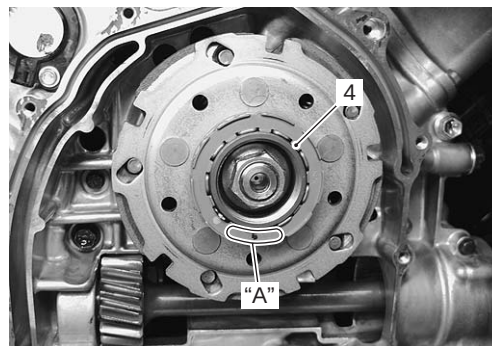


I931H1510067-01

- Install the dowel pins (5) and gasket (6).


⚠ CAUTION

Use a new gasket (6) to prevent oil leakage.

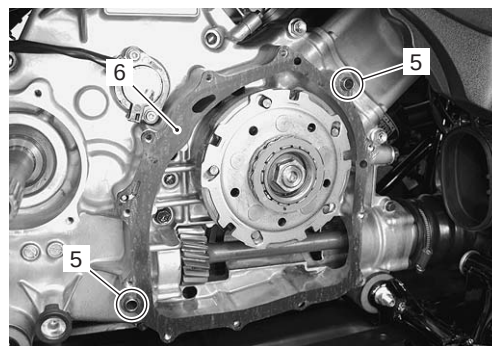

I931H1510068-01


- Install the clutch cover (7) and inlet belt cooling duct connector (8) and tighten the bolts diagonally.

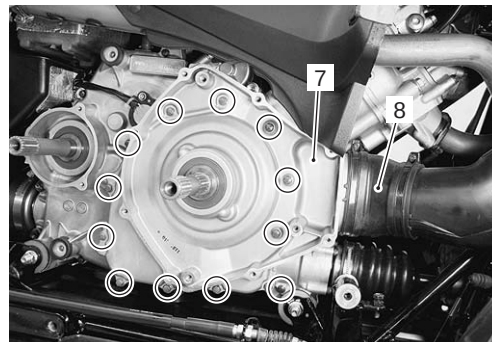

I931H1510069-02

5A-18 Automatic Transmission:

- Install the outlet belt cooling duct connector (9).

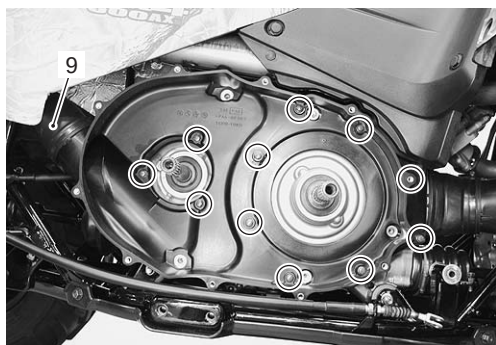

I931H1510070-02


Clutch Cover Disassembly and Assembly

B931H25106012

Refer to "Clutch Shoe Removal and Installation (Page 5A-15)".


Disassembly

- Remove the clutch housing (1) from clutch cover.

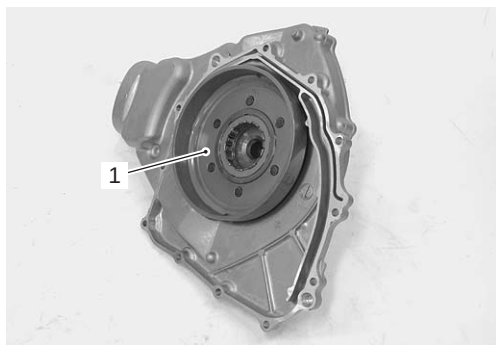

I931H1510071-01

- Remove the spacer (2).

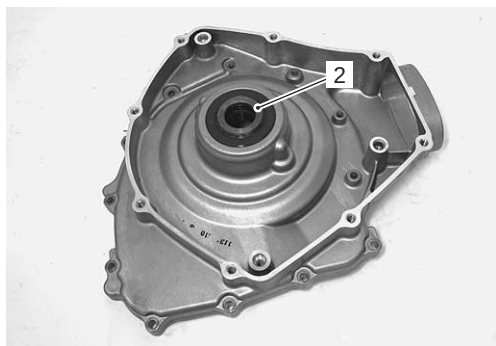


I931H1510072-01

- Remove the oil seal (3) with the special tool.


Special tool

TOOL (A): 09913-50121 (Oil seal remover)

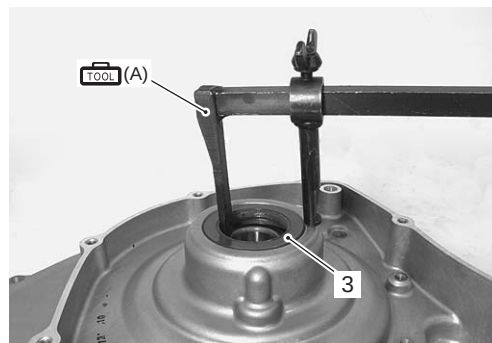

I931H1510073-01

- Remove the retainers (4).

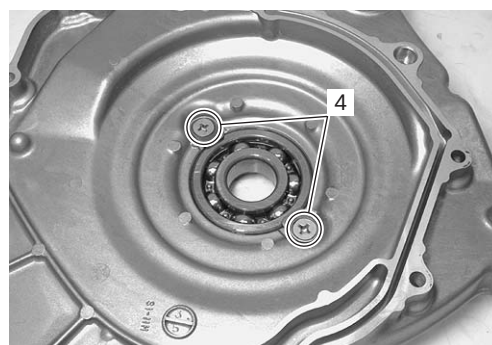

I931H1510074-01


- Remove the bearing (5) with the special tool.

Special tool

TOOL (B): 09921-20240 (Bearing remover set)

NOTE

If there is no abnormal noise, the bearing removal is not necessary.

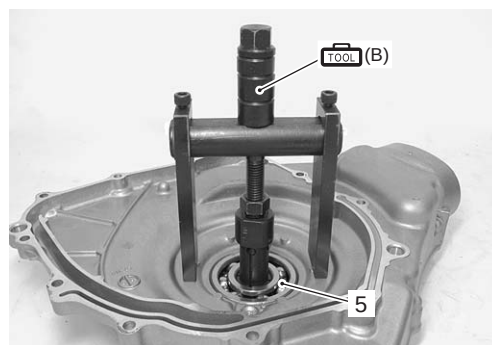

I931H1510075-01

Assembly


- Install the bearing (1) with the special tool.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 – 75))

⚠ CAUTION


The removed bearing must be replaced with a new one.

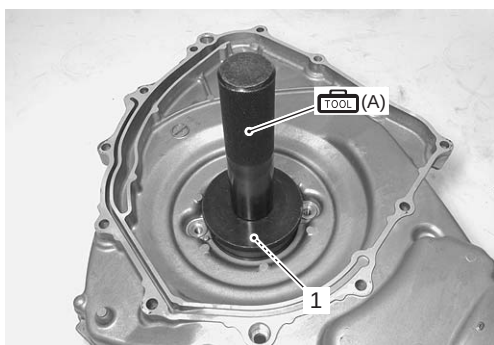

I931H1510076-01

- Fit the bearing retainers (2).
- Apply a small quantity of thread lock to the bearing retainer screws (3), and tighten them securely.

1303 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

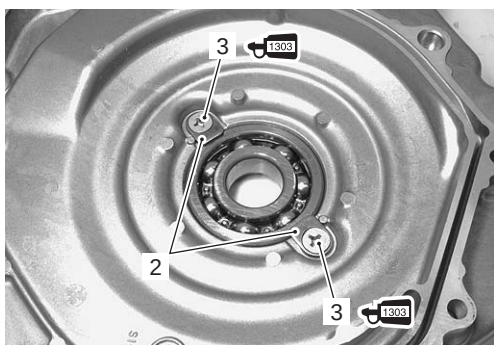

I931H1510077-01

- Install the oil seal (4) with the special tool.

⚠ CAUTION


The removed oil seal (4) must be replaced with a new one.

Special tool

TOOL (A): 09913-70210 (Bearing installer set (10 – 75))

- Apply grease to the lip of the oil seal (4).

⚠ : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

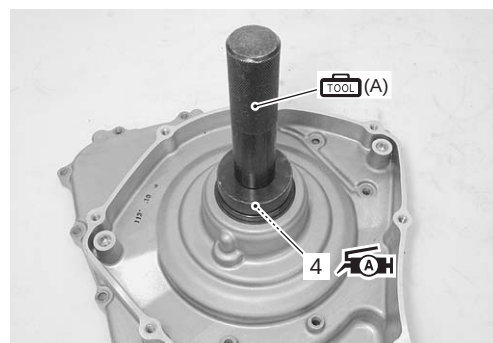

I931H1510079-01


- Install the spacer (5).

⚠ CAUTION

Replace a O-ring (6) with a new one.


- Apply grease to the O-ring (6).

⚠ : Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)

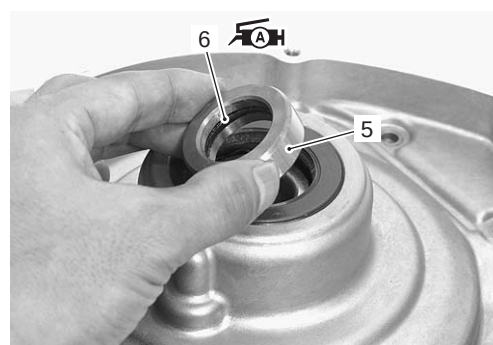

I931H1510078-01


- Install the clutch housing (7).

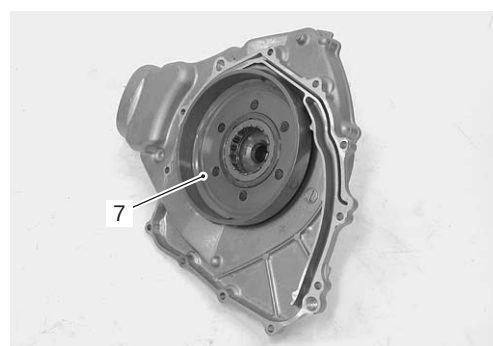

I931H1510080-01

5A-20 Automatic Transmission:

- After installed the clutch housing, check if the clutch housing rotates smoothly.

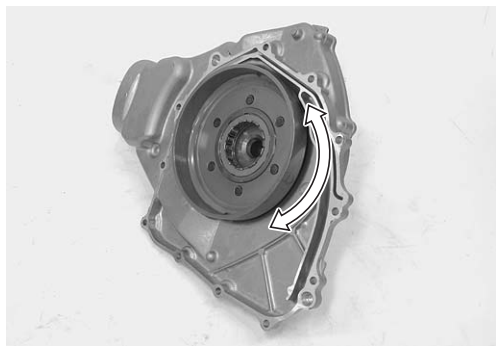

I931H1510081-01

Clutch Related Parts Inspection

B931H25106013


Refer to "Clutch Cover Disassembly and Assembly (Page 5A-18)".

Clutch Shoe

Inspect the boss and centrifugal weight fulcrum sections for looseness, damage and operation.

Inspect the clutch shoe for damage and fouling with oil on the surface.

If any defects are found, replace the clutch shoe assembly with a new one.

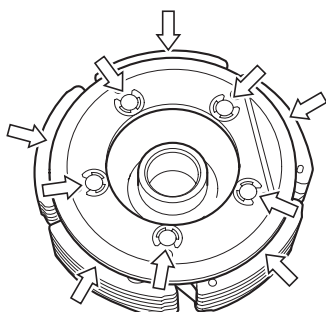


I831G1510084-01

Measure the thickness of the clutch shoe at the center position. If the thickness is less than the service limit, replace the clutch shoe assembly with a new one.

Clutch shoe thickness

Service limit: No groove at any part

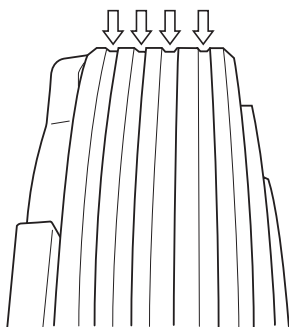


I931H1510104-01

Clutch housing

Inspect the clutch housing for any abnormal surface damage. Measure the inside diameter of the clutch housing. If the measurement exceeds the service limit, replace the clutch housing with a new one.

Clutch housing I.D.


Service limit: 140.5 mm (5.53 in)

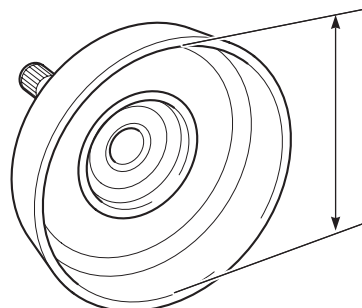

I831G1510086-01

Left Clutch Housing Bearing

Rotate the inner race by finger to inspect for abnormal play, noise and smooth rotation. If there is anything unusual, replace the bearing with a new one.

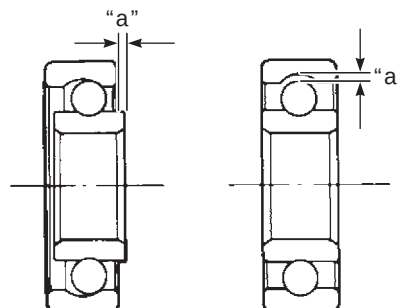

I831G1510087-01


"a": play

One Way Clutch

Install the one way clutch (1) onto the proper direction as shown.


NOTE

When installing the one way clutch (1) onto the clutch housing (2), make sure that the "OUTSIDE" mark "A" in the one way clutch faces to the clutch housing.

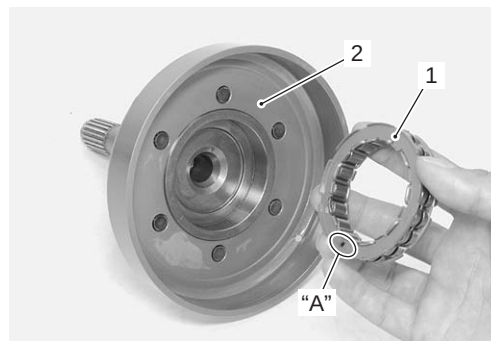

I931H1510082-01

- Install the clutch shoe (3) onto the clutch housing and turn the clutch shoe by hand to inspect the one way clutch for a smooth movement. The clutch shoe turns one direction only. If a large resistance is felt to rotation, inspect the one way clutch for damage or one way clutch contacting surface of the clutch shoe for wear or damage. If any defects are found, replace them with new ones.

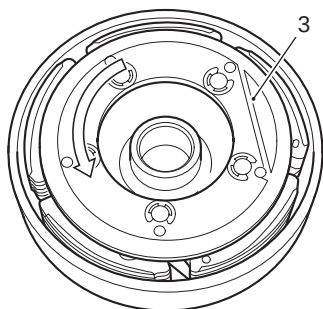

I831G1510089-01

Movable Drive Face Cover Disassembly and Assembly


B931H25106014

Disassembly

- Remove the oil seal (1) with the special tool.

Special tool

 (A): 09913-50121 (Oil seal remover)

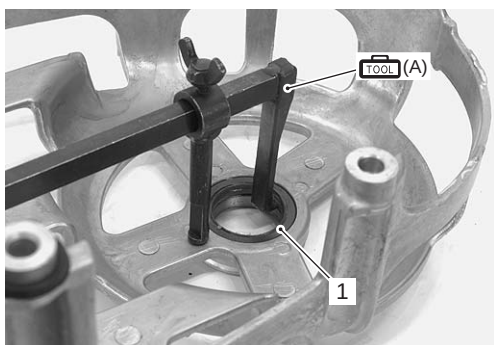

I931H1510083-01

- Remove the snap ring (2).



I931H1510084-01


- Remove the bearing (3) with the special tool.

NOTE

If there is no abnormal noise, the bearing removal is not necessary.

Special tool

 (B): 09913-70210 (Bearing installer set (10 – 75))

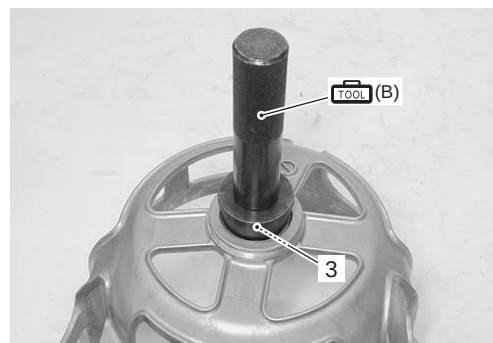

I931H1510085-01

Assembly

- Press the bearing (1) with the special tool.

Special tool

 (A): 09913-70210 (Bearing installer set (10 – 75))

⚠ CAUTION

The sealed cover of the bearing must face outside.



I931H1510086-01

- Apply grease to the bearing.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**



I931H1510087-01

- Install the snap ring (2).

CAUTION

The removed snap ring must be replaced with a new one.



I931H1510084-01

- Install the oil seal (3) with the special tool.

Special tool


 (A): 09913-70210 (Bearing installer set (10 – 75))

CAUTION

The removed oil seal must be replaced with a new one.

- Apply grease to the lip of oil seal.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**

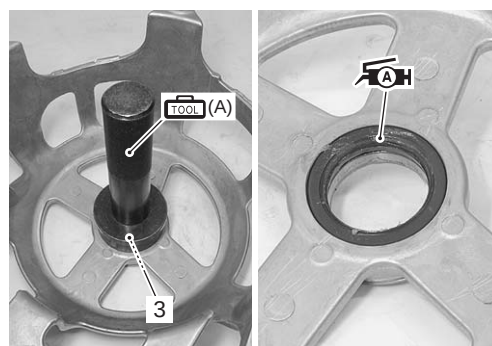

I931H1510089-01

Movable Driven Face Cover Parts Inspection

B931H25106015

Right Clutch Housing Bearing

Rotate the inner race by finger to inspect for abnormal play, noise and smooth rotation. If there is anything unusual, replace the bearing with a new one.



I931H1510090-01

Oil Seal


Inspect the oil seal lip for wear or damage. If any defects are found, replace the oil seal with a new one.



I931H1510091-01

Shift Lever Assembly Components

B931H25106016

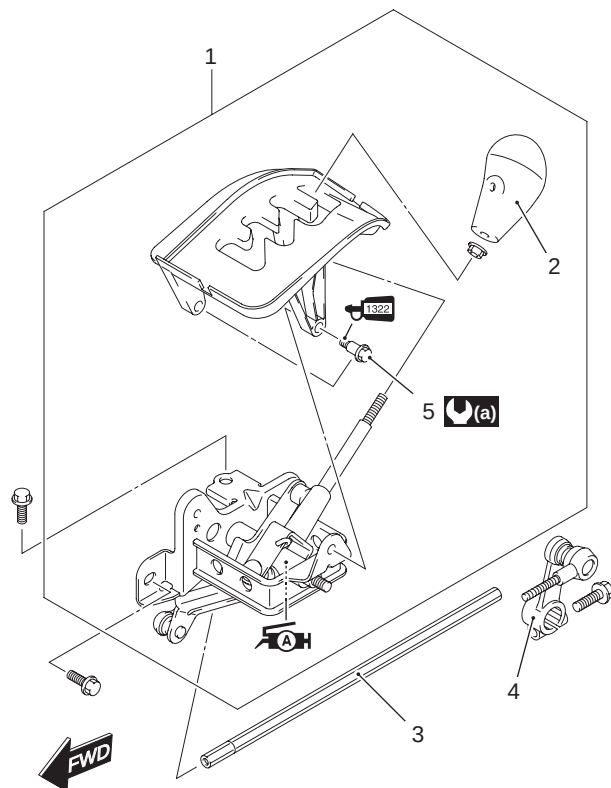

I931H1510107-02


1.	Transfer gearshift lever assembly
2.	Gearshift knob
3.	Rod
4.	Gearshift link arm
5.	Gate cover mounting bolt
(a)	10 N·m (1.0 kgf-m, 7.0 lbf-ft)
AH	Apply grease.
1822	Apply thread lock to the thread part.

Gearshift Knob Removal and Installation

B931H25106017

Removal

- 1) Loosen the lock-nut (1).
- 2) Remove the gearshift knob (2).

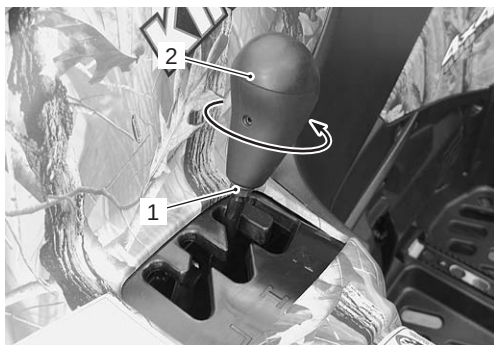

I931H1510092-01

Installation

Install the gearshift knob in the reverse order of removal.

NOTE


Tighten the lock-nut securely.

Shift Lever Assembly Removal and Installation

B931H25106018

Removal

- 1) Keep the vehicle on a level ground.
- 2) Remove the left inner fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 3) Keep the gearshift link arm (1) in the neutral position.

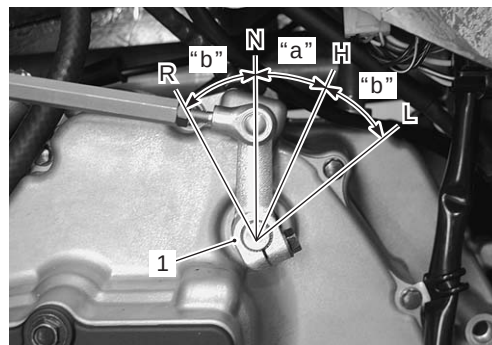


I931H1510093-01

"a": 30°

"b": 33°

- 4) Loosen the bolt (2) and remove the gearshift link arm (1).

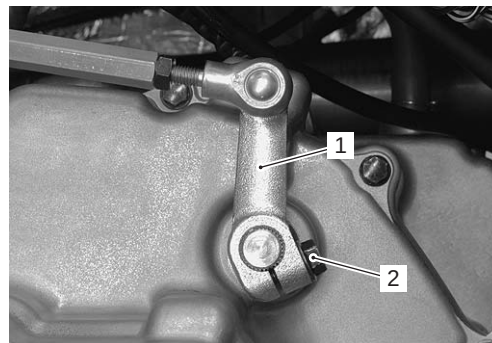

I931H1510094-01


- 5) Remove the transfer gearshift lever mounting bolts (3).



I931H1510095-01

5A-24 Automatic Transmission:

- 6) Remove the shift lever assembly (4).

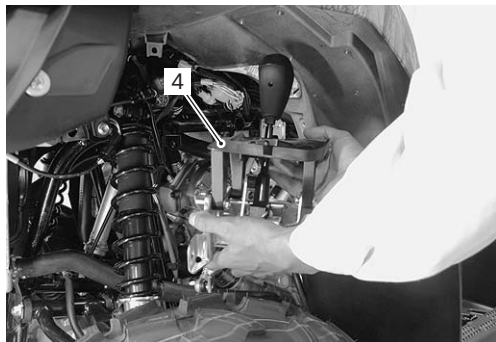

I931H1510096-01

Installation

Install the gearshift lever in the reverse order of removal. Pay attention to the following points:

- Apply grease to pivot.

 **Grease 99000-25010 (SUZUKI SUPER GREASE A or equivalent)**



I931H1510097-01

- Tighten shift lever assembly mounting bolts.




I931H1510098-01

- Install the gearshift link arm (1) to the gearshift shaft in the correct position.
- Tighten the bolt (2) securely.

CAUTION

Make sure the operating angle of the gearshift link arm is accurate.

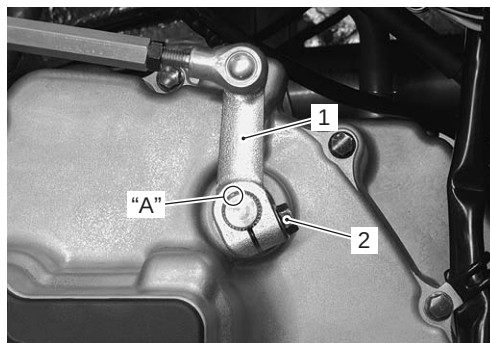

I931H1510099-01

"A": Mating position

- Install the removed parts. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".

Shift Lever Disassembly and Assembly

B931H25106019

Disassembly

- 1) Remove the shift lever assembly. Refer to "Shift Lever Assembly Removal and Installation (Page 5A-23)".
- 2) Disassemble the shift lever assembly as shown in the shift lever components. Refer to "Shift Lever Assembly Components (Page 5A-23)".

Assembly


- 1) Assemble the shift lever as shown in the shift lever components. Refer to "Shift Lever Assembly Components (Page 5A-23)".
- 2) Install the shift lever assembly. Refer to "Shift Lever Assembly Components (Page 5A-23)".
- 3) After installing the gearshift lever assembly, adjust the shift rod. Refer to "Shift Rod Adjustment (Page 5A-25)".

Shift Rod Adjustment

B931H25106020


Adjust the shift rod length along each angle of the gearshift link arm.

- 1) Loosen the lock-nuts (1).

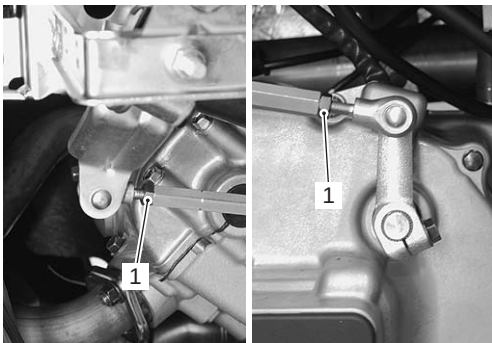

I931H1510100-01

- 2) Turn shift rod in or out and set the gearshift link arm angle as shown in the figure.

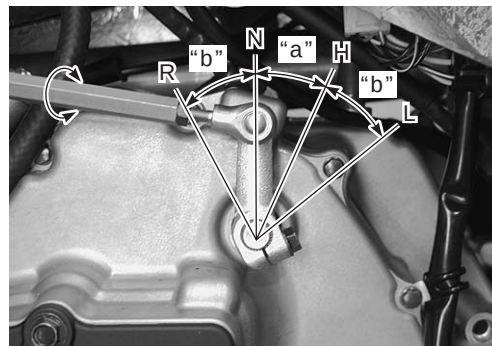

I931H1510101-01

"a": 30°

"b": 33°

Specifications

Service Data

B931H25107001

Clutch

Unit: mm (in)

Item	Standard	Limit
Clutch wheel I.D.	140.0 – 140.2 (5.512 – 5.520)	140.5 (5.53)
Clutch shoe	—	No groove at any part
Clutch engagement r/min	1 700 – 2 200 r/min	—
Clutch lock-up r/min	3 700 – 4 300 r/min	—

Drive Train

Unit: mm (in) Except ratio

Item	Standard	Limit
Automatic transmission ratio	Variable change (2.902 – 0.779)	—
Secondary reduction ratio	2.603 (37/18 x 19/15)	—
Final reduction ratio	Front	3.600 (36/10)
	Rear	3.600 (36/10)
Transfer gear ratio	Low	2.562 (41/16)
	High	1.240 (31/25)
	Reverse	2.000 (32/16)

Transmission

Unit: mm (in)

Item	Standard	Limit
Drive V-belt width	31.1 (1.22)	30.1 (1.18)
Movable driven face spring free length	215 (8.47)	204.3 (8.04)

Tightening Torque Specifications

B931H25107002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Movable driven face bolt	110	11.0	79.5	☞ (Page 5A-7)
Movable drive face bolt	110	11.0	79.5	☞ (Page 5A-8)
Movable driven face ring nut	110	11.0	79.5	☞ (Page 5A-13)
Clutch shoe nut	150	15.0	108.5	☞ (Page 5A-17)

NOTE

The specified tightening torque is described in the following.

“Automatic Transmission Components (Page 5A-3)”

“Shift Lever Assembly Components (Page 5A-23)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H25108001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A or equivalent	P/No.: 99000–25010	☞ (Page 5A-7) / ☞ (Page 5A-9) / ☞ (Page 5A-10) / ☞ (Page 5A-12) / ☞ (Page 5A-12) / ☞ (Page 5A-19) / ☞ (Page 5A-19) / ☞ (Page 5A-22) / ☞ (Page 5A-22) / ☞ (Page 5A-24)
Molybdenum oil	MOLYBDENUM OIL SOLUTION	—	☞ (Page 5A-17)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 5A-17) / ☞ (Page 5A-19)

NOTE












Required service material is also described in the following.

“Automatic Transmission Components (Page 5A-3)”

“Shift Lever Assembly Components (Page 5A-23)”

Special Tool

B931H25108002

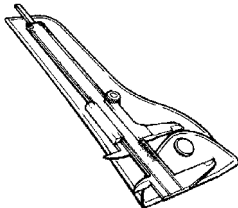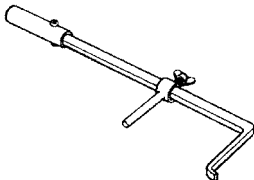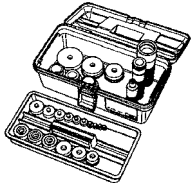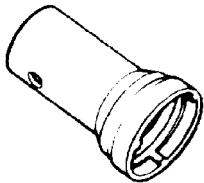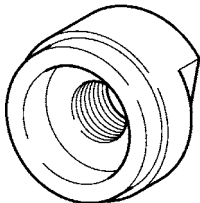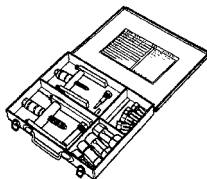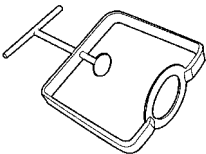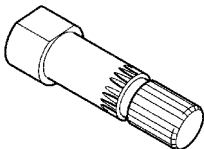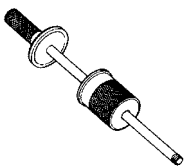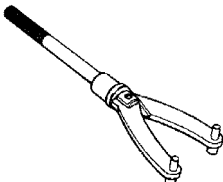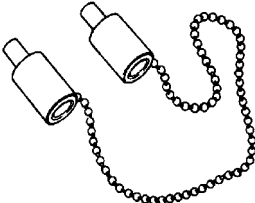09900–20101 Vernier calipers (150 mm) (Page 5A-14)		09913–50121 Oil seal remover (Page 5A-18) / (Page 5A-21)	
09913–70210 Bearing installer set (10 – 75) (Page 5A-9) / (Page 5A-12) / (Page 5A-19) / (Page 5A-19) / (Page 5A-21) / (Page 5A-21) / (Page 5A-22)		09917–23711 Ring nut socket wrench (Page 5A-10) / (Page 5A-13)	
09920–33540 Clutch shoe remover (Page 5A-16)		09921–20240 Bearing remover set (Page 5A-18)	
09922–31430 Clutch spring compressor (Page 5A-10) / (Page 5A-13)		09924–52450 Fixed driven face holder (Page 5A-10) / (Page 5A-13)	
09930–30104 Rotor remover sliding shaft (Page 5A-16)		09930–40113 Flywheel rotor holder (Page 5A-5) / (Page 5A-6) / (Page 5A-7) / (Page 5A-8) / (Page 5A-16) / (Page 5A-17)	
09930–40120 Rotor holder attachment (A) (Page 5A-16) / (Page 5A-17)			

Section 6

Steering

CONTENTS

Precautions	6-1	Component Location	6C-8
Precautions.....	6-1	EPS Components Location	6C-8
Precautions for Steering	6-1	Diagnostic Information and Procedures	6C-8
Steering General Diagnosis.....	6A-1	EPS Troubleshooting	6C-8
Diagnostic Information and Procedures.....	6A-1	Pre-diagnosis Inspection.....	6C-9
Steering Symptom Diagnosis.....	6A-1	EPS System Check.....	6C-11
Steering / Handlebar.....	6B-1	DTC (Diagnostic Trouble Code) Output.....	6C-18
Repair Instructions	6B-1	DTC (Diagnostic Trouble Code) Deleting.....	6C-20
Steering / Handlebars Components	6B-1	SDS Check.....	6C-23
Steering / Handlebars Assembly Construction	6B-2	DTC Table.....	6C-24
Handlebars Removal and Installation	6B-3	DTC "C1111": Torque Sensor (Main) Circuit	
Handlebars Inspection	6B-5	Malfunction.....	6C-25
Steering Shaft Removal and Installation.....	6B-5	DTC "C1113": Torque Sensor (Main / Sub)	
Tie-rod / Tie-rod End Removal and		Circuit Correlation Malfunction	6C-28
Installation.....	6B-8	DTC "C1114": Torque Sensor Power Supply	
Steering Related Parts Inspection	6B-9	Circuit Malfunction.....	6C-32
Specifications.....	6B-9	DTC "C1115": Torque Sensor (Sub) Circuit	
Service Data	6B-9	Malfunction.....	6C-34
Tightening Torque Specifications.....	6B-10	DTC "C1121": Vehicle Speed Signal Circuit	
Special Tools and Equipment.....	6B-10	Malfunction.....	6C-37
Recommended Service Material	6B-10	DTC "C1122": Engine Speed Signal Circuit	
Special Tool	6B-11	Malfunction.....	6C-40
Power Assisted Steering System.....	6C-1	DTC "C1141", "C1142", "C1143", "C1145"	
Precautions.....	6C-1	EPS Motor Circuit Malfunction	6C-43
Precautions for EPS.....	6C-1	DTC "C1153" EPS Control Unit Supply	
P/S System Note.....	6C-1	Voltage Circuit Malfunction	6C-45
Precautions in Diagnosing Troubles	6C-1	DTC "C1152", "C1154", "C1155" EPS Control	
General Description.....	6C-2	Unit Malfunction	6C-47
P/S System Description	6C-2	Repair Instructions	6C-47
EPS Diagnosis General Description	6C-5	EPS Control Unit Construction	6C-47
Self Diagnostic System Description	6C-5	EPS Control Unit Removal and Installation.....	6C-48
Fail-safe Function Description.....	6C-5	EPS Body Assembly Components	6C-49
Schematic and Routing Diagram.....	6C-6	EPS Body Assembly Removal and	
EPS Wiring Diagram	6C-6	Installation.....	6C-49
EPS Control Unit Diagram	6C-7	EPS Motor Inspection	6C-52
EPS System Wiring Harness Routing		Specifications.....	6C-53
Diagram	6C-8	Tightening Torque Specifications.....	6C-53
		Special Tools and Equipment	6C-53
		Recommended Service Material	6C-53
		Special Tool	6C-54

Precautions

Precautions

Precautions for Steering

B931H26000001

Refer to “**General Precautions:** in **Section 00**”.

Steering General Diagnosis

Diagnostic Information and Procedures

Steering Symptom Diagnosis

B931H26104001


Condition	Possible cause	Correction / Reference Item
Heavy Steering	Distorted steering shaft.	<i>Replace.</i>
	Improper front wheel alignment.	<i>Adjust.</i>
	Insufficiently lubricated.	<i>Lubricate.</i>
	Not enough pressure in tires.	<i>Adjust.</i>
	Worn or incorrect tire or wrong tire pressure.	<i>Adjust or replace.</i>
	Malfunctioning EPS, if equipped.	<i>Inspect EPS system.</i>
Wobbly Handlebars	Distorted front steering shaft.	<i>Replace.</i>
	Crooked tire.	<i>Replace.</i>
	Worn or incorrect tire or wrong tire pressure.	<i>Adjust or replace.</i>
	Worn bearing/race in steering stem.	<i>Replace.</i>
	Worn steering shaft holder bushing.	<i>Replace.</i>
	Worn steering knuckle ends or ball stud.	<i>Replace.</i>
	Worn front wheel hub bearings.	<i>Replace.</i>

Steering / Handlebar

Repair Instructions

Steering / Handlebars Components


B931H26206001

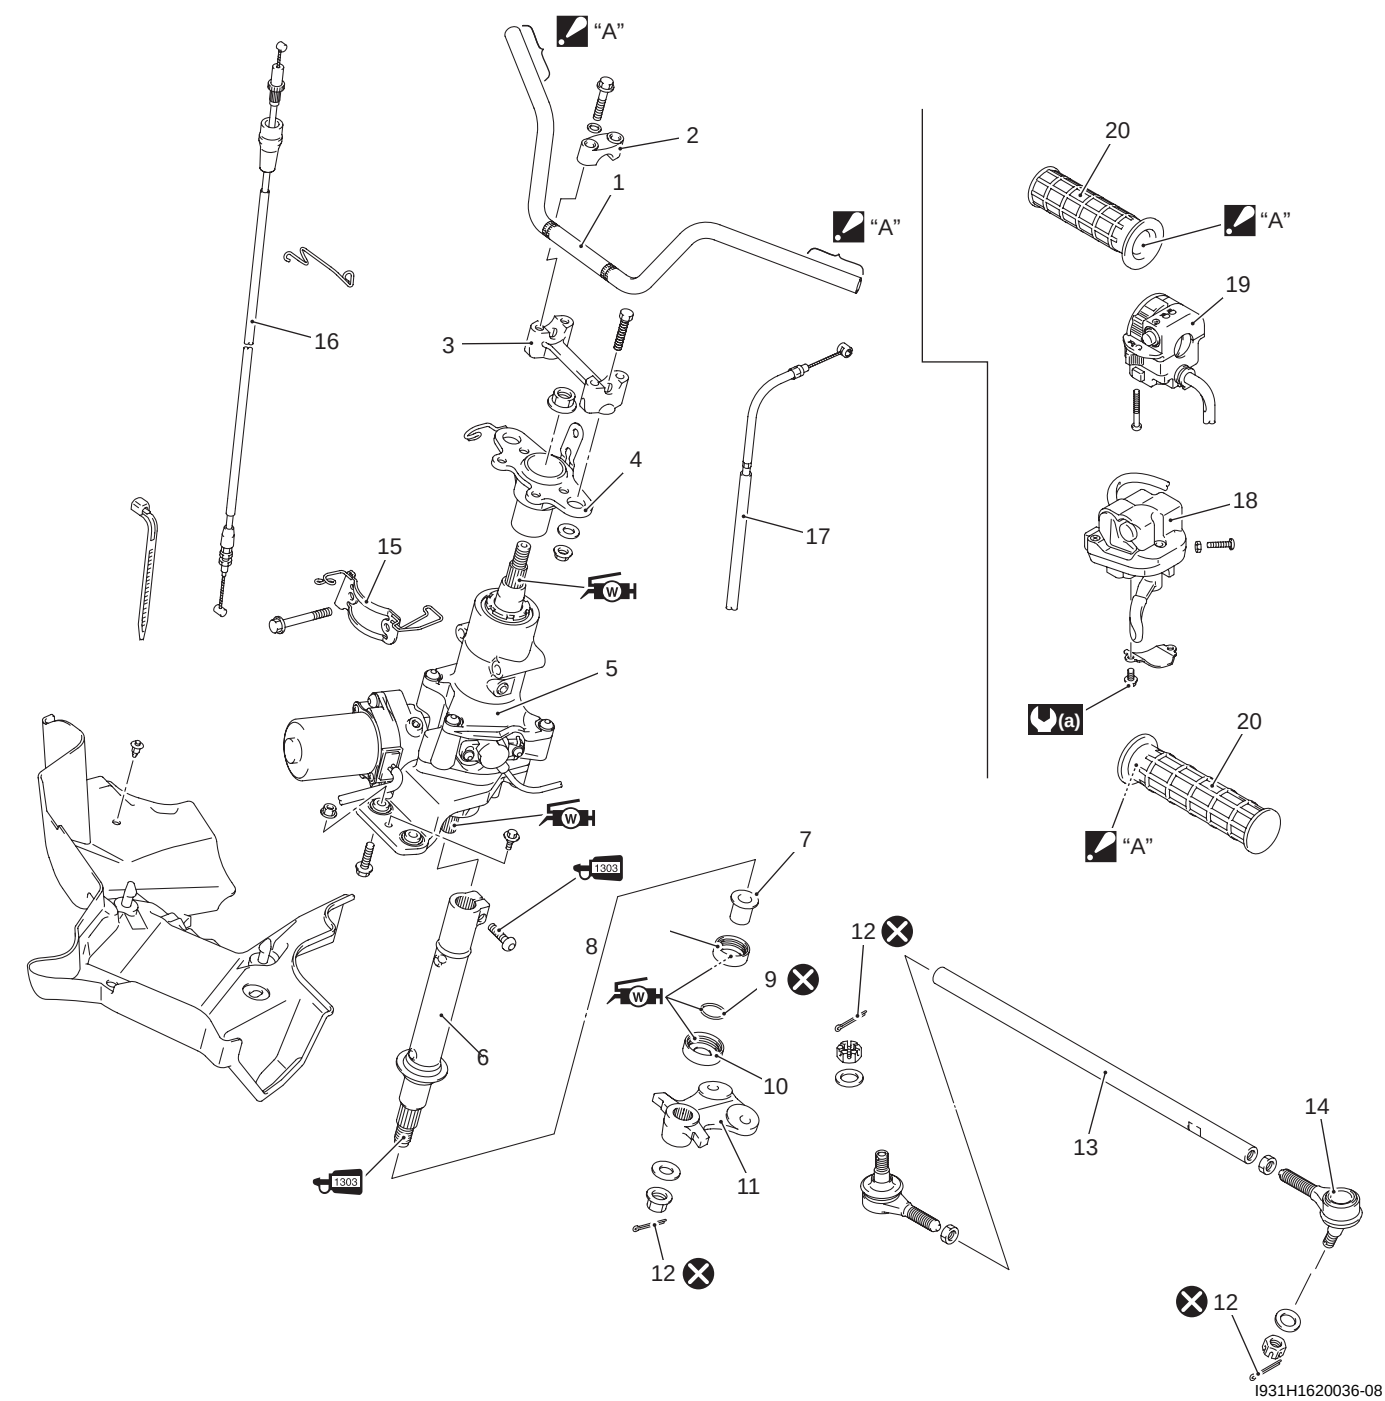

1. Handlebars	10. Lower dust seal	19. Handlebar left switch assembly
2. Handlebar upper clamp	11. Steering arm plate	20. Handle grip
3. Handlebar holder	12. Cotter pin	"A": Apply grip bond.
4. Steering shaft plate	13. Tie-rod	(a) : 4 N·m (0.4 kgf·m, 3.0 lbf·ft)
5. EPS body assembly	14. Tie-rod end	1303 : Apply thread lock to the thread part.
6. Steering shaft	15. Cable guide	WH : Apply water resistance grease.
7. Steering shaft bushing	16. Throttle cable	X : Do not reuse.
8. Dust seal	17. Parking brake cable	
9. O-ring	18. Throttle case assembly	

Steering / Handlebars Assembly Construction

B931H26206002

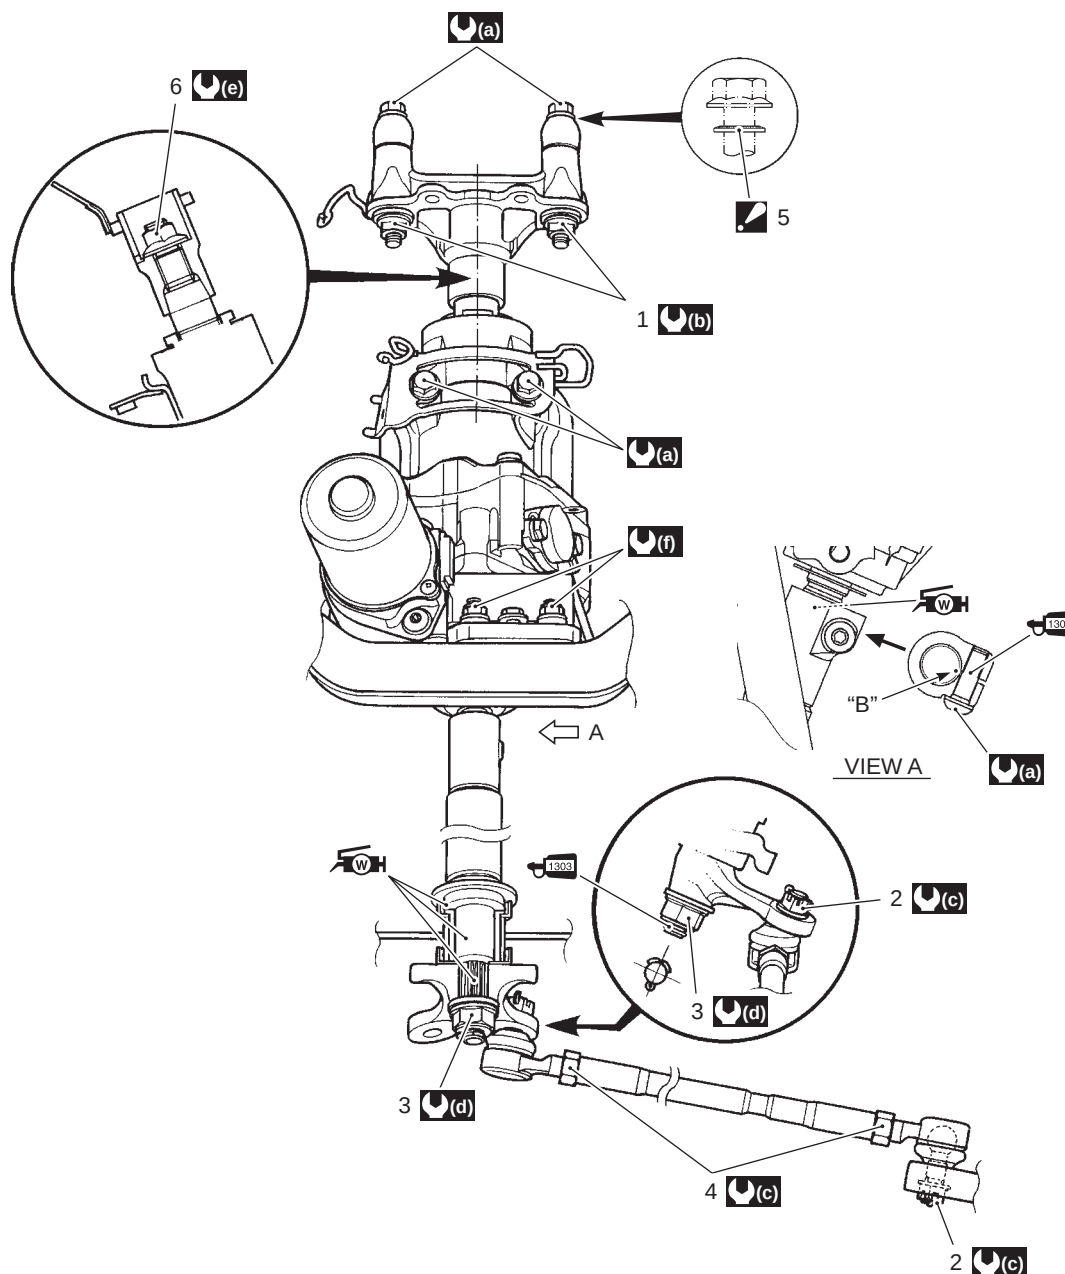

I931H1620037-06

1. Handlebar holder nut	(b) : 60 N·m (6.0 kgf-m, 43.5 lbf-ft)
2. Tie-rod end nut	(c) : 29 N·m (2.9 kgf-m, 21.0 lbf-ft)
3. Steering shaft lower nut	(d) : 162 N·m (16.2 kgf-m, 117.0 lbf-ft)
4. Tie-rod nut	(e) : 120 N·m (12.0 kgf-m, 87.0 lbf-ft)
5. Washer : The conical side of washer faces outside.	(f) : 28 N·m (2.8 kgf-m, 20.0 lbf-ft)
6. Steering shaft upper nut	1303 : Apply thread lock to the thread part.
"B": Red mark	WH : Apply water resistance grease.
(a) : 26 N·m (2.6 kgf-m, 19.0 lbf-ft)	

Handlebars Removal and Installation

B931H26206003

Removal

- 1) Remove the combination meter. Refer to “Combination Meter Removal and Installation: in Section 9C”.
- 2) Remove the clamp.
- 3) Disconnect the brake hose from the hose guide.




I931H1620001-01

- 4) Remove the following parts from the handlebars (right side).
 - a) Right grip (1)
 - b) Front brake master cylinder/Front brake lever (2)

⚠ CAUTION


Do not turn the front brake master cylinder upside down.

- c) Throttle lever case (3)

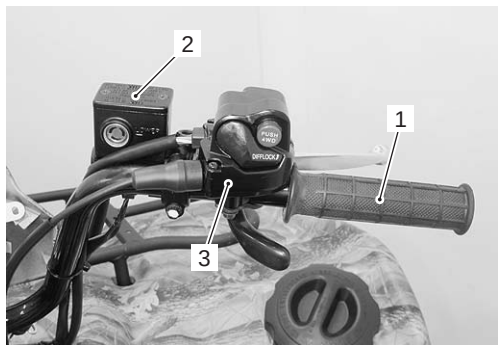


I931H1620002-01

- 5) Remove the following parts from left handlebars (left side).
 - a) Left grip (4)
 - b) Left switch box (5)
 - c) Horn button (For P-17, 24)
 - d) Emergency switch (For P-17)

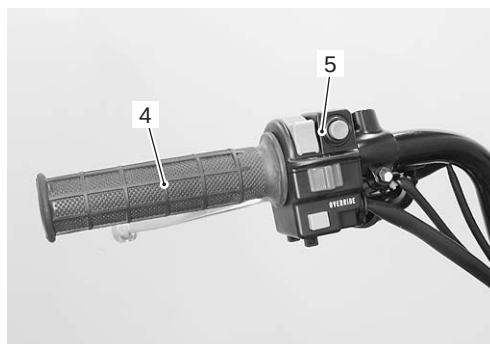

I931H1620003-01

- 6) Disconnect the parking brake cable (6) from left brake lever.

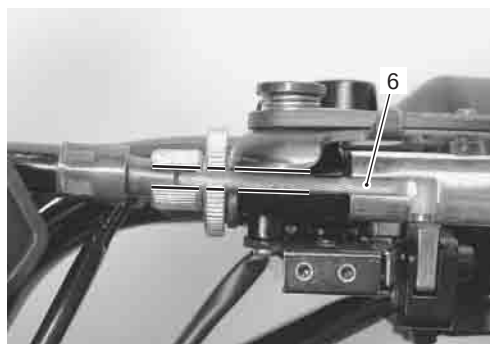


I931H1620004-01

- 7) Remove the clamp.




I931H1620007-01

- 8) Remove the handlebar upper clamps (7) and handlebars (8).

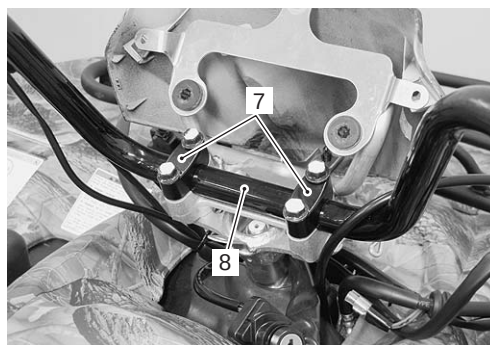

I931H1620005-02

- 9) Remove the left brake lever (9) from the handlebars (left side).

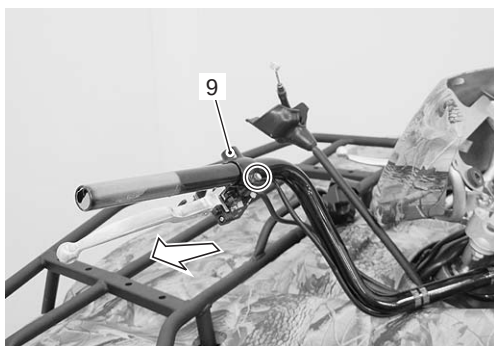

I931H1620006-01


Installation

Install the handlebars in the reverse order of removal. Pay attention to the following points:

- Install the left brake lever (1) to the handlebars.
- Align the punch mark "A" on the handlebars with the mating surface "B" of rear brake lever (1).
- Tighten the rear brake lever holder clamp bolt (2) to the specified torque.


Tightening torque

Rear brake lever holder clamp bolt (a): 11 N·m (1.1 kgf-m, 8.0 lbf-ft)

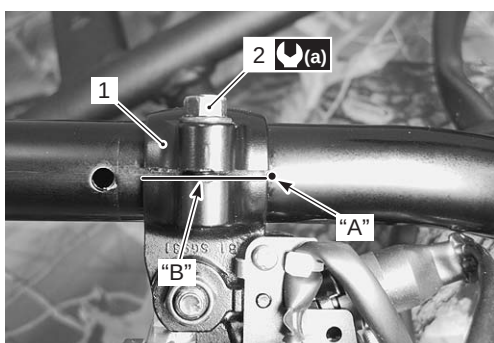

I931H1620008-01

- Install the washers (3) and bolts (4) as shown in the steering/handlebars construction. Refer to "Steering / Handlebars Assembly Construction (Page 6B-2)".
- Set the handlebars so that its punch mark "B" aligns with the mating surface of the left handlebar holder.

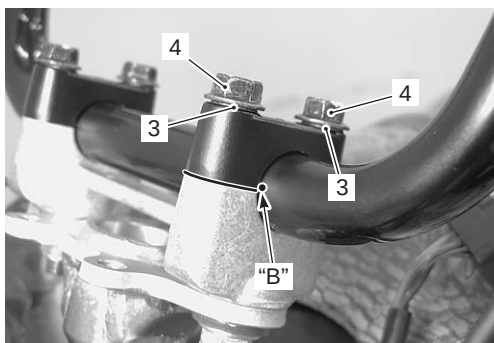

I931H1620009-02


- Tighten the handlebar clamp bolts (4) to the specified torque.

NOTE

First tighten the handlebar clamp bolts (4) (front ones) to the specified torque.

Tightening torque

Handlebar clamp bolt (b): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

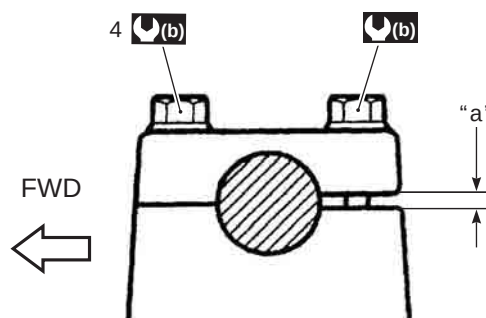


I931H1620010-01

"a": Clearance

- Apply adhesive agent to the handlebar right and left end and right and left grip inner wall.

■BOND : Handle grip bond (Handle Grip Bond (commercially available))

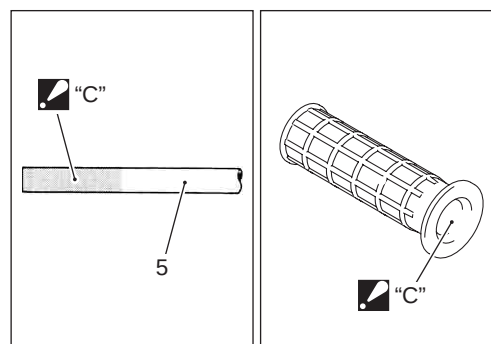

I831G1620014-02

5. Handlebar

■ "C": Apply handle grip bond.


- Insert the projection "D" of the left handlebar switch assembly into the hole of the handlebars.



I931H1620011-01


6B-5 Steering / Handlebar:

- Tighten the left handlebar switch screws (6).

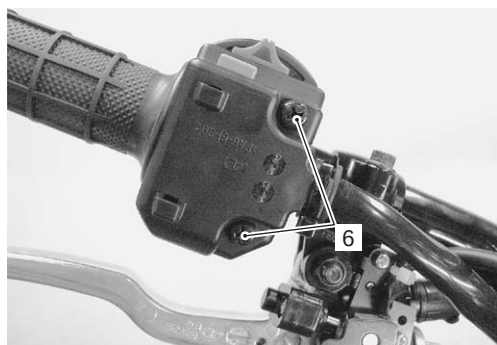

I931H1620040-01

- Install the master cylinder. Refer to **“Front Brake Master Cylinder Assembly Removal and Installation: in Section 4A”**.
- Align the punch mark “E” on the handlebars with the mating surface “F” of the throttle lever case.

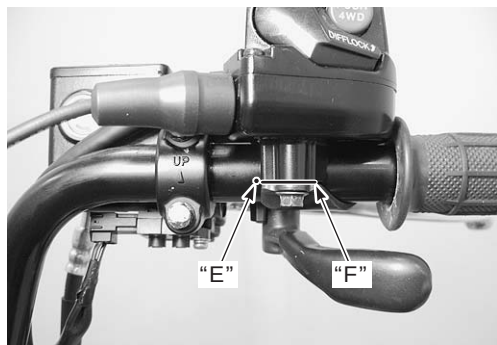

I931H1620013-02

- Tighten the throttle lever case bolts (7) to the specified torque.

Tightening torque

Throttle lever case bolt (c): 4 N·m (0.4 kgf-m, 3.0 lbf-ft)



I931H1620014-04


Handlebars Inspection

B931H26206004

Refer to “Handlebars Removal and Installation (Page 6B-3)”.

Inspect the handlebars for distortion or damage.

If any defects are found, replace the handlebars with a new one.

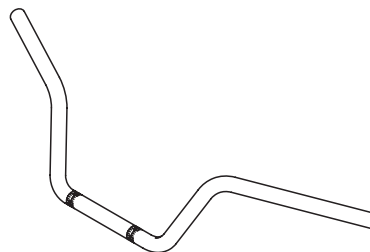

I931H1620038-01

Steering Shaft Removal and Installation

B931H26206005

Removal

- 1) Remove the EPS control unit. Refer to **“EPS Control Unit Removal and Installation: in Section 6C”**.
- 2) Remove the EPS body assembly. Refer to **“EPS Body Assembly Removal and Installation: in Section 6C”**.
- 3) Disconnect the tie-rod ends with the special tool. Refer to **“Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B”**.

⚠ WARNING

When using the tie-rod end remover, keep clear of the tie-rod end because it may come loose with some force and could strike you.


Special tool

TOOL (A): 09942-72410 (Tie-rod end remover)




I931H1620015-01

- 4) Remove the cotter pin (1), nut (2) and washer (3).

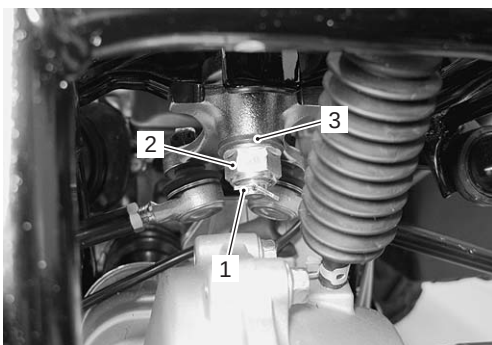


I931H1620016-01

- 5) Remove the steering arm plate (4) and steering shaft (5).

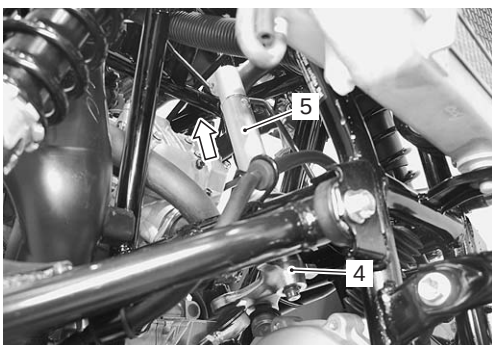

I931H1620017-01

- 6) Remove the lower dust seal (6) and O-ring (7).

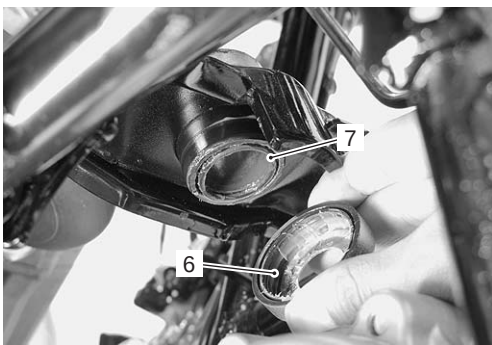


I931H1620018-01

- 7) Remove the steering shaft bushing (8) and dust seal (9) with the special tools and suitable socket wrench.


Special tool

(B): 09924-84521 (Bearing installer set)

(C): 09930-30721 (Rotor remover)

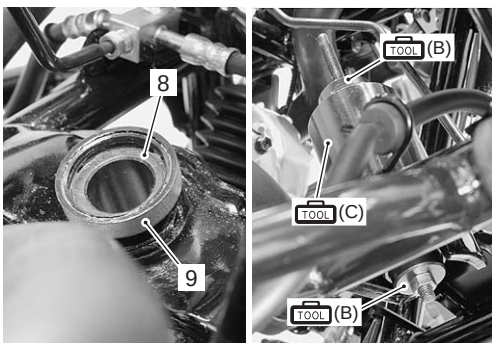

I931H1620019-03

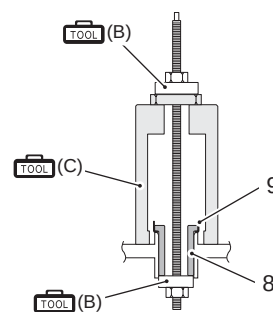

I931H1620020-02


Installation

Install the steering shaft in the reverse order of removal. Pay attention to the following points:

- Install the steering shaft bushing (1) along with dust seal (2) with the special tool.

Special tool


(A): 09924-84521 (Bearing installer set)

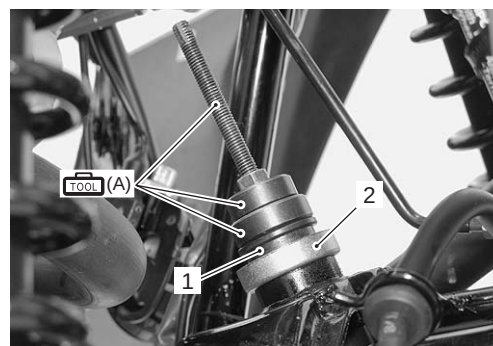

I931H1620021-02

- Apply grease to the steering shaft bushing (1) and dust seal (2) and install them.

: Grease 99000-25160 (Water resistance grease)

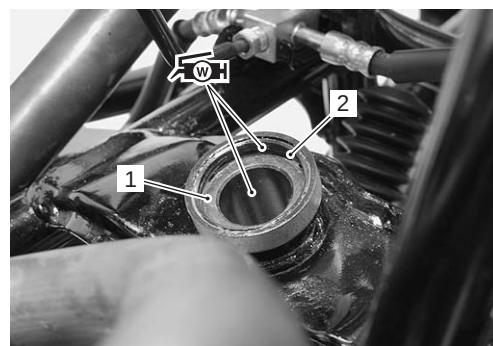

I931H1620022-01


6B-7 Steering / Handlebar:

- Apply grease to the lower dust seal (3) and O-ring (4).

CAUTION

The removed O-ring must be replaced with a new one.

 : Grease 99000-25160 (Water resistance grease)

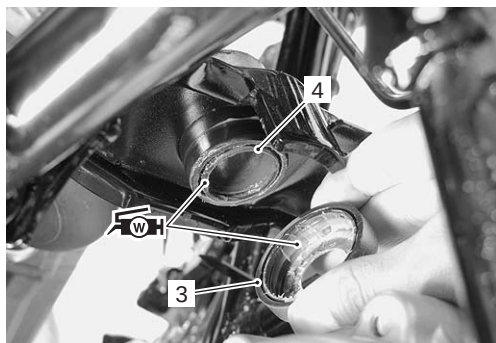

I931H1620023-01


- Apply grease to the steering shaft.

 : Grease 99000-25160 (Water resistance grease)



I931H1620024-03

- Install the steering shaft.
- When installing the steering arm plate (5), align the wide spline "A" of steering shaft (6) with the wide spline "B" of steering arm plate (5).

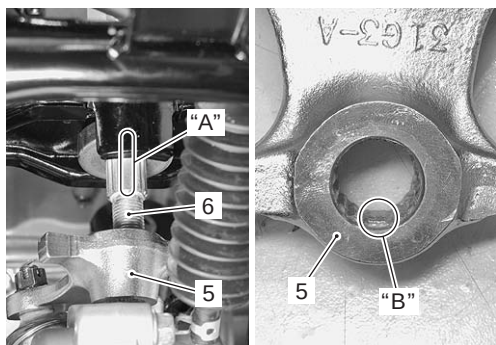

I931H1620025-03


- Apply a small quality thread lock to the thread part of steering shaft.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

- Tighten the steering shaft lower nut (7) to the specified torque.

Tightening torque

Steering shaft lower nut (a): 162 N·m (16.2 kgf·m, 117.0 lbf·ft)

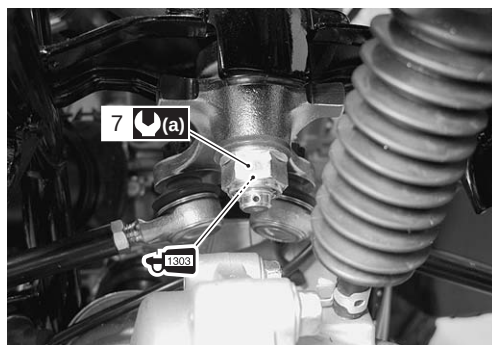


I931H1620026-02

- Install the cotter pin (8).

CAUTION

The removed cotter pin (8) must be replaced with a new one.

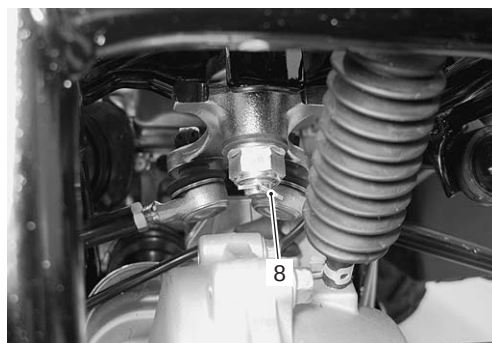

I931H1620027-01

- Install EPS body assembly. Refer to "EPS Body Assembly Removal and Installation: in Section 6C".
- Install the EPS control unit. Refer to "EPS Control Unit Removal and Installation: in Section 6C".
- Install the handlebars. Refer to "Handlebars Removal and Installation (Page 6B-3)".
- Install the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- Install the front wheels. Refer to "Front / Rear Wheel Removal and Installation: in Section 2D".
- After installing these parts, adjust the toe. Refer to "Toe Adjustment: in Section 0B".

Tie-rod / Tie-rod End Removal and Installation

B931H26206006

⚠ WARNING


When using the tie-rod end remover, keep clear of the tie-rod end because it may come loose with some force and could strike you.

Removal

- 1) Remove the tie-rod end with the special tool. Refer to "Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B".

Special tool

 (A): 09942-72410 (Tie-rod end remover)

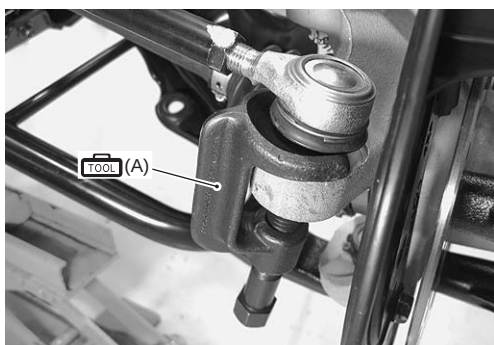

I931H1620028-01

- 2) Remove the cotter pin, tie-rod end nut and washer.




I931H1620029-01

- 3) Remove the steering arm plate (1) with a special tool.

Special tool

 (A): 09942-72410 (Tie rod end remover)

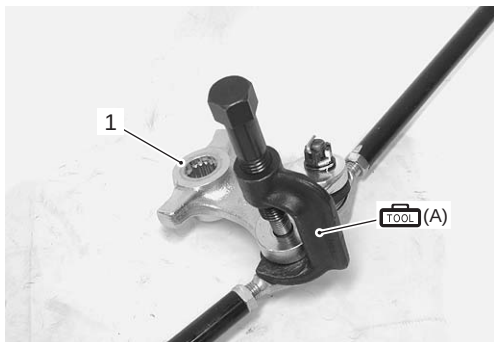


I931H1620030-01

- 4) Remove the other tie-rod end in the same manner as described previously.
- 5) Separate the tie-rod ends (2), nuts (3),(4) and tie-rods (5).

⚠ CAUTION

The lock-nuts (3) have left-hand threads.

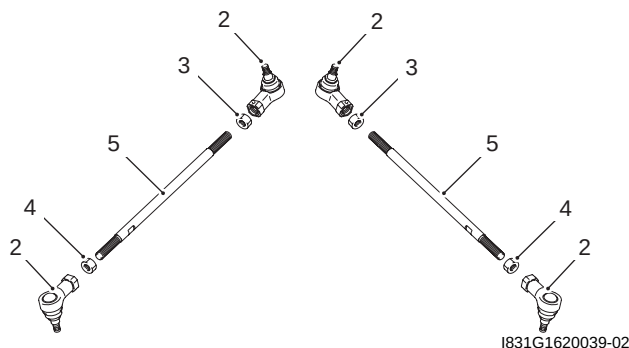

I831G1620039-02

Installation

Install the tie-rod in the reverse order of removal. Pay attention to the following points:

- When installing the tie-rods, make sure the short side "a" of tie-rod come outside.
- Push the tie-rod to tie-rod lock-nut tightening direction.
- Tighten the lock-nuts to the specification.

⚠ CAUTION


When tightening the lock-nuts, hold the tie-rod end with a open end wrench.

NOTE

The lock-nuts (1) have left-hand threads.

Tightening torque

Tie-rod lock-nut (a): 29 N·m (2.9 kgf-m, 21.0 lbf-ft)

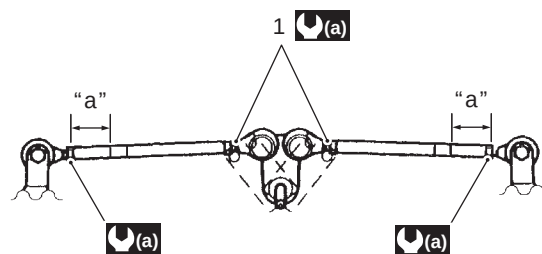

I831G1620040-03

6B-9 Steering / Handlebar:

- Install the washers (2) and tighten the rod end nuts (3) (steering arm plate side) to the specified torque.


Tightening torque

Tie-rod end nut (b): 29 N·m (2.9 kgf-m, 21.0 lbf-ft)

- Install the cotter pins (4).

⚠ CAUTION

The removed cotter pins (4) must be replaced with new ones.

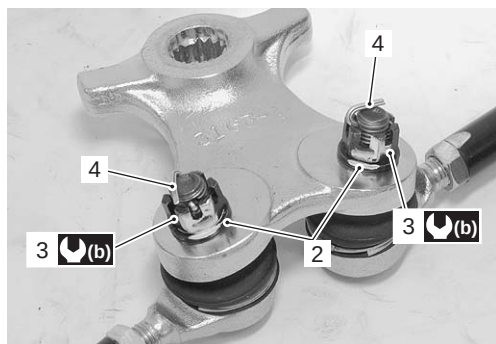

I931H1620031-02

- Install the tie-rod ends (steering knuckle side). Refer to **“Front Wheel Hub / Steering Knuckle Removal and Installation: in Section 2B”**.
- After installed wheels, inspect the toe-out. If the toe-out is out of specification, bring it into the specified range. Refer to **“Steering System Inspection: in Section 0B”** and **“Toe Adjustment: in Section 0B”**.

Steering Related Parts Inspection

B931H26206007

Refer to “Steering Shaft Removal and Installation (Page 6B-5)” and “Tie-rod / Tie-rod End Removal and Installation (Page 6B-8)”.

Tie-rod

Inspect the tie-rod for distortion or damage. If any defects are found, replace the tie-rod with a new one.



I931H1620032-01

Tie-rod End

Inspect the tie-rod ends for smooth movement. If there are any abnormalities, replace the tie-rod ends with new ones. Inspect the tie-rod end boots for wear or damage. If any defects are found, replace the tie-rod ends with new ones.



I931H1620033-01

Steering Shaft


Inspect the steering shaft for distortion or bend. If any defects are found, replace the steering shaft with a new one.



I931H1620034-01

Steering Shaft Bushing and Dust Seal

Inspect the steering shaft bushing (1), dust seal (2) and lower dust seal (3) for wear or damage. If any defects are found, replace them with new ones.

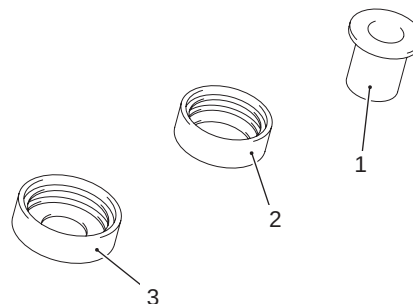

I931H1620035-01

Specifications

Service Data

B931H26207001

Wheel

Unit: mm

Item	Standard	Limit
Steering angle	46° (right & left)	—
Turning radius	3.1 m (10.2 ft)	—
Toe-out (with 75 kg, 165 lbs)	5 ± 4 mm (0.20 ± 0.16 in)	—
Camber	-1.3°	—
Caster	3.7°	—

Tightening Torque Specifications

B931H26207002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Rear brake lever holder clamp bolt	11	1.1	8.0	☞ (Page 6B-4)
Handlebar clamp bolt	26	2.6	19.0	☞ (Page 6B-4)
Throttle lever case bolt	4	0.4	3.0	☞ (Page 6B-5)
Steering shaft lower nut	162	16.2	117.0	☞ (Page 6B-7)
Tie-rod lock-nut	29	2.9	21.0	☞ (Page 6B-8)
Tie-rod end nut	29	2.9	21.0	☞ (Page 6B-9)

NOTE

The specified tightening torque is described in the following.

“Steering / Handlebars Components (Page 6B-1)”

“Steering / Handlebars Assembly Construction (Page 6B-2)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Special Tools and Equipment**Recommended Service Material**

B931H26208001

Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease	P/No.: 99000-25160	☞ (Page 6B-6) / ☞ (Page 6B-7) / ☞ (Page 6B-7)
Handle grip bond	Handle Grip Bond (commercially available)	—	☞ (Page 6B-4)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000-32030	☞ (Page 6B-7)

NOTE




Required service material is also described in the following.

“Steering / Handlebars Components (Page 6B-1)”

“Steering / Handlebars Assembly Construction (Page 6B-2)”

Special Tool

B931H26208002

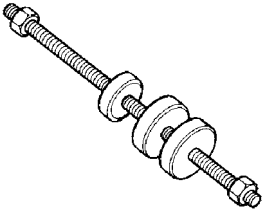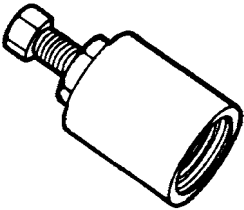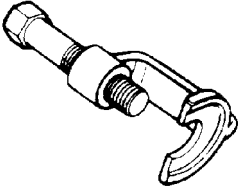09924-84521 Bearing installer set (Page 6B-6) / (Page 6B-6)		09930-30721 Rotor remover (Page 6B-6)	
09942-72410 Tie-rod end remover (Page 6B-5) / (Page 6B-8) / (Page 6B-8)			

Power Assisted Steering System

Precautions

Precautions for EPS

B931H26300001

Refer to "Precautions for Electrical Circuit Service: in Section 00".

NOTE

When repairing EPS system, remove the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".

P/S System Note

B931H26300002

⚠ CAUTION

Never remove the torque sensor to prevent accident and damage.

NOTE

EPS body assembly fasteners are important attaching parts in that they could affect the performance of vital parts and systems, and/or could result in major repair expense. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of these parts.

Precautions in Diagnosing Troubles

B931H26300003

- Take a note of DTC indicated on the SDS tool or EPS indicator light.
- Before inspection, be sure to read "Precautions for Electrical Circuit Service: in Section 00" and understand what is written there.
- DTC C1122 (engine speed signal failure) is indicated when ignition switch is at ON position and engine is not running, but it means there is nothing abnormal if indication changes to a normal one when engine is started.
- As DTC is stored in memory of the EPS control unit, be sure to clear memory after repair by performing the procedure described in "DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)".


General Description

P/S System Description

B931H26301001

This electronic power steering (EPS) system consists of a EPS control unit (2), a torque sensor (3), a EPS motor (4). In this system, the EPS control unit determines the level and direction of the assist force for the handlebars (1) according to the signal from the torque sensor and the vehicle speed signal from speed sensor (9). The EPS control unit runs the motor so as to assist the operation of the handlebars (1). Take a note of DTC indicated on the EPS indicator light.

The EPS diagnoses troubles which may occur in the area including the following components when the ignition switch is ON and the engine is running. When the EPS control unit detects any malfunction, it stops the motor operation.

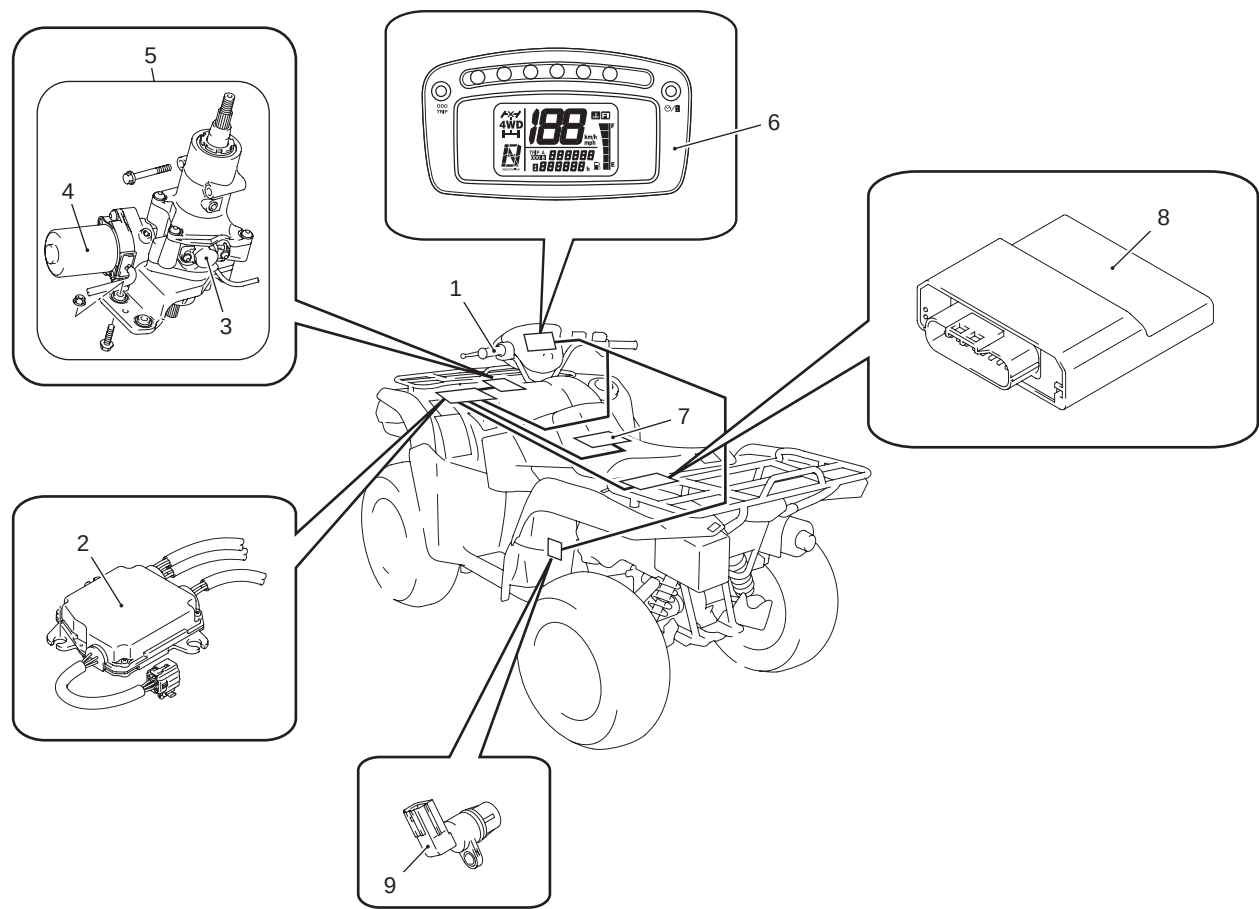

I931H1630001-04


1. Handlebars	3. Torque sensor	5. EPS body assembly	7. Battery	9. Speed sensor
2. EPS control unit	4. EPS motor	6. Combination meter	8. ECM	

Detecting Principle


The column shaft is connected to the input shaft by means of serration. The output shaft and input shaft are connected via torsion bar. When torque is inputted from the column shaft, a relative angular displacement occurs between the input shaft and the output shaft due to twist of the torsion bar. As the sleeve is engaged with a fixed pin, such an angular displacement of the sleeve is converted to a linear displacement due to helical spline arrangement. By the return spring of torque sensor lever, the sleeve is always forced to one side within its annular groove. The sleeve's linear displacement causes the torque sensor lever to turn, which is then converted to a voltage signal to supply to EPS control unit.

The torque sensor is a double circuit of main and sub, when the handlebars is in neutral position (no torsional torque applied to the steering wheel), each torque sensor (main and sub) output is 2.5 V and in this state the EPS control unit determines the steering torque as 0. During operating the handlebars, the EPS control unit processes the main torque sensor input signal to determine the steering torque required for the current condition. The relation between the steering direction of the EPS control unit and the output voltage is as follows: The direction is determined to be right turn steering "a" if the main torque sensor output voltage is lower than 2.5 V and to be left turn steering if the voltage is higher than 2.5 V for controlling the steering direction in the case of normal steering operation.

Conversely, the direction is determined to be left turn steering "b" if the sub torque sensor output voltage is lower than 2.5 V and to be right turn steering if the voltage is higher than 2.5 V for controlling the steering direction.

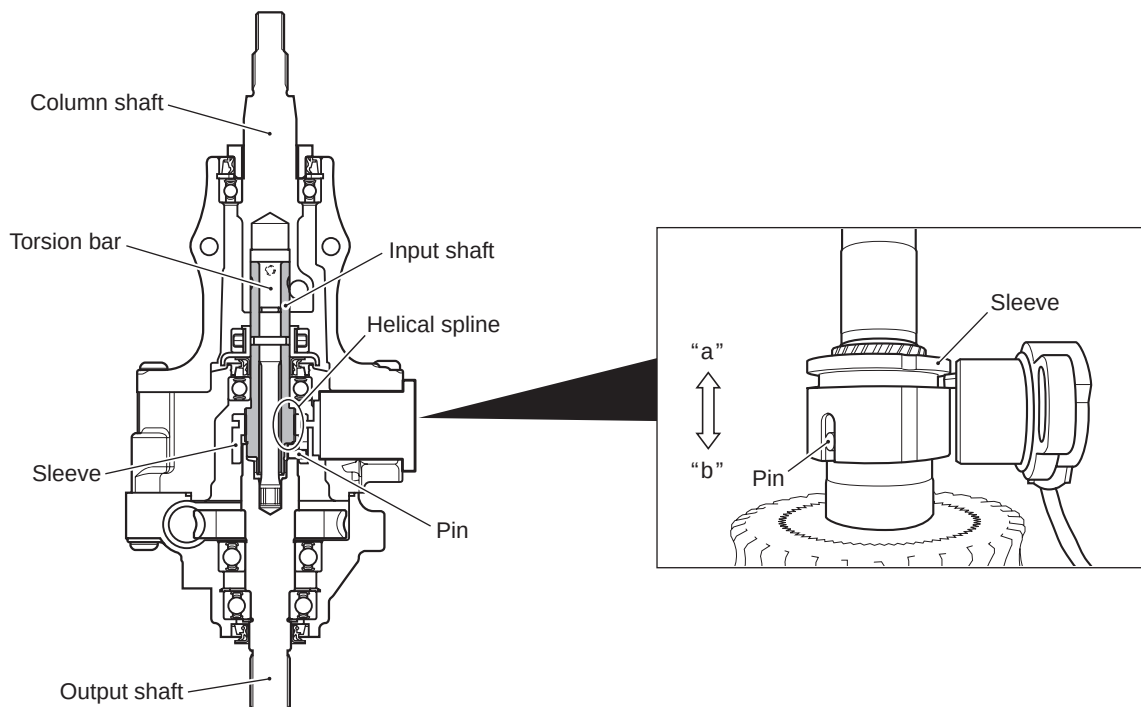

I931H1630002-05

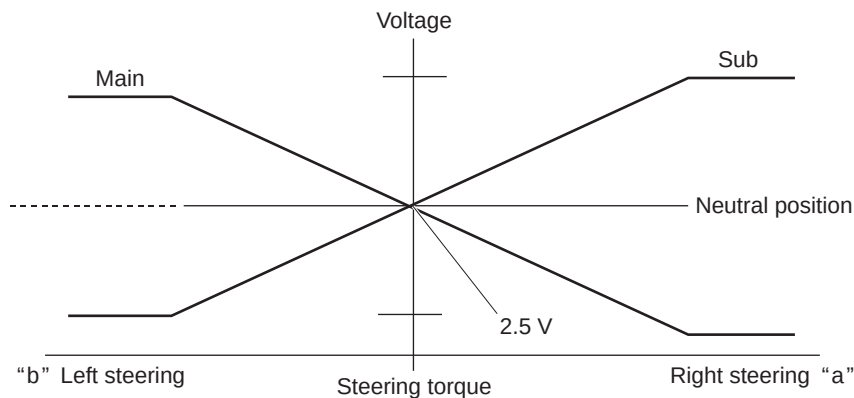


I931H1630003-02

6C-4 Power Assisted Steering System:

Control System

In the EPS control unit, the steering assist control determines the basic power assist force and the convergence control improves the steering operation feeling. The controller determines the target motor current by the calculation of these controls and the maximum current limiting control and it also regulates the motor current so that the target motor current and the actual current are matched.

Power steering control input / output flow chart

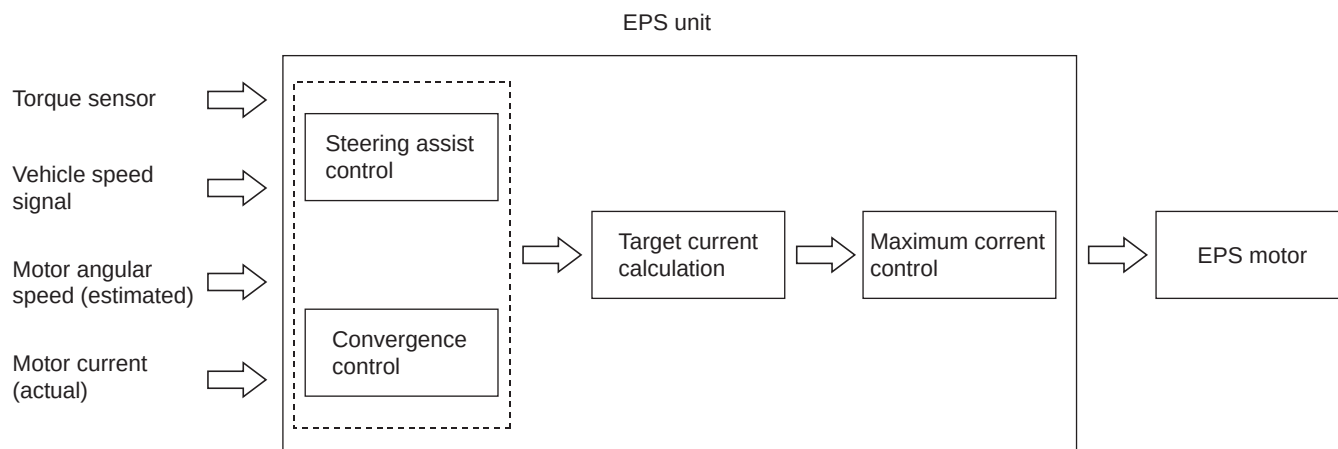

I931H1630004-05

Control	Description
Steering assist control	This control determines the steering assist current on the basis of steering torque as detected by the torque sensor and of speed signal supplied from the speed sensor. This is the fundamental control necessary for the P/S system.
Convergence control	This control prevents convergence from deteriorating at a high speed by making current (compensating current) flow in the direction to keep the steering from turning, thereby improving vehicle maneuvering stability.
Maximum current control	If the steering input is sustained at a standstill, the motor continues to draw the maximum current for full-assist and the motor and EPS control unit may get overheated. To prevent this condition from occurring, this control limits and gradually reduces the maximum current flowing through the motor.
Failsafe control	In the EPS control unit, a failsafe function is integrated in the motor circuit for the purpose of safety. With the failsafe circuit in normal condition, the system is ON for the motor to draw current. If an abnormal condition is detected in the P/S system by the self-diagnostic function, the system turns OFF the circuit to interrupt the current supply to the motor so that the system can stop operation. Refer to "Fail-safe Function Description (Page 6C-5)".

EPS Diagnosis General Description

B931H26301002


The P/S system in this vehicle is controlled by the EPS control unit. The EPS control unit has a self diagnostic system which detects a malfunction in this system. When diagnosing troubles, be sure to have full understanding of the outline of "Self Diagnostic System Description (Page 6C-5)" and each item in "Precautions in Diagnosing Troubles (Page 6C-1)", and then execute diagnosis according to "EPS System Check (Page 6C-11)".

Self Diagnostic System Description

B931H26301003

The EPS control unit performs the self diagnosis on the system and operates the "EPS" warning light (1) as follows.

- The "EPS" warning light lights when the ignition switch is turned to ON position (but the engine at stop) regardless of the condition of the P/S control system. This is only to check if the "EPS" warning light is operated properly.
- If the areas monitored by the EPS control unit is free from any trouble after the engine start (while engine is running), the "EPS" warning light turns OFF.
- When the EPS control unit detects a trouble which has occurred in the monitored areas the "EPS" warning light comes ON while the engine is running to warn the driver of such occurrence of the trouble and at the same time it stores the exact trouble area in memory inside of the EPS control unit.

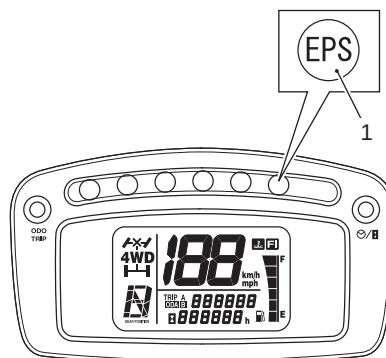

I931H1630005-01

Fail-safe Function Description

B931H26301004


If malfunction occurs in the EPS system, this sets fail-safe relay OFF. Consequently, the indicator light ON, and no current will be applied to motor solenoid valve inactivating EPS and turning EPS indicator light ON. In this case, it functions as the normal steering. If malfunctions occurs while EPS is being activated, the fail-safe relay will be set OFF. Refer to "EPS Control Unit Diagram (Page 6C-7)".

Schematic and Routing Diagram

EPS Wiring Diagram

Refer to “Wire Color Symbols: in Section 0A”.

B931H26302001

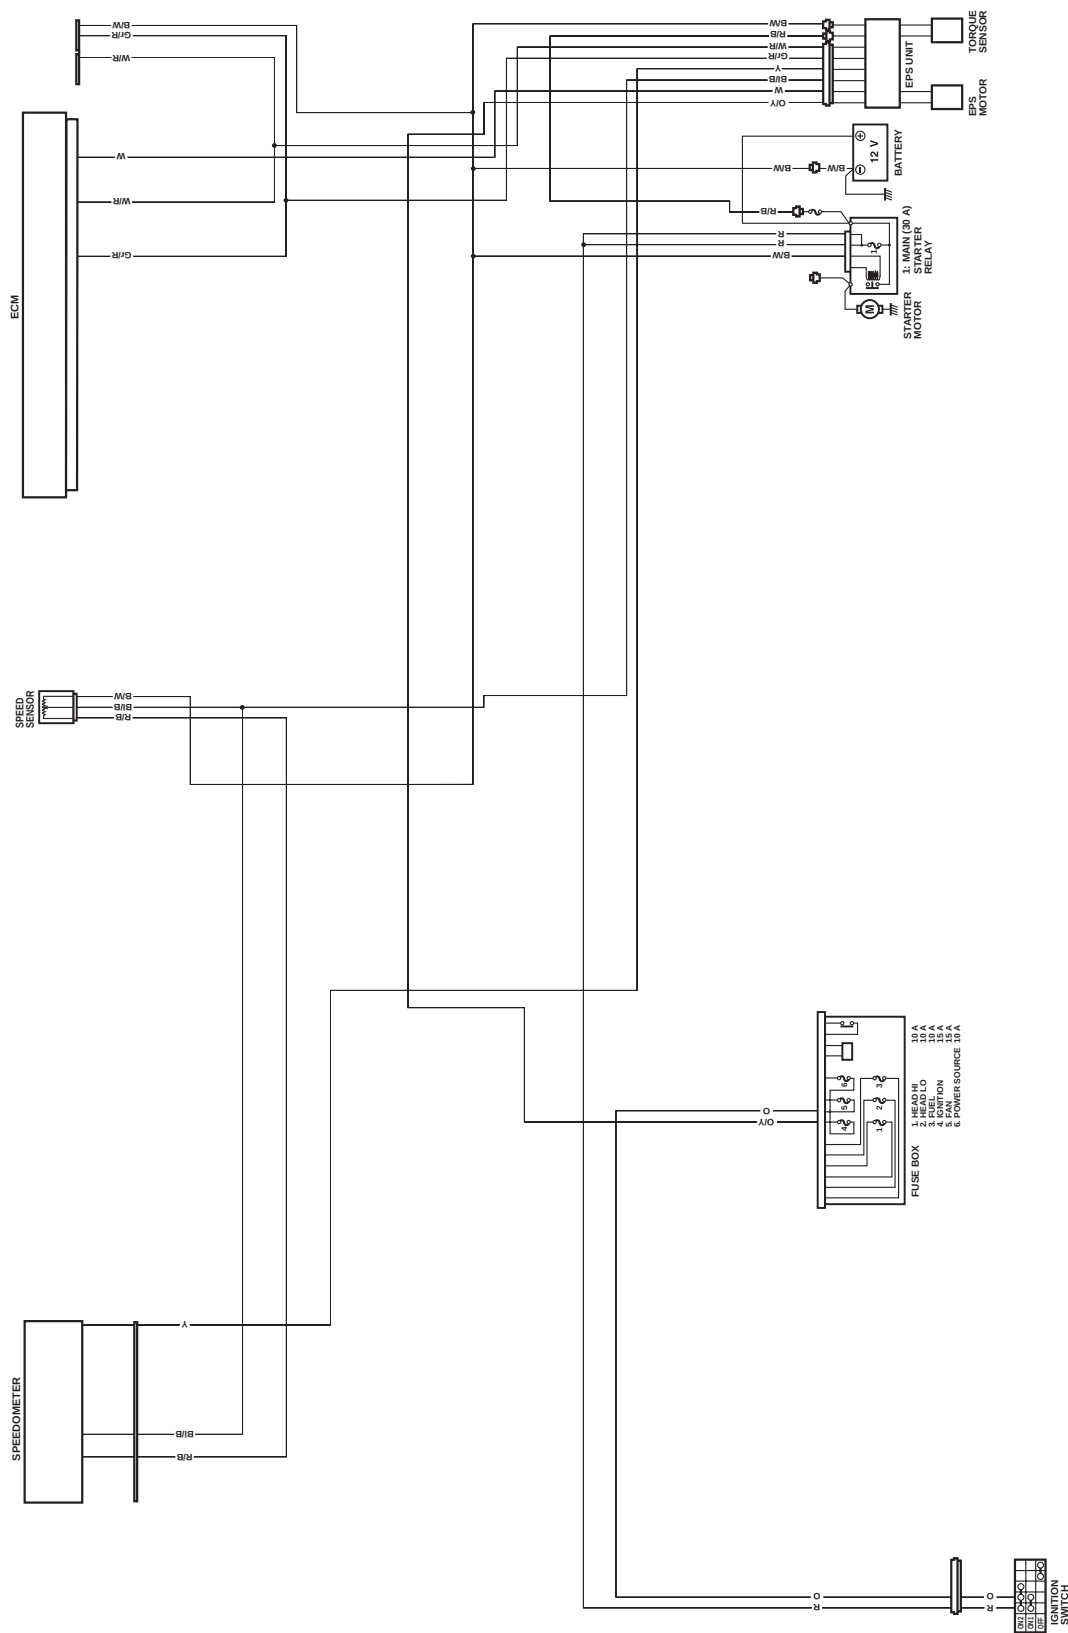


I931H2630001-01

EPS Control Unit Diagram


B931H26302002

Refer to “Wire Color Symbols: in Section 0A”.

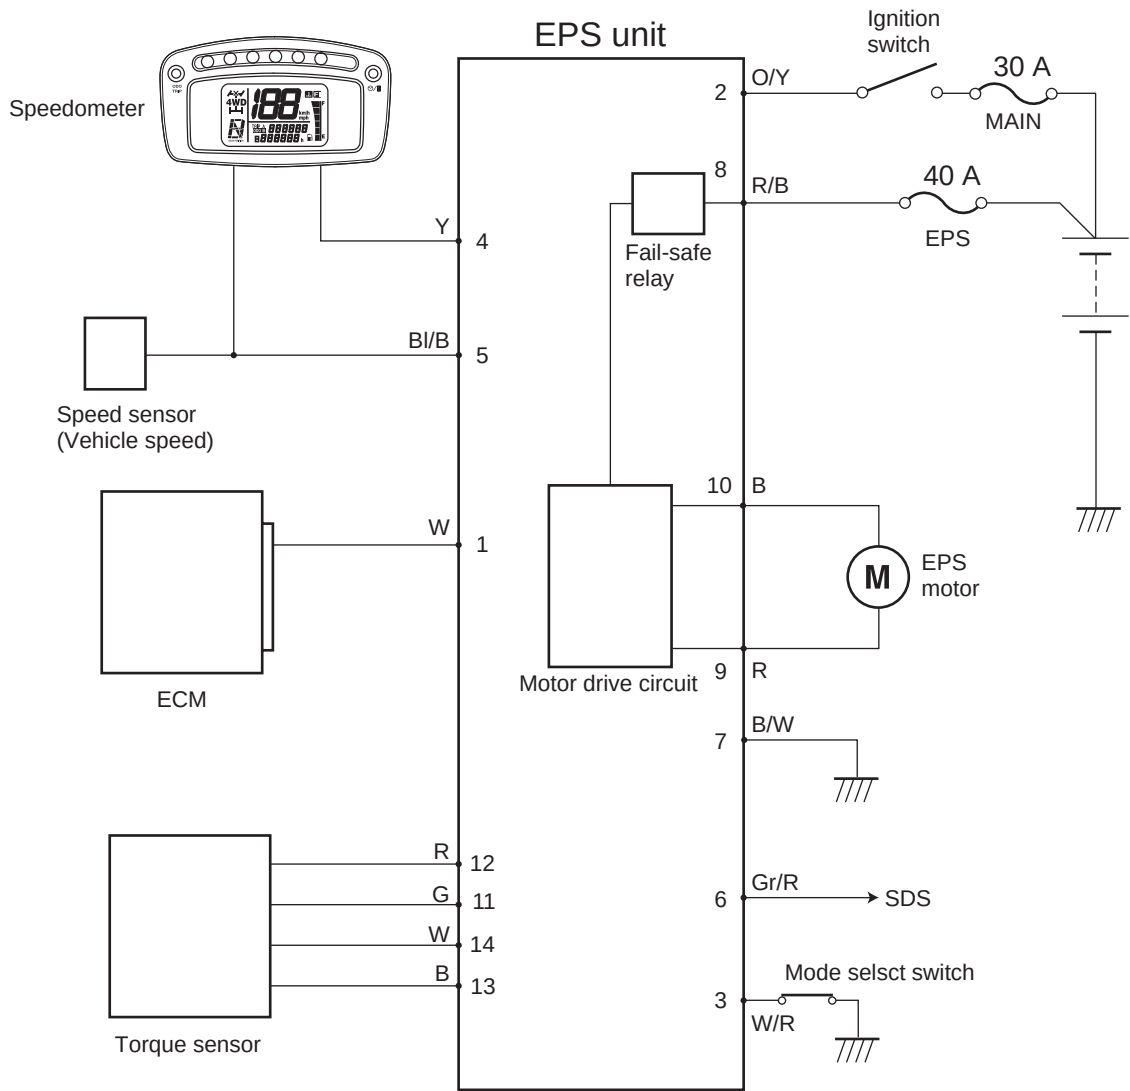

I931H1630007-05

EPS control unit coupler (EPS control unit harness end)

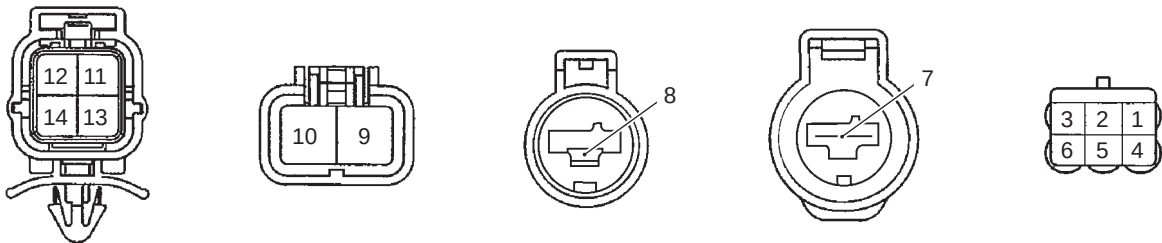

I931H1630092-01

1. Engine speed signal	8. Power source
2. Ignition signal for EPS control unit	9. Motor output (-)
3. Mode select switch	10. Motor output (+)
4. "EPS" warning light	11. Torque sensor signal (Main)
5. Vehicle speed signal	12. Power supply for torque sensor
6. SDS	13. Ground for torque sensor
7. Ground for EPS control unit	14. Torque sensor signal (Sub)

EPS System Wiring Harness Routing Diagram

B931H26302003

Refer to "Wiring Harness Routing Diagram: in Section 9A".

Component Location

EPS Components Location

B931H26303001

Refer to "Electrical Components Location: in Section 0A".

Diagnostic Information and Procedures

EPS Troubleshooting

B931H26304001

The EPS is equipped with a self-diagnosis function. The detected malfunction is stored as a diagnostic trouble code which causes the EPS indicator light to light up or flash in set patterns to indicate the malfunction.

Diagnostic trouble codes saved in the memory remain stored even through the ignition switch is turned OFF and they cannot be deleted without performing the DTC erasing procedure. In order to repair the EPS correctly, ask the customer for the exact circumstances under which the malfunction occurred, then check the EPS indicator light and the output diagnostic trouble codes. Explain to the customer that depending on how the vehicle is operated, the EPS indicator light may light up even though the EPS is operating correctly.

Troubleshooting Procedure

Troubleshooting should be proceed as follows. If the order is performed incorrectly or any part is omitted, an error in misdiagnosis may result.


- 1) Gather information from the customer.
- 2) Perform the pre-diagnosis inspection. Refer to "Pre-diagnosis Inspection (Page 6C-9)".
- 3) Inspect the EPS indicator light. Refer to "EPS System Check (Page 6C-11)".
- 4) Output the DTCs stored in the EPS control unit. Refer to "DTC (Diagnostic Trouble Code) Output (Page 6C-18)".
- 5) Perform appropriate troubleshooting procedures according to the DTCs output. Refer to "DTC Table (Page 6C-24)".
If troubleshooting procedures cannot be performed, try to determine the cause of the malfunction according to the information gathered in 1) through 4) and inspect the wiring. Refer to "EPS Wiring Diagram (Page 6C-6)" and "EPS Control Unit Diagram (Page 6C-7)".

⚠ CAUTION

Each time a resistance is measured, the ignition switch should be set to OFF.

- 6) Inspect the EPS components. Refer to "EPS Motor Inspection (Page 6C-52)".
- 7) Delete the DTCs and check the power steering operation. Refer to "DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)".

Basic Troubleshooting Diagram

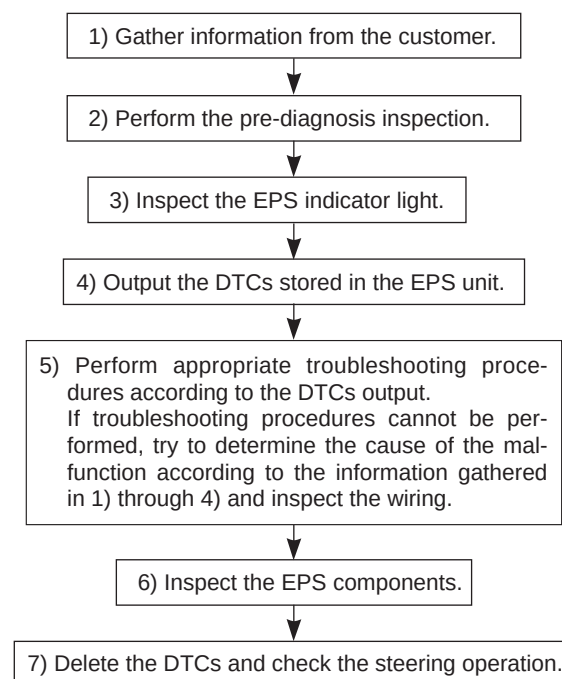

I931H1630008-02

Information Gathering

To properly diagnose a malfunction, one must not make guesses or assumptions about the circumstances that caused it. Proper diagnosis and repair require duplicating the situation in which the malfunction occurred. If a diagnosis is made without duplicating the malfunction, even an experienced service technician may make a misdiagnosis and not perform the servicing procedure correctly, resulting in the malfunction not being repaired. Therefore, in order to properly diagnose and repair the vehicle, the customer must be questioned about the conditions at the time that the malfunction occurred making "Information gathering" very important. In order that the information obtained from the customer to be used as a reference during troubleshooting, it is necessary to ask certain important questions concerning the malfunction. Therefore, a questionnaire has been created to improve the information-gathering procedure.

EXAMPLE: CUSTOMER PROBLEM INSPECTION FORM

Customer's name:	Model:	VIN:	
Date of issue:	Date Reg.	Date of problem:	Mileage:
Problem Symptoms	• Handlebars feels heavy • Vehicle pulls to one side during straight driving • Poor recovery from turns • Too much play in steering • Abnormal noise while vehicle is running: from motor, other _____ • Other _____		
Frequency of Occurrence	• Continuous/Intermittent (times a day, a month)/other _____		
Conditions for Occurrence of Problem	• Vehicle at stop & ignition switch ON: • When starting: at initial start only/at every start/Other _____ • Vehicle speed while: while accelerating/while decelerating/at stop/while turning/while running at constant speed/other _____ • Road surface condition: Paved road/rough road/snow-covered road/other _____ • Chain equipment:		
Environmental Condition	• Weather: fair/cloudy/rain/snow/other _____ • Temperature: °F (°C)		
DTC	• First check: Normal code/malfunction code () • Second check after driving test: Normal code/malfunction code ()		

I931H1630009-03

NOTE

This form is a standard sample. The form should be modified according to conditions and characteristic of each market.

Pre-diagnosis Inspection

B931H26304002

The mechanical of the steering system should be inspected prior to performing any electrical checks. These inspections may find problems that the EPS could not detect; thus, shortening repair time.

Tire

Tire type

Tire type

Front: DUNLOP KT411

Rear: DUNLOP KT415

Tire pressure

Refer to "Tire Inspection: in Section 0B".

⚠ CAUTION

The standard tire fitted on this vehicle is AT25 x 8 -12 ☆☆ for front and AT25 x 10 -12 for rear. The use of tires other than those specified may cause instability. It is highly recommended to use a SUZUKI Genuine Tire.

Steering Related Parts

Refer to “Steering Related Parts Inspection: in Section 6B”.

Battery

Battery voltage inspection

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Measure the voltage between the (+) and (–) battery terminals using the multi-circuit tester.
If the voltage is less than 12.0 V, charge or replace the battery and inspect the charging system. Refer to “**Battery Runs Down Quickly: in Section 1J**”.

Special tool


TOOL (A): 09900–25008 (Multi-circuit tester set)

Tester knob indication

Voltage (—)

Battery voltage

12.0 V and more

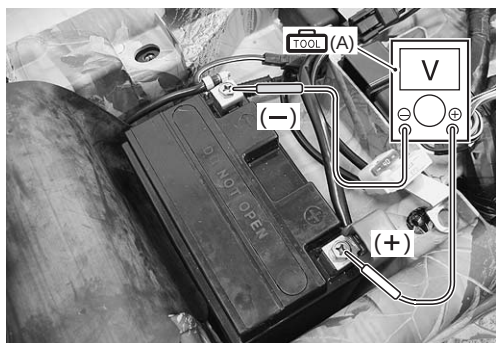


I931H1630010-01

- 4) Reinstall the seat.

EPS control unit ground wire inspection

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Disconnect the battery (–) lead wire.

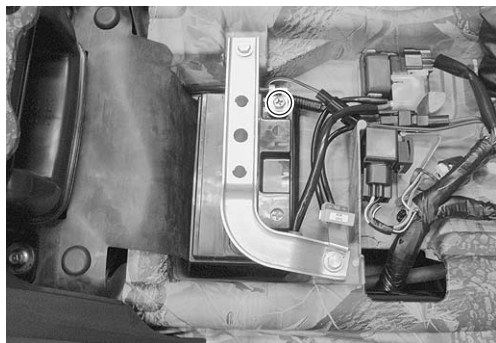

I931H1630011-01

- 4) Remove the front fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.

- 5) Disconnect the EPS control unit coupler (1).



I931H1630012-02

- 6) Check for continuity between terminal “A” at the coupler and the battery (–) terminal.


Special tool

TOOL (A): 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

EPS control unit coupler (Vehicle harness end)

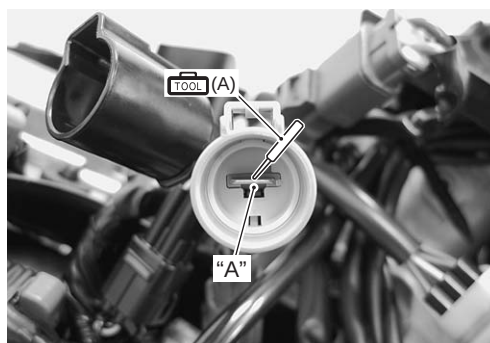

I931H1630020-01




I931H1630014-02



EPS System Check



B931H26304003

▲ WARNING


Carry out test drive in light traffic area to prevent an accident.


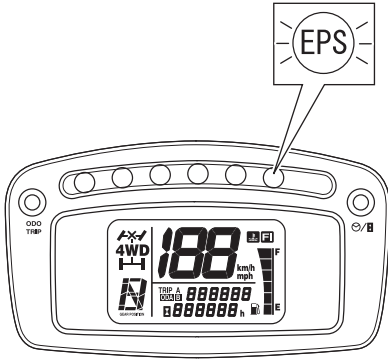
Step	Action	Yes	No
1	1) Perform "Customer Complaint Analysis". <i>Was customer complaint analysis performed according to instruction?</i>	Go to Step 2.	Perform customer complaint analysis.
2	1) Check for operation of the "EPS" warning lamp when turning the ignition switch ON. 2) If OK, start engine, run it idle and check "EPS" warning lamp remains ON continuously.  I931H1630015-02 <i>Is "EPS" warning lamp remains ON continuously?</i>	Go to Step 3.	- Go to Step 4. - DTC output (Refer to "DTC (Diagnostic Trouble Code) Output (Page 6C-18)".)
3	(The EPS indicator light lights up) 1) Start the engine. <i>Does the EPS indicator light go off?</i>	Normal (No DTC exists)	- DTC output (Refer to "DTC (Diagnostic Trouble Code) Output (Page 6C-18)".) - If DTC can not be output (the EPS indicator light does not flash), go to Step 7.

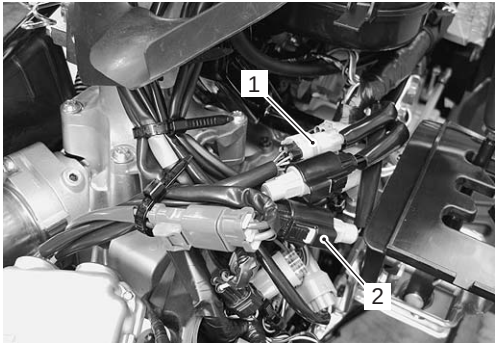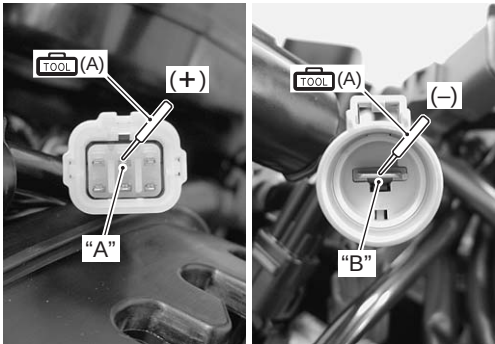Step	Action	Yes	No
4	(The EPS indicator light does not light up) 1) Turn the ignition switch OFF. 2) Disconnect the EPS control unit coupler (1) and (2).  I931H1630017-03 3) Turn the ignition switch ON with the EPS control unit coupler disconnected, measure the voltage between terminal “A” and terminal “B” at the coupler. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Normal value (“A” – “B”) Battery voltage (12.0 V and more) EPS control unit coupler (Vehicle harness end)  I931H1630022-01 <i>Is the voltage between “A” and “B” normal?</i>	Go to Step 5.	Inspect the wire harness. (Faulty ignition or ground wire)

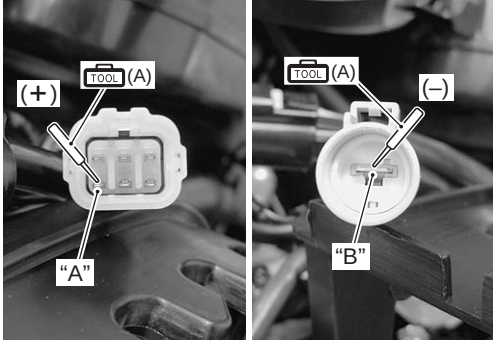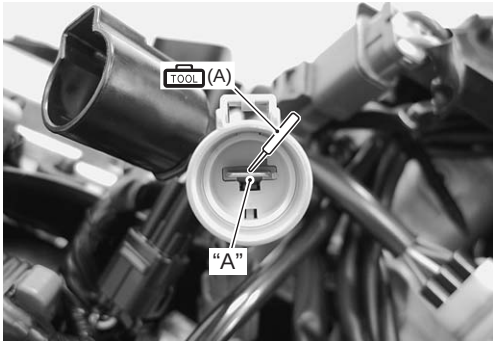
Step	Action	Yes	No
5	1) Turn the ignition switch ON with the EPS control unit coupler disconnected, measure the voltage between terminal "A" and terminal "B" at the coupler. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Normal value ("A" – "B") 1.0 V and more EPS control unit coupler (Vehicle harness end)  I931H1630109-01 <i>Is the voltage between "A" and "B" normal?</i>	Go to Step 6.	- Inspect the wire harness. (Faulty indicator light wire) - Indicator light is blown.
6	1) Turn the ignition switch OFF. 2) Check for continuity between terminal "A" at the coupler and body ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Continuity (•••) EPS control unit coupler (Vehicle harness end)  I931H1630020-01 <i>Are there continuity between "A" and body ground?</i>	Replace the EPS control unit.	Inspect the wire harness. (Faulty ground wire)





6C-14 Power Assisted Steering System:

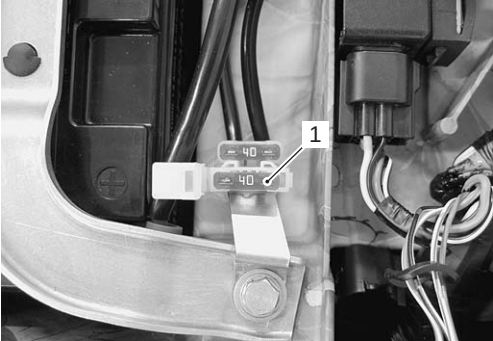Step	Action	Yes	No
7	(The EPS indicator light does not go off) 1) Remove the seat. Refer to “Seat Removal and Installation: in Section 9D”. 2) Open the fuse box and inspect the ignition fuse (1). ⚠ CAUTION If a fuse is blown, find the cause of the problem and correct it before replacing the fuse. <u>EPS fuse</u> 40 A  I931H1630016-01 <i>Is the ignition fuse OK?</i>	Go to Step 8.	Replace the EPS fuse.

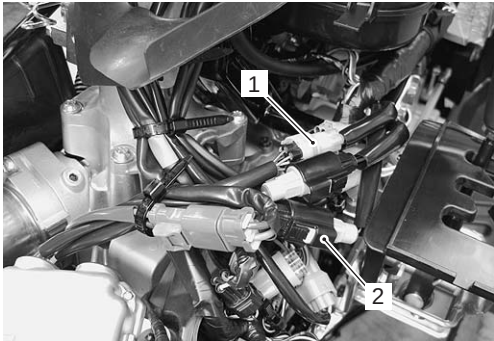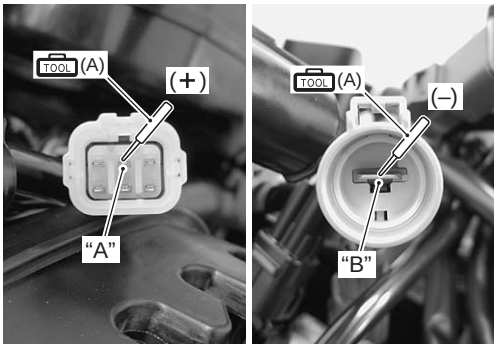Step	Action	Yes	No
8	1) Turn the ignition switch OFF. 2) Disconnect the EPS control unit coupler (1) and (2).  I931H1630017-03 3) Turn the ignition switch ON with the EPS control unit coupler disconnected, measure the voltage between terminal "A" and terminal "B" at the coupler. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Normal value ("A" – "B") Battery voltage (12.0 V and more) EPS control unit coupler (Vehicle harness end)  I931H1630022-01 <i>Is the voltage between "A" and "B" normal?</i>	Go to Step 9.	Inspect the wire harness. (Faulty ignition or ground wire)

6C-16 Power Assisted Steering System:

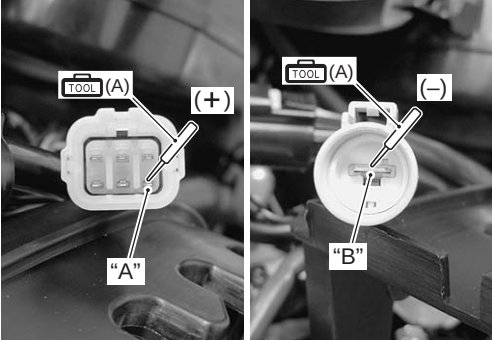Step	Action	Yes	No
9	1) Turn the ignition switch ON with the EPS control unit coupler disconnected, measure the voltage between terminal “A” and terminal “B” at the coupler. Special tool  (A): 09900–25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Normal value (“A” – “B”) 1.0 V and more EPS control unit coupler (Vehicle harness end)  I931H1630025-01 Is the voltage between “A” and “B” normal?	Go to Step 10.	Inspect the wire harness. (Faulty indicator light wire)

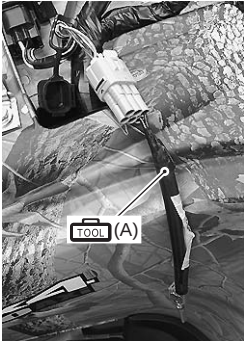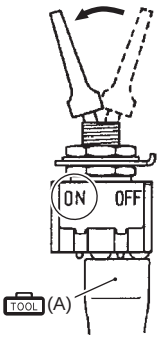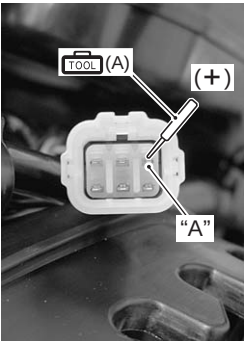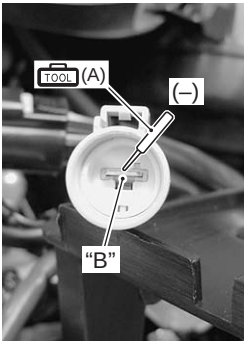Step	Action	Yes	No
10	1) Turn the ignition switch OFF. 2) Short the mode select coupler terminals using the special tool. Special tool  (A): 09930-82710 (Mode select switch)   I931H1630024-01 3) Check for continuity between terminal "A" and terminal "B" at the coupler. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Continuity (●)) EPS control unit coupler (Vehicle harness end)   I931H1630110-01 <i>Is there continuity between "A" and "B"?</i>	Replace the EPS control unit.	Inspect the wire harness. (Faulty mode select switch wire)

DTC (Diagnostic Trouble Code) Output

B931H26304004

NOTE

- Even through the EPS is operating correctly, a DTC is memorized in any of the following conditions.
 - Previous malfunctions were repaired, but the DTCs were not deleted.
- After carrying out DTC deleting and EPS operation check, explain to the customer that the EPS is operating correctly. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.

Use of Mode Select Switch

Connect the special tool to the mode select coupler to output the memorized DTCs on the EPS indicator light.


- 1) Turn the ignition switch OFF.
- 2) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 3) Connect the special tool to the mode select coupler (1).

Special tool

 (A): 09930-82710 (Mode select switch)




I931H1630026-01

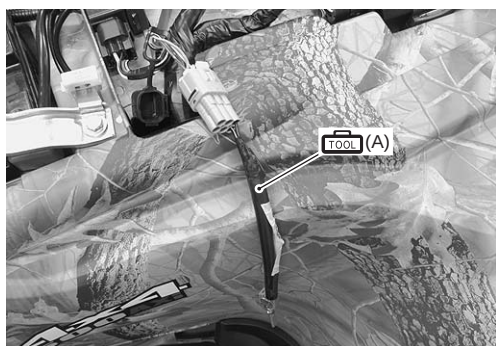

I931H1630027-01

- 4) Switch the special tool to ON.

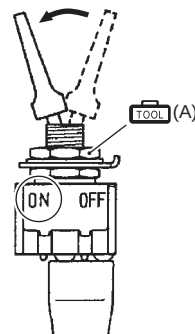

I931H1630028-01

- 5) Turn the ignition switch ON.


The EPS indicator light starts flashing to indicate the DTC. Refer to “DTC Table (Page 6C-24)”.

NOTE

- If there is a DTC, the EPS indicator light keeps flashing cyclically and repeatedly.
- If there is no DTC, the EPS indicator light keeps lighting on.
- When outputting DTCs, never turn the ignition switch to headlight ON position in order to prevent the battery from discharging.



I931H1630094-01

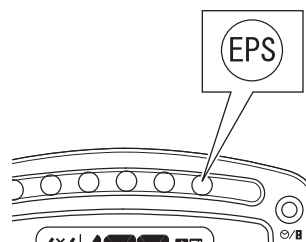


I931H1630029-01

- 6) Turn the ignition switch OFF and disconnect the special tool.

Understanding the DTC (Diagnostic Trouble Code)

A four-digit DTC is shown through the flashing pattern of the EPS indicator light. A number between 1 and 9 is represented by the number of times that the EPS indicator light lights up in interval of 0.3 seconds and the separation between the each digit are indicated by the light staying off for 1 seconds. In addition, the separation between the start code and the DTC is indicated by the light being off for 3 seconds. After the start code is displayed, DTCs appear from the smallest number code.

If no DTCs are memorized, the EPS indicator light keeps blinking by the four times at same interval.

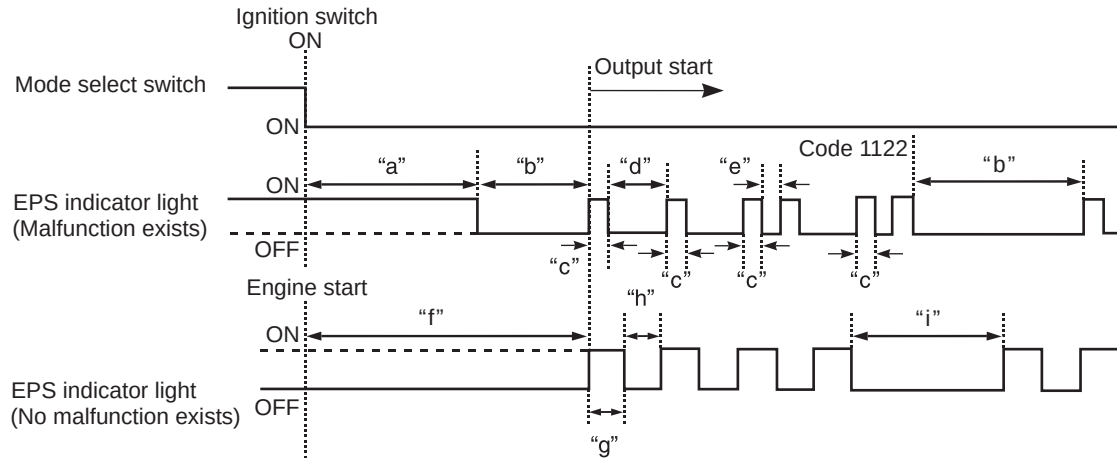

I931H1630030-04

"a": Initial minimum light ON time (About 3 seconds)	"f": Indicator light OFF time (5 seconds)
"b": Error code interval (About 3 seconds)	"g": Normal code light ON time (1 seconds)
"c": Code light ON time (0.3 seconds)	"h": Normal code light OFF time (1 seconds)
"d": Main-sub code interval (1 seconds)	"i": Interval (3 seconds)
"e": Sub code (0.3 seconds)	

Use of SDS

NOTE

- Don't disconnect couplers from EPS control unit, the battery cable from the battery, EPS control unit ground wire harness from the engine or main fuse before confirming the malfunction code (self-diagnostic trouble code) stored in memory. Such disconnection may erase the memorized information in EPS control unit memory.
- DTC stored in EPS control unit memory can be checked by the SDS.

- 1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".



- 2) Set up the SDS tool. (Refer to the SDS operation manual for further details.)

Special tool

- (A): 09904-41010 (SUZUKI Diagnostic system set)
- (B): 99565-01010-019 (CD-ROM Ver.19)



I931H1630031-01

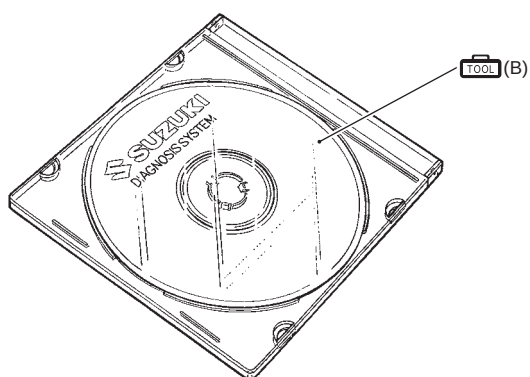
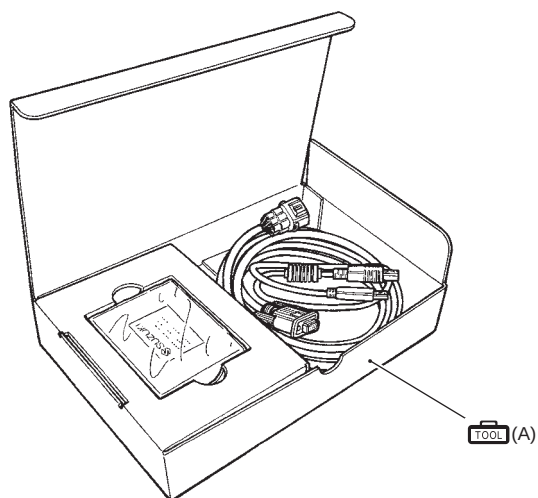


I705H1110116-03

- 3) Read the DTC (Diagnostic Trouble Code) and show data when trouble (displaying data at the time of DTC) according to instructions displayed on SDS.

NOTE

- Not only is SDS used for detecting Diagnostic Trouble Codes but also for reproducing and checking on screen the failure condition as described by customers using the trigger.
- How to use trigger. (Refer to the SDS operation manual for further details.)
- When DTC is checked, DTC "C1122" is displayed with ignition switch turned ON. However, if the engine is started and the display disappears, it is not a trouble.

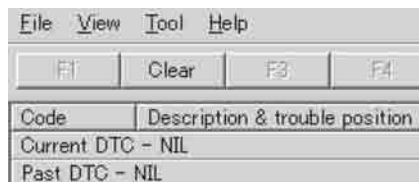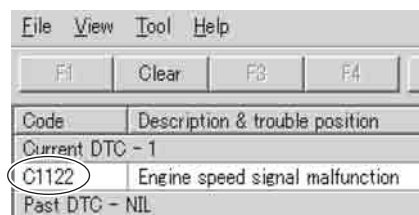

I931H1630032-01


- 4) Close the SDS tool and turn the ignition switch OFF.

DTC (Diagnostic Trouble Code) Deleting

B931H26304005

Use of Mode Select Switch

- 1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".

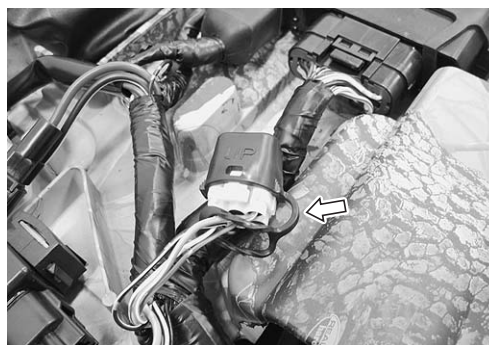

I931H1630033-01

- 2) Connect the special tool to the mode select coupler and output the DTCs.

Special tool

TOOL (A): 09930-82720 (Mode selection switch)



I931H1630034-01

- 3) While the DTCs are being output, set the special tool to OFF.

CAUTION

The DTC deletion mode starts 11.5 seconds after the switch is set to OFF.




I718H1450050-01

- 4) In the DTC deletion mode, switch the mode coupler switch OFF to ON five times or more within 10 seconds, each time leaving it at ON for more than 1 second.



I718H1450051-01

DTC Deleting Diagram

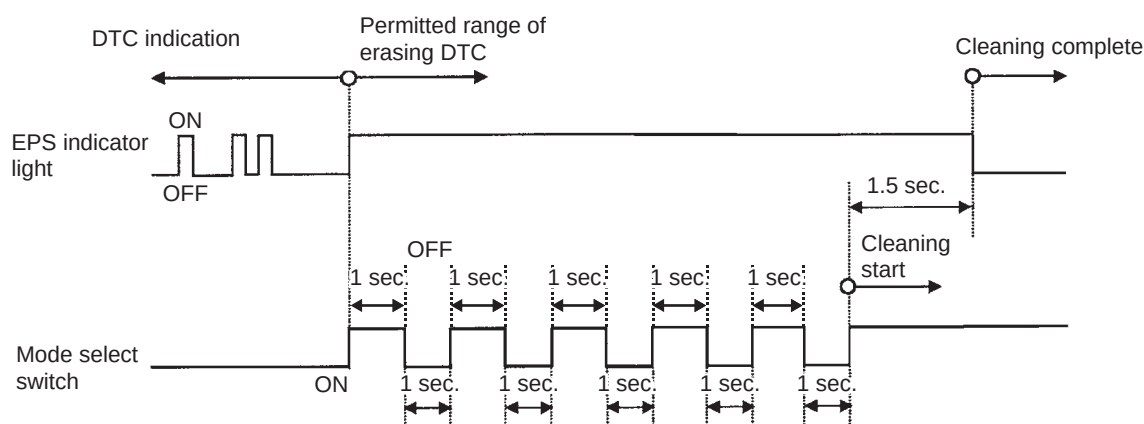

I931H1630035-04

- 5) After deleting the DTCs, repeat the code output procedure and make sure that no DTCs remain (the EPS indicator light no longer flashes).

NOTE

If any DTCs remain, perform the appropriate procedures, then delete the codes. If DTCs are left stored, confusion may occur and unnecessary repairs may be made.

- 6) Afterwards, start the engine and turn the handlebars to check that the EPS activates correctly.
7) Disconnect the mode select switch and reinstall the seat.

Use of SDS


- 1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D".
- 2) After repairing the trouble, turn OFF the ignition switch.
- 3) Set up the SDS tool. (Refer to the SDS operation manual for further details.)

Special tool

- : 09904-41010 (SUZUKI Diagnostic system set)
 : 99565-01010-019 (CD-ROM Ver.19)


- 4) Turn the ignition switch ON.

5) Click the EPS button (1).

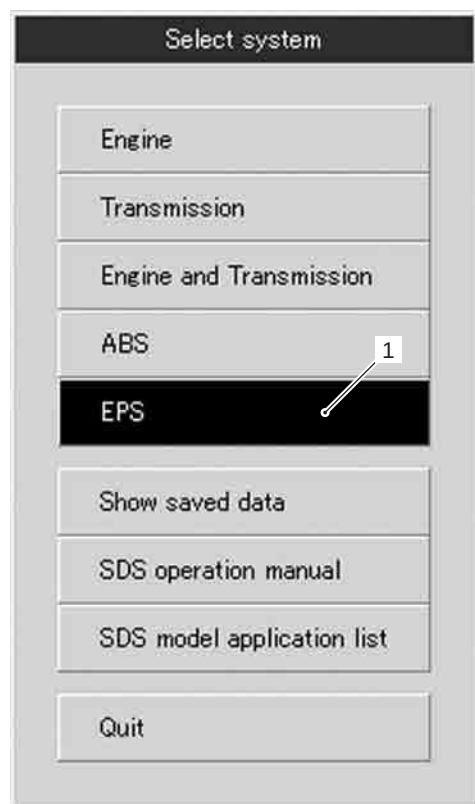

I931H1630101-02

6) Click the "DTC inspection" button (2).

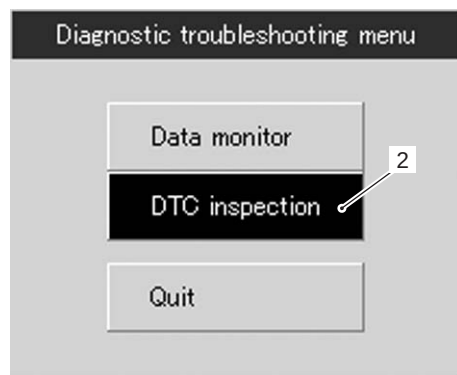

I931H1630103-01

7) Check the DTC.


NOTE

The previous malfunction history code (Past DTC) still remains stored in the EPS control unit. Therefore, erase the history code memorized in the EPS control unit using SDS tool.

8) Click "Clear" (3) to delete history code (Past DTC).


NOTE

The DTC is memorized in the EPS control unit also when the wire coupler of any sensor is disconnected. Therefore, when a wire coupler has been disconnected at the time of diagnosis, erase the stored malfunction history code using SDS.

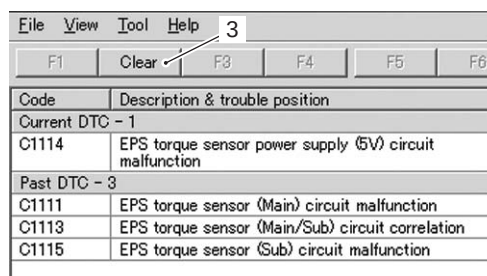


I931H1630036-02

9) Follow the displayed instructions.

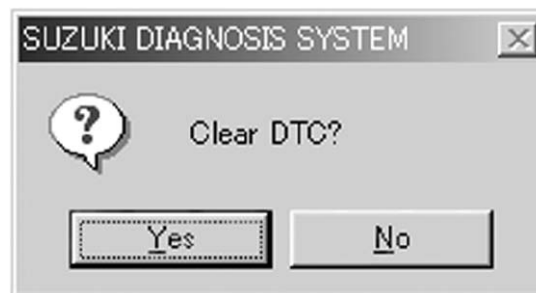

I705H1110006-01

10) Check that both "Current DTC" (4) and "Past DTC" (5) are deleted (NIL).

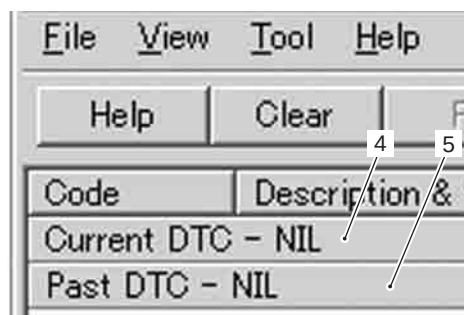

I931H1630102-01

11) Close the SDS tool and turn the ignition switch OFF.

12) Disconnect the SDS tool and install the sheet.

13) Start the engine and the handlebars to check that the EPS activates correctly.

SDS Check

B931H26304006

Using SDS, take the sample of data from the new vehicle and at the time of periodic maintenance at your dealer. Save the data in the computer or by printing and filing the hard copies. The saved or filed data are useful for troubleshooting as they can be compared periodically with changes over time or failure conditions of the vehicle. For example, when a vehicle is brought in for service but the troubleshooting is difficult, comparison with the normal data that have been saved or filed can allow the specific EPS failure to be determined.

- 1) Remove the seat. Refer to “**Seat Removal and Installation: in Section 9D**”.
- 2) Set up the SDS tool. (Refer to “SDS operation manual for further details.”)

NOTE


- Before taking the sample of data, check and clear the Past DTC. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.
- A number of different data under a fixed condition as shown should be saved or filed as sample.

Special tool

 : 09904-41010 (SUZUKI Diagnostic system set)


 : 99565-01010-019 (CD-ROM Ver.19)

DATA sampled from EPS system

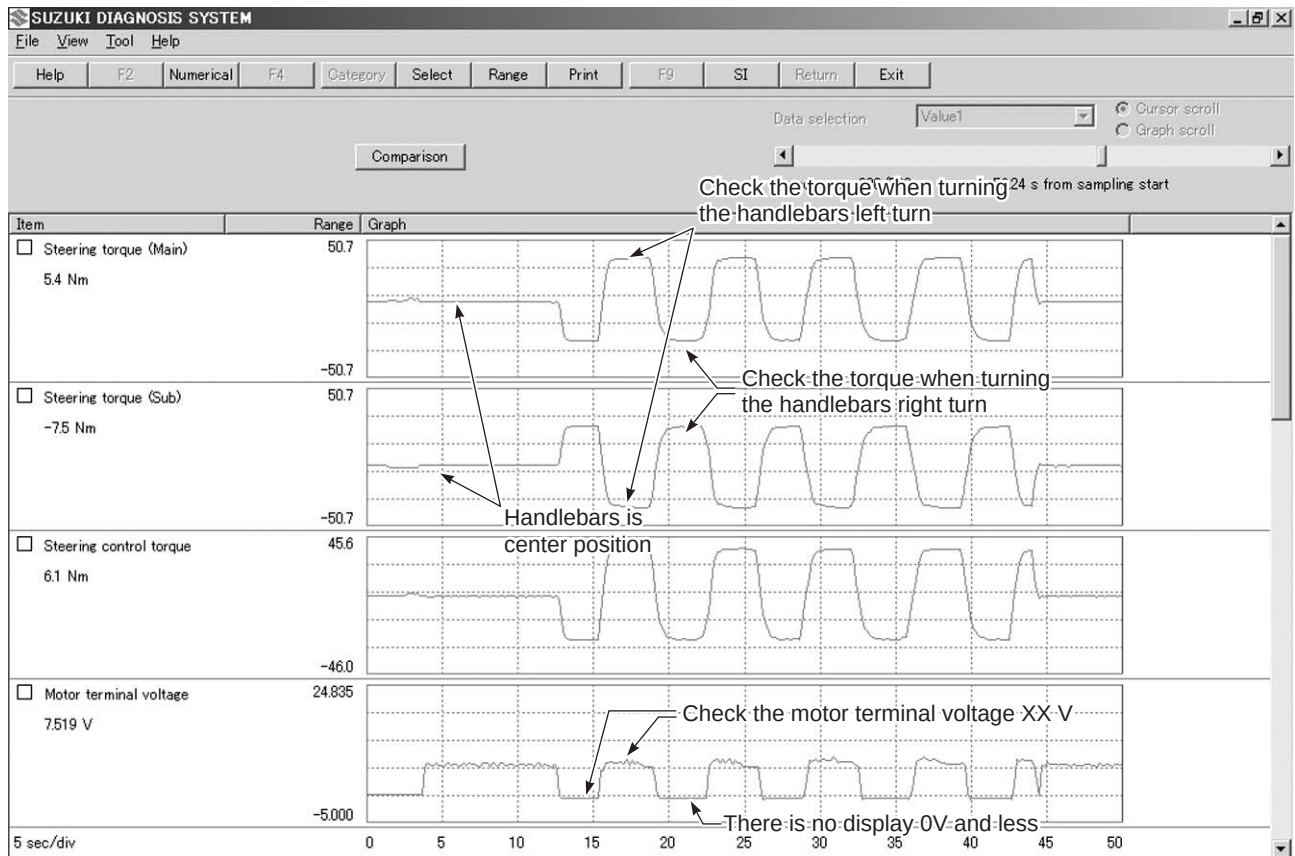

I931H1630104-03

Scroll the screen

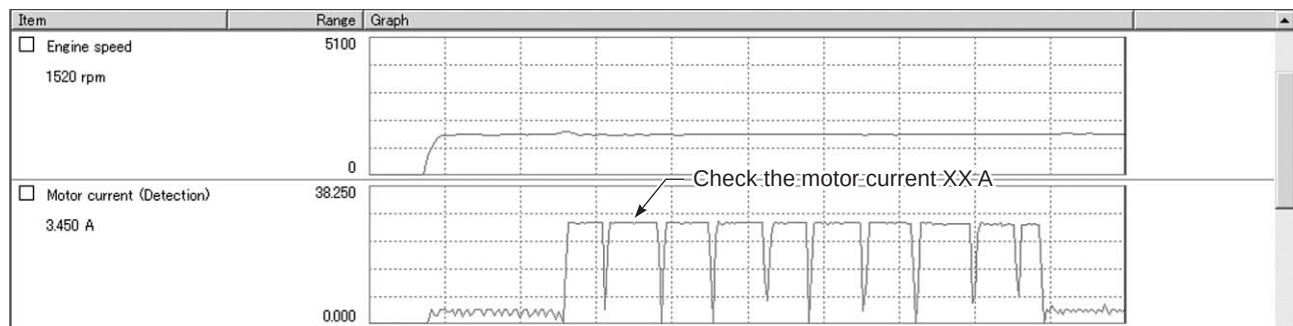

I931H1630105-02

DTC Table

B931H26304007

DTC	Malfunction cause	Indicator status	Reference
None	Normal	ON *1	—
C1111	Torque sensor (main) circuit voltage failure	ON	Refer to "DTC "C1111": Torque Sensor (Main) Circuit Malfunction (Page 6C-25)".
C1113	Torque sensor (main) and (sub) circuit voltage difference high	ON	Refer to "DTC "C1113": Torque Sensor (Main / Sub) Circuit Correlation Malfunction (Page 6C-28)".
C1114	Torque sensor 5 V power supply circuit failure	ON	Refer to "DTC "C1114": Torque Sensor Power Supply Circuit Malfunction (Page 6C-32)".
C1115	Torque sensor (sub) circuit voltage failure	ON	Refer to "DTC "C1115": Torque Sensor (Sub) Circuit Malfunction (Page 6C-34)".
C1121	Vehicle speed signal not input	OFF	Refer to "DTC "C1121": Vehicle Speed Signal Circuit Malfunction (Page 6C-37)".
C1122	Engine speed signal circuit failure *1	ON	Refer to "DTC "C1122": Engine Speed Signal Circuit Malfunction (Page 6C-40)".
C1141	EPS motor circuit voltage abnormal	ON	Refer to "DTC "C1141", "C1142", "C1143", "C1145" EPS Motor Circuit Malfunction (Page 6C-43)".
C1142	EPS motor circuit actual current and EPS motor circuit target current difference high	ON	
C1143	EPS motor circuit current excessive	ON	
C1145	EPS motor circuit current low command with EPS control unit target current	ON	
C1153	EPS control unit power supply circuit failure	OFF	Refer to "DTC "C1153" EPS Control Unit Supply Voltage Circuit Malfunction (Page 6C-45)".
C1152	Relay welding (EPS control unit internal circuit)	ON	Refer to "DTC "C1152", "C1154", "C1155" EPS Control Unit Malfunction (Page 6C-47)".
C1154	Relay failure (EPS control unit internal circuit)	OFF	
C1155	EPS control unit failure	OFF	

*1: It goes off after running the engine.

DTC “C1111”: Torque Sensor (Main) Circuit Malfunction

B931H26304008



Possible Cause
- Faulty torque sensor signal circuit. - Faulty torque sensor. - Faulty EPS control unit.


Troubleshooting**⚠ CAUTION**

Never remove the torque sensor to prevent accident and damage.

NOTE

-
- After repairing the trouble, clear the DTC using a SDS tool or mode coupler switch. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.
 - DTC “C1111” and “C1113” are indicated at the same time due to the malfunction of the same torque sensor circuit.
-

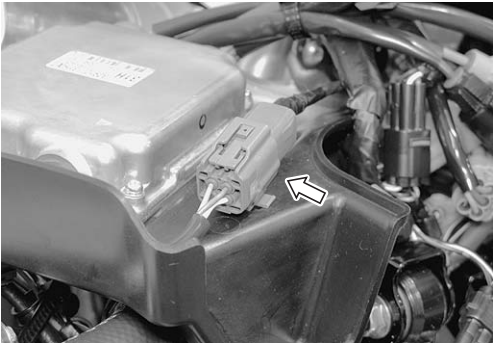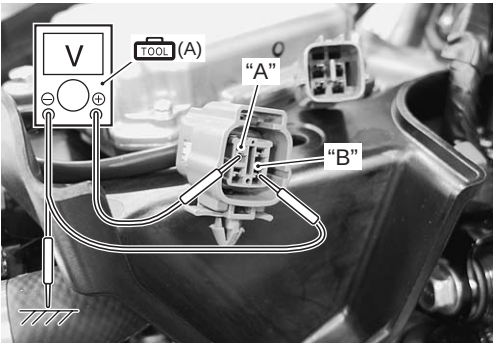Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the torque sensor coupler for loose or poor contact. If OK, measure the torque sensor input voltage.  I931H1630095-01 3) Disconnect the torque sensor coupler. 4) Turn the ignition switch ON. 5) Measure the input voltage between R wire "A" and ground. If OK, then measure the voltage at the R wire "A" and B wire "B". Special tool  (A): 09900-25008 (Multi-circuit tester set) <u>Tester knob indication</u> Voltage (---) <u>Torque sensor input voltage</u> 5.0 V  I931H1630040-01 Is voltage OK?	Go to Step 2.	- Loose or poor contacts on the torque sensor. - Power supply circuit (R wire) or ground circuit (B wire) open. - If check result is not satisfactory, replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

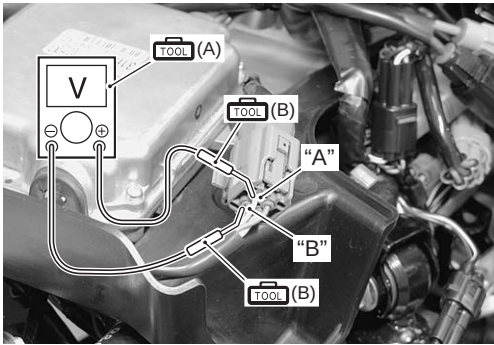Step	Action	Yes	No
2	1) Turn the ignition switch OFF. 2) Connect the torque sensor coupler. 3) Insert the needle pointed probes to lead wire coupler. 4) Turn the ignition switch ON. 5) Measure the voltage between G wire "A" and B wire "B" by turning the handlebars left and right. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) Torque sensor (main) voltage Handlebars is left turn: Approx. 3.0 V Handlebars is right turn: Approx. 2.0 V  I931H1630106-02  I931H1630042-01 <i>Is voltage OK?</i>	• Replace the EPS control unit with a known good one, and inspect it again. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".	• R wire terminal or G wire terminal circuit open (torque sensor side). • If check result is not satisfactory, replace the torque sensor (EPS body assembly) with a new one. Refer to "EPS Body Assembly Removal and Installation (Page 6C-49)".

DTC “C1113”: Torque Sensor (Main / Sub) Circuit Correlation Malfunction

B931H26304009

Possible Cause
• Faulty torque sensor signal circuit. • Faulty torque sensor. • Faulty EPS control unit.



Troubleshooting


⚠ CAUTION


Never remove the torque sensor to prevent accident and damage.

NOTE

-
- After repairing the trouble, clear the DTC using a SDS tool or mode coupler switch. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.
 - DTC “C1113” and “C1115” are indicated at the same time due to the malfunction of the same torque sensor circuit.
-

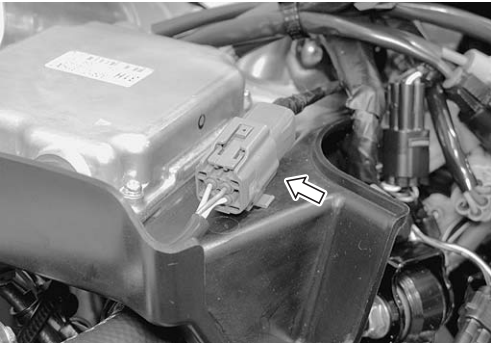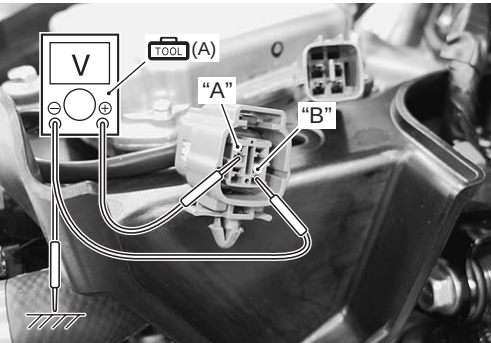Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the torque sensor coupler for loose or poor contact. If OK, measure the torque sensor input voltage.  I931H1630095-01 3) Disconnect the torque sensor coupler. 4) Turn the ignition switch ON. 5) Measure the input voltage between R wire "A" and ground. If OK, then measure the voltage at the R wire "A" and B wire "B". Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Torque sensor input voltage 5.0 V  I931H1630043-02	Go to Step 2.	- Loose or poor contacts on the torque sensor. - Power supply circuit (R wire) open. - Power source or power supply circuit shorted to torque sensor (main or sub) circuit. - Torque sensor (main or sub) circuit open. - If check result is not satisfactory, replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

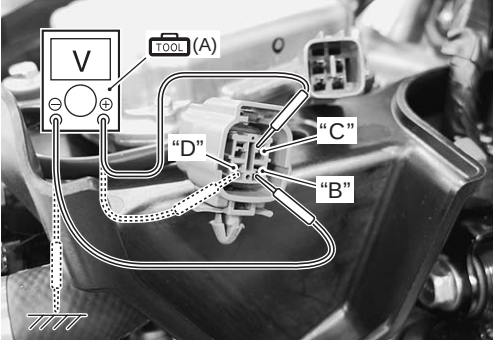Step	Action	Yes	No
1	6) Next, measure the voltage between G wire "C" and ground, G wire "C" and B wire "B", W wire "D" and ground and W wire "D" and B wire "B". If the voltage of each measurement is 0 V OK. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Measuring voltage 0 V  Is voltage OK?	Go to Step 2.	• Loose or poor contacts on the torque sensor. • Power supply circuit (R wire) open. • Power source or power supply circuit shorted to torque sensor (main or sub) circuit. • Torque sensor (main or sub) circuit open. • If check result is not satisfactory, replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

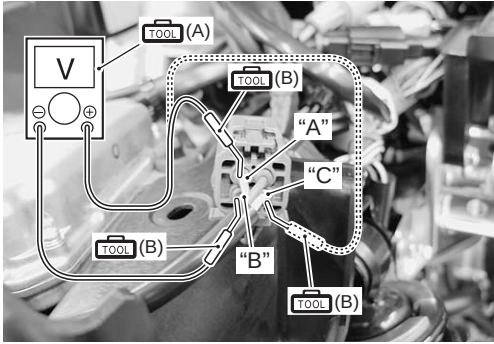Step	Action	Yes	No
2	1) Turn the ignition switch OFF. 2) Connect the torque sensor coupler. 3) Insert the needle pointed probes to lead wire coupler. 4) Measure the torque sensor (main) voltage between G wire "A" and B wire "B". Also, measure the torque sensor (sub) voltage between W wire "C" and B wire "B" by full turning the handlebars left and right. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) Torque sensor (main/sub) voltage Handlebars left turn (Main): Approx. 3.0 V Handlebars left turn (Sub): Approx. 2.0 V Handlebars right turn (Main): Approx. 2.0 V Handlebars right turn (Sub): Approx. 3.0 V  I931H1630096-06  I931H1630042-01 <i>Is voltage OK?</i>	• G, W and B wire open or shorted to ground or poor torque sensor coupler connection. • If wire and connection are OK, intermittent trouble or faulty EPS control unit. • Replace the EPS control unit with a known good one, and inspect it again. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".	If check result is not satisfactory, replace the torque sensor (EPS body assembly) with a new one. Refer to "EPS Body Assembly Removal and Installation (Page 6C-49)".

DTC “C1114”: Torque Sensor Power Supply Circuit Malfunction

B931H26304010

Possible Cause
- Faulty torque sensor signal circuit. - Faulty torque sensor. - Faulty EPS control unit.


Troubleshooting

⚠ CAUTION

Never remove the torque sensor to prevent accident and damage.

NOTE

After repairing the trouble, clear the DTC using a SDS tool or mode coupler switch. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.

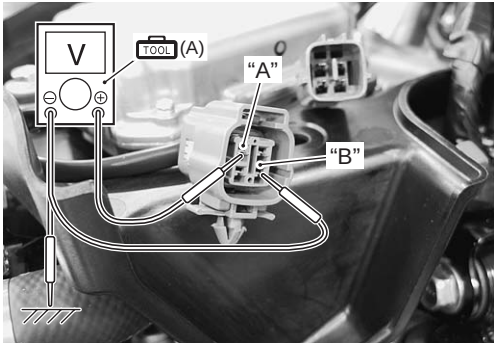Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the EPS control unit power source couplers for loose or poor contact. If OK, measure the torque sensor input voltage.  I931H1630095-01 3) Disconnect the torque sensor coupler. 4) Turn the ignition switch ON. 5) Measure the voltage between R wire "A" and B wire "B". If OK, then measure the voltage at the R wire "A" and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Torque sensor input voltage 5.0 V  I931H1630046-03 Is voltage OK?	- If wire and connection are OK, intermittent trouble or faulty EPS body assembly. - Replace the EPS body assembly with a known good one, and inspect it again. Refer to "EPS Body Assembly Removal and Installation (Page 6C-49)".	- Power supply circuit (R wire) shorted to ground. - If check result is not satisfactory, replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

DTC “C1115”: Torque Sensor (Sub) Circuit Malfunction

B931H26304011

Possible Cause
- Faulty torque sensor signal circuit. - Faulty torque sensor. - Faulty EPS control unit.



Troubleshooting


⚠ CAUTION

Never remove the torque sensor to prevent accident and damage.

NOTE

After repairing the trouble, clear the DTC using a SDS tool or mode coupler switch. Refer to “DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)”.

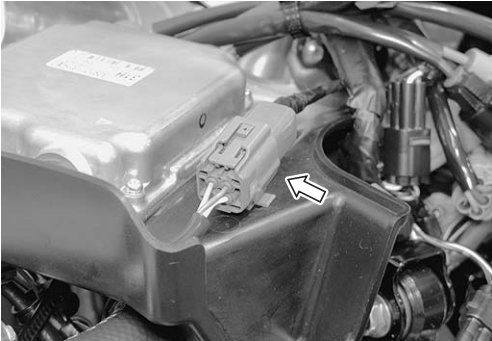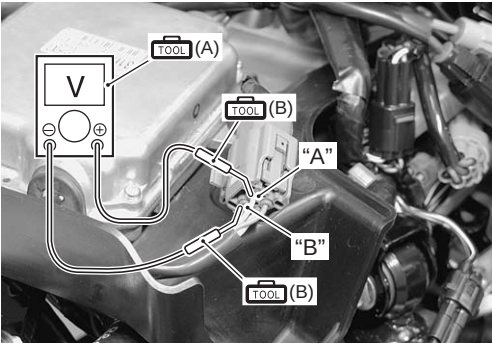Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the torque sensor coupler for loose or poor contact. If OK, measure the torque sensor input voltage.  I931H1630095-01 3) Disconnect the torque sensor coupler. 4) Turn the ignition switch ON. 5) Measure the input voltage between R wire "A" and ground. If OK, then measure the input voltage between R wire "A" and B wire "B". Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) Torque sensor input voltage 5.0 V  I931H1630106-02 Is voltage OK?	Go to step 2.	• Loose or poor contacts on the torque sensor. • Power supply circuit (R wire) or ground circuit (B wire) open. • If check result is not satisfactory, replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

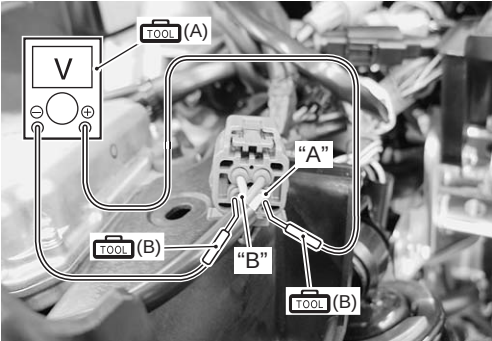Step	Action	Yes	No
2	1) Turn the ignition switch OFF. 2) Connect the torque sensor coupler. 3) Insert the needle pointed probes to lead wire coupler. 4) Turn the ignition switch ON. 5) Measure the voltage between W wire "A" and B wire "B" by turning the handlebars left and right. Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) Torque sensor (Sub) voltage Handlebars is left turn: Approx. 2.0 V Handlebars is right turn: Approx 3.0 V  I931H1630113-01  I931H1630042-01 Is voltage OK?	• Replace the EPS control unit with a known good one, and inspect it again. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".	• R wire terminal or W wire terminal circuit open (torque sensor side). • If check result is not satisfactory, replace the torque sensor (EPS body assembly) with a new one. Refer to "Steering Shaft Removal and Installation: in Section 6B".

DTC "C1121": Vehicle Speed Signal Circuit Malfunction

B931H26304012

Possible Cause


- Faulty vehicle speed signal circuit.
- Faulty speed sensor.
- Faulty EPS control unit.



Troubleshooting

NOTE

After repairing the trouble, clear the DTC using a SDS tool or mode coupler switch. Refer to "DTC (Diagnostic Trouble Code) Deleting (Page 6C-20)".

Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the EPS control unit connector for loose or poor contact. If OK, then check the vehicle speed signal lead wire continuity.  I931H1630048-01 3) Disconnect the EPS control unit coupler [B], speed sensor coupler [C] and combination meter coupler [A]. Refer to "Speed Sensor Removal and Installation: in Section 9C" and "Combination Meter Removal and Installation: in Section 9C". 4) Turn the ignition switch OFF. 5) Check the EPS control unit connector for loose or poor contact. If OK, then check the vehicle speed signal lead wire continuity.  I931H1630048-01	Go to step 2.	Bl/B wire open.

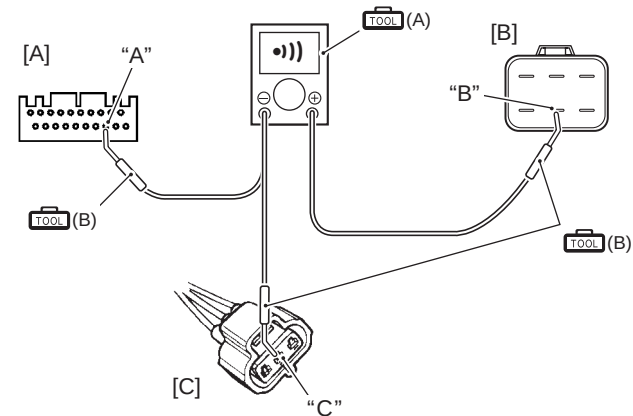Step	Action	Yes	No
1	6) Disconnect the EPS control unit coupler [B], speed sensor coupler [C] and combination meter coupler [A]. Refer to “Speed Sensor Removal and Installation: in Section 9C” and “Combination Meter Removal and Installation: in Section 9C”. 7) Check the continuity between the BI/B wire of EPS control unit coupler [B] and BI/B wire of speed sensor [C]. Also, check the continuity between the BI/B wire of EPS control unit coupler [B] and BI/B wire of combination meter [A]. Special tool  (A): 09900–25008 (Multi-circuit tester set)  (B): 09900–25009 (Needle pointed probe set) Tester knob indication Continuity (●)))  I931H1630050-03 Is continuity OK?	Go to step 2.	BI/B wire open.

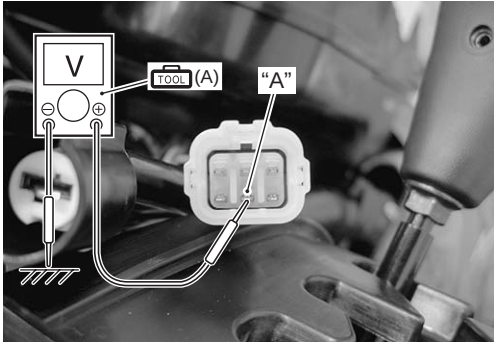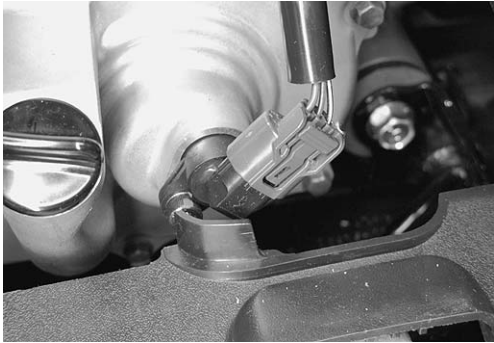Step	Action	Yes	No
2	1) Connect the combination meter coupler and speed sensor coupler. 2) Measure the voltage between the BI/B wire "A" and ground. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Vehicle speed signal voltage 5.0 V  I931H1630049-04 <i>Is voltage OK?</i>	Go to step 3.	BI/B wire shorted to ground.
3	1) Remove the engine side cover. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D". 2) Inspect the speed sensor. Refer to "Speed Sensor Inspection: in Section 9C".  I931H1630090-01 <i>Is speed sensor OK?</i>	Replace the EPS control unit. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".	Replace the speed sensor. Refer to " Speed Sensor Removal and Installation: in Section 9C ".

DTC “C1122”: Engine Speed Signal Circuit Malfunction


B931H26304013


Possible Cause
- Faulty engine speed signal circuit. - Faulty ECM. - Faulty EPS control unit.

Troubleshooting

NOTE

Start the engine after repairing the DTC and check that the indicator light is turned OFF. Refer to “Precautions in Diagnosing Troubles (Page 6C-1)”.

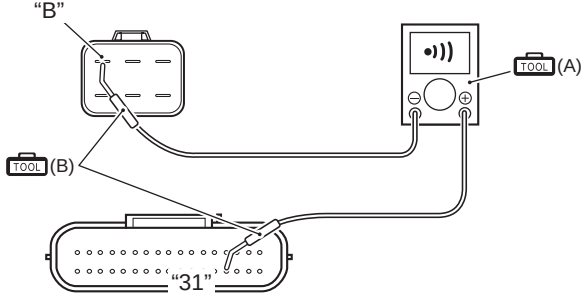Step	Action	Yes	No
1	1) Setup the SDS tool (Refer to the SDS operation manual for further details.) or connect the mode select switch. 2) Click "Engine" and check the DTC code. <i>Is not DTC "C12 (P0335)" displayed?</i>	Go to step 2.	Inspect the CKP sensor. Refer to "DTC "C12" (P0335): CKP Sensor Circuit Malfunction: in Section 1A".
2	1) Turn the ignition switch OFF. 2) Check the EPS control unit coupler for loose or poor contact. If OK, then measure the engine speed signal lead wire continuity.  I931H1630048-01 3) Disconnect the EPS control unit coupler and ECM coupler. 4) Check the continuity between the W wire "A" and terminal "31". Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) TOOL (B): 09900-25009 (Needle pointed probe set) Tester knob indication Continuity (●)))  I931H1630052-02 <i>Is continuity OK?</i>	Go to step 3.	W wire open.

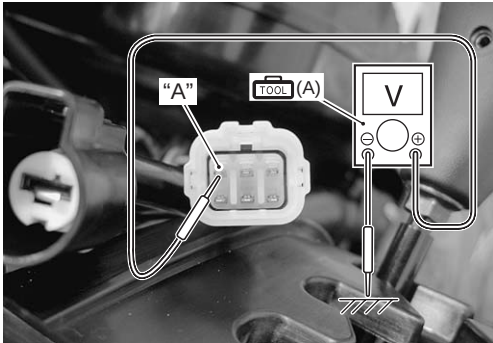Step	Action	Yes	No
3	1) Connect the ECM coupler. 2) Start the engine. 3) Measure the voltage between W wire "A" and ground. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Engine speed signal voltage It changes between 0 – 12 V  I931H1630053-02 Is voltage OK?	Replace the EPS control unit with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".	Replace the ECM with a new one. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".


DTC "C1141", "C1142", "C1143", "C1145" EPS Motor Circuit Malfunction

B931H26304014

Possible Cause

- Faulty EPS motor circuit.
- Faulty EPS motor.
- EPS control unit malfunction.

Troubleshooting

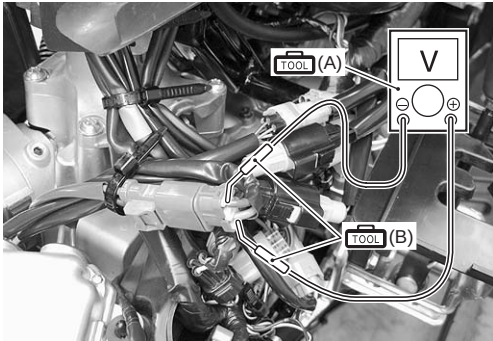Step	Action	Yes	No
1	1) Turn the ignition switch OFF. 2) Check the EPS motor coupler for loose or poor contact. If OK, measure the EPS motor voltage.  I931H1630087-02 3) Insert the needle pointed probes to lead wire coupler. 4) Start the engine and turn the handlebars left turn. 5) Measure the voltage between R wire "A" and B wire "B". Special tool  (A): 09900-25008 (Multi-circuit tester set)  (B): 09900-25009 (Needle pointed probe set) Tester knob indication Voltage (---) EPS motor voltage Approx. 7.0 V  I931H1630093-01  I931H1630088-02 Is voltage OK?	Go to step 2.	R wire or B wire open or R wire shorted to ground.

6C-44 Power Assisted Steering System:

Step	Action	Yes	No
2	1) Turn the ignition switch OFF. 2) Disconnect the EPS motor coupler.  I931H1630087-02 3) Inspect the continuity of the EPS motor. Refer to “EPS Motor Inspection (Page 6C-52)”. Is continuity OK?	Replace the EPS control unit with a known good one, and inspect it again. Refer to “EPS Control Unit Removal and Installation (Page 6C-48)”.	Replace the EPS motor (EPS body assembly) with a new one. Refer to “Steering Shaft Removal and Installation: in Section 6B”.


DTC "C1153" EPS Control Unit Supply Voltage Circuit Malfunction


B931H26304015

Possible Cause

- Faulty regulator/rectifier.
- Faulty EPS control unit.
- Faulty wire harness, etc.

Troubleshooting

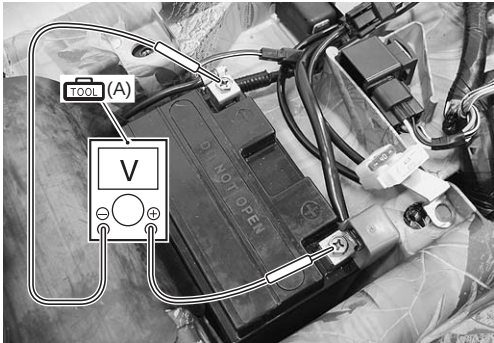Step	Action	Yes	No
1	1) Remove the seat. Refer to "Seat Removal and Installation: in Section 9D". 2) Measure the voltage between the (+) and (-) battery terminals using the multi-circuit tester. Special tool  (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Battery voltage 12.0 V and more  I931H1630054-01 <i>Is the voltage over 12 V?</i>	Go to Step 2.	Charge or replace the battery.
2	1) Start the engine at 5 000 r/min with the dimmer switch set to HI. 2) Measure the voltage between the (+) and (-) battery terminals. Special tool  : 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---) Regulated voltage 13.5 – 15.0 V at 5 000 r/min <i>Is the voltage 13.5 – 15.0 V?</i>	Go to Step 3.	Inspect the regulator/rectifier. Refer to " Regulator / Rectifier Inspection: in Section 1J ".

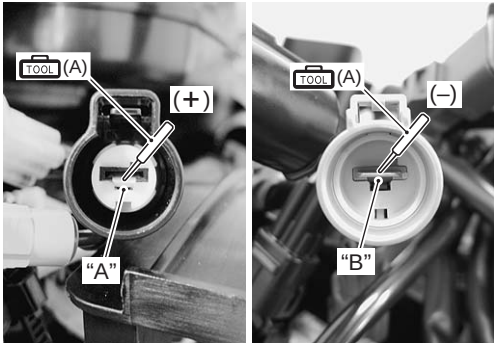Step	Action	Yes	No
3	1) Turn the ignition switch OFF. 2) Check the EPS control unit coupler for loose or poor contacts. If OK, then disconnect the EPS control unit coupler. 3) Start the engine at 5 000 r/min with the dimmer switch set to HI. 4) Measure the voltage between terminal "A" and terminal "B" at the coupler. Special tool TOOL (A): 09900-25008 (Multi-circuit tester set) Tester knob indication Voltage (---)  I931H1630055-02 Is the voltage same as Step 2?	Replace the EPS control unit.	Inspect the wire harness. (Faulty ignition or ground wire)

DTC "C1152", "C1154", "C1155" EPS Control Unit Malfunction

B931H26304016

	Possible Cause
C1152	• Relay welding (EPS control unit internal circuit)
C1154	• Relay malfunction (EPS control unit internal circuit)
C1155	• EPS control unit malfunction


Troubleshooting

- Replace the EPS control unit. Refer to "EPS Control Unit Removal and Installation (Page 6C-48)".

Repair Instructions

EPS Control Unit Construction

B931H26306001

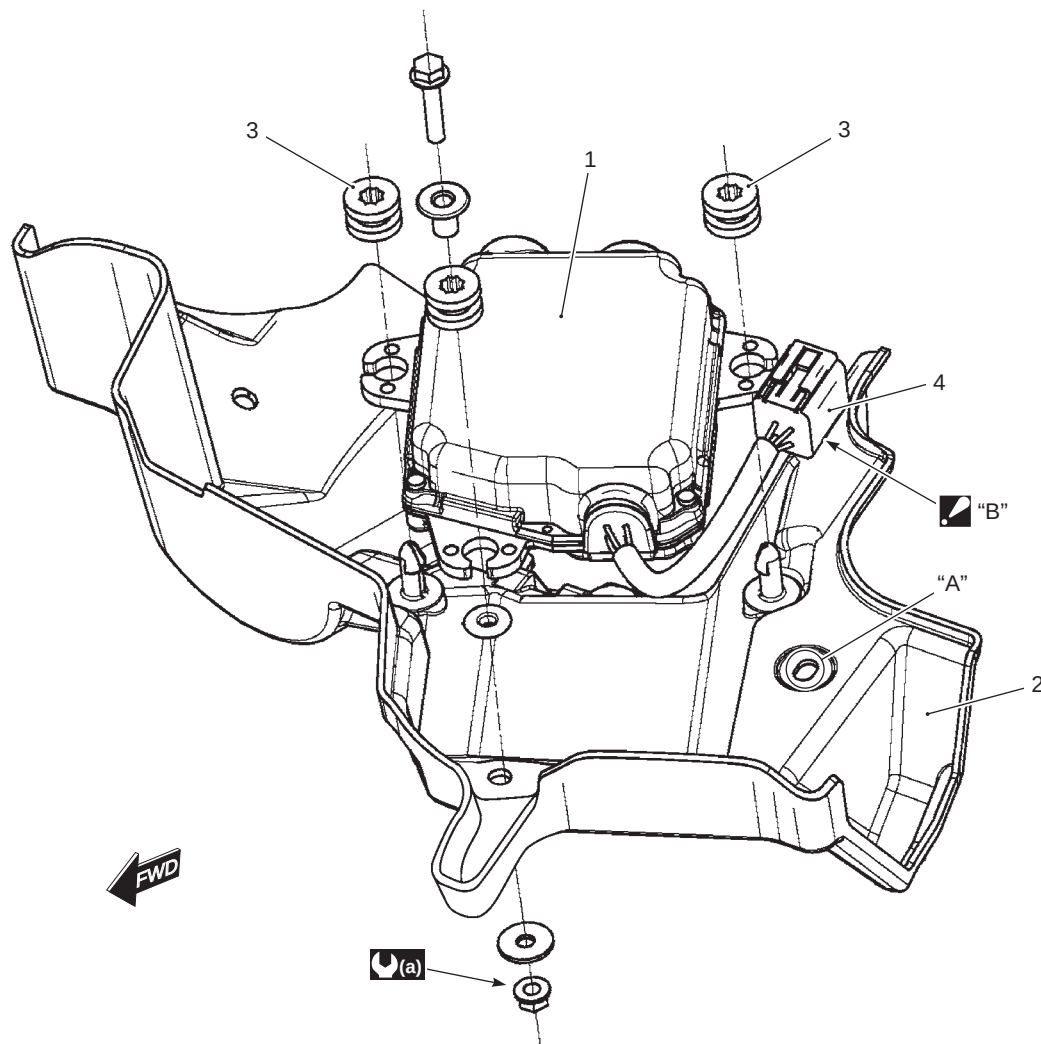

I931H1630056-02


1. EPS control unit	4. Torque sensor coupler
2. EPS control unit plate	(a) : 12 N·m (1.2 kgf-m, 8.5 lbf-ft)
3. Cushion	"B": Install the clip of the torque sensor coupler to the hole "A" of the EPS control unit plate.

EPS Control Unit Removal and Installation

B931H26306002

Removal

- 1) Disconnect the battery (–) lead wire.
- 2) Remove the front fender. Refer to “Front Side Exterior Parts Removal and Installation: in Section 9D”.
- 3) Disconnect the EPS control unit couplers.

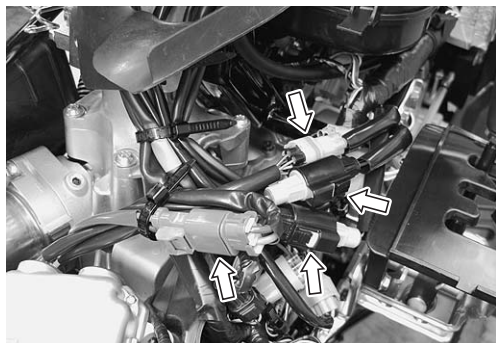


I931H1630057-01

- 4) Disconnect the torque sensor coupler (1).



I931H1630097-01

- 5) Remove the clamp (2) and release the EPS motor lead wire (3).

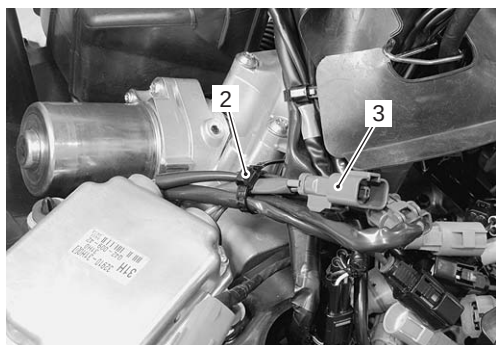


I931H1630098-01

- 6) Release the clip part “A” of the EPS control unit plate with the special tool.


Special tool

TOOL (A): 09942-83110 (Clip remover)

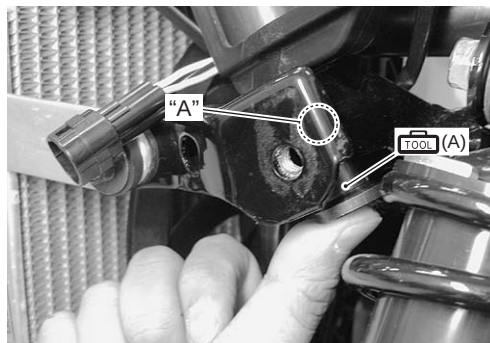

I931H1630059-02

- 7) Remove the fastener (4) and bolt (5).
- 8) Remove the EPS control unit (6) along with the EPS control unit plate (7).

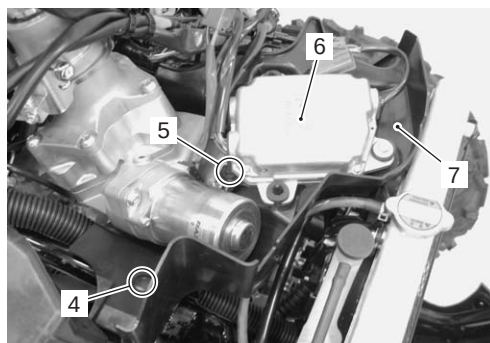

I931H1630062-02

- 9) Remove the EPS control unit (6) from the EPS control unit plate (7) as shown in the EPS control unit construction. Refer to “EPS Control Unit Construction (Page 6C-47)”.


Installation

Install the EPS control unit in the reverse order of removal. Pay attention to the following points:

- Tighten the EPS control unit mounting nut (1) to the specified torque.


Tightening torque

EPS control unit mounting nut (a): 12 N·m (1.2 kgf-m, 8.5 lbf-ft)

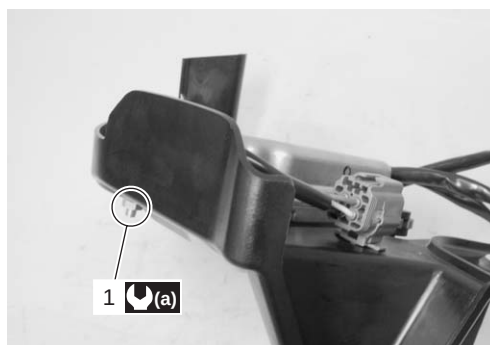


I931H1630063-01

- Connect the torque sensor lead wire (2).

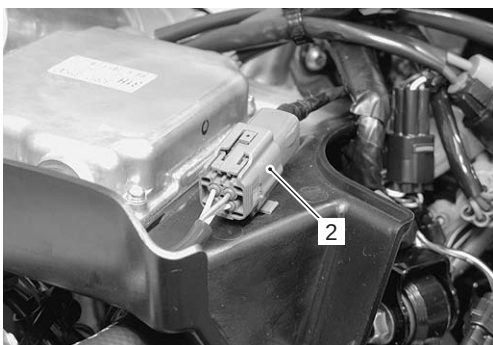

I931H1630099-02

- Connect the EPS motor coupler (3) and clamp (4).
- Connect the other EPS control unit couplers.

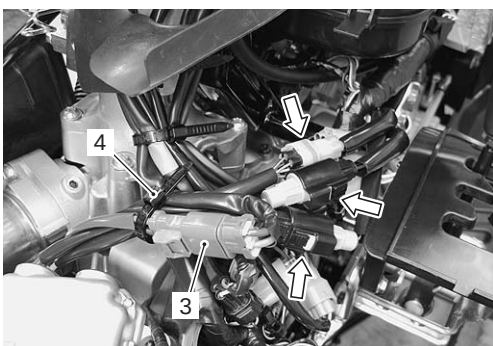

I931H1630065-02

- Install the front fender. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.

EPS Body Assembly Components

B931H26306003

Refer to **“Steering / Handlebars Components: in Section 6B”**.

EPS Body Assembly Removal and Installation

B931H26306004


Refer to **“Steering / Handlebars Components: in Section 6B”**.

Refer to **“Steering / Handlebars Assembly Construction: in Section 6B”**.

Removal


- 1) Remove the handlebars. Refer to **“Steering / Handlebars Components: in Section 6B”**.
- 2) Remove the combination meter. Refer to **“Combination Meter Removal and Installation: in Section 9C”**.
- 3) Remove the front fender. Refer to **“Front Side Exterior Parts Removal and Installation: in Section 9D”**.

- 4) Remove the holder cover (1) by removing the fastener (2).

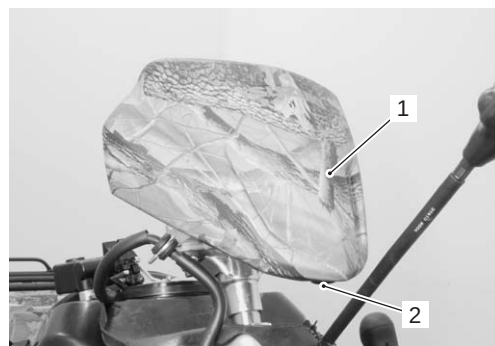


I931H1630066-02

- 5) Remove the center cover (3).

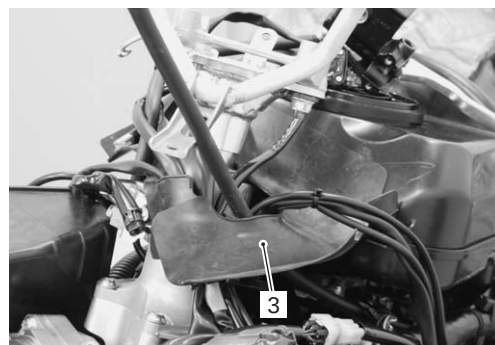

I931H1630067-02

- 6) Remove the handlebar holder (4) by removing the nuts (5).

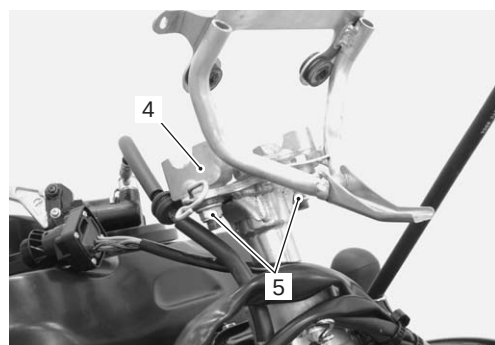

I931H1630068-03

- 7) Remove the steering shaft upper nut (6).




I931H1630069-04

6C-50 Power Assisted Steering System:

- 8) Remove the steering shaft plate (7) with the special tool.


Special tool

 (A): 09944-36011 (Steering wheel remover)

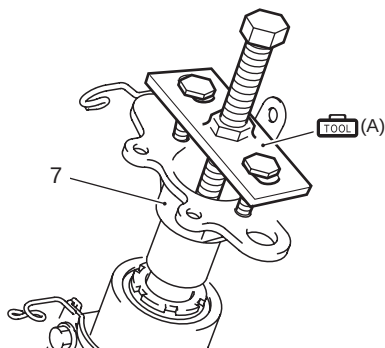


I931H1630112-02

- 9) Remove the front brake hose union (8) from the cable guide (9).

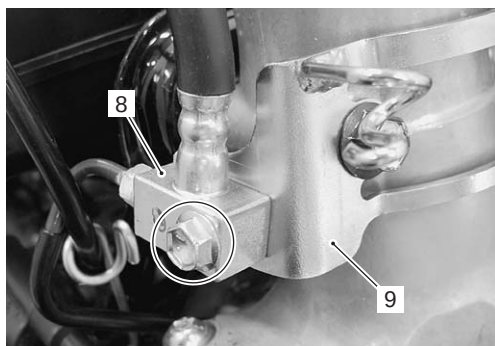

I931H1630070-04

- 10) Remove the steering shaft bolt (10).

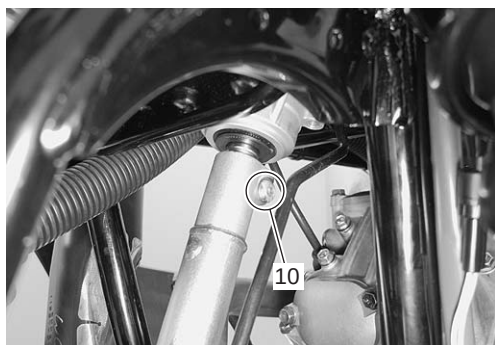


I931H1630072-05

- 11) Remove the EPS body assembly mounting nuts and bolts.



I931H1630073-01

- 12) Remove the cable guide (11).

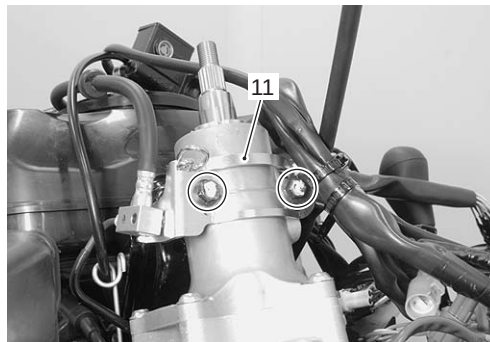

I931H1630071-06

- 13) Remove the EPS body assembly.

CAUTION

Never disassemble the EPS body assembly.



I931H1630074-01

Installation


Refer to "Steering / Handlebars Assembly Construction: in Section 6B".

Install the EPS body assembly in the reverse order of removal. Pay attention to the following points:

- Apply grease to the spline of the EPS body assembly.

 : Grease 99000-25160 (Water resistance grease or equivalent)

- When installing the EPS body assembly, align the marking "A" of the EPS output shaft and slide "B" of the steering shaft.

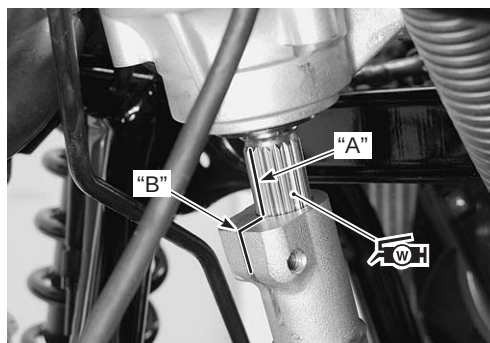


I931H1630075-02

- Install the cable guide (1) and tighten the bolts (2) to the specified torque.

Tightening torque

EPS body assembly mounting bolt (a): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)

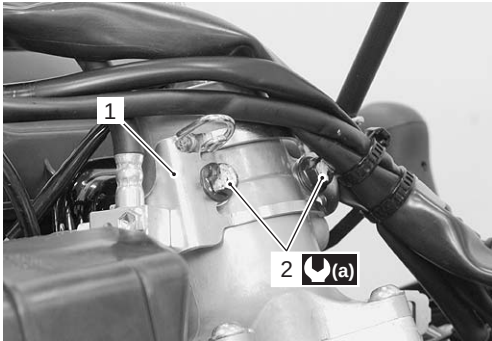


I931H1630078-03

- Tighten the EPS body assembly mounting nuts (3) to the specified torque.

Tightening torque

EPS body assembly mounting nut (b): 28 N·m (2.8 kgf-m, 20.0 lbf-ft)

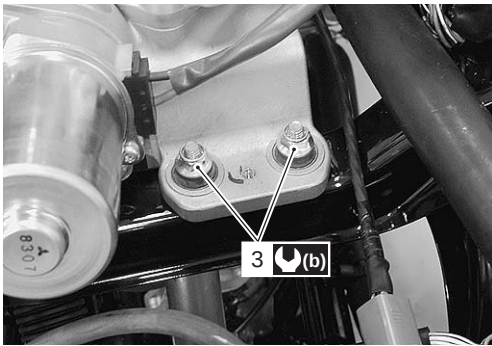

I931H1630076-02

- Apply thread lock to the steering shaft bolt (4) and tighten it to the specified torque.

1303 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)


Tightening torque

Steering shaft bolt (c): 26 N·m (2.6 kgf-m, 19.0 lbf-ft)



I931H1630077-02

- Install the front brake hose union (5) to the cable guide.

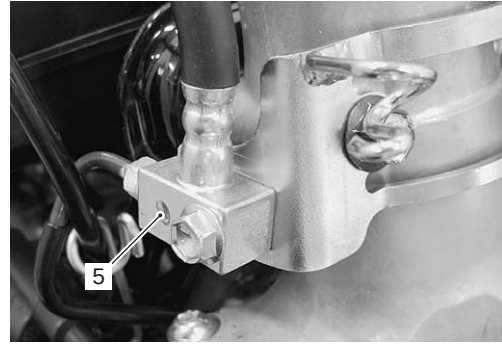

I931H1630079-01

- Apply grease to the spline of the EPS body assembly.

W : Grease 99000-25160 (Water resistance grease or equivalent)


- Install the steering shaft plate (6) and tighten the steering shaft upper nut to the specified torque.

CAUTION

- Never use an impact wrench when tightening the steering shaft upper nut.
- Never exceed the specified torque to prevent EPS body assembly damage.

Tightening torque

Steering shaft upper nut (d): 120 N·m (12.0 kgf-m, 87.0 lbf-ft)

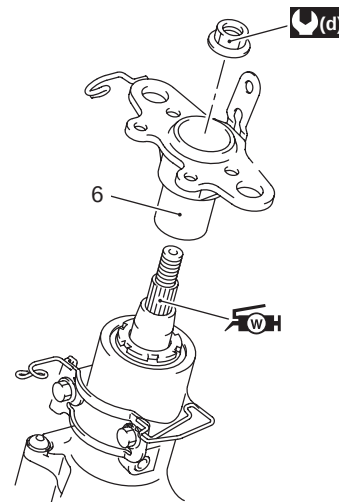


I931H1630111-02

6C-52 Power Assisted Steering System:

- Install the handlebar holder (7) and tighten the nuts to the specified torque.


Tightening torque

Handlebar holder nut (e): 60 N·m (6.0 kgf·m, 43.5 lbf·ft)

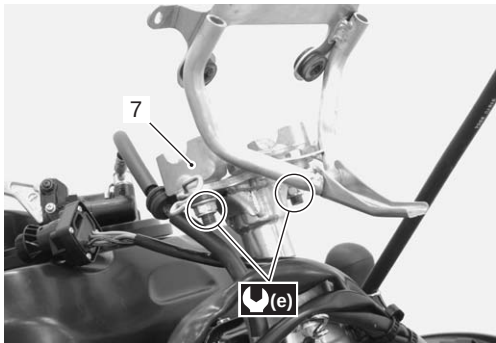

I931H1630081-02


- Install the center cover (8).

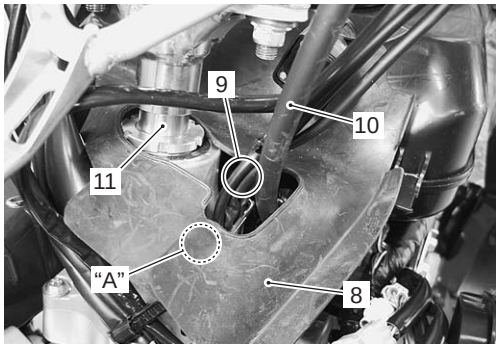

I931H1630091-02

8. Center cover
9. Wiring harness (Left handlebar switch/Parking rear brake switch/ Parking rear brake light switch), (Emergency switch (For P-17) and horn switch (For P-17, 24))
10. Parking/Rear brake cable
11. Steering shaft
"A": Hooked point

- Install the holder cover (12).

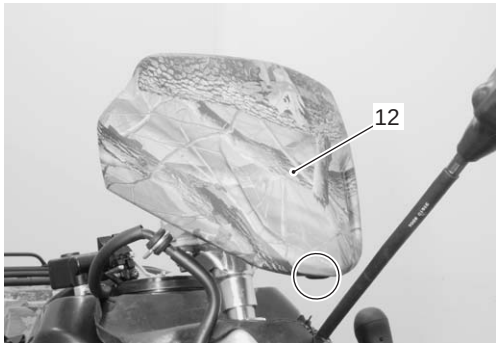

I931H1630083-02

- Install the front fender. Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- Install the handlebars. Refer to "Handlebars Removal and Installation: in Section 6B".
- Install the combination meter. Refer to "Combination Meter Removal and Installation: in Section 9C".

EPS Motor Inspection

B931H26306005


- 1) Disconnect the EPS motor coupler.
- 2) First, check for insulation with the tester between terminals "A" and "B".
If continuity does not exist, replace the EPS body assembly with a new one.

Special tool

 (A): 09900-25008 (Multi circuit tester set)

Tester knob indication

Continuity (·)))

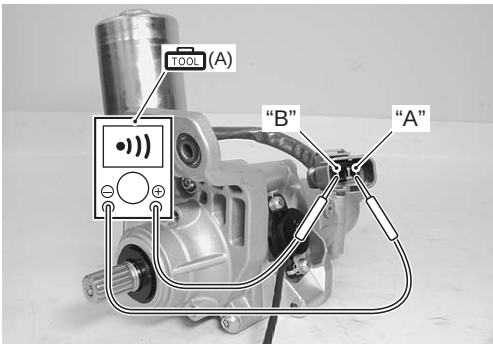

I931H1630107-02


- 3) Next, check for insulation with the tester between terminal "A" and body ground "C" and terminal "B" and body ground "C".
If continuity is found, replace the EPS body assembly with a new one.

Special tool

 (A): 09900-25008 (Multi circuit tester set)

Tester knob indication

Continuity (·)))

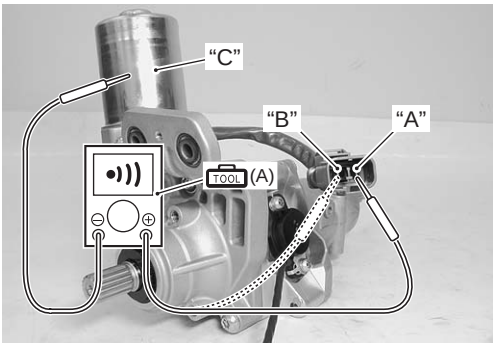

I931H1630108-02

Specifications

Tightening Torque Specifications

B931H26307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
EPS control unit mounting nut	12	1.2	8.5	☞ (Page 6C-48)
EPS body assembly mounting bolt	26	2.6	19.0	☞ (Page 6C-51)
EPS body assembly mounting nut	28	2.8	20.0	☞ (Page 6C-51)
Steering shaft bolt	26	2.6	19.0	☞ (Page 6C-51)
Steering shaft upper nut	120	12.0	87.0	☞ (Page 6C-51)
Handlebar holder nut	60	6.0	43.5	☞ (Page 6C-52)

NOTE

The specified tightening torque is described in the following.
 “EPS Control Unit Construction (Page 6C-47)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.









Special Tools and Equipment

Recommended Service Material

B931H26308001

Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease or equivalent	P/No.: 99000–25160	☞ (Page 6C-50) / ☞ (Page 6C-51)
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 6C-51)

 Special Tool

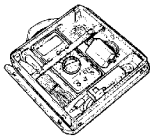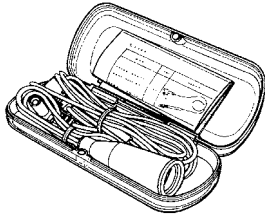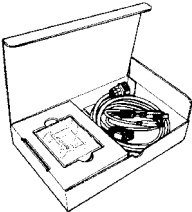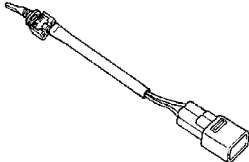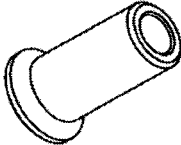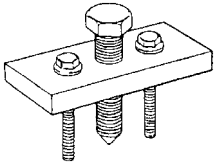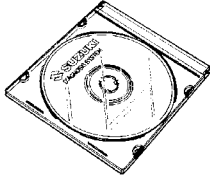09900–25008 Multi circuit tester set ☞ (Page 6C-10) / ☞ (Page 6C-10) / ☞ (Page 6C-12) / ☞ (Page 6C-13) / ☞ (Page 6C-13) / ☞ (Page 6C-15) / ☞ (Page 6C-16) / ☞ (Page 6C-17) / ☞ (Page 6C-26) / ☞ (Page 6C-27) / ☞ (Page 6C-29) / ☞ (Page 6C-30) / ☞ (Page 6C-31) / ☞ (Page 6C-33) / ☞ (Page 6C-35) / ☞ (Page 6C-36) / ☞ (Page 6C-38) / ☞ (Page 6C-39) / ☞ (Page 6C-41) / ☞ (Page 6C-42) / ☞ (Page 6C-43) / ☞ (Page 6C-45) / ☞ (Page 6C-45) / ☞ (Page 6C-46) / ☞ (Page 6C-52) / ☞ (Page 6C-52)		09900–25009 Needle pointed probe set ☞ (Page 6C-27) / ☞ (Page 6C-31) / ☞ (Page 6C-35) / ☞ (Page 6C-36) / ☞ (Page 6C-38) / ☞ (Page 6C-41) / ☞ (Page 6C-43)	
09904–41010 SUZUKI Diagnostic system set ☞ (Page 6C-19) / ☞ (Page 6C-21) / ☞ (Page 6C-23)		09930–82710 Mode select switch ☞ (Page 6C-17) / ☞ (Page 6C-18)	
09930–82720 Mode selection switch ☞ (Page 6C-20)		09942–83110 Clip remover ☞ (Page 6C-48)	
09944–36011 Steering wheel remover ☞ (Page 6C-50)		99565–01010–019 CD-ROM Ver.19 ☞ (Page 6C-19) / ☞ (Page 6C-21) / ☞ (Page 6C-23)	

Section 9

Body and Accessories

CONTENTS

Precautions.....9-1	Engine Coolant Temperature Removal and Installation.....9C-4
Precautions.....9-1	Fuel Level Indicator Inspection.....9C-4
Precautions for Electrical System.....9-1	Fuel Level Gauge Inspection.....9C-5
Component Location.....9-1	Speedometer Inspection.....9C-6
Electrical Components Location.....9-1	Speed Sensor Removal and Installation.....9C-6
Wiring Systems.....9A-1	Speed Sensor Inspection.....9C-6
Schematic and Routing Diagram.....9A-1	Ignition Switch Inspection.....9C-7
Wiring Diagram.....9A-1	Ignition Switch Removal and Installation.....9C-7
Wiring Harness Routing Diagram.....9A-4	Horn Inspection (For P-17, 24).....9C-7
Specifications.....9A-7	Horn Removal and Installation (For P-17, 24).....9C-8
Service Data.....9A-7	Specifications.....9C-8
Tightening Torque Specifications.....9A-7	Service Data.....9C-8
Lighting Systems.....9B-1	Tightening Torque Specifications.....9C-8
Repair Instructions.....9B-1	Special Tools and Equipment.....9C-8
Headlight Components.....9B-1	Recommended Service Material.....9C-8
Headlight Removal and Installation.....9B-1	Special Tool.....9C-8
Headlight Bulb Replacement.....9B-2	Exterior Parts.....9D-1
Headlight Beam Adjustment.....9B-2	Repair Instructions.....9D-1
Rear Combination Light components.....9B-2	Exterior Parts Construction.....9D-1
Rear Combination Light Removal and Installation.....9B-3	Rear Fender Heat Shield Construction.....9D-3
Rear Combination Light Bulb Replacement.....9B-3	Fuel Tank Lower Cover Heat Shield Installation.....9D-4
Reversing Light Bulb Replacement (For P-17).....9B-4	Fastener Removal and Installation.....9D-5
Reversing Light Relay Inspection (For P-17).....9B-4	Front Side Exterior Parts Removal and Installation.....9D-6
Dimmer Switch Inspection.....9B-4	Rear Side Exterior Parts Removal and Installation.....9D-9
Specifications.....9B-5	Seat Removal and Installation.....9D-11
Service Data.....9B-5	Under Cover Components.....9D-12
Special Tools and Equipment.....9B-5	Under Cover Removal and Installation.....9D-12
Special Tool.....9B-5	Body Structure.....9E-1
Combination Meter / Fuel Meter / Horn.. 9C-1	Repair Instructions.....9E-1
General Description.....9C-1	Body Frame Construction.....9E-1
Combination Meter System Description.....9C-1	Footrest Construction.....9E-2
Repair Instructions.....9C-2	Footrest Removal and Installation.....9E-2
Combination Meter Components.....9C-2	Carrier Construction.....9E-3
Combination Meter Removal and Installation.....9C-2	Front Carrier Removal and Installation.....9E-3
Combination Meter Disassembly and Assembly.....9C-3	Rear Carrier Removal and Installation.....9E-4
Combination Meter Inspection.....9C-3	Front Grip Bar Construction.....9E-5
Engine Coolant Temperature Indicator Light Inspection.....9C-3	Front Grip Bar Removal and Installation.....9E-5
	Trailer Towing Construction.....9E-6
	Trailer Towing Removal and Instruction.....9E-6

9-ii Table of Contents

Specifications.....	9E-7	Special Tools and Equipment	9E-7
Tightening Torque Specifications.....	9E-7		

Precautions

Precautions

Precautions for Electrical System

B931H29000001

Refer to “General Precautions: in Section 00” and “Precautions for Electrical Circuit Service: in Section 00”.

Component Location

Electrical Components Location

B931H29003001

Refer to “Electrical Components Location: in Section 0A”.

 
Wiring Systems

Schematic and Routing Diagram


Wiring Diagram

Refer to “Wire Color Symbols: in Section 0A”.

B931H29102001




For P-24, 28, 33

 

Wiring Harness Routing Diagram


B931H29102002

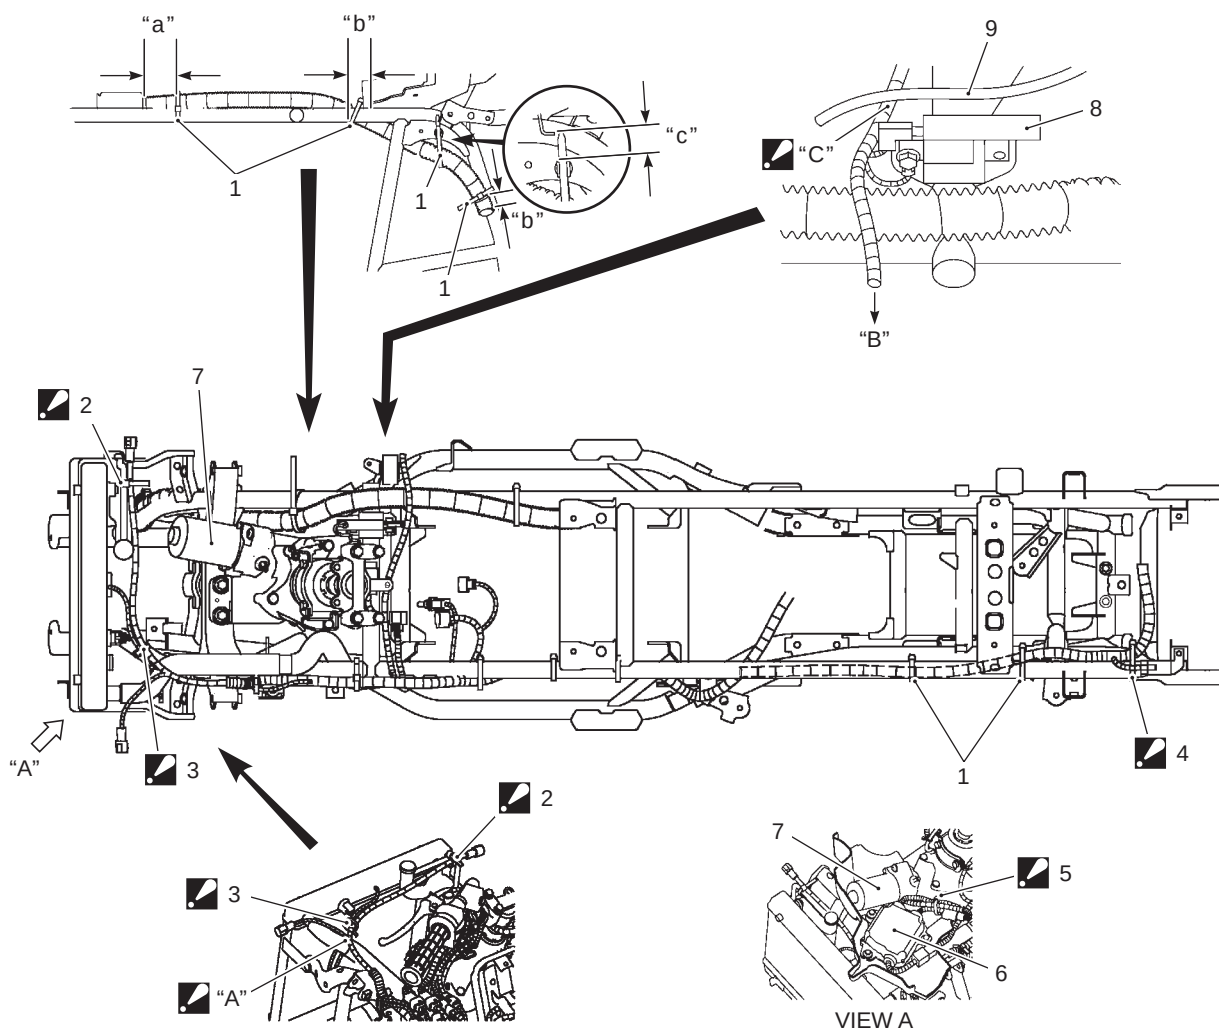

I931H1910901-07


1. Clamp	9. Throttle cable
2. Clamp : Bind the wiring harness and hose with the clamp.	"A": Pass the wiring harness and cooling fan lead wire over the radiator hose.
3. Clamp : Bind the wiring harness and cooling fan thermo switch with the clamp.	"B": To power source.
4. Clamp : Bind the wiring harness and back up relay (For P-17) with the clamp.	"C": Pass the wiring harness under of the throttle cable.
5. Clamp : Bind the EPS motor lead wire and EPS control unit lead wires.	"a": 60 – 80 mm (2.4 – 3.2 in)
6. EPS control unit	"b": 20 – 30 mm (0.8 – 1.2 in)
7. EPS motor	"c": 10 – 15 mm (0.4 – 0.6 in)
8. Ignition coil	

9A-5 Wiring Systems:

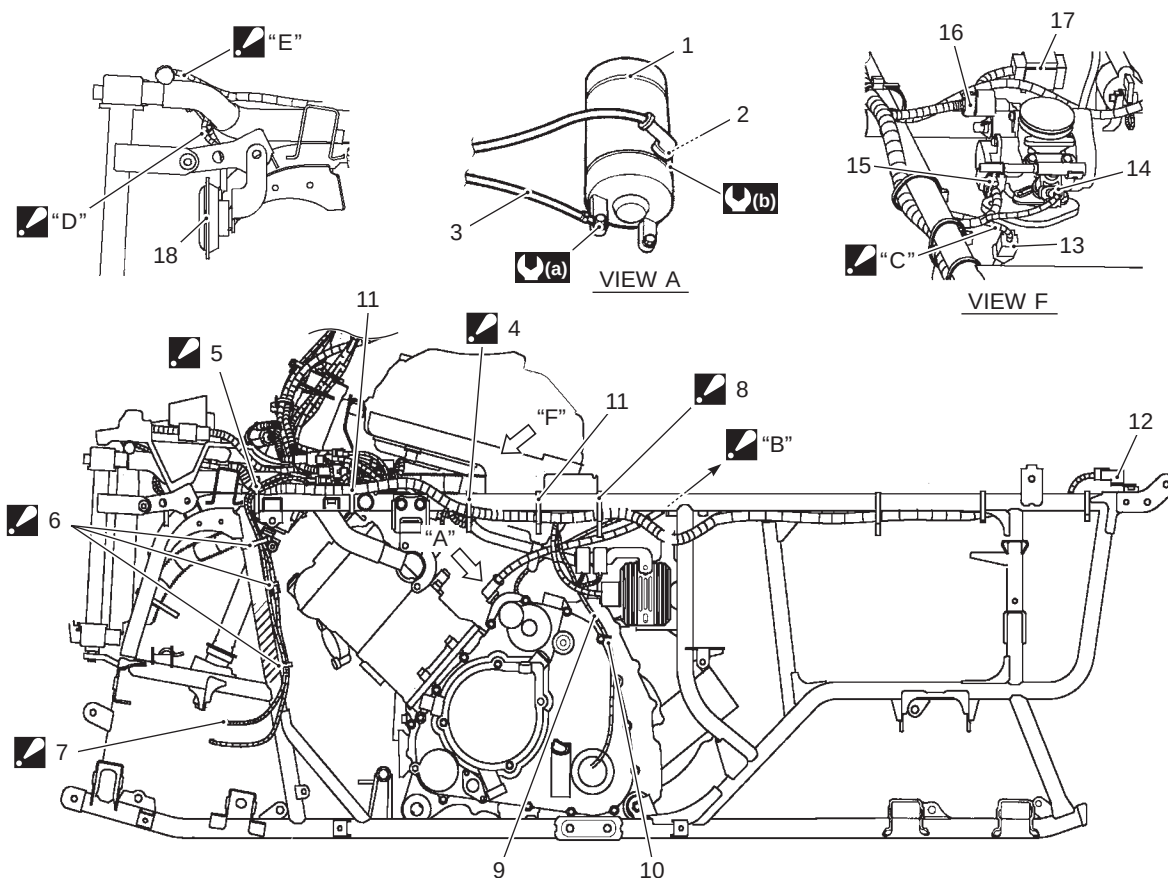


I931H1910902-07

1. Starter motor	13. ECT sensor coupler
2. Starter motor terminal	14. Injector coupler
3. Engine earth	15. IAP/TP/IAT sensor coupler
4. Clamp : Bind the wiring harness and rear brake cable with the clamp.	16. ISC valve coupler
5. Clamp : Bind the wiring harness and diff-lock actuator lead wire with the clamp.	17. TO sensor
6. Clamp : Bind the diff-lock actuator lead wire and rear brake switch lead wire with the clamp.	18. Horn (For P-17, 24)
7. Clamp : Bind the rear brake switch lead wire with the clamp.	"B": To rear fender top.
8. Clamp : Bind the wiring harness, generator lead wire and gear position switch lead wire.	"C": Slack the read wire.
9. Speed sensor lead wire.	"D": Pass the horn lead wire inside of the stay.
10. Clamp	"E": Pass the branch of left headlight lead wire over the radiator hose.
11. Clamp	(a) : 10 N·m (1.0 kgf-m, 7.0 lbf-ft)
12. Back up relay (For P-17)	(b) : 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

 

Downloaded from www.Manualslib.com manuals search engine

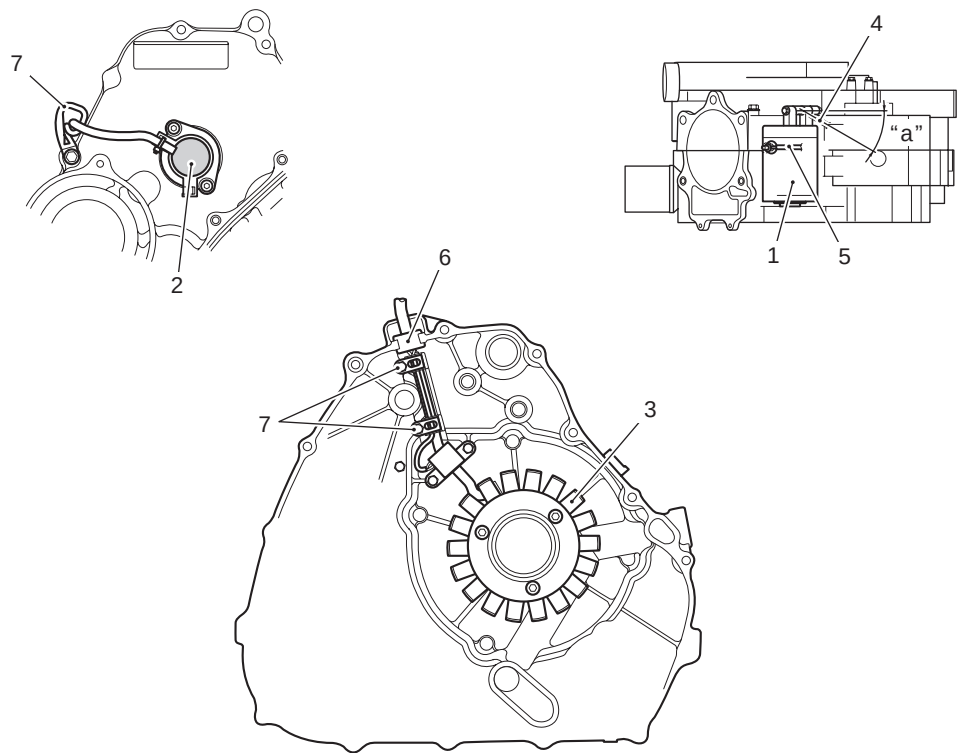

I931H1910908-01

1. Starter motor	3. Generator stator	5. Starter motor lead wire	7. Clamp
2. Gear position switch	4. Ground wire	6. Grommet	"a": 30°

Specifications

Service Data

B931H2910S001

Electrical

Unit: mm

Item			Specification	Note
Fuse size	Headlight	HI	10 A	
		LO	10 A	
	Fuel		10 A	
	Ignition		15 A	
	Power source		10 A	
	Fan		15 A	
	Main		30 A	
	EPS		40 A	

Tightening Torque Specifications

B931H2910S002

NOTE

The specified tightening torque is described in the following.
“Wiring Harness Routing Diagram (Page 9A-4)”

Reference:


For the tightening torque of fastener not specified in this section, refer to “Tightening Torque List: in Section 0C”.

Lighting Systems

Repair Instructions

Headlight Components

B931H29206001

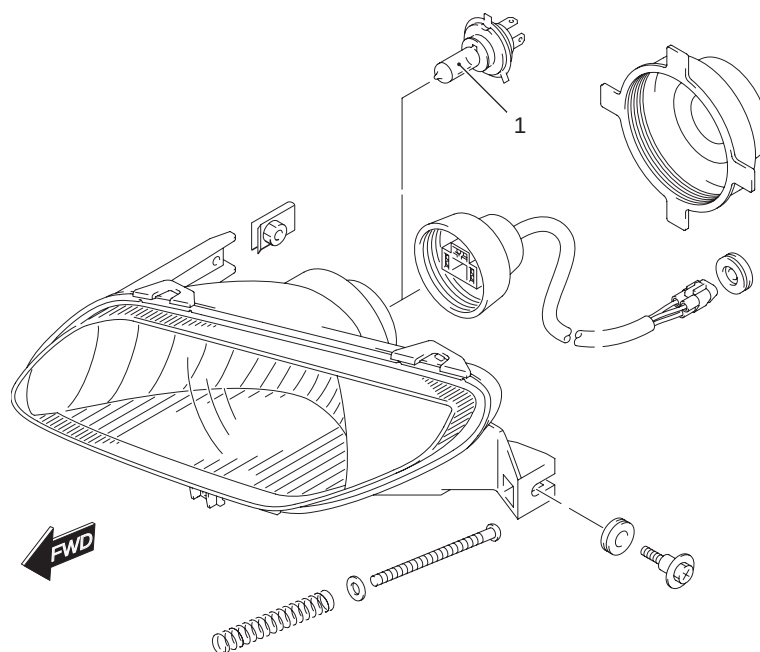

I931H1920011-02


1. Headlight bulb (12 V 35/35 W)

Headlight Removal and Installation

B931H29206002


Removal

- 1) Remove the front grill upper cover.
Refer to "Front Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the headlight coupler (1).

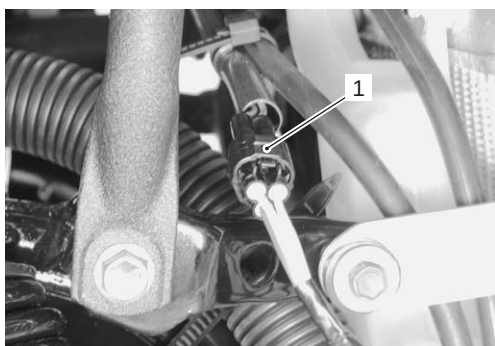


I831G1920003-01

- 3) Remove the headlight assembly (2) by removing screw (3), fastener (4) and bolts (5).

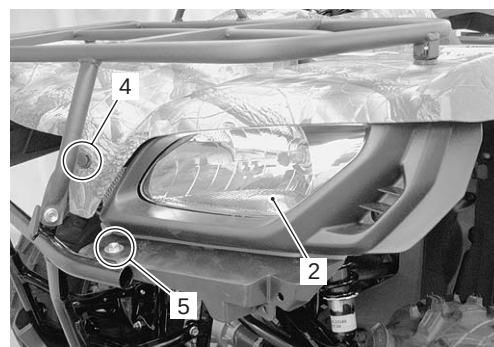

I931H1920001-01

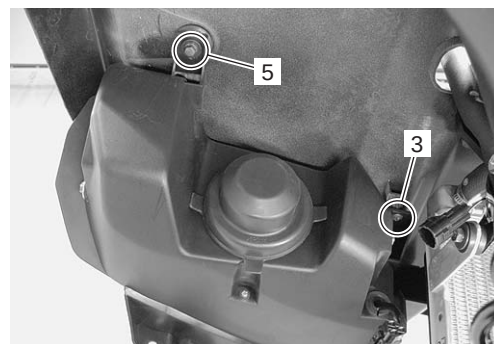

I931H1920002-01

9B-2 Lighting Systems:

Installation

Install the headlight in the reverse order of removal. Pay attention to the following point:

- After installing, be sure to inspect the headlight beam. Refer to "Headlight Beam Adjustment (Page 9B-2)".


Headlight Bulb Replacement

B931H29206003

⚠ CAUTION

- If you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soapy water to prevent premature bulb failure.
- Do not use bulb other than those with predetermined wattage.
- Remove the bulb when it gets cool, since it may be heated to an extremely high temperature when the headlight is turned ON.


- 1) Remove the headlight housing cover (1) and bulb socket rubber cap (2).

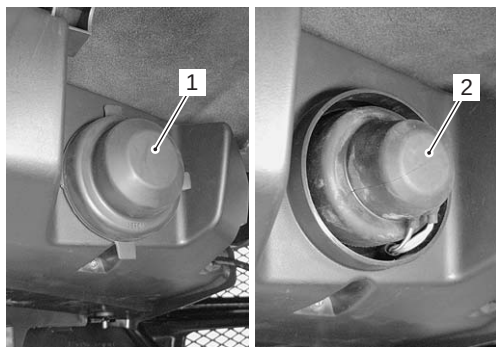

I931H1920003-01

- 2) Disconnect the headlight coupler (3).

- 3) Replace the headlight bulb (4) by unhooking the bulb holder spring (5).

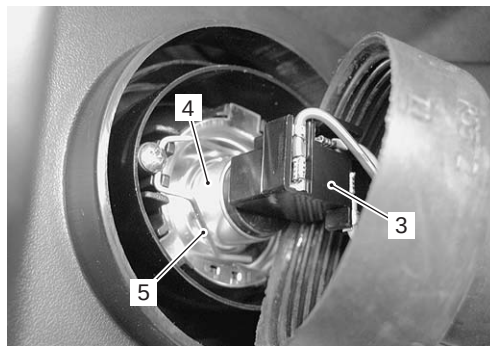

I931H1920004-01

- 4) Reinstall the removed parts.

NOTE

Properly fit the bulb socket rubber cap and headlight housing cover.

Headlight Beam Adjustment

B931H29206004


Adjust the headlight vertical beam.



I931H1920005-01

Rear Combination Light components

B931H29206005

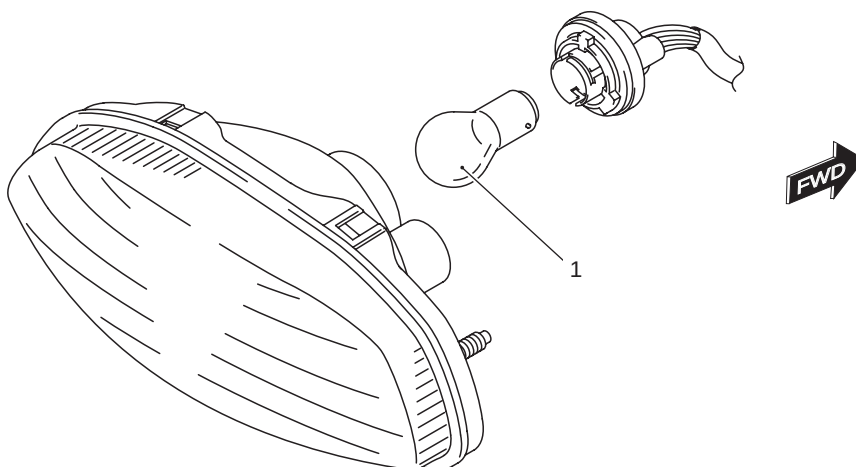

1. Brake light/Tailight bulb (12 V 21/5 W)

I831G1920019-04

Rear Combination Light Removal and Installation

B931H29206006


Removal

- 1) Remove the rear combination light mounting bolts.



I931H1920006-01

- 2) Remove the rear combination light assembly by disconnecting the clamp (1) and coupler (2).

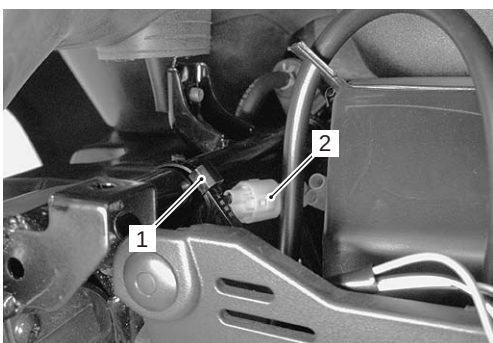

I931H1920007-01

Installation

Install the rear combination light in the reverse order of removal.

Rear Combination Light Bulb Replacement

B931H29206007

⚠ CAUTION

- If you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soapy water to prevent premature bulb failure.
- Do not use bulb other than those with predetermined wattage.

- 1) Remove the rear combination light.



I931H1920006-01

- 2) Remove the bulb socket by turning it counterclockwise.



I931H1920008-01

- 3) Push in on the bulb, turn it counterclockwise, and pull it out.
- 4) Replace the bulb.




I931H1920009-01

- 5) Reinstall the removed parts.

Reversing Light Bulb Replacement (For P-17)

B931H29206008

Remove the reversing light bulb (1) as shown in the figure.

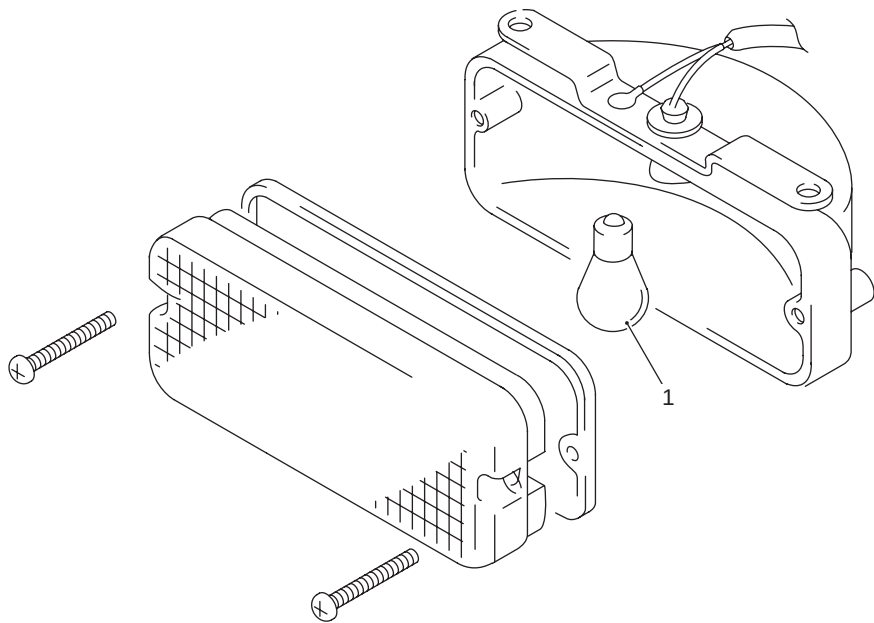

I831G1920025-03

1. Reversing light bulb (12 V/21 W)

Reversing Light Relay Inspection (For P-17)

B931H29206009


First, check the insulation between “A” and “B” terminals with the multi-circuit tester. Then apply 12 V to terminals “C” and “D” ((+) to “C” and (–) to “D”) and check the continuity between “A” and “B”. If there is no continuity, replace the reversing light relay with a new one.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

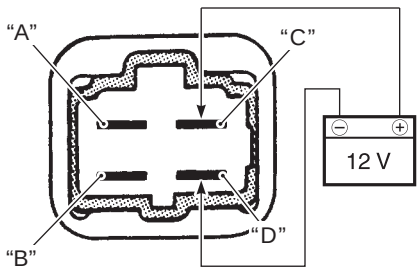

I831G1920028-01


Dimmer Switch Inspection

B931H29206010

Inspect the dimmer switch in the following procedures:

- 1) Remove the left inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.

- 2) Disconnect the handlebar switch coupler (1).

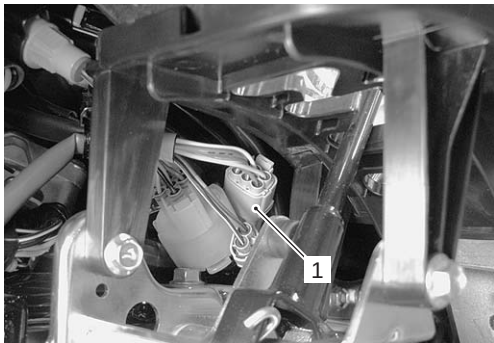

I931H1920010-01

- 3) Inspect the dimmer switch for continuity with a tester. If any abnormality is found, replace the handlebar switch assembly with a new one. Refer to “**Handlebars Removal and Installation: in Section 6B**”.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

Color	Y	W	Gr
Position			
HI			
LO			

I931H1920012-02

- 4) After finishing the dimmer switch inspection, reinstall the removed parts.

Specifications

Service Data

B931H29207001

Wattage


Unit: W

Item		Specification	
		P-24, 28, 33	P-17
Headlight	HI	35 x 2	←
	LO	35 x 2	←
Brake light/Taillight		21/5	←
Reversing light		—	21

Special Tools and Equipment

Special Tool

B931H29208001

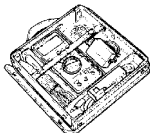09900–25008 Multi circuit tester set  (Page 9B-4) / (Page 9B-4)	
---	--

Combination Meter / Fuel Meter / Horn

General Description


Combination Meter System Description

B931H29301001

This combination meter mainly consists of LCD (Liquid Crystal Display) and LED (Light Emitting Diode). The LCDs indicate Speed, Odo / Trip A / Trip B, Fuel level, Diff-lock, 4WD, Gear position, Engine coolant temperature, FI and Clock / Hour / FI (DTC) respectively.

LED (Light Emitting Diode)

LED is used for the illumination light and each indicator light. LED is maintenance free. LED is less power consuming and more resistant to vibration resistance compared to the bulb.

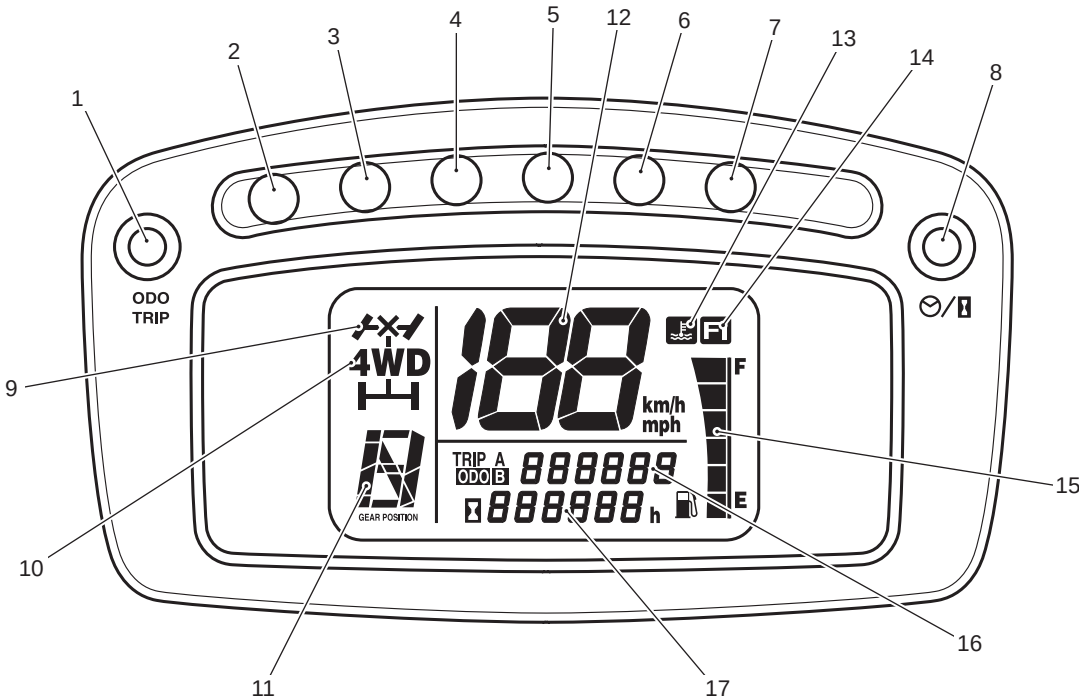


I931H1930001-02

1. Select button (Odo / Trip A / Trip B)	7. LED (EPS indicator light)	13. LCD (Engine coolant temperature indicator)
2. LED (High-beam indicator light) [For P-17]	8. Select button (Clock / Hour / FI (DTC))	14. LCD (FI indicator)
3. LED (Diff-lock indicator light)	9. LCD (Diff-lock indicator)	15. LCD (Fuel level indicator)
4. LED (Reverse indicator light)	10. LCD (4WD indicator)	16. LCD (Odo / Trip A / Trip B)
5. LED (Neutral indicator light)	11. LCD (Gear position indicator)	17. LCD (Clock / Hour / FI (DTC))
6. LED (Engine coolant temperature / FI indicator light)	12. LCD (Speedometer)	

Repair Instructions

Combination Meter Components

B931H29306001

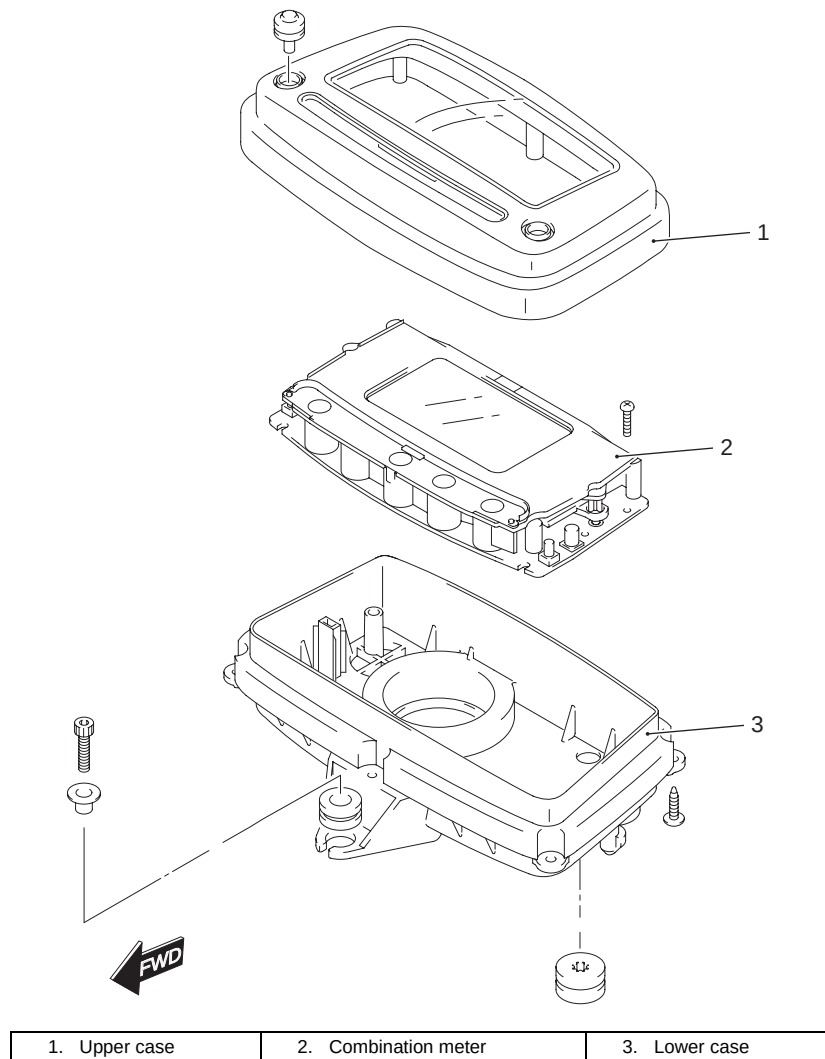

I931H1930019-01

Combination Meter Removal and Installation


B931H29306002

⚠ CAUTION

When disconnecting and reconnecting the combination meter coupler, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

Removal

- 1) Remove the combination meter cover (1) by removing the screws (2), fastener (3) and ignition switch ring nut (4).

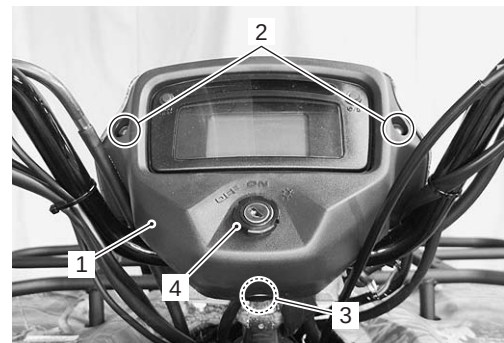


I931H1930002-01

- 2) Remove the combination meter mounting bolt.



I931H1930003-01

- 3) Disconnect the combination meter coupler (5) and remove the combination meter assembly.

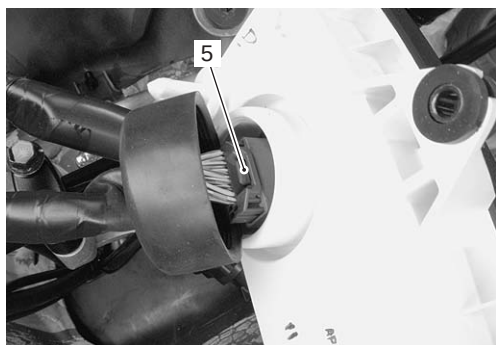

I931H1930004-01

Installation

Install the combination meter in the reverse order of removal. Pay attention to the following points:

- Make sure that speedometer coupler boot is positioned properly.



I931H1930005-01

Combination Meter Disassembly and Assembly

B931H29306003

Refer to "Combination Meter Removal and Installation (Page 9C-2)".

⚠ CAUTION

Do not attempt to disassemble the combination meter unit.

Disassembly

Disassemble the combination meter as shown in the combination meter components. Refer to "Combination Meter Components (Page 9C-2)".

Assembly

Assemble the combination meter as shown in the combination meter components. Refer to "Combination Meter Components (Page 9C-2)".


Combination Meter Inspection

B931H29306004

LED Inspection

Check that the LEDs (Diff-lock indicator light, Reverse indicator light and FI indicator light/Engine coolant temperature indicator light) immediately light up for two seconds when the ignition switch is turned to ON. Check that other LEDs (Neutral indicator light and High-beam indicator light (for P-17)) light up/go off by operating each switch.

If abnormal condition is found, replace the combination meter unit with a new one after checking its wire harness/coupler. Refer to "Combination Meter Removal and Installation (Page 9C-2)".

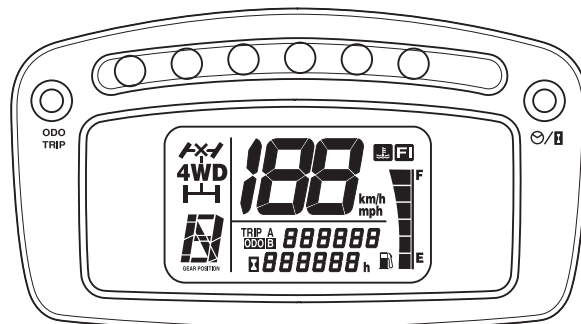

I931H1930018-01

Engine Coolant Temperature Indicator Light Inspection

B931H29306005

Inspect the engine coolant temperature indicator light in the following procedures:


- 1) Remove the seat. Refer to "**Seat Removal and Installation: in Section 9D**".
- 2) Remove the left side cover. Refer to "**Front Side Exterior Parts Removal and Installation: in Section 9D**".

3) Disconnect the ECT sensor coupler (1).



I931H1930006-01

4) Connect the variable resistor (2) between the terminals.

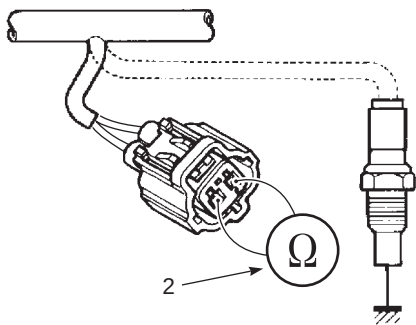


I718H1930009-05

5) Turn the ignition switch ON.

6) Check the LCD and LED operations when the resistance is adjusted to the specified values. If either one or all indications are abnormal, replace the combination meter with a new one. Refer to "Combination Meter Removal and Installation (Page 9C-2)".

Resistance	LED (3)	LCD (4)	Water temperature
Approx. 0.14 kΩ	OFF	OFF	Approx. 110 °C
0 Ω (Jumper wire)	ON	ON	120 °C and over

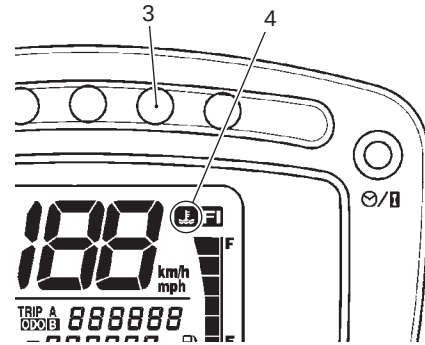

I931H1930007-02

7) Connect the ECT sensor coupler.

8) Reinstall the removed parts.

Engine Coolant Temperature Removal and Installation

B931H29306006


Refer to "ECT Sensor Removal and Installation: in Section 1C".

Fuel Level Indicator Inspection

B931H29306007


Inspect the fuel level indicator in the following procedures:

- 1) Move the rear fender upside. Refer to "Fuel Tank Pressure Control (FTPC) Valve Removal and Installation: in Section 1G".
- 2) Disconnect the fuel level gauge coupler (1).

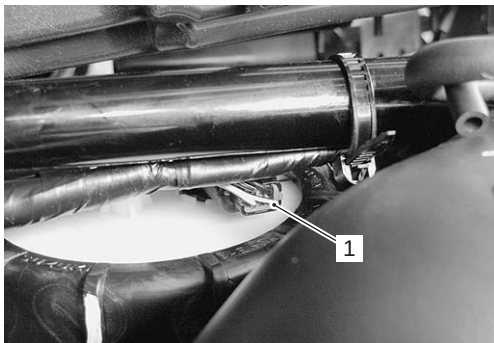

I931H1930008-01

3) Connect the variable resister (2) between the Y/B and B lead wires from the wire harness.

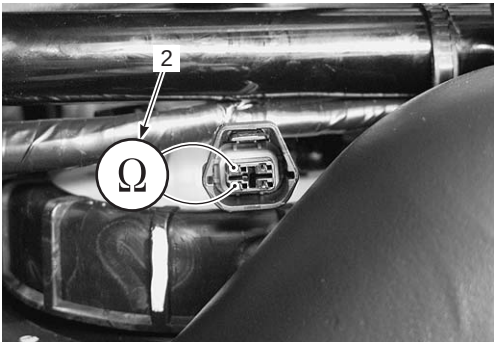

I931H1930009-01

- 4) Turn the ignition switch ON.
- 5) Check the display of fuel level indicator (LCD) as shown in the figure.
If any abnormality is found, replace the combination meter with a new one. Refer to “Combination Meter Removal and Installation (Page 9C-2)”.

NOTE

It takes approx. 13 seconds that the fuel level indicator indicates the detected fuel level.

Resistance	Less than 16 Ω	16.5 – 21.5 Ω	23.5 – 30.5 Ω	33 – 41 Ω	53 – 65 Ω	82 – 100 Ω	164.5 – 207.5 Ω
Fuel level meter							

I931H1930010-01

6) Connect the fuel level gauge coupler and reinstall the removed parts.

Fuel Level Gauge Inspection

B931H29306008

Inspect the fuel level gauge in the following procedures:

- 1) Remove the fuel pump. Refer to “Fuel Pump Assembly Removal and Installation: in Section 1G”.
- 2) Measure the resistance at each fuel level gauge in float position. If the resistance is incorrect, replace fuel pump with a new one.


Special tool

: 09900–25008 (Multi-circuit tester set)

Tester knob indication

Resistance (Ω)

Float position	Resistance
Full “a”	6.4 – 8.4 Ω
Empty “b”	216 – 222 Ω

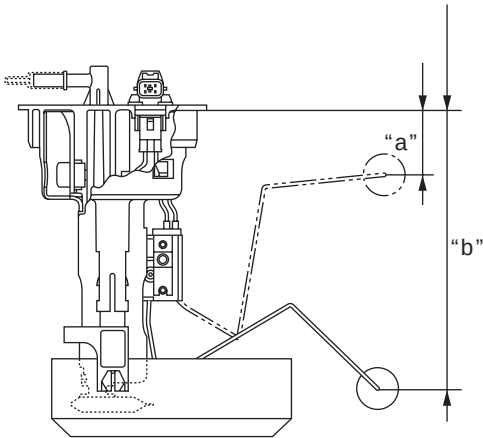

I831G1930014-01

“a”: 27.7 mm (1.09 in)	“b”: 166 mm (6.54 in)
------------------------	-----------------------

- 3) Install the fuel pump. Refer to “Fuel Pump Assembly Removal and Installation: in Section 1G”.

Speedometer Inspection

B931H29306009


If the speedometer, odometer or trip meter does not function properly, inspect the speed sensor and the coupler connections. If the speed sensor and coupler connections are OK, replace the combination meter unit with a new one. Refer to "Combination Meter Removal and Installation (Page 9C-2)".

Speed Sensor Removal and Installation

B931H29306010


Removal

- 1) Remove the engine side cover. Refer to "Rear Side Exterior Parts Removal and Installation: in Section 9D".
- 2) Disconnect the speed sensor coupler (1).

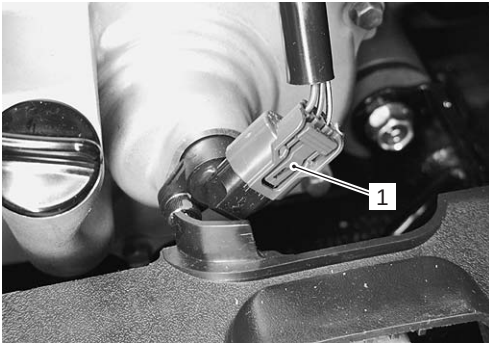

I931H1930011-01

- 3) Remove the speed sensor (2).

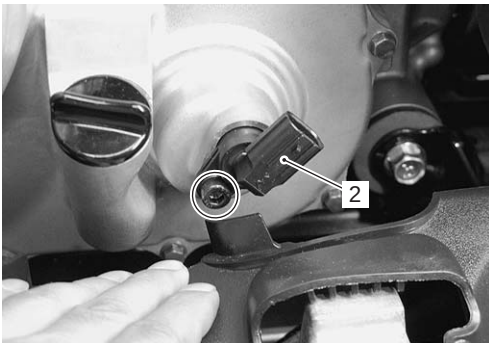

I931H1930012-01

Installation

Install the speed sensor in the reverse order of removal. Pay attention to the following points:

- Apply grease to the speed sensor O-ring.

CAUTION

Replace the O-ring with a new one.

 **Grease 99000-25160 (Water resistance grease or equivalent)**



I931H1930013-01

- Tighten the speed sensor mounting bolt to the specified torque.

Tightening torque

Speed sensor mounting bolt (a): 10 N·m (1.0 kgf-m, 7.0 lbf-ft)



I931H1930014-01

Speed Sensor Inspection

B931H29306011

Inspect the speed sensor in the following procedures:


- 1) Remove the speed sensor. Refer to "Speed Sensor Removal and Installation (Page 9C-6)".
- 2) Connect a 12 V battery, 10 kΩ resistor and multi-circuit tester as shown.

Special tool

 : 09900-25008 (Multi-circuit tester set)

Tester knob indication

Voltage (---)

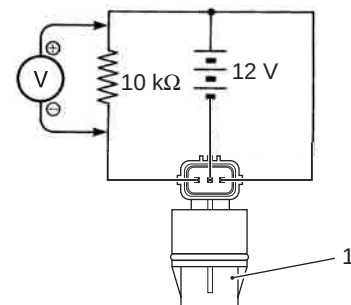


I831G1930018-05

1. Speed sensor

- Move a screwdriver back and forth across the pick-up surface of the speed sensor. The voltage readings should cycle as follows (0 V → 12 V or 12 V → 0 V). If the voltage reading does not change, replace the speed sensor with a new one.

NOTE

While testing, the highest voltage reading should be the same as the battery voltage (12 V).

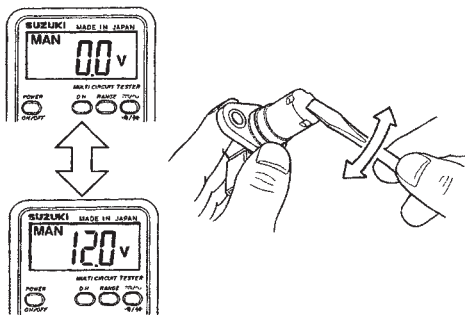

I831G1930022-01

Ignition Switch Inspection

B931H29306012

Inspect the ignition switch in the following procedures:

- Remove the left inner fender. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- Disconnect the ignition switch coupler (1).



I931H1930015-01

- Inspect the ignition switch for continuity with a tester. If any abnormality is found, replace the ignition switch with a new one.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))

Color Position	R	O	Gr	B/Y	B/W
					
ON					
OFF					

I931H1930016-01

- After finishing the ignition switch inspection, reinstall the removed parts.

Ignition Switch Removal and Installation

B931H29306013

Refer to “**Ignition Switch Removal and Installation: in Section 1H**”.

Horn Inspection (For P-17, 24)

B931H29306014

NOTE

If the horn sound condition is normal, it is not necessary to inspect the horn button continuity.

Horn Button Inspection

- Disconnect the horn couplers as shown in the wiring harness routing diagram. Refer to “**Wiring Harness Routing Diagram: in Section 9A**”.
- Inspect the horn button for continuity with a tester. If any abnormality is found, replace the horn button with a new one.

Refer to “**Handlebars Removal and Installation: in Section 6B**”.

Special tool

 : 09900–25008 (Multi-circuit tester set)

Tester knob indication

Continuity (•)))


Color Position	G	B/W
•		
PUSH		

I831G1930024-03

- Connect the horn couplers.

Horn Inspection

- Disconnect the horn couplers as shown in the wiring harness routing diagram. Refer to “**Wiring Harness Routing Diagram: in Section 9A**”.
- Connect a 12 V battery to terminal and terminal. If the sound is not heard from the horn, replace the horn with a new one.

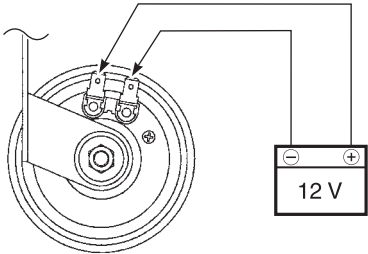

I931H1930017-02

- Connect the horn couplers.

Horn Removal and Installation (For P-17, 24)

B931H29306015

Removal

Disconnect the horn couplers and remove the horn by removing the mounting nut as shown in the wiring harness routing diagram. Refer to **“Wiring Harness Routing Diagram: in Section 9A”**.

Installation

Install the horn in the reverse order of removal.

Specifications**Service Data**

B931H29307001

Wattage

Unit: W

Item	Specification	
	P-24, 28, 33	P-17
Speedometer light	LED	←
High beam indicator light	—	LED
Neutral indicator light	LED	←
FI indicator light/Engine coolant temp. indicator light	LED	←
Reverse indicator light	LED	←
Differential lock indicator light	LED	←
EPS indicator light	LED	←

Tightening Torque Specifications

B931H29307002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Speed sensor mounting bolt	10	1.0	7.0	☞ (Page 9C-6)

Reference:

For the tightening torque of fastener not specified in this section, refer to **“Tightening Torque List: in Section 0C”**.


Special Tools and Equipment**Recommended Service Material**

B931H29308001

Material	SUZUKI recommended product or Specification		Note
Grease	Water resistance grease or equivalent	P/No.: 99000–25160	☞ (Page 9C-6)

Special Tool

B931H29308002

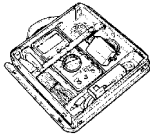09900–25008 Multi circuit tester set ☞ (Page 9C-5) / ☞ (Page 9C-6) / ☞ (Page 9C-7) / ☞ (Page 9C-7)		
---	---	--


Exterior Parts

Repair Instructions

Exterior Parts Construction

B931H29406001


Front Side

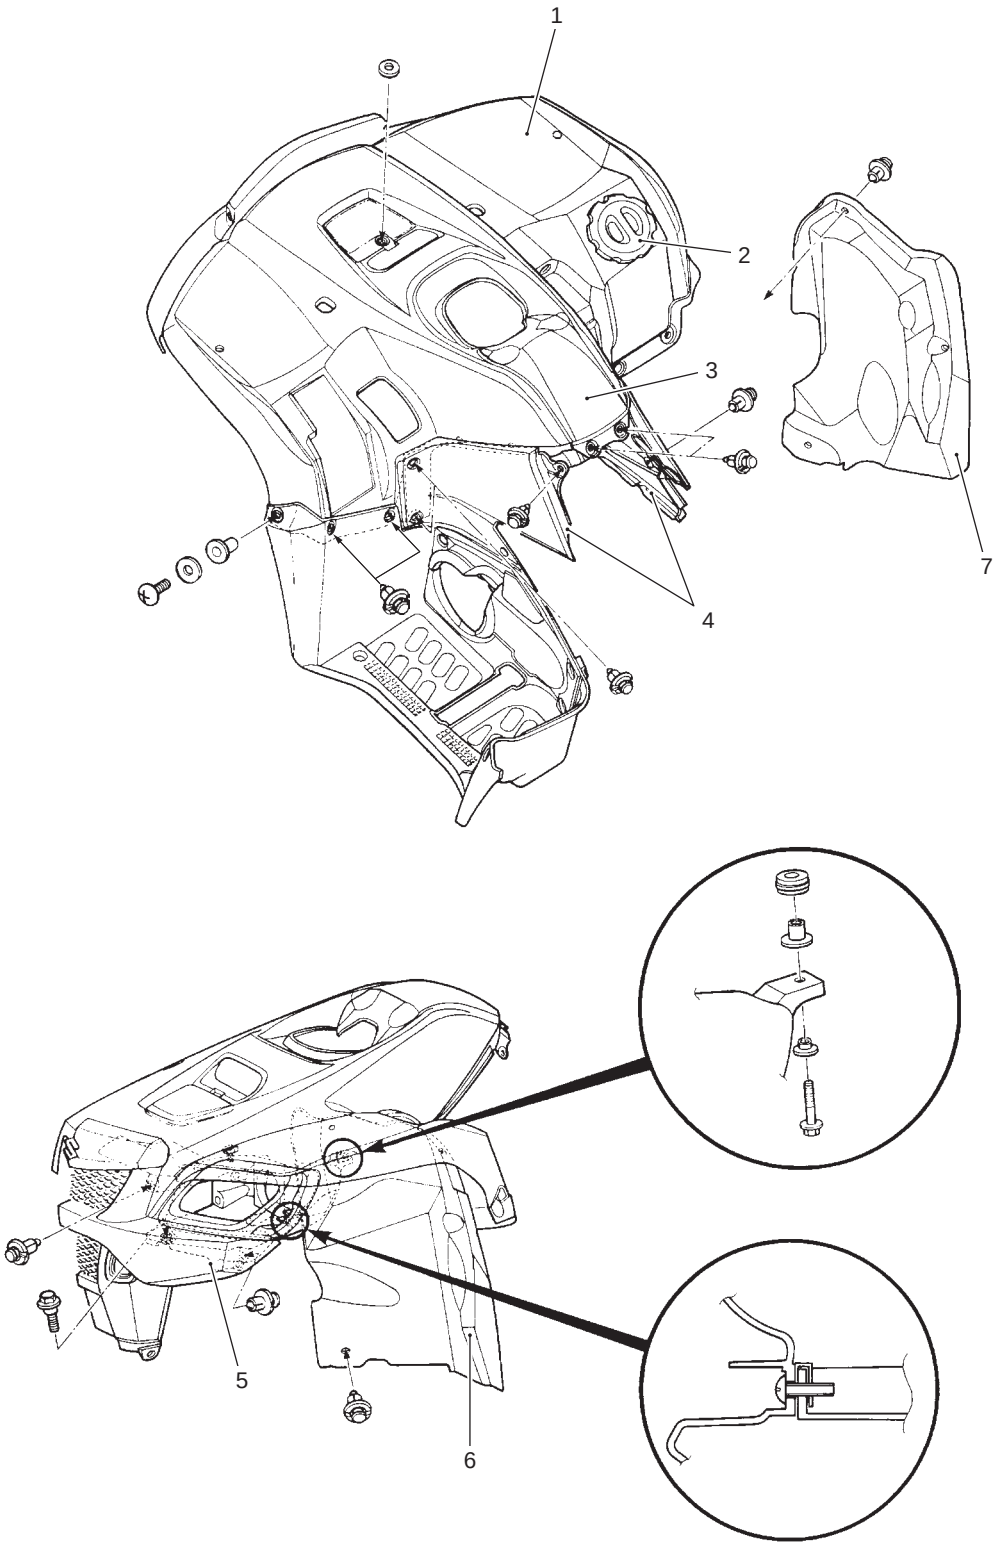

I931H1940040-04

1. Front fender	3. Air cleaner box cover	5. Front grill cover	7. Right inner fender
2. Front box	4. Side cover	6. Left inner fender	

Rear Side

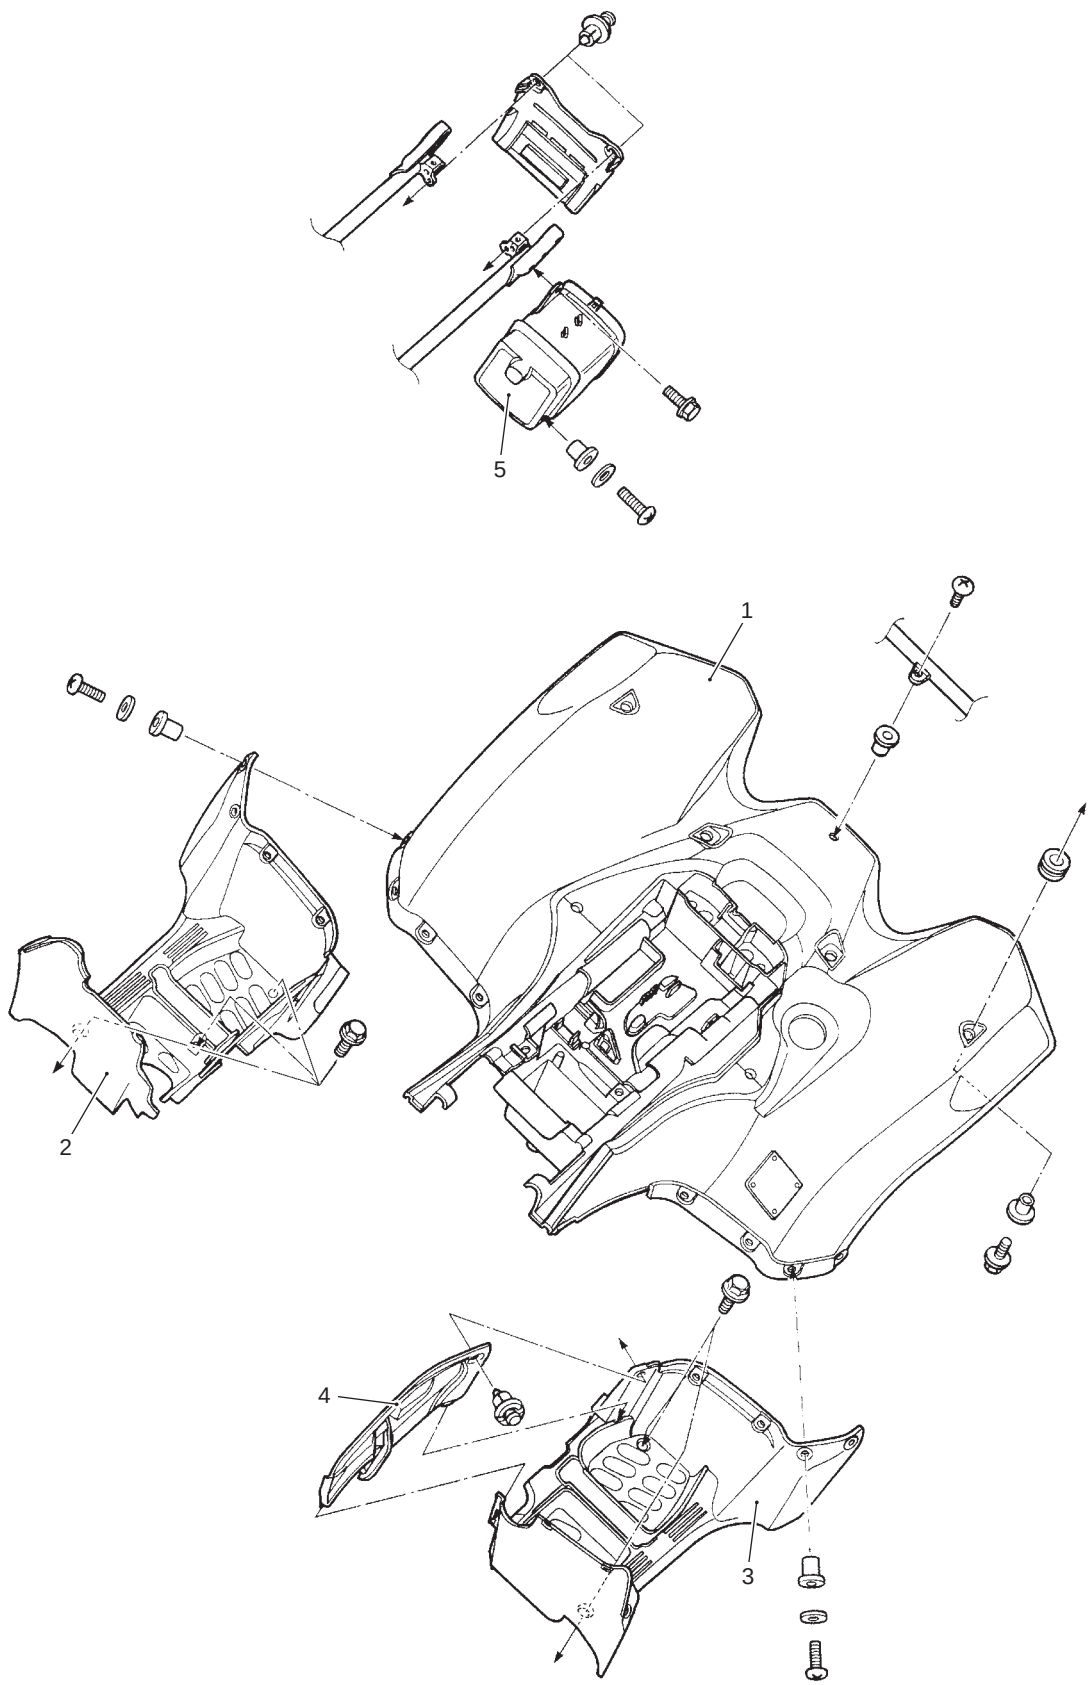


I931H1940041-02

1. Rear fender	2. Right mud guard	3. Left mud guard	4. Engine side cover	5. Rear box
----------------	--------------------	-------------------	----------------------	-------------

Rear Fender Heat Shield Construction

B931H29406002

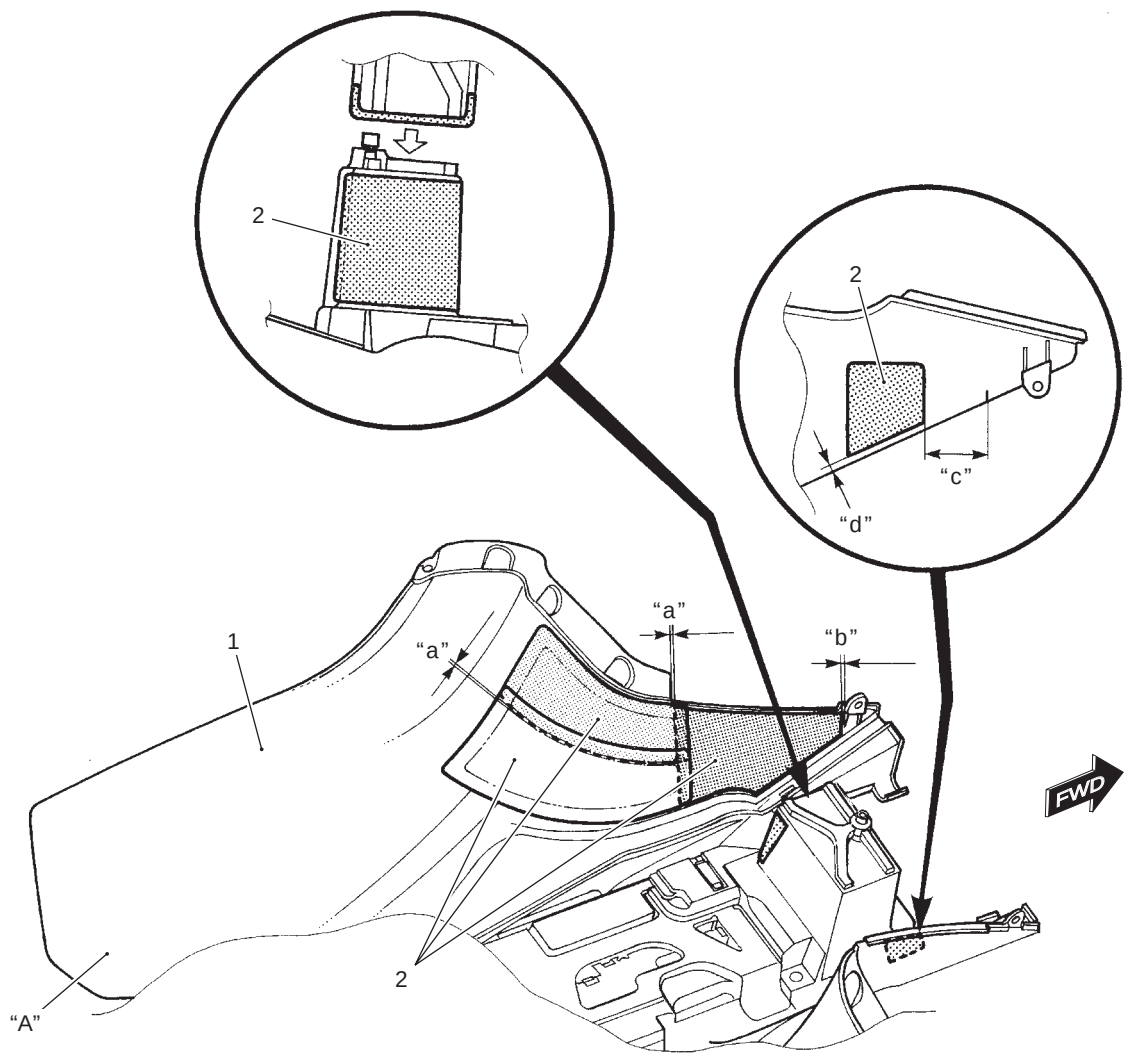


I931H1940042-01

1. Rear fender	"a": 1 – 3 mm (0.04 – 0.12 in)	"c": 67 mm (2.64 in)	"A": Inside of the rear fender.
2. Heat shield	"b": 5 mm (0.2 in)	"d": 8 mm (0.3 in)	

Fuel Tank Lower Cover Heat Shield Installation

B931H29406003

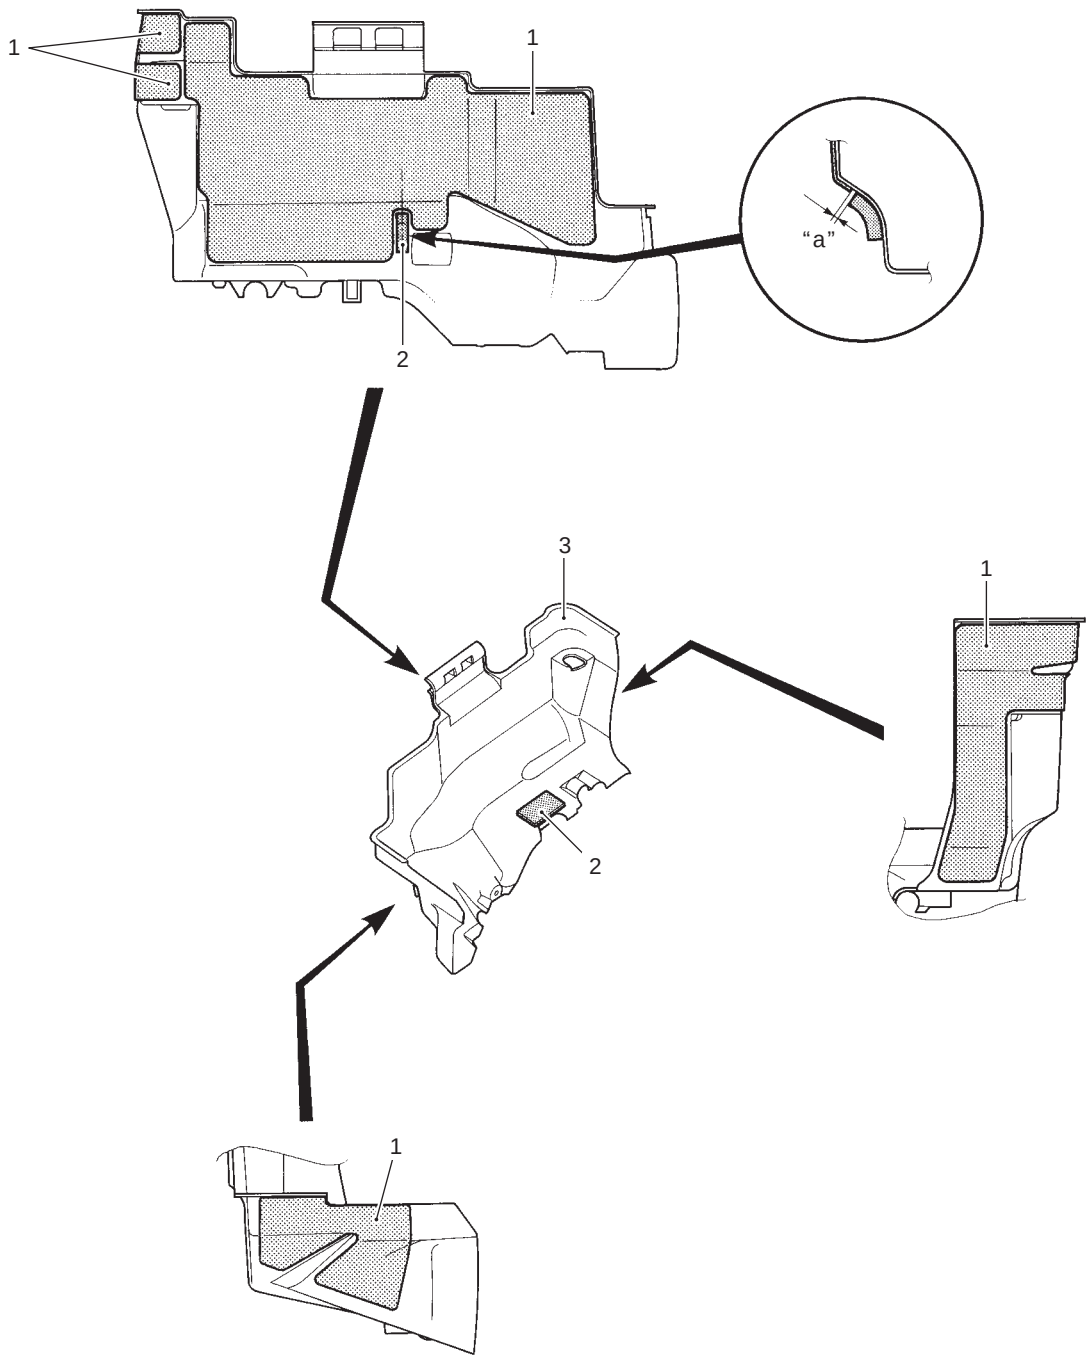

I931H1940044-01


1. Heat shield	2. Cushion	3. Fuel tank lower cover	"a": Max. 5 mm (0.2 in)
----------------	------------	--------------------------	-------------------------

Fastener Removal and Installation

B931H29406004

Type A Removal


- 1) Depress the head of fastener center piece (1).
- 2) Pull out the fastener (2).

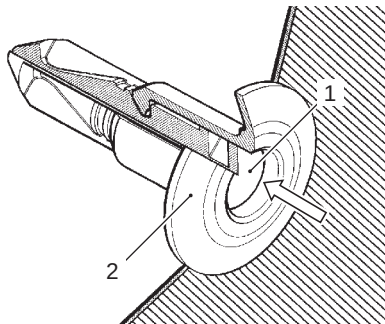

I649G1940005-02

Installation

- 1) Let the center piece stick out toward the head so that the pawls "A" closes.

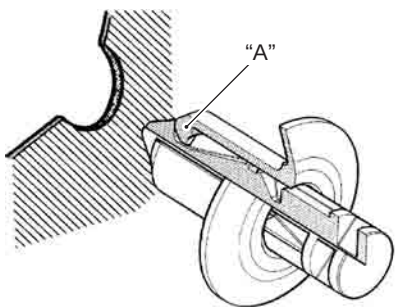


I649G1940006-02

- 2) Insert the fastener into the installation hole.

NOTE

To prevent the pawl "A" from damage, insert the fastener all the way into the installation hole.


- 3) Push in the head of center piece until it becomes flush with the fastener outside face.

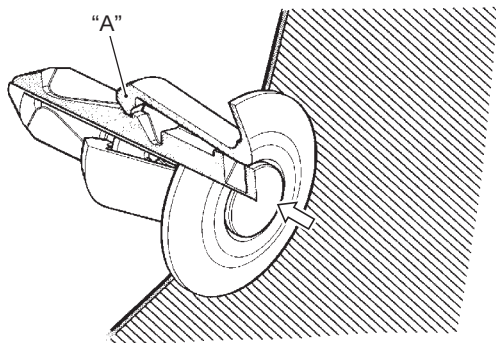

I831G1940046-01

Type B Removal

- 1) Pry up the head of fastener center piece (1) with a screw driver.
- 2) Pull out the fastener "A".

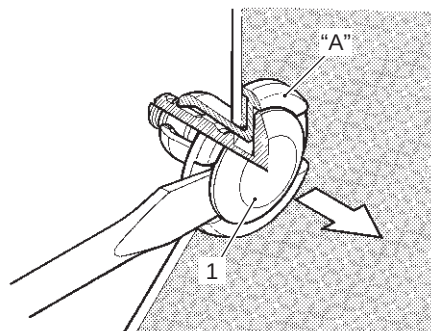


I823H1940001-01

Installation

- 1) Insert the fastener into the installation hole.


NOTE

To prevent the pawl (1) from damage, insert the fastener all the way into the installation hole.

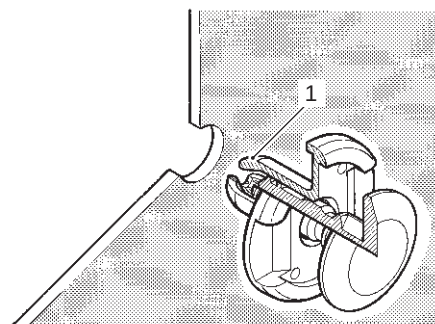

I931H1940043-01

- 2) Push in the head of center piece.

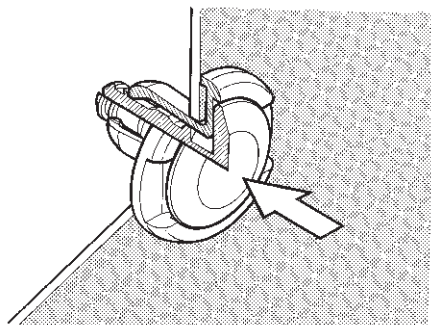

I823H1940003-01

Front Side Exterior Parts Removal and Installation

B931H29406005


Front Grill Cover

Removal

Remove the front grill cover (1) by removing the fasteners (2).



I931H1940001-01

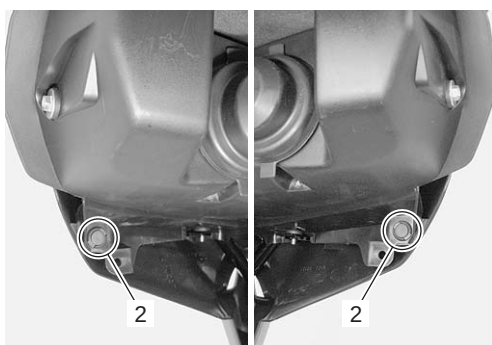

I931H1940002-01


Installation

Install the front grill cover in the reverse order of removal.

Air Cleaner Box Cover

Removal

- 1) Remove the seat. Refer to "Seat Removal and Installation (Page 9D-11)".
- 2) Remove the air cleaner box cover (1) by removing the fasteners (2).

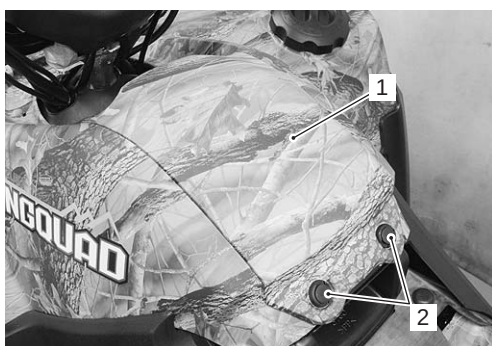

I931H1940003-01


Installation

Install the air cleaner box cover in the reverse order of removal.

Front Box


Removal

- 1) Remove the front box cap (1).
- 2) Disconnect the front box cap wire (2).

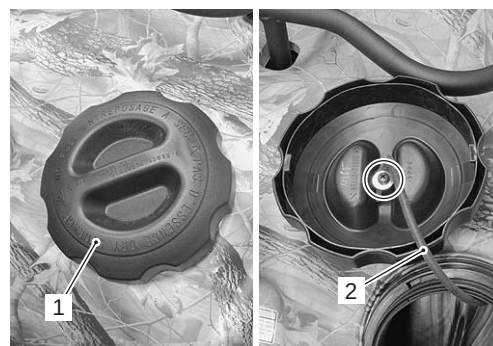

I931H1940004-01


- 3) Remove the front box mounting screw.
- 4) Turn the front box (3) counterclockwise and remove it.

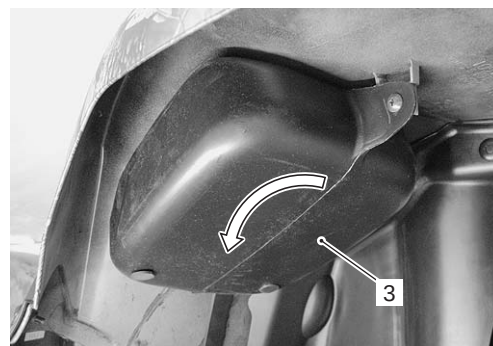

I931H1940005-01

9D-7 Exterior Parts:

5) Remove the front box holder (4) and cushions (5).

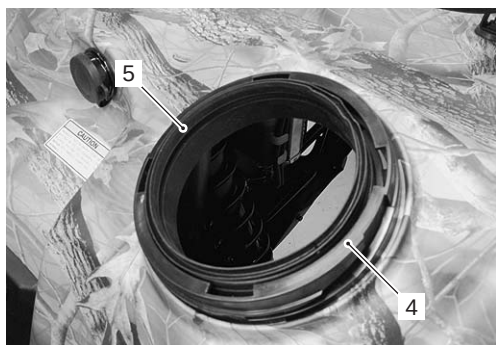

I931H1940006-01




I931H1940007-01

Installation

Install the front box in the reverse order of removal. Pay attention to the following points:

- When installing the cushion, fit the convex parts "A" of the cushion onto the concave parts "B" of the front box.

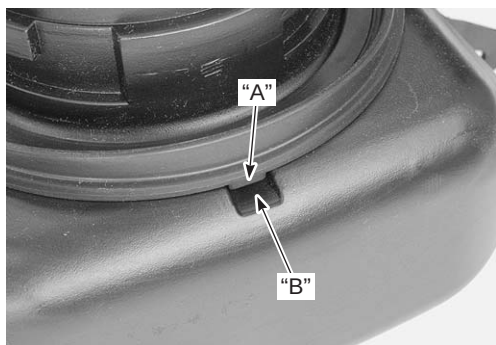

I931H1940008-01

- When installing the cushion to the front box, align the cutout "C" on the front box.




I931H1940009-01


Inner Fender

Removal

Remove the inner fenders (1) by removing the fasteners (2), left and right.

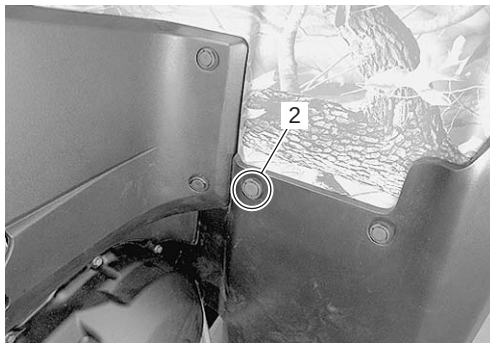

I931H1940010-02

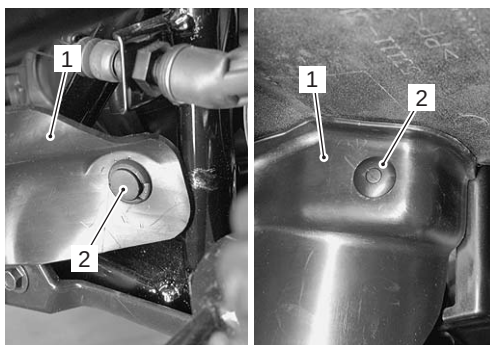

I931H1940011-03

Installation

Install the inner fenders in the reverse order of removal.

Side Cover


Removal

- 1) Remove the seat. Refer to "Seat Removal and Installation (Page 9D-11)".
- 2) Remove the side cover (1), left and right.



I931H1940012-03

"A": Left side

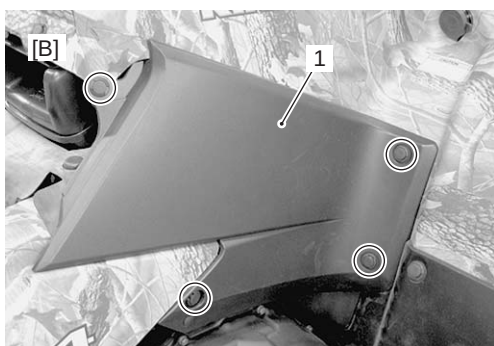

I931H1940013-02

"B": Right side

Installation

Install the side cover in the reverse order of removal.

Front Fender


Removal

- 1) Remove the front carrier. Refer to **"Front Carrier Removal and Installation: in Section 9E"**.
- 2) Remove the seat. Refer to **"Seat Removal and Installation (Page 9D-11)"**.
- 3) Remove the air cleaner box cover, front box, inner fenders and side covers. Refer to **"Front Side Exterior Parts Removal and Installation (Page 9D-6)"**.
- 4) Remove the headlight assembly, left and right. Refer to **"Headlight Removal and Installation: in Section 9B"**.
- 5) Disconnect the power source socket coupler (1).




I931H1940014-01


- 6) Remove the front fender (2) by removing the screws (3) and fasteners (4).

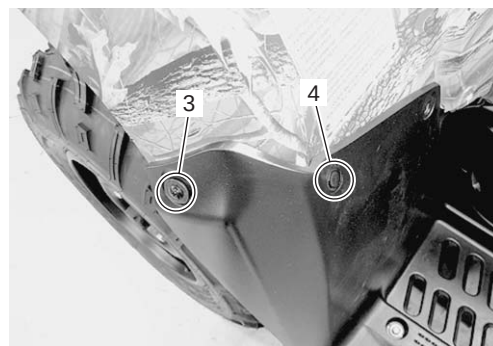

I931H1940015-02

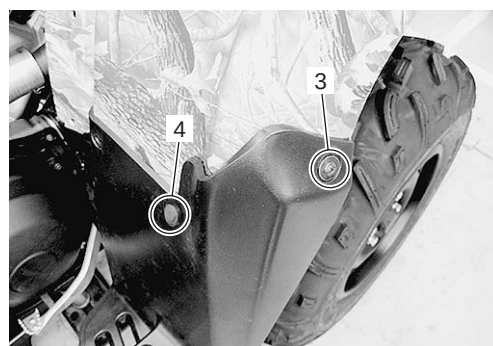

I931H1940016-02

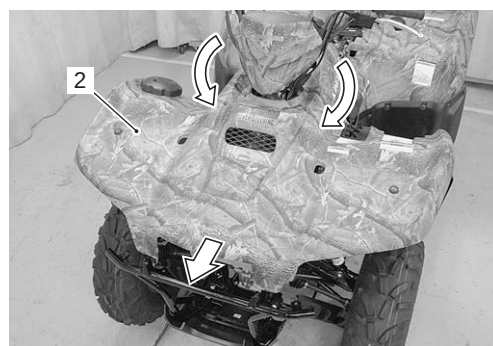

I931H1940017-01

Installation

Install the front fender in the reverse order of removal.


Rear Side Exterior Parts Removal and Installation

B931H29406006

Engine Side Cover

Removal

Remove the engine side cover (1).

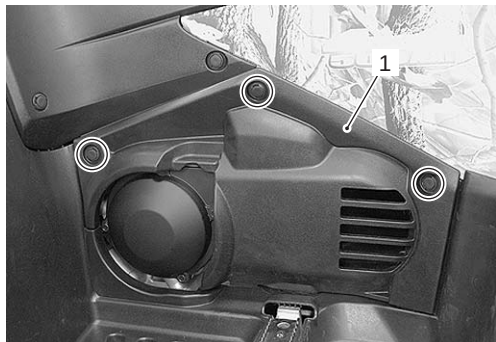

I931H1940018-02


Installation

Install the engine side cover in the reverse order of removal.

Rear Box

Removal

Remove the rear box (1).

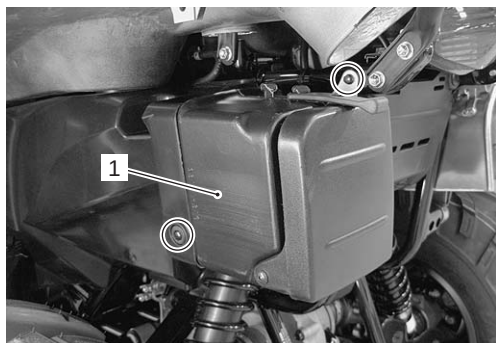

I931H1940019-01


Installation

Install the rear box in the reverse order of removal.

Mud Guard


Removal

Remove the mud guards (1) by removing the bolts (2), screws (3) and fasteners (4), left and right.

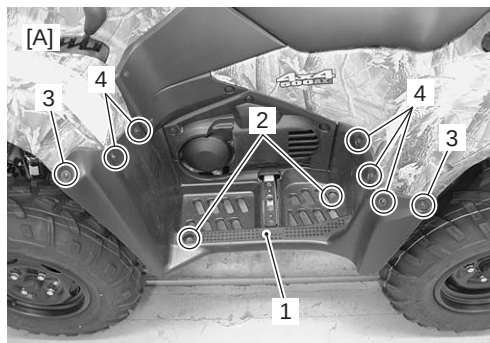

I931H1940020-03

"A": Left side

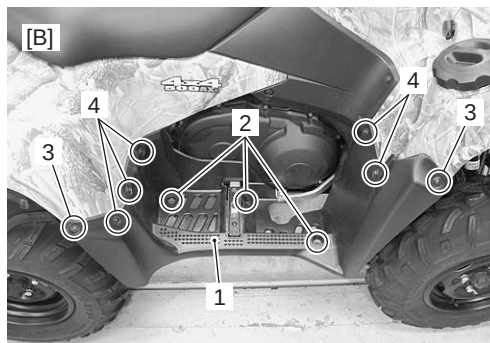

I931H1940021-02

"B": Right side


Installation

Install the mud guard in the reverse order of removal.

Fuel Tank Outer Cover


Removal

1) Remove the fasteners (1) and screws (2).

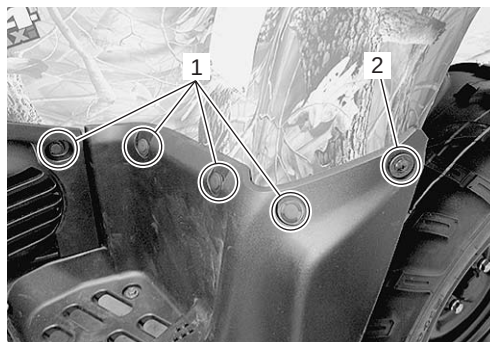


I931H1940022-02

- 2) Remove the fasteners (3), bolt (4) and screw (5).

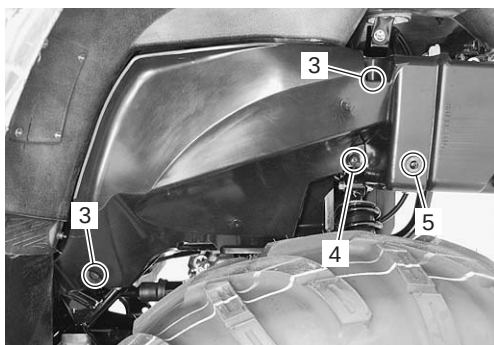

I931H1940023-01

- 3) Move the rear fender upside.
4) Remove the fuel tank outer cover (6).

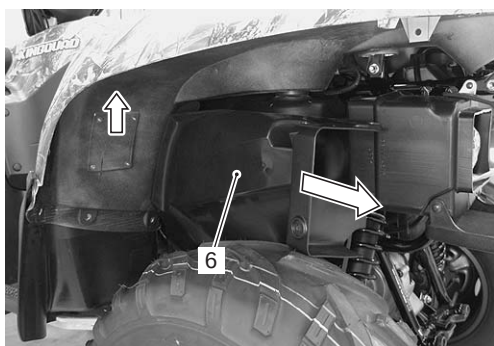

I931H1940024-01


Installation

Install the fuel tank outer cover in the reverse order of removal.


Rear Fender Removal

- 1) Remove the rear carrier. Refer to **"Rear Carrier Removal and Installation: in Section 9E"**.
- 2) Remove the seat. Refer to **"Seat Removal and Installation (Page 9D-11)"**.
- 3) Remove the side covers, left and right. Refer to **"Front Side Exterior Parts Removal and Installation (Page 9D-6)"**.
- 4) Remove the engine side cover. Refer to **"Rear Side Exterior Parts Removal and Installation (Page 9D-9)"**.

- 5) Remove the screws (1) and fasteners (2).

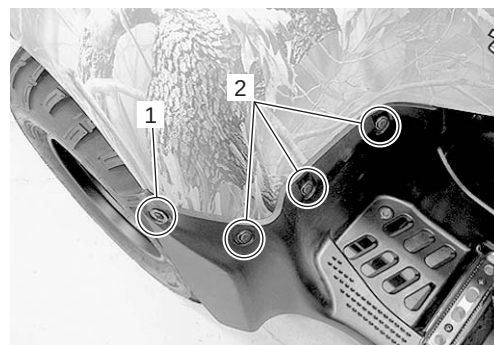

I931H1940025-02

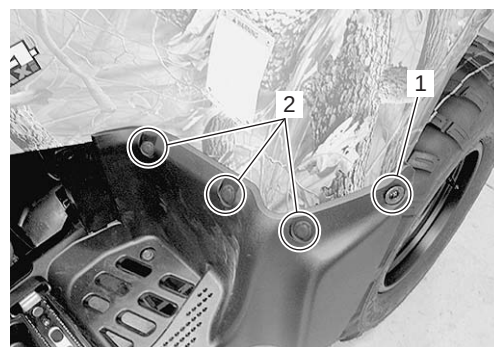


I931H1940026-02

- 6) Remove the battery. Refer to **"Battery Removal and Installation: in Section 1J"**.
- 7) Disconnect the couplers (2) and remove the starter relay (3) along with the battery (+) lead wire. Refer to **"Starter Relay Removal and Installation: in Section 1I"**.



I931H1940027-01


- 8) Remove the neutral relay/fuse box (4), ECM (5), fuel pump relay (6) and 4WD/diff-lock relay (7).

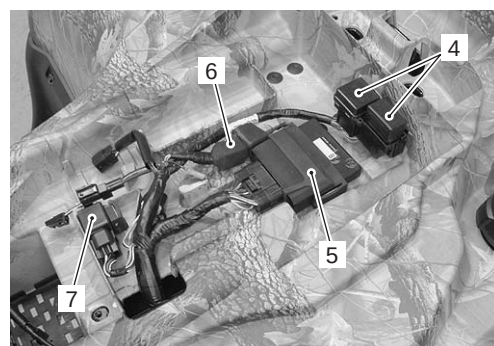

I931H1940028-01

9D-11 Exterior Parts:

- 9) Remove the parking brake cable (8) from the cable guide.

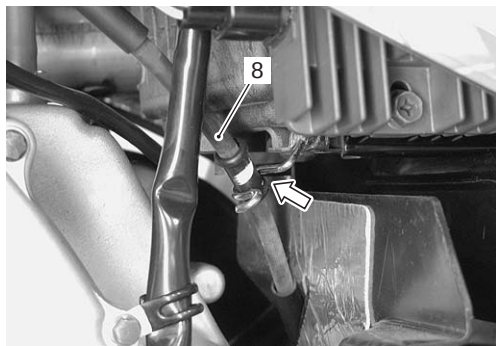


I931H1940029-02

- 10) Remove the fuel tank cap (9).

⚠ CAUTION

To prevent the fuel tank from contamination with foreign particles, install the fuel tank cap, after removing the rear fender.

- 11) Remove the rear fender (10).

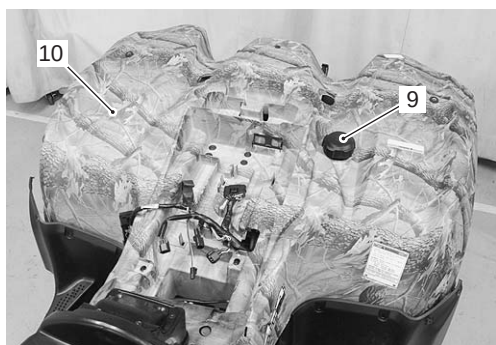

I931H1940030-01

Installation

Install the rear fender in the reverse order of removal.

Seat Removal and Installation

B931H29406007

Removal

Pull the seat lock lever (1) upward, and remove the seat (2).




I931H1940031-01

Installation

Install the seat in the reverse order of removal.

Under Cover Components

B931H29406008

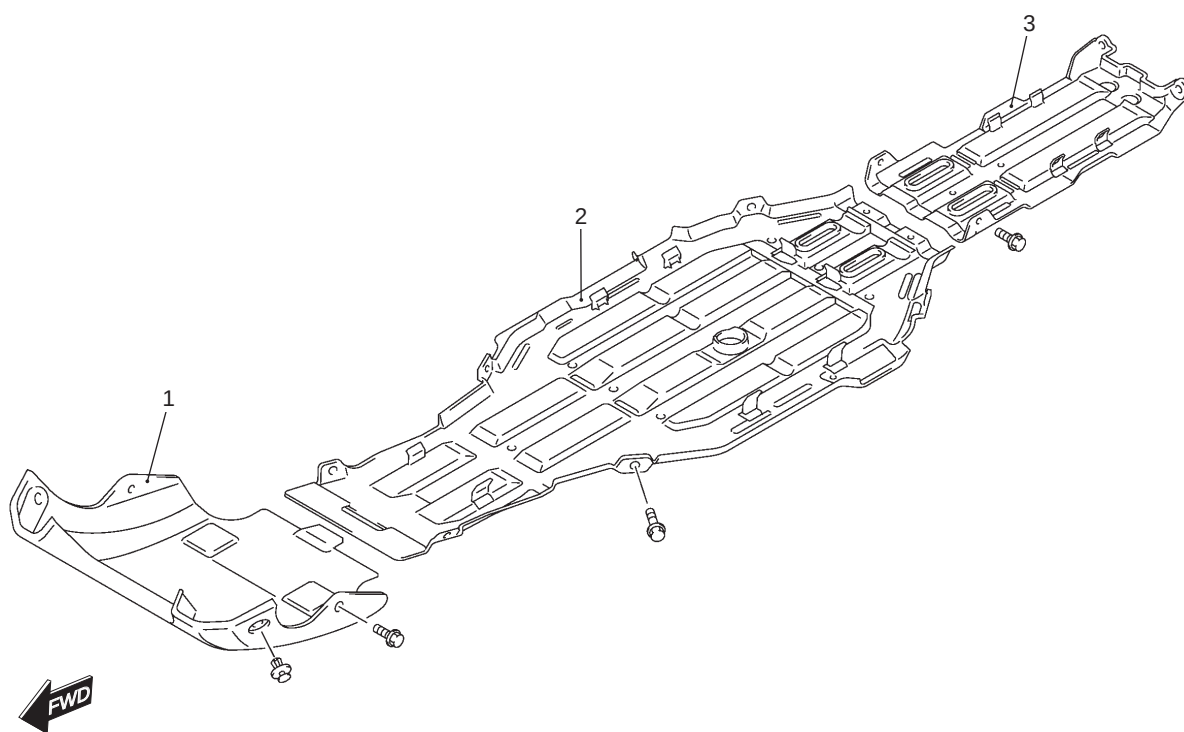

I931G1940034-02


1. Front under cover	2. Engine under cover	3. Rear under cover
----------------------	-----------------------	---------------------

Under Cover Removal and Installation


B931H29406009

Front Under Cover Removal

Remove the front under cover (1) by removing the bolts (2) and fasteners (3).

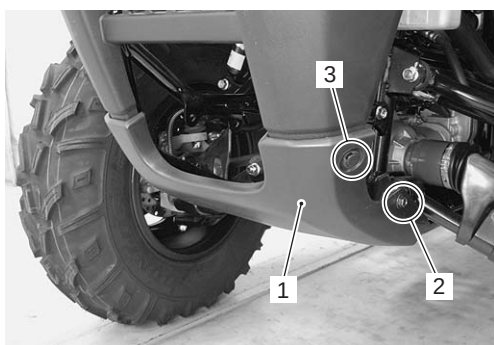


I931H1940032-01

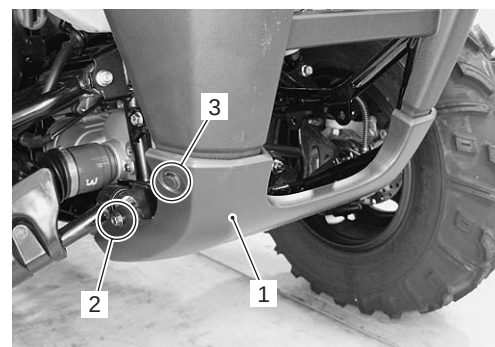

I931H1940033-01

Installation

- 1) Fix the front under cover "B" to the groove "A" of engine under cover.

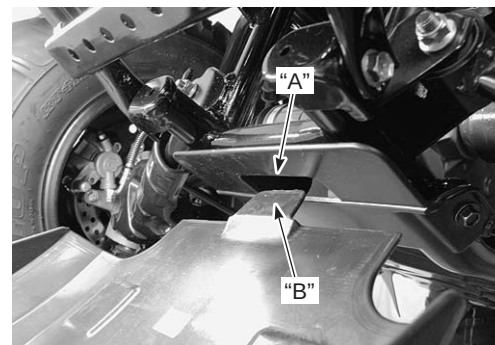

I931H1940034-01


9D-13 Exterior Parts:

2) Install the front under cover.

Engine Under Cover

Removal


Remove the engine under cover (1).

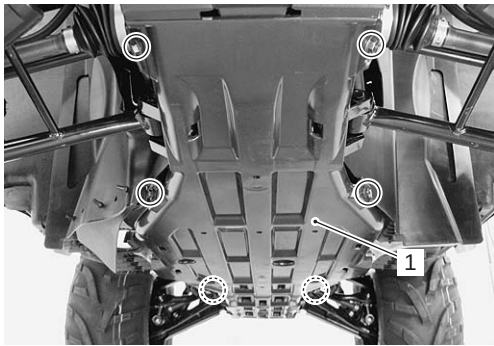


I931H1940035-01

Installation

1) Fix the engine under cover (1) with the front under cover (2) and rear under cover (3).

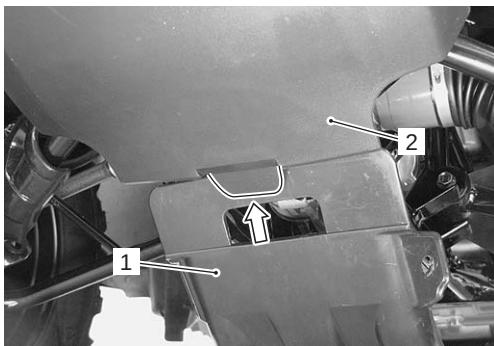

I931H1940036-01

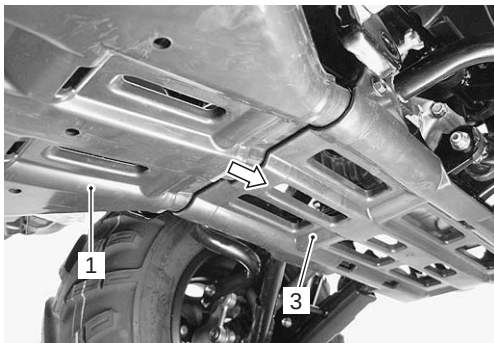


I931H1940037-01

2) Install the engine under cover.


Rear Under Cover

Removal

Remove the rear under cover (1).

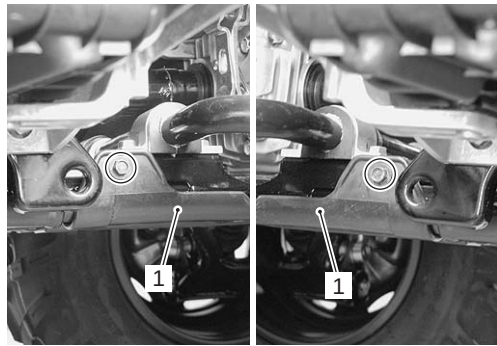

I931H1940038-01

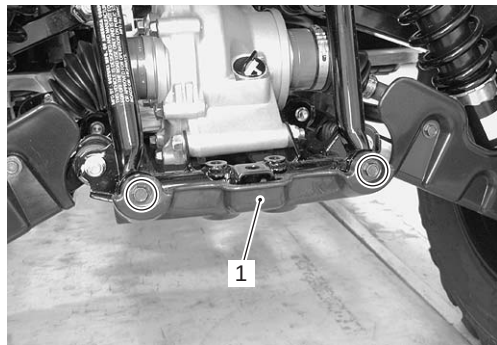

I931H1940039-01

Installation


Install the rear under cover in the reverse order of removal.

Body Structure

Repair Instructions

Body Frame Construction

B931H29506001

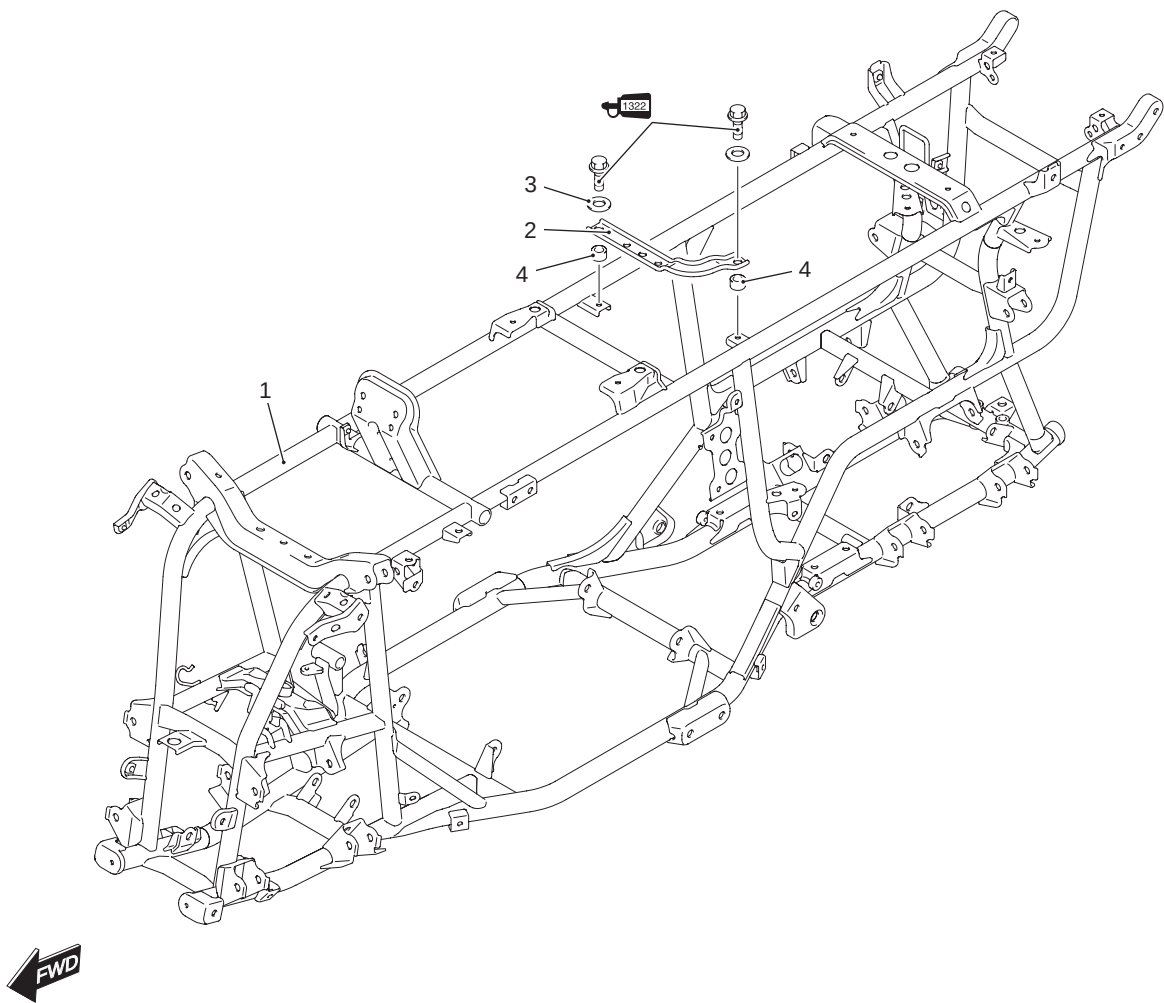


I931H1950018-02

1. Frame	3. Washer	1322 : Apply thread lock to the thread part.
2. Battery plate	4. Spacer	

Footrest Construction

B931H29506002

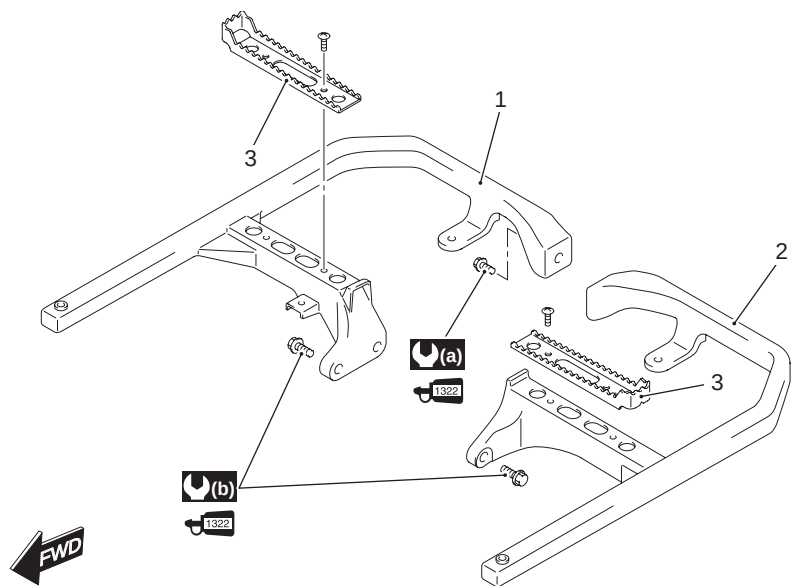

I831G1950001-04


1. Footrest (R)	3. Footrest plate	(b) : 55 N·m (5.5 kgf·m, 40.0 lbf·ft)
2. Footrest (L)	(a) : 26 N·m (2.6 kgf·m, 19.0 lbf·ft)	(1322) : Apply thread lock to the thread part.

Footrest Removal and Installation

B931H29506003


Removal

- 1) Remove the mud guard. Refer to “Rear Side Exterior Parts Removal and Installation: in Section 9D”.
- 2) Remove the rear brake cable clamp (1) (RH).

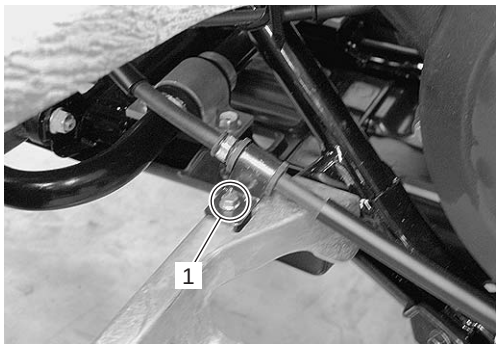

I931H1950001-01

- 3) Remove the footrest (2) (RH & LH).

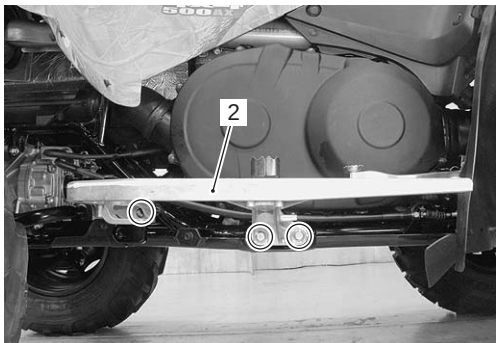

I931H1950002-01

Installation

Install the footrest in the reverse order of removal. Pay attention to the following point:


- Apply thread lock to the footrest mounting bolts and tighten them to the special torque.

(1322) : Thread lock cement 99000–32110 (THREAD LOCK CEMENT SUPER 1322 or equivalent)

Tightening torque

Footrest mounting bolt (M8) (a): 26 N·m (2.6 kgf·m, 19.0 lbf·ft)


Footrest mounting bolt (M10) (b): 55 N·m (5.5 kgf·m, 40.0 lbf·ft)

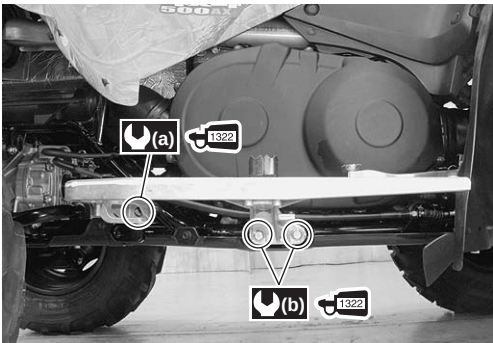

I931H1950003-01

Carrier Construction

B931H29506004

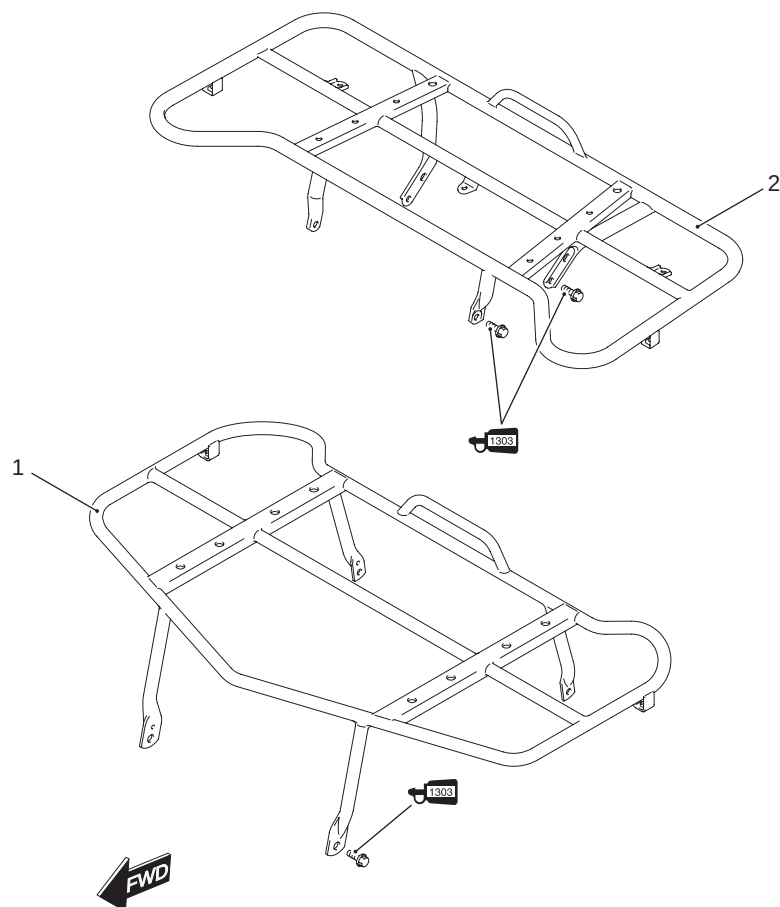

I931H1950017-02


1. Front carrier	2. Rear carrier	1303 : Apply thread lock to the thread part.
------------------	-----------------	--

Front Carrier Removal and Installation


B931H29506005

Removal


- 1) Remove the front grill upper cover. Refer to “**Front Side Exterior Parts Removal and Installation: in Section 9D**”.
- 2) Remove the front carrier (1) by removing the bolts (2).

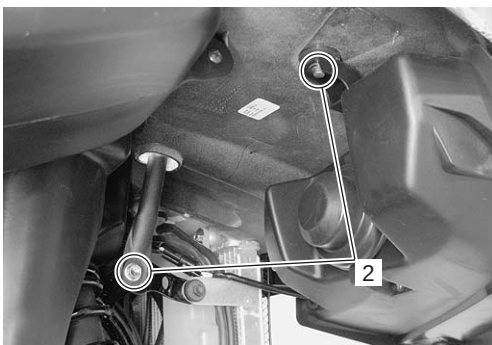

I931H1950004-02

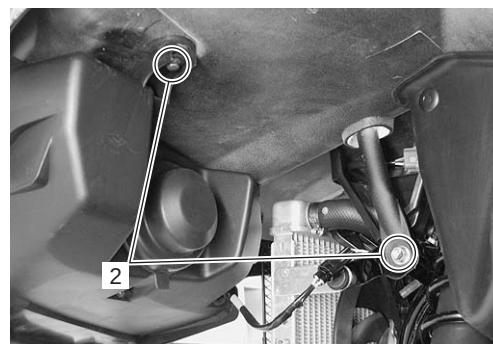

I931H1950005-01

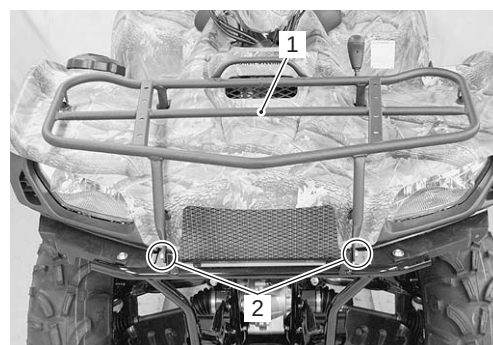

I931H1950006-01

9E-4 Body Structure:

Installation


Install the front carrier in the reverse order of removal.
Pay attention to the following point:

- Apply thread lock to the front carrier mounting bolts.

 : Thread lock cement 99000-32030
(THREAD LOCK CEMENT SUPER 1303 or
equivalent)



I931H1950007-02

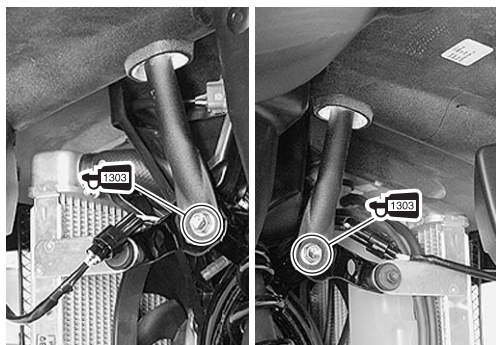


I931H1950008-01

Rear Carrier Removal and Installation


B931H29506006

Removal


- 1) Remove the rear carrier (1) by removing the bolts (2) and screw (3).

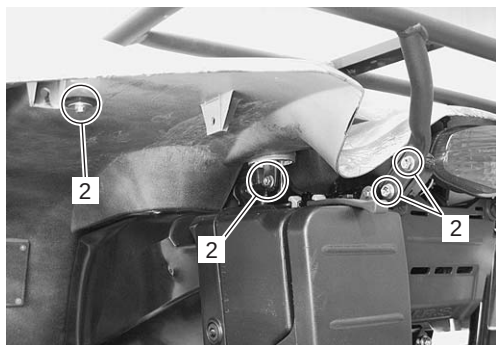

I931H1950009-01

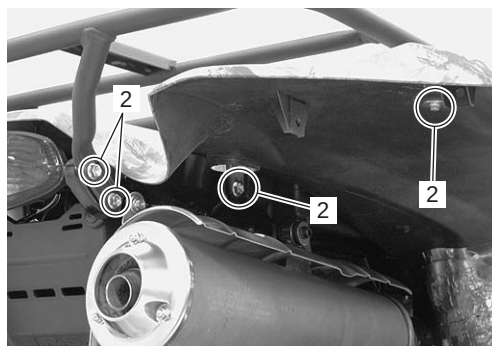

I931H1950010-01

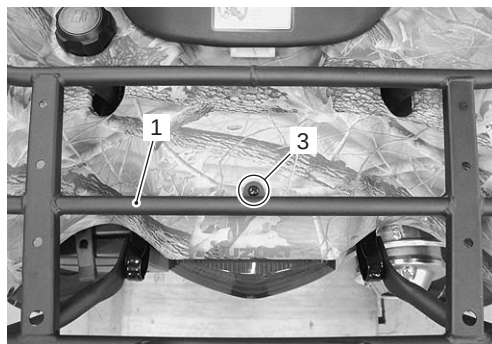


I931H1950011-01

Installation

Install the rear carrier in the reverse order of removal.
Pay attention to the following point:

- Apply thread lock to the rear carrier mounting bolts.


 : Thread lock cement 99000-32030
(THREAD LOCK CEMENT SUPER 1303 or
equivalent)

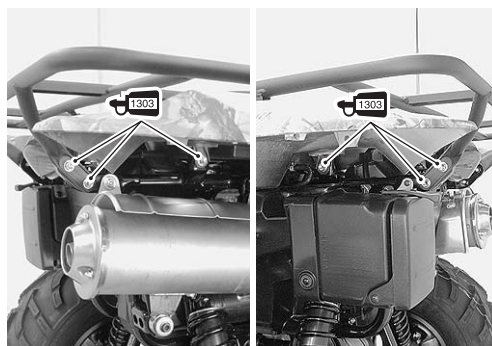

I931H1950012-01

Front Grip Bar Construction

B931H29506007

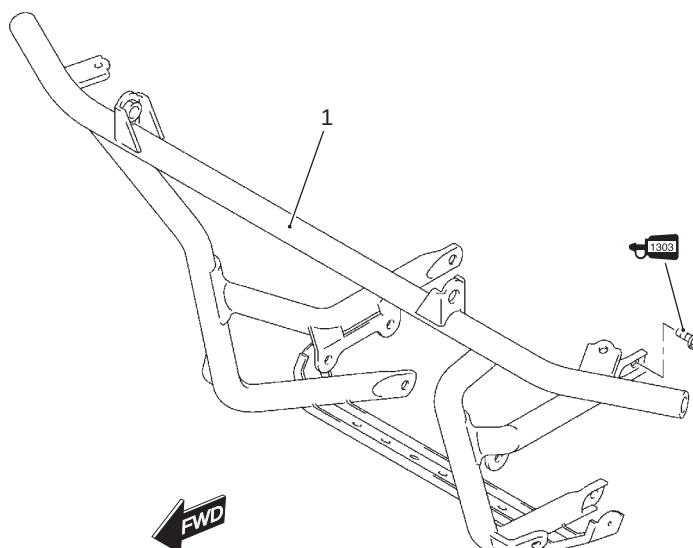

I931H1950013-01

1. Front grip bar


 : Apply thread lock to thread part.

Front Grip Bar Removal and Installation


B931H29506008

Removal

- 1) Remove the front carrier. Refer to "Front Carrier Removal and Installation (Page 9E-3)".
- 2) Remove the front grill cover. Refer to "**Front Side Exterior Parts Removal and Installation: in Section 9D**".
- 3) Remove the front grip bar (1) by removing the bolts (2).

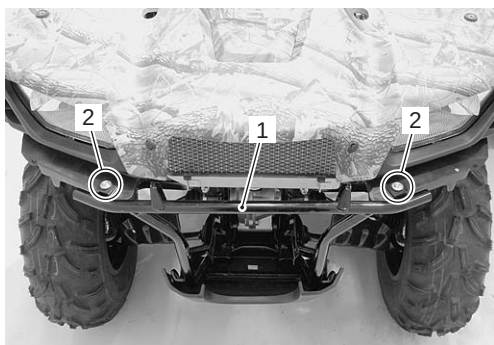

I931H1950015-02

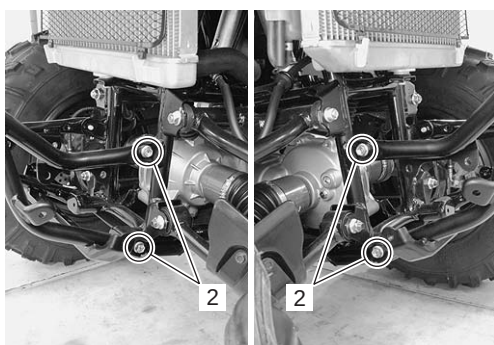


I931H1950014-01

Installation


Install the front grip bar in the reverse order of removal. Pay attention to the following point:

- Apply thread lock to the front grip bar mounting bolts.

 : Thread lock cement 99000-32030 (THREAD LOCK CEMENT SUPER 1303 or equivalent)

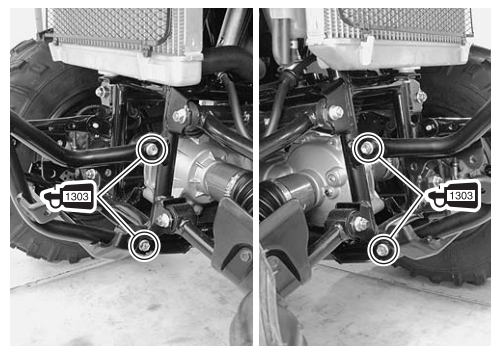

I931H1950016-01

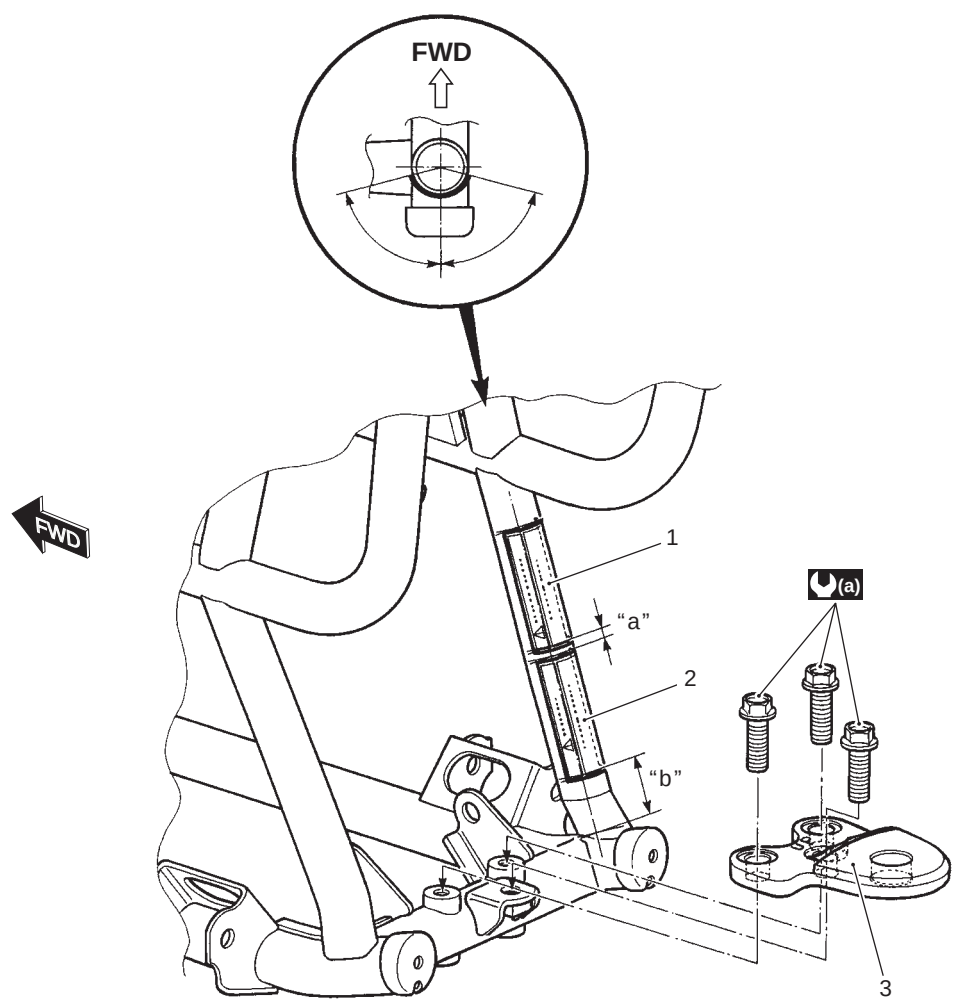

I831G1950020-04


1. Trailer towing warning label (P-17, 28)	⌚(a) : 60 N·m (6.0 kgf-m, 43.5 lbf-ft)
2. Trailer towing warning label	"a": 5 mm (0.2 in)
3. Trailer towing	"b": 30 mm (1.2 in)

Trailer Towing Removal and Instruction

B931H29506010

Removal

Remove the trailer towing (1).

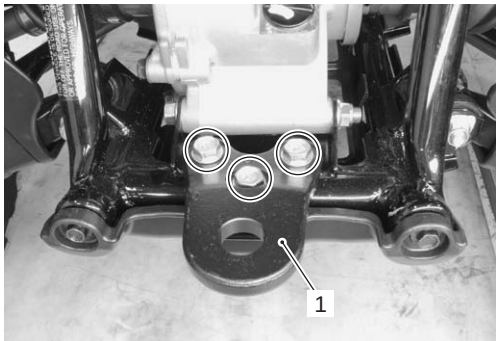


I831G1950021-01

Installation

Install the trailer towing with the trailer towing mounting bolts and then tighten them to the specified torque.

Tightening torque

Trailer towing mounting bolt (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

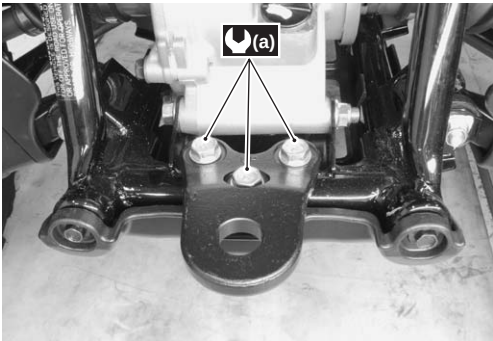

I831G1950022-01

Specifications

Tightening Torque Specifications

B931H29507001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Footrest mounting bolt (M8)	26	2.6	19.0	☞ (Page 9E-2)
Footrest mounting bolt (M10)	55	5.5	40.0	☞ (Page 9E-2)
Trailer towing mounting bolt	60	6.0	43.5	☞ (Page 9E-6)

NOTE

The specified tightening torque is described in the following.

“Footrest Construction (Page 9E-2)”

“Trailer Towing Construction (Page 9E-6)”

Reference:

For the tightening torque of fastener not specified in this section, refer to “**Tightening Torque List: in Section 0C**”.

Special Tools and Equipment

Recommended Service Material

B931H29508001

Material	SUZUKI recommended product or Specification		Note
Thread lock cement	THREAD LOCK CEMENT SUPER 1303 or equivalent	P/No.: 99000–32030	☞ (Page 9E-4) / ☞ (Page 9E-4) / ☞ (Page 9E-5)
	THREAD LOCK CEMENT SUPER 1322 or equivalent	P/No.: 99000–32110	☞ (Page 9E-2)

NOTE

Required service material is also described in the following.

“Body Frame Construction (Page 9E-1)”

“Footrest Construction (Page 9E-2)”

“Carrier Construction (Page 9E-3)”

“Front Grip Bar Construction (Page 9E-5)”

Prepared by
SUZUKI MOTOR CORPORATION

December, 2008
Part No. 99500-44080-03E
Printed in U.S.A.