
CONTENTS

CHAPTER 1. GENERAL INFORMATION

MOTORCYCLE IDENTIFICATION	I-1
VEHICLE IDENTIFICATION NUMBER	I-1
ENGINE SERIAL NUMBER	I-1
IMPORTANT INFORMATION.	I-2
PREPARATION FOR REMOVAL	I-2
ALL REPLACEMENT PARTS	I-2
GASKETS, OIL SEALS, AND O-RINGS	I-2
LOCK WASHERS/PLATES AND COTTER PINS	I-3
BEARINGS AND OIL SEALS	I-3
CIRCLIPS	I-3
SPECIAL TOOLS.	I-4
FOR TUNE UP	I-4
FOR ENGINE SERVICE	1-5
FOR CHASSIS SERVICE	I-8
FOR ELECTRICAL COMPONENTS	I-9

CHAPTER 2. SPECIFICATIONS

SPECIFICATIONS	2-1
GENERAL SPECIFICATIONS	2-1
MAINTENANCE SPECIFICATIONS	2-4
ENGINE	2-4
CHASSIS.	2-11
ELECTRICAL	2-14
GENERAL TORQUE SPECIFICATIONS.	2-16
DEFINITION OF UNITS	2-16
LUBRICATION POINT AND GRADE OF LUBRICANT	2-17
LUBRICATION DIAGRAM.	2-19
COOLANT DIAGRAM	2-20
CABLE ROUTING	2-21

CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION	3-1
MAINTENANCE INTERVALS CHART	3-1
PERIODIC MAINTENANCE EMISSION CONTROL SYSTEM	3-1
GENERAL MAINTENANCE/LUBRICATION	3-2
COWLING REMOVAL AND INSTALLATION	3-4
ENGINE	3-7
EXUP CABLE ADJUSTMENT (For California only)	3-7
VALVE CLEARANCE ADJUSTMENT	3-8
CARBURETOR SYNCHRONIZATION	3-15
IDLE SPEED ADJUSTMENT	3-17
THROTTLE CABLE FREE PLAY ADJUSTMENT	3-18
SPARK PLUG INSPECTION	3-19
IGNITION TIMING CHECK	3-20
COMPRESSION PRESSURE MEASUREMENT	3-21
ENGINE OIL LEVEL INSPECTION	3-23
ENGINE OIL REPLACEMENT	3-23
ENGINE OIL FILTER REPLACEMENT	3-24
CLUTCH ADJUSTMENT	3-26
AIR FILTER CLEANING	3-27
CARBURETOR JOINT INSPECTION	3-27
FUEL LINE INSPECTION	3-27
CRANKCASE VENTILATION HOSE INSPECTION	3-28
EXHAUST SYSTEM INSPECTION	3-28
COOLANT LEVEL INSPECTION	3-29
COOLANT REPLACEMENT	3-29
CHASSIS	3-32
FRONT BRAKE ADJUSTMENT	3-32
REAR BRAKE ADJUSTMENT	3-32
BRAKE FLUID INSPECTION	3-33
BRAKE PAD INSPECTION	3-33
REAR BRAKE LIGHT SWITCH ADJUSTMENT	3-33
BRAKE HOSE INSPECTION	3-34
AIR BLEEDING	3-34
DRIVE CHAIN SLACK ADJUSTMENT	3-35
DRIVE CHAIN LUBRICATION	3-37
STEERING HEAD INSPECTION	3-37
FRONT FORK INSPECTION	3-40
REAR SHOCK ABSORBER ADJUSTMENT	3-40
TIRE INSPECTION	3-41
WHEEL INSPECTION	3-42
CABLE INSPECTION	3-43
LUBRICATION	3-43



**GEN
INFO** **1**



SPEC **2**



**INSP
ADJ** **3**



ENG **4**



COOL **5**



CARB **6**



CHAS **7**



ELEC **8**



**TRBL
SHTG** **9**

ELECTRICAL	3-44
BATTERY INSPECTION	3-44
FUSE INSPECTION	3-46
HEADLIGHT BEAM ADJUSTMENT	3-46
HEADLIGHT BULB REPLACEMENT	3-47
TAIL/BRAKE BULB REPLACEMENT	3-48

CHAPTER 4. ENGINE OVERHAUL

ENGINE REMOVAL	4-1
LOWER COWLING, CENTER COWLING, UPPER COWLING AND TOP COVER.	4-1
FUEL TANK	4-1
ENGINE OIL	4-1
COOLANT	4-1
AIR FILTER CASE AND CARBURETOR	4-1
RADIATOR	4-2
MUFFLER ASSEMBLY	4-2
CLUTCH CABLE AND DRIVE CHAIN	4-4
LEADS	4-4
ENGINE REMOVAL	4-5
ENGINE DISASSEMBLY	4-7
CYLINDER HEAD COVER, CAMSHAFT AND CYLINDER HEAD	4-7
CYLINDER AND PISTON	4-10
STARTER CLUTCH	4-12
CLUTCH	4-13
A.C. MAGNETO	4-14
WATER PUMP	4-15
OIL PUMP AND SHIFT SHAFT	4-16
OIL PAN AND OIL STRAINER.	4-17
STARTER MOTOR	4-18
CRANKCASE DISASSEMBLY	4-18
TRANSMISSION, SHIFTER AND SHIFT CAM.	4-19
CRANKSHAFT	4-20
VALVE PAD AND VALVE	4-21
CONNECTING ROD	4-23
INNER ROTOR (OIL PUMP).	4-23
INSPECTION AND REPAIR	4-24
CYLINDER HEAD	4-24
VALVE	4-25
VALVE GUIDE	4-26
VALVE SEAT.	4-27
VALVE SPRING	4-30
VALVE LIFTER	4-31
CAMSHAFT, CAM CHAIN AND CAM SPROCKET	4-31
CYLINDER AND PISTON	4-33

PISTON RING AND PISTON PIN	4-35
CRANKSHAFT AND CONNECTING ROD	4-37
OIL PUMP.....	4-41
PRIMARY DRIVE	4-42
STARTER CLUTCH	4-43
CLUTCH.....	4-44
TRANSMISSION	4-46
RELIEF VALVE AND PIPE	4-47
CRANKCASE	4-47
BEARING AND OIL SEAL	4-47
YAMAHA EXHAUST VARIABLE VALVE (For California only)	4-48
ENGINE ASSEMBLY AND ADJUSTMENT.	4-49
INNER ROTOR (OIL PUMP).	4-49
CONNECTING ROD.	4-49
CRANKSHAFT	4-50
VALVE PAD AND VALVE	4-51
CRANKCASE	4-54
TRANSMISSION	4-55
TRANSMISSION, SHIFTER AND SHIFT CAM	4-56
CRANKCASE ASSEMBLY	4-57
STARTER MOTOR	4-59
OIL PAN AND OILSTRAINER.....	4-59
OIL PUMP AND SHIFT SHAFT.	4-60
A.C. MAGNETO	4-61
CLUTCH.....	4-63
STARTER CLUTCH	4-65
PISTON AND CYLINDER	4-67
CYLINDER HEAD AND CAMSHAFT.....	4-70
CAM CHAIN TENSIONER.....	4-75
REMounting ENGINE	4-76
YAMAHA EXHAUST VARIABLE VALVE (For California only)	4-78

	
GEN INFO	1
	
SPEC	2
	
INSP ADJ	3
	
ENG	4
	
COOL	5
	
CARB	6
	
CHAS	7
	
ELEC	8
?	
TRBL SHTG	9

CHAPTER 5. COOLING SYSTEM

RADIATOR	5-1
REMOVAL	5-2
INSPECTION	5-3
INSTALLATION	5-4
 WATER PUMP AND THERMOSTATIC VALVE.	5-6
REMOVAL	5-7
INSPECTION	5-9
INSTALLATION	5-10

CHAPTER 6. CARBURETOR

CARBURETOR	6-1
SECTIONVIEW	6-2
REMOVAL	6-3
DISASSEMBLY	6-5
INSPECTION	6-6
ASSEMBLY	6-B
INSTALLATION	6-9
ADJUSTMENT	6-10

CHAPTER 7. CHASSIS

FRONT WHEEL.	7-1
REMOVAL	7-2
INSPECTION	7-2
INSTALLATION	7-4
 REAR WHEEL	7-7
REMOVAL	7-B
INSPECTION	7-B
INSTALLATION	7-9

FRONT AND REAR BRAKE.	7-10
BRAKE PAD REPLACEMENT.....	7-12
CALIPER DISASSEMBLY	7-16
MASTER CYLINDER DISASSEMBLY	7-18
INSPECTION AND REPAIR	7-19
ASSEMBLY	7-21
FRONT FORK	7-28
REMOVAL	7-29
DISASSEMBLY	7-30
INSPECTION	7-31
ASSEMBLY	7-32
INSTALLATION	7-34
STEERING HEAD AND HANDLEBAR.	7-36
REMOVAL	7-38
INSPECTION	7-41
INSTALLATION	7-42
REAR SHOCK ABSORBER AND SWINGARM	7-47
HANDLING NOTES.....	7-49
DISPOSAL NOTES.	7-49
REMOVAL	7-49
INSPECTION	7-52
INSTALLATION	7-54
DRIVE CHAIN AND SPROCKET	7-56
REMOVAL	7-56
INSPECTION AND CLEANING	7-56
INSTALLATION	7-57



**GEN
INFO**

1



SPEC

2



**INSP
ADJ**

3



ENG

4



COOL

5



CARB

6



CHAS

7



ELEC

8



**TRBL
SHTG**

9

CHAPTER 8. ELECTRICAL

FZR400U/SUC CIRCUIT DIAGRAM	8-1
ELECTRICAL COMPONENTS..	8-3
CHECKING OF SWITCHES.	8-5
SWITCH CONNECTION AS SHOWN IN MANUAL	8-5
CHECKING SWITCH FOR TERMINAL CONNECTION	8-5
CHECKING OF BULBS	8-8
KINDS OF BULBS	8-8
CHECKING BULB CONDITION	8-8
IGNITION SYSTEM.	8-11
CIRCUIT DIAGRAM	8-11
DIGITAL IGNITION CONTROL SYSTEM DESCRIPTION	8-13
OPERATION	8-13
TROUBLESHOOTING	8-14
ELECTRIC STARTING SYSTEM.	8-21
CIRCUIT DIAGRAM	8-21
STARTING CIRCUIT OPERATION	8-23
TROUBLESHOOTING.	8-24
STARTER MOTOR	8-30
CHARGING SYSTEM.	8-33
CIRCUITDIAGRAM..	8-33
TROUBLESHOOTING	8-35
LIGHTING SYSTEM	8-39
CIRCUIT DIAGRAM	8-39
TROUBLESHOOTING	8-41
LIGHTING SYSTEM CHECK	8-44
SIGNALSYSTEM	8-49
CIRCUIT DIAGRAM	8-49
TROUBLESHOOTING	8-51
SIGNAL SYSTEM CHECK.	8-53
COOLING SYSTEM.	8-69
CIRCUIT DIAGRAM	8-69
TROUBLESHOOTING	8-71
FUEL SYSTEM.	8-75
CIRCUIT DIAGRAM	8-75
FUEL PUMP CIRCUIT OPERATION	8-77
TROUBLESHOOTING	8-78
FUEL PUMP TEST.	8-82

YAMAHA EXHAUST VARIABLE VALVE SYSTEM

(For California only)	.8-83
CIRCUIT DIAGRAM	.8-83
TROUBLESHOOTING	.8-85

METER ASSEMBLY	.8-89
REMOVAL	.8-90
INSTALLATION	.8-91

CHAPTER 9. TROUBLESHOOTING

STARTING FAILURE/HARD STARTING.	9-1
POOR IDLE SPEED PERFORMANCE	9-3
POOR MEDIUM AND HIGH SPEED PERFORMANCE.. . . .	9-4
FAULTY GEAR SHIFTING.. . . .	9-4
CLUTCH SLIPPING/Dragging	9-5
OVERHEATING OR OVER-COOLING.. . . .	9-6
FAULTY BRAKE.. . . .	9-7
FRONT FORK OIL LEAKAGE/MALFUNCTION.. . . .	9-7
INSTABLE HANDLING.. . . .	9-8
FAULTY SIGNALS AND LIGHTS.. . . .	9-9
FAULTY EXUP (For California only)	9-10



GEN
INFO

1



SPEC

2



INSP
ADJ

3



ENG

4



COOL

5



CARB

6



CHAS

7



ELEC

8

?

TRBL
SHTG

9