



Ref No	Part No	Description
1	11401-20861	Gasket Set
2	11141-20F00	• . Gasket, Cylinder Head
3	11173-19F00	• . Gasket, Cylinder Head Cover
4	11241-19F00	• . Gasket, Cylinder Front
5	11242-19F00	• . Gasket, Cylinder Rear
6	11482-19F00	• . Gasket, Clutch Cover Inner
7	11483-19F00	• . Gasket, Magneto Cover
8	11484-19F01	• . O Ring,clutch Cover Outer
9	12837-24A10	• . Gasket, Tnsn Adjuster
10	14181-22D01	• . Gasket, Exhaust Pipe
11	09161-11008	• . Washer
12	09280-22008	• . O Ring (d:3.1 Id:22.7)
13	09280-46006	• . O Ring

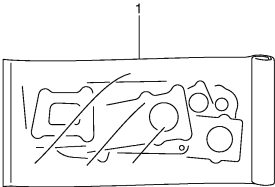


SV650Y E02_001
GASKET SET

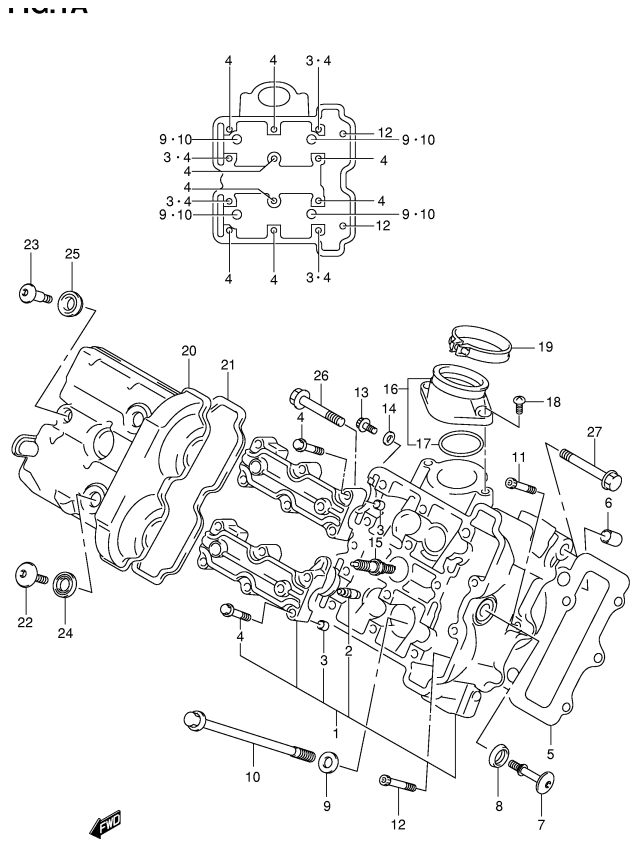


SV650Y E02_001A
FRONT CYLINDER HEAD

Ref No	Part No	Description
1	11101-20F00	Head Assy, Cylinder Front
1	11101-20F10	Head Assy, Cylinder Front
2	11115-18D72	• . Guide, Valve
3	09206-08001	• . Pin (6.2x8x11)
4	09103-06026	• . Bolt (6x39)
5	11141-20F00	Gasket, Cylinder Head
6	04211-13189	Pin
7	11161-33E00	Bolt, Cylinder Head Side Face
8	11191-13E00	Washer, Head Cover
9	09160-10082	Washer (10.5x19x2.0)
10	09103-10272	Bolt (10x160)
11	07120-06403	Bolt
12	09103-06103	Bolt (6x70)
13	07120-06123	Bolt
14	09168-06023	Gasket (5.8x13x1.2)
15	09482-00456	Spark Plug (ngk,cr8e)
15	09482-00457	Spark Plug (denso,u24esr-n)
15	09482-00458	Spark Plug (ngk,cr9e)
15	09482-00459	Spark Plug (denso,u27esr-n)
15	09482-00460	Spark Plug (ngk,cr10e)
15	09482-00461	Spark Plug (denso,u31esr-n)
16	13101-20F00	Pipe Assy, Intake Front
17	09280-46006	• . O Ring
18	02122-06163	Screw
19	09402-56208	Clamp
20	11171-19F00	Cover, Cylinder Head Front
20	11171-19F20	Cover, Cylinder Head Front
21	11173-19F00	Gasket, Cylinder Head Cover
22	09106-07009	Bolt (7x17.5)
23	09106-07010	Bolt (7x31)
24	09161-11008	Washer
25	11192-13E00	Cushion, Head Cover Bolt
26	01550-10807	Bolt
27	01550-10807	Bolt

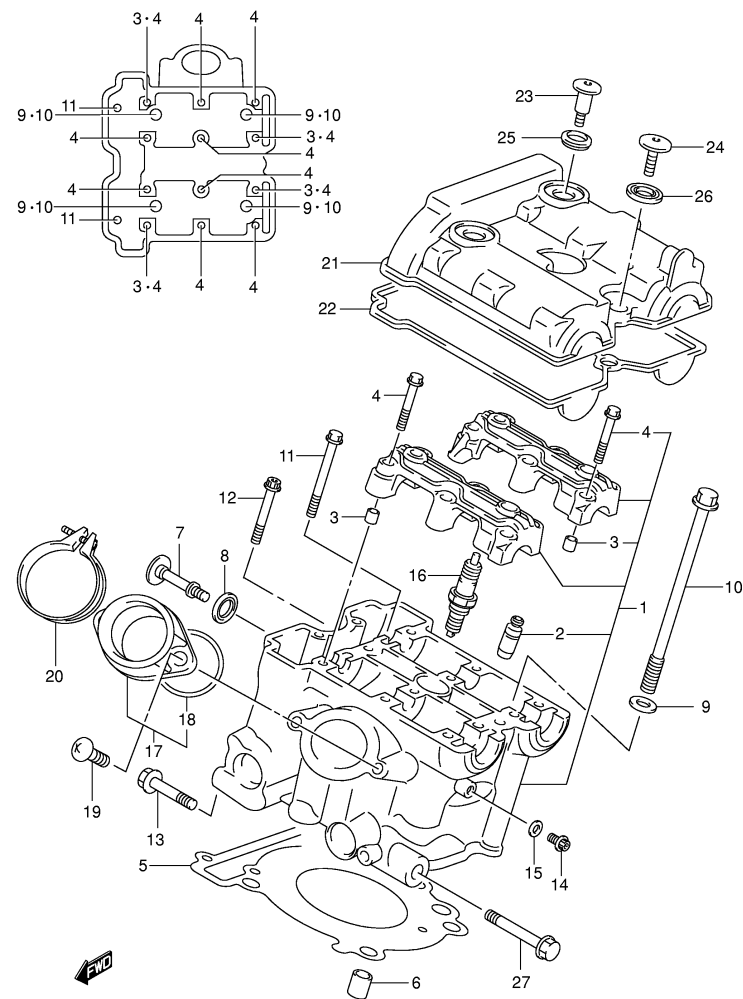


Ref No	Part No	Description
1	11103-20F00	Head Assy, Cylinder Rear
1	11103-20F10	Head Assy, Cylinder Rear
2	11115-18D72	• . Guide, Valve
3	09206-08001	• . Pin (6.2x8x11)
4	09103-06026	• . Bolt (6x39)
5	11141-20F00	Gasket, Cylinder Head
6	04211-13189	Pin
7	11161-33E00	Bolt, Cylinder Head Side Face
8	11191-13E00	Washer, Head Cover
9	09160-10082	Washer (10.5x19x2.0)
10	09103-10272	Bolt (10x160)
11	09103-06103	Bolt (6x70)
12	07120-06403	Bolt
13	01550-10557	Bolt
14	07120-06123	Bolt
15	09168-06023	Gasket (5.8x13x1.2)
16	09482-00456	Spark Plug (ngk,cr8e)
16	09482-00457	Spark Plug (denso,u24esr-n)
16	09482-00458	Spark Plug (ngk,cr9e)
16	09482-00459	Spark Plug (denso,u27esr-n)
16	09482-00460	Spark Plug (ngk,cr10e)
16	09482-00461	Spark Plug (denso,u31esr-n)
17	13102-20F00	Pipe Assy, Intake Rear
18	09280-46006	• . O Ring
19	02122-06163	Screw
20	09402-56208	Clamp
21	11172-19F00	Cover, Cylinder Head Rear
21	11172-19F20	Cover, Cylinder Head Rear
22	11173-19F00	Gasket, Cylinder Head Cover
23	09106-07009	Bolt (7x17.5)
24	09106-07010	Bolt (7x31)
25	09161-11008	Washer
26	11192-13E00	Cushion, Head Cover Bolt
27	01550-10807	Bolt

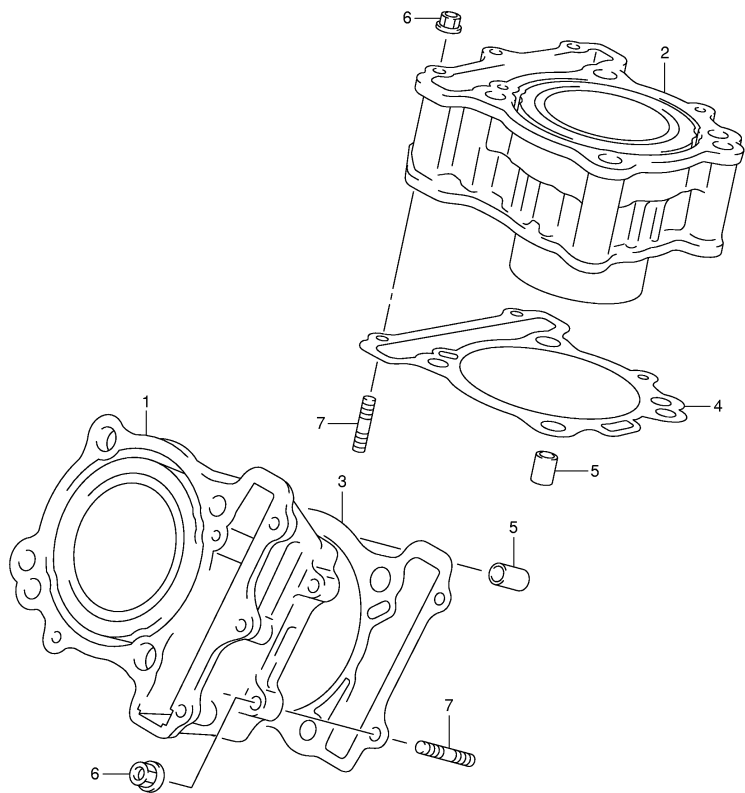

Ref No	Part No	Description
1	11210-20F00-0F0	Cylinder, Front
1	11210-20F10-0F0	Cylinder, Front
2	11220-20F00-0F0	Cylinder, Rear
2	11220-20F10-0F0	Cylinder, Rear
3	11241-19F00	Gasket, Cylinder Front
4	11242-19F00	Gasket, Cylinder Rear
5	04211-13189	Pin
6	08316-10063	Nut
7	01421-06253	Stud Bolt

Catalogue Title:
SV650Y (SV650Y E2)

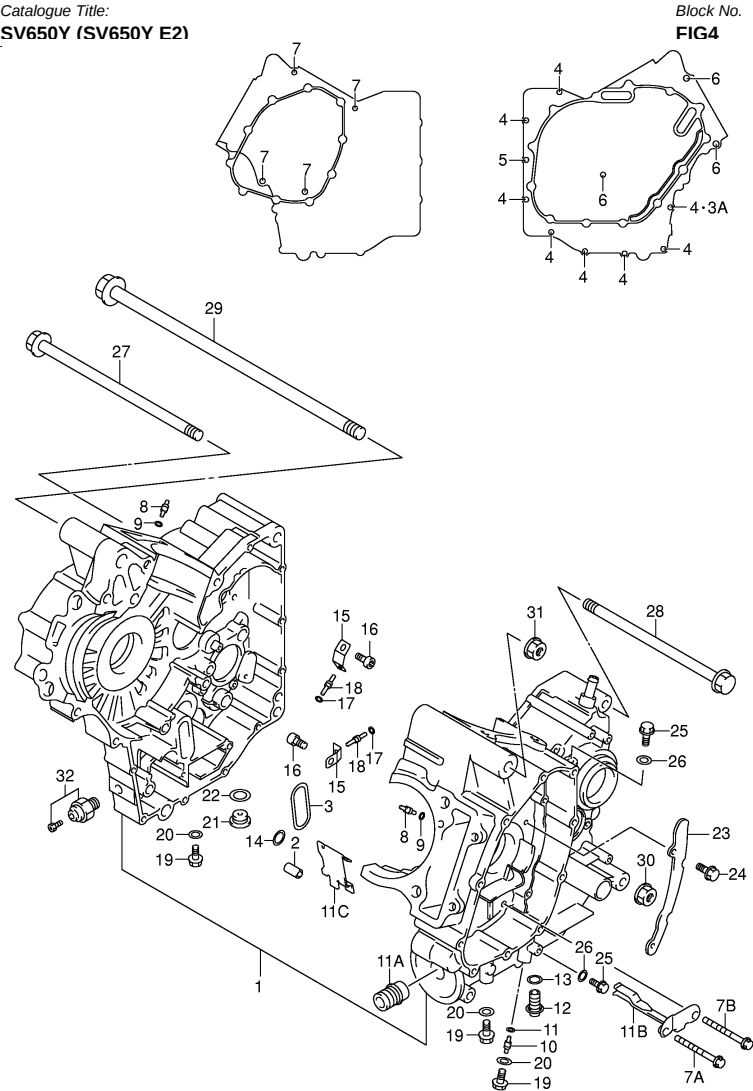


Block Title:
CRANKCASE (MODEL X/Y)

Ref No	Part No	Description
1	11301-20830	Crankcase Set
1	11301-20831	Crankcase Set
1	11301-20835	Crankcase Set
1	11301-20840	Crankcase Set
2	09206-11017	. Pin (11x20)
3	11315-19F00	. O Ring, Crankcase
3a	09168-06023	. Gasket (5.8x13x1.2)
4	01547-06503	. Bolt
5	01547-06507	. Bolt
6	07120-08553	. Bolt
7	07120-08803	. Bolt
7	07120-08803	. Bolt
7	07120-08803	. Bolt
7a	01500-08903	. Bolt
7b	09103-08066	. Bolt (8x95)
7c	11322-20F00	. Bolt (8x90)
7d	09103-08066	. Bolt (8x95)
8	09493-28010	. Jet, Oil Gallery Cylinder
9	09280-04004	. O Ring (d:1.2,id:4.0)
10	09493-28010	. Jet, Oil Gallery Mission
11	09280-04004	. O Ring (d:1.2,id:4.0)
11a	16591-06B00	. Union, Oil Filter Stand
11b	11391-20F00	. Plate, Oil
11c	11391-20F10	. Plate, Oil
11d	11391-20F20	. Plate, Oil
12	09247-12106	Plug (12x20)
13	09168-12002	Gasket (12.1x16.2x3.7)
14	09280-12009	O Ring (d:1.9,id:12.6)
15	16438-19F00	Plate, Piston Cooling Jet
16	09106-06075	Bolt (6x12)
17	09280-04004	O Ring (d:1.2,id:4.0)
18	09493-26007	Jet (130)
19	01550-08123	Bolt
20	09168-08029	Gasket
21	09248-16012	Plug
22	09168-16002	Gasket (16x22x2)
23	11323-19F00	Plate, Oil Separator
24	01547-06123	Bolt
25	01550-06123	Bolt
26	09168-06023	Gasket (5.8x13x1.2)
27	09103-10226	Bolt (10x260)
28	09103-10041	Bolt (10x215)
29	09103-12054	Bolt (12x310)
30	08319-31107	Nut
30	09159-10058	Nut
31	08319-31128	Nut
32	37820-33D00	Switch Assy, Oil Pressure
33	09160-10060	Washer (10.5x22x2.3)

Catalogue Title:
SV650Y (SV650Y E2)


Block No.
FIG4A

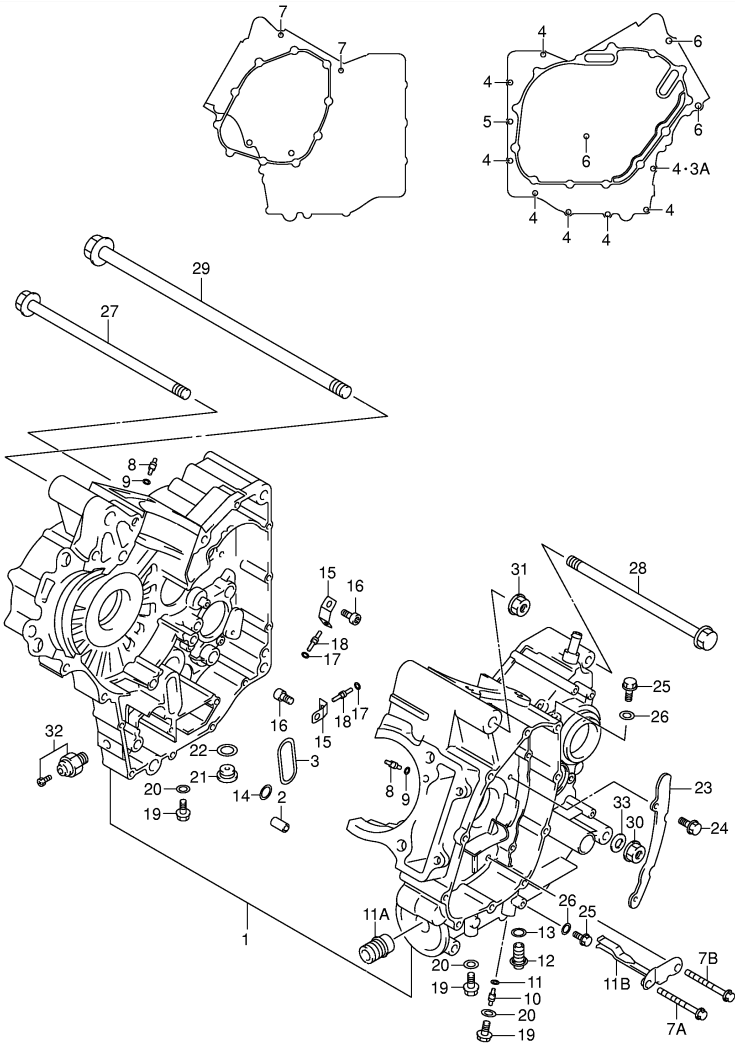


Block Title:
CRANKCASE (MODEL K1/K2)

Suzuki Worldwide Motorcycle-ATV Page: 6 of 88

Ref No	Part No	Description
1	11301-20850	Crankcase Set
2	09206-11017	• Pin (11x20)
3	11315-19F00	• O Ring, Crankcase
3a	09168-06023	• Gasket (5.8x13x1.2)
4	01547-06503	• Bolt
5	01547-06507	• Bolt
6	07120-08553	• Bolt
7	07120-08803	• Bolt
7a	11322-20F00	• Bolt (8x90)
7b	09103-08066	• Bolt (8x95)
8	09493-28010	• Jet, Oil Gallery Cylinder
9	09280-04004	• O Ring (d:1.2,id:4.0)
10	09493-28010	• Jet, Oil Gallery Mission
11	09280-04004	• O Ring (d:1.2,id:4.0)
11a	16591-06B00	• Union, Oil Filter Stand
11b	11391-20F20	• Plate, Oil
12	09247-12106	Plug (12x20)
13	09168-12002	Gasket (12.1x16.2x3.7)
14	09280-12009	O Ring (d:1.9,id:12.6)
15	16438-19F00	Plate, Piston Cooling Jet
16	09106-06075	Bolt (6x12)
17	09280-04004	O Ring (d:1.2,id:4.0)
18	09493-26007	Jet (130)
19	01550-08123	Bolt
20	09168-08029	Gasket
21	09248-16012	Plug
22	09168-16002	Gasket (16x22x2)
23	11323-19F00	Plate, Oil Separator
24	01547-06123	Bolt
25	01550-06123	Bolt
26	09168-06023	Gasket (5.8x13x1.2)
27	09103-10226	Bolt (10x260)
28	09103-10041	Bolt (10x215)
29	09103-12054	Bolt (12x310)
30	09159-10058	Nut
31	08319-31128	Nut
32	37820-33D10	Switch Assy, Oil Pressure
33	09160-10060	Washer (10.5x22x2.3)

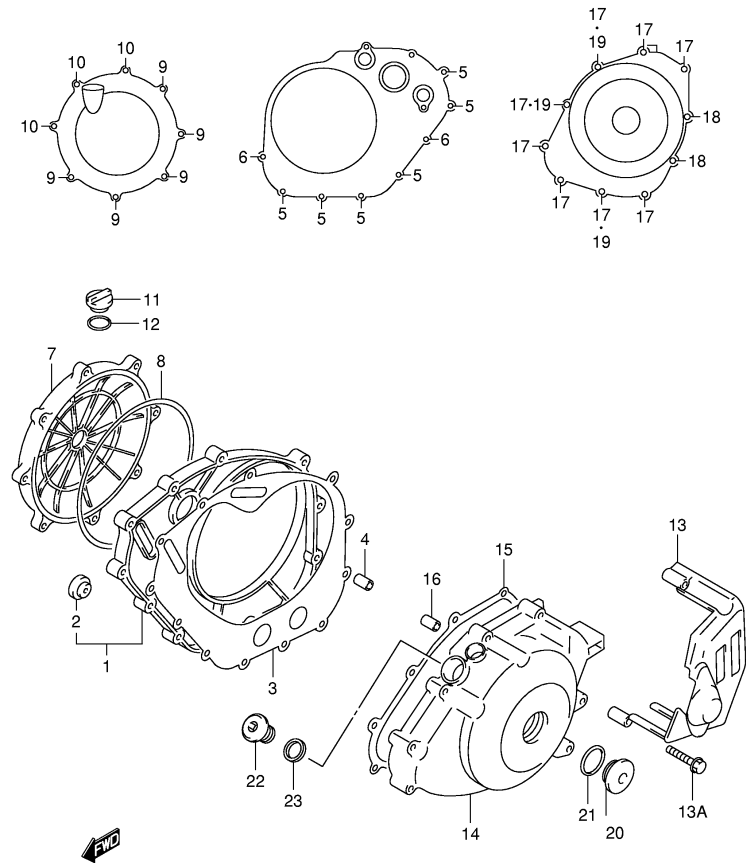



Ref No	Part No	Description
1	11340-19F00	Cover, Clutch Inner
2	11971-33210	• . Lens, Oil Level Check
3	11482-19F00	Gasket, Clutch Cover Inner
4	04211-09149	Pin
5	09103-06204	Bolt
6	09103-06205	Bolt
7	11370-19F00	Cover, Clutch Outer
8	11484-19F00	O Ring, Clutch Cover Outer
8	11484-19F01	O Ring, Clutch Cover Outer
9	09103-06180	Bolt
10	09103-06207	Bolt
11	09259-20008	Plug
12	09280-17003	O Ring (d:3.1,id:16.8)
13	11361-19F00	Cover, Engine Sprocket
13a	01547-06457	Bolt
14	11351-19F00	Cover, Magneto
15	11483-19F00	Gasket, Magneto Cover
16	04211-09149	Pin
17	01547-06357	Bolt
18	01547-06657	Bolt
19	09168-06023	Gasket (5.8x13x1.2)
19	09168-06023	Gasket (5.8x13x1.2)
20	09259-26012	Plug
21	09280-22008	O Ring (d:3.1,id:22.7)
22	09248-16012	Plug
23	09168-16002	Gasket (13.8x18.8x0.4)

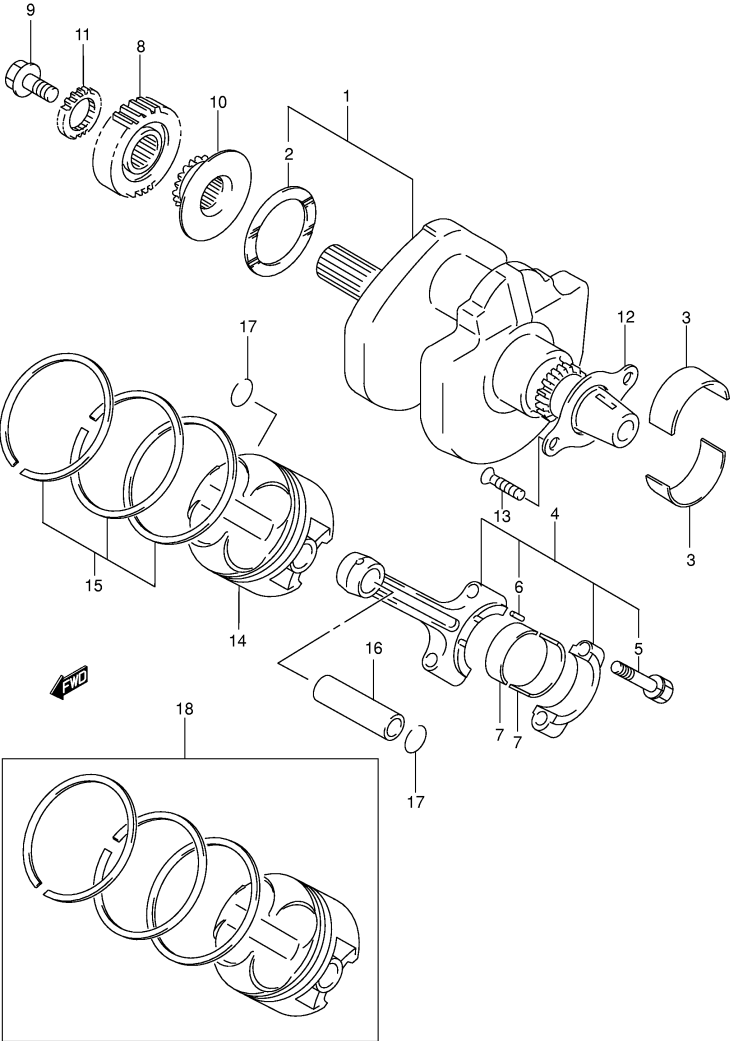


Ref No	Part No	Description
1	12000-20840	Crankshaft Set
2	12228-19F00-0A0	• . Washer, Thrust (t:1.925)
2	12228-19F00-0B0	• . Washer, Thrust (t:1.95)
2	12228-19F00-0C0	• . Washer, Thrust (t:1.975)
2	12228-19F00-0D0	• . Washer, Thrust (t:2.0)
2	12228-19F00-0E0	• . Washer, Thrust (t:2.025)
2	12228-19F00-0F0	• . Washer, Thrust (t:2.05)
2	12228-19F00-0G0	• . Washer, Thrust (t:2.075)
2	12228-19F00-0H0	• . Washer, Thrust (t:2.1)
2	12228-19F00-0I0	• . Washer, Thrust (t:2.125)
2	12228-19F00-0J0	• . Washer, Thrust (t:2.15)
3	12229-19F10-0A0	Bearing, Crankshaft (green)
3	12229-19F10-0B0	Bearing, Crankshaft (black)
3	12229-19F10-0C0	Bearing, Crankshaft (brown)
4	12160-20F00	Connecting Rod Assy
5	12163-17C50	• . Bolt, Connecting Rod
6	12165-27A50	• . Pin, Connecting Rod
7	12164-46E01-0A0	Bearing, Crank Pin (green)
7	12164-46E01-0B0	Bearing, Crank Pin (black)
7	12164-46E01-0C0	Bearing, Crank Pin (brown)
7	12164-46E01-0D0	Bearing, Crank Pin (yellow)
8	21111-20F00	Gear, Primary Drive
9	21112-19F00	Bolt, Primary Drive Gear
10	12731-19F00	Sprocket, Cam Chain Drive
11	17451-19F00	Gear, Water Pump Drive
12	12541-20F00	Retainer, Crankshaft Brg Lh
13	09126-06011	Screw
14	12111-20F00-0F0	Piston
15	12140-20F00	Ring Set, Piston
16	12151-05A00	Pin, Piston
17	09381-20004	Circlip
18	12100-20F00-050	Piston Set (os:0.5)
18	12100-20F00-100	Piston Set (os:1.0)

Ref No	Part No	Description
1	12611-20F01	Gear, Starter Idle
2	09206-12001	Pin
3	12600-20840	Clutch Set, Starter
4	07130-08163	Bolt

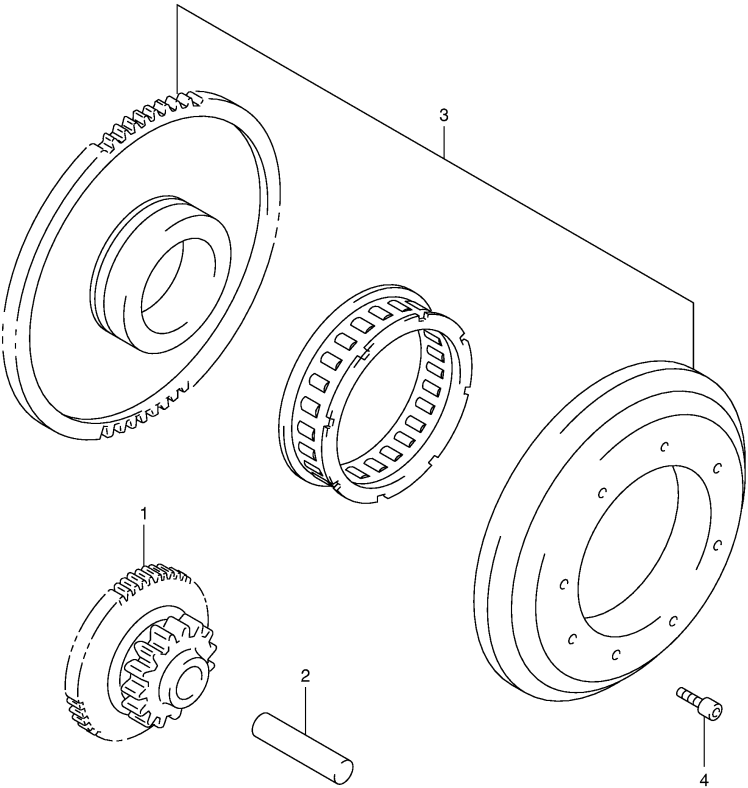


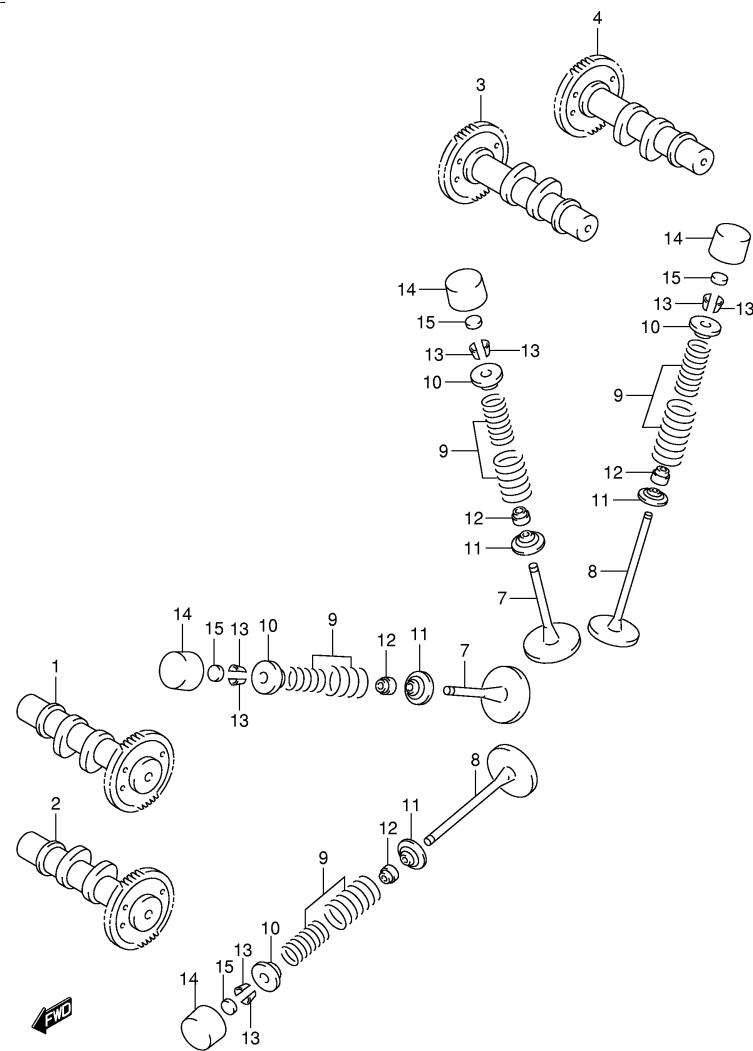

Ref No	Part No	Description
1	12710-20F00	Cam Shaft, Intake Front
2	12720-20F00	Cam Shaft, Exhaust Front
3	12730-20F00	Cam Shaft, Intake Rear
4	12740-20F00	Cam Shaft, Exhaust Rear
5	12800-05820	Shim Set, Tappet
6	99000-69491	• . Case, Tappet Shim
7	12911-46E00	Valve, Intake
8	12912-20F00	Valve, Exhaust
9	12920-33E10	Spring Set, Valve
10	12931-33E10	Retainer, Valve Spring
11	12933-39E00	Seat, Valve Spring
12	09289-04002	Oil Seal (4.5x10x8)
13	12932-17E50	Cotter, Valve
14	12891-17E00	Tappet
15	12892-05C00-120	Shim, Tappet (t:1.20)
15	12892-05C00-125	Shim, Tappet (t:1.25)
15	12892-05C00-130	Shim, Tappet (t:1.30)
15	12892-05C00-135	Shim, Tappet (t:1.35)
15	12892-05C00-140	Shim, Tappet (t:1.40)
15	12892-05C00-145	Shim, Tappet (t:1.45)
15	12892-05C00-150	Shim, Tappet (t:1.50)
15	12892-05C00-155	Shim, Tappet (t:1.55)
15	12892-05C00-160	Shim, Tappet (t:1.60)
15	12892-05C00-165	Shim, Tappet (t:1.65)
15	12892-05C00-170	Shim, Tappet (t:1.70)
15	12892-05C00-175	Shim, Tappet (t:1.75)
15	12892-05C00-180	Shim, Tappet (t:1.80)
15	12892-05C00-185	Shim, Tappet (t:1.85)
15	12892-05C00-190	Shim, Tappet (t:1.90)
15	12892-05C00-195	Shim, Tappet (t:1.95)
15	12892-05C00-200	Shim, Tappet (t:2.00)
15	12892-05C00-205	Shim, Tappet (t:2.05)
15	12892-05C00-210	Shim, Tappet (t:2.10)
15	12892-05C00-215	Shim, Tappet (t:2.15)
15	12892-05C00-220	Shim, Tappet (t:2.20)

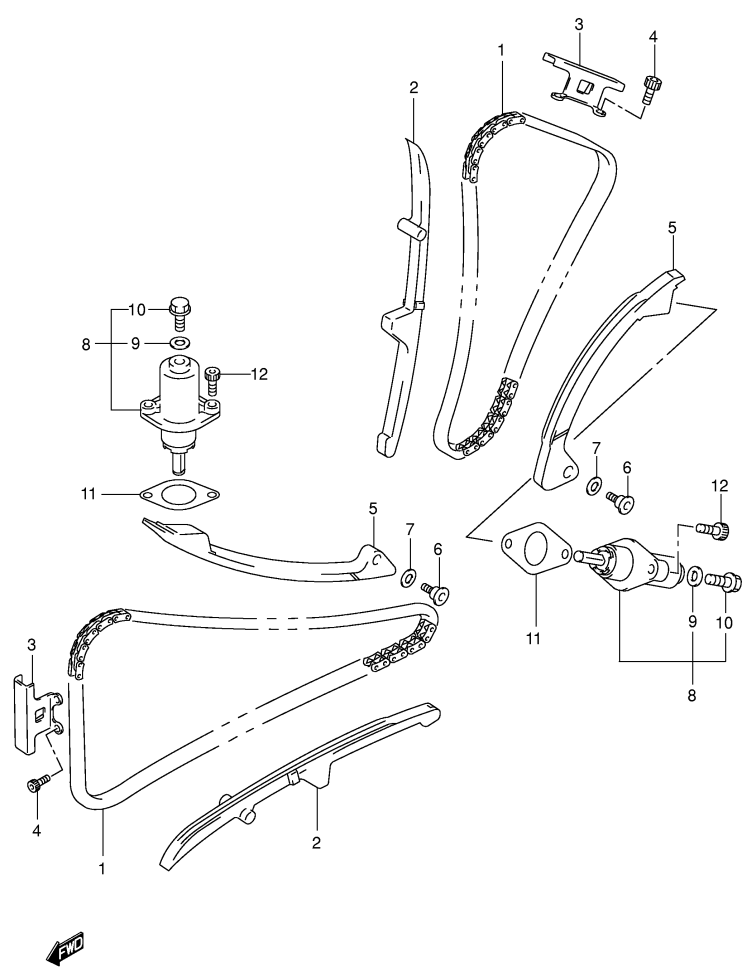

Ref No	Part No	Description
1	12760-19F00	Chain, Cam Shaft Drive
2	12771-19F00	Guide, Cam Chain No.1
3	12782-19F00	Guide, Cam Chain No.2
4	07130-06123	Bolt
5	12811-19F00	Tensioner, Cam Chain
6	12812-35C00	Bolt, Cam Chain Tensioner
7	08211-06181	Washer
8	12830-19F11	Adjuster Assy, Tensioner
9	12837-33E00	. Gasket, Tensioner Adjuster
10	12834-33E00	. Plug, Tensioner Adjuster
11	12837-24A10	Gasket, Tensioner Adjuster
12	07130-06253	Bolt

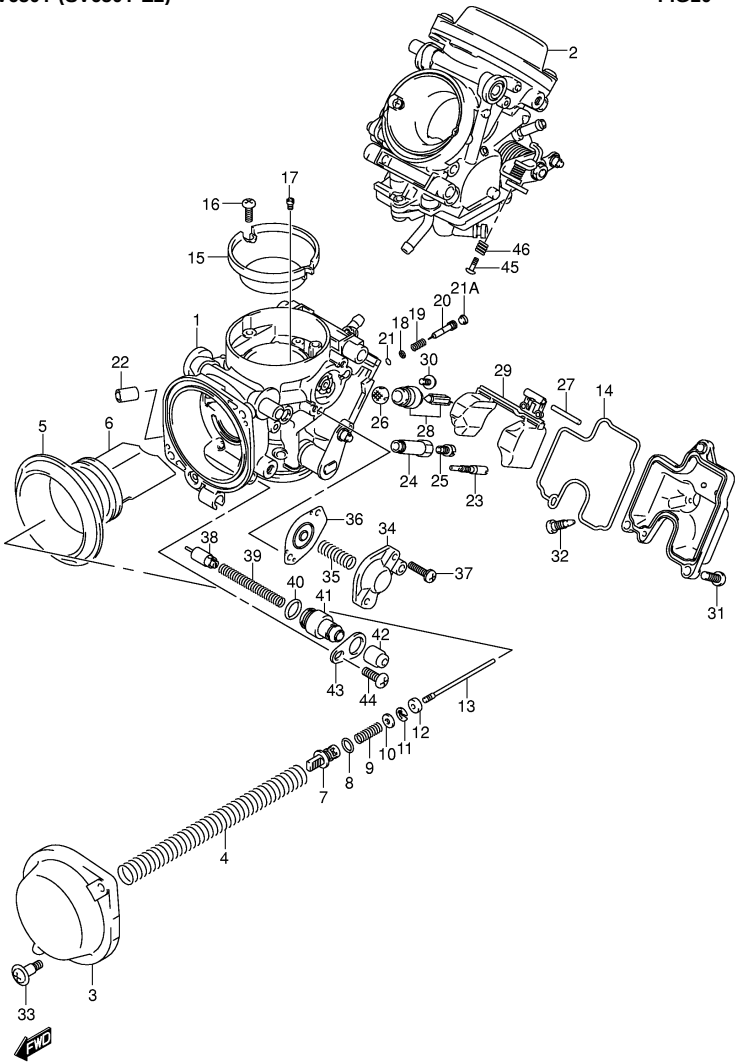

Ref No	Part No	Description
1	13201-20F00	Carburetor Assy, Front
1	13201-20F30	Carburetor Assy, Front
2	13202-20F00	Carburetor Assy, Rear
2	13202-20F30	Carburetor Assy, Rear
3	13502-07F00	. Cover Assy, Diaphragm
4	13481-19F00	. Spring
5	13507-33E00	. Diaphragm
6	13501-33E00	. Valve, Piston
7	13418-33E00	. Holder
8	09280-05004	. O Ring (d:1.9,id:4.8)
9	13481-33E00	. Spring
10	13382-44030	. Washer
11	13394-17E60	. E Ring, Multiple Jet Knzzel
12	13387-44030	. Ring
13	13383-33E00	. Needle, Jet (6e38-54-2)
14	13258-33E00	. O Ring
15	13667-20F00	. Funnel
16	02112-04123	. Screw
17	09493-34003	. Jet, Pilot Air (170)
17	09493-32007	. Jet, Pilot Air (160)
17	09492-30013	. Jet, Pilot Air (150)
18	13291-29900	. Washer
19	13268-48700	. Spring
20	13279-19F10	. Adjuster (2,1/2)
20	13279-19F10	. Adjuster (2,3/4)
20	13279-33E00	. Adjuster (3,1/2)
21	13295-29900	. O Ring
21a	13281-05A00	. Plug
22	13508-17C00	. Cap
23	09492-17016	. Jet, Pilot (17.5)
23	09492-15017	. Jet, Pilot (15)
24	13385-33E00	. Holder, Jet
25	09491-27014	. Jet, Main (137.5)
26	13376-19F00	. Filter
27	13254-92910	. Float Pin
28	13370-20F00	. Valve Assy, Needle
29	13250-33E00	. Float Assy
30	13602-05A10	. Screw
31	02112-05127	. Screw
32	13247-02340	. Screw, Drain
33	13247-33E00	. Screw
34	13502-10F00	. Cover Assy
35	13417-19F00	. Spring
36	13480-10F00	. Diaphragm Assy
37	13601-04148	. Screw
38	13411-01400	. Plunger, Starter
39	13417-07F00	. Spring
40	13278-18E20	. O Ring
41	13418-19F00	. Holder, Guide
42	13681-04010	. Cap, Carburetor
43	13421-19F00	. Plate
44	13601-05148	. Screw
45	13267-44B00	. Screw


Catalogue Title:
SV650Y (SV650Y E2)


FIG10

Block Title.
CARBURETOR


Suzuki Worldwide Motorcycle-ATV Page: 13 of 88

Ref No	Part No	Description
46	13271-44B00	• . Spring

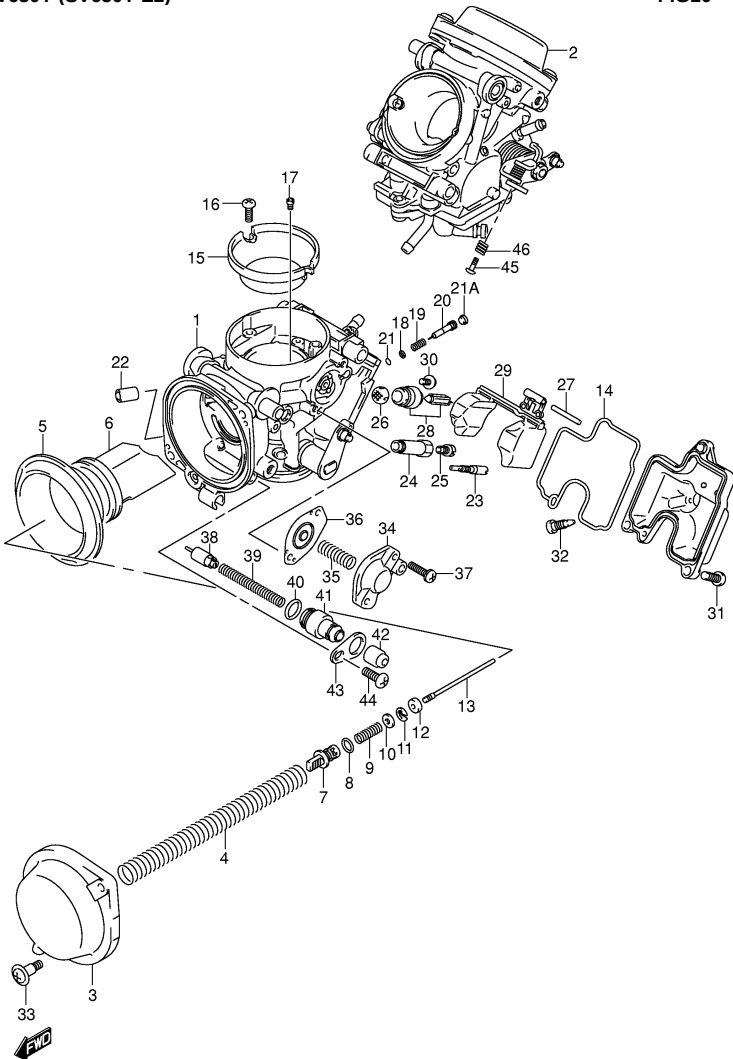

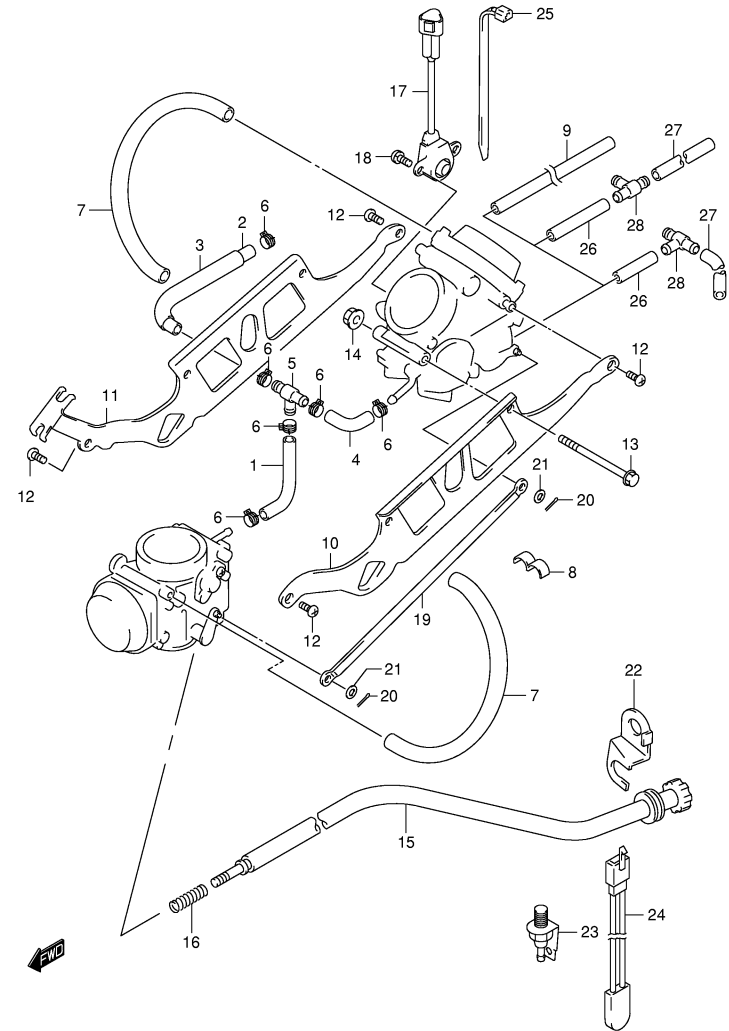


Ref No	Part No	Description
1	13684-48B10	Hose
2	13684-19F00	Hose (5.3x10.5x125)
3	13684-19F10	Hose (11x15x90)
4	13684-19F20	Hose (5.3x10.5)
5	13685-48B00	Nipple
6	13671-19F00	Clip
7	13686-19F00	Hose (7x11x250)
8	13671-19F10	Clip
9	09352-50903-600	Hose (5x9x600)
10	13482-20F00	Plate
11	13447-20F00	Plate
12	13602-05109	Screw
13	13612-19F00	Bolt
14	13324-19F00	Nut
15	13267-19F00	Adjust Screw Assy
16	13271-33C00	Spring
17	13580-19F00	Sensor Assy
18	13602-19B50	Screw
19	13553-19F00	Lever Assy
20	13563-19F00	Pin
21	13615-45010	Washer
22	13279-19F00	Plate, Idle Adjust
23	13650-25E01	Heater Assy, Carburetor
24	13655-25E00	Thermo Switch, Heater
25	09407-18402	Clamp, Thermo Switch
26	13683-10D20	Hose (5x9x60)
26	13684-20F30	Hose (5x9x40)
27	09352-50901-600	Hose (5x9x600)
28	13685-48B00	Nipple

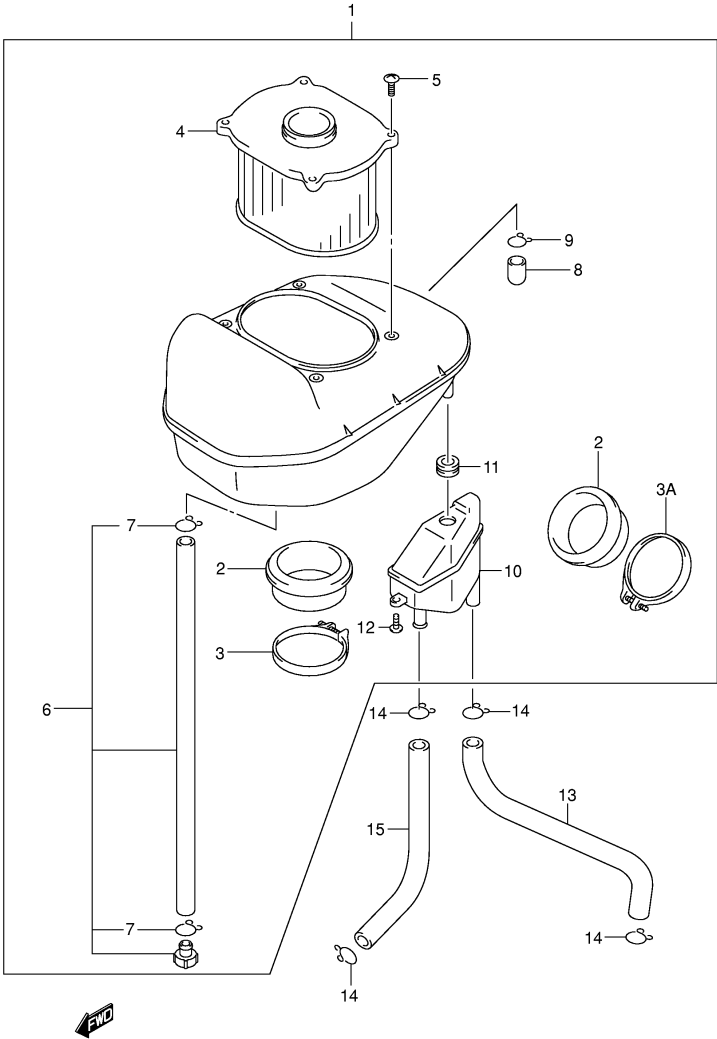


Ref No	Part No	Description
1	13700-20F00	Cleaner Assy, Air
1	13700-20F10	Cleaner Assy, Air
1	13700-20F01	Cleaner Assy, Air
1	13700-20F11	Cleaner Assy, Air
2	13881-20F00	. . Tube, Outlet
3	13170-20F10	. . Clamp, Outlet Tube Front
3a	13170-20F00	. . Clamp, Outlet Tube Rear
3a	09402-72203	. . Clamp, Outlet Tube Rear
4	13780-20F00	. . Filter, Air Cleaner
5	02142-05203	. . Screw
6	13870-19F00	. . Tube, Drain
6	13870-20F10	. . Tube, Drain
6	13870-20F11	. . Tube, Drain
7	09401-14301	 Clip
8	13859-41B10	. . Plug
9	09401-14301	. . Clip
10	13840-20F00	. . Tank, Oil Return
10	13840-20F01	. . Tank, Oil Return
11	09308-13001	 Grommet
12	03142-05163	. . Screw
13	13851-20F00	Tube, Breather Crankcase
13	13851-20F10	Tube, Breather Crankcase
14	09401-15101	Clip
15	09355-11165-600	Tube, Breather Cylinder

(11x16x600)

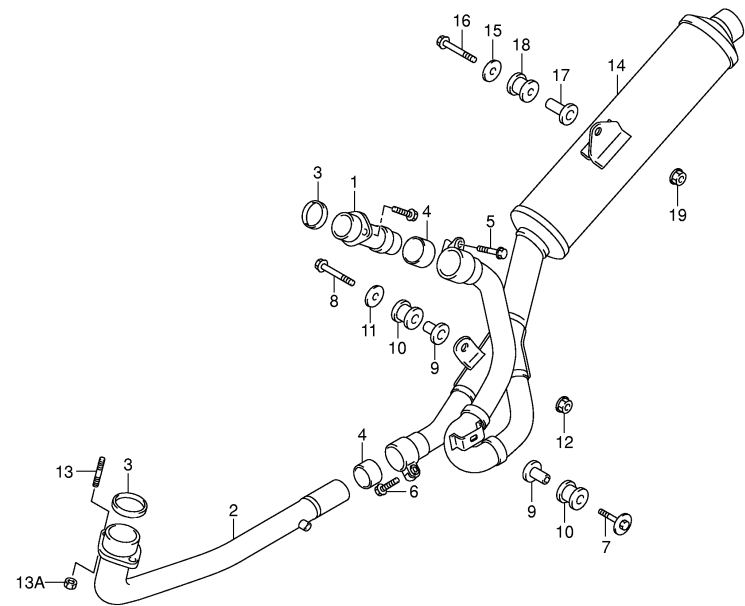


Ref No	Part No	Description
1	14150-19F00	Pipe, Exhaust Rear
2	14160-19F10	Pipe, Exhaust Front
3	14181-22D01	Gasket, Exhaust Pipe
4	14771-32E00	Connector, Muffler
5	07120-08403	Bolt
6	07120-08403	Bolt
7	09118-08068	Bolt (8x40)
8	01550-08457	Bolt
9	09180-08152	Spacer (8.6x12x24.2)
10	09320-12048	Cushion
11	09160-08138	Washer (8.5x30x2.3)
12	08361-25088	Nut
13	01421-08253	Bolt, Stud (8x25)
13a	08319-31087	Nut
14	14305-19F11-H01	Muffler
15	09160-08140	Washer (8.5x33x2.6)
16	01550-08457	Bolt
17	09180-08156	Spacer (8.6x12x25.5)
18	09320-12049	Cushion
19	08361-25088	Nut




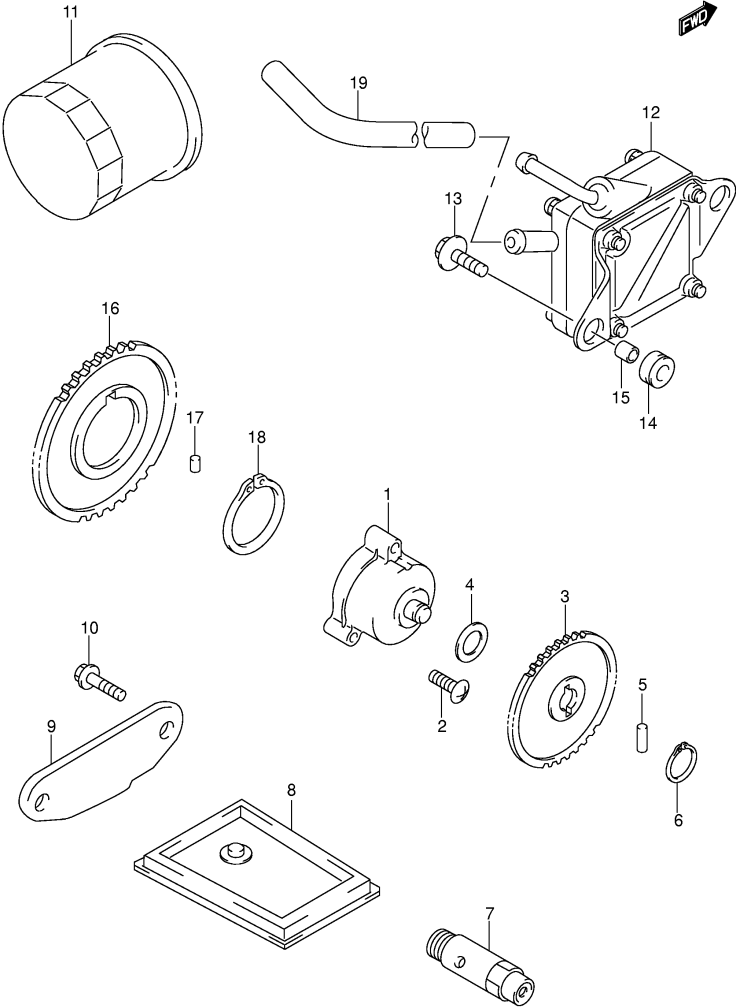

Ref No	Part No	Description
1	16400-20F00	Pump Assy, Engine Oil
2	02112-06253	Screw
3	16331-48E00	Gear, Oil Pump Driven (nt:34)
4	09181-10158	Shim
5	09261-04009	Pin (4x15.8)
6	08331-31106	Circlip
7	16440-17C20	Valve Assy, Oil Relief
8	16520-32E00	Strainer, Engine Oil
9	16523-48E00	Cap, Oil Strainer
10	01547-06123	Bolt
11	16510-34E00	Filter Assy, Engine Oil
12	15100-19F00	Pump Assy, Fuel
13	09116-06115	Bolt, Fuel Pump
14	09320-09036	Cushion, Fuel Pump
15	09180-06257	Spacer, Fuel Pump
16	16321-19F00	Gear, Engine Oil Pump Drive
17	09261-06002	Roller (od:6,1:6)
18	08331-31383	Circlip
19	09355-50105-600	Hose, Vacuum

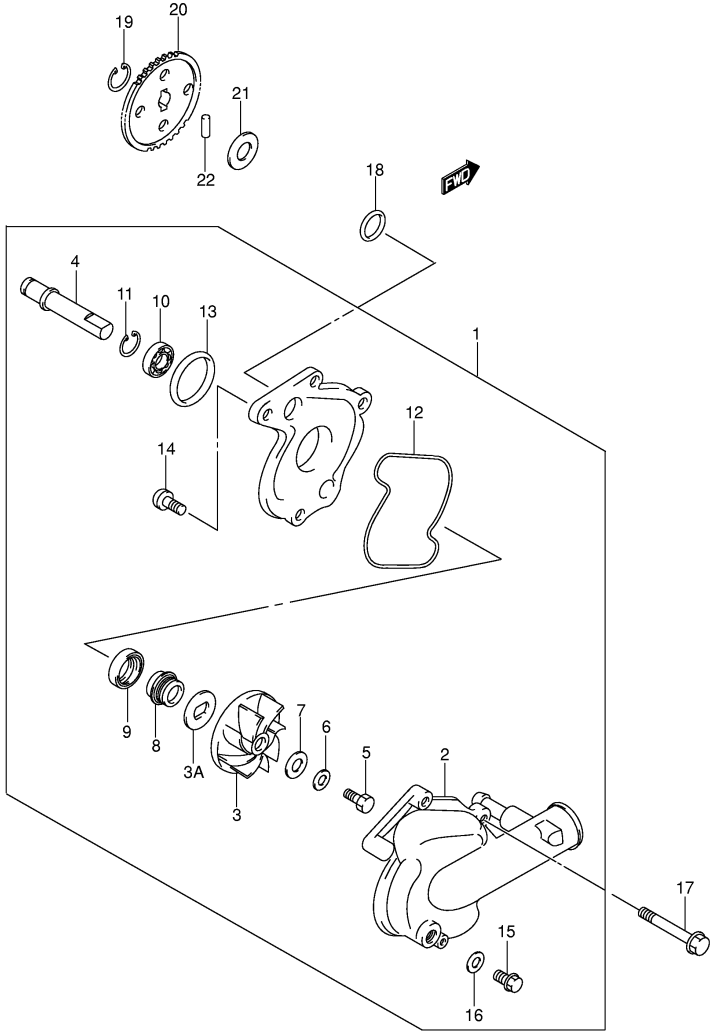


Ref No	Part No	Description
1	17400-19F02	Pump Assy, Water
2	17411-19F00	. Case, Water Pump
3	17491-19F01	. Impeller, Water Pump
3a	17533-02F00	. Washer, Impeller
4	17511-19F00	. Shaft, Water Pump
5	09100-06162	. Bolt (6x13)
6	09164-06006	. Lock Washer
7	09168-06025	. Gasket (6x15x2.2)
8	17470-02F10	. Seal, Mechanical
9	09283-10004	. Oil Seal (10x21x5)
10	09262-10014	. Bearing (10x26x8)
11	08332-11086	. E Ring
12	17418-19F00	. O Ring
13	17435-33400	. O Ring
14	02112-06163	. Screw
15	17415-14300	. Bolt, Drain
16	09168-08008	. Gasket (8.2x14x1)
17	09103-06206	Bolt
18	09280-22001	O Ring (d:2.4,id:21.8)
19	08331-31106	Circlip
20	17461-19F00	Gear, Water Pump Driven
21	09181-10158	Shim
22	09261-04002	Roller

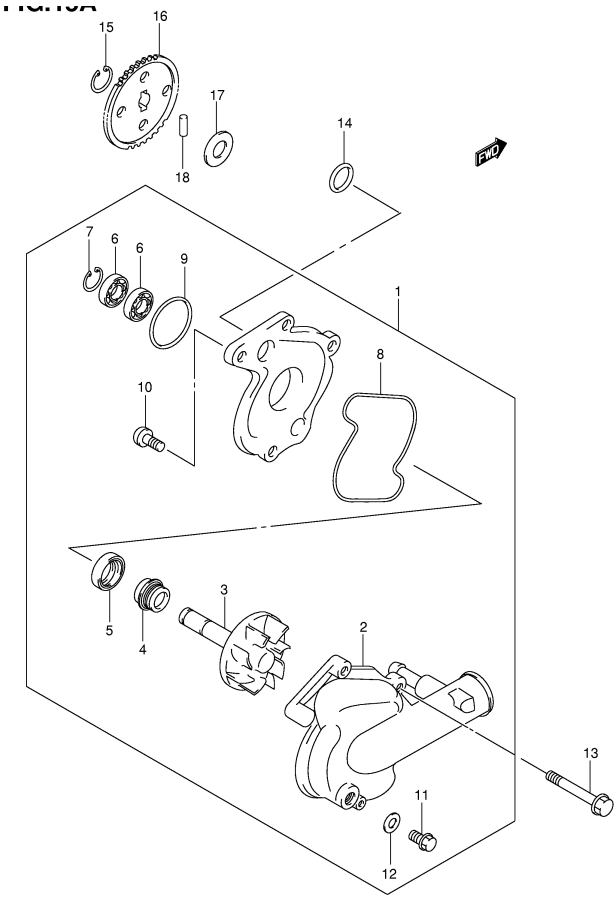


SV650Y E02_015A
WATER PUMP


Ref No	Part No	Description
3	17491-19F10	• Impeller/shaft
4	17470-02F10	• Seal, Mechanical
5	09283-10004	• Oil Seal (10x21x5)
6	08110-69000	• Bearing
7	08332-11086	• E Ring
8	17418-19F00	• O Ring
9	17435-33400	• O Ring
10	02112-06163	• Screw
11	17415-14300	• Bolt, Drain
12	09168-08008	• Gasket (8.2x14x1)
13	09103-06206	Bolt
14	09280-22001	O Ring (d:2.4,id:21.8)
15	08331-31106	Circlip
16	17461-19F00	Gear, Water Pump Driven
17	09181-10158	Shim
18	09261-04002	Roller

Ref No	Part No	Description
1	17710-19F00	Radiator Assy, Water
4	17800-19F10	Fan Assy, Radiator
5	01550-06103	Bolt
6	09148-06015	Nut
7	09320-10042	Cushion
8	09180-06290	Spacer (6.5x10x12)
9	09118-06097	Bolt (6x25)

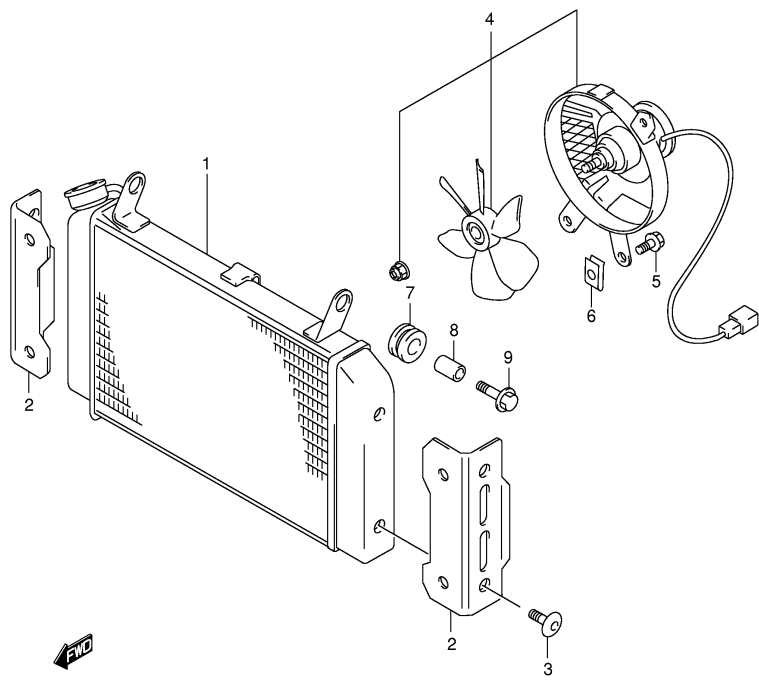


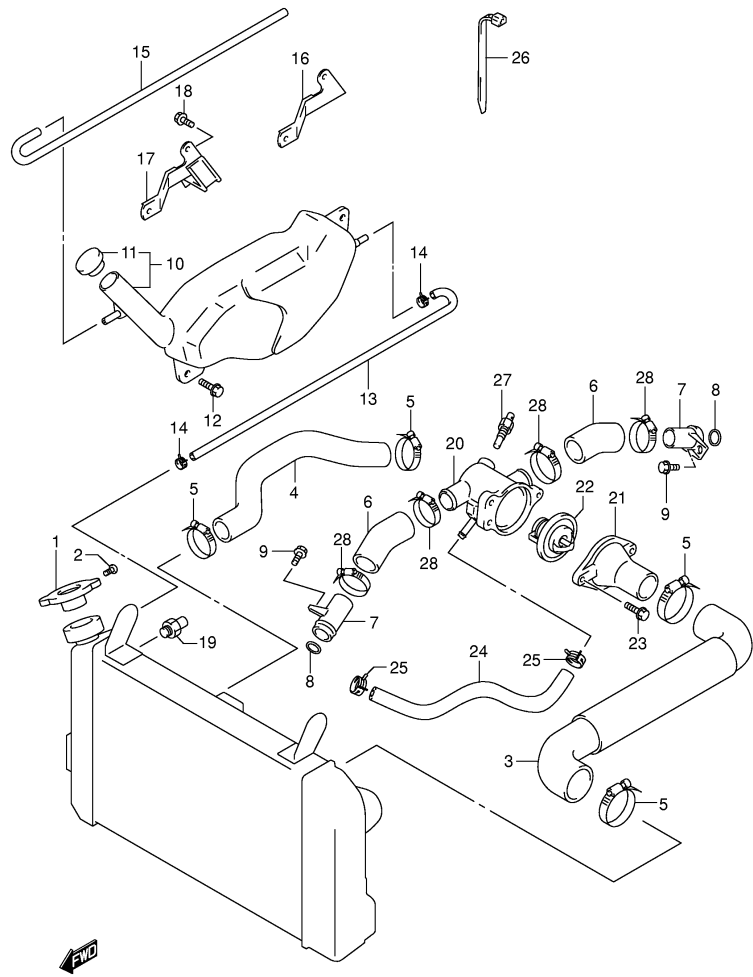


Ref No	Part No	Description	
1	17730-12C20	Cap, Radiator	
3	17851-19F00	Hose, Radiator Inlet	
4	17852-19F00	Hose, Radiator Outlet	
5	09402-38511	Clamp	
6	17853-19F00	Hose, Connector Inlet	
7	17890-02F00	Union, Connector Hose	
8	09280-18009	O Ring	
9	07130-06123	Bolt	
10	17910-19F00	Tank Assy, Reservoir	
11	17932-12C00	Cap, Reservoir Tank	
12	01550-06163	Bolt	
13	17981-19F00	Hose, Reservoir Tank Inlet	
14	09401-08411	Clip	
15	09359-50901-980	Hose, Reservoir Tank Overflow	(I:980)
17	17920-19F00	Bracket, Reservoir Tank	
18	01550-06123	Bolt	
19	17680-24A20	Switch, Radiator Fan	
20	17662-19F02	Connector, Thermostat Inlet	
21	17663-02FA0	Cap, Thermostat Connector	
22	17670-50F00	Thermostat, Water (82žc)	
23	01550-06163	Bolt	
24	17856-19F00	Hose, Connector To Water Pump	
25	09401-12409	Clamp	
26	09407-14403	Clamp (I:140)	
27	34850-44D20	Sensor, Water Temperature	
28	09402-28511	Clamp	

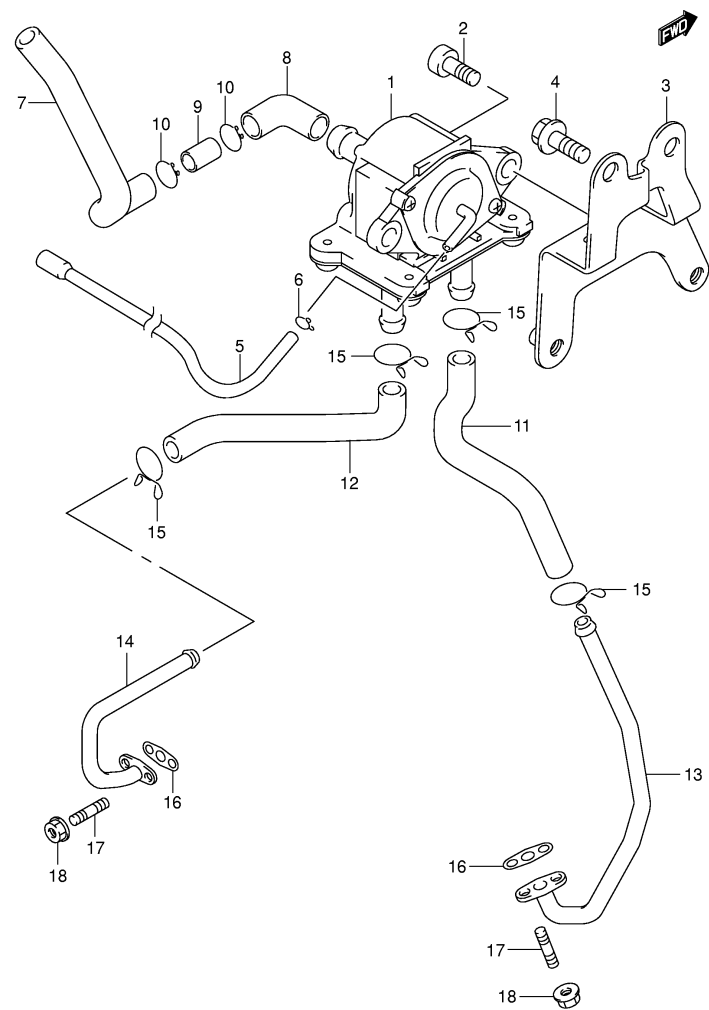


Ref No	Part No	Description
1	18450-20F01	Valve Assy, 2nd Air
2	07130-06163	Bolt, 2nd Air Valve
3	18610-20F00	Bracket, 2nd Air Valve
4	02162-06163	Bolt, 2nd Air Bracket
5	09359-40701-600	Hose, 2nd Air Vacuum
6	09401-06101	Clip
7	18711-20F00	Hose, 2nd Air Cleaner
8	18712-21F00	Hose, 2nd Air Cleaner Joint
9	13888-19B00	Joint, 2nd Air Cleaner Hose
10	09401-15101	Clip
11	18461-20F00	Hose, 2nd Air Valve Front
12	18471-20F00	Hose, 2nd Air Valve Rear
13	18410-20F00	Pipe, 2nd Air Front
14	18420-20F00	Pipe, 2nd Air Rear
15	09401-13409	Clip
16	18441-45C00	Gasket, 2nd Air Pipe
17	01421-06163	Bolt, Stud
18	08316-10063	Nut

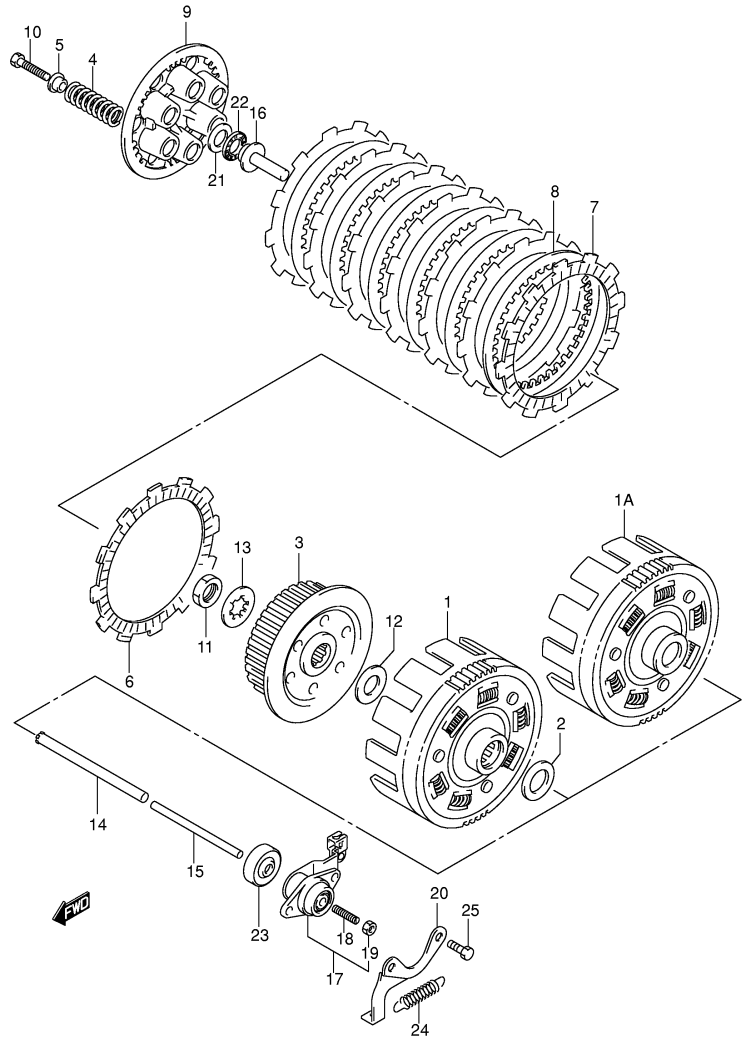


Ref No	Part No	Description
1	21200-20810	Gear Assy, Primary Driven
2	09160-20067	Washer (20x36x3)
3	21411-44101	Hub, Clutch Sleeve
4	21413-20F00	Spring, Clutch
5	21414-01D00	Spacer, Clutch Sleeve Hub
6	21440-19F00	Plate, Clutch Drive
7	21441-37440	Plate, Clutch Drive
8	21451-28C31	Plate, Clutch Driven (t:1.6)
9	21462-14301	Disc, Clutch Pressure
10	09100-06145	Bolt (6x40)
11	09140-20001	Nut
12	09160-20067	Washer (20x36x3)
13	09167-20006	Lock Washer
14	23110-44111	Rod, Push Rh
15	23111-24A01	Rod, Clutch Push Lh
16	23121-44100	Piece, Clutch Push
17	23200-11D00	Screw Assy, Clutch Release
18	09134-06010	• . Screw
19	08310-00067	• . Nut
20	23226-19F00	Support, Clutch Release
21	09160-15045	Washer (15.5x28x1)
22	09263-15003	Bearing (15x28x2)
23	09285-06015	Oil Seal (6x34x5.5)
24	09443-08001	Spring
25	01500-06163	Bolt

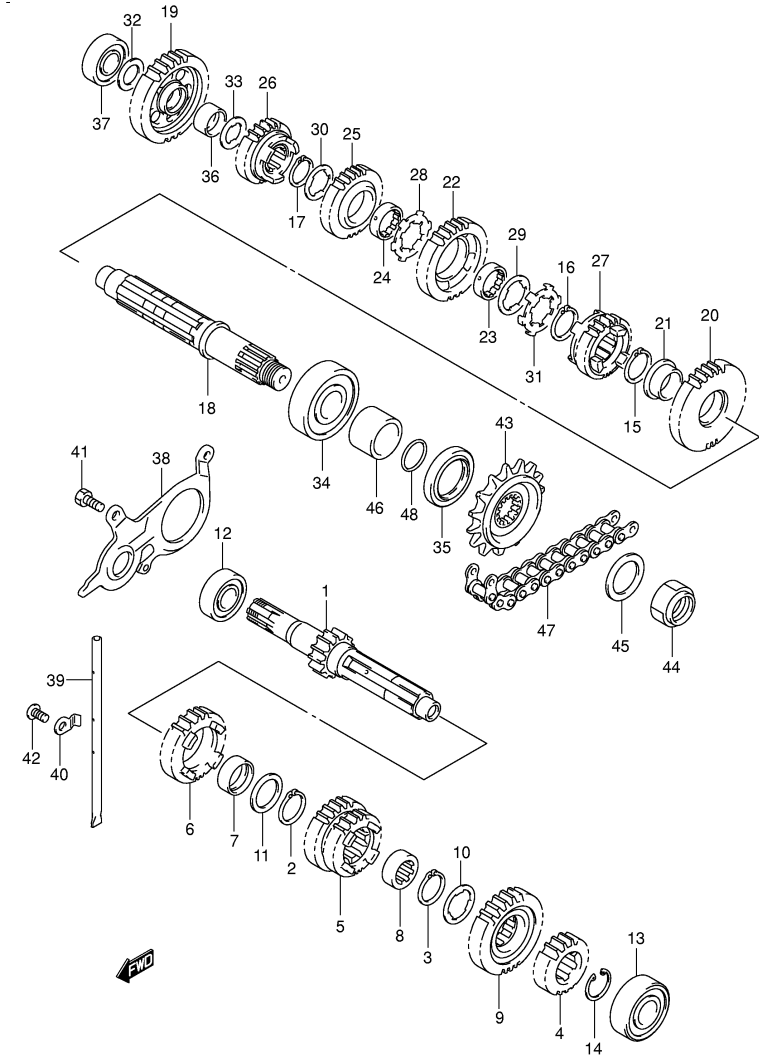

Ref No	Part No	Description
1	24120-19F00	Shaft, Counter (nt:13)
2	24127-19F00	Circlip, 5th Drive
3	24127-19F00	Circlip, 6th Drive
4	24221-20F00	Gear, 2nd Drive (nt:18)
5	24231-20F01	Gear, 3rd & 4th Drive
6	24251-20F01	Gear, 5th Drive (nt:26)
7	24252-19F00	Bush, 5th Drive
8	24252-38A10	Bush, 6th Drive
9	24261-20F00	Gear, 6th Drive (nt:27)
10	09167-25021	Washer, 6th Drive
11	09181-25167	Washer, 5th Drive
12	09262-17046	Bearing, Cntr Shaft Lh
13	09262-20116	Bearing, Cntr Shaft Rh
14	09380-25012	Ring, 2nd Drive
15	24127-19F00	Circlip, 2nd Driven
16	24127-19F00	Circlip, 3rd Driven
17	24127-19F00	Circlip, 4th Driven
18	24130-19F01	Shaft, Drive
19	24311-20F00	Gear, 1st Driven (nt:32)
20	24321-20F00	Gear, 2nd Driven (nt:32)
21	24322-19F00	Bush, 2nd Driven
22	24331-20F00	Gear, 3rd Driven (nt:29)
23	24332-24510	Bush, 3rd, Driven
24	24332-24510	Bush, 4th Driven
25	24341-20F00	Gear, 4th Driven (nt:27)
26	24351-20F01	Gear, 5th Driven (nt:25)
27	24361-20F00	Gear, 6th Driven (nt:23)
28	09167-25013	Lock Washer, 3rd Driven
29	09167-25021	Washer, 3rd Driven
30	09167-25021	Washer, 4th Driven
31	09169-25001	Washer, 3rd Driven Lock
32	09181-17195	Washer, 1st Driven
33	09181-20195	Washer, 1st Driven
34	09262-25125	Bearing, Drive Shaft Lh
35	09283-36003	Seal, Drive Shaft
36	09300-20032	Bush, 1st Driven
37	09262-17023	Bearing, Drive Shaft Rh
38	24751-19F00	Retainer, Drive Shaft Oil Seal
39	24881-12C20	Guide, T/m Oil
40	24885-12C10	Retainer, Transmission Oil
41	01500-06123	Bolt
42	02112-06123	Screw
43	27510-20F00	Sprocket, Engine (nt:15)
44	09159-20004	Nut, Engine Sprocket
45	09167-25019	Washer, Engine Sprocket
46	27531-19F00	Spacer, Engine Sprocket
47	27600-32C10-110	Chain Assy (did525v9,110le)
47	27600-32C10-108	Chain Assy (did525v9,108le)
48	09280-24010	O Ring (d:2.4,id:23.7)

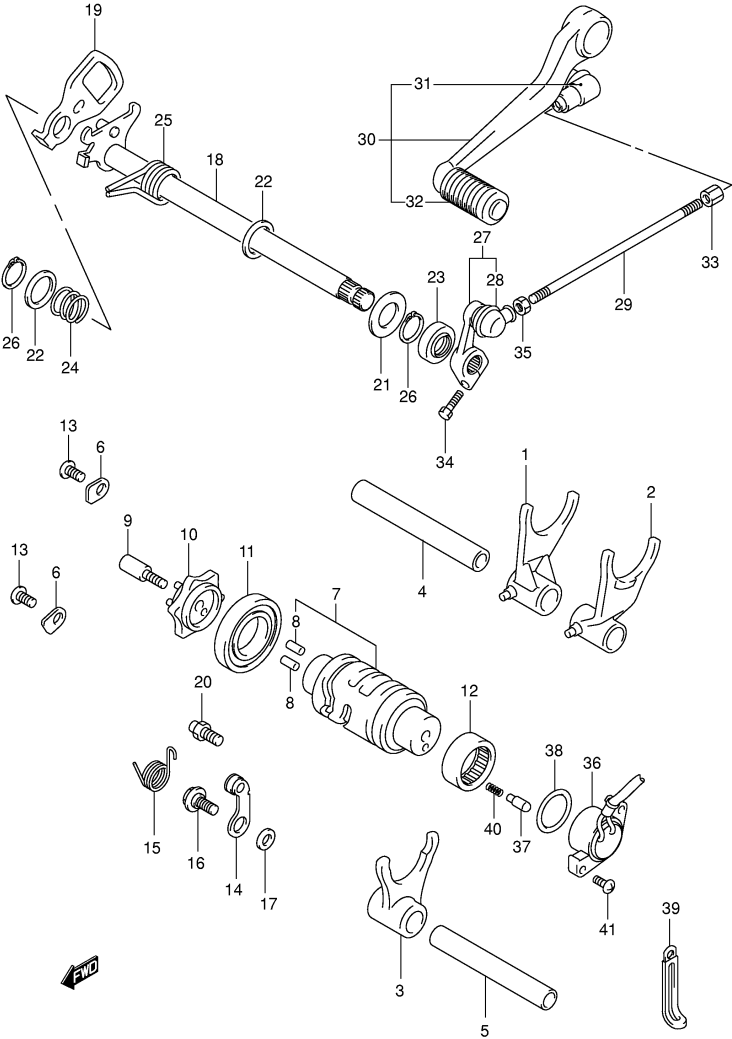


Ref No	Part No	Description
1	25211-42E10	Fork, Gear Shift No.1
2	25221-42E10	Fork, Gear Shift No.2
3	25231-42E10	Fork, Gear Shift No.3
4	25411-26D01	Shaft, Gear Shift Fork No.1
5	25411-44B00	Shaft, Gear Shift Fork No.2
6	24741-21A00	Retainer, Shift Cam Bearing
7	25310-19F00	Cam, Gear Shift
8	04221-04089	• , Knock Pin
9	25312-12C00	Pin, Shift Cam Driven Gear
10	25381-19F00	Plate, Gear Shift Cam
11	09262-25006	Bearing (25x47x8)
12	09263-25018	Bearing (25x32x12)
13	02112-06123	Screw
14	25350-24B00	Stopper, Gear Shift Cam
15	25355-20F00	Spring, Stopper Arm
16	09111-06041	Bolt (6x14.3)
17	08211-06141	Washer
18	25510-19F00	Shaft, Gear Shift
19	25512-13E11	Plate, Gear Shift Cam Drive
20	25671-01000	Stopper, Return Spring
21	09160-14016	Washer (14x29x0.8)
22	09181-14167	Shim
23	09283-14006	Oil Seal (14x22x6)
24	09440-17009	Spring
25	09444-20001	Spring
26	08331-31146	Circlip
27	25520-29B00	Arm, Gear Shift Link
28	25526-47000	• , Cover, Dust
29	25525-05A10	Rod, Gear Shift (l:175)
30	25600-33E00	Lever Assy, Gear Shift
31	25526-47000	• , Cover, Dust
32	25652-20C00	• , Rubber, Gear Shift Pedal
33	09140-06011	Nut
34	01500-06203	Bolt
35	08310-00067	Nut
36	37720-20F00	Base Assy, Gear Shift Terminal
37	09209-05011	Contact
38	09280-26007	O Ring (od:2.4,id:25.7)
39	09404-08206	Clamp (l:82)
40	09440-04010	Spring
41	02112-05163	Screw

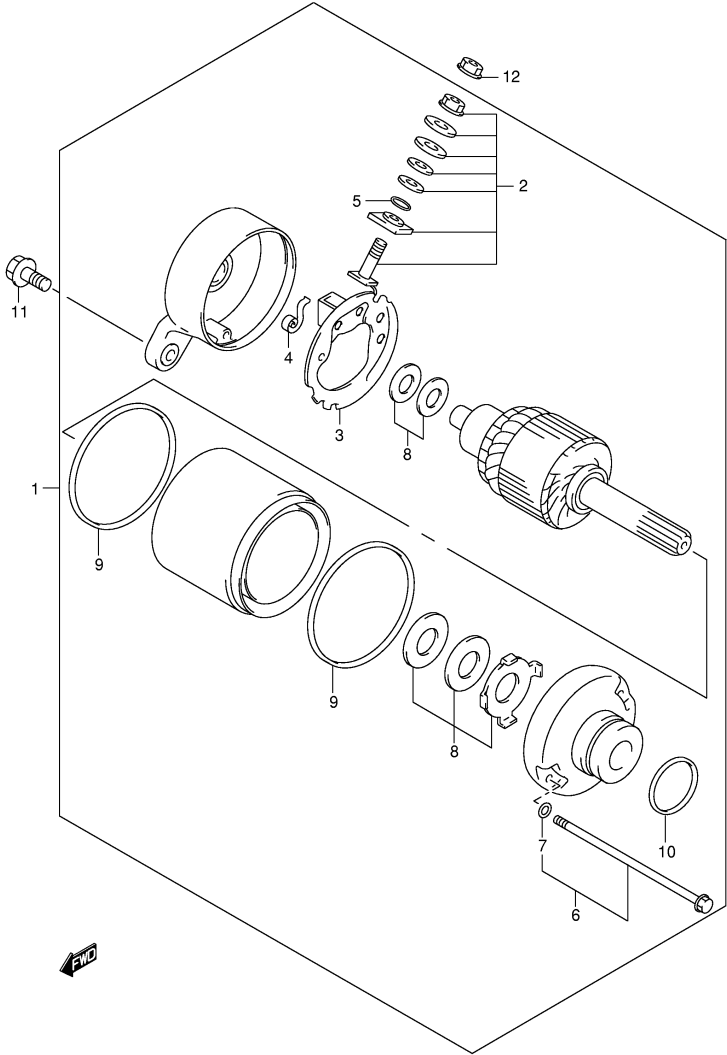

Ref No	Part No	Description
1	31100-19F00	Motor Assy, Starting
2	31130-13E00	• Brush Terminal Set
3	31132-33E00	• Brush Holder Set
4	31135-31300	• Spring, Brush
5	31143-49040	• O Ring
6	31280-19F00	• Set Bolt Assy
7	31156-13E00	• O Ring
8	31170-19B10	• Washer Set
9	31264-13E00	• O Ring
10	09280-25002	• O Ring (d:3.1,id:24.4)
11	01547-06253	Bolt
12	08361-35068	Nut

Ref No	Part No	Description
1	32101-19F00	Stator Assy
2	32102-20F00	Rotor Assy
3	32371-19F00	Clamp, Magneto Lead
4	09103-12004	Bolt (12x40)
5	09160-12036	Washer (12x30x3)
6	07130-05123	Bolt
7	07130-06303	Bolt
8	09420-04008	Key

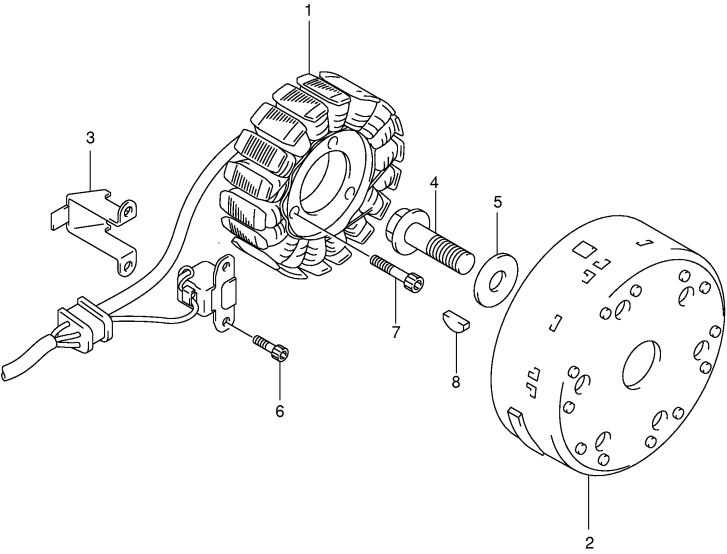

1

2

3

4

5

6


7

8

9

FWD

Ref No	Part No	Description
1	33610-02F01	Battery Assy (yt12a-bs,12v,10ah)
2	33651-37000	Protector (170x95x3.0)
3	33652-28000	Protector, Battery (20x45x6)
4	33652-19F00	Protector (85x40x5)
5	33810-19F00	Wire, Starter Motor Lead
6	31861-48B10	• . Cap, Starter Motor Lead
7	33820-19F00	Wire, Battery (+) Lead
8	33624-16E00	• . Cap, Battery (+)
9	33860-19F00	Wire, Battery (-) Lead

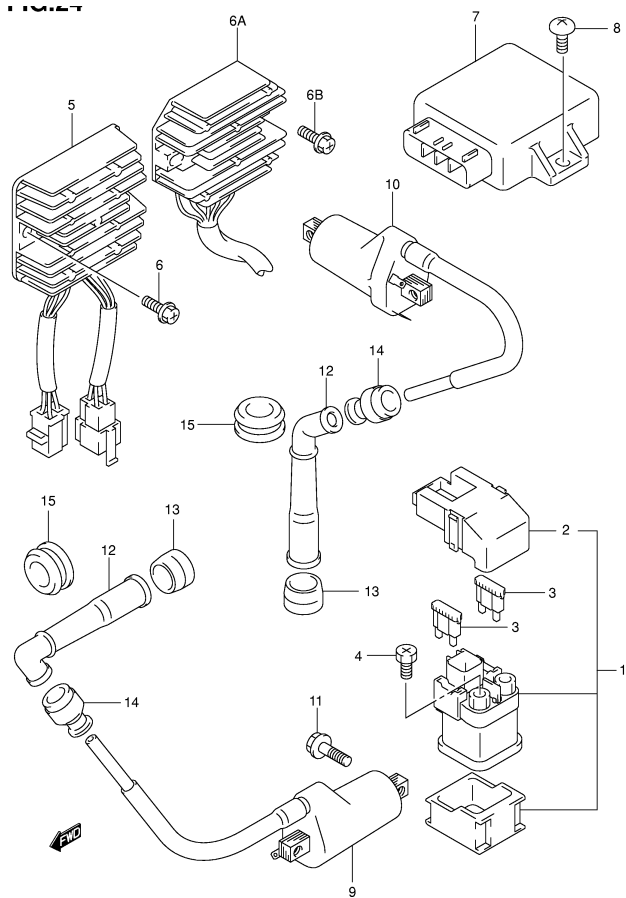


SV650Y E02_024
ELECTRICAL

Ref No	Part No	Description
1	31800-21E20	Relay Assy, Starting Motor
2	31861-21E20	• . Cover, Relay Assy
3	09481-30101	• . Fuse (30a)
4	09128-06013	Screw (6x8)
5	32800-24B01	Rectifier Assy
6	02162-06163	Bolt
7	32900-20F00	Igniter Assy
7	32900-20F20	Igniter Assy
8	03542-06163	Screw
9	33410-19F00	Coil Assy, Ignition
10	33420-19F00	Coil Assy, Ignition
11	01500-06203	Bolt
12	33510-11D00	Cap, Spark Plug
13	33541-23E01	Seal, Spark Plug Cap
14	33542-38B00	Seal, High Tension Cord
15	33543-19F00	Cover, Spark Plug Cap


Catalogue Title:
SV650Y (SV650Y E2)

Block No.
FIG25

Block Title:
SPEEDOMETER (SV650X/UX/Y/UY/K1/UK1/K2/UK2)

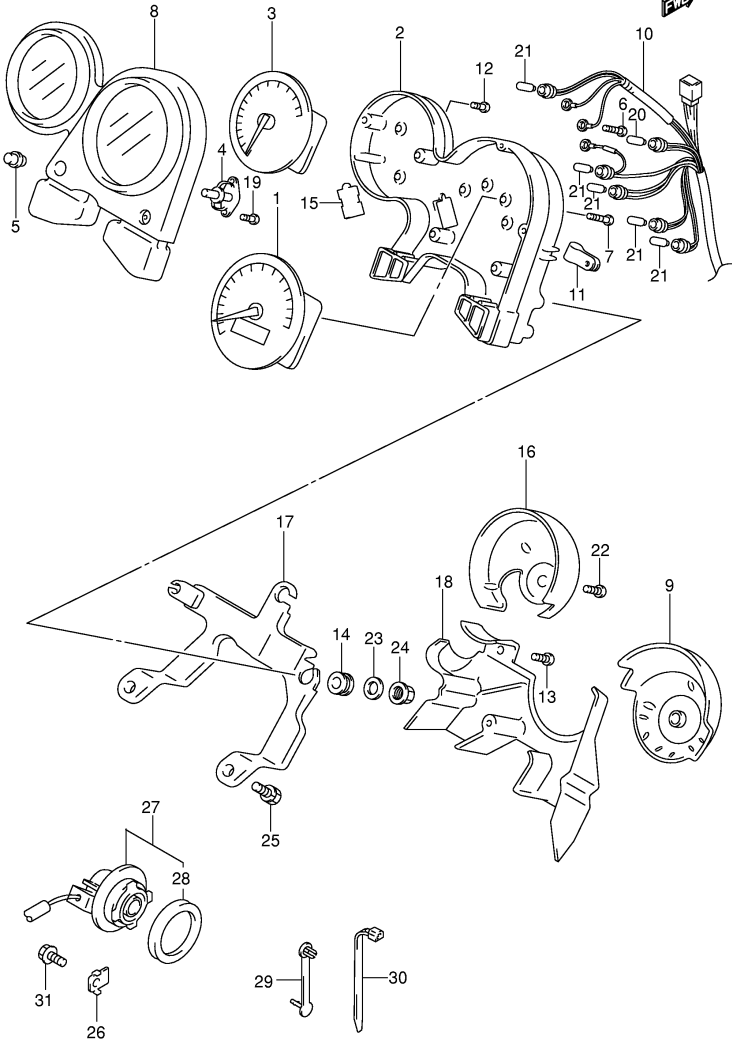


Ref No	Part No	Description
1	34110-20F10	Speedometer (mile)
1	34110-20F00	Speedometer (kilo)
2	34111-19F20	Lower Case
3	34210-20F00	Tachometer
4	34123-33E00	Attachment, Switch
5	34124-33E00	Switch, Gum
6	34147-19F20	Screw, Pan Head (3x18)
7	34149-19F20	Screw, Pan Head (3x20)
8	34150-19F20	Upper Case
9	34152-19F20	Ornament, Speedometer
10	34173-19F20	Cord Assy
11	34176-19F20	Clamp
12	34183-09F00	Screw (3x12)
13	34183-19F20	Screw, Head Tapping (4x16)
14	34188-19F20	Damper
15	34198-19F20	Grommet
16	34211-19F20	Ornament, Tachometer
17	34950-19F20	Bracket
18	36383-19F20	Cover
19	09132-03005	Screw (3x10)
20	09471-12077	Bulb (12v,1.7w,t10)
21	09471-12108	Bulb (12v,1.7w,t6.5)
22	03541-04163	Screw
23	09160-06056	Washer (6.5x18x1)
24	08310-00067	Nut
25	01550-08163	Bolt
26	34938-14F00	Guide, Sensor Lead
27	34990-21E00	Sensor, Speed
28	09286-44001	• . Seal, Sensor Oil
28a	34983-21E00	• . Rotor, Speed
29	09407-03401	Clamp
30	09407-14407	Clamp (l:145)
31	01550-08163	Bolt

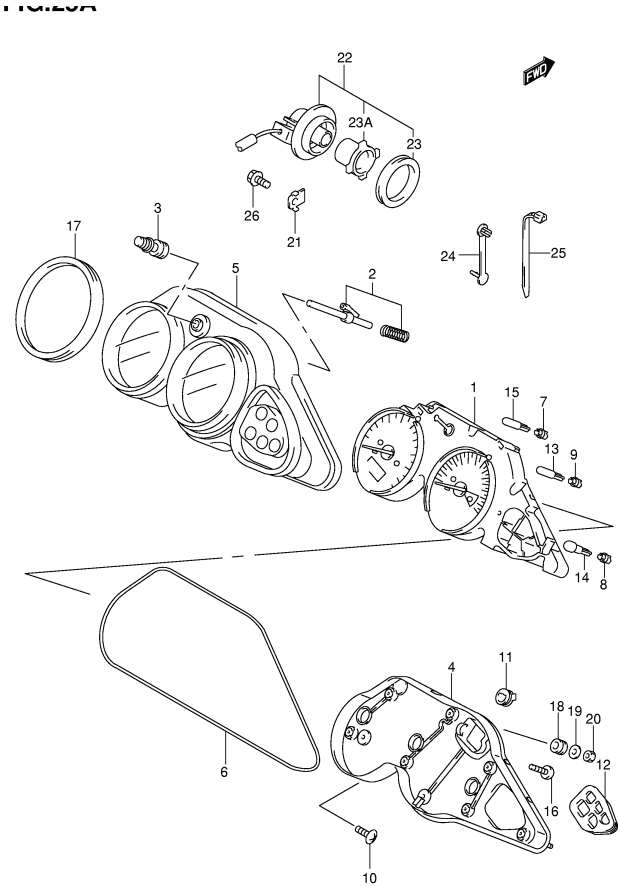


SV650Y E02_025A
SPEEDOMETER

Ref No	Part No	Description
1	34119-20F21	Speedometer
1	34119-20F31	Speedometer
2	34123-02F00	Lever
3	34124-02F00	Switch, Gum
4	34130-02F00	Case Assy
5	34150-19F00	Visor
6	34153-02F00	Gasket
7	34172-71E70	Socket
8	34173-19D00	Socket
9	34173-19D70	Socket
10	34183-33DC0	Screw, Speedometer (4x14)
11	34198-02F00	Blind, Cap
12	34198-02F10	Blind
13	09471-12085	Bulb (14v,3w,t7)
14	09471-12100	Bulb (12v,1.7w,t7)
15	09471-12189	Bulb (14v,0.84w,t5)
16	03211-04207	Screw
17	34188-02F00	Cushion
18	34996-43410	Cushion
19	09160-05037	Washer (5.5x16x1.20)
20	08310-00053	Nut
21	34938-14F00	Guide, Sensor Lead
22	34990-21E00	Sensor, Speed
23	09286-44001	• . Seal, Sensor
23a	34983-21E00	• . Rotor, Speed
24	09407-03401	Clamp
25	09407-14407	Clamp (1:145)
26	01550-06123	Bolt

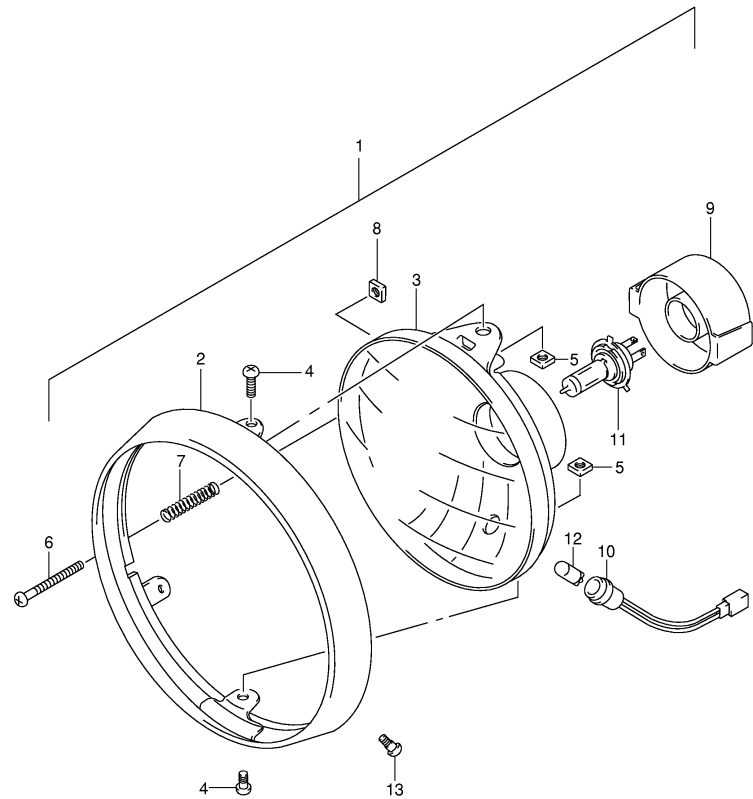


Ref No	Part No	Description
1	35100-19F20-999	Headlamp Assy
1	35100-19F50-999	Headlamp Assy
1	35100-19F00-999	Headlamp Assy
2	35111-19F00	• Rim
3	35121-19F20	• Lamp Unit
3	35121-19F50	• Lamp Unit
3	35121-19F00	• Lamp Unit
4	35181-19F00	• Screw (5x16)
5	35135-45900	• Nut
6	35151-19F00	• Screw, Adjusting
7	35154-13F00	• Spring
8	35152-45600	• Nut
9	35174-19F00	• Cover, Socket
10	36118-19F50	• Cord, Position
11	09471-12185	Bulb (12v,60/55w)
12	09471-12081	Bulb (12v,5w)
13	09139-05038	Screw



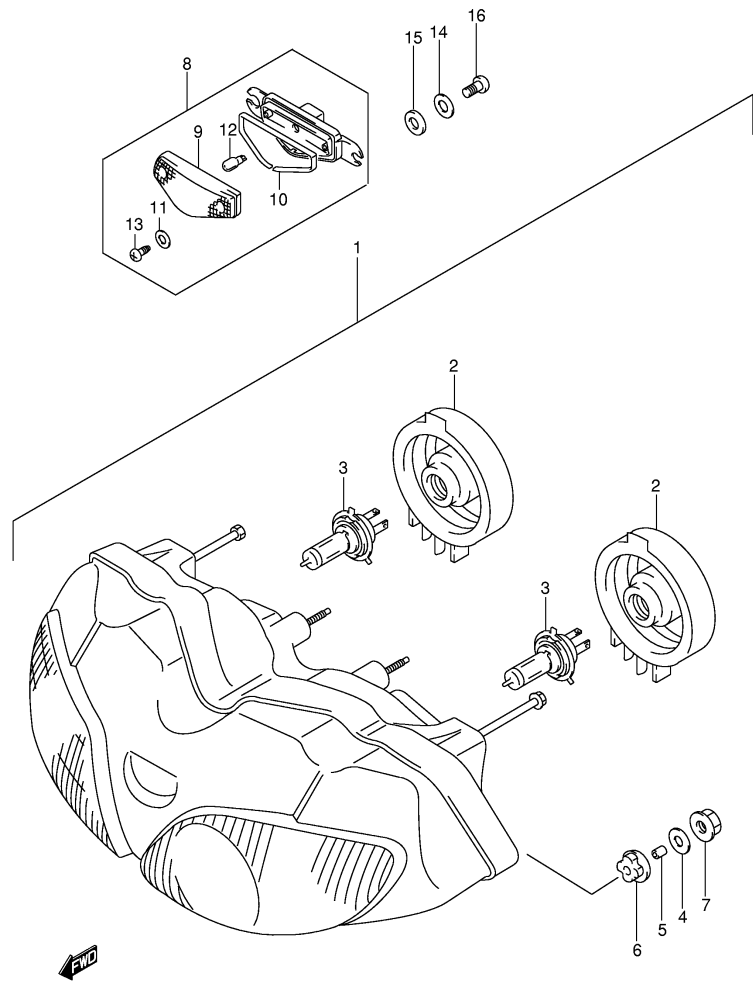


Ref No	Part No	Description
1	35100-20F30-999	Headlamp Assy
2	35125-02F00	• . Cover, Socket
3	09471-12102	Bulb (12v,445/45w)
4	09160-06088	Washer (6.5x20x1.6)
5	09180-06267	Spacer (6.5x9x12.5)
6	09320-09010	Cushion
7	08316-10063	Nut
8	36110-20F00	Lamp Assy, Front Position
9	36112-08F00	• . Lens
10	36113-20F00	• . Gasket
11	35128-37B00	• . Washer
12	09471-12081	• . Bulb (12v,5w)
13	03211-04123	• . Screw
14	09160-05045	Washer (5.5x18x1.0)
15	09320-08001	Cushion
16	03511-05103	Screw

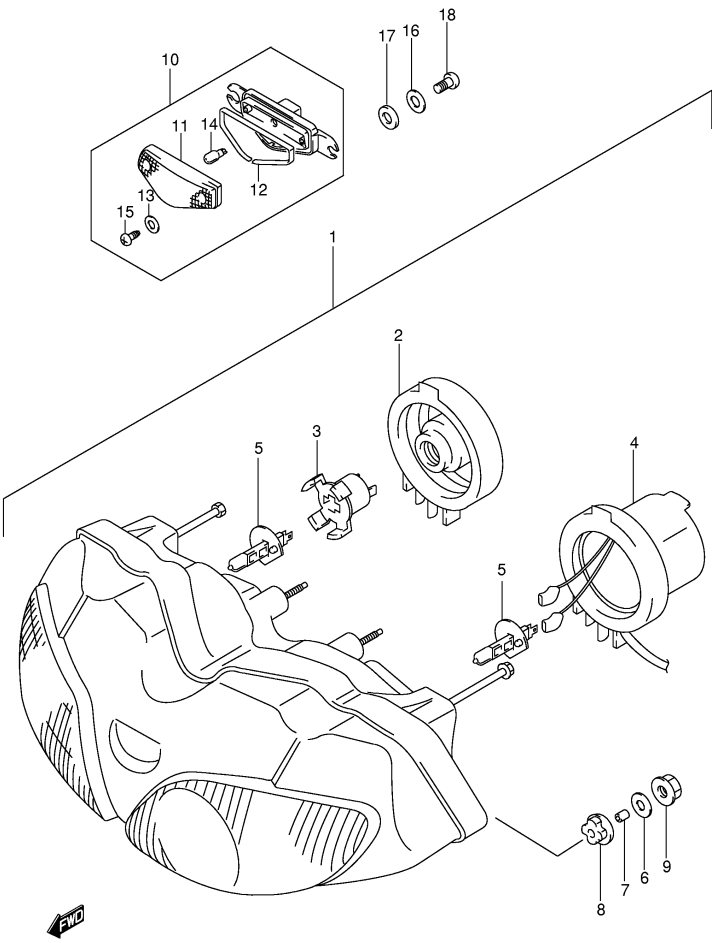



Ref No	Part No	Description	
1	35100-20F50-999	Headlamp Assy	
2	35125-02F00	• . Cover, Socket	
3	35175-18E50	• . Adaptor Assy	
4	36118-02F00	• . Cord Assy	
5	09471-12122	Bulb (12v,5.5w/h1/p14.5s/osra,	Phil)
6	09160-06088	Washer (6.5x20x1.6)	
7	09180-06267	Spacer (6.5x9x12.5)	
8	09320-09010	Cushion	
9	08316-10063	Nut	
10	36110-20F00	Lamp Assy, Front Position	
11	36112-08F00	• . Lens	
12	36113-20F00	• . Gasket	
13	35128-37B00	• . Washer	
14	09471-12081	• . Bulb (12v,5w)	
15	03211-04123	• . Screw	
16	09160-05045	Washer (5.5x18x1.0)	
17	09320-08001	Cushion	
18	03511-05103	Screw	

Ref No	Part No	Description
1	35604-33E30	Lamp Assy, Front Turnsignal Rh
1	35601-20F30	Lamp Assy, Front Turnsignal Rh
1	35603-33E30	Lamp Assy, Front Turnsignal Lh
1	35602-20F30	Lamp Assy, Front Turnsignal Lh
2	35610-33E00	• . Lamp Unit
3	09471-12045	• . Bulb (12v,21w)
4	03242-04123	• . Screw
5	08316-10103	Nut
6	35603-33E10	Lamp Assy, Rear Turnsignal Rh
6	35604-33E10	Lamp Assy, Rear Turnsignal Lh
7	35610-33E00	• . Lamp Unit
8	09471-12045	• . Bulb (12v,21w)
9	03242-04123	• . Screw
10	35695-17C00	Spacer, Rear Turnsignal
11	09160-10501	Washer (10.5x30x2.3)
12	08310-00103	Nut
13	38610-03F00	Relay Assy, Turnsignal Lamp

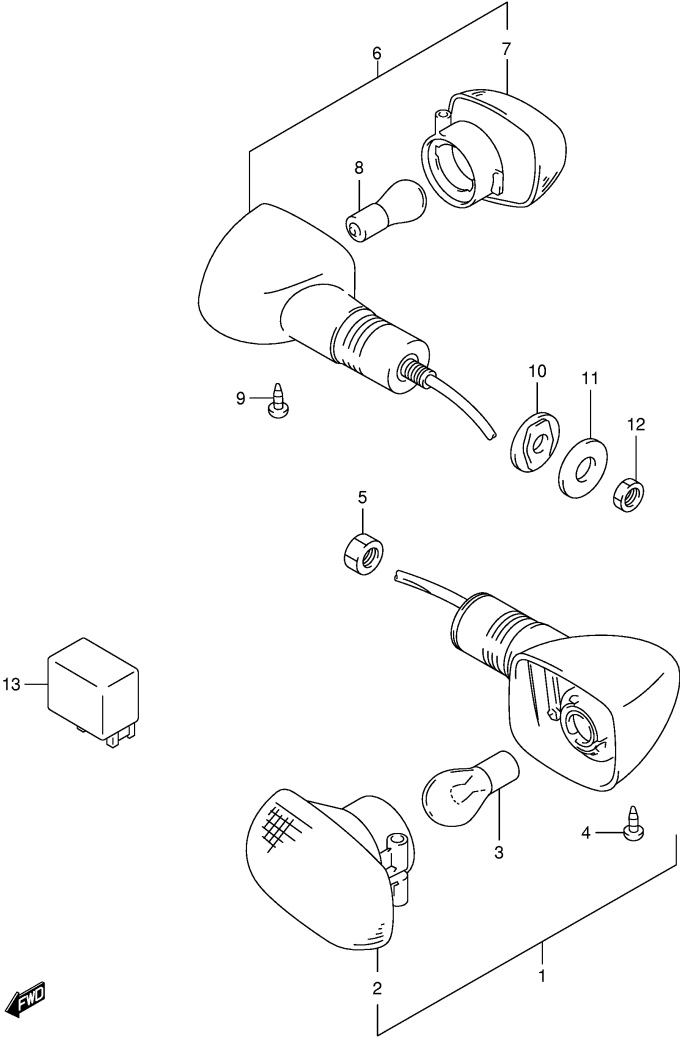


Ref No	Part No	Description
1	35601-33E30	Lamp Assy, Front Turnsignal Rh
1	35602-33E30	Lamp Assy, Front Turnsignal Lh
2	35610-33E00	• . Lamp Unit
3	09471-12045	• . Bulb (12v,21w)
4	03242-04123	• . Screw
5	35629-33E00	Plate, Front Turnsignal Lamp
6	03511-05103	Screw
7	35603-33E10	Lamp Assy, Rear Turnsignal Rh
7	35604-33E10	Lamp Assy, Rear Turnsignal Lh
8	35610-33E00	• . Lamp Unit
9	09471-12045	• . Bulb (12v,21w)
10	03242-04123	• . Screw
11	35695-17C00	Spacer, Rear Turnsignal
12	09160-10501	Washer (10.5x30x2.3)
13	08310-00103	Nut
14	38610-03F00	Relay Assy, Turnsignal Lamp

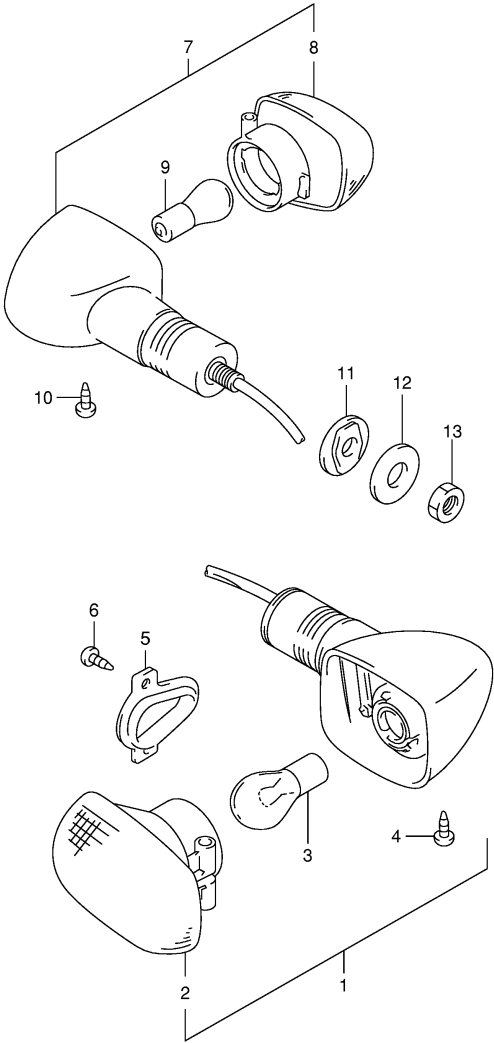

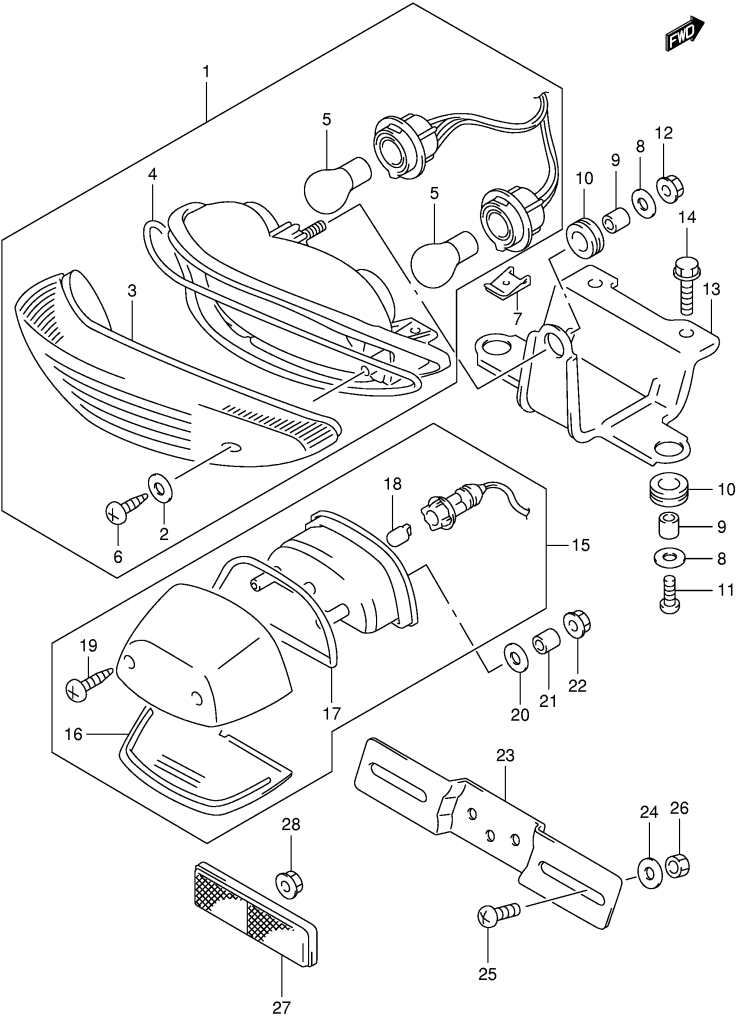


Ref No	Part No	Description
1	35710-02F00	Lamp Assy, Rear Combination
2	35627-43010	• . Gasket
3	35712-02F00	• . Lens
4	35713-02F00	• . Gasket
5	09471-12083	• . Bulb (12v,21/5w)
6	03211-04207	• . Screw
7	09148-05020	Nut
8	09160-06088	Washer (6.5x20x1.6)
9	09180-06285	Spacer (6.5x10x9)
10	09320-09009	Cushion
11	03541-05203	Screw
12	08316-10063	Nut
13	35726-19F00	Bracket, Rear Combination
14	01550-06123	Bolt
15	35910-02F00	Lamp Assy, License
16	35912-02F00	• . Lens
17	35913-02F00	• . Gasket
18	09471-12081	• . Bulb (12v,5w)
19	03211-04163	• . Screw
20	09160-06088	Washer (6.5x20x1.6)
21	09180-05054	Spacer (5.5x9.5x11.5)
22	08316-10053	Nut
23	35927-00A10	Bracket, License Plate
24	09160-06088	Washer (6.5x20x1.6)
25	02142-06123	Screw
26	08316-10063	Nut
27	35970-07F00	Reflector Assy, Rear
28	08316-10053	Nut

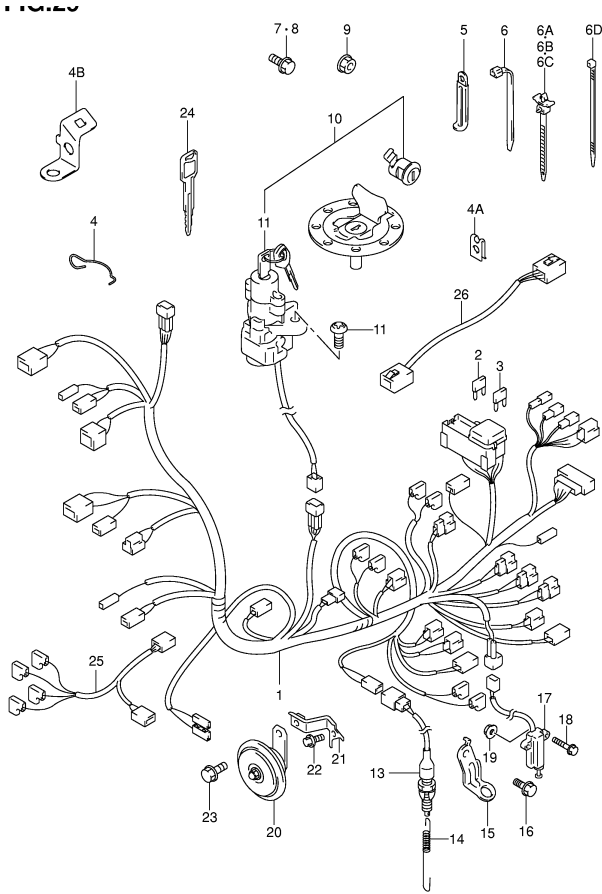

SV650Y E02_029
WIRING HARNESS


Ref No	Part No	Description
1	36610-20F10	Harness, Wiring No.1
2	09481-10501	• . Fuse (10a)
3	09481-15501	• . Fuse (15a)
4	36619-20F00	Guide, Wiring Harness
5	09404-06432	Clamp (l:80)
5	09404-06434	Clamp (l:95)
5	09404-06435	Clamp (l:135)
5	09404-08207	Clamp (l:97)
6	09407-14403	Clamp (l:125)
6	09407-18402	Clamp (l:165)
6a	09407-11402	Clamp (l:90)
6b	09407-14408	Clamp (l:120)
6c	09407-17401	Clamp (l:150)
6d	09407-14407	Clamp (l:140)
7	01550-06123	Bolt, Wiring Harness
8	01550-08253	Bolt, Wiring Harness
9	08316-10083	Nut, Wiring Harness
10	37101-19830	Lock Set
10	37101-19820	Lock Set
11	37100-19F00	• . Lock Assy, Steering
11	37100-19F10	• . Lock Assy, Steering
12	09139-08016	Bolt (8x20)
13	37740-31D00	Switch Assy, Stop Lamp
14	09443-06005	Spring
15	43251-19F10	Bracket, Stop Lamp Switch
16	01550-06123	Bolt
17	37840-19F00	Switch Assy, Side Stand
18	37849-19F00	Bolt, Side Stand
18	09103-06248	Bolt, Side Stand
19	08316-10063	Nut
20	38500-02F60	Horn Assy
20	38500-19F00	Horn Assy
21	38590-19F00	Bracket, Horn
22	01550-06123	Bolt
23	01550-08123	Bolt
24	37146-33E00	Key, Blank
25	36855-19F00	Wire, Carb Heater
26	36854-19F00	Wire, Starter Control

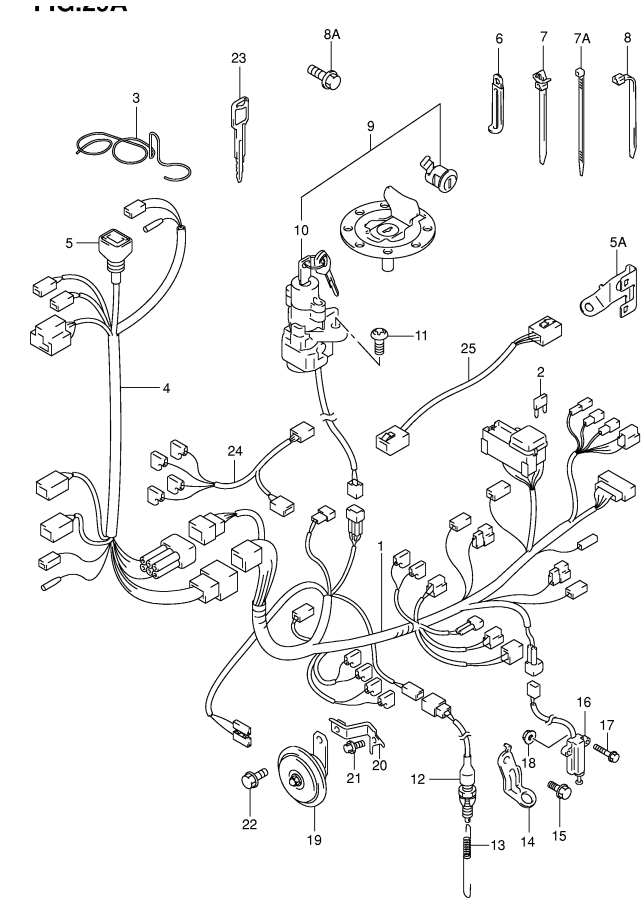


SV650Y E02_029A
WIRING HARNESS

Ref No	Part No	Description
1	36610-19F00	Harness, Wiring No.1
2	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	36619-33E00	Guide, Wiring Harness
4	36620-19F10	Harness, Wiring No.2
4	36620-19F20	Harness, Wiring No.2
5	36618-33E00	• . Cover, Speedometer Coupler
5a	36687-19F00	Holder, Coupler
6	09404-06432	Clamp (l:80)
6	09404-06434	Clamp (l:95)
6	09404-06435	Clamp (l:135)
7	09407-11402	Clamp (l:90)
7	09407-14408	Clamp (l:120)
7	09407-17401	Clamp (l:150)
7a	09407-14407	Clamp (l:145)
8	09407-14403	Clamp (l:125)
8	09407-18402	Clamp (l:165)
8a	01550-06123	Bolt, Wiring Harness
9	37101-19830	Lock Set
9	37101-19820	Lock Set
10	37100-19F00	• . Lock Assy, Steering
10	37100-19F10	• . Lock Assy, Steering
11	09139-08016	Bolt (8x20)
12	37740-31D00	Switch Assy, Stop Lamp
13	09443-06005	Spring
14	43251-19F00	Bracket, Stop Lamp Switch
15	01550-06123	Bolt
16	37840-19F00	Switch Assy, Side Stand
17	37849-19F00	Bolt, Side Stand
17	09103-06248	Bolt,side Stand
18	08316-10063	Nut
19	38500-02F60	Horn Assy
19	38500-19F00	Horn Assy
20	38590-19F00	Bracket, Horn
21	01550-06123	Bolt
22	01550-08123	Bolt
23	37146-33E00	Key,.blank
24	36855-19F00	Wire, Carb Heater
25	36854-19F00	Wire, Starter Control

Ref No	Part No	Description
1	37200-27E11	Switch Assy, Handle Rh
1	37200-27E31	Switch Assy, Handle Rh
2	02112-05505	• . Screw
3	02112-05305	• . Screw
4	02112-05103	Screw
5	37400-23E10	Switch Assy, Handle Lh
6	02112-05455	• . Screw
7	09125-05066	• . Screw (5x25)
8	37560-38A00	Switch Assy, Clutch
9	37564-26E00	Screw

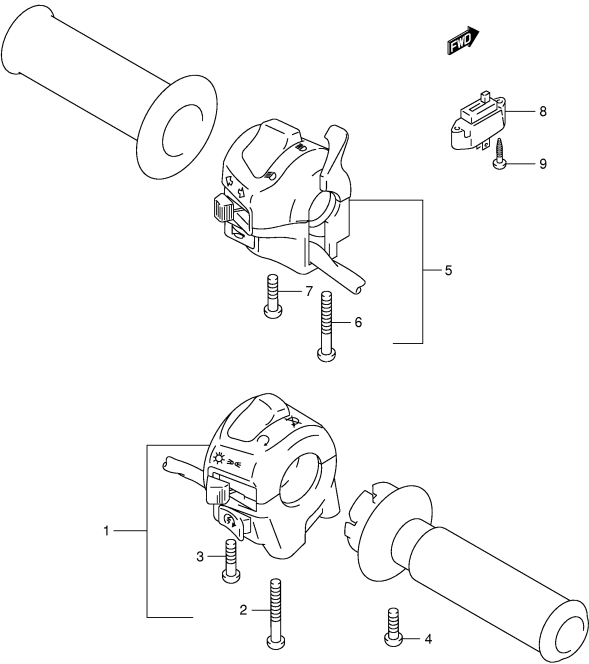


SV650Y E02_030
HANDLE SWITCH

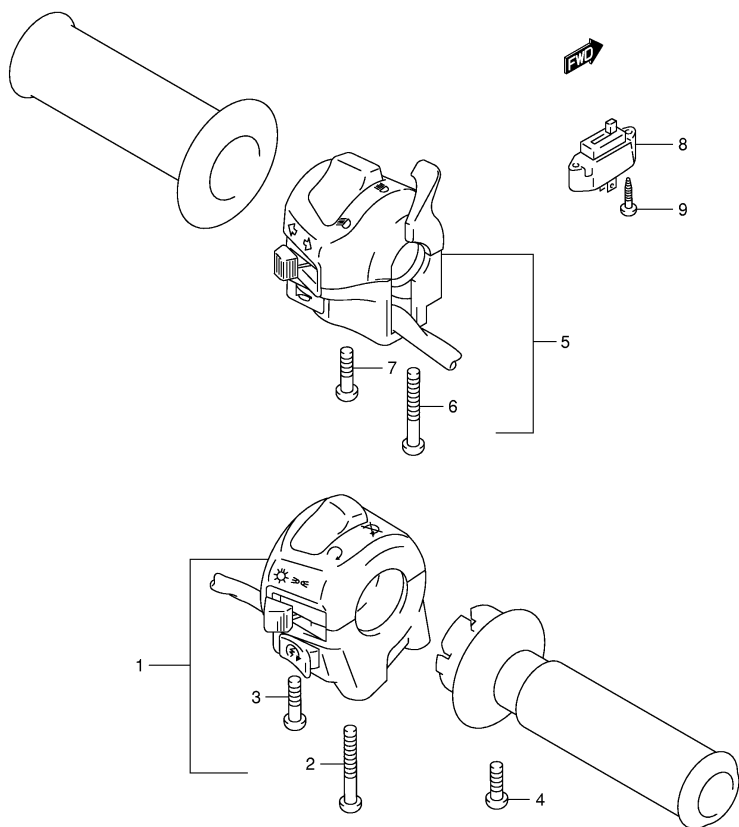

Ref No	Part No	Description
1	37200-33E11	Switch Assy, Handle Rh
1	37200-33E31	Switch Assy, Handle Rh
2	02112-05505	• . Screw
3	02112-05305	• . Screw
4	02112-05103	Screw
5	37400-26E11	Switch Assy, Handle Lh
6	02112-05455	• . Screw
7	09125-05066	• . Screw (5x25)
8	37560-38A00	Switch Assy, Clutch
9	37564-26E00	Screw

Ref No		Part No	Description
1	41100-19F02-13L	Frame (silver)	
2	41200-19F01	Rail, Seat	
3	07130-10303	Bolt	
4	41991-19F00	Plate, Mount Front Rh	
5	01550-08203	Bolt	
6	41198-19F00	Spacer, Head Mount	
7	07130-08307	Bolt	
8	41921-19F00	Bolt, Crankcase Adjust	
9	41922-19F00	Nut, Crankcase Adjust	
10	41941-19F00	Spacer, Crankcase Rear Upper	
11	41921-33E11	Bolt, Crankcase Adjust	
12	41922-33E00	Nut, Crankcase Adjust	
13	47411-19F01	Holder, Electric Part	
14	47413-19F00	Plate, Relay	
15	01550-06123	Bolt	

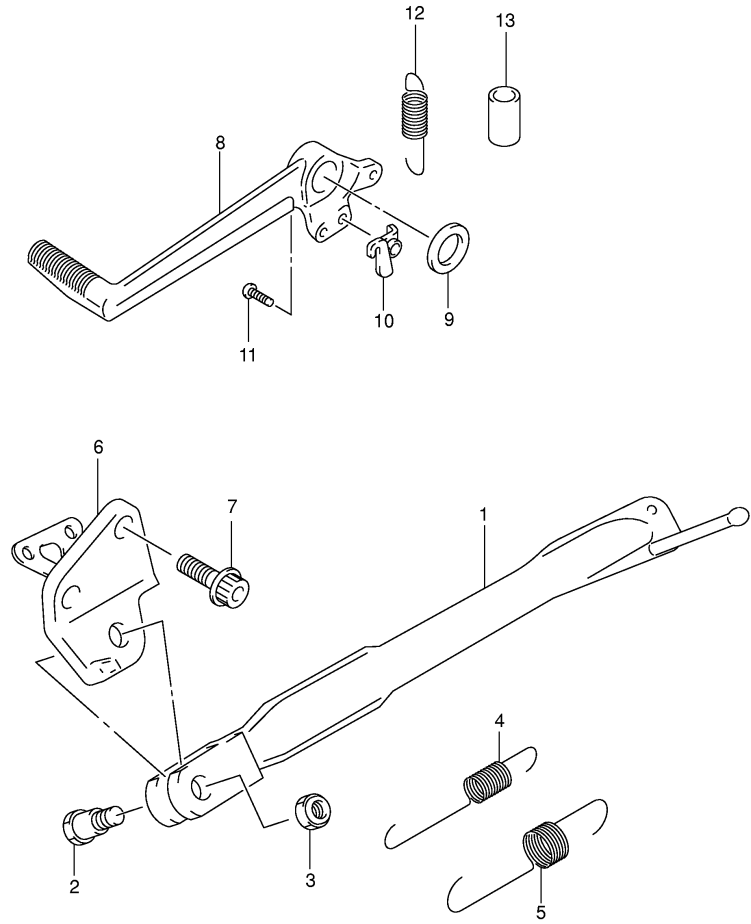


Ref No	Part No	Description
1	42310-19F00	Stand, Prop
2	09111-10027	Bolt
3	08319-21103	Nut
4	09443-14066	Spring, Inner
5	09443-19012	Spring, Outer
6	42330-19F01	Bracket, Prop Stand
7	07120-10303	Bolt
8	43111-33E00	Pedal, Brake
9	09160-18022	Washer (18x24x1)
10	43561-33E00	Hook, Return Spring
11	02112-05163	Screw
12	09443-13029	Spring
13	43261-17C00	Tube, Spring Guide




Catalogue Title:
SV650Y (SV650Y E2)

Block No.
FIG33


Block Title:
FOOTREST

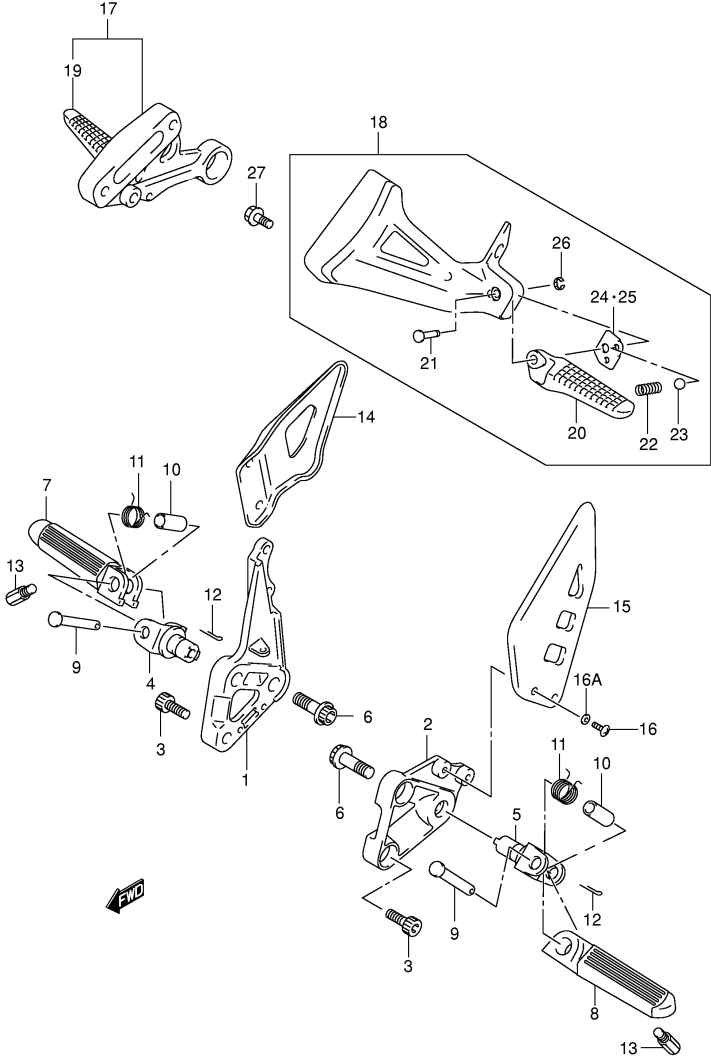


Ref No	Part No	Description
1	43511-33E10	Bracket, Front Footrest Rh
2	43521-33E00	Bracket, Front Footrest Lh
3	07130-08203	Bolt
4	43530-17E01	Holder, Footrest Rh
5	43540-17E00	Holder, Footrest Lh
6	09106-10064	Bolt
7	43510-02F11	Bar, Footrest Rh
8	43520-02F11	Bar, Footrest Lh
9	09200-08057	Pin
10	09180-08149	Spacer (8.1x12x22)
11	09448-18022	Spring
12	04111-25158	Cotter Pin
13	43576-07D01	Bolt, Bank Sensor
14	43571-33E01	Guard, Front Footrest Rh
15	43576-19F00	Guard, Front Footrest Lh
16	09139-05054	Screw (5x16)
16a	09161-08018	Washer
17	43600-19F00	Footrest Assy, Pillion Rh
18	43700-19F00	Footrest Assy, Pillion Lh
19	43611-33E10	. Bar, Pillion Footrest Rh
20	43621-33E10	. Bar, Pillion Footrest Lh
21	09208-06007	. Pin
22	09440-05005	. Spring
23	06111-07004	. Ball
24	43816-33E21	. Plate, Pillion Rh
25	43826-33E21	. Plate, Pillion Lh
26	08332-11043	. E Ring
27	01550-08163	Bolt

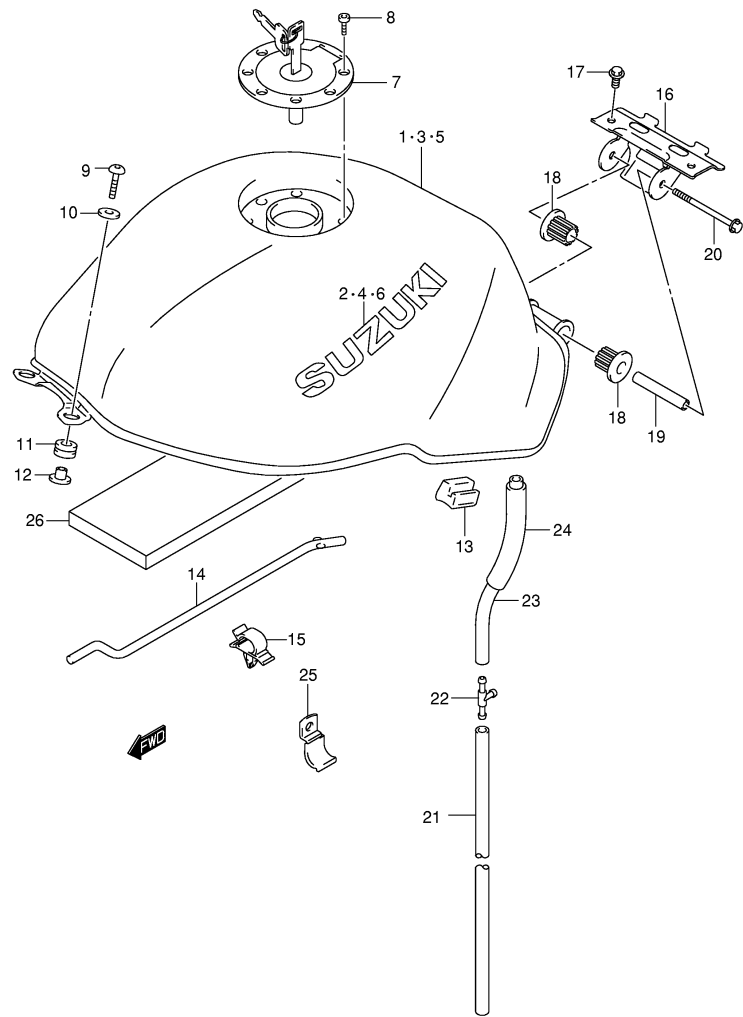

Ref No	Part No	Description
1	44100-19F00-Y7E	Tank Assy, Fuel (blue)
1	44100-19F00-Y7L	Tank Assy, Fuel (black)
1	44100-19F00-Y7M	Tank Assy, Fuel (red)
1	44100-19F00-Y9F	Tank Assy, Fuel (yellow)
2	68111-42E00-20G	• . Emblem, Fuel Tank (gray)
2	68111-42E00-1ZY	• . Emblem, Fuel Tank (gray)
7	44200-33870	Cap Set, Fuel Tank
8	09106-05017	Bolt (1:20)
9	09139-06029	Screw (6x25)
10	09160-06054	Washer (6.5x22x1.6)
11	44511-19F00	Cushion, Front
12	44512-19F00	Spacer, Front
13	44559-19F00	Cushion, Fuel Tank Side
14	44574-33E01	Stay, Fuel Tank
15	09403-05310	Clamp
16	44550-19F10	Bracket, Fuel Tank Rear
17	01550-08163	Bolt
18	44541-02F00	Cushion, Fuel Tank Rear
19	44561-19F00	Spacer, Fuel Tank Rear
20	01550-08853	Bolt
21	09352-70103-600	Hose, No.2 (1:600->80)
22	09367-08004	Joint, 3 Way
23	09352-70103-600	Hose, No.1 (1:600->60)
24	09351-14152-600	Protector (1:600->40)
25	44339-19F00	Clamp, Drain Hose
26	44194-19F00	Shield, Tank Front

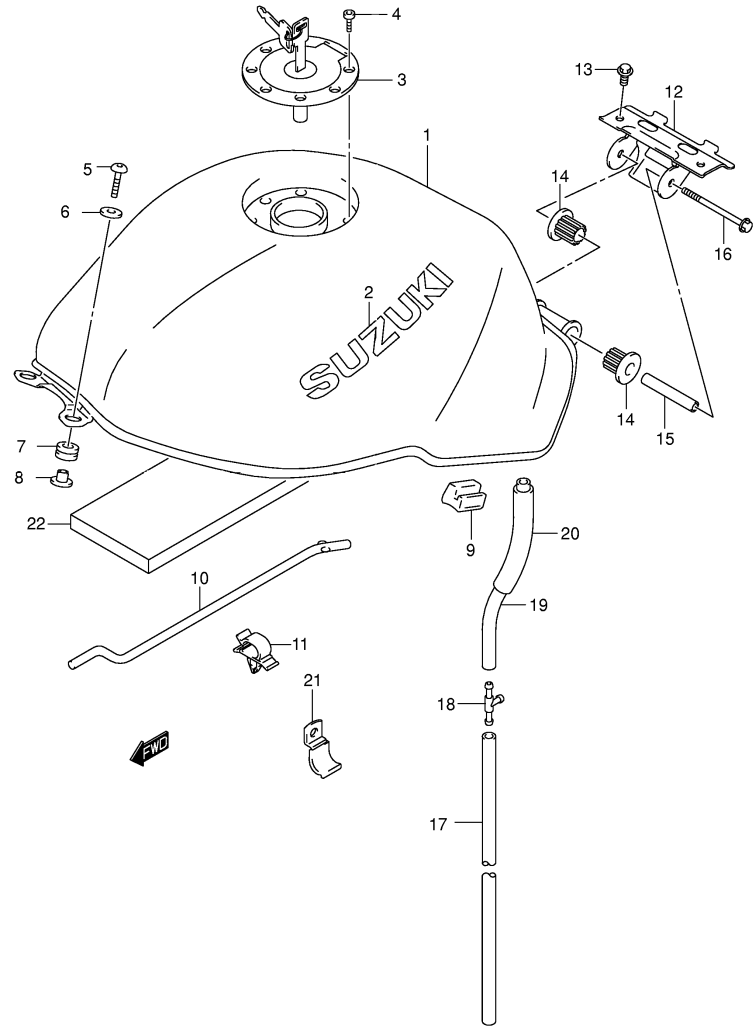


Ref No	Part No	Description
1	44100-19F40-19A	Tank Assy, Fuel (red)
1	44100-19F40-Y7L	Tank Assy, Fuel (black)
1	44100-19F40-Y9H	Tank Assy, Fuel (yellow)
1	44100-19F40-YC2	Tank Assy, Fuel (blue)
2	68111-12C00-YD8	• . Emblem (silver)
2	68111-12C00-1ZY	• . Emblem (gray)
2	68111-12C00-20G	• . Emblem (gray)
3	44200-33870	Cap Set, Fuel Tank
4	09106-05017	Bolt (1:20)
5	09139-06029	Screw (6x25)
6	09160-06054	Washer (6.5x22x1.6)
7	44511-19F00	Cushion, Front
8	44512-19F00	Spacer, Front
9	44559-19F00	Cushion, Fuel Tank Side
10	44574-33E01	Stay, Fuel Tank
11	09403-05310	Clamp
12	44550-19F10	Bracket, Fuel Tank Rear
13	01550-08163	Bolt
14	44541-02F00	Cushion, Fuel Tank Rear
15	44561-19F00	Spacer, Fuel Tank Rear
16	01550-08853	Bolt
17	09352-70103-600	Hose, No.2 (1:600->80)
18	09367-08004	Joint, 3 Way
19	44423-19F00	Hose, No.1
20	09351-14152-600	Protector (1:600->40)
21	44339-19F00	Clamp, Drain Hose
22	44194-19F00	Shield, Tank Front

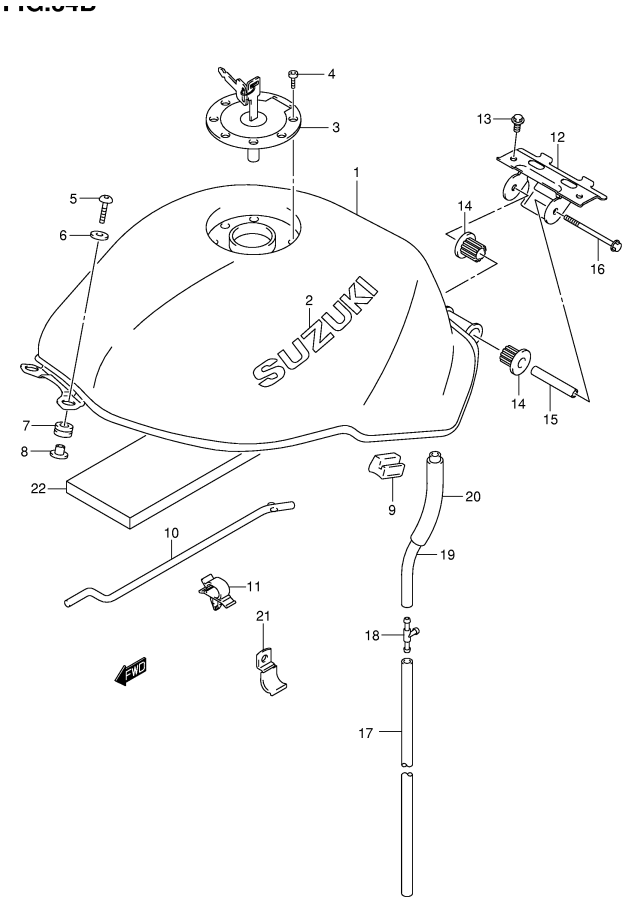


SV650Y E02_034B
FUEL TANK


Ref No	Part No	Description
1	44100-20F00-Y7L	Tank Assy, Fuel (black)
1	44100-20F00-Y9H	Tank Assy, Fuel (yellow)
1	44100-20F00-YC2	Tank Assy, Fuel (blue)
1	44100-20F00-YD8	Tank Assy, Fuel (silver)
2	68111-42E20-1ZY	• . Emblem (gray)
2	68111-42E20-20G	• . Emblem (gray)
3	44200-33870	Cap Set, Fuel Tank
4	09106-05017	Bolt (1:20)
5	09139-06029	Screw (6x25)
6	09160-06054	Washer (6.5x22x1.6)
7	44511-19F00	Cushion, Front
8	44512-19F00	Spacer, Front
9	44559-19F00	Cushion, Fuel Tank Side
10	44574-33E01	Stay, Fuel Tank
11	09403-05310	Clamp
12	44550-19F10	Bracket, Fuel Tank Rear
13	01550-08163	Bolt
14	44541-02F00	Cushion, Fuel Tank Rear
15	44561-19F00	Spacer, Fuel Tank Rear
16	01550-08853	Bolt
17	09352-70103-600	Hose, No.2 (1:600->80)
18	09367-08004	Joint, 3 Way
19	44423-19F00	Hose, No.1
20	09351-14152-600	Protector (1:600->40)
21	44339-19F00	Clamp, Drain Hose
22	44194-19F00	Shield, Tank Front

Ref No	Part No	Description
1	44300-19F00	Cock Assy, Fuel
2	44351-33E00	• O Ring, Joint
3	09128-06057	Bolt
4	09168-06026	Gasket (6.4x11.5x0.8)
5	09355-50105-600	Hose, Fuel (l:600->40)
6	09351-14152-600	Protector (l:600->80)
7	09401-09403	Clip
8	34810-19F11	Gauge Assy, Fuel Level

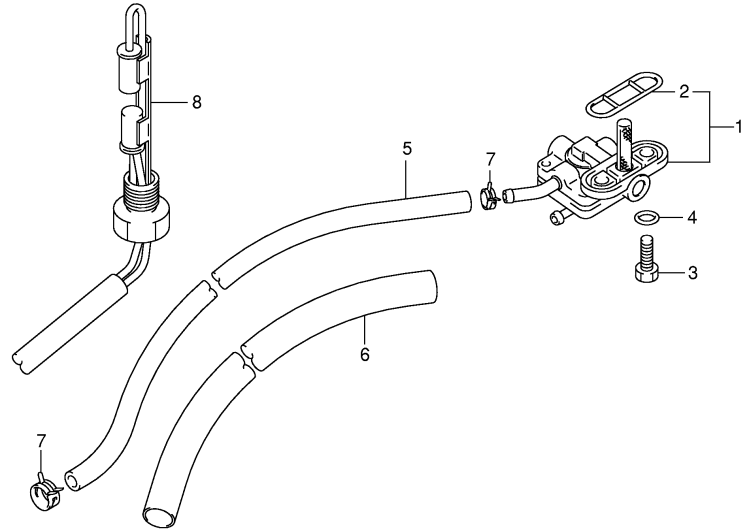


Ref No	Part No	Description
1	47111-19F00	Cover, Frame Rh
2	47211-19F00	Cover, Frame Lh
3	09139-05054	Screw (m5x16)
4	09409-06314-5PK	Clip (black)

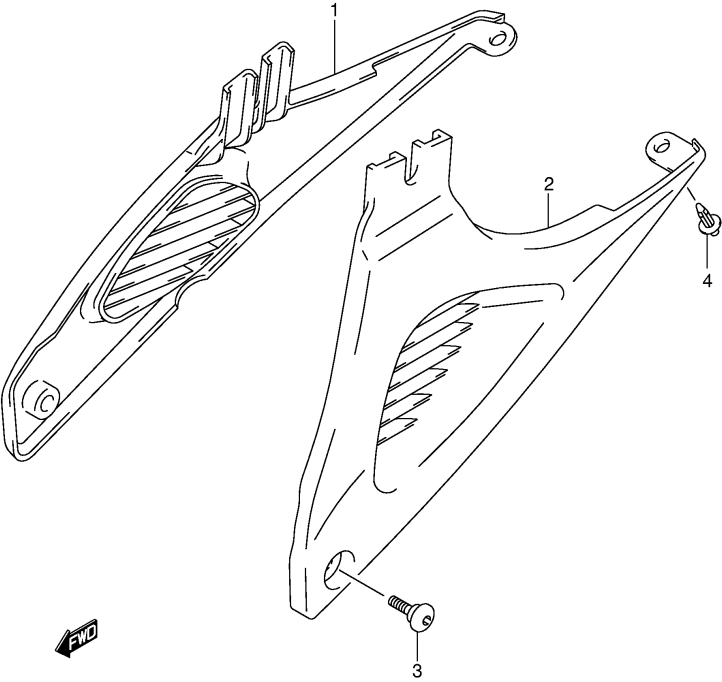


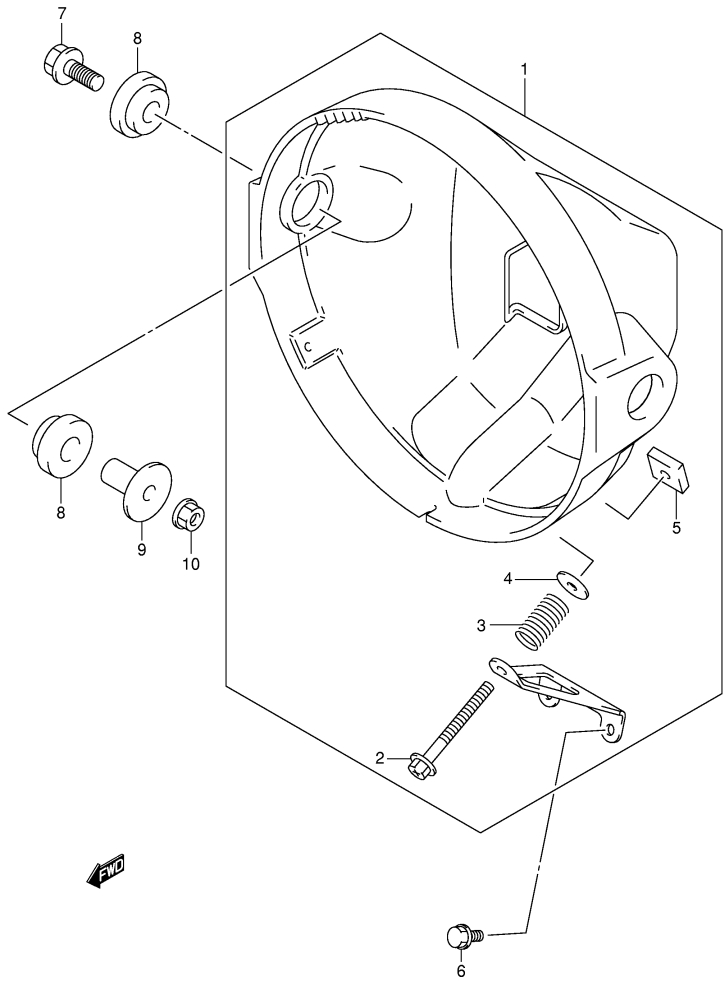

Ref No	Part No	Description
1	51800-19F00	Housing Assy, Headlamp
2	51858-25D00	• . Bolt, Headlamp Adjuster
3	51837-25D00	• . Spring, Headlamp Adjuster
4	08322-01053	• . Washer
5	51825-25D00	• . Nut, Headlamp Adjuster
6	01550-05123	Bolt
7	01244-08357	Bolt
8	09320-12065	Cushion
9	09180-08168	Spacer (8.6x12x20)
10	08316-10083	Nut


Ref No	Part No	Description
1	53109-19F00-Y7E	Fender, Front (blue)
1	53109-19F00-Y7L	Fender, Front (black)
1	53109-19F00-Y7M	Fender, Front (red)
1	53109-19F00-Y9F	Fender, Front (yellow)
2	53120-33D00	Plate, Front Fender
3	01547-06307	Bolt

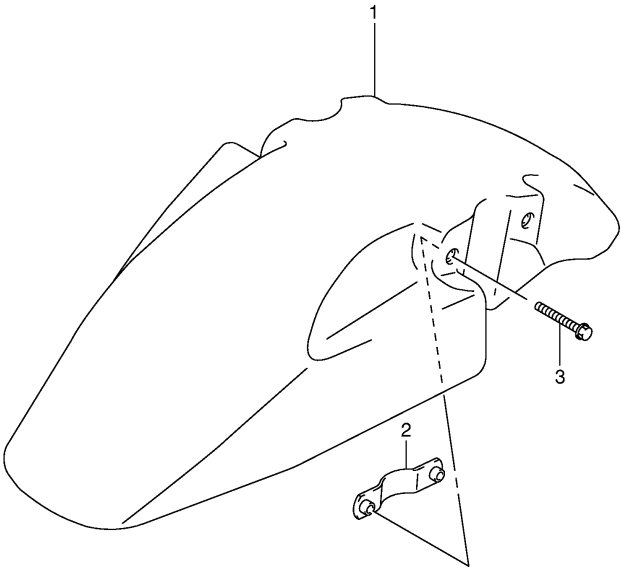


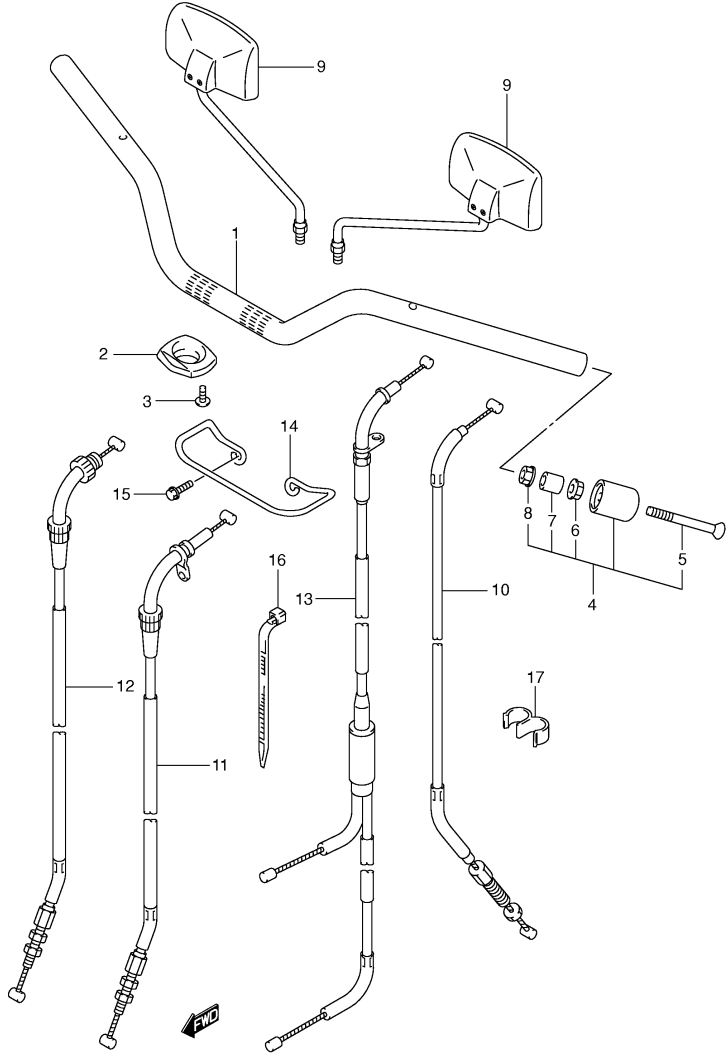


Ref No	Part No	Description
1	56111-19F20	Handle Bar
2	56170-19F00	Cover, Ignition Switch
3	02142-04123	Screw
4	56200-32821	Balancer Set, Handle Bar
5	02122-06803	• . Screw
6	08316-10083	• . Nut
7	56272-44500	• . Expander, Handle Balancer
8	09159-06024	• . Nut
9	56500-09020	Mirror Assy, Rear View
10	58200-20F00	Cable Assy, Clutch
11	58300-20F20	Cable Assy, Throttle No.1
12	58300-20F30	Cable Assy, Throttle No.2
13	58410-20F00	Cable, Starter
14	58621-19F00	Guide, Cable
15	01550-06123	Bolt
16	09407-14407	Clamp
17	09408-00033	Clip

Ref No	Part No	Description
1	56111-19F00	Handle Bar, Rh
2	56151-19F00	Handle Bar, Lh
3	01550-06203	Bolt
4	09103-08269	Bolt (8x30)
5	56200-04821	Balancer Set, Handle Bar
6	02122-06603	• . Screw
7	56500-19F00	Mirror Assy, Rear View Rh
8	56600-19F00	Mirror Assy, Rear View Lh
9	94576-19F00	Cushion, Rear View Mirror
10	56619-17C00	Nut, Rear View Mirror
11	58200-19F00	Cable Assy, Clutch
12	58300-20F00	Cable Assy, Throttle No.1
13	58300-20F10	Cable Assy, Throttle No.2
14	58410-19F00	Cable, Starter
15	58621-19F00	Guide, Cable
16	01550-06123	Bolt
17	09407-14407	Clamp

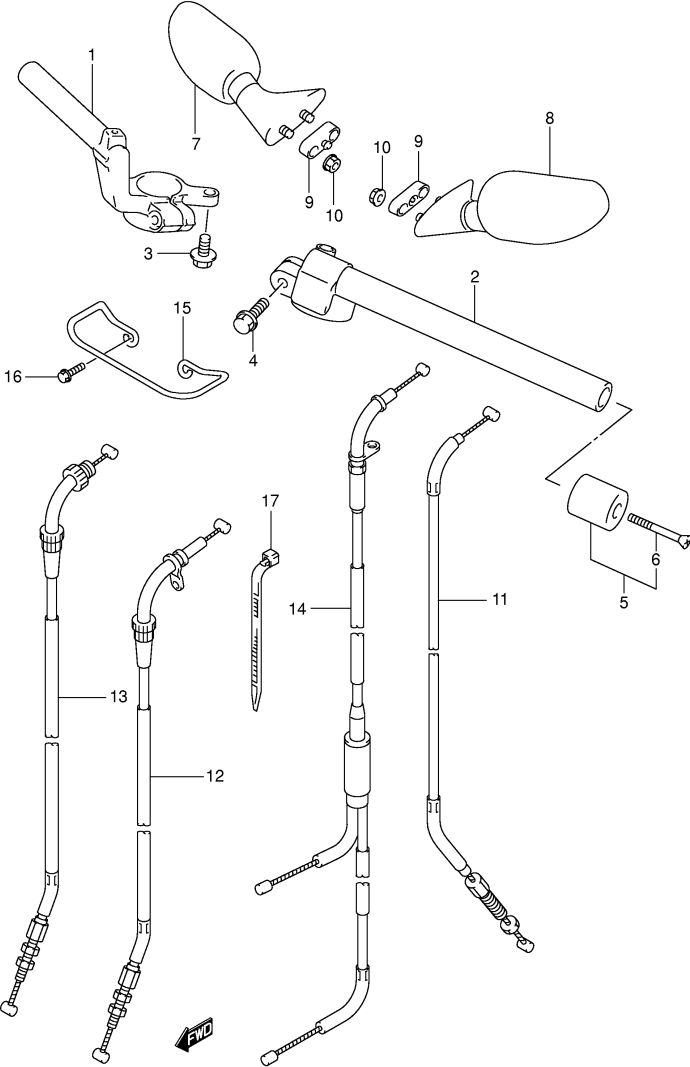

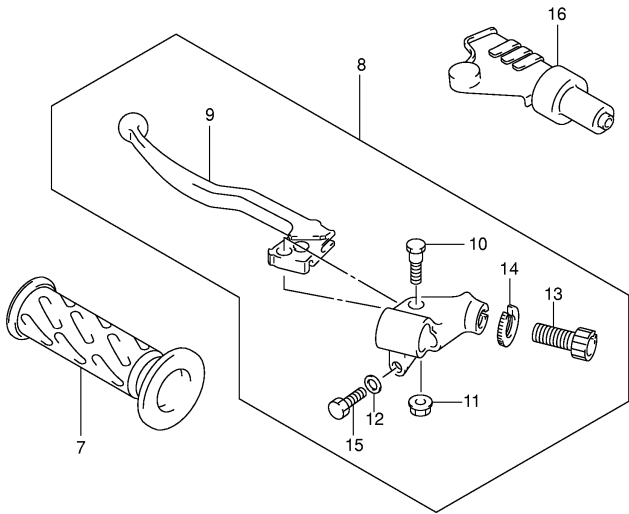


Ref No	Part No	Description
1	57110-46E01	Grip, Throttle
2	57300-33E01	Lever Assy, Brake
3	57431-17C00	• Bolt, Knocker
4	08316-10063	• Nut
5	57460-17C00	Switch Assy, Stop
6	57465-17C00	• Screw
7	57211-22D01	Grip, Lh
8	57500-10D80	Lever Assy, Clutch
9	57620-27A31	• Lever
10	57531-14A00	• Screw, Brake Lever Pivot
11	08319-21063	• Nut
12	08322-01063	• Washer
13	57441-11010	• Adjuster, Cable
14	57442-11010	• Nut, Cable Adjuster
15	01500-06203	• Bolt
16	57661-45C00	Cover, Clutch Lever

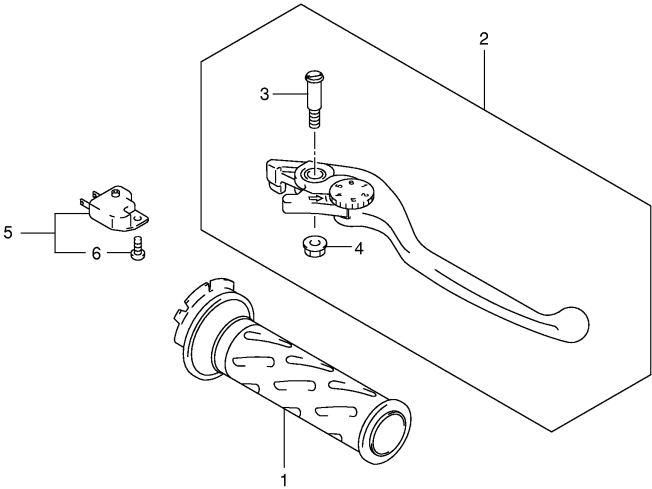


REAR FENDER (MODEL X/Y/K1)

Ref No	Part No	Description
1	63111-19F00	Fender, Rear
1	63111-19F20	Fender, Rear
1	63111-19F21	Fender, Rear
2	09116-06168	Bolt
3	09111-06066	Bolt
4	63421-19F00	Mud Guard, Rear Fender Front
5	01550-06163	Bolt
6	09169-06071	Washer
7	63311-19F00	Extension, Rear Fender
8	02142-06103	Screw
9	09146-06003	Nut
10	09800-21008	Tool Assy
11	09822-00005	Clamp, Wrench
12	47435-02F00	Band, Tool
13	47161-08F00	Cushion
14	94980-42A00	Bag, Manual

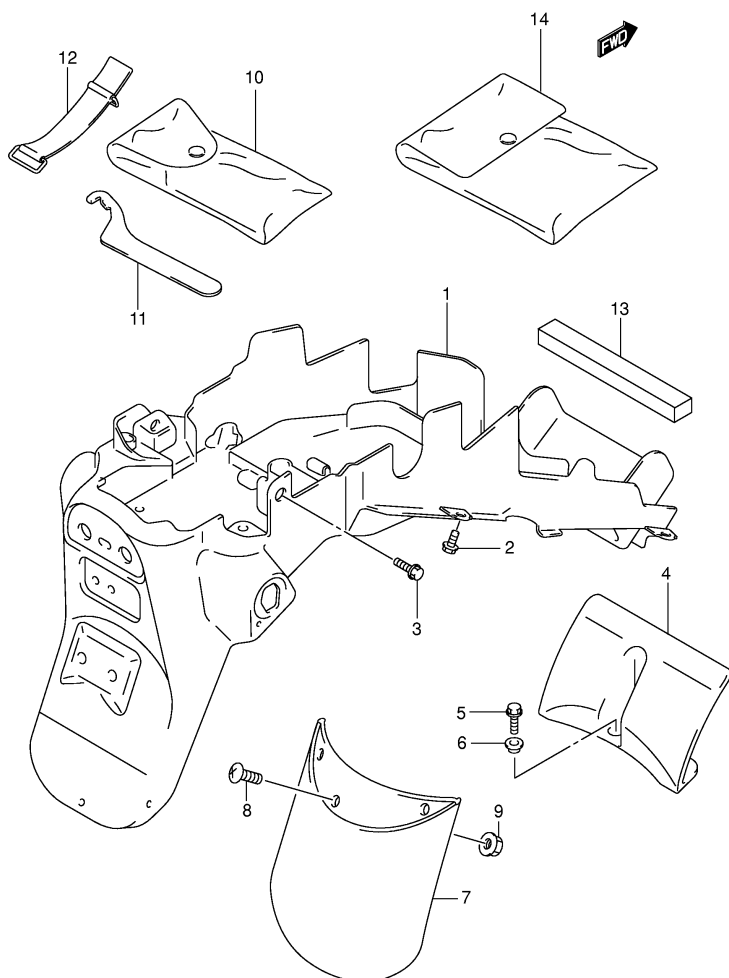


LIST

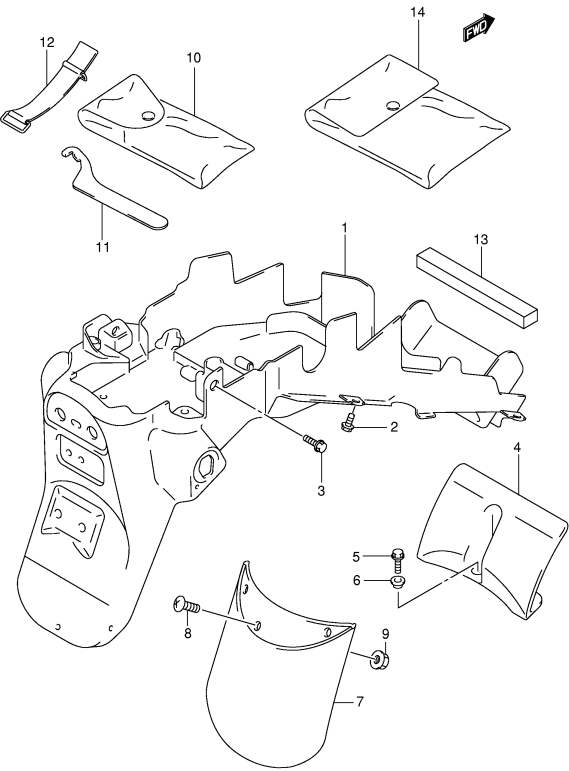

Ref No	Part No	Description
1	63111-19F21	Fender, Rear
2	09116-06168	Bolt
3	09113-06001	Bolt
4	63421-19F00	Mud Guard, Rear Fender Front
5	02162-06163	Bolt
6	09169-06071	Washer
7	63311-19F00	Extension, Rear Fender
8	02142-06103	Screw
9	09146-06003	Nut
10	09800-21008	Tool Assy
11	09822-00005	Clamp, Wrench
12	47435-02F01	Band, Tool
13	47161-08F00	Cushion
14	94980-42A00	Bag, Manual


SV650Y E02_041A
REAR FENDER

FIG. 41B

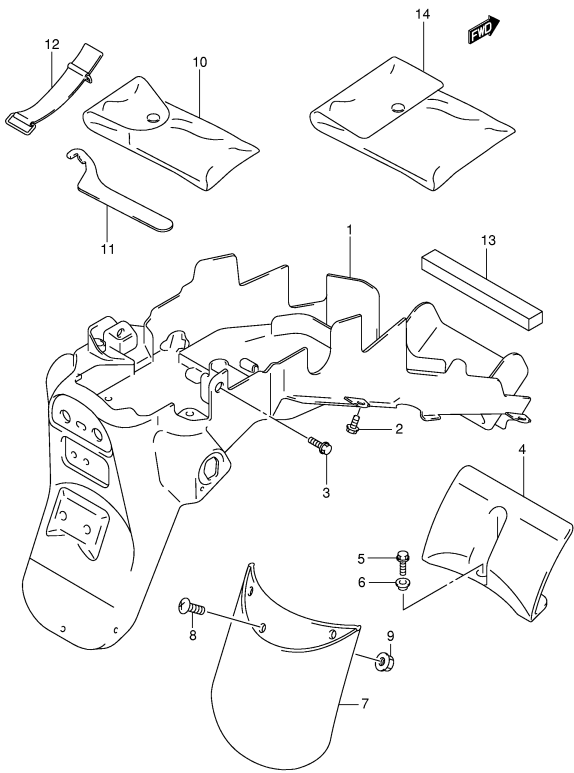


SV650Y E02_041B
REAR FENDER


Ref No	Part No	Description
1	63111-19F10	Fender, Rear
2	09116-06168	Bolt
3	09111-06066	Bolt
4	63421-19F00	Mud Guard, Rear Fender Front
5	01550-06163	Bolt
6	09169-06071	Washer
7	63311-19F00	Extension, Rear Fender
8	02142-06103	Screw
9	09146-06003	Nut
10	09800-21008	Tool Assy
11	09822-00005	Clamp, Wrench
12	47435-02F00	Band, Tool
13	47161-08F00	Cushion
14	94980-42A00	Bag, Manual

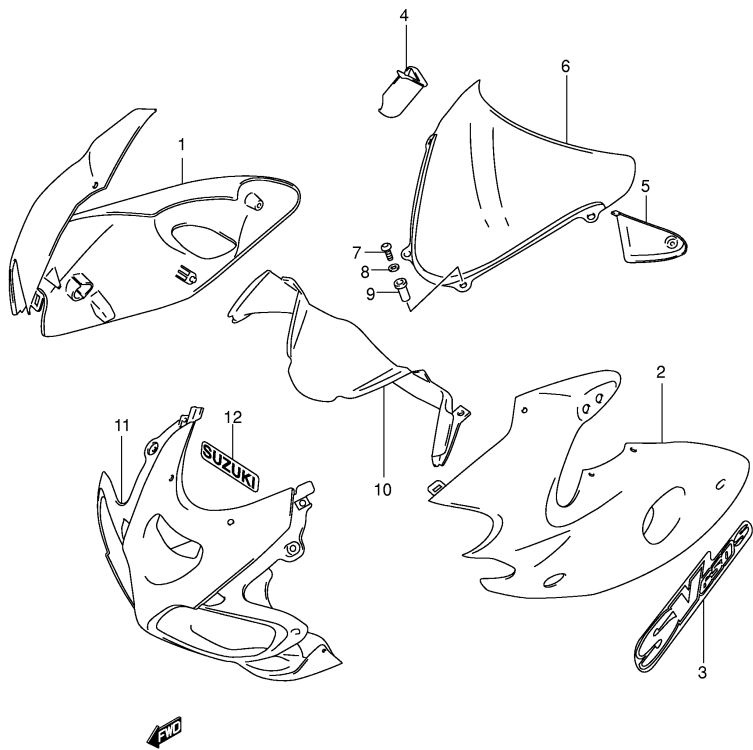


Ref No	Part No	Description
1	94401-20F00-Y7E	Cowl Assy, Side Rh (blue)
1	94401-20F00-Y7L	Cowl Assy, Side Rh (black)
1	94401-20F00-Y7M	Cowl Assy, Side Rh (red)
1	94401-20F00-Y9F	Cowl Assy, Side Rh (yellow)
2	94402-20F00-Y7E	Cowl Assy, Side Lh (blue)
2	94402-20F00-Y7L	Cowl Assy, Side Lh (black)
2	94402-20F00-Y7M	Cowl Assy, Side Lh (red)
2	94402-20F00-Y9F	Cowl Assy, Side Lh (yellow)
3	68181-20F00-N0J	• . Emblem
3	68181-20F00-N0G	• . Emblem
3	68181-20F00-N0H	• . Emblem
3	68181-20F00-N0K	• . Emblem
4	94413-19F00	Panel, Upper Rh
5	94423-19F00	Panel, Upper Lh
6	94611-19F00	Window Screen
7	09139-05025	Screw (5x14)
8	08322-01053	Washer
9	09159-05019	Nut
10	94630-19F00	Panel, Meter
11	94403-19F00-Y7E	Cowling Assy, Center (blue)
11	94403-19F00-Y7L	Cowling Assy, Center (black)
11	94403-19F00-Y7M	Cowling Assy, Center (red)
11	94403-19F00-Y9F	Cowling Assy, Center (yellow)
12	68641-19F00-20G	• . Emblem, "suzuki" (gray)
12	68641-19F00-12Y	• . Emblem, "suzuki" (gray)

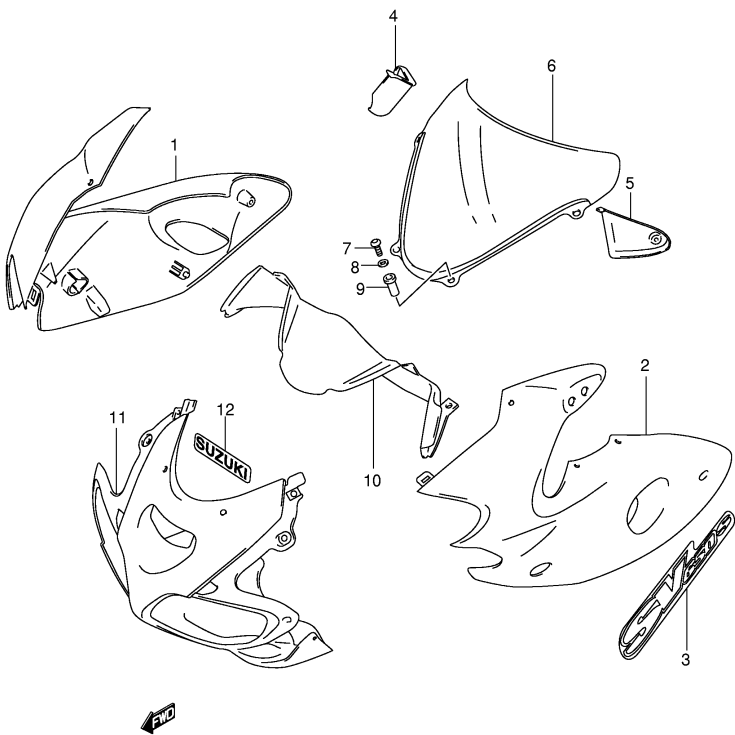

Ref No	Part No	Description
1	94401-20F00-Y9X	Cowl Assy, Side Rh (black)
1	94401-20F00-Z7X	Cowl Assy, Side Rh (red)
1	94401-20F00-Z8X	Cowl Assy, Side Rh (yellow)
1	94401-20F00-YC2	Cowl Assy, Side Rh (blue)
2	94402-20F00-Y9X	Cowl Assy, Side Lh (black)
2	94402-20F00-Z7X	Cowl Assy, Side Lh (red)
2	94402-20F00-Z8X	Cowl Assy, Side Lh (yellow)
2	94402-20F00-YC2	Cowl Assy, Side Lh (blue)
3	68181-20F00-N9Y	• . Emblem
3	68181-20F00-N9V	• . Emblem
3	68181-20F00-N9Z	• . Emblem
3	68181-20F00-N9W	• . Emblem
4	94413-19F00	Panel, Upper Rh
5	94423-19F00	Panel, Upper Lh
6	94611-19F00	Window Screen
7	09139-05025	Screw (5x14)
8	08322-01053	Washer
9	09159-05019	Nut
10	94630-19F00	Panel, Meter
11	94403-19F00-Y7L	Cowling Assy, Center (black)
11	94403-19F00-Y7M	Cowling Assy, Center (red)
11	94403-19F00-Y9F	Cowling Assy, Center (yellow)
11	94403-19F00-YC2	Cowling Assy, Center (blue)
12	68641-19F00-1ZY	• . Emblem, "suzuki" (gray)
12	68641-19F00-20G	• . Emblem, "suzuki" (gray)

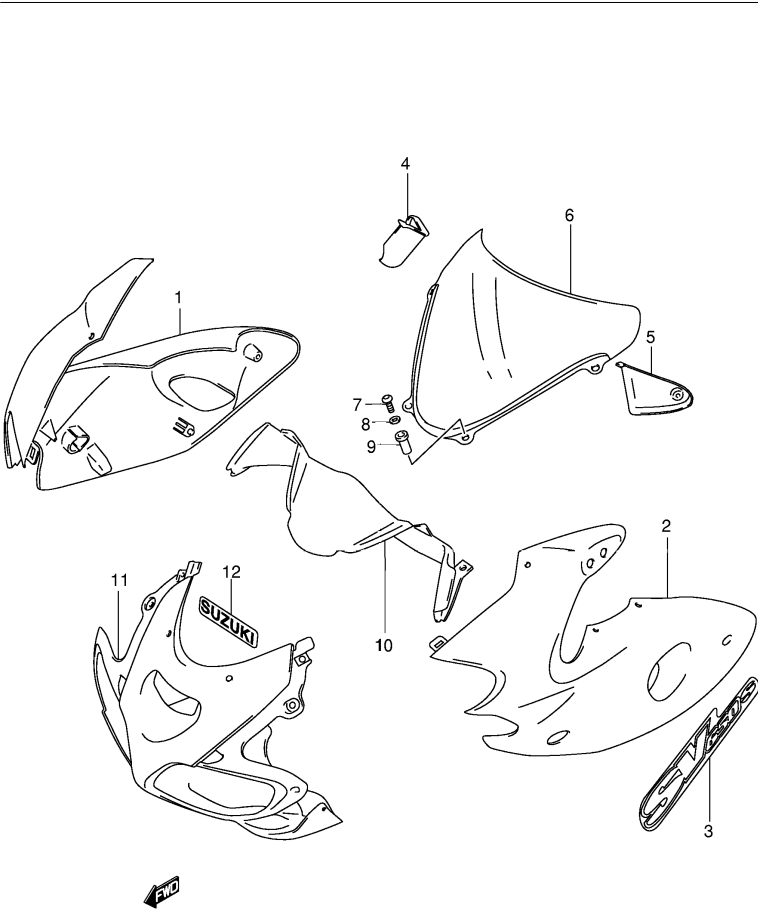


Ref No	Part No	Description
1	94401-20F01-19A	Cowl Assy, Side Rh (red)
1	94401-20F01-YFX	Cowl Assy, Side Rh (black)
1	94401-20F01-Y9H	Cowl Assy, Side Rh (yellow)
1	94401-20F01-YEX	Cowl Assy, Side Rh (blue)
2	94402-20F01-19A	Cowl Assy, Side Lh (red)
2	94402-20F01-YFX	Cowl Assy, Side Lh (black)
2	94402-20F01-Y9H	Cowl Assy, Side Lh (yellow)
2	94402-20F01-YEX	Cowl Assy, Side Lh (blue)
3	68181-20F00-ED6	• . Emblem
3	68181-20F00-ED7	• . Emblem
3	68181-20F00-ED8	• . Emblem
3	68181-20F00-ED9	• . Emblem
4	94413-19F00	Panel, Upper Rh
5	94423-19F00	Panel, Upper Lh
6	94611-19F00	Window Screen
7	09139-05025	Screw (5x14)
8	08322-01053	Washer
9	09159-05019	Nut
10	94630-19F00	Panel, Meter
11	94403-19F01-19A	Cowling Assy, Center (red)
11	94403-19F01-Y7L	Cowling Assy, Center (black)
11	94403-19F01-Y9H	Cowling Assy, Center (yellow)
11	94403-19F00-YC2	Cowling Assy, Center (blue)
12	68641-19F00-YD8	• . Emblem, "suzuki" (silver)
12	68641-19F00-1ZY	• . Emblem, "suzuki" (gray)
12	68641-19F00-20G	• . Emblem, "suzuki" (gray)

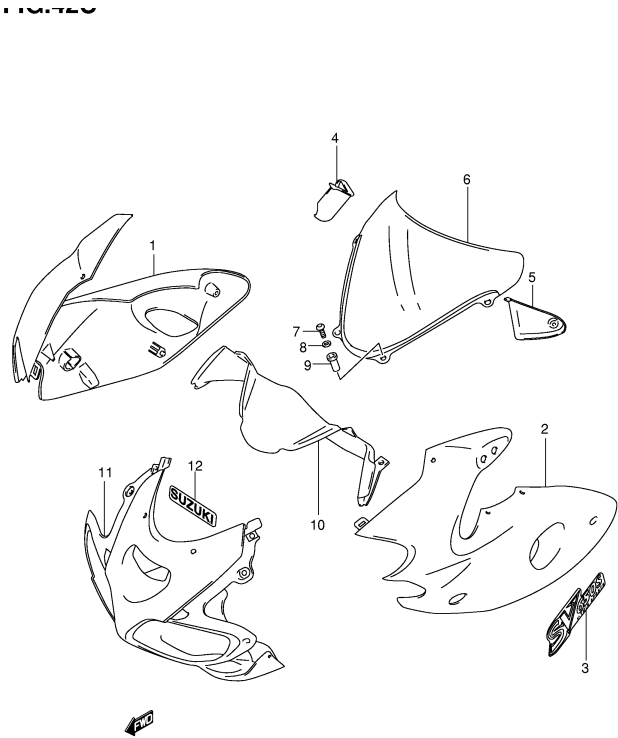


Ref No	Part No	Description
1	94401-20F10-Y7L	Cowl Assy, Side Rh (black)
1	94401-20F10-Y9H	Cowl Assy, Side Rh (yellow)
1	94401-20F10-YC2	Cowl Assy, Side Rh (blue)
1	94401-20F10-YD8	Cowl Assy, Side Rh (silver)
2	94402-20F10-Y7L	Cowl Assy, Side Lh (black)
2	94402-20F10-Y9H	Cowl Assy, Side Lh (yellow)
2	94402-20F10-YC2	Cowl Assy, Side Lh (blue)
2	94402-20F10-YD8	Cowl Assy, Side Lh (silver)
3	68181-20F10-GY1	• . Emblem
3	68181-20F10-GY2	• . Emblem
3	68181-20F10-GY3	• . Emblem
3	68181-20F10-GY4	• . Emblem
4	94413-19F00	Panel, Upper Rh
5	94423-19F00	Panel, Upper Lh
6	94611-19F00	Window Screen
7	09139-05025	Screw (5x14)
8	08322-01053	Washer
9	09159-05019	Nut
10	94630-19F00	Panel, Meter
11	94403-19F02-Y7L	Cowling Assy, Center (black)
11	94403-19F02-Y9H	Cowling Assy, Center (yellow)
11	94403-19F02-YC2	Cowling Assy, Center (blue)
11	94403-19F02-YD8	Cowling Assy, Center (silver)
12	68641-19F00-1ZY	• . Emblem, "suzuki" (gray)
12	68641-19F00-20G	• . Emblem, "suzuki" (gray)

SV650Y E02_042C
COWLING BODY

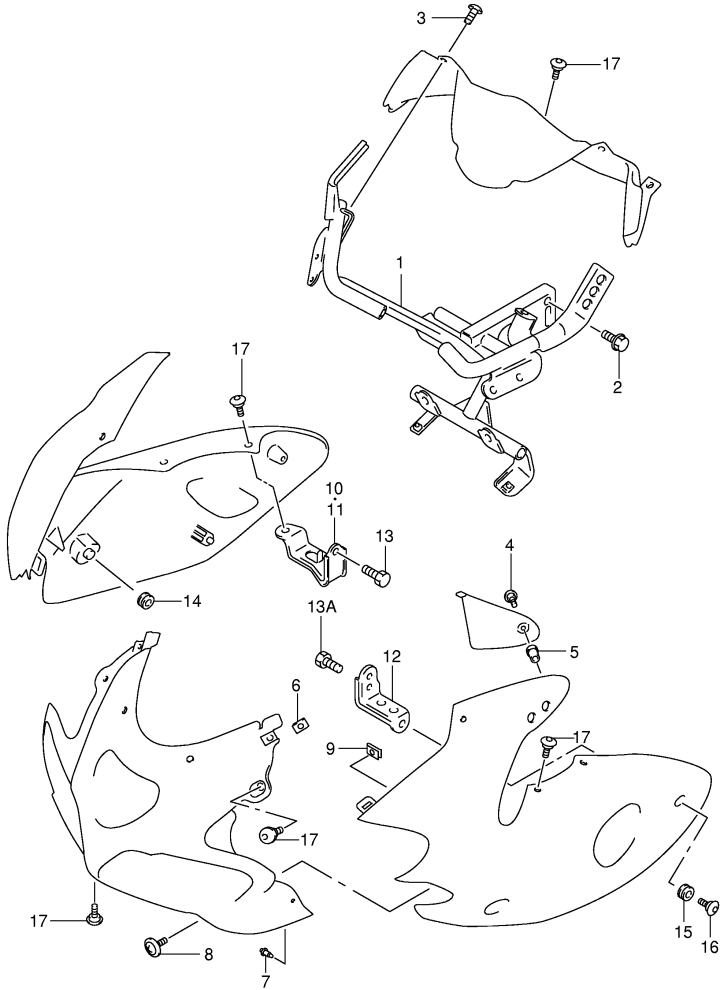

Ref No	Part No	Description
1	94510-19F00	Brace, Cowling
2	01550-08303	Bolt
3	02142-05123	Screw
4	02142-05203	Screw
5	09159-05019	Nut
6	94484-24F00	Nut, Cowling
7	09409-06314-5PK	Clip (black)
8	03241-15163	Screw
9	09148-05038	Nut
10	94521-19F00	Bracket, Side Upper Rh
11	94531-19F00	Bracket, Side Upper Lh
12	94541-19F00	Bracket, Side Rear Rh
13	01500-06123	Bolt, Upper Bracket
13a	01500-06163	Bolt, Side Rear Bracket
14	09320-08018	Cushion (8x26x7)
15	09320-09016	Cushion
16	09139-06087	Screw (m6x20)
17	09139-05054	Screw (m5x16)

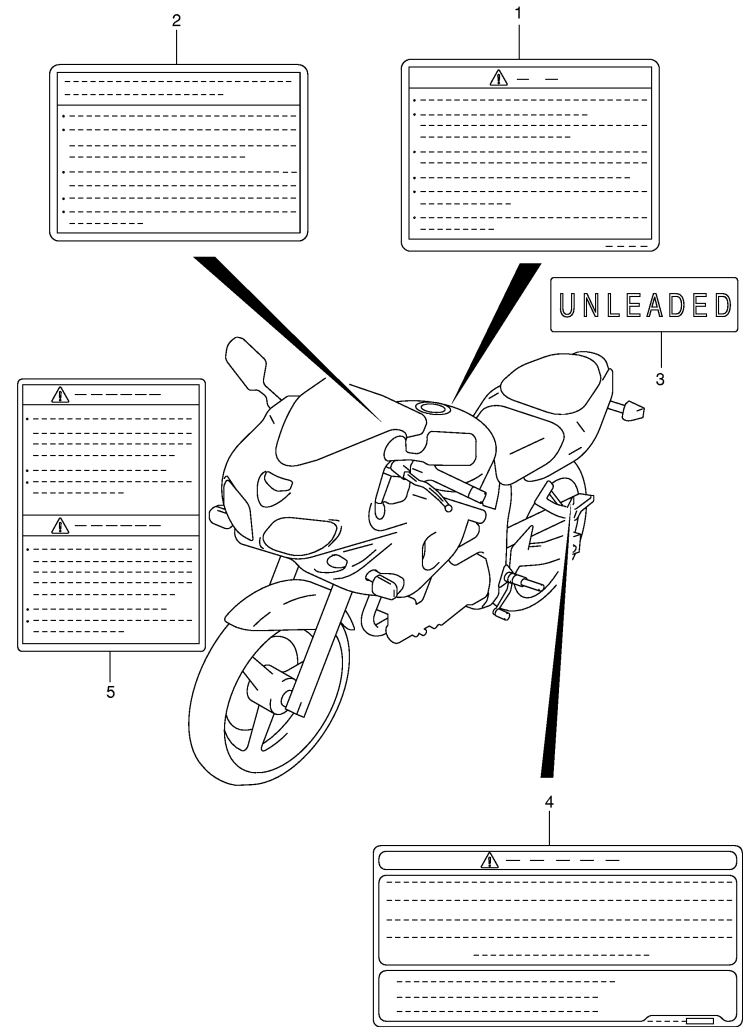


Ref No	Part No	Description
1	68319-33E01	Label, General Warning (english)
1	68319-33E21	Label, General Warning (german)
1	68319-33E31	Label, General Warning (franch)
1	68319-33E41	Label, General Warning (italian)
1	68319-33E51	Label, General Warning (spanish)
1	68319-33E71	Label, General Warning (dutch)
1	68319-33E91	Label, General Warning (swedish)
1	68319-33EA1	Label, General Warning (finnish)
1	68319-33EB1	Label, General Warning (norwegian)
1	68319-33EC1	Label, General Warning (danish)
2	68922-14F00	Label, Screen
2	68922-14F30	Label, Screen
2	68922-14F20	Label, Screen
3	68623-17D00	Label, Fuel
3	86932-73060	Label, Fuel
4	68332-20F00	Label, Tire Information
5	68613-21E10	Label, Steering
5	68613-21E00	Label, Steering
6	99011-20F50-042	Manual, Owner's


Catalogue Title:
SV650Y (SV650Y E2)

Block No.
FIG44A


Block Title.
LABEL (MODEL K1)

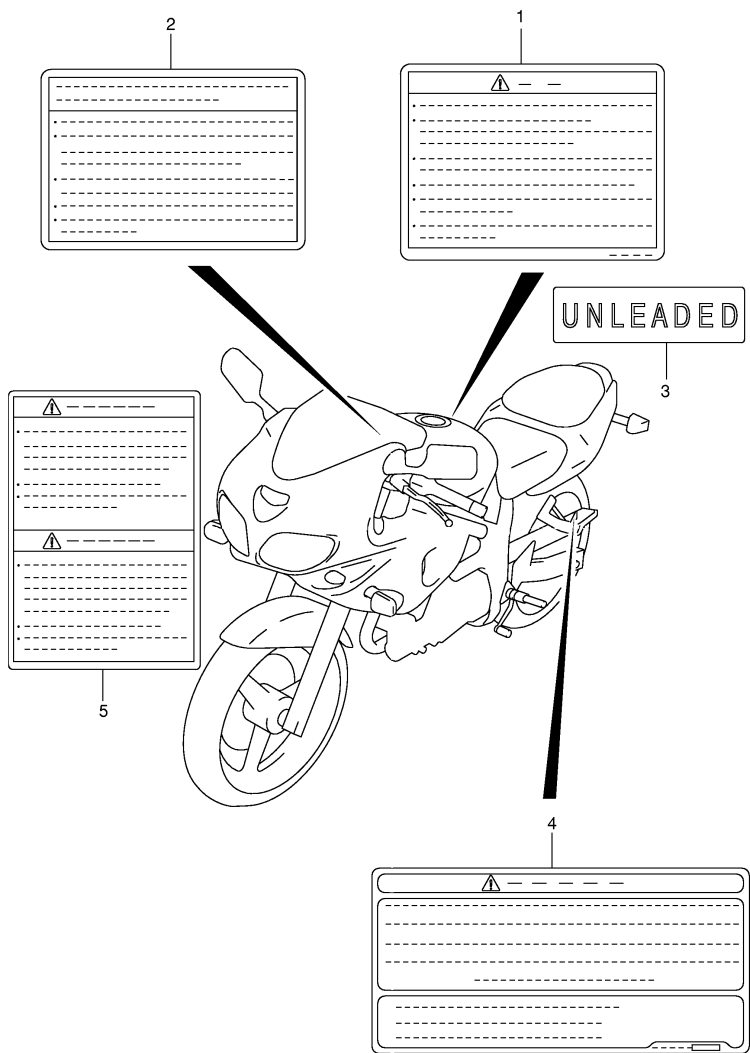


Ref No	Part No	Description
1	68319-29F00	Label, General Warning (english)
1	68319-30F00	Label, General Warning (english)
1	68319-30F20	Label, General Warning (german)
1	68319-30F30	Label, General Warning (franch)
1	68319-30F40	Label, General Warning (italian)
1	68319-30F50	Label, General Warning (spanish)
1	68319-30F70	Label, General Warning (dutch)
1	68319-30F80	Label, General Warning (potuguese)
1	68319-30F90	Label, General Warning (swedish)
1	68319-30FA0	Label, General Warning (finnish)
1	68319-30FB0	Label, General Warning (norwegian)
1	68319-30FC0	Label, General Warning (danish)
3	68623-17D00	Label, Fuel
3	86932-73060	Label, Fuel
4	68332-20F00	Label, Tire Information
6	99011-20F52-042	Manual, Owner's

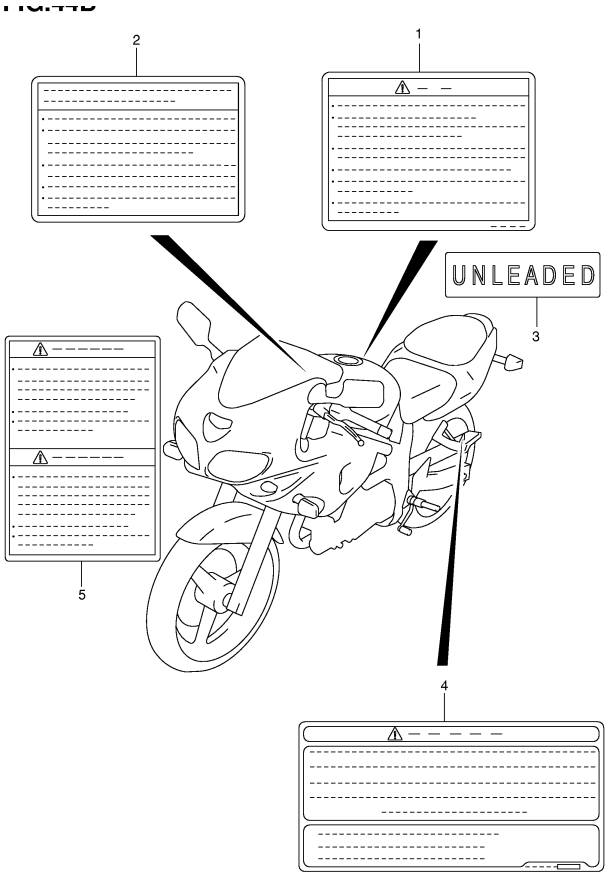

Ref No	Part No	Description
1	68319-29F00	Label, Warning (english)
1	68319-29F20	Label, Warning (german)
1	68319-29F30	Label, Warning (franch)
1	68319-29F40	Label, Warning (italian)
1	68319-29F50	Label, Warning (spanish)
1	68319-29F70	Label, Warning (dutch)
1	68319-29F80	Label, Warning (potuguese)
1	68319-29F90	Label, Warning (swedish)
1	68319-29FA0	Label, Warning (finnish)
1	68319-29FB0	Label, Warning (norwegian)
1	68319-30FC0	Label, Warning (danish)
1	68319-30F20	Label, Warning (german)
1	68319-30F40	Label, Warning (italian)
1	68319-30F90	Label, Warning (swedish)
3	68623-17D00	Label, Fuel
3	86932-73060	Label, Fuel
4	68332-20F00	Label, Tire Information
6	99011-20F53-042	Manual, Owner's

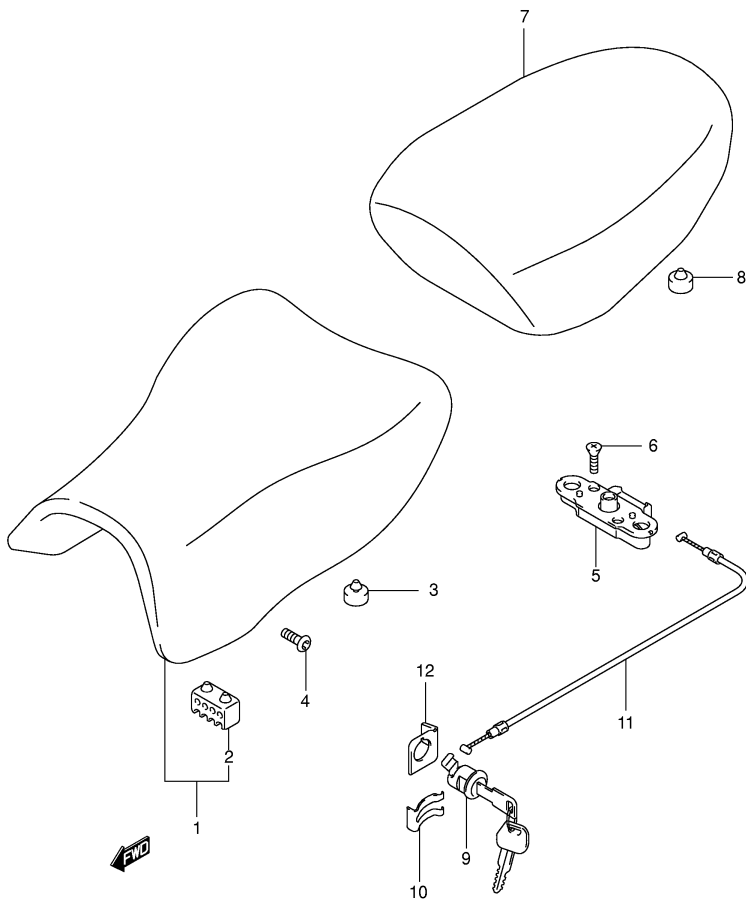


Ref No	Part No	Description
1	45100-19F50-W05	Seat Assy (black)
2	45149-31300	• . Cushion
3	09321-10002	• . Cushion
4	09106-06064	Bolt (6x18)
5	45220-20A01	Bracket, Seat Support Rear
6	02122-06303	Screw
7	45300-19F50-W05	Seat Assy,pillion (black)
8	09321-10011	• . Cushion
9	95700-14810	Lock Set, Seat
10	45289-11F00	Plate, Seat Lock
11	45280-38400	Cable, Seat Lock
12	45288-14F00	Guide, Seat Lock Cable

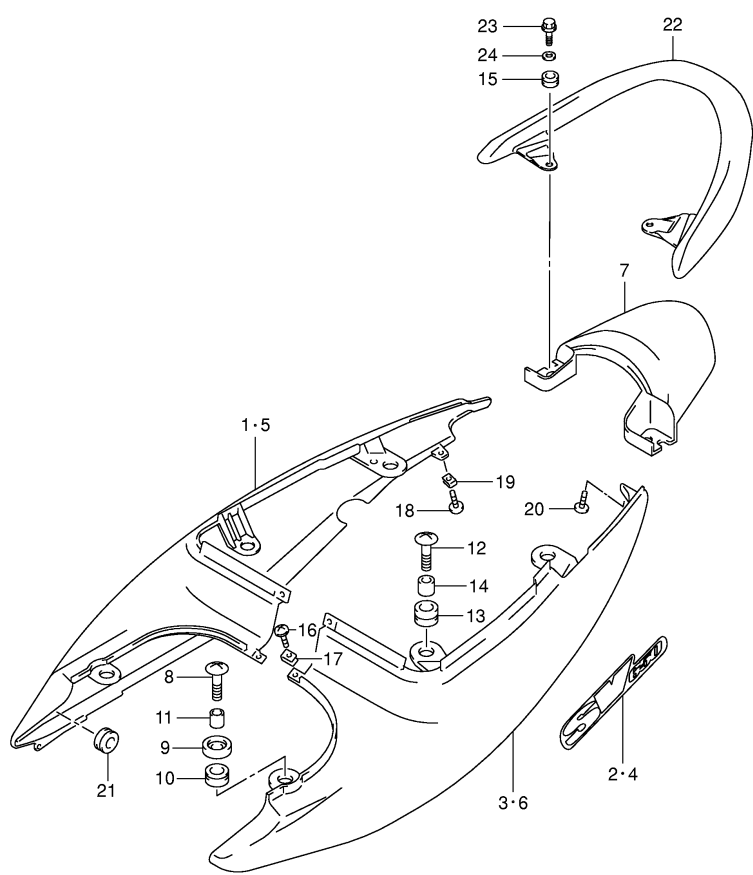


Ref No	Part No	Description
2	68165-20F00-N0J	• Emblem, Tail Cover,sv650
2	68165-20F00-N0G	• Emblem, Tail Cover,sv650
2	68165-20F00-N0H	• Emblem, Tail Cover,sv650
2	68165-20F00-N0K	• Emblem, Tail Cover,sv650
4	68165-20F00-N0J	• Emblem, Tail Cover,sv650
4	68165-20F00-N0G	• Emblem, Tail Cover,sv650
4	68165-20F00-N0H	• Emblem, Tail Cover,sv650
4	68165-20F00-N0K	• Emblem, Tail Cover,sv650
5	45501-20F10-Y7E	Cover, Seat Tail Rh (silver)
5	45501-20F10-Y7L	Cover, Seat Tail Rh (black)
5	45501-20F10-Y7M	Cover, Seat Tail Rh (red)
5	45501-20F10-Y9F	Cover, Seat Tail Rh (yellow)
6	45502-20F10-Y7E	Cover, Seat Tail Lh (silver)
6	45502-20F10-Y7L	Cover, Seat Tail Lh (black)
6	45502-20F10-Y7M	Cover, Seat Tail Lh (red)
6	45502-20F10-Y9F	Cover, Seat Tail Lh (yellow)
7	45503-19F50-35W	Cover, Seat Tail Center (gray)
7	45503-19F50-Y7L	Cover, Seat Tail Center (black)
8	09136-06083	Screw, Front (6x30)
9	47116-19F00	Cushion, Fr Upper (10x28x13)
10	47115-19F00	Cushion, Fr Lower (10x22x15)
11	09180-06294	Spacer (6.5x10x15.70)
12	09136-06105	Screw, Center (6x20)
13	09320-10045	Cushion (10x28x19)
14	09180-06286	Spacer (6.5x10x9.4)
15	47115-05F00	Cushion, Rear (15x28x12)
16	03241-15123	Screw
17	09148-05038	Nut
18	03241-15123	Screw
19	09148-05038	Nut
20	03242-04103	Screw
21	09320-08018	Cushion (8x26x7)
22	46210-19F50-291	Handle, Pillion Rider (black)
23	01551-08253	Bolt
24	09160-08126	Washer



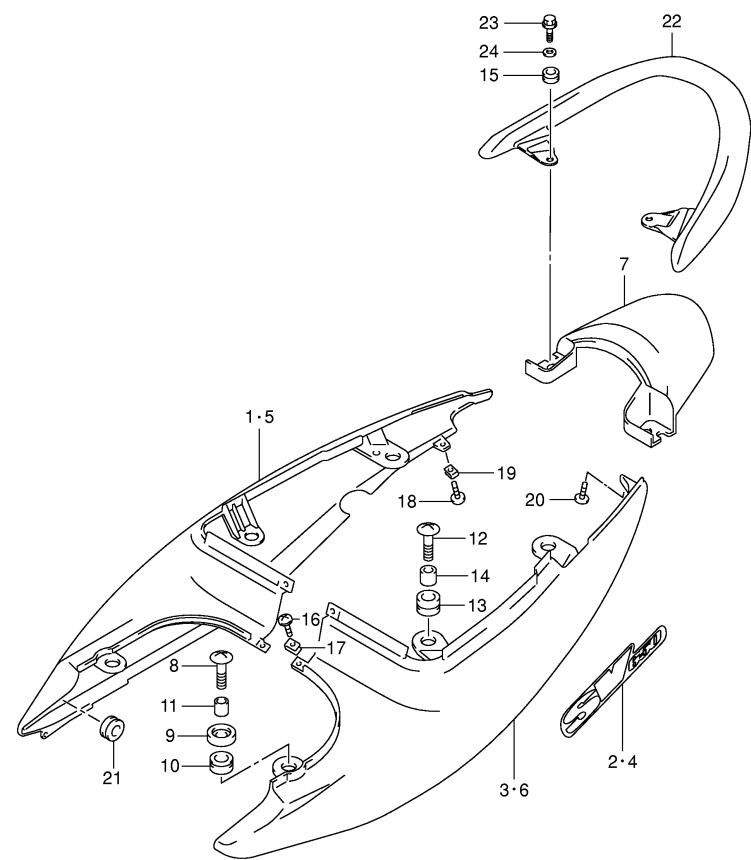


Ref No	Part No	Description
2	68165-20F00-N9W	• Emblem, Tail Cover,sv650
2	68165-20F00-N9Y	• Emblem, Tail Cover,sv650
2	68165-20F00-N9V	• Emblem, Tail Cover,sv650
2	68165-20F00-N9Z	• Emblem, Tail Cover,sv650
4	68165-20F00-N9W	• Emblem, Tail Cover,sv650
4	68165-20F00-N9Y	• Emblem, Tail Cover,sv650
4	68165-20F00-N9V	• Emblem, Tail Cover,sv650
4	68165-20F00-N9Z	• Emblem, Tail Cover,sv650
7	45503-19F50-35W	Cover, Seat Tail Center (gray)
7	45503-19F50-Y7L	Cover, Seat Tail Center (black)
8	09136-06083	Screw, Front (6x30)
9	47116-19F00	Cushion, Fr Upper (10x28x13)
10	47115-19F00	Cushion, Fr Lower (10x22x15)
11	09180-06294	Spacer (6.5x10x15.70)
12	09136-06105	Screw, Center (6x20)
13	09320-10045	Cushion (10x28x19)
14	09180-06286	Spacer (6.5x10x9.4)
15	47115-05F00	Cushion, Rear (15x28x12)
16	03241-15123	Screw
17	09148-05038	Nut
18	03241-15123	Screw
19	09148-05038	Nut
20	03242-04103	Screw
21	09320-08018	Cushion (8x26x7)
22	46210-19F50-291	Handle, Pillion Rider (black)
23	01551-08253	Bolt
24	09160-08126	Washer

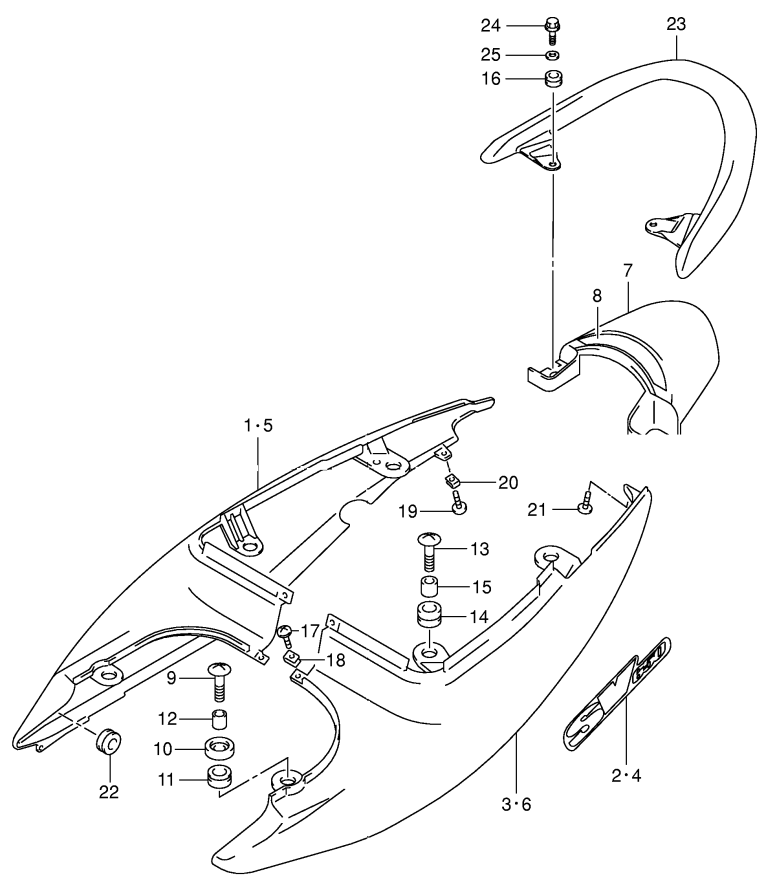

Ref No	Part No	Description
2	68165-20F00-ED9	• Emblem, Tail Cover,sv650
2	68165-20F00-ED7	• Emblem, Tail Cover,sv650
2	68165-20F00-ED6	• Emblem, Tail Cover,sv650
2	68165-20F00-ED8	• Emblem, Tail Cover,sv650
4	68165-20F00-ED9	• Emblem, Tail Cover,sv650
4	68165-20F00-ED7	• Emblem, Tail Cover,sv650
4	68165-20F00-ED6	• Emblem, Tail Cover,sv650
4	68165-20F00-ED8	• Emblem, Tail Cover,sv650
7	45503-19F50-35W	Cover, Seat Tail Center (gray)
7	45503-19F50-Y7L	Cover, Seat Tail Center (black)
8	45514-19F00	Tape, Seat Tail Cover Center
9	09136-06083	Screw, Front (6x30)
10	47116-19F00	Cushion, Fr Upper (10x28x13)
11	47115-19F00	Cushion, Fr Lower (10x22x15)
12	09180-06294	Spacer (6.5x10x15.70)
13	09136-06105	Screw, Center (6x20)
14	09320-10045	Cushion (10x28x19)
15	09180-06286	Spacer (6.5x10x9.4)
16	47115-05F00	Cushion, Rear (15x28x12)
17	03241-15123	Screw
18	09148-05038	Nut
19	03241-15123	Screw
20	09148-05038	Nut
21	03242-04103	Screw
22	09320-08018	Cushion (8x26x7)
23	46210-19F50-291	Handle, Pillion Rider (black)
24	01551-08253	Bolt
25	09160-08126	Washer




FIG. 47B

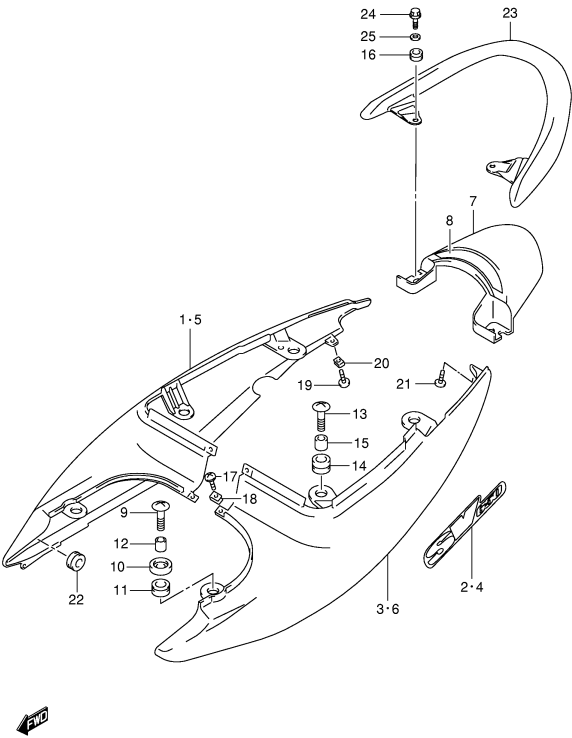


Ref No	Part No	Description
2	68161-20F00-GY3	• Emblem, Tail Cover,sv650
2	68161-20F00-GY1	• Emblem, Tail Cover,sv650
2	68161-20F00-GY4	• Emblem, Tail Cover,sv650
2	68161-20F00-GY2	• Emblem, Tail Cover,sv650
4	68161-20F00-GY3	• Emblem, Tail Cover,sv650
4	68161-20F00-GY1	• Emblem, Tail Cover,sv650
4	68161-20F00-GY4	• Emblem, Tail Cover,sv650
4	68161-20F00-GY2	• Emblem, Tail Cover,sv650
7	45503-19F50-Y7L	Cover, Seat Tail Center (black)
8	45514-19F00	Tape, Seat Tail Cover Center
9	09136-06083	Screw, Front (6x30)
10	47116-19F00	Cushion, Fr Upper (10x28x13)
11	47115-19F00	Cushion, Fr Lower (10x22x15)
12	09180-06294	Spacer (6.5x10x15.70)
13	09136-06105	Screw, Center (6x20)
14	09320-10045	Cushion (10x28x19)
15	09180-06286	Spacer (6.5x10x9.4)
16	47115-05F00	Cushion, Rear (15x28x12)
17	03241-15123	Screw
18	09148-05038	Nut
19	03241-15123	Screw
20	09148-05038	Nut
21	03242-04103	Screw
22	09320-08018	Cushion (8x26x7)
23	46210-19F50-291	Handle, Pillion Rider (black)
24	01551-08253	Bolt
25	09160-08126	Washer

SV650Y E02_047B
SEAT TAIL COVER

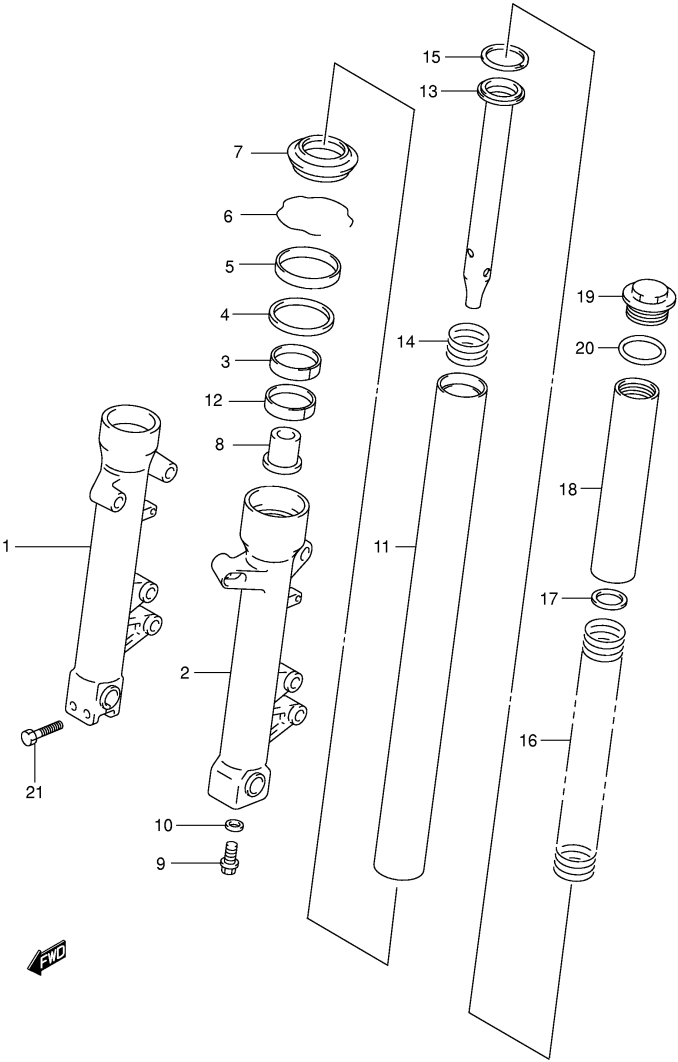


Ref No	Part No	Description
	51103-20F00	Damper Assy, Front Fork Rh
	51104-20F00	Damper Assy, Front Fork Lh
1	51130-20F00	• . Tube, Outer Rh
2	51140-20F00	• . Tube, Outer Lh
3	51167-26E10	• . Metal, Slide
4	51158-05A00	• . Washer
5	51153-14F00	• . Seal, Oil
6	51156-49440	• . Circlip
7	51173-14F00	• . Seal, Dust
8	51195-33D10	• . Piece, Oil Lock
9	51147-16S10	• . Bolt
10	51148-41310	• . Washer
11	51110-20F00	• . Tube, Inner
12	51121-33D10	• . Piston
13	51146-20F00	• . Cylinder
14	51177-06C00	• . Spring
15	51196-33D10	• . Ring, Piston
16	51171-19F00	• . Spring, Front
17	51356-10D03	• . Washer
18	51176-20F00	• . Spacer, Spring
19	51351-33D00	• . Cap
20	09280-32001	• . O Ring
21	01550-08457	• . Bolt, Rh

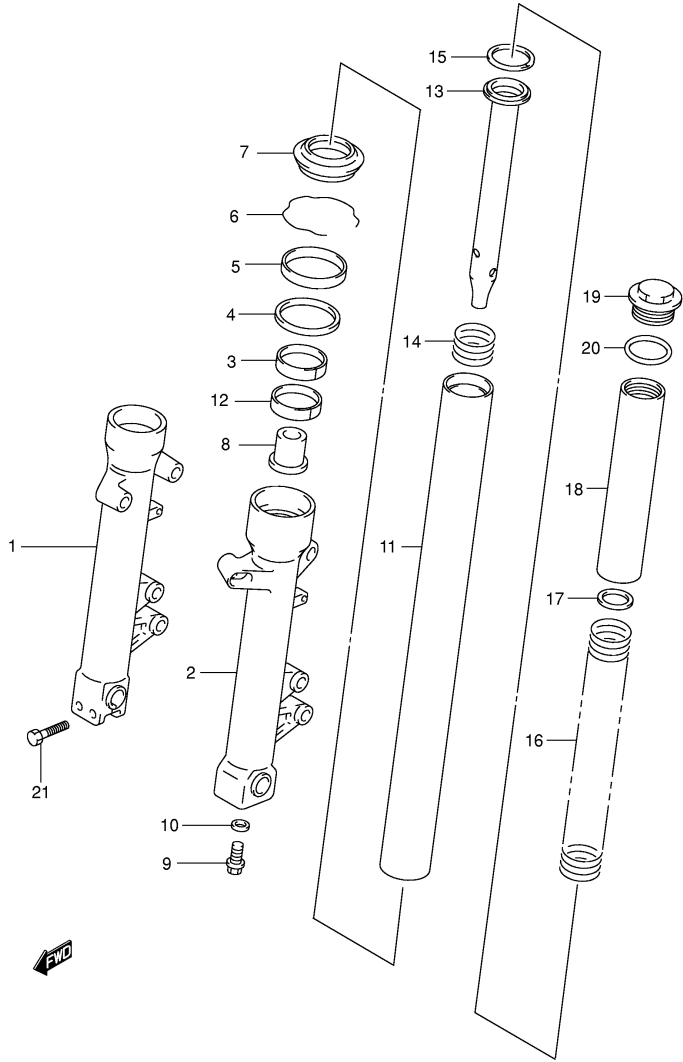

Ref No	Part No	Description
1	51130-20F30	. Tube, Outer Rh
2	51140-20F00	. Tube, Outer Lh
3	51167-26E10	. Metal, Slide
4	51158-05A00	. Washer
5	51153-14F00	. Seal, Oil
6	51156-49440	. Circlip
7	51173-14F00	. Seal, Dust
9	51147-16510	. Bolt
10	51148-41310	. Washer
11	51110-20F00	. Tube, Inner
12	51121-33D10	. Piston
14	51177-06C00	. Spring
15	51196-33D10	. Ring, Piston
17	51356-10D03	. Washer
19	51351-10D00	. Cap
20	09280-32001	. O Ring
21	01550-08457	. Bolt, Rh


FIG. 48B

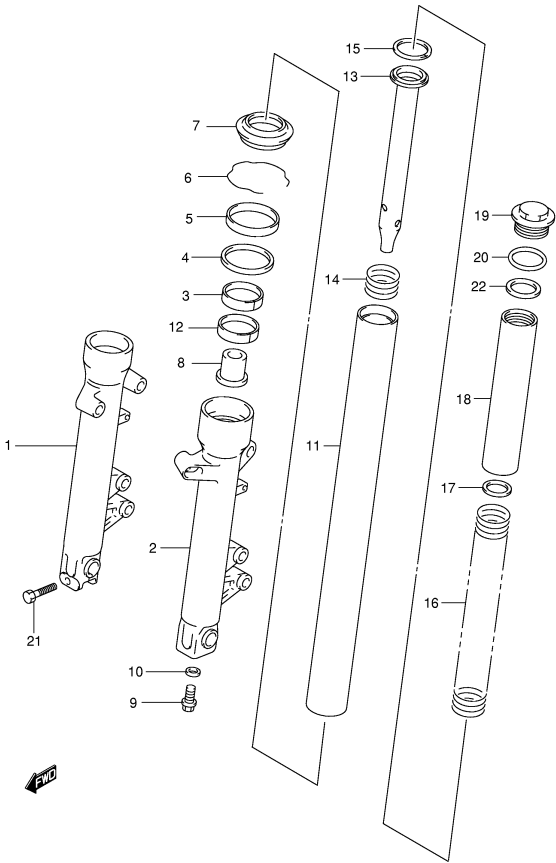


SV650Y E02_048B
FRONT DAMPER


Ref No	Part No	Description
1	51130-20FA0	. Tube, Outer Rh
2	51140-20FA0	. Tube, Outer Lh
3	51167-26E10	. Metal, Slide
4	51158-05A00	. Washer
5	51153-14F00	. Seal, Oil
6	51156-49440	. Circlip
7	51173-14F00	. Seal, Dust
8	51195-33D10	. Piece, Oil Lock
9	51147-16510	. Bolt
10	51148-41310	. Washer
11	51110-20F00	. Tube, Inner
12	51121-33D10	. Piston
13	51146-20F30	. Cylinder
14	51177-06C00	. Spring
15	51196-31F00	. Ring, Piston
16	51171-20FA0	. Spring, Front
17	51356-10D03	. Washer
19	51351-10D80	. Cap
20	09280-32001	. O Ring
21	01550-08457	. Bolt, Rh
22	51192-06C00	. Washer, Upper


Ref No	Part No	Description
1	51410-19F10	Stem, Steering
2	51644-12C00	• . Seal, Steering Lower
3	09267-30010	• . Bearing (30x55x17)
4	01550-08407	Bolt
5	51311-19F10	Head, Steering Stem
6	51328-03FA0	Bolt
7	09250-06011	Cap
8	56211-45C50	Holder, Handle Upper
9	07130-08307	Bolt
10	09164-08015	Washer
11	56221-03FA0	Holder, Handle Lower
12	51321-03FA0	Bolt
13	08319-31107	Nut
14	09267-25009	Bearing (25x47x15)
15	09285-34009	Oil Seal (34x69x11.9)
16	51631-28000	Nut, Steering Stem
17	51530-19F00	Bracket, Headlamp Housing Rh
18	51540-19F00	Bracket, Headlamp Housing Lh
19	51553-38C00	Damper, Headlamp Housing Brkt
20	51851-19F00	Stay, Headlamp Housing Rh
21	51861-19F00	Stay, Headlamp Housing Lh
22	09139-06027	Screw (6x12)
23	51356-10D03	Washer
24	51353-28A10	Nut

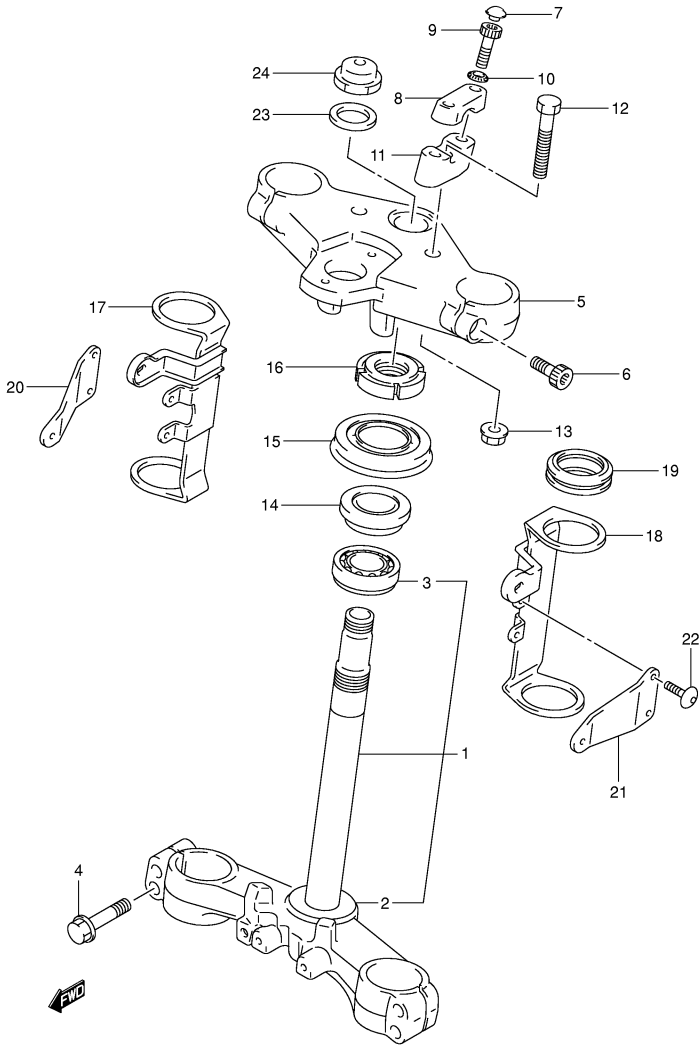

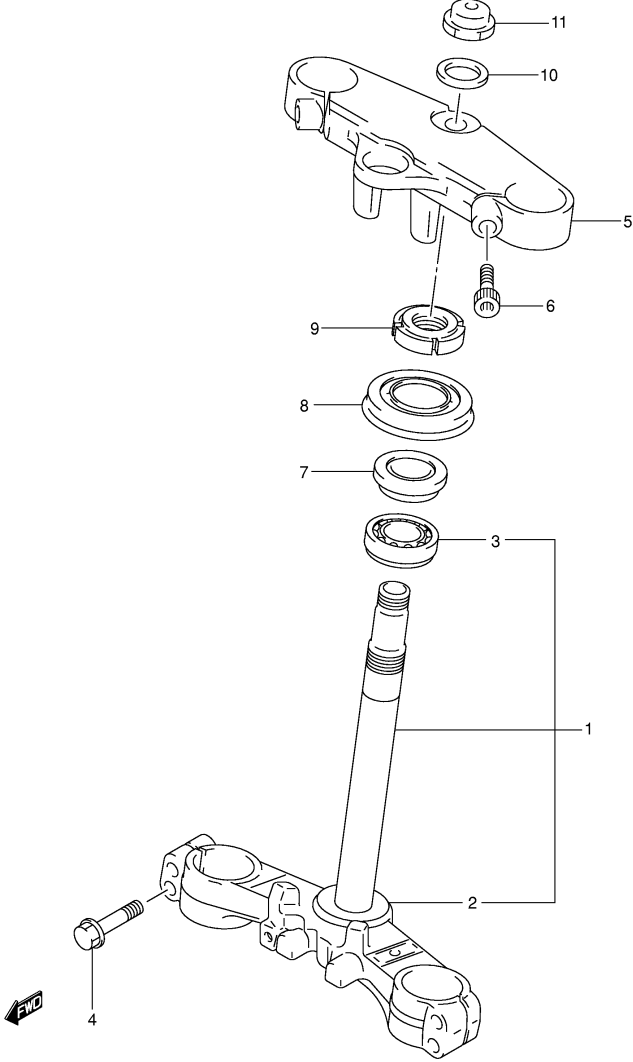


Ref No	Part No	Description
1	51410-19F00	Stem, Steering
2	51644-12C00	• . Seal, Steering Lower
3	09267-30010	• . Bearing (30x55x17)
4	01550-08407	Bolt
5	51311-19F00	Head, Steering Stem
6	51328-03FA0	Bolt
7	09267-25009	Bearing (25x47x15)
8	09285-34009	Oil Seal (34x69x11.9)
9	51631-28000	Nut, Steering Stem
10	51356-10D03	Washer
11	51353-28A10	Nut

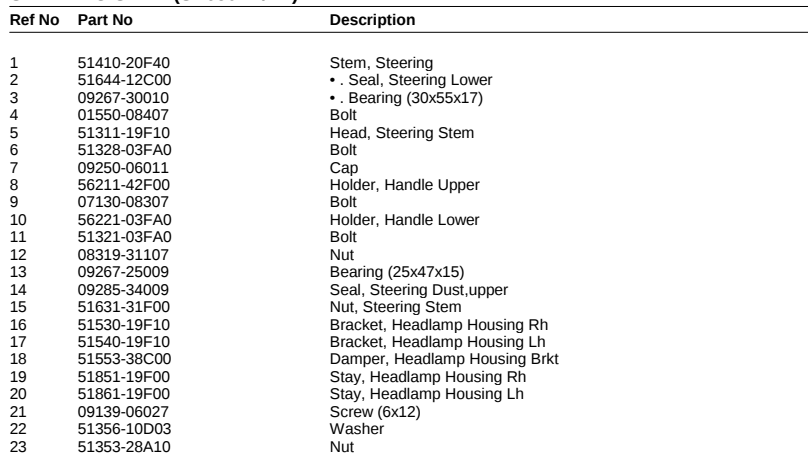

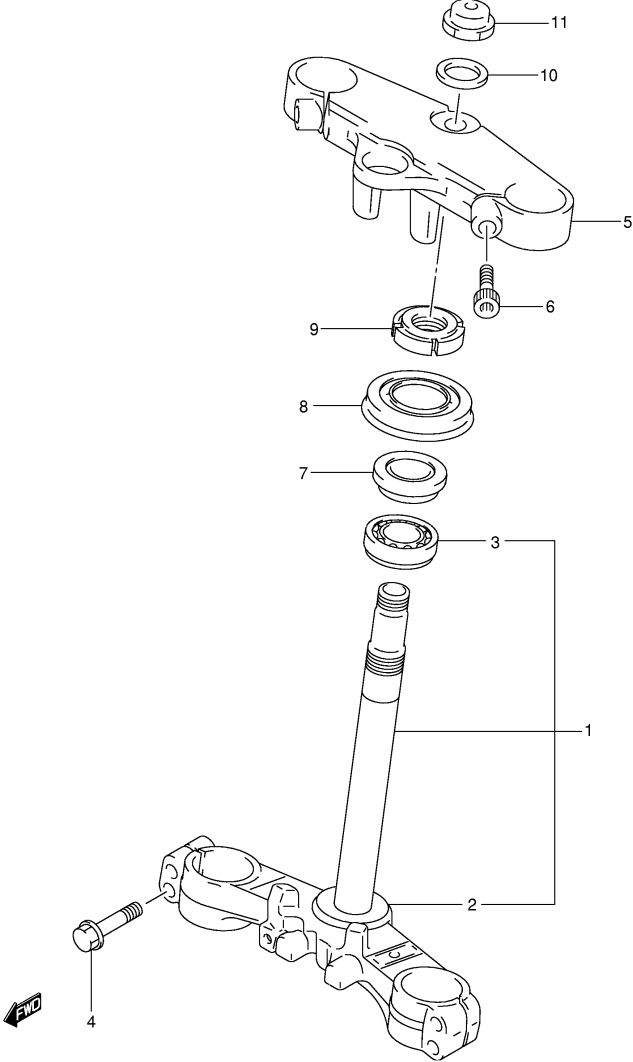


Ref No	Part No	Description
1	51410-20F30	Stem, Steering
2	51644-12C00	• . Seal, Steering Lower
3	09267-30010	• . Bearing (30x55x17)
4	01550-08407	Bolt
5	51311-19F00	Head, Steering Stem
6	51328-03FA0	Bolt
7	09267-25009	Bearing (25x47x15)
8	09285-34009	Oil Seal (34x69x11.9)
9	51631-28000	Nut, Steering Stem
10	51356-10D03	Washer
11	51353-28A10	Nut

FIG.50

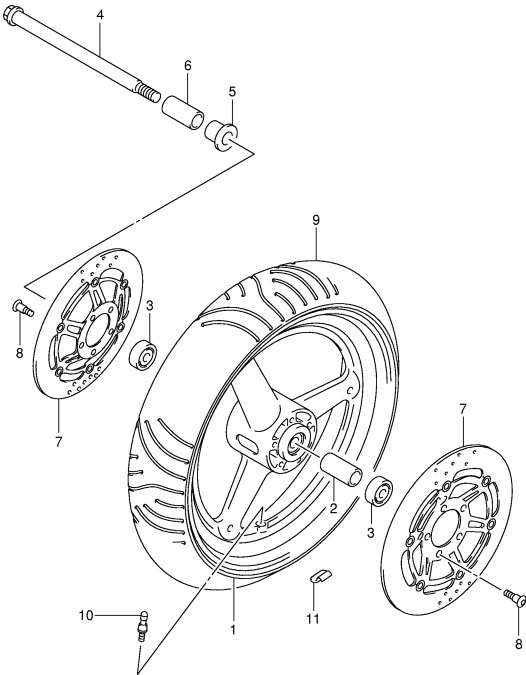


Ref No	Part No	Description
1	54111-03FA0-Y6G	Wheel, Front (17xmt3.50) (silver)
2	09180-17094	Spacer (17.5x22.5x73)
3	08133-62037	Bearing, Rh
4	54711-07F00	Axle, Front
5	54740-32C00	Spacer, Front Axle Rh
6	54741-03FA0	Spacer, Front Axle Rh
7	59210-08F00	Disc, Front Brake
8	09106-08125	Bolt (8x33)
9	55110-20F00	Tire, Front,120/60 Zr17(55w) (metzeler)
10	43130-24A00	Valve Assy, Wheel Rim (tr412)
11	55411-00A00	Balancer, Wheel (10g)
11	55412-00A01	Balancer, Wheel (20g)

SV650Y E02_050
FRONT WHEEL

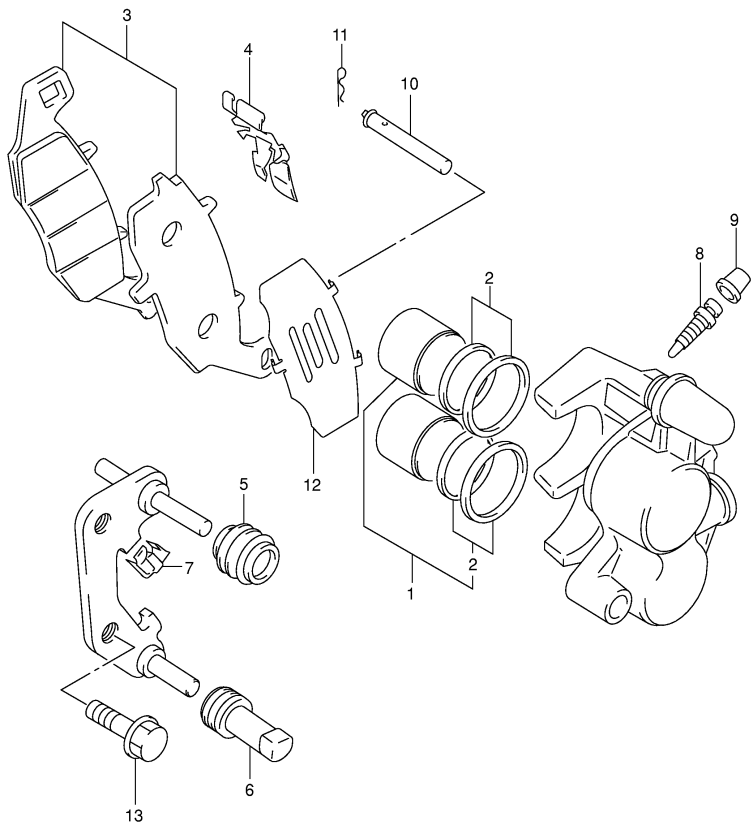


Ref No	Part No	Description
	59100-33D80	Caliper Assy, Front Rh
	59300-33D80	Caliper Assy, Front Lh
1	59300-33830	• , Piston Set
2	59300-33840	• , Seal Set, Piston
3	59101-33850	• , Pad Set, Rh
3	59301-33850	• , Pad Set, Lh
4	59115-33D00	• , Spring Rh
4	59315-33D00	• , Spring Lh
5	59112-44B00	• , Boot
6	59313-36500	• , Insulator
7	59116-33D00	• , Guide
8	59121-18410	• , Bleeder
9	55156-66310	• , Cap
10	59141-44B01	• , Pin
11	69142-45000	• , Clip
12	59171-33D00	• , Shim
13	01550-10253	Bolt




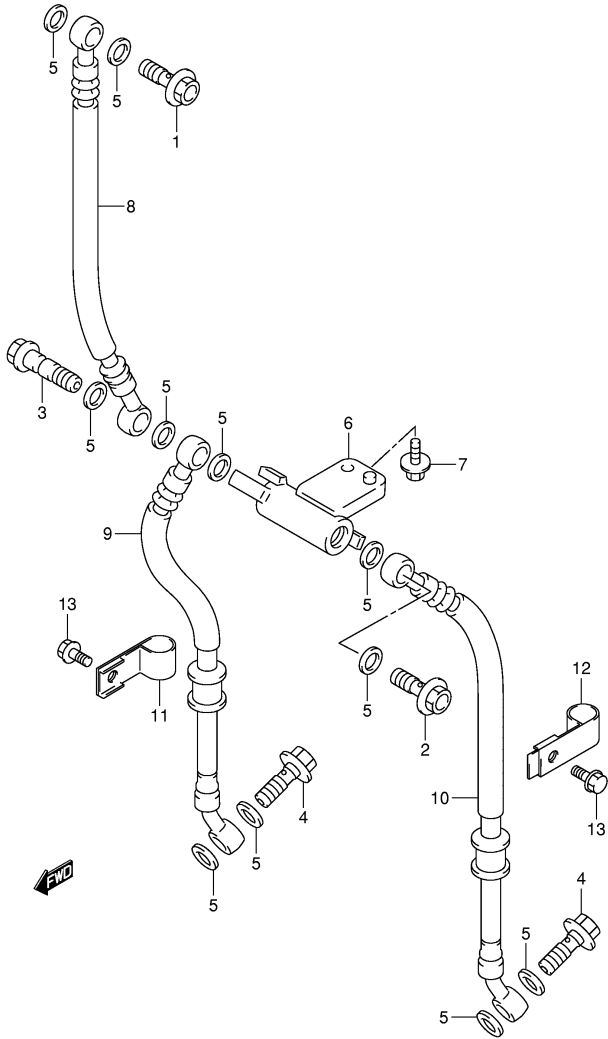


Ref No	Part No	Description
1	09360-10041	Bolt, Upper (10x1.00x22)
2	09360-10041	Bolt, Joint (10x1.00x22)
3	09360-10043	Bolt (10x1.00x36)
4	09360-10042	Bolt, Lower (10x1.25x22)
5	09161-10009	Washer (10x15x1.5)
6	59491-17E00	Joint, Brake Hose
7	01550-06163	Bolt
8	59480-20F00	Hose, Front Brake No.1
9	59240-20F00	Hose, Front Brake No.2 Rh
10	59440-20F00	Hose, Front Brake No.2 Lh
11	59268-45D00	Clamp, Brake Hose No.2 Rh
12	59269-20F00	Clamp, Brake Hose No.2 Lh
13	01550-06123	Bolt

Ref No	Part No	Description
	59600-20C20	Cylinder Assy, Front Master
1	59600-45860	• . Piston/cup Set
2	59667-49460	• . Diaphragm
3	59668-41C00	• . Plate, Diaphragm
4	59669-41C00	• . Cap
5	69689-49300	• . Screw
6	59671-44300	• . Holder
7	59675-19C00	• . Bolt, Holder (6x25)
8	59675-19C10	• . Bolt, Holder (6x38)
9	59664-48B00	• . Protector

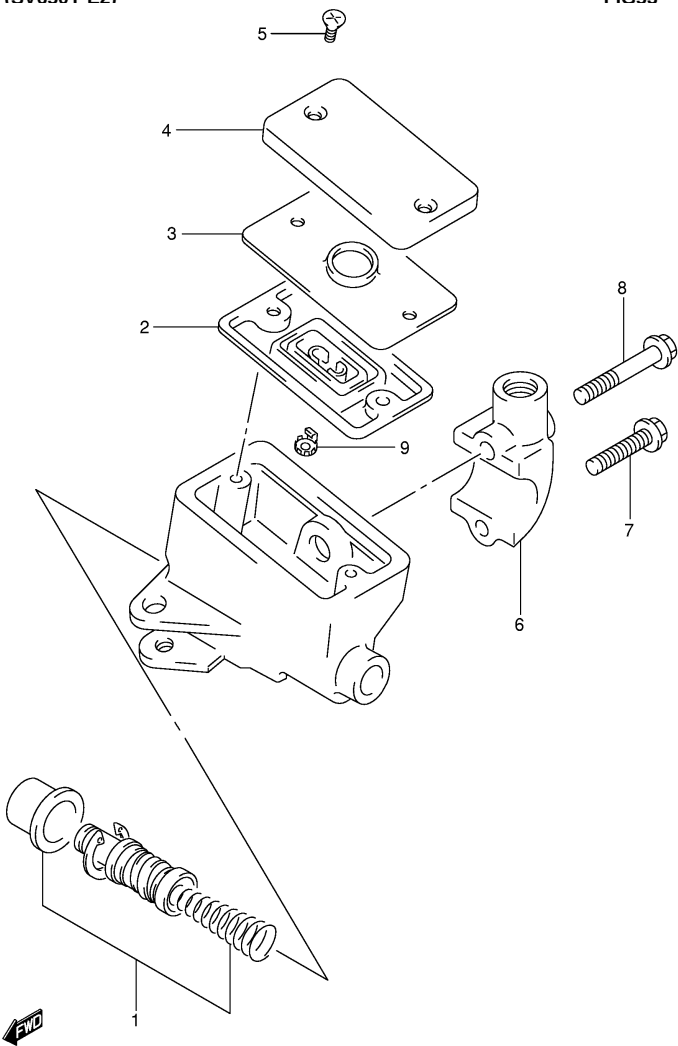

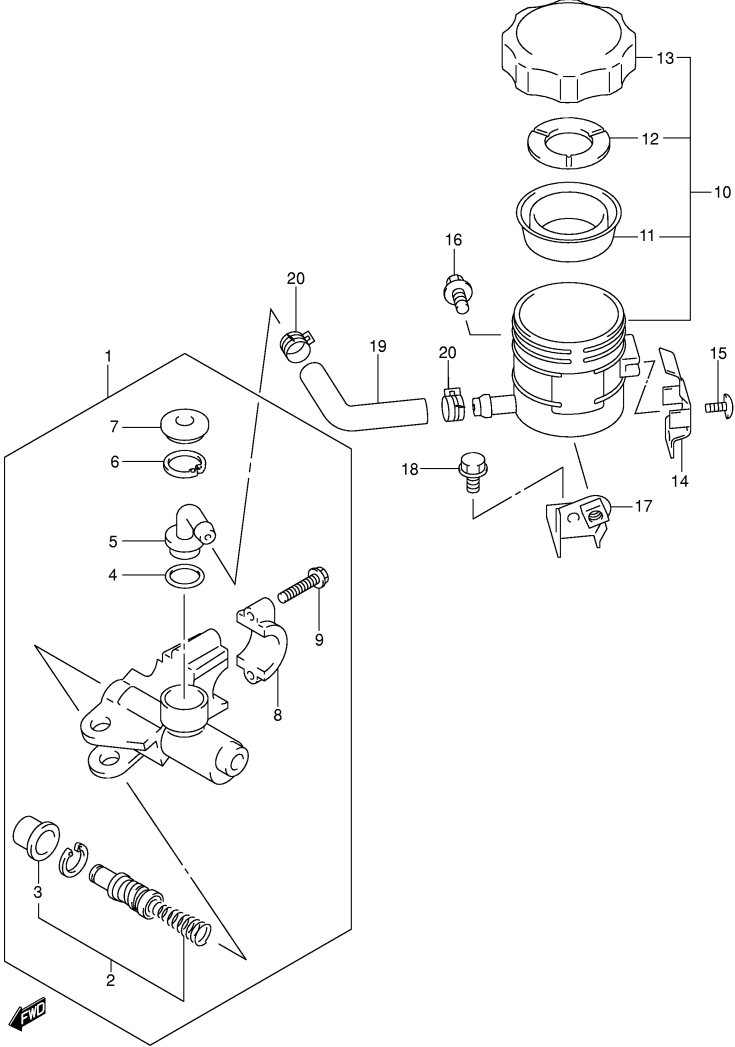


Ref No	Part No	Description
1	59600-32C01	Cylinder Assy, Front Master
2	59600-45860	• Piston/cup Set
3	59666-44300	• Boot
4	69686-34200	• O Ring
5	59672-17C00	• Connector
6	69674-00B20	• Circlip
7	59673-17C00	• Cover, Dust
8	59671-36500	• Holder (black)
9	59675-19C00	• Bolt, Holder (6x25)
10	59740-07D00	Tank Assy, Reservoir
11	59667-18441	• Diaphragm
12	59668-18441	• Plate, Diaphragm
13	59669-07D00	• Cap
14	59743-17C00	Plate, Reservoir Tank Cap
15	02142-04103	Screw
16	01550-06123	Bolt
17	59750-33E01	Bracket, Reservoir Tank Front
18	01550-06123	Bolt
19	59731-32C00	Hose, Front Reservoir Tank
20	59735-17C00	Clamp, Reservoir Tank

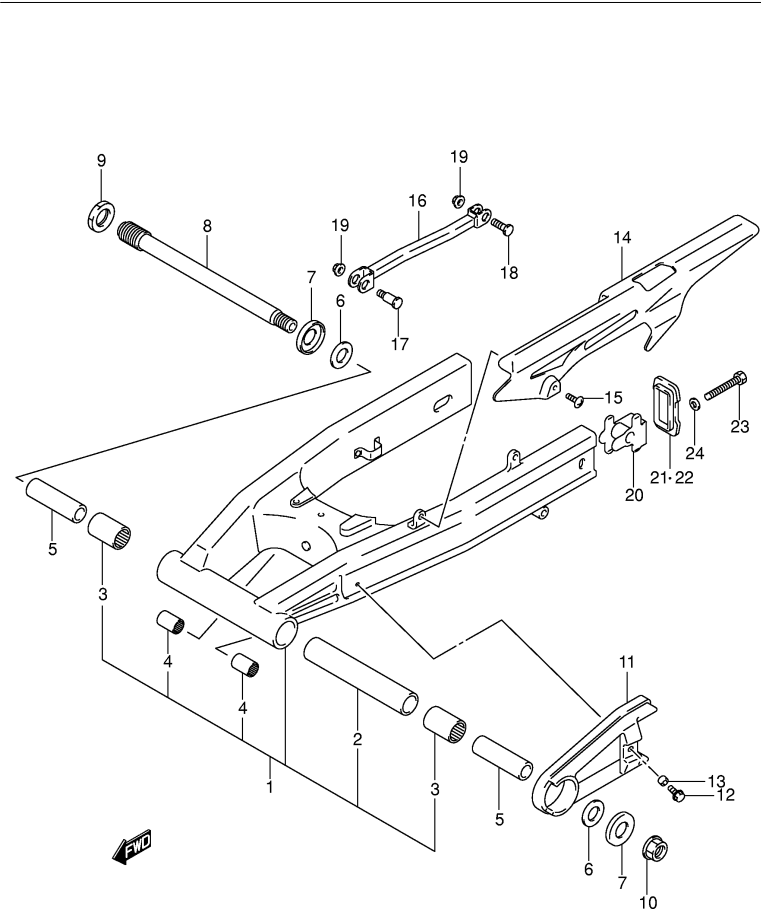


Exploded view diagram of the rear swinging arm assembly. The diagram shows the main swinging arm (1) and its various components, including pivot shafts (8, 16), bearings (3, 4), spacers (5, 11), and adjusters (20, 21, 22). A 'FWD' arrow indicates the front direction.

Ref No	Part No	Description
1	61000-19F01	Swinging Arm Assy, Rear
2	61281-19F00	• . Spacer, Pivot Center
3	09263-25024	• . Bearing, Pivot (25x33x30)
4	09263-20071	• . Bearing, Rod (20x27x23.5)
5	61251-21E00	Spacer, Pivot
6	08211-20381	Thrust Washer
7	61262-17C00	Dust Seal, Pivot
8	61211-19F00	Shaft, Pivot
9	61214-19F00	Nut, Pivot Bolt
10	08319-31188	Nut
11	61273-19F00	Buffer, Chain Touch Defense
12	09116-06152	Bolt (6x20)
13	09180-06283	Spacer (6.5x10x7)
14	61310-19F00	Case, Chain
15	09139-06083	Screw (6x16)
16	64310-19F00	Torque Link, Rear
17	09111-10051	Bolt, Front (10x39)
18	09100-10187	Bolt, Rear (10x34)
19	08319-31107	Nut
20	61410-33D00	Adjuster, Chain
21	61421-33D01	Plate, Adjuster Guide Rh
22	61422-33D01	Plate, Adjuster Guide Lh
23	09106-08119	Bolt (8x50)
24	09164-08015	Washer

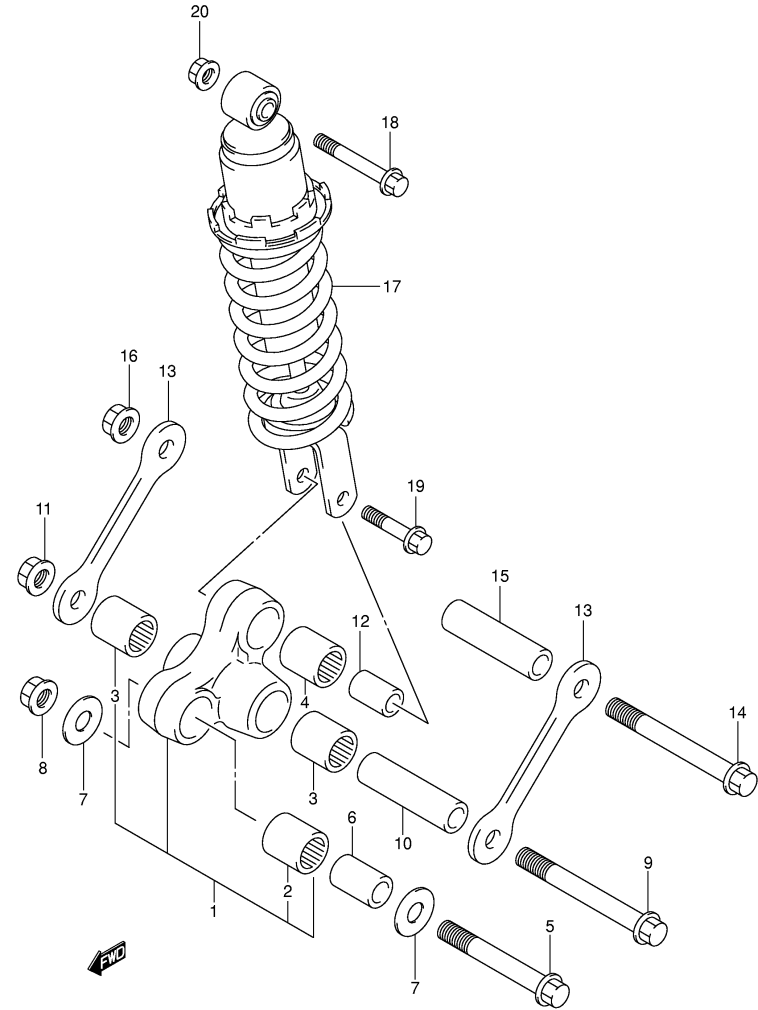


Ref No	Part No	Description
1	62600-19880	Lever Set, Rear Cushion
2	09263-20073	• . Bearing, Front (20x27x30)
3	09263-20071	• . Bearing, Center (20x27x23.5)
4	09263-17034	• . Bearing, Rear (17x24x26)
5	62658-19F00	Bolt, Front (12x78)
6	62684-12C00	Spacer, Front (12x20x32)
7	09160-12037	Washer
8	08319-31128	Nut
9	09103-12034	Bolt, Center (12x96)
10	62626-19F00	Spacer, Center (12x20x68)
11	08319-31128	Nut
12	62684-40A10	Spacer, Rear (10x17x30)
13	62641-20F00	Rod, Rear Cushion
14	09103-12034	Bolt, Rod (12x96)
15	62626-19F00	Spacer, Rod (12x20x68)
16	08319-31128	Nut
17	62100-20F00-163	Absorber Assy, Rear Shock
18	09103-10033	Bolt, Upper (10x70)
19	09103-10126	Bolt, Lower (10x48)
20	08319-31107	Nut

(yellow)

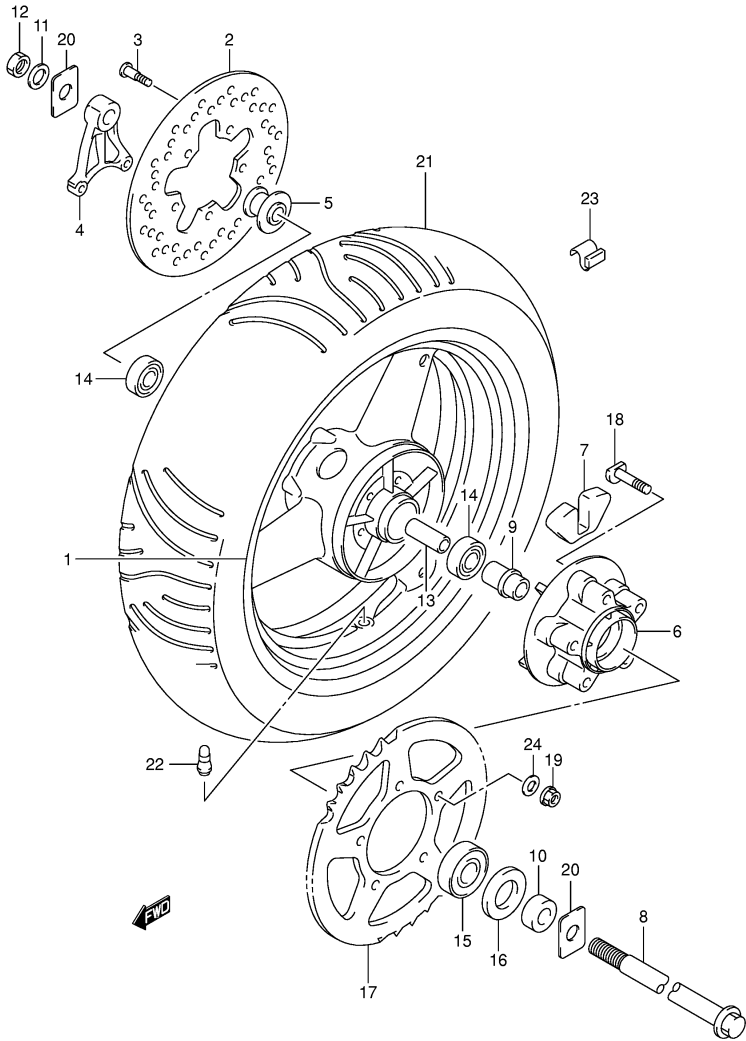


Ref No	Part No	Description
1	64111-08F00-Y6G	Wheel, Rear (17xmt4.50)
2	69211-21E00	Disc, Rear Brake
3	09106-08125	Bolt (8x33)
4	69721-33D00	Bracket, Rear Caliper
5	64740-19C00	Spacer, Rear Axle Rh
6	64611-19F00	Drum, Sprocket Mounting
7	64651-27A01	Absorber, Shock Rear Hub
8	64711-19F00	Axle, Rear
9	64733-34C00	Retainer, Rear Sprocket Drum
10	64741-45D00	Spacer, Rear Axle Lh
11	09160-17050	Washer
12	08319-21168	Nut
13	09180-17067	Spacer (17.5x25x88)
14	08143-63037	Bearing
15	09262-25073	Bearing (25x62x17)
16	09285-35001	Oil Seal (35x62x8)
17	64511-33C01	Sprocket, Rear (nt:44-525)
18	09119-10043	Bolt (10x47)
19	08319-31107	Nut
20	64712-33D00	Washer, Chain Adjuster
21	65110-20F00	Tire, Rear,160/60 Zr17(69w)
22	43130-24A00	Valve Assy, Wheel Rim (tr412)
23	55411-00A00	Balancer, Wheel (10g)
23	55412-00A01	Balancer, Wheel (20g)
24	09160-10506	Washer

Ref No	Part No	Description
	69100-05CD0	Caliper Assy, Rear
1	69100-05850	• . Piston Set
2	69100-32820	• . Seal Set, Piston
3	69100-21820	• . Pad Set
4	59145-05C50	• . Bolt
5	59143-16700	• . Spring
6	69141-45000	• . Pin
7	69142-45000	• . Clip
8	59151-16701	• . Cover
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	59371-20C00	• . Shim, Inner
12	59381-20C00	• . Shim, Outer
13	01550-08303	Bolt

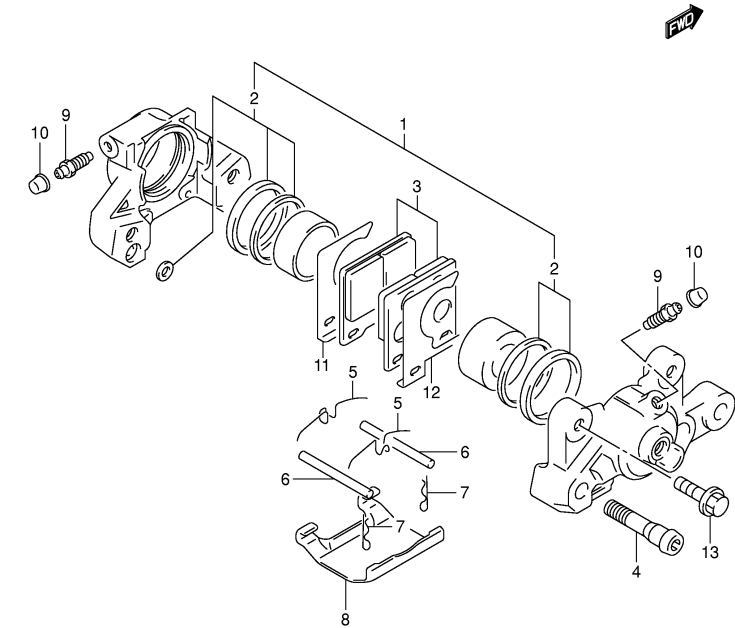


Catalogue Title:
SV650Y (SV650Y E2)

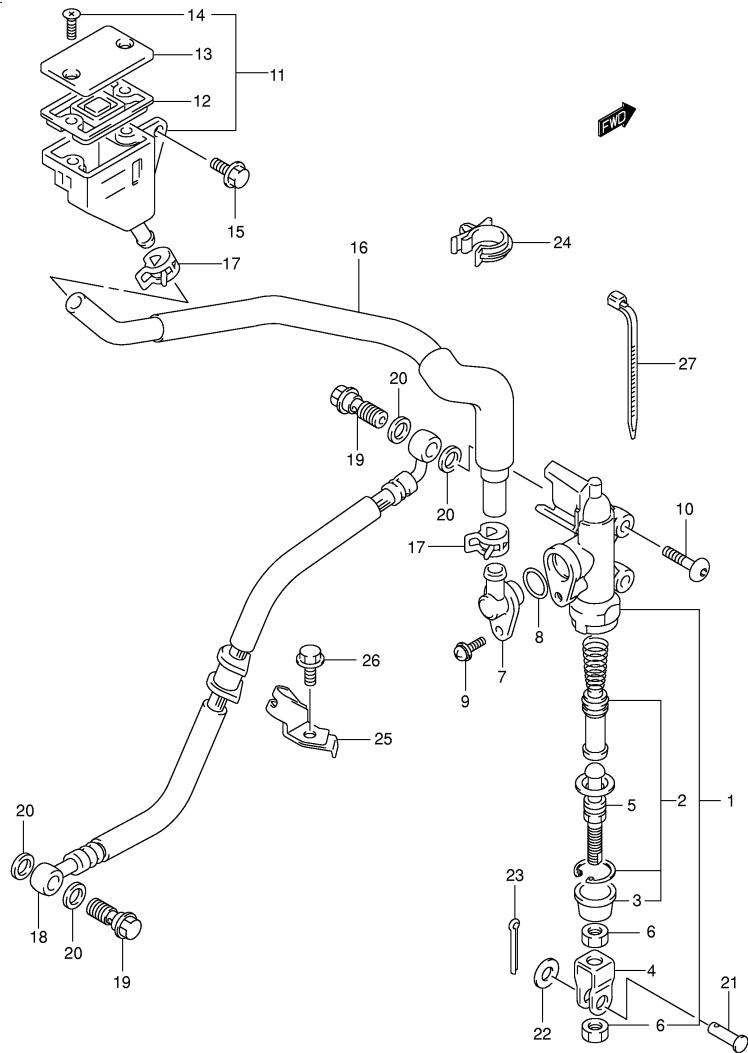

Block No.
FIG58

Block Title.
REAR MASTER CYLINDER

Ref No	Part No	Description
1	69600-33C00	Cylinder Assy, Rear Master
2	69600-04820	• . Piston/cup Set
3	69691-00A00	• . Boot
4	69692-27A30	• . Yoke
5	69670-48B00	• . Rod, Push
6	69693-05A00	• . Nut
7	69672-05A00	• . Connector
8	69686-34200	• . O Ring
9	02112-74123	• . Screw
10	09139-06028	Screw (6x20)
11	69740-19F00	Tank Assy, Reservoir
12	59667-04700	• . Diaphragm
13	59669-05D00	• . Cap
14	69689-04A00	• . Screw
15	01550-06123	Bolt
16	69730-19F00	Hose, Reservoir Tank
17	09401-13417	Clip
18	69480-19F00	Hose, Rear Brake
19	09360-10041	Union Bolt (10x1.00x22)
20	09161-10009	Washer (10x15x1.5)
21	09200-06037	Pin
22	08322-01063	Washer
23	04111-20158	Cotter Pin
24	09403-16307	Clamp
25	69268-19F00	Clamp, Rear Brake Hose
26	01547-06163	Bolt
27	09407-18402	Clamp

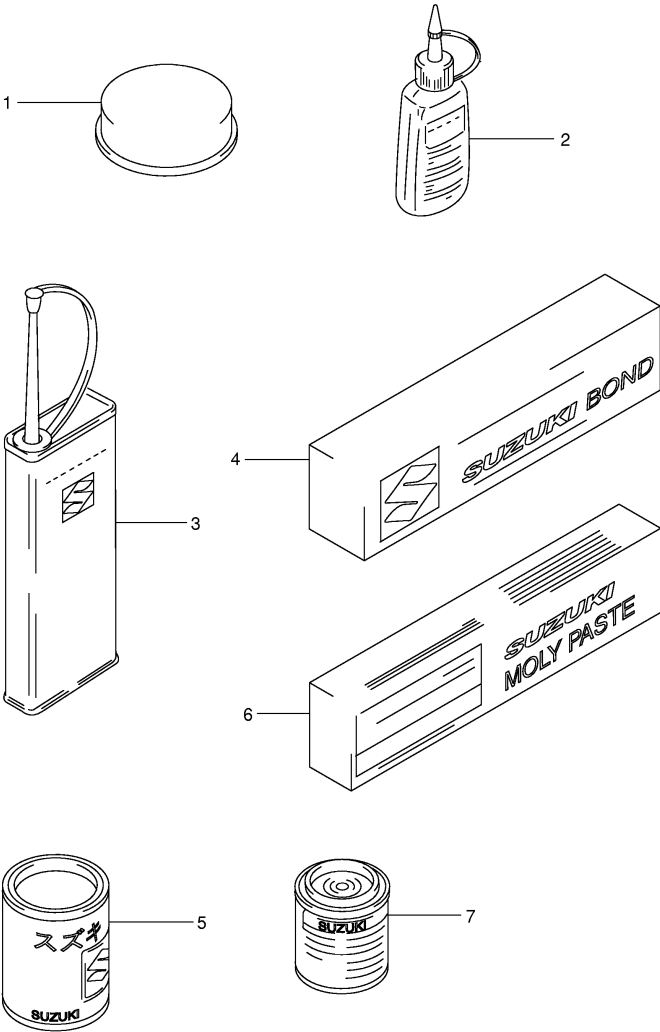

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99000-32020	Thread Lock Super (1333b)
2	99000-32030	Thread Lock Super (1303b)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b) Black
4	99000-31110	Suzuki Bond (1215)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10209-Y7E	Paint (candy Jay Blue)
7	99000-10209-Y7L	Paint (saturn Black Metallic)
7	99000-10209-Y7M	Paint (pearl Helios Red)
7	99000-10209-Y9F	Paint (pearl Canyon Yellow)
7	99000-10209-35W	Paint (charcoal Gray Metallic)
7	99000-10209-13L	Paint (bright Silver Metallic)
7	99000-10209-YC2	Paint (candy Grand Blue)
7	99000-10209-YEX	Paint (candy Grand Blue)
7	99000-10209-YFX	Paint (saturn Black Metallic)
7	99000-10209-19A	Paint (candy Antares Red)
7	99000-10209-Y9H	Paint (pearl Lively Yellow)
7	99000-10209-YD8	Paint (sonic Silver Metallic)