YAMAHA

PARTS CATALOGUE

YQ50 (3C6F) AUSTRALIA
YQ50 (3C6F) EUROPE
YQ50 (3C6H) ISRAEL
YQ50 (3C6H) SWITZERLAND

1F3C6-300E1

(2F3C6-300E1)

YAMAHA GENUINE Parts & Accessories

A2

YQ50
PARTS CATALOGUE
©2006 by MBK Industrie
1st edition, November 2006
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
MBK Industrie
is expressly prohibited.

A3

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

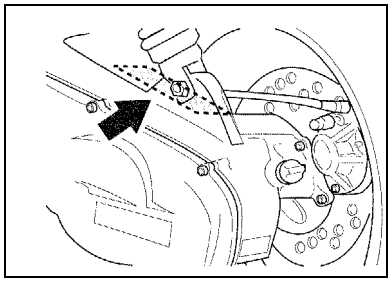

Frame Serial No.

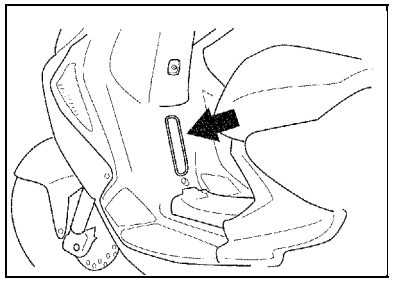

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
MBL2	MAT BLACK 2	0582
PWS1(*)	PURPLISH WHITE SOLID 1	0206
SMX(*)	BLACK METALLIC X	0903
VPBC3(*)	VIVID PURPLISH BLUE CANDY 3	0935
VRSA	VIVID RED SOLID A	0430

MODEL LABEL

(1) A label called “Model Label” is affixed in the location as indicated in (3) below.
When using this parts catalogue, please be sure to cross–reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.

(2) “Model Label” Indication

a b
○ xxxx – xxx
● x c

a: Model Type Code
b: Production Code No.
c: Colouring Type

○ 4TW1–010
● A

(3) Model Label Affixing Location

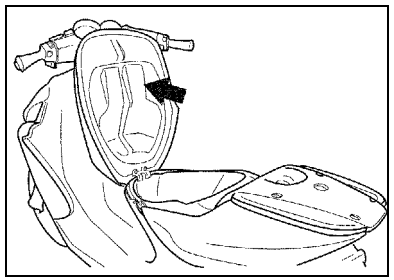

(4) Colouring Information

Model Code	Colouring Type Code	Colour Code	Colour Name	Abbreviation
3C6F	A	0206	PURPLISH WHITE SOLID 1	PWS1
	B	0903	BLACK METALLIC X	SMX
	C	0935	VIVID PURPLISH BLUE CANDY 3	VPBC3
3C6H	A	0206	PURPLISH WHITE SOLID 1	PWS1
	B	0903	BLACK METALLIC X	SMX
	C	0935	VIVID PURPLISH BLUE CANDY 3	VPBC3

(5) Model Code – Production Code Number of Model Listed in This Parts Catalogue

Model Code	Production Code No.	Country (destination)
3C6F	010	AUSTRIA
		FRANCE
		ITALY
		SPAIN
	020	GERMANY
	030	HUNGARY
		UNITED KINGDOM
	040	PORTUGAL
	050	SWEDEN
	060	CZECHO
		FINLAND
		GREECE
		IRELAND
		POLAND
		SLOVENIA
		UKRAINE
	070	NETHERLANDS
	080	BELGIUM
	090	AUSTRALIA
3C6H	010	SWITZERLAND
	020	ISRAEL

Model Code	Production Code No.	Country (destination)

CONTENTS

ENGINE

CYLINDER HEAD B2
CRANKSHAFT & PISTON B3
WATER PUMP B4
RADIATOR & HOSE B5
OIL PUMP B6
INTAKE B7
INTAKE 2 ..... B8
CARBURETOR B9
CARBURETOR 2 ..... B10
EXHAUST B11
EXHAUST 2 ..... B13
CRANKCASE B14
STARTER C2
CLUTCH C3
TRANSMISSION C5

CHASSIS

FRAME C6
FRONT FENDER C7
SIDE COVER C8
OIL TANK C9
REAR SUSPENSION C10
FRONT FORK C11
FUEL TANK C13
SEAT & CARRIER C14
FRONT WHEEL D2
FRONT BRAKE CALIPER D3
REAR WHEEL D4
REAR BRAKE CALIPER D5
STEERING HANDLE & CABLE D6
FRONT MASTER CYLINDER D7
STAND & FOOTREST D8
REAR MASTER CYLINDER D9
LEG SHIELD D10
COWLING 1 ..... D12
GENERATOR D13
FLASHER LIGHT D14
METER D15
HEADLIGHT E2
TAILLIGHT E3
HANDLE SWITCH & LEVER E4
ELECTRICAL 1 ..... E5
ELECTRICAL 2 ..... E6
GRAPHIC & EMBLEM E7

INDEX

NUMERICAL INDEX M1

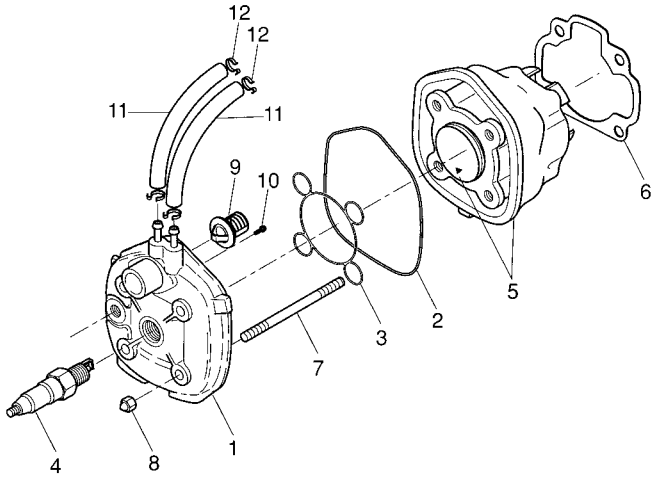

5BR1354-7010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5HE–E1111–00	HEAD, CYLINDER 1	1	1	1	1	1	
2	5BR–E1194–00	GASKET, HEAD COVER 2	1	1	1	1	1	
3	5BR–E1193–00	GASKET, HEAD COVER 1	1	1	1	1	1	
4	94701–00195	PLUG,SPARK(NGK BR8HS)	1	1	1	1	1	
5	5BR–E1311–00	CYLINDER 1	1	1	1	1	1	
6	5BR–E1351–00	GASKET, CYLINDER	1	1	1	1	1	
7	90116–07353	BOLT, STUD	4	4	4	4	4	
8	90179–07381	NUT	4	4	4	4	4	
9	5BR–E2410–00	THERMOSTAT ASSY	1	1	1	1	1	
10	98907–04010	SCREW, BIND	2	2	2	2	2	
11	5BR–E4148–10	PIPE	2	2	2	2	2	
12	5BR–E4159–00	CLIP	4	4	4	4	4	

FIG. 2 CRANKSHAFT & PISTON

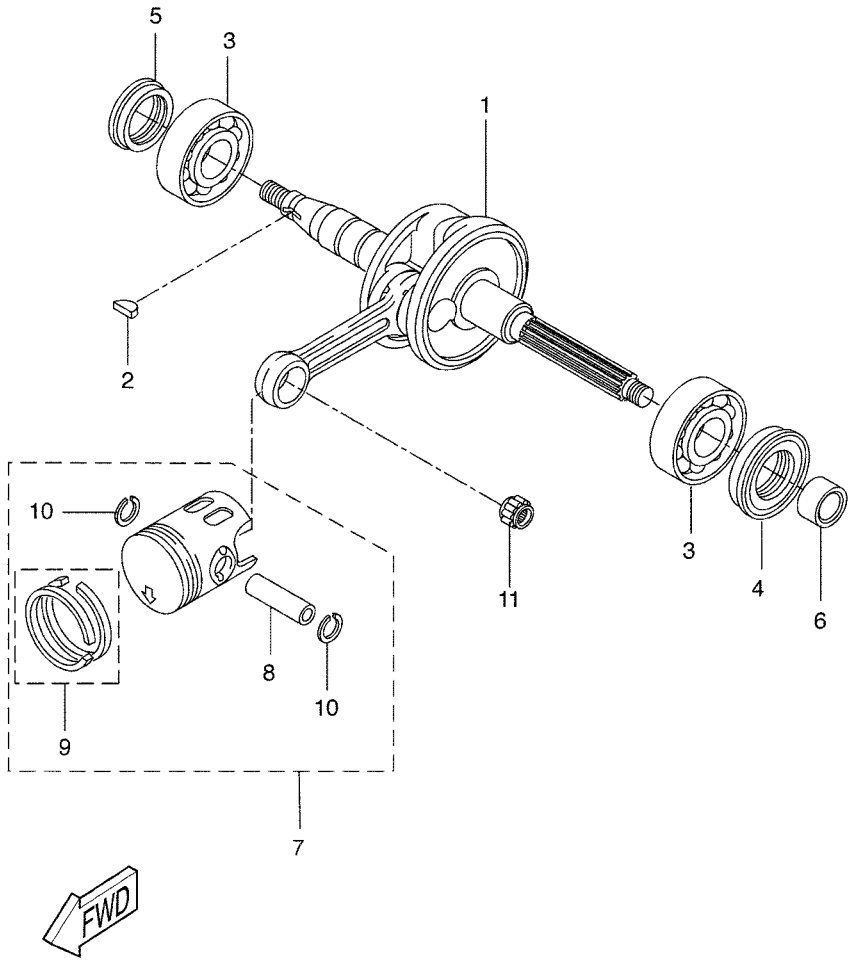

5BR1354-7022

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5RN–E1400–00	CRANKSHAFT ASSY	1	1	1	1	1	
2	90280–03X00	KEY, WOODRUFF	1	1	1	1	1	
3	93306–204X7	BEARING	2	2	2	2	2	
4	93102–20425	OIL SEAL	1	1	1	1	1	
5	93101–20138	OIL SEAL	1	1	1	1	1	
6	90387–156U0	COLLAR	1	1	1	1	1	
7	5HE–E1631–00	PISTON (STD)	1	1	1	1	1	UR
	5HE–E1636–00	PISTON (0.50MM O/S)	1	1	1	1	1	UR
8	5PF–E1633–00	.PIN, PISTON	1	1	1	1	1	
9	4SB–E1603–00	.PISTON RING SET (STD)	1	1	1	1	1	UR
	4SB–E1605–00	.PISTON RING SET (0.50MM O/S)	1	1	1	1	1	UR
10	93450–11818	.CIRCLIP	2	2	2	2	2	
11	93310–210X4	BEARING	1	1	1	1	1	

FIG. 3 WATER PUMP

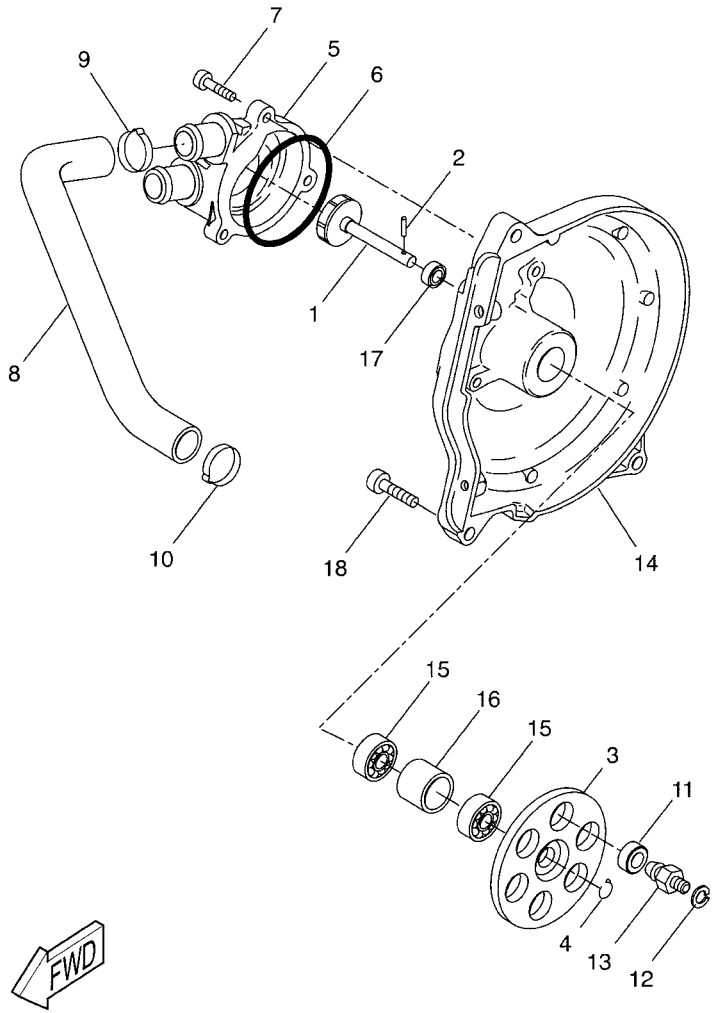

3C61300-D030

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–E2450–00	IMPELLER SHAFT ASSY	1	1	1	1	1	
2	93603–22X00	PIN, DOWEL	1	1	1	1	1	
3	5BR–E2459–00	GEAR, IMPELLER SHAFT	1	1	1	1	1	
4	93440–08130	CIRCLIP	1	1	1	1	1	
5	5BR–E2422–00	COVER, HOUSING	1	1	1	1	1	
6	93210–548E8	O-RING	1	1	1	1	1	
7	91317–05020	BOLT	3	3	3	3	3	
8	5BR–E2483–00	PIPE 3	1	1	1	1	1	
9	90450–22X02	HOSE CLAMP ASSY	1	1	1	1	1	
10	90450–22X02	HOSE CLAMP ASSY	1	1	1	1	1	
11	90480–06874	GROMMET	3	3	3	3	3	
12	92990–06100	WASHER, SPRING	3	3	3	3	3	
13	90109–06X00	BOLT	3	3	3	3	3	
14	5BR–E5421–00	COVER, CRANKCASE 2	1	1	1	1	1	
15	93306–082Y0	BEARING	2	2	2	2	2	
16	90387–178S8	COLLAR	1	1	1	1	1	
17	93101–10842	OIL SEAL	1	1	1	1	1	
18	90110–06X04	BOLT, HEXAGON SOCKET HEAD	3	3	3	3	3	

FIG. 4 RADIATOR & HOSE

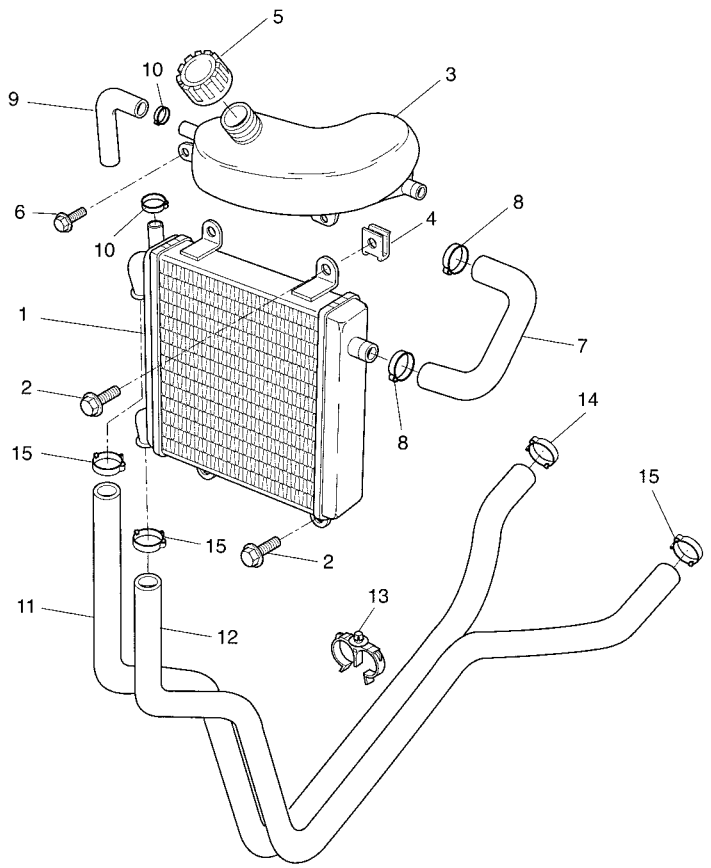

5BR1354-7040

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–E2460–01	RADIATOR ASSY	1	1	1	1	1	
2	90105–06841	BOLT, FLANGE	4	4	4	4	4	
3	5BR–E2490–01	TANK ASSY	1	1	1	1	1	
4	90183–06X00	NUT, SPRING	1	1	1	1	1	
5	5BR–E2567–01	CAP, WATER	1	1	1	1	1	
6	90105–06841	BOLT, FLANGE	1	1	1	1	1	
7	5BR–E243A–10	HOSE 1	1	1	1	1	1	
8	90467–17800	CLIP	2	2	2	2	2	
9	5BR–E2589–10	HOSE 6	1	1	1	1	1	
10	5BR–E2487–10	CLIP 2	2	2	2	2	2	
11	5BR–E2485–10	PIPE 5	1	1	1	1	1	
12	5BR–E2484–10	PIPE 4	1	1	1	1	1	
13	5BR–E2486–00	CLIP	2	2	2	2	2	
14	90450–23X01	HOSE CLAMP ASSY	1	1	1	1	1	
15	90450–21X01	HOSE CLAMP ASSY	3	3	3	3	3	

FIG. 5 OIL PUMP

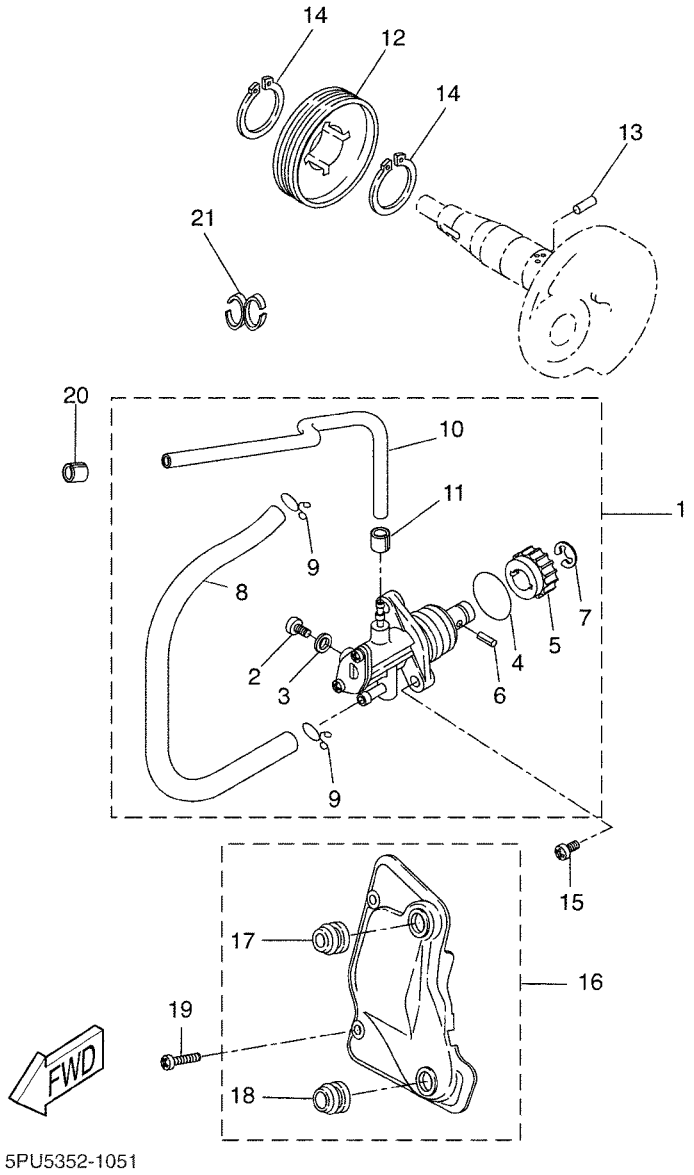

5PU5352-1051

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5PE–E3100–00	OIL PUMP ASSY	1	1	1	1	1	
2	1YU–13185–00	.BOLT, BREATHER	1	1	1	1	1	
3	1YU–13187–00	.GASKET, BREATHER BOLT	1	1	1	1	1	
4	1YU–13473–00	.O-RING	1	1	1	1	1	
5	3AA–13124–00	.GEAR WORM WHEEL (40T)	1	1	1	1	1	
6	1YU–13516–00	.PIN, DOWEL	1	1	1	1	1	
7	1YU–13577–00	.CLIP	1	1	1	1	1	
8	90445–096K0	.HOSE (L310)	1	1	1	1	1	
9	90467–08003	.CLIP	2	2	2	2	2	
10	90445–05431	.HOSE (L240)	1	1	1	1	1	
11	90468–02033	.CLIP	1	1	1	1	1	
12	3VL–E3178–00	GEAR, PUMP DRIVE	1	1	1	1	1	
13	93603–12007	PIN, DOWEL	1	1	1	1	1	
14	99009–19400	CIRCLIP	2	2	2	2	2	
15	98507–05014	SCREW, PAN HEAD	2	2	2	2	2	
16	5BR–E3141–00	COVER, PUMP CASE	1	1	1	1	1	
17	90480–13875	.GROMMET	1	1	1	1	1	
18	90480–13876	.GROMMET	1	1	1	1	1	
19	98907–05014	SCREW, BIND	2	2	2	2	2	
20	90468–02X00	CLIP	1	1	1	1	1	
21	5BR–E3487–00	GUIDE, OIL HOSE					1	

FIG. 6 INTAKE

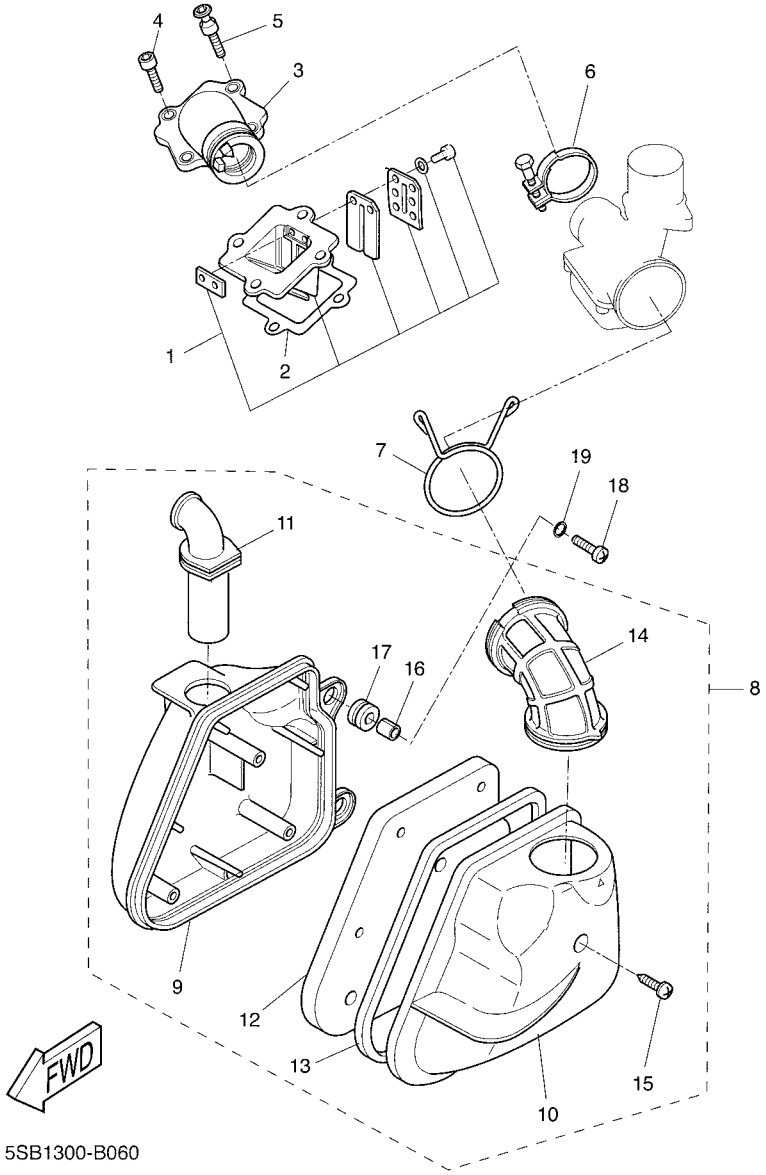

5SB1300-B060

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	4CU–E3610–00	REED VALVE ASSY	1	1	1	1		
2	4CU–E3621–00	GASKET, VALVE SEAT	1	1	1	1		
3	4CU–E3555–00	MANIFOLD, INTAKE	1	1	1	1		
4	90110–06X03	BOLT, HEXAGON SOCKET HEAD	2	2	2	2		
5	90149–06X02	SCREW	2	2	2	2		
6	90450–32X02	HOSE CLAMP ASSY	1	1	1	1		
7	90467–24X00	CLIP	1	1	1	1		
8	5BR–E4410–20	AIR CLEANER ASSY.	1	1	1	1		
9	3WG–E4411–00	.CASE, AIR CLEANER 1	1	1	1	1		
10	3WG–E4412–00	.CAP, CLEANER CASE 1	1	1	1	1		
11	3WG–E4437–00	.DUCT	1	1	1	1		
12	3WG–E4451–00	.ELEMENT, AIR CLEANER	1	1	1	1		
13	3WG–E4452–00	.SEAL	1	1	1	1		
14	3YJ–E4453–00	.JOINT, AIR CLEANER 1	1	1	1	1		
15	9770L–50525	.SCREW, TAPPING	3	3	3	3		
16	90387–06X06	.COLLAR	2	2	2	2		
17	90480–12X00	.GROMMET	2	2	2	2		
18	98507–06020	SCREW, PAN HEAD	2	2	2	2		
19	92907–06600	WASHER, PLATE	2	2	2	2		

FIG. 7 INTAKE 2

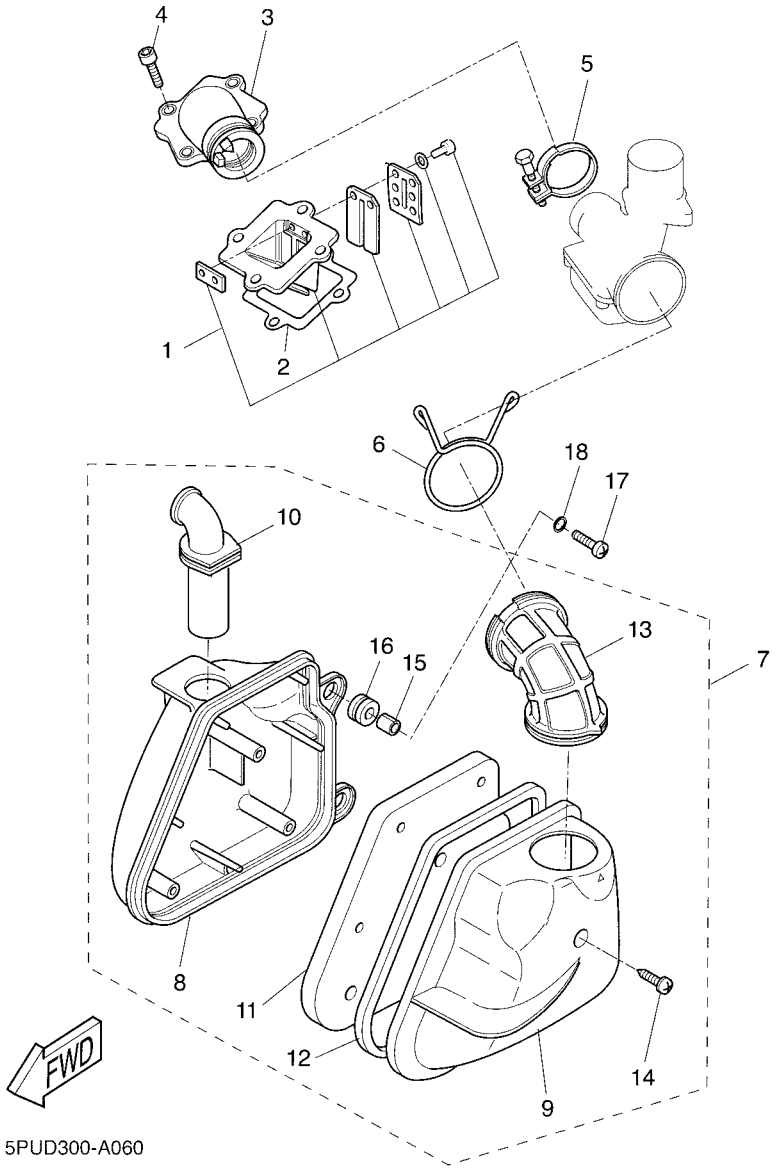

5PUD300-A060

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	4CU–E3610–00	REED VALVE ASSY					1	
2	4CU–E3621–00	GASKET, VALVE SEAT					1	
3	4CU–E3555–00	MANIFOLD, INTAKE					1	
4	90110–06X03	BOLT, HEXAGON SOCKET HEAD					4	
5	90450–32X02	HOSE CLAMP ASSY					1	
6	90467–24X00	CLIP					1	
7	5BR–E4410–01	AIR CLEANER ASSY.					1	
8	3WG–E4411–00	.CASE, AIR CLEANER 1					1	
9	3WG–E4412–00	.CAP, CLEANER CASE 1					1	
10	4JC–E4437–00	.DUCT					1	
11	3WG–E4451–00	.ELEMENT, AIR CLEANER					1	
12	3WG–E4452–00	.SEAL					1	
13	3YJ–E4453–00	.JOINT, AIR CLEANER 1					1	
14	9770L–50525	.SCREW, TAPPING					3	
15	90387–06X06	.COLLAR					2	
16	90480–12X00	.GROMMET					2	
17	98507–06020	SCREW, PAN HEAD					2	
18	92907–06600	WASHER, PLATE					2	

FIG. 8 CARBURETOR

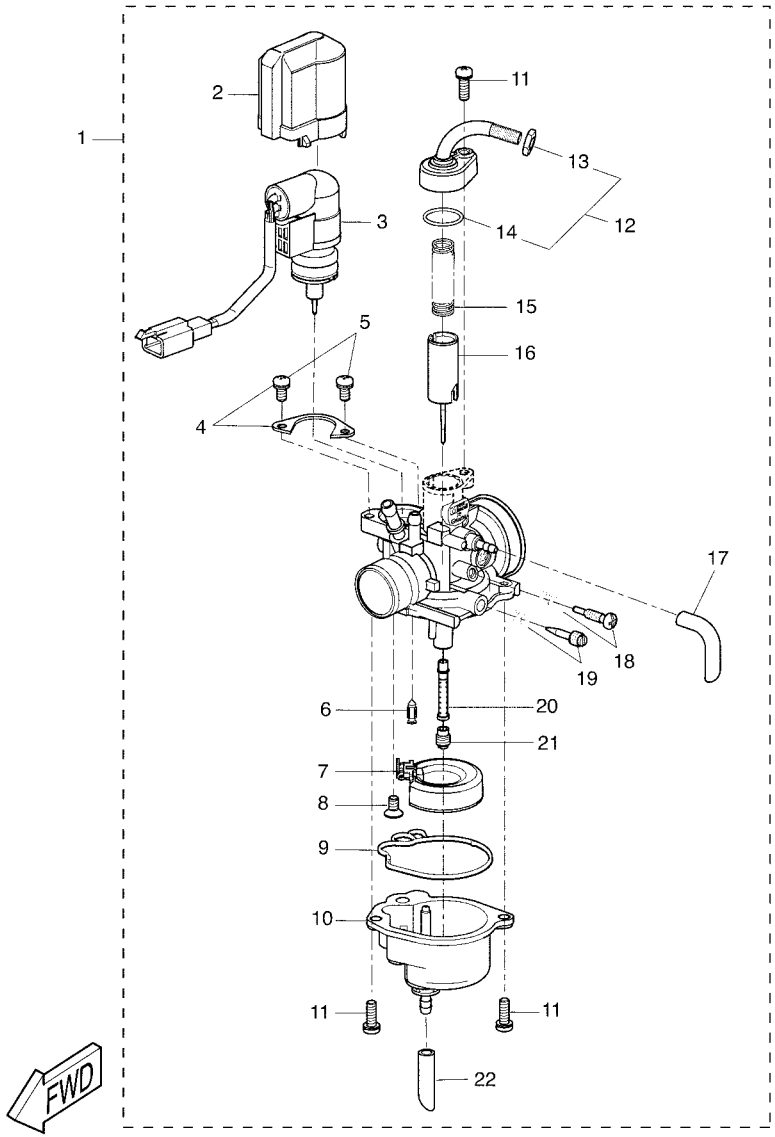

5SB1300-B070

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5SB–E4301–01	CARBURETOR ASSY 1	1	1	1	1		
2	5EU–E4205–00	.CAP, STARTER	1	1	1	1		
3	5EU–E410A–00	.STARTER SET	1	1	1	1		
4	5EU–E4243–00	.PLATE	1	1	1	1		
5	5EU–E4216–20	..SCREW	2	2	2	2		
6	5SB–E4G92–00	.VALVE, NEEDLE	1	1	1	1		
7	5SB–E4G85–00	.FLOAT	1	1	1	1		
8	5EU–E4216–10	.SCREW	1	1	1	1		
9	5EU–E4384–00	.GASKET, FLOAT CHAMBER	1	1	1	1		
10	5RN–E4G81–01	.BODY, FLOAT CHAMBER	1	1	1	1		
11	5EU–E4216–00	.SCREW	3	3	3	3		
12	5EU–E4369–00	.DIAPHRAGM ASSY 2	1	1	1	1		
13	5SB–E4G63–00	..NUT	1	1	1	1		
14	5EU–E4198–00	..GASKET	1	1	1	1		
15	5EU–E4331–00	.SPRING, THROTTLE VALVE	1	1	1	1		
16	5RN–E4G12–30	.VALVE,THROTTLE 1	1	1	1	1		
17	5EU–E414H–00	.HOSE	1	1	1	1		
18	5SB–E4G21–00	.SCREW, THROTTLE	1	1	1	1		
19	5SB–E4G23–00	.SCREW, AIR ADJUSTING	1	1	1	1		
20	5EU–E4341–00	.NOZZLE, MAIN	1	1	1	1		
21	5SB–E4G43–31	.JET, MAIN	1	1	1	1		
22	5EU–E4396–00	.PIPE	1	1	1	1		

FIG. 9 CARBURETOR 2

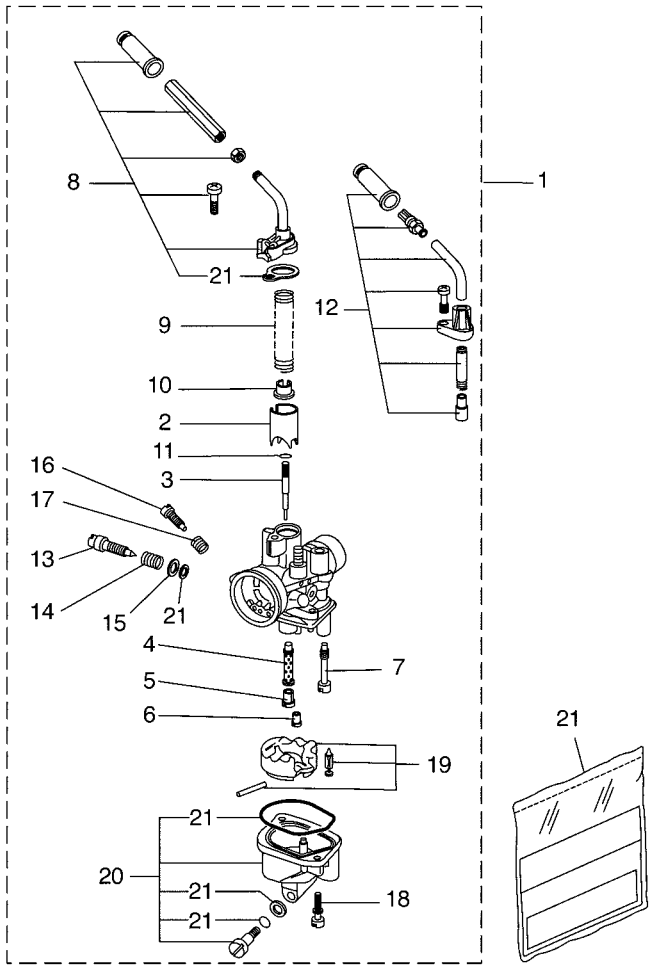

5WJ5300-B090

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5WJ–E4D01–00	CARBURETOR ASSY 1					1	
2	5BR–E4312–00	.VALVE, THROTTLE 1					1	
3	5WJ–14D36–00	.NEEDLE					1	
4	5WJ–14D41–00	.NOZZLE, MAIN					1	
5	5PE–E4D43–42	.JET, MAIN					1	
6	5AD–E4342–00	.JET, PILOT (# 0)					1	
7	5AD–E4344–00	.JET, STARTER (# 0)					1	
8	5DN–E4369–01	.DIAPHRAGM ASSY 2					1	
9	4SB–E4331–01	.SPRING, THROTTLE VALVE					1	
10	4SB–E4377–00	.STOPPER					1	
11	4SB–E4137–00	.CLIP					1	
12	5DU–E4368–00	.DIAPHRAGM ASSY 1					1	
13	4SB–E4103–01	.THROTTLE SCREW SET					1	
14	4SB–E4133–01	.SPRING, THROTTLE STOP					1	
15	4SB–E4357–00	.WASHER, PLAIN					1	
16	4SB–E4104–00	.AIR SCREW SET					1	
17	4SB–E4134–00	.SPRING, AIR ADJUSTING					1	
18	5RN–E4D16–00	.SCREW					1	
19	4SB–WE419–00	.FLOAT AND NEEDLE VALVE SET					1	
20	5WJ–14D81–00	.BODY, FLOAT CHAMBER					1	
21	4SB–W0001–00	.GASKET KIT					1	

FIG. 10 EXHAUST

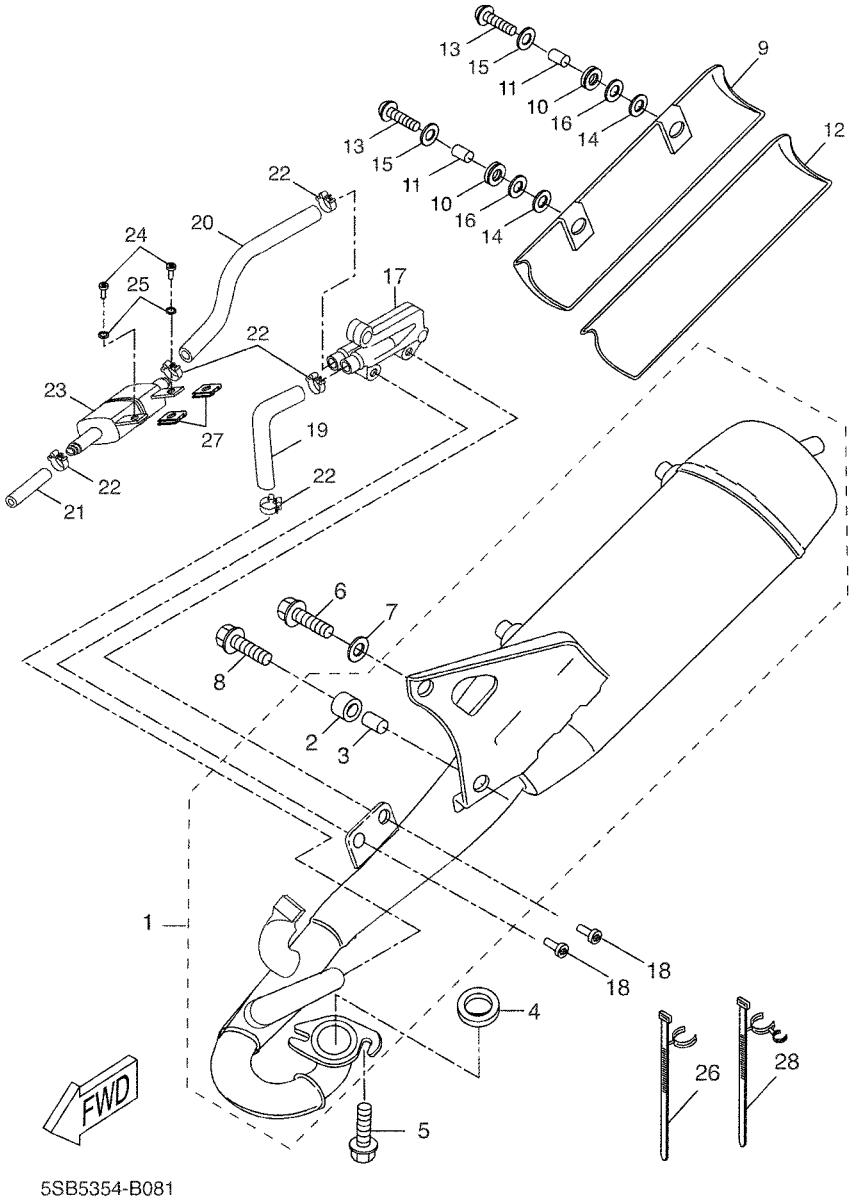

5SB5354-B081

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5SB–E4610–30	EXHAUST PIPE ASSY 1	1	1	1	1		UR
	5SB–E4610–40	EXHAUST PIPE ASSY 1	1	1				UR FOR GER/SWE/NL
2	4MJ–E4445–00	.GROMMET	1	1	1	1		
3	5EU–E4779–00	.COLLAR	1	1	1	1		
4	5AD–E4613–00	GASKET, EXHAUST PIPE	1	1	1	1		
5	90153–06061	SCREW, HEXAGON	2	2	2	2		
6	90149–08X02	SCREW	1	1	1	1		
7	90201–08X09	WASHER, PLATE	1	1	1	1		
8	95817–08040	BOLT, FLANGE	1	1	1	1		
9	5PE–E4729–00	EMBLEM, PROTECTOR	1	1	1	1		
10	90480–11X00	GROMMET	2	2	2	2		
11	90387–06X08	COLLAR	2	2	2	2		
12	5PE–E4747–01	DAMPER, MUFFLER	1	1	1	1		
13	90154–06808	SCREW, BINDING	2	2	2	2		
14	3WG–E4766–00	WASHER, PROTECTOR	2	2	2	2		
15	3WG–E4766–10	WASHER, PROTECTOR	2	2	2	2		
16	90201–06X00	WASHER, PLATE	2	2	2	2		
17	5WW–E4803–10	AIR INDUCTION SYSTEM ASSY	1	1	1	1		
18	90154–06X05	SCREW, BINDING	2	2	2	2		
19	5SB–E4881–00	HOSE, BEND 1	1	1	1	1		
20	5SB–E4882–00	HOSE, BEND 2	1	1	1	1		
21	5SB–E4883–00	HOSE, BEND 3	1	1	1	1		
22	90450–16X00	HOSE CLAMP ASSY	5	5	5	5		
23	5RJ–E4806–00	AIR FILTER	1	1	1	1		
24	90154–06X00	SCREW, BINDING	2	2	2	2		
25	90201–06X05	WASHER, PLATE	2	2	2	2		
26	90464–50X02	CLAMP	1	1	1	1		Lg : 219.50

FIG. 10 EXHAUST

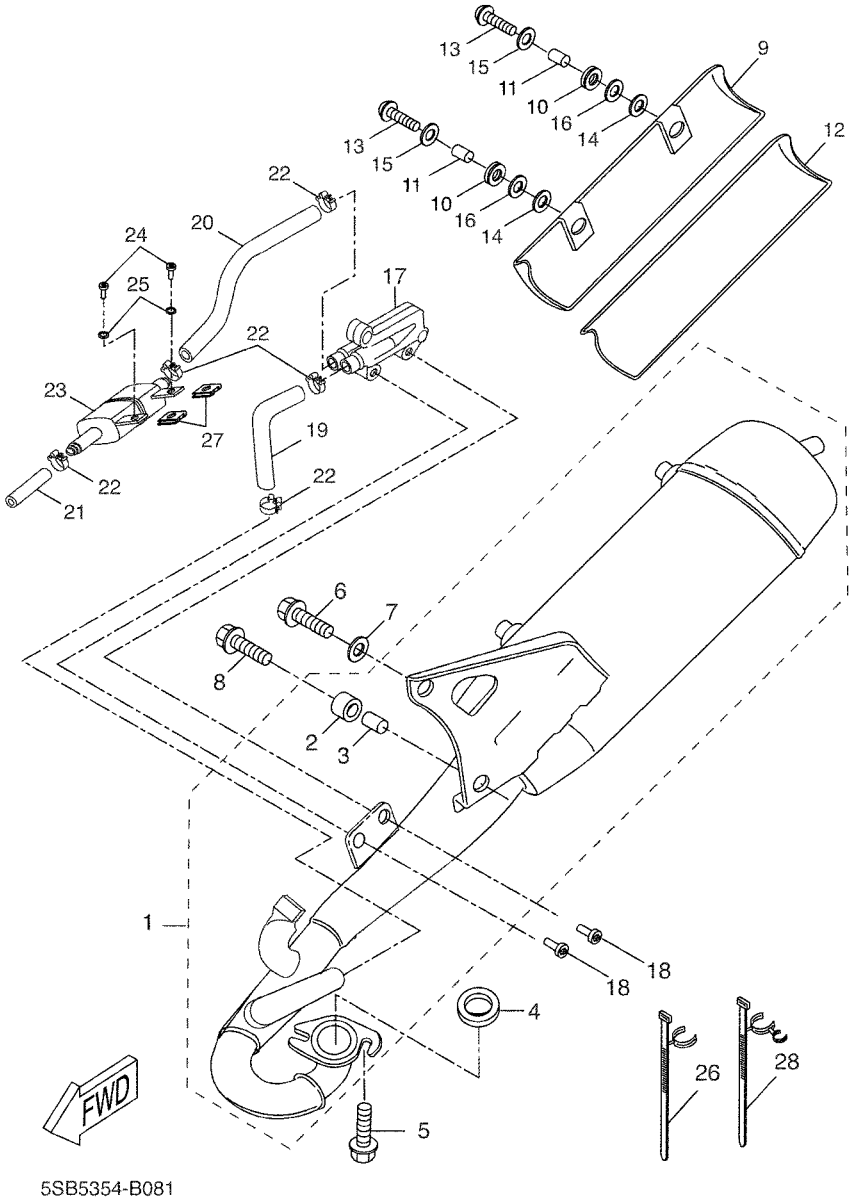

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
27	90179–06X05	NUT	2	2	2	2		
28	90464–23X00	CLAMP	1	1	1	1		

FIG. 11 EXHAUST 2

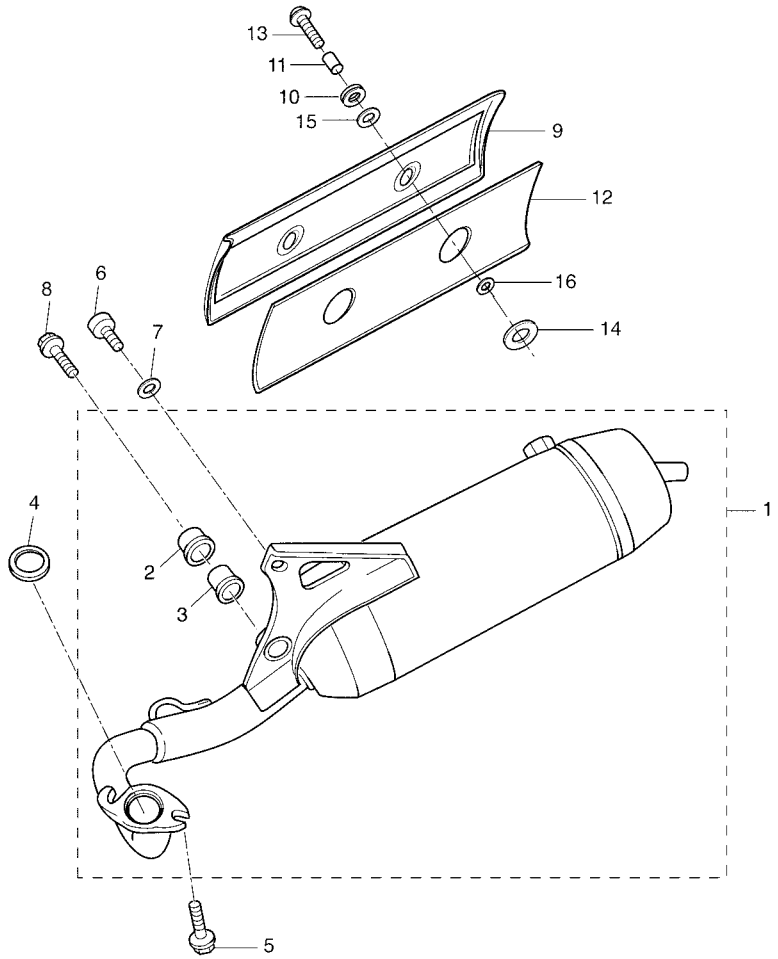

5PE1300-0080

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5PE–E4610–20	EXHAUST PIPE ASSY 1					1	
2	4MJ–E4445–00	.GROMMET					1	
3	5EU–E4779–00	.COLLAR					1	
4	5AD–E4613–00	GASKET, EXHAUST PIPE					1	
5	90153–06061	SCREW, HEXAGON					2	
6	90149–08X02	SCREW					1	
7	90201–08X09	WASHER, PLATE					1	
8	95817–08040	BOLT, FLANGE					1	
9	5PE–E4729–00	EMBLEM, PROTECTOR					1	
10	90480–11X00	GROMMET					2	
11	90387–06X08	COLLAR					2	
12	5PE–E4747–01	DAMPER, MUFFLER					1	
13	90154–06808	SCREW, BINDING					2	
14	3WG–E4766–00	WASHER, PROTECTOR					2	
15	3WG–E4766–10	WASHER, PROTECTOR					2	
16	90201–06X00	WASHER, PLATE					2	

FIG. 12 CRANKCASE

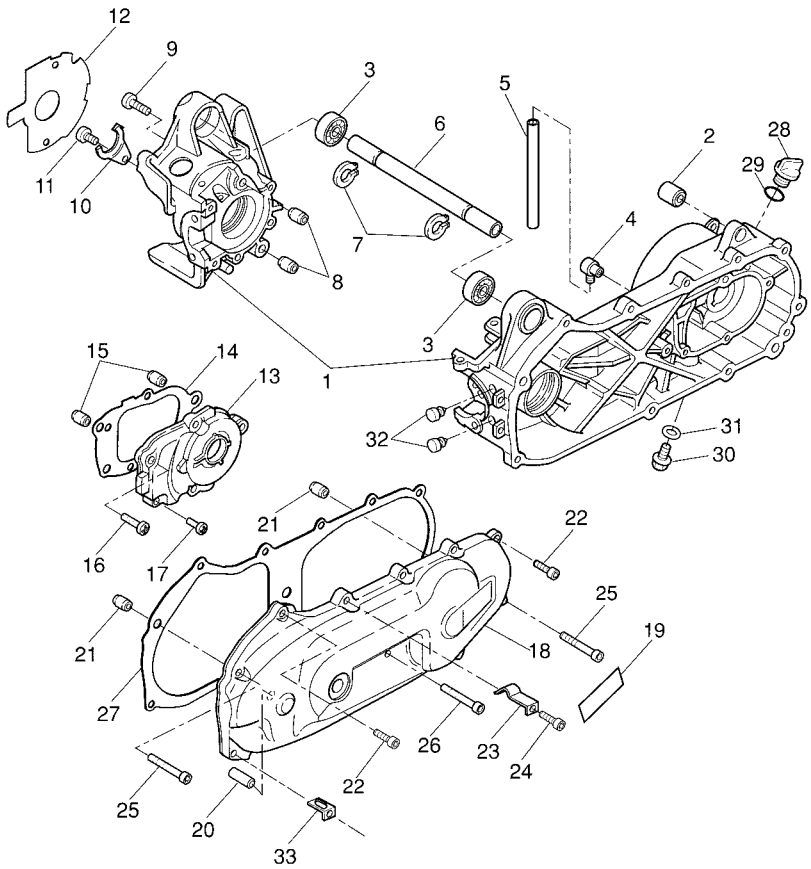

5BR1354-7091

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5DN–E5150–00	CRANKCASE ASSY	1	1	1	1	1	
2	4X6–F2216–00	BUSH, REAR SHOCK ABSORBER	1	1	1	1	1	
3	93306–003YC	BEARING	2	2	2	2	2	
4	3VL–E5371–00	BREATHER	1	1	1	1	1	
5	90446–13311	HOSE	1	1	1	1	1	
6	4CU–E5317–00	SPACER, ENGINE MOUNT	1	1	1	1	1	
7	99009–17400	CIRCLIP	2	2	2	2	2	
8	99530–12016	PIN, DOWEL	2	2	2	2	2	
9	90110–06X06	BOLT, HEXAGON SOCKET HEAD	6	6	6	6	6	
10	3VL–E5128–00	HOLDER	1	1	1	1	1	
11	90110–06X21	BOLT, HEXAGON SOCKET HEAD	1	1	1	1	1	
12	4CU–E5462–00	GASKET, CRANKCASE COVER 3	1	1	1	1	1	
13	3VL–E5421–00	COVER, CRANKCASE 2	1	1	1	1	1	
14	3VL–E5461–00	GASKET, CRANKCASE COVER 2	1	1	1	1	1	
15	91810–14X00	PIN, DOWEL	2	2	2	2	2	
16	90110–06X03	BOLT, HEXAGON SOCKET HEAD	4	4	4	4	4	
17	90110–06X06	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	
18	5BR–E5411–00	COVER, CRANKCASE 1	1	1	1	1	1	UR FOR SMX,VPBC3
	5AD–E5411–00	COVER, CRANKCASE 1	1	1	1	1	1	UR FOR PWS1
19	5BR–E5435–00	EMBLEM	1	1	1	1	1	
20	3VL–E5659–00	SHAFT	1	1	1	1	1	
21	91810–14X00	PIN, DOWEL	2	2	2	2	2	
22	90110–06X04	BOLT, HEXAGON SOCKET HEAD	8	8	8	8	8	UR FOR SMX,VPBC3
	90110–06X08	BOLT, HEXAGON SOCKET HEAD	8	8	8	8	8	UR FOR PWS1
23	5BR–F5876–00	HOLDER, BRAKE HOSE 2	1	1	1	1	1	
24	90110–06X01	BOLT, HEXAGON SOCKET HEAD	1	1	1	1	1	
25	90110–06X06	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	UR FOR SMX,VPBC3

FIG. 12 CRANKCASE

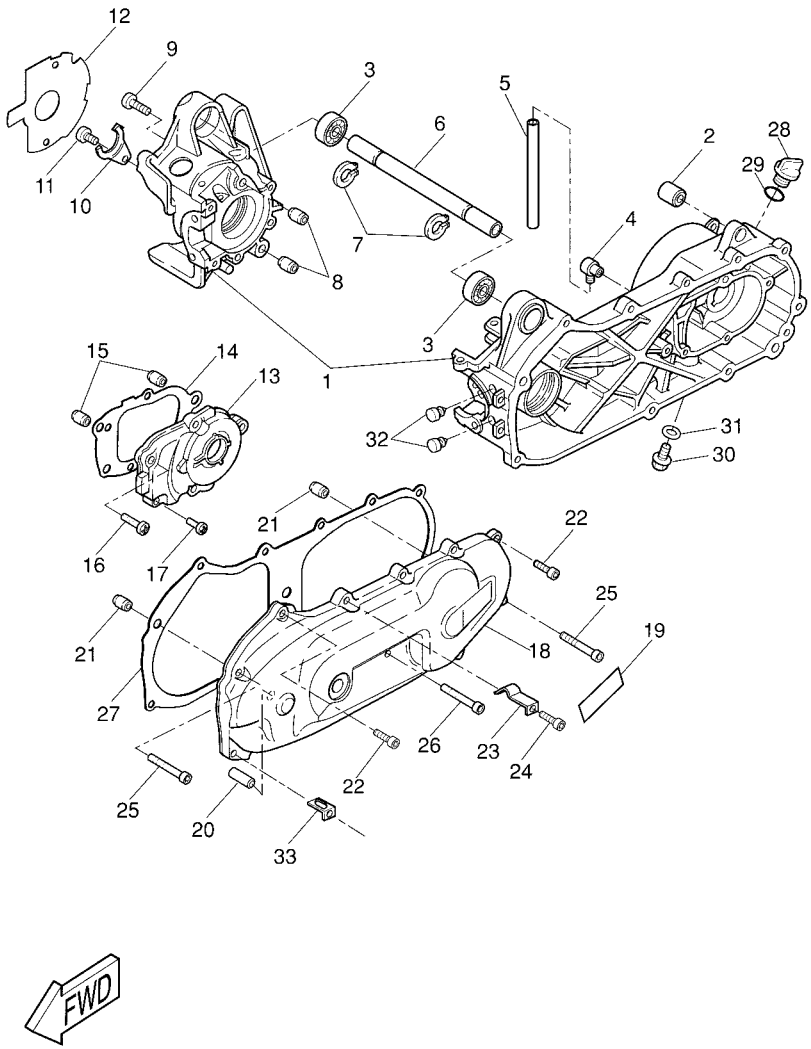

5BR1354-7091

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
25	90110–06X09	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	UR FOR PWS1
26	90110–06X07	BOLT, HEXAGON SOCKET HEAD	1	1	1	1	1	UR FOR SMX,VPBC3
	90110–06X10	BOLT, HEXAGON SOCKET HEAD	1	1	1	1	1	UR FOR PWS1
27	5AD–E5451–00	GASKET, CRANKCASE COVER 1	1	1	1	1	1	
28	3VL–E5363–00	PLUG, OIL	1	1	1	1	1	
29	93210–14X01	O-RING	1	1	1	1	1	
30	90105–08X04	BOLT, FLANGE	1	1	1	1	1	
31	90430–08X00	GASKET	1	1	1	1	1	
32	90480–11877	GROMMET	2	2	2	2	2	
33	5BR–E4459–00	HOLDER, GUIDE	1	1	1	1	1	

FIG. 13 STARTER

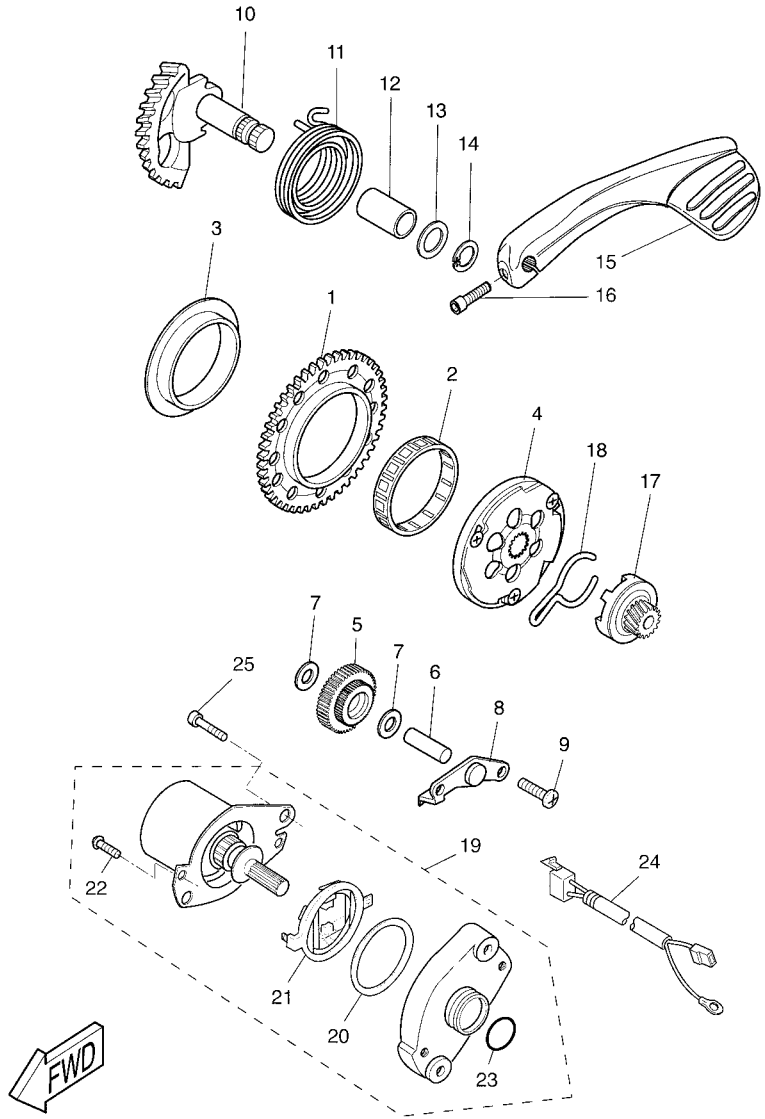

5KFB332-A100

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	3AA–15513–00	GEAR 1 (71T)	1	1	1	1	1	
2	93310–257R1	BEARING	1	1	1	1	1	
3	3KJ–15528–00	BOSS, GEAR	1	1	1	1	1	
4	3VL–15570–00	STARTER CLUTCH ASSY	1	1	1	1	1	
5	4SB–E5650–00	IDLE GEAR ASSY	1	1	1	1	1	
6	3VL–E5659–00	SHAFT	1	1	1	1	1	
7	90201–08X00	WASHER, PLATE	2	2	2	2	2	
8	4CU–E5532–00	PLATE, IDLE GEAR	1	1	1	1	1	
9	90110–06X21	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	
10	5AD–E5601–00	KICK SHAFT ASSY	1	1	1	1	1	
11	90508–32609	SPRING, TORSION	1	1	1	1	1	
12	90380–15X00	BUSH, SOLID	1	1	1	1	1	
13	90201–155G5	WASHER, PLATE	1	1	1	1	1	
14	99009–15400	CIRCLIP	1	1	1	1	1	
15	5FX–E5620–20	KICK CRANK ASSY	1	1	1	1	1	UR FOR SMX,VPBC3
	5FX–E5620–11	KICK CRANK ASSY	1	1	1	1	1	UR FOR PWS1
16	90110–06X16	BOLT, HEXAGON SOCKET HEAD	1	1	1	1	1	
17	4SB–E5631–00	GEAR, KICK PINION	1	1	1	1	1	
18	3VL–E5673–00	CLIP	1	1	1	1	1	
19	5BM–H1800–00	STARTING MOTOR ASSY	1	1	1	1	1	
20	5BM–81861–00	.GASKET	1	1	1	1	1	
21	5BM–81801–01	.BRUSH SET	1	1	1	1	1	
22	98507–04008	.SCREW, PAN HEAD	2	2	2	2	2	
23	93210–23614	.O-RING	1	1	1	1	1	
24	4CU–H2541–00	WIRE, LEAD	1	1	1	1	1	
25	90110–06X03	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	

FIG. 14 CLUTCH

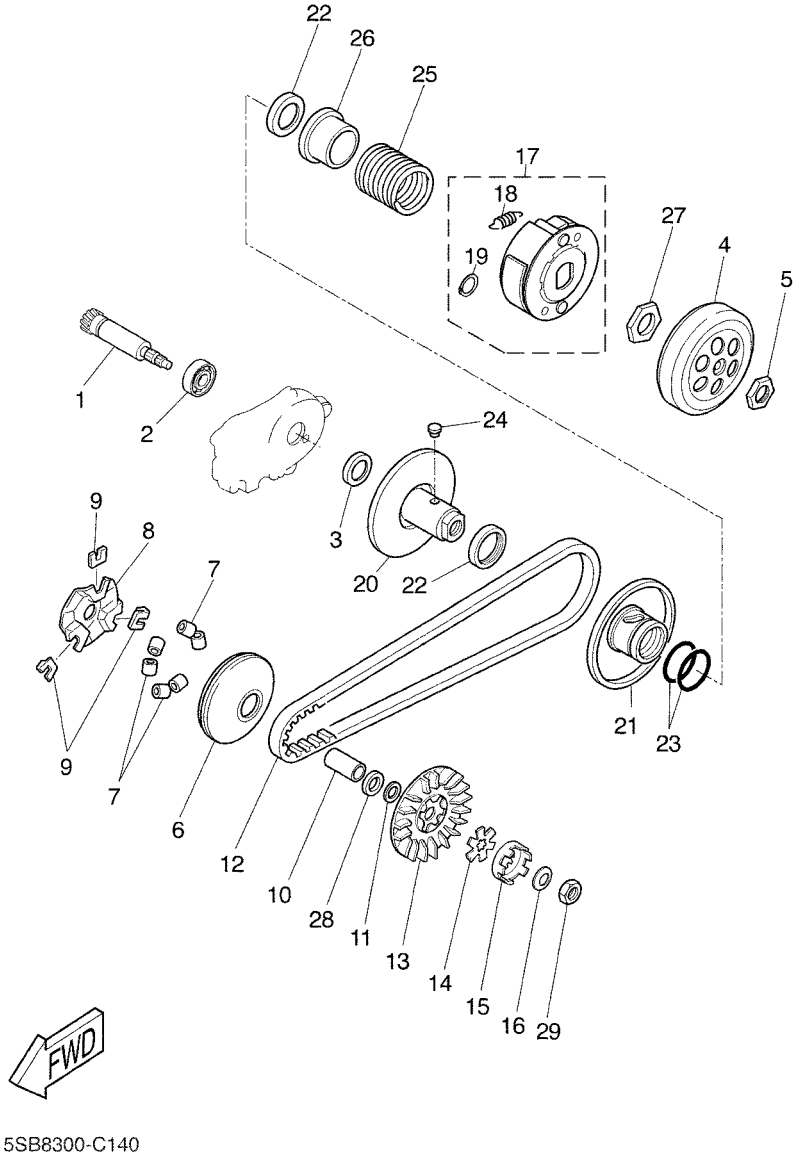

5SB8300-C140

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	3VL–E6111–00	GEAR, PRIMARY DRIVE	1	1	1	1	1	
2	93306–203XC	BEARING	1	1	1	1	1	
3	93102–17342	OIL SEAL	1	1	1	1	1	
4	5BR–E6611–10	CLUTCH HOUSING COMP.	1	1	1	1	1	
5	90170–10X01	NUT	1	1	1	1	1	
6	5WW–E7620–10	PRIMARY SLIDING SHEAVE COMP.	1	1	1	1	1	
7	4FG–E7632–00	WEIGHT	6	6	6	6	6	
8	3VL–E7623–00	CAM	1	1	1	1	1	
9	3VL–E7653–00	SLIDER	3	3	3	3	3	
10	90387–135U9	COLLAR	1	1	1	1	1	
11	90201–13X03	WASHER, PLATE	1	1	1	1	1	
12	5RN–E7641–00	V-BELT	1	1	1	1	1	
13	5WW–E7611–10	SHEAVE, PRIMARY FIXED	1	1	1	1	1	
14	90214–13055	WASHER, CLAW	1	1	1	1	1	
15	3VL–E5657–00	CLUTCH, ONEWAY	1	1	1	1	1	
16	90208–10012	WASHER, CONICAL SPRING	1	1	1	1	1	
17	5HE–E6620–10	CLUTCH CARRIER ASSY	1	1	1	1	1	
18	5HE–E6626–10	.SPRING, CLUTCH WEIGHT 1	3	3	3	3	3	
19	93430–06X01	.CIRCLIP	3	3	3	3	3	
20	5BR–E7660–10	SECONDARY FIXED SHEAVE COMP.	1	1	1	1	1	
21	5BR–E7670–10	SECONDARY SLIDING SHEAVE	1	1	1	1	1	
22	93109–34801	OIL SEAL	2	2	2	2	2	
23	93210–40X00	O-RING	2	2	2	2	2	
24	5BR–E7664–10	PIN, GUIDE	2	2	2	2	2	
25	90501–35X01	SPRING, COMPRESSION	1	1	1	1	1	
26	5BR–E7684–10	SEAT, SECONDARY SPRING	1	1	1	1	1	
27	90170–28X00	NUT	1	1	1	1	1	

FIG. 14 CLUTCH

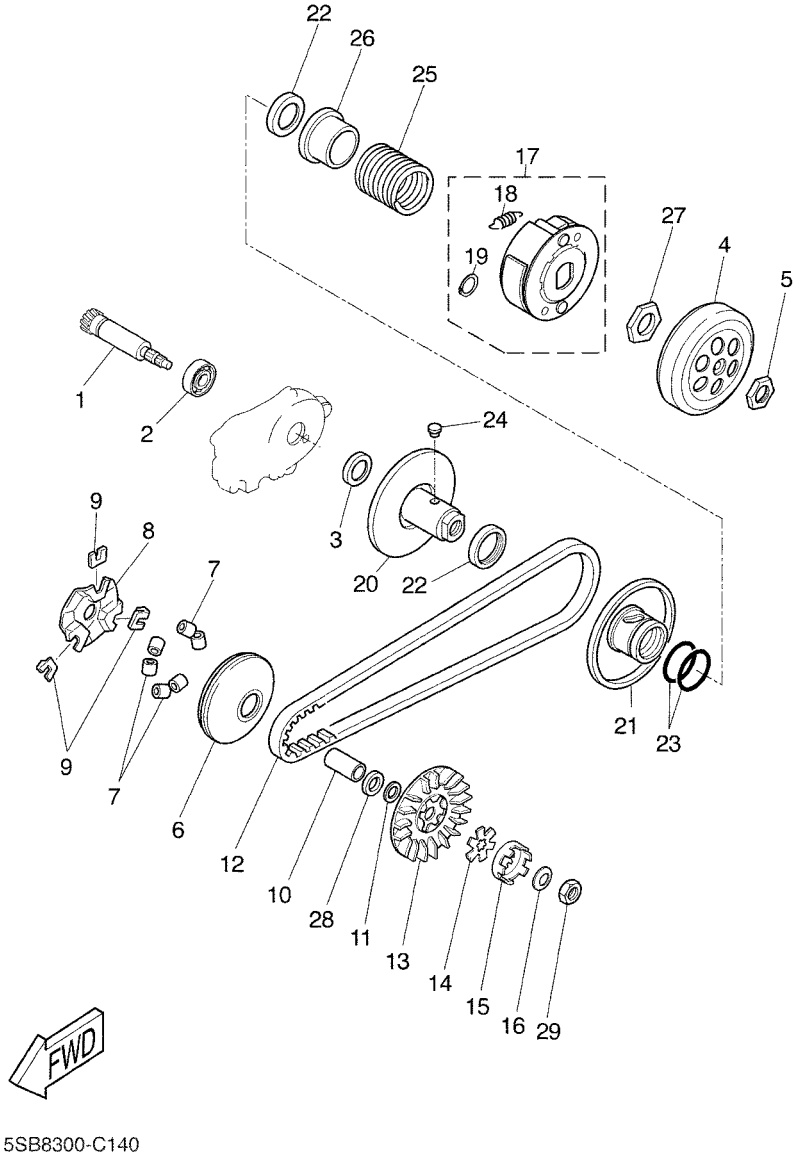

5SB8300-C140

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
28	5PE–E7654–00	SPACER 1	1	1	1	1		
29	90170–10219	NUT	1	1	1	1	1	

FIG. 15 TRANSMISSION

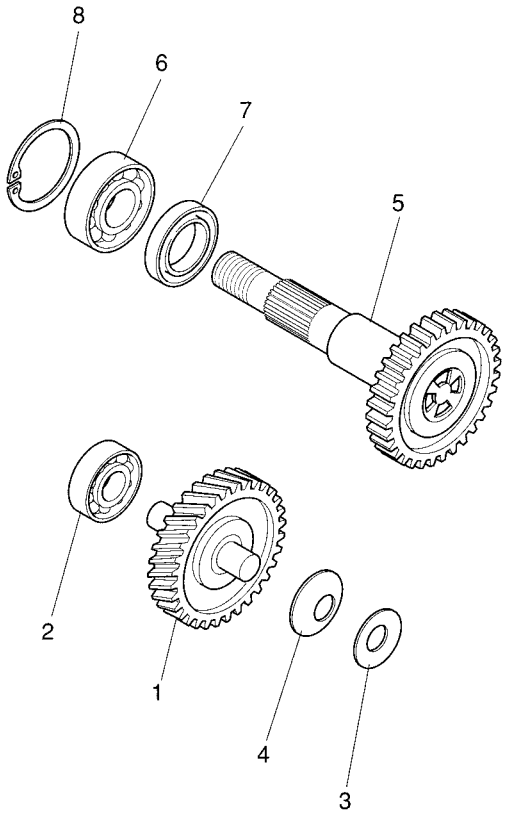

5BR1354-7120

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	3WT–E7410–00	MAIN AXLE COMP.	1	1	1	1	1	
2	93306–200Y4	BEARING	2	2	2	2	2	
3	90201–140G5	WASHER, PLATE	1	1	1	1	1	
4	90208–14047	WASHER, CONICAL SPRING	1	1	1	1	1	
5	3WT–E7420–00	DRIVE AXLE ASSY	1	1	1	1	1	
6	93306–203YF	BEARING	1	1	1	1	1	
7	93102–22897	OIL SEAL	1	1	1	1	1	
8	93420–40064	CIRCLIP	1	1	1	1	1	

FIG. 16 FRAME

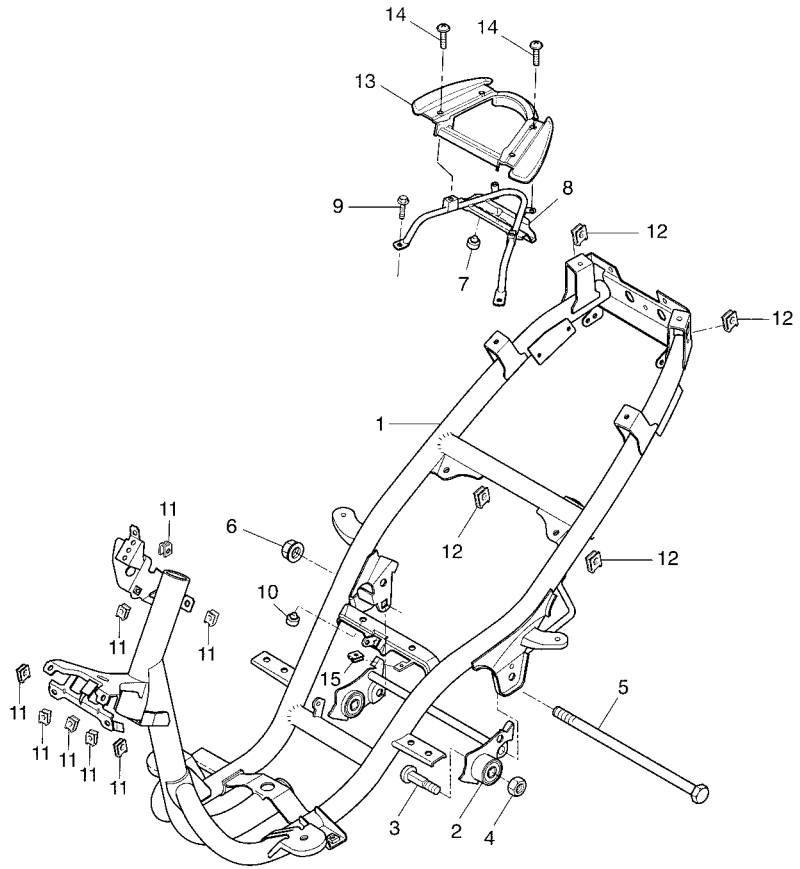

5SB6300-C160

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5PU–F1110–11	FRAME COMP.	1	1	1	1	1	
2	5BR–F1410–10	ENGINE BRACKET COMP.	1	1	1	1	1	
3	5DS–F1481–00	BOLT, ENGINE MOUNTING 1	2	2	2	2	2	
4	90185–10154	NUT, SELF-LOCKING	2	2	2	2	2	
5	3KJ–21481–00	BOLT, ENGINE MOUNTING 1	1	1	1	1	1	
6	95607–12200	NUT, SELF-LOCKING	1	1	1	1	1	
7	3VL–F4741–10	PAD, SEAT	4	4	4	4	4	
8	5HE–F1232–00	REINFORCEMENT, TAIL	1	1	1	1	1	
9	95827–08016	BOLT, FLANGE	4	4	4	4	4	
10	3VL–F4741–10	PAD, SEAT	4	4	4	4	4	
11	90183–06X00	NUT, SPRING	8	8	8	8	8	
12	90183–05X00	NUT, SPRING	4	4	4	4	4	
13	5HE–F4773–00	HANDLE, SEAT	1	1	1	1	1	
14	90111–06X01	BOLT,HEX. SOCKET BUTTON	4	4	4	4	4	
15	90183–06X00	NUT, SPRING	1	1	1	1		

FIG. 17 FRONT FENDER

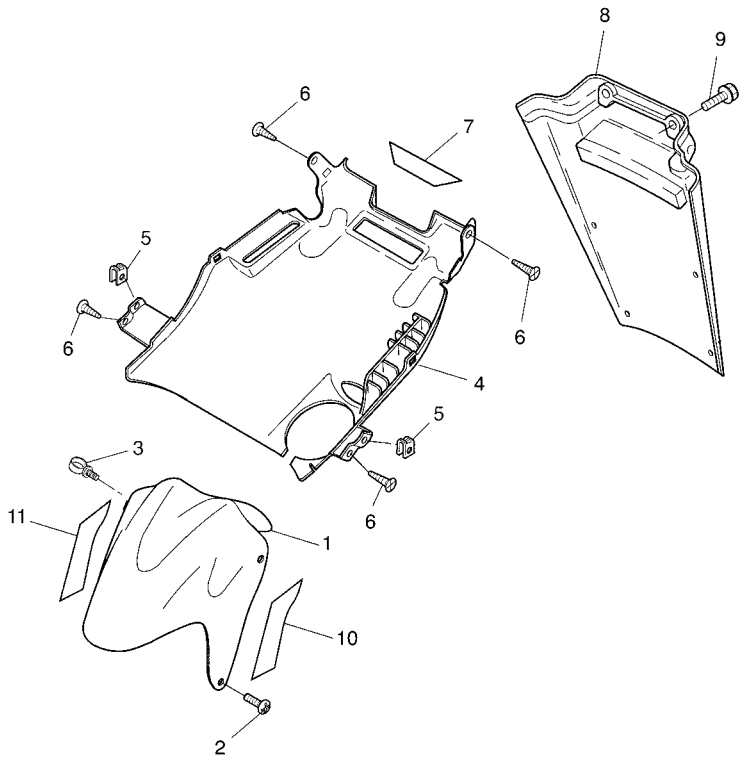

5PE5300-2141

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5PE–F1556–00–P2	FENDER, FRONT 2	1	1	1	1	1	VRSA FOR PWS1
	5PE–F1556–00–PH	FENDER, FRONT 2	1	1	1	1	1	FOR SMX,VPBC3
2	90157–05X02	SCREW, PAN HEAD	4	4	4	4	4	
3	2RN–F1518–00	HOLDER, CABLE	1	1	1	1	1	
4	5BR–F1629–00	GUARD, MUD	1	1	1	1	1	
5	90183–05X00	NUT, SPRING	2	2	2	2	2	
6	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
7	5BR–F152A–10	EMBLEM 3	1	1	1	1	1	
8	5BR–F1642–00	GUARD, FLAP	1	1	1	1		
	5BR–F1642–10	GUARD, FLAP					1	
9	90109–06X05	BOLT	2	2	2	2	2	
10	5PE–F1569–00	GRAPHIC 1	1	1	1	1	1	DPBMC/BL2
11	5PE–F1579–00	GRAPHIC 2	1	1	1	1	1	DPBMC/BL2

FIG. 18 SIDE COVER

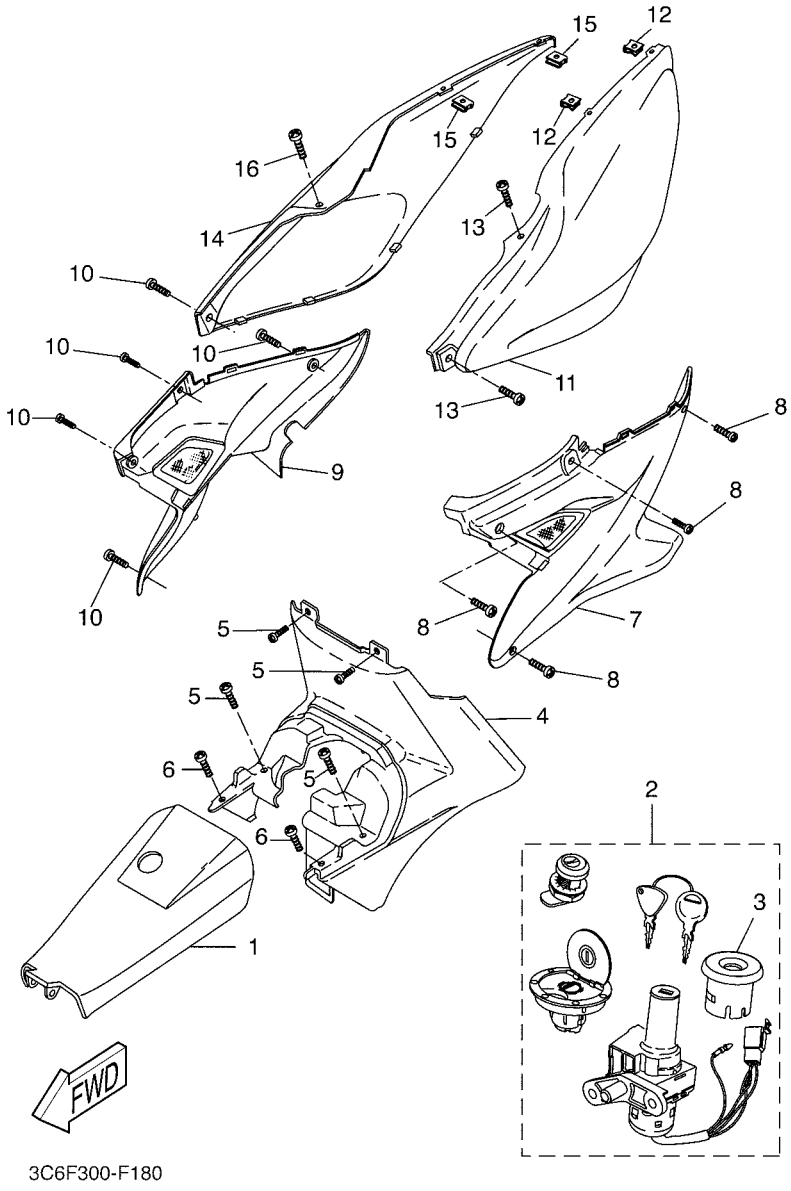

3C6F300-F180

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F177E–00	LID	1	1	1	1	1	
2	5WJ–H2021–10	KEY SET	1	1	1	1	1	
3	5AD–H2552–00	.CAP, SWITCH	1	1	1	1	1	
4	5BR–F1716–00	LID, SIDE COVER	1	1	1	1	1	
5	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
6	90167–05X01	SCREW, TAPPING	2	2	2	2	2	
7	5BR–F1711–10	COVER, SIDE 1	1	1	1	1	1	
8	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
9	5BR–F1721–10	COVER, SIDE 2	1	1	1	1	1	
10	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
11	5BR–F1731–03–PJ	COVER, SIDE 3	1	1	1	1	1	FOR SMX
	5BR–F1731–03–PM	COVER, SIDE 3	1	1	1	1	1	FOR VPBC3
	5BR–F1731–03–PS	COVER, SIDE 3	1	1	1	1	1	FOR PWS1
12	90183–05X00	NUT, SPRING	2	2	2	2	2	
13	90167–05X02	SCREW, TAPPING	2	2	2	2	2	
14	5BR–F1741–03–PJ	COVER, SIDE 4	1	1	1	1	1	FOR SMX
	5BR–F1741–03–PM	COVER, SIDE 4	1	1	1	1	1	FOR VPBC3
	5BR–F1741–03–PS	COVER, SIDE 4	1	1	1	1	1	FOR PWS1
15	90183–05X00	NUT, SPRING	2	2	2	2	2	
16	90167–05X02	SCREW, TAPPING	2	2	2	2	2	

FIG. 19 OIL TANK

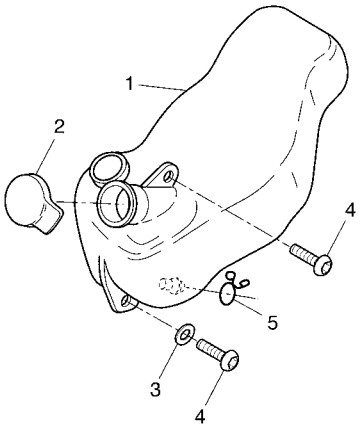

5SB2M00-B160

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F1705–00	OIL TANK ASSY	1	1	1	1	1	
2	3WG–F1771–00	BODY, CAP	1	1	1	1	1	
3	90201–06X06	WASHER, PLATE	1	1	1	1	1	
4	90154–06X01	SCREW, BINDING	2	2	2	2	2	
5	90467–08003	CLIP	1	1	1	1	1	

FIG. 20 REAR SUSPENSION

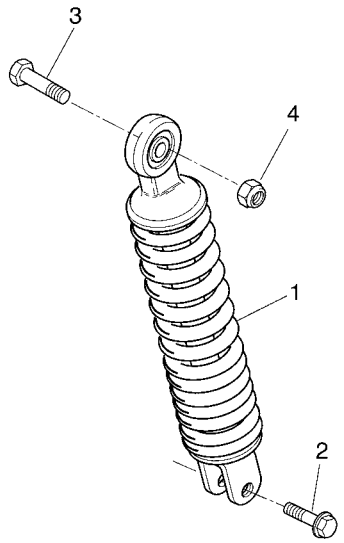

5BR1354-7170

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F2210–71	SHOCK ABSORBER ASSY, REAR	1	1	1	1	1	(TITANIUM)
2	90105–08121	BOLT, FLANGE	1	1	1	1	1	
3	90101–10776	BOLT	1	1	1	1	1	
4	95607–10200	NUT, U FLANGE	1	1	1	1	1	

FIG. 21 FRONT FORK

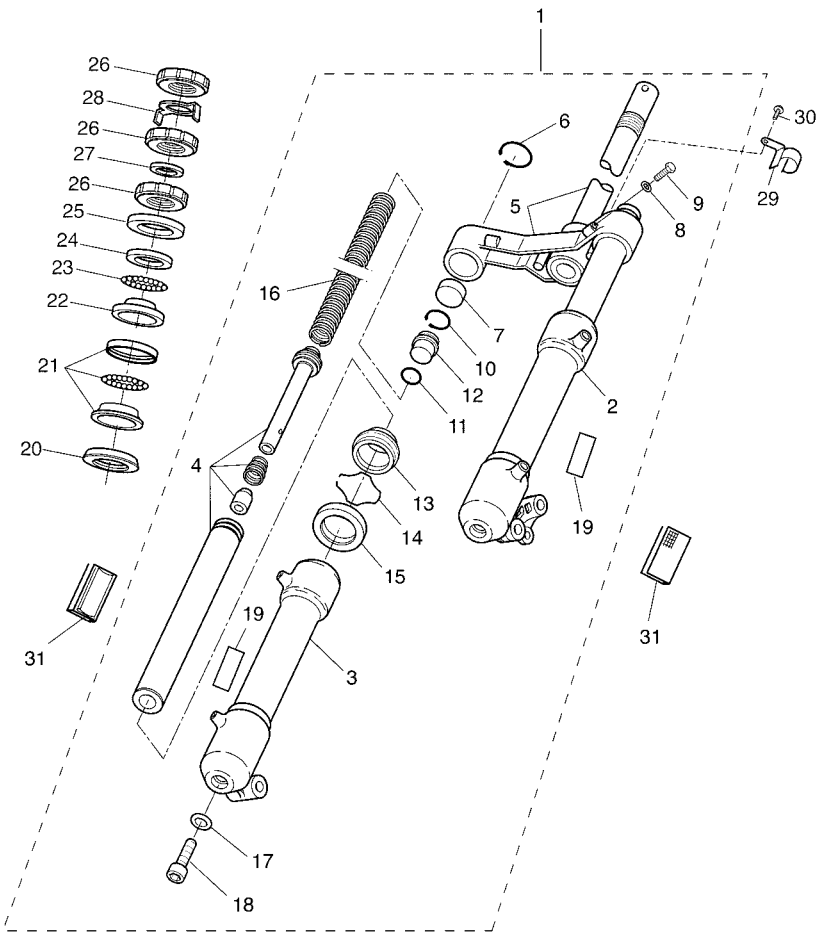

5WJ1300-B180

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5ME–F3100–11	FRONT FORK ASSY	1	1	1	1	1	(PAIOLI)
2	5BR–F3126–00	.TUBE, OUTER (LEFT)	1	1	1	1	1	(PAIOLI)
3	5BR–F3136–00	.TUBE, OUTER (RIGHT)	1	1	1	1	1	(PAIOLI)
4	5BR–F3110–01	.INNER TUBE COMP.1	2	2	2	2	2	(PAIOLI)
5	5ME–F3340–10	.UNDER BRACKET COMP.	1	1	1	1	1	(PAIOLI)
6	4TD–F3153–00	.RING, SNAP	2	2	2	2	2	(PAIOLI)
7	4TD–F3154–00	.PLUG, INNER TUBE	2	2	2	2	2	(PAIOLI)
8	4TD–F3112–00	.WASHER, CAP	2	2	2	2	2	(PAIOLI)
9	4TD–F3394–00	.BOLT, SPECIAL	2	2	2	2	2	(PAIOLI)
10	4TD–F3183–00	.CIRCLIP	2	2	2	2	2	(PAIOLI)
11	4TD–F3147–00	.O-RING	2	2	2	2	2	(PAIOLI)
12	4TD–F3111–00	.BOLT, CAP	2	2	2	2	2	(PAIOLI)
13	4TD–F3144–00	.SEAL, DUST	2	2	2	2	2	(PAIOLI)
14	4TD–F3156–00	.CLIP, OIL SEAL	2	2	2	2	2	(PAIOLI)
15	4TD–F3145–00	.OIL SEAL	2	2	2	2	2	(PAIOLI)
16	4TD–F3141–00	.SPRING, FRONT FORK	2	2	2	2	2	(PAIOLI)
17	4CU–F3165–00	.WASHER, FELT	2	2	2	2	2	(PAIOLI)
18	4TD–F3181–00	.BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	(PAIOLI)
19	5BR–F3108–00	.EMBLEM	2	2	2	2	2	(PAIOLI)
20	21L–F3462–00	SEAL, STEERING	1	1	1	1	1	
21	93399–99940	BEARING	1	1	1	1	1	
22	22F–23412–01	RACE, BALL 2	1	1	1	1	1	
23	22F–2341E–00	RETAINER, BALL BEARING	1	1	1	1	1	
24	22F–23411–01	RACE, BALL 1	1	1	1	1	1	
25	3VP–23416–00	COVER, BALL RACE 2	1	1	1	1	1	
26	90179–25X00	NUT	3	3	3	3	3	
27	90202–26X00	WASHER, PLATE	1	1	1	1	1	

FIG. 21 FRONT FORK

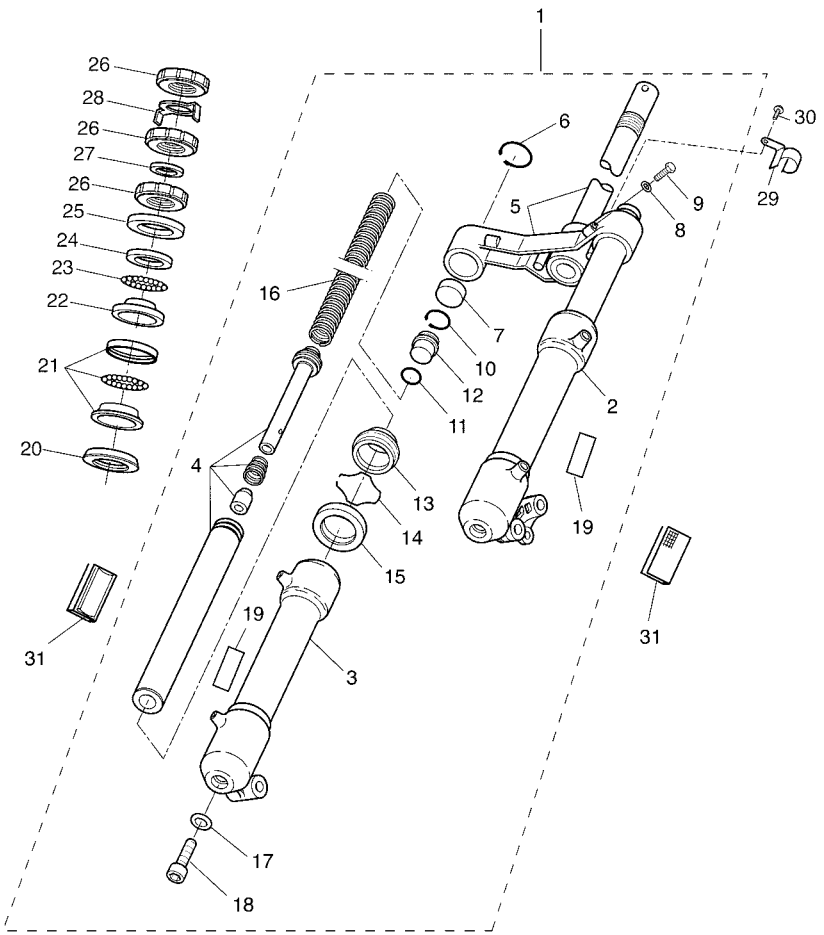

5WJ1300-B180

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
28	5DS–F3418–00	WASHER, SPECIAL	1	1	1	1	1	
29	5TK–F5876–00	HOLDER, BRAKE HOSE 2	1	1	1	1	1	
30	90154–06X01	SCREW, BINDING	1	1	1	1	1	
31	5HE–H5111–00	REFLECTOR, FRONT 1	2	2	2	2		

FIG. 22 FUEL TANK

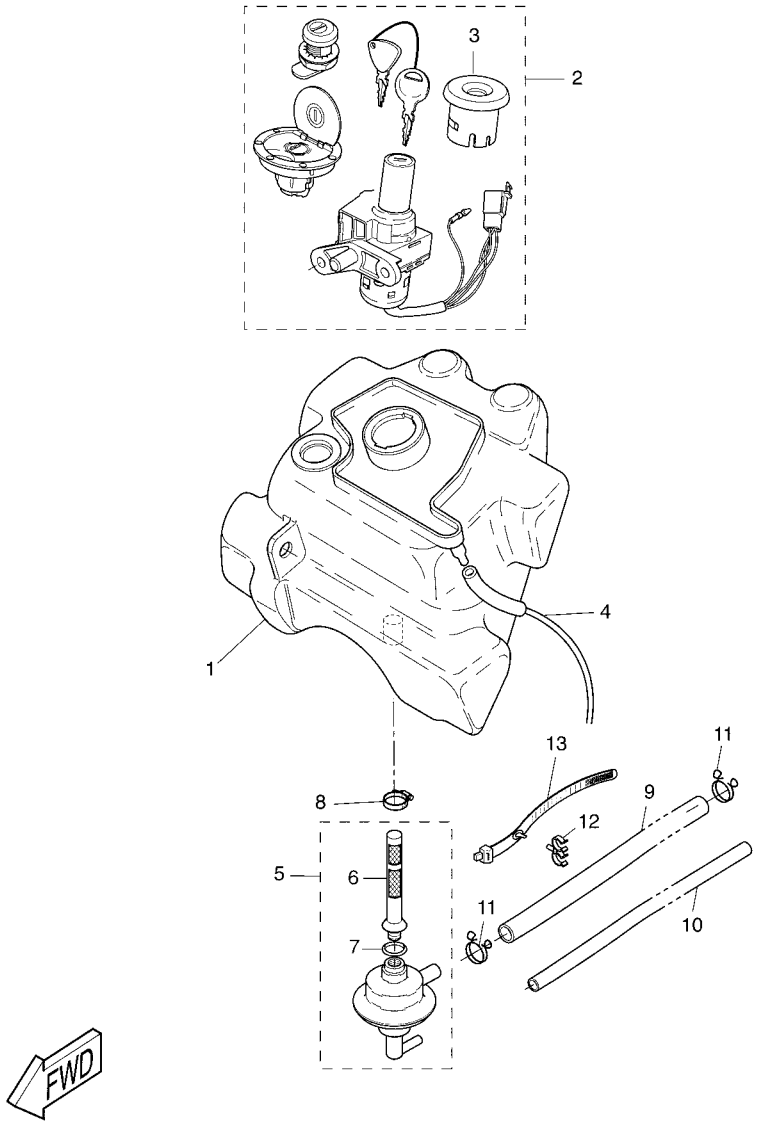

5PUD300-A190

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F4110–01	FUEL TANK COMP.	1	1	1	1	1	
2	5WJ–H2021–10	KEY SET	1	1	1	1	1	
3	5AD–H2552–00	.CAP, SWITCH	1	1	1	1	1	
4	4SB–F4318–11	PIPE, OVERFLOW	1	1	1	1	1	
5	5BR–F4500–00	FUEL COCK ASSY 1	1	1	1	1	1	UR (PAIOLI MODEL)
	5BR–F4500–10	FUEL COCK ASSY 1	1	1	1	1	1	UR (TAIYO GIKEN K
6	5EU–F4501–00	.FILTER, FUEL	1	1	1	1	1	(FOR PAIOLI MODEL
7	5EU–F4512–00	.GASKET	1	1	1	1	1	(FOR PAIOLI MODEL
8	90450–22X00	HOSE CLAMP ASSY	1	1	1	1	1	
9	4SB–F4312–11	PIPE 2	1	1	1	1	1	
10	4SB–F4335–11	PIPE, SUCTION 1	1	1	1	1	1	
11	90467–09006	CLIP	2	2	2	2	2	
12	90464–10X01	CLAMP	2	2	2	2	2	
13	90464–75X00	CLAMP	2	2	2	2	2	200X7.0

FIG. 23 SEAT & CARRIER

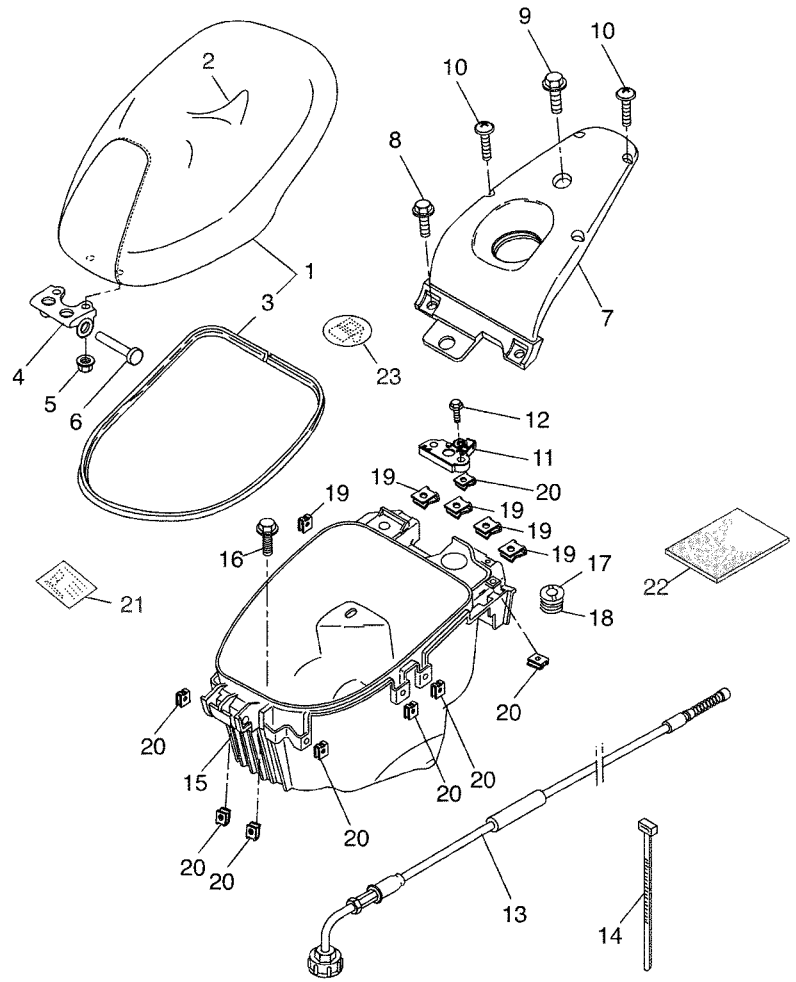

3C67300-E230

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5HE–F4710–60	SINGLE SEAT ASSY	1	1	1	1	1	
2	5HE–F4731–60	.COVER, SEAT	1	1	1	1	1	
3	5BR–F475M–00	.SEAL	1	1	1	1	1	
4	4CU–F4726–00	HINGE, SEAT	1	1	1	1	1	
5	90179–06X00	NUT	2	2	2	2	2	
6	90241–10X00	PIN	1	1	1	1	1	
7	5HE–F4756–00	COVER, TAIL	1	1	1	1	1	
8	90105–06X02	BOLT, FLANGE	2	2	2	2	2	
9	90105–06X01	BOLT, FLANGE	1	1	1	1	1	
10	90167–05X01	SCREW, TAPPING	4	4	4	4	4	
11	5AD–F4780–00	SEAT LOCK ASSY	1	1	1	1	1	UR
	3C6–F4780–00	SEAT LOCK ASSY	1	1	1	1	1	UR
12	90105–06X02	BOLT, FLANGE	2	2	2	2	2	
13	5BR–F478E–10	CABLE, SEAT LOCK	1	1	1	1	1	UR
	5BR–F478E–20	CABLE, SEAT LOCK	1	1	1	1	1	UR
14	4KH–H3936–01	BAND, SWITCH CORD	1	1	1	1	1	249X4.80
15	5BR–F473R–00	BOX 1	1	1	1	1	1	
16	90109–06X05	BOLT	4	4	4	4	4	
17	5AD–F4781–00	SUPPORT, SPRING 1	1	1	1	1	1	
18	90501–20X00	SPRING, COMPRESSION	1	1	1	1	1	
19	90183–06X00	NUT, SPRING	5	5	5	5	5	
20	90183–05X00	NUT, SPRING	10	10	10	10	10	
21	5SB–F118N–02	LABEL	1	1	1	1		
22	5SB–F8199–H1	MANUAL,OWNER'S	1	1	1			UR ITALIAN
	5WJ–F8199–E0	MANUAL,OWNER'S					1	UR ENGLISH
	5WJ–F8199–E1	MANUAL,OWNER'S		1		1		UR ENGLISH
	5WJ–F8199–F0	MANUAL,OWNER'S					1	UR FRENCH

FIG. 23 SEAT & CARRIER

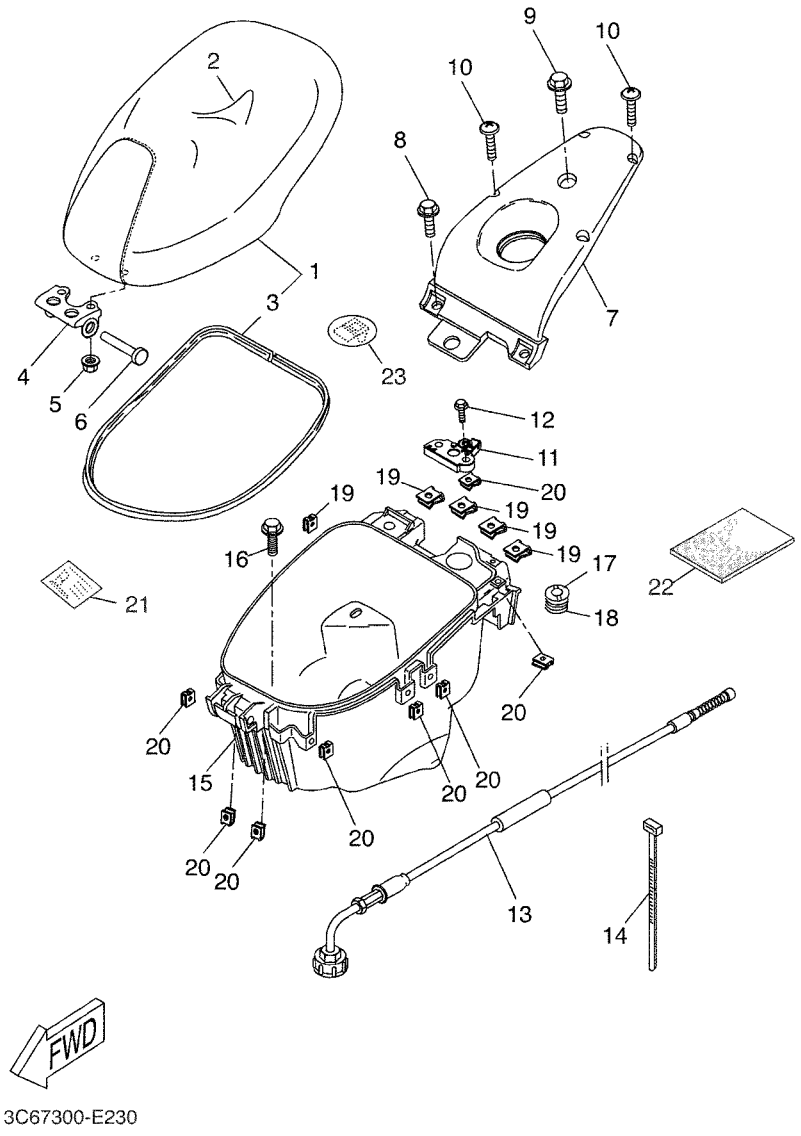

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
22	5WJ–F8199–G1	MANUAL,OWNER'S	1	1	1			UR GERMAN
	5WJ–F8199–F1	MANUAL,OWNER'S	1	1	1			UR FRENCH
	5WJ–F8199–S1	MANUAL,OWNER'S	1	1	1			UR SPANISH
	5WJ–F8199–G0	MANUAL,OWNER'S					1	UR GERMAN
	5SB–F8199–H0	MANUAL,OWNER'S					1	UR ITALIAN
23	5DN–F415A–10	LABEL, CAUTION	1	1	1	1	1	

FIG. 24 FRONT WHEEL

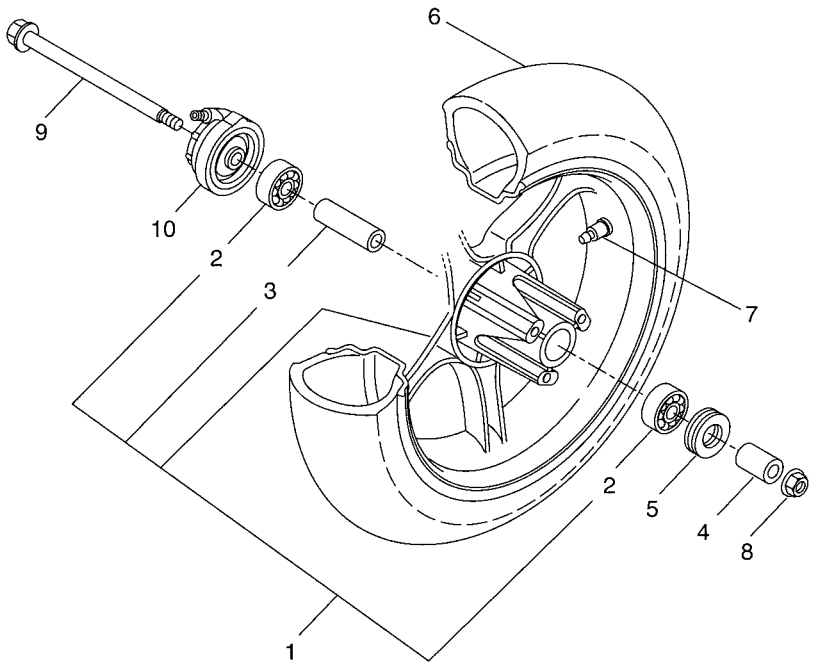

5BR1354-7212

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F5168–01	CAST WHEEL, FRONT	1	1	1	1	1	AP COLOR DARK GRE
	5BR–F5168–A0	CAST WHEEL, FRONT	1	1	1	1	1	AP (DARK GREY)
2	93306–300Y8	.BEARING	2	2	2	2	2	FOR 5BRF516801
	93306–300YB	.BEARING	2	2	2	2	2	FOR 5BRF5168A0
3	4SB–F5117–00	.SPACER, BEARING	1	1	1	1	1	FOR 5BRF516801
	5BR–F5117–00	.SPACER, BEARING	1	1	1	1	1	FOR 5BRF5168A0
4	90387–10X00	COLLAR	1	1	1	1	1	
5	93106–20001	OIL SEAL	1	1	1	1	1	
6	*	TIRE (130/60-13 M/C 53L)	1	1	1	1	1	LM UR PIRELLI EVO
	*	TIRE (130/60-13 M/C 53P)	1	1	1	1	1	LM UR MICHELIN PI
7	5BR–F5170–00	AIR VALVE ASSY	1	1	1	1	1	
8	95607–10200	NUT, U FLANGE	1	1	1	1	1	
9	5BR–F2141–00	SHAFT, PIVOT	1	1	1	1	1	
10	5PU–F5190–00	GEAR UNIT ASSY	1	1	1	1	1	

FIG. 25 FRONT BRAKE CALIPER

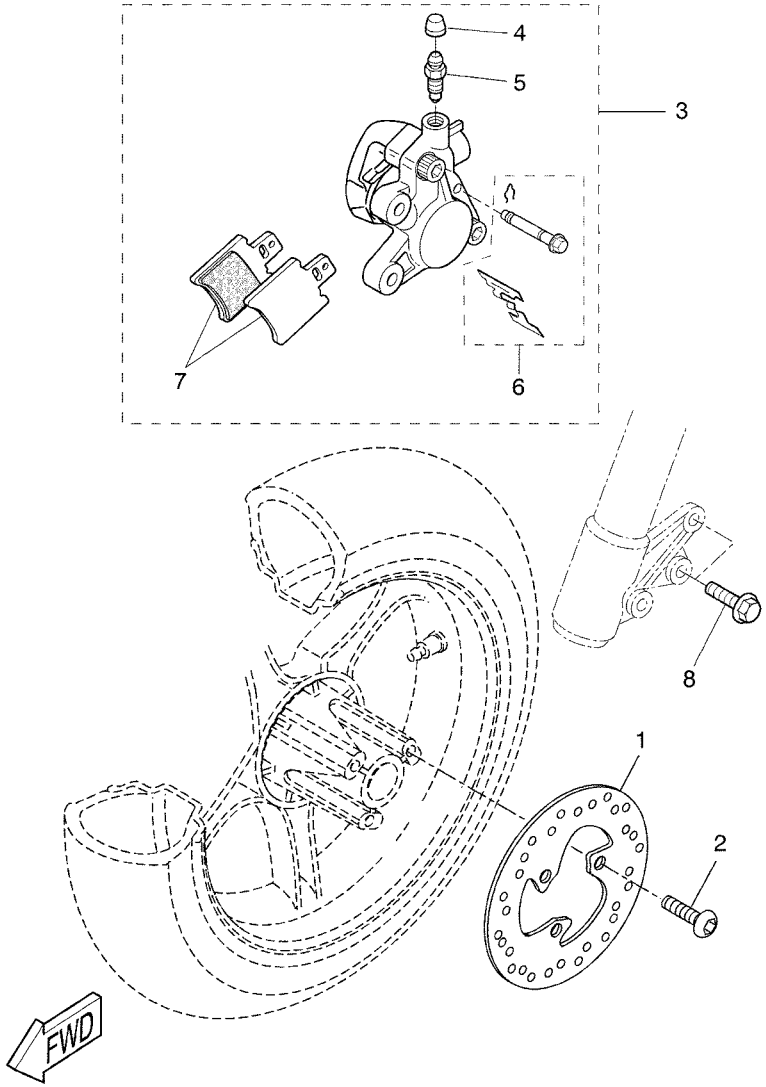

5BR1354-7222

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5JH–F5831–00	DISC, BRAKE (RIGHT)					1	(BREMBO)
	5JH–F5831–10	DISC, BRAKE (LEFT)	1	1	1	1		(NHK PRECISION)
2	90111–10X00	BOLT,HEX. SOCKET BUTTON	3	3	3	3	3	
3	5ME–F580T–30	CALIPER ASSY (LEFT)	1	1	1	1	1	
4	4CU–F5825–00	.CAP	1	1	1	1	1	(BREMBO)
5	4CU–F5824–00	.SCREW, BLEED	1	1	1	1	1	(BREMBO)
6	5ME–F5919–00	.SUPPORT, PAD	1	1	1	1	1	(BREMBO)
7	5MF–F5811–00	.PAD, CALIPER 2	1	1	1	1	1	(BREMBO)
8	90105–08X00	BOLT, FLANGE	2	2	2	2	2	

FIG. 26 REAR WHEEL

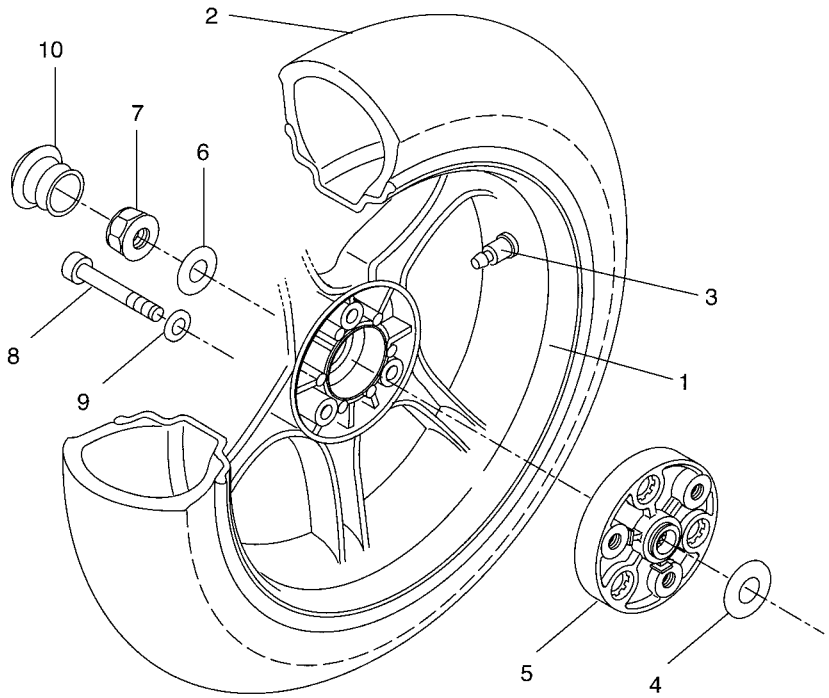

5BR1354-7231

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F5338–00	CAST WHEEL, REAR	1	1	1	1	1	AP COLOR DARK GRE
	5BR–F5338–A0	CAST WHEEL, REAR	1	1	1	1	1	AP (DARK GREY)
2	*	TIRE (140/60-13 M/C 57L)	1	1	1	1	1	LM UR PIRELLI EVO
	*	TIRE (140/60-13 M/C 57P)	1	1	1	1	1	LM UR MICHELIN PI
3	5BR–F5170–00	AIR VALVE ASSY	1	1	1	1	1	
4	90201–17X00	WASHER, PLATE	1	1	1	1	1	
5	5BR–F5311–00	HUB, REAR					1	(BASSANO-GRIMECA
	5BR–F5311–10	HUB, REAR	1	1	1	1		(YING-CHANG MODEL
6	90201–142M6	WASHER, PLATE	1	1	1	1	1	
7	90185–14150	NUT, SELF-LOCKING	1	1	1	1	1	
8	90110–10X00	BOLT, HEXAGON SOCKET HEAD	3	3	3	3	3	
9	90201–10X01	WASHER, PLATE	3	3	3	3	3	
10	5BR–F532A–10	CAP, WHEEL(REAR)	1	1	1	1	1	

FIG. 27 REAR BRAKE CALIPER

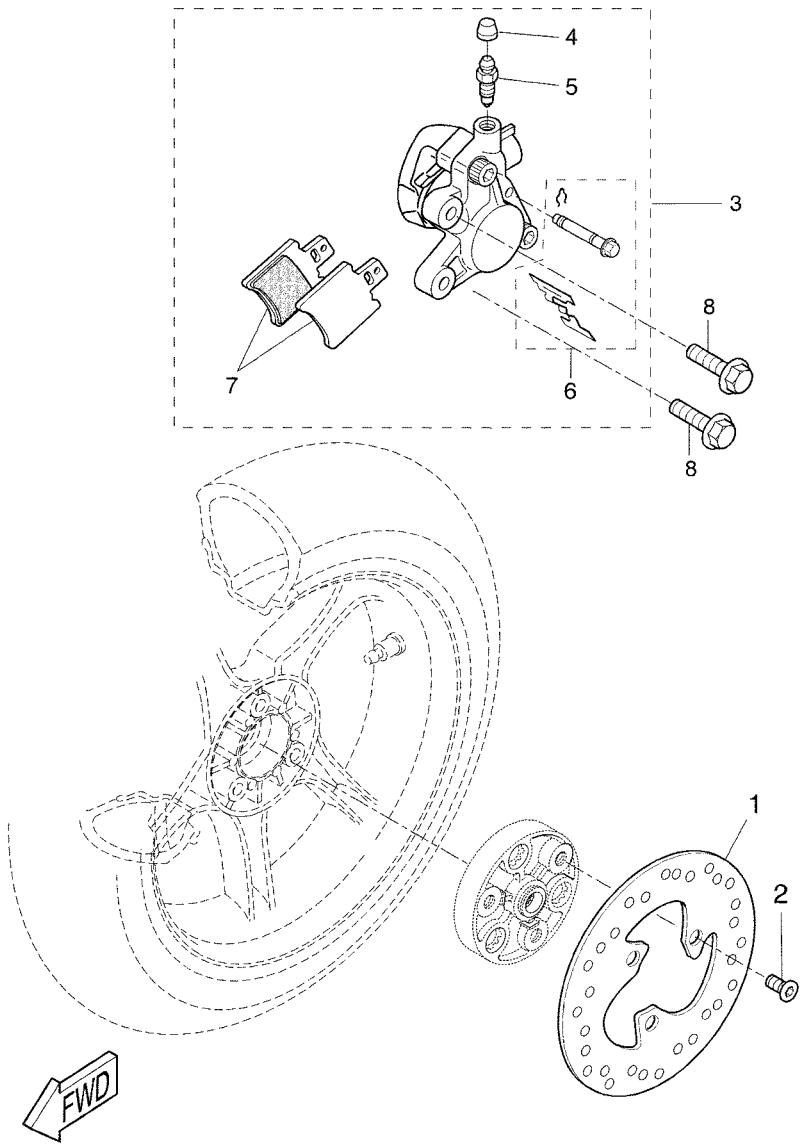

5BR1354-7243

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5JH–F5831–00	DISC, BRAKE (RIGHT)					1	(BREMBO)
	5JH–F5831–10	DISC, BRAKE (LEFT)	1	1	1	1		(NHK PRECISION)
2	90111–10X00	BOLT,HEX. SOCKET BUTTON	3	3	3	3	3	
3	5BR–F580V–30	CALIPER ASSY, REAR 1	1	1	1	1	1	
4	4CU–F5825–00	.CAP	1	1	1	1	1	(BREMBO)
5	4CU–F5824–00	.SCREW, BLEED	1	1	1	1	1	(BREMBO)
6	5BR–F5919–10	.SUPPORT, PAD	1	1	1	1	1	(BREMBO)
7	5BR–F5811–10	.PAD, CALIPER 2	1	1	1	1	1	(BREMBO)
8	90105–08X00	BOLT, FLANGE	2	2	2	2	2	

FIG. 28 STEERING HANDLE & CABLE

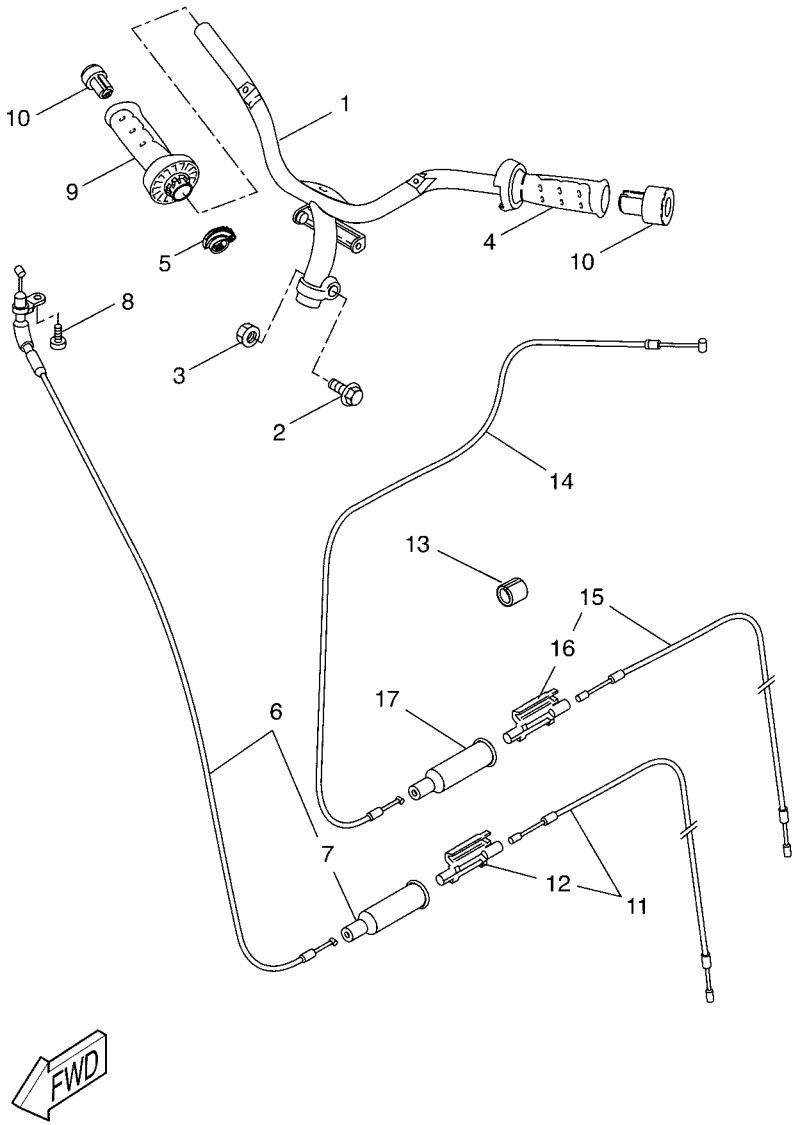

5PEAM00-A252

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F6110–00	HANDLE COMP.	1	1	1	1	1	
2	90105–10036	BOLT, FLANGE	1	1	1	1	1	
3	90185–10154	NUT, SELF-LOCKING	1	1	1	1	1	
4	5BR–F6241–00	GRIP	1	1	1	1	1	
5	5BR–F6273–00	ROTOR	1	1	1	1	1	
6	5BR–F6311–00	CABLE, THROTTLE 1	1	1	1	1	1	
7	3WG–F6329–00	.CAP, RUBBER	1	1	1	1	1	
8	5BR–F632G–00	SCREW	1	1	1	1	1	
9	5BR–F6240–10	GRIP ASSY	1	1	1	1	1	
10	5BR–F6246–10	END, GRIP	2	2	2	2	2	
11	3VL–F6312–01	CABLE, THROTTLE 2	1	1	1	1	1	
12	3VL–F6261–00	.CONNECTOR, CABLE	1	1	1	1	1	
13	90468–15009	CLIP					1	
14	5BR–F6331–00	CABLE, STARTER 1					1	
15	3VL–F6334–02	CABLE, STARTER 2					1	
16	3VL–F6261–00	.CONNECTOR, CABLE					1	
17	3WG–F6329–00	CAP, RUBBER					1	

FIG. 29 FRONT MASTER CYLINDER

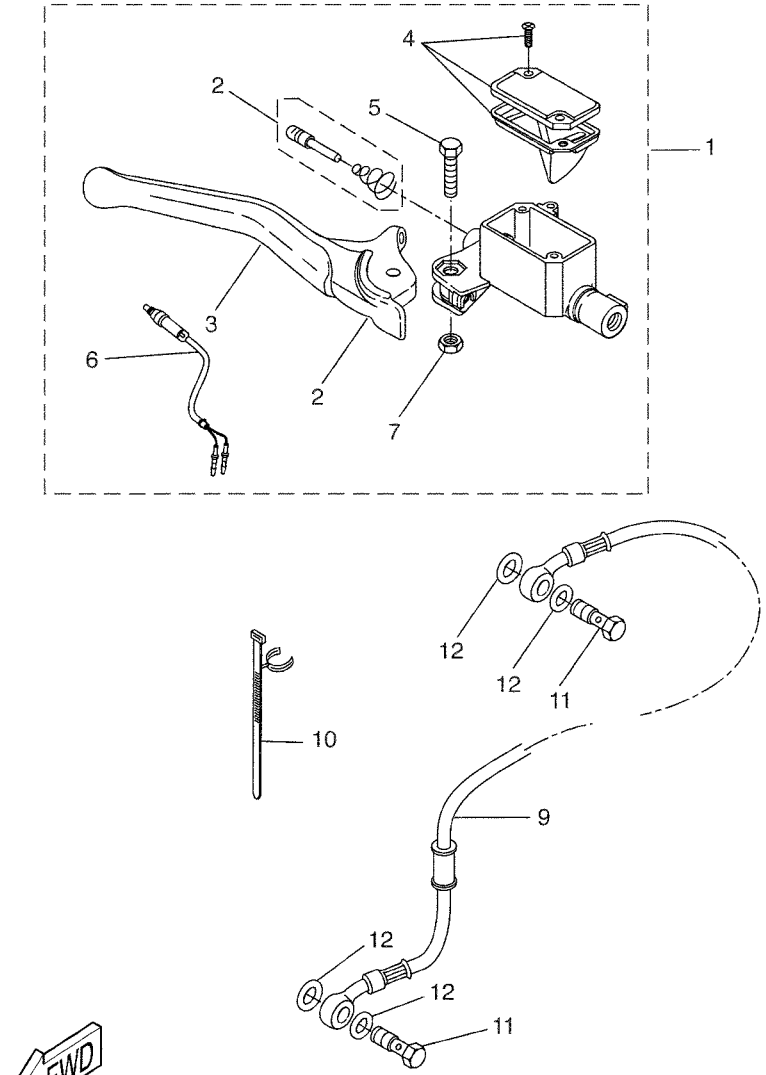

5WJ1300-B262

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F583T–06	MASTER CYLINDER ASSY	1	1	1	1	1	
2	5BR–H3912–01	.LEVER 1	1	1	1	1	1	
3	5BR–H3935–00	.COVER	1	1	1	1	1	
4	4SB–F5852–10	.CAP, RESERVOIR	1	1	1	1	1	
5	4SB–H3945–00	.BOLT, LEVER	1	1	1	1	1	
6	5JH–H3980–02	.FRONT STOP SWITCH ASSY	1	1	1	1	1	
7	4SB–H3916–00	.NUT, LEVER FITTING	1	1	1	1	1	
8	5BR–F8120–09	.SERVICE KIT ASSY	1	1	1	1	1	
9	5BR–F5872–51	HOSE, BRAKE 1	1	1	1	1	1	
10	90464–09X00	CLAMP	1	1	1	1	1	
11	90401–10X03	BOLT, UNION	2	2	2	2	2	
12	90201–10X03	WASHER, PLATE	4	4	4	4	4	

FIG. 30 STAND & FOOTREST

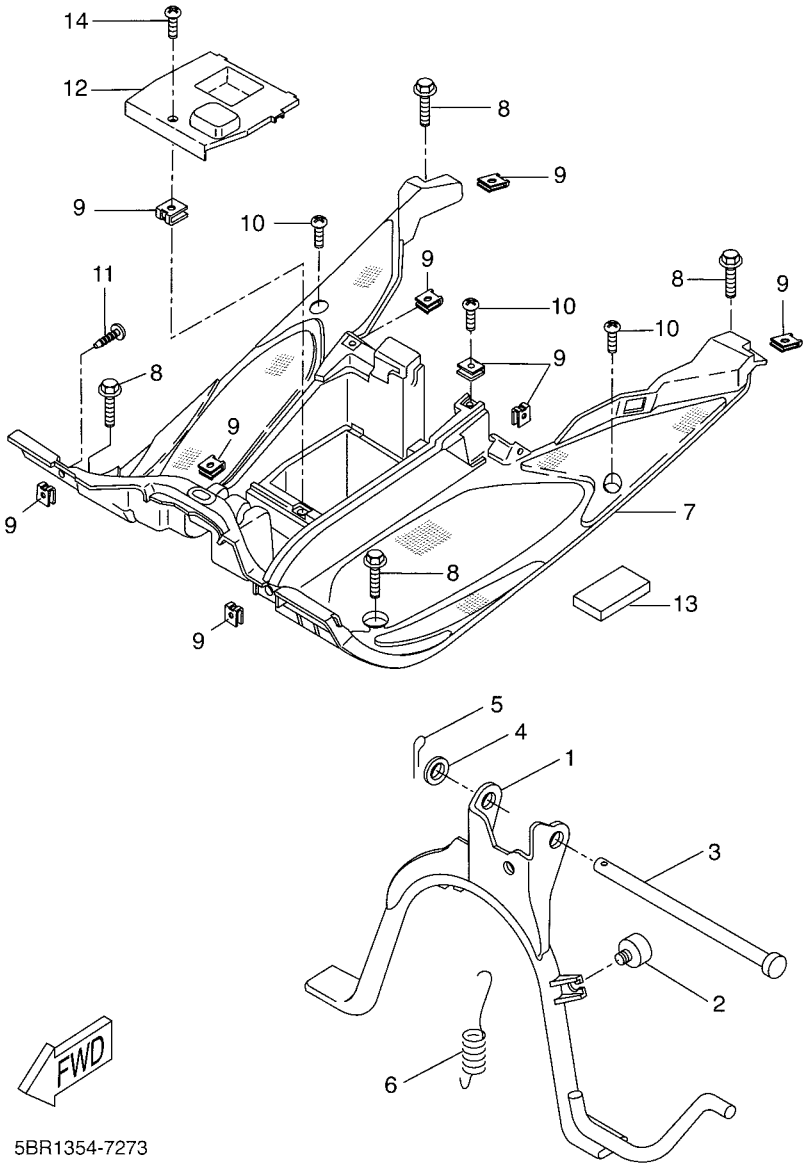

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5ME–F7111–02	STAND, MAIN	1	1	1	1	1	
2	2JW–F7114–10	STOPPER, MAIN STAND	1	1	1	1	1	
3	90240–10137	PIN, CLEVIS	1	1	1	1	1	
4	90202–10120	WASHER, PLATE	1	1	1	1	1	
5	90468–12006	CLIP	1	1	1	1	1	
6	90506–35X00	SPRING, TENSION	1	1	1	1	1	
7	5BR–F7481–01	BOARD, FOOTREST	1	1	1	1	1	
8	90105–06X02	BOLT, FLANGE	4	4	4	4	4	
9	90183–05X00	NUT, SPRING	10	10	10	10	10	
10	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
11	90167–05X01	SCREW, TAPPING	2	2	2	2	2	
12	5BR–H2129–00	COVER, BATTERY	1	1	1	1	1	
13	4SB–F174X–10	DAMPER	1	1	1	1	1	
14	90167–05X02	SCREW, TAPPING	1	1	1	1	1	

FIG. 31 REAR MASTER CYLINDER

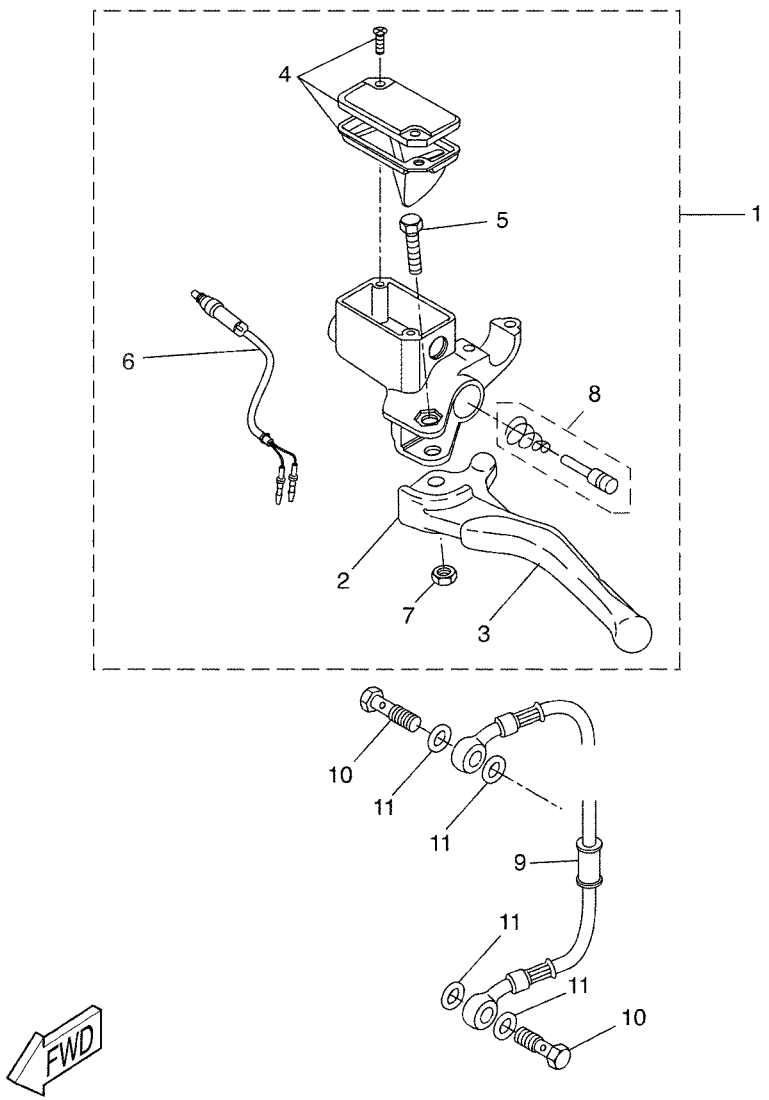

5WJ1300-B282

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F583V–06	RR. MASTER CYLINDER ASSY.	1	1	1	1	1	
2	5BR–H3912–01	.LEVER 1	1	1	1	1	1	
3	5BR–H3935–00	.COVER	1	1	1	1	1	
4	4SB–F5852–10	.CAP, RESERVOIR	1	1	1	1	1	
5	4SB–H3945–00	.BOLT, LEVER	1	1	1	1	1	
6	5JH–H3980–02	.FRONT STOP SWITCH ASSY	1	1	1	1	1	
7	4SB–H3916–00	.NUT, LEVER FITTING	1	1	1	1	1	
8	5BR–F8120–09	.SERVICE KIT ASSY	1	1	1	1	1	
9	5BR–F5873–10	HOSE, BRAKE 2	1	1	1	1	1	
10	90401–10X03	BOLT, UNION	2	2	2	2	2	
11	90201–10X03	WASHER, PLATE	4	4	4	4	4	

FIG. 32 LEG SHIELD

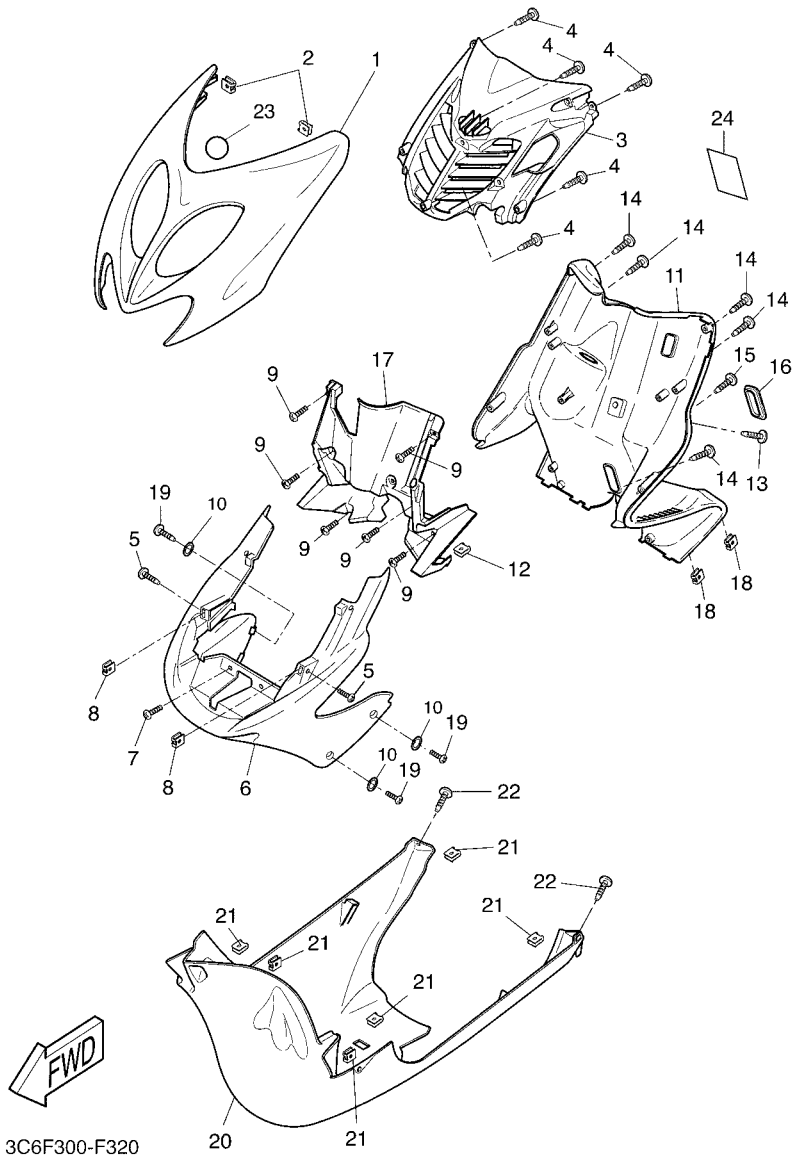

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F835G–00–PF	BODY, FRONT UPPER 1	1	1	1	1	1	FOR SMX
	5BR–F835G–00–PJ	BODY, FRONT UPPER 1	1	1	1	1	1	FOR VPBC3
	5BR–F835G–00–PN	BODY, FRONT UPPER 1	1	1	1	1	1	FOR PWS1
2	90183–05X00	NUT, SPRING	2	2	2	2	2	
3	5BR–F837N–00	GRILL, AIR INTAKE 1	1	1	1	1	1	UR FOR PWS1 COLOR
	5BR–F837N–20	GRILL, AIR INTAKE 1	1	1	1	1	1	UR FOR SMX COLOR
	5BR–F837N–40	GRILL, AIR INTAKE 1	1	1	1	1	1	UR FOR VPBC3 COLO
4	90167–05X01	SCREW, TAPPING	6	6	6	6	6	
5	90167–05X02	SCREW, TAPPING	2	2	2	2	2	
6	5BR–F835J–00–PJ	BODY, FRONT LOWER 1	1	1	1	1	1	FOR SMX
	5BR–F835J–00–PN	BODY, FRONT LOWER 1	1	1	1	1	1	FOR VPBC3
	5BR–F835J–00–PV	BODY, FRONT LOWER 1	1	1	1	1	1	FOR PWS1
7	90111–06X01	BOLT,HEX. SOCKET BUTTON	2	2	2	2	2	
8	90183–05X00	NUT, SPRING	2	2	2	2	2	
9	90167–05X01	SCREW, TAPPING	6	6	6	6	6	
10	90202–05X00	WASHER, PLATE	4	4	4	4	4	
11	5BR–F8311–00	LEG SHIELD 1	1	1	1	1	1	
12	90183–05X00	NUT, SPRING	2	2	2	2	2	
13	90159–06093	SCREW, WITH WASHER	1	1	1	1	1	
14	90167–05X02	SCREW, TAPPING	5	5	5	5	5	
15	90167–05X01	SCREW, TAPPING	2	2	2	2	2	
16	3WV–F8349–10	CAP	1	1	1	1	1	
17	5BR–F836K–01	PANEL, INNER 1	1	1	1	1	1	
18	90183–05X00	NUT, SPRING	2	2	2	2	2	
19	90167–05X01	SCREW, TAPPING	4	4	4	4	4	
20	5BR–F8385–21	COVER, LOWER	1	1	1	1	1	UR FOR SMX,VPBC3
	5BR–F8385–71	COVER, LOWER	1	1	1	1	1	UR FOR PWS1

FIG. 32 LEG SHIELD

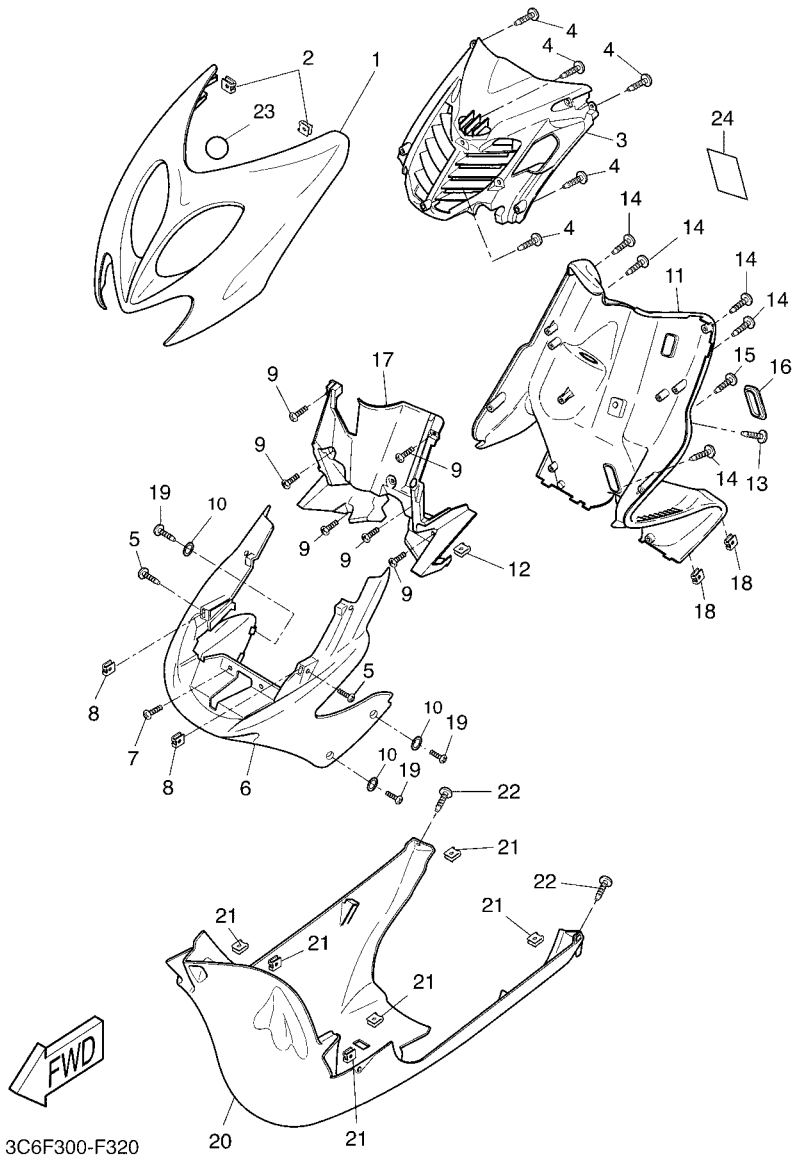

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
21	90183–05X00	NUT, SPRING	6	6	6	6	6	
22	90167–05X02	SCREW, TAPPING	2	2	2	2	2	
23	X01–F153A–10	EMBLEM, YAMAHA	1	1	1	1	1	
24	5WW–F1568–00	LABEL, WARNING	1	1	1	1	1	

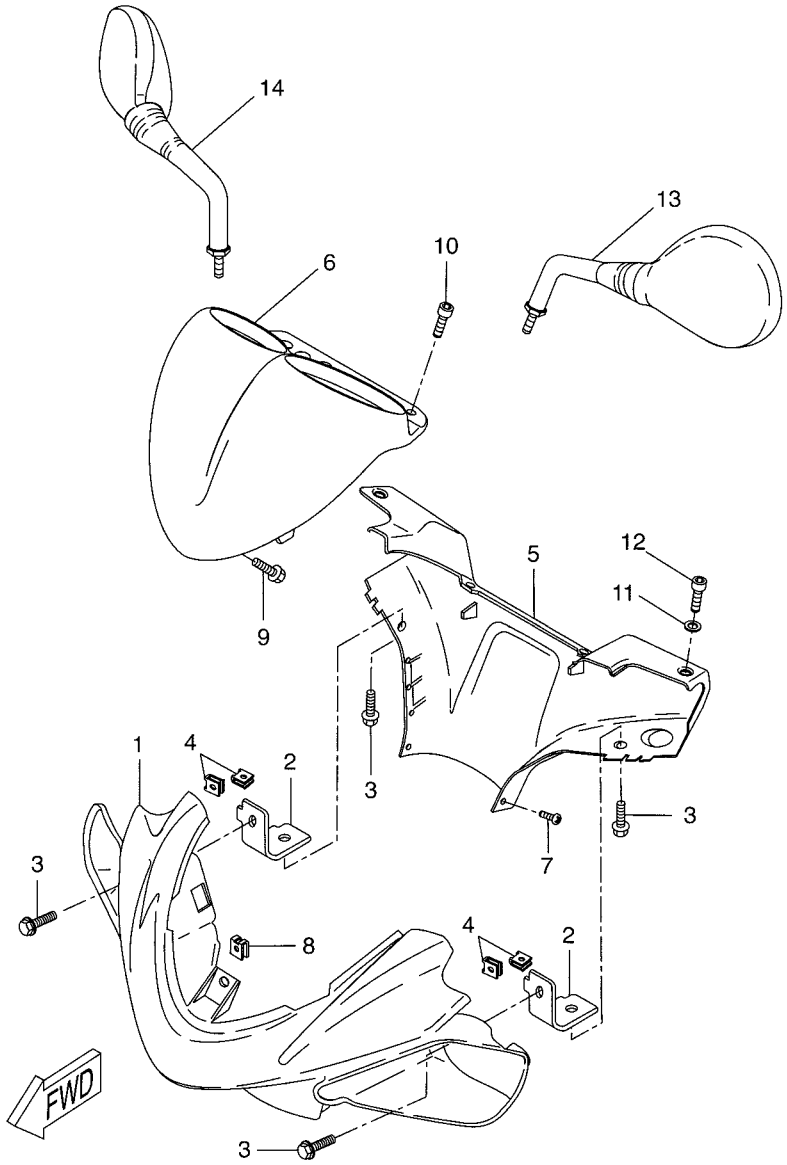

3C61300-D330

FIG. 33 COWLING 1

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–F6143–01–PG	COVER, HANDLEBAR UPPER 1	1	1	1	1	1	FOR SMX
	5BR–F6143–01–PJ	COVER, HANDLEBAR UPPER 1	1	1	1	1	1	MBL2 FOR PWS1
	5BR–F6143–01–PL	COVER, HANDLEBAR UPPER 1	1	1	1	1	1	FOR VPBC3
2	5PU–F612E–00	BRACKET	2	2	2	2	2	
3	90167–05X02	SCREW, TAPPING	4	4	4	4	4	
4	90183–05X00	NUT, SPRING	4	4	4	4	4	
5	5BR–F6145–01	COVER, HANDLEBAR UPPER 2	1	1	1	1	1	
6	5BR–F6213–00–P7	COVER, UPPER	1	1	1	1	1	MBL2 FOR SMX,V...
	5BR–F6213–00–P9	COVER, UPPER	1	1	1	1	1	FOR PWS1
7	90159–05134	SCREW, WITH WASHER	2	2	2	2	2	
8	90183–05X00	NUT, SPRING	1	1	1	1	1	
9	90167–05X02	SCREW, TAPPING	1	1	1	1	1	
10	90110–05X01	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	
11	90201–06X01	WASHER, PLATE	2	2	2	2	2	
12	90110–05X01	BOLT, HEXAGON SOCKET HEAD	2	2	2	2	2	
13	5BR–F6280–10	REAR VIEW MIRROR ASSY (LEFT)	1	1	1	1	1	
14	5BR–F6290–10	REAR VIEW MIRROR ASSY (RIGHT)	1	1	1	1	1	

FIG. 34 GENERATOR

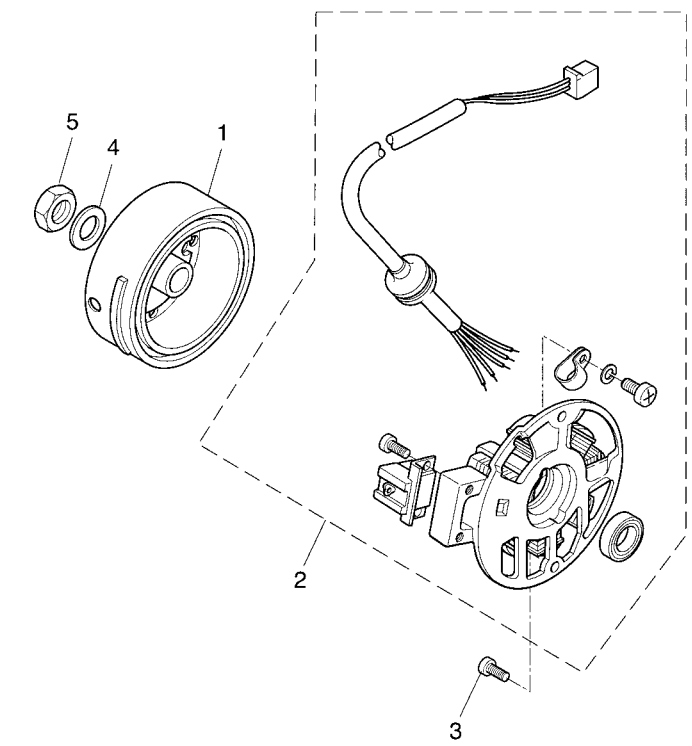

5SB1300-B311

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BM–H1450–02	ROTOR ASSY	1	1	1	1	1	
2	5BM–H1410–02	STATOR ASSY	1	1	1	1	1	
3	98507–06016	SCREW, PAN HEAD	2	2	2	2	2	
4	90201–10X02	WASHER, PLATE	1	1	1	1	1	
5	90170–10219	NUT	1	1	1	1	1	

FIG. 35 FLASHER LIGHT

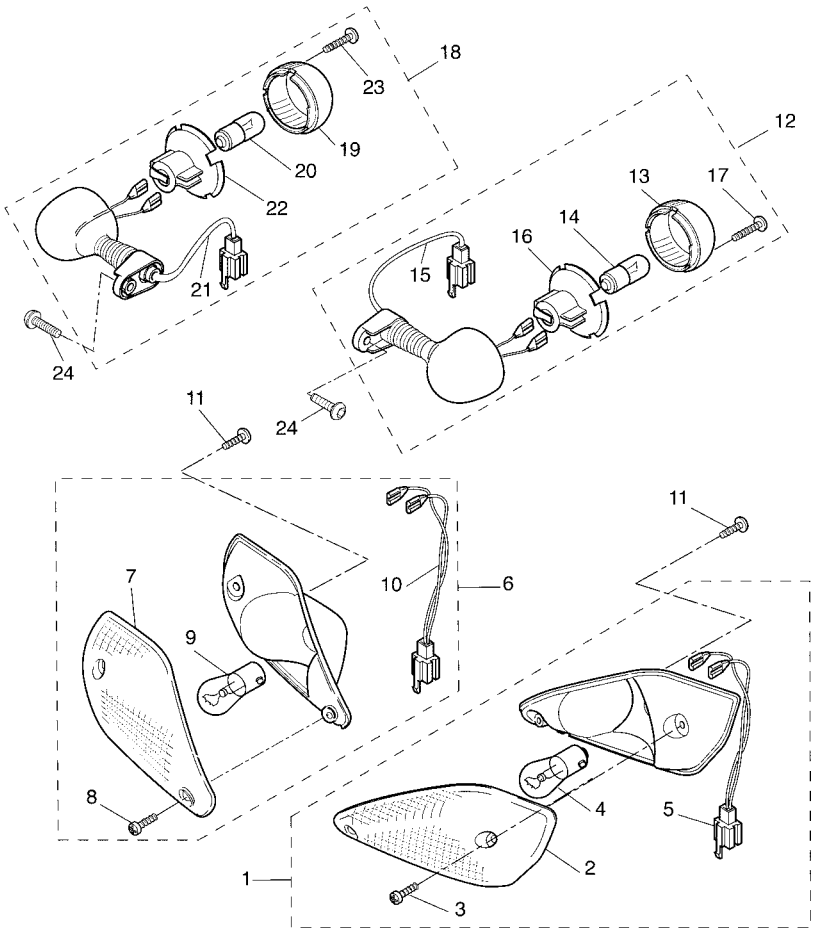

5BR1354-7322

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–H3310–10	FRONT FLASHER LIGHT ASSY 1	1	1	1	1	1	
2	5BR–H3312–10	.LENS, FLASHER	1	1	1	1	1	
3	5BR–H3333–00	.SCREW, LENS FITTING	2	2	2	2	2	
4	NDH–H3311–00–01	.BULB (12V-10W)	1	1	1	1	1	
5	5BR–H331N–00	.WIRE, LEAD	1	1	1	1	1	
6	5BR–H3320–10	FRONT FLASHER LIGHT ASSY 2	1	1	1	1	1	
7	5BR–H3322–10	.LENS, FLASHER 2	1	1	1	1	1	
8	5BR–H3333–00	.SCREW, LENS FITTING	2	2	2	2	2	
9	NDH–H3311–00–01	.BULB (12V-10W)	1	1	1	1	1	
10	5BR–H332N–00	.WIRE, LEAD 2	1	1	1	1	1	
11	90167–05X01	SCREW, TAPPING	2	2	2	2	2	
12	5HE–H3330–00	REAR FLASHER LIGHT ASSY 1	1	1	1	1	1	
13	5HE–H3332–00	.LENS, FLASHER	1	1	1	1	1	
14	NDH–H3311–00–01	.BULB (12V-10W)	1	1	1	1	1	
15	5HE–H3336–00	.CORD	1	1	1	1	1	
16	5HE–H333L–00	.LENS, INNER 1	1	1	1	1	1	
17	5HE–H3333–00	.SCREW, LENS FITTING	1	1	1	1	1	
18	5HE–H3340–00	REAR FLASHER LIGHT ASSY 2	1	1	1	1	1	
19	5HE–H3342–00	.LENS, FLASHER 2	1	1	1	1	1	
20	NDH–H3311–00–01	.BULB (12V-10W)	1	1	1	1	1	
21	5HE–H3346–00	.CORD	1	1	1	1	1	
22	5HE–H333L–00	.LENS, INNER 1	1	1	1	1	1	
23	5HE–H3333–00	.SCREW, LENS FITTING	1	1	1	1	1	
24	90105–06841	BOLT, FLANGE	2	2	2	2	2	

FIG. 36 METER

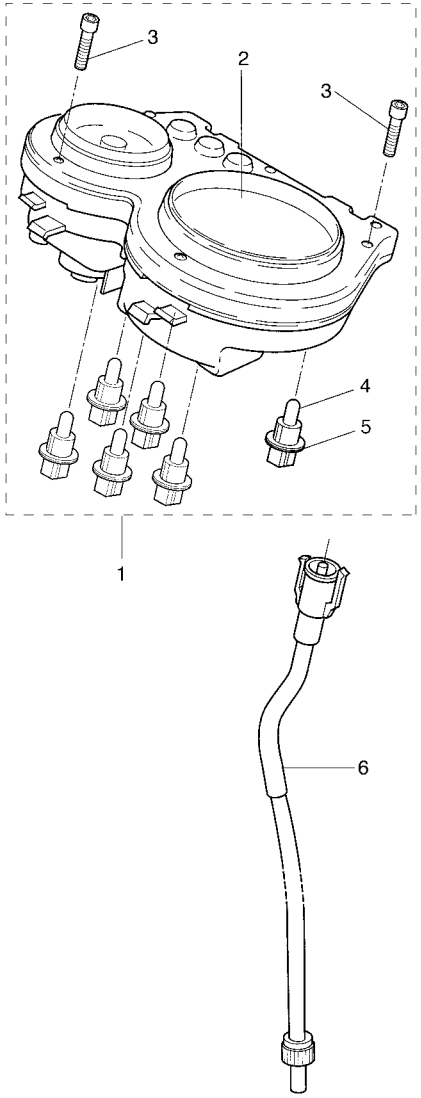

5PE6300-1330

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5PU–H3510–30	SPEEDOMETER ASSY	1	1	1	1	1	(MPH & KM/H)
2	5PU–H353K–00	.GLASS PLATE	1	1	1	1	1	
3	5PU–H3546–00	.BOLT	3	3	3	3	3	
4	5PU–H4744–00	.BULB (12V-1.7W)	6	6	6	6	6	
5	5PU–H3534–00	.SOCKET, NEUTRAL	6	6	6	6	6	
6	5PU–H3550–01	SPEEDOMETER CABLE ASSY	1	1	1	1	1	

FIG. 37 HEADLIGHT

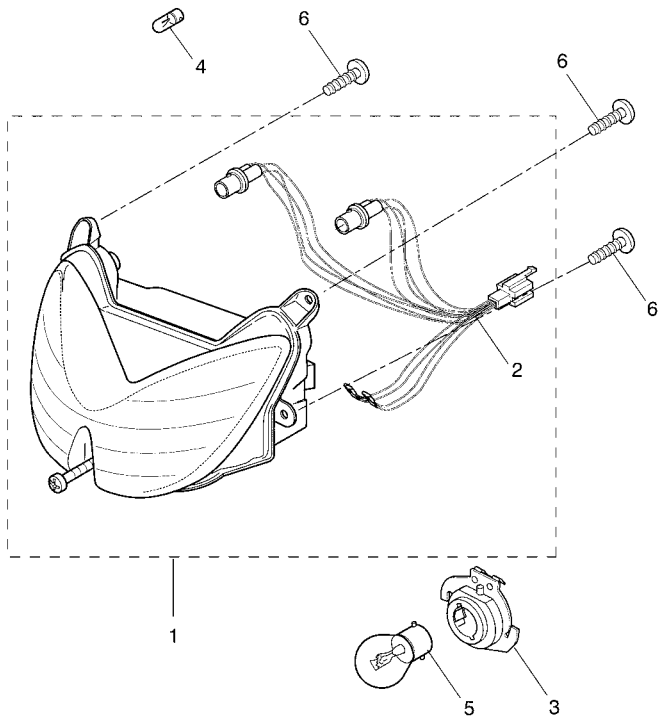

5BR1354-7342

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–H4320–01	LENS ASSY	1	1	1	1	1	
2	5BR–H4312–01	.CORD ASSY	1	1	1	1	1	
3	4JC–H4340–00	SOCKET CORD ASSY 1	1	1	1	1	1	
4	3WW–H4347–00	BULB (12V-5W)	2	2	2	2	2	
5	4SB–H4314–00	BULB HEADLIGHT (12V-35/35W)	1	1	1	1	1	BA20D 12V 35/35W
6	90167–05X01	SCREW, TAPPING	4	4	4	4	4	

FIG. 38 TAILLIGHT

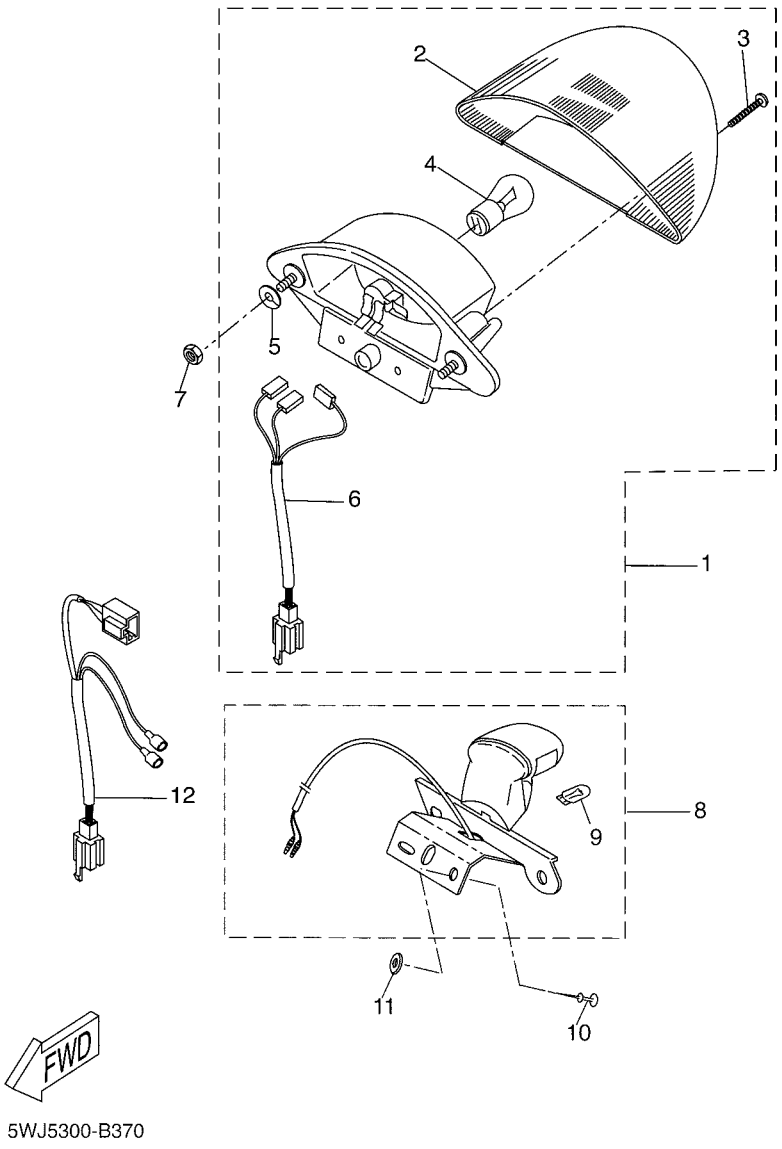

5WJ5300-B370

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–H4700–01	TAILLIGHT ASSY	1	1	1	1	1	
2	5BR–H472F–00	.LENS, LICENCE LIGHT	1	1	1	1	1	
3	5BR–H4726–00	.SCREW	2	2	2	2	2	
4	3HL–H4535–00	.BULB (12V-21/5W)	1	1	1	1	1	
5	5BR–H4754–00	.WASHER, SPECIAL	2	2	2	2	2	
6	5BR–H4735–00	.CORD ASSY	1	1	1	1	1	
7	90179–06X00	NUT	3	3	3	3	3	
8	5ME–H4740–00	LICENCE LIGHT ASSY					1	
9	5FV–H3517–00	.BULB (12V-5W)					1	
10	90267–48X02	RIVET, BLIND					2	
11	90201–05X00	WASHER, PLATE					2	
12	5WJ–H4547–00	CORD, LICENCE LIGHT					1	

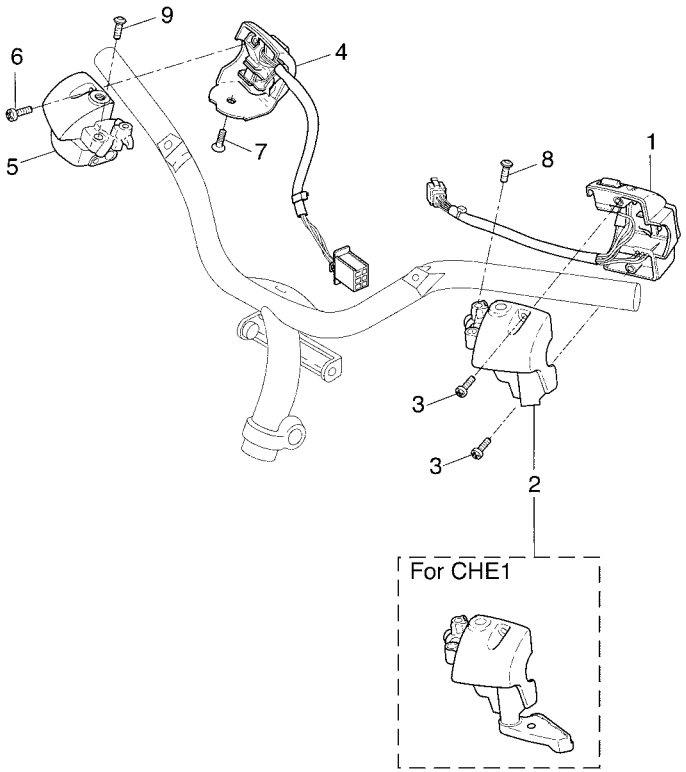

FWD

5SB6300-C390

FIG. 39 HANDLE SWITCH & LEVER

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5BR–H3973–10	SWITCH, HANDLE 3	1	1	1	1	1	
2	5BR–H3940–00	STARTER ASSY					1	
	5SB–H3987–00	CASE, SWITCH LOWER	1	1	1	1		
3	5BR–H3992–00	SCREW, LEVER 2	2	2	2	2	2	
4	5WJ–H3972–00	SWITCH, HANDLE 4	1	1	1	1	1	
5	5BR–H3987–01	CASE, SWITCH LOWER	1	1	1	1	1	
6	5BR–H3992–00	SCREW, LEVER 2	1	1	1	1	1	
7	5BR–H3928–00	SCREW, ADJUSTING	1	1	1	1	1	
8	90111–06X01	BOLT,HEX. SOCKET BUTTON	2	2	2	2	2	
9	90111–06X01	BOLT,HEX. SOCKET BUTTON	2	2	2	2	2	

FIG. 40 ELECTRICAL 1

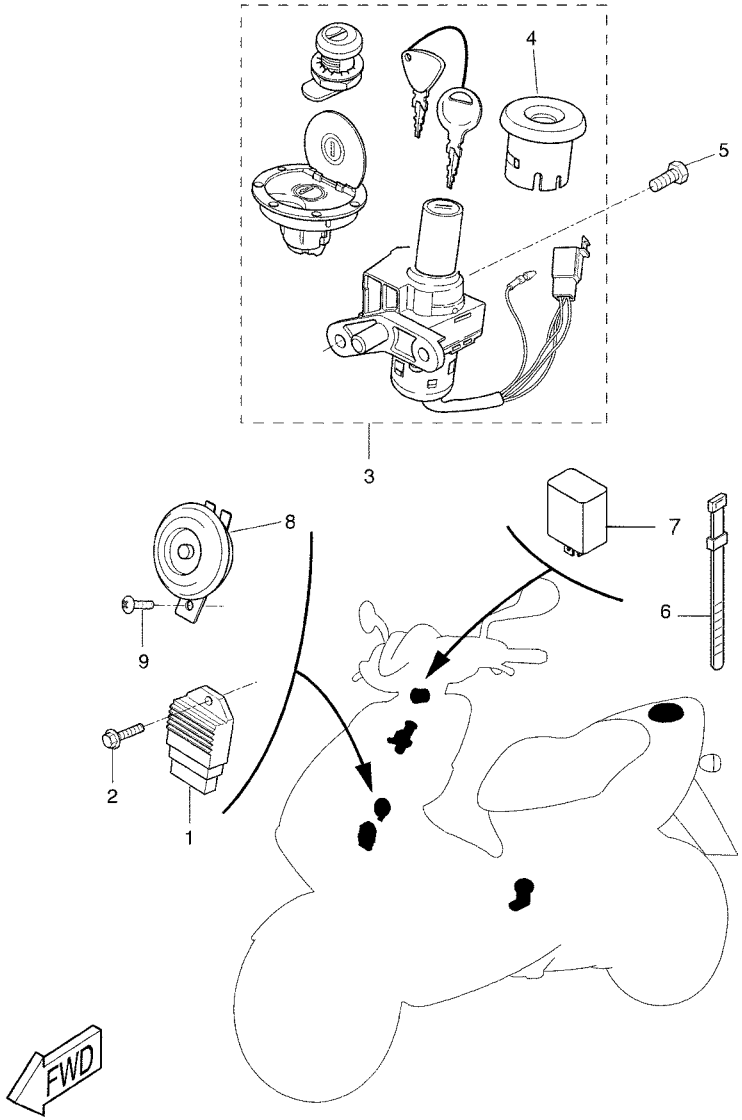

5BR1354-7372

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	5RN–H1960–00	RECTIFIER & REGULATOR ASSY	1	1	1	1	1	
2	90154–06X01	SCREW, BINDING	1	1	1	1	1	
3	5WJ–H2021–10	KEY SET	1	1	1	1	1	
4	5AD–H2552–00	.CAP, SWITCH	1	1	1	1	1	
5	90109–06851	BOLT	2	2	2	2	2	
6	4VU–H3936–01	BAND, SWITCH CORD	1	1	1	1	1	95.7X2.50
7	5XW–H3350–00	FLASHER RELAY ASSY	1	1	1	1	1	
8	5SB–H3371–00	HORN	1	1	1	1	1	
9	98507–06010	SCREW, PAN HEAD	1	1	1	1	1	

FIG. 41 ELECTRICAL 2

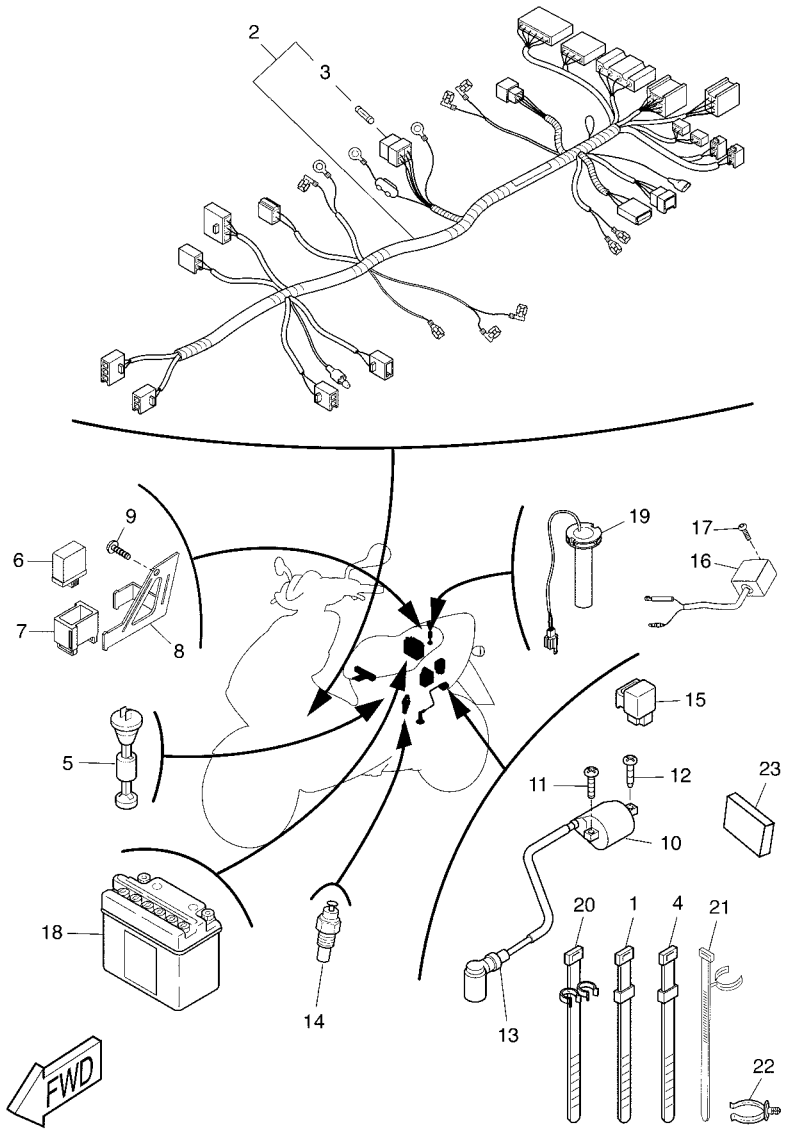

5SB1300-B380

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	4KH–H3936–01	BAND, SWITCH CORD	1	1	1	1	1	249X4.80
2	5SB–H2590–00	WIRE HARNESS ASSY	1	1	1	1		
	5WJ–H2590–10	WIRE HARNESS ASSY					1	
3	5BR–H2151–00	.FUSE (7.5A)	1	1	1	1	1	
4	4KH–H3936–01	BAND, SWITCH CORD	4	4	4	4	4	249X4.80
5	3VL–H5720–10	OIL LEVEL GAUGE ASSY	1	1	1	1	1	
6	5BM–H5540–00	C.D.I. UNIT ASSY	1	1	1	1	1	
7	5WJ–H5546–00	BAND	1	1	1	1	1	
8	5ME–H553A–01	STAY UNIT	1	1	1	1	1	
9	90154–06X01	SCREW, BINDING	1	1	1	1	1	
10	4BE–H2310–00	IGNITION COIL ASSY	1	1	1	1	1	
11	90153–06034	SCREW, HEXAGON	1	1	1	1	1	
12	90105–06841	BOLT, FLANGE	1	1	1	1	1	
13	5PE–H2370–00	PLUG CAP ASSY	1	1	1	1	1	UR (EMI-TRANSVAL
	5BR–H2370–00	PLUG CAP ASSY	1	1	1	1	1	UR (NGK MODEL)
14	5BS–H3605–02	SENDER, WATER	1	1	1	1	1	
15	27V–81940–02	STARTER RELAY ASSY	1	1	1	1	1	TATEISHI
16	5RN–H5741–00	UNIT, CONTROL	1	1	1	1		
17	90154–06X00	SCREW, BINDING	1	1	1	1		
18	4CU–H2110–30	BATTERY ASSY	1	1	1	1	1	UR GS 12V 4Ah
	4CU–H2110–20	BATTERY ASSY	1	1	1	1	1	UR GS 12V 4Ah
	4SB–H2110–00	BATTERY ASSY	1	1	1	1	1	UR YUASA 12V 4Ah
19	5ME–H5752–00	SENDER UNIT ASSY, FUEL METER	1	1	1	1	1	
20	5BR–F1335–00	CLAMP, WIRE HARNESS 1	1	1	1	1	1	215X7.0
21	90464–09X00	CLAMP	1	1	1	1	1	
22	5BR–F1337–00	CLAMP, CABLE	1	1	1	1	1	
23	5BR–F174X–00	DAMPER	2	2	2	2	2	

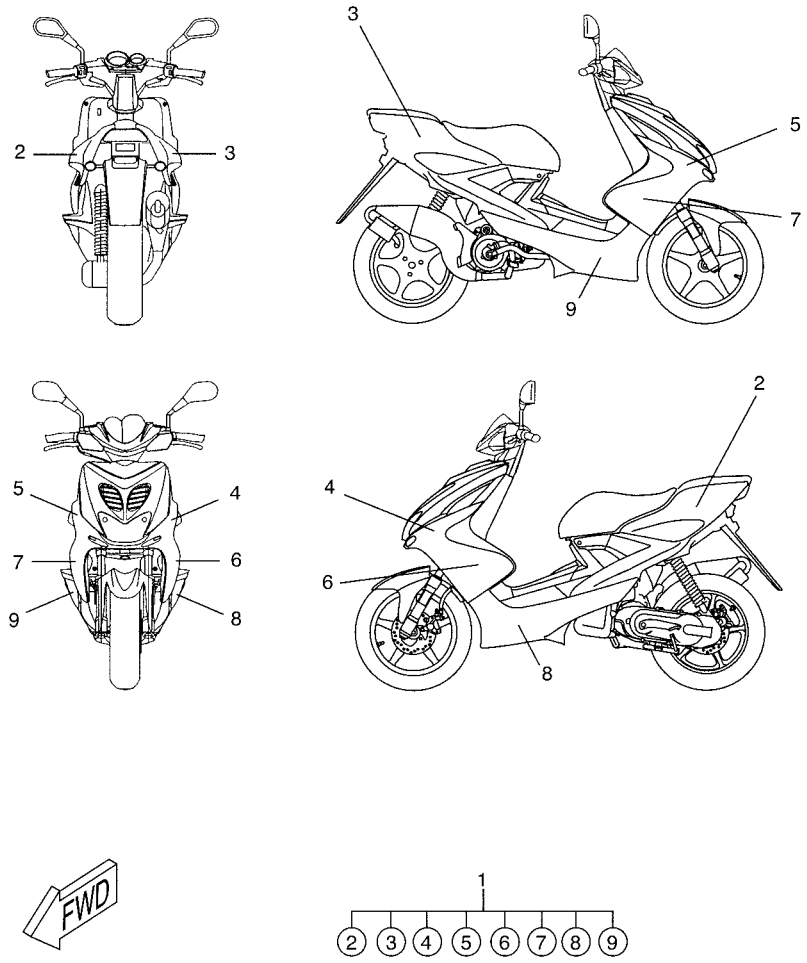

3C6F300-F420

FIG. 42 GRAPHIC & EMBLEM

REF. NO.	PART NO.	DESCRIPTION	01	02	03	04	05	REMARKS
1	3C6–F17AA–00	GRAPHIC MASTER SHEET 1	1	1	1	1	1	UR FOR PWS1
	3C6–F17AA–10	GRAPHIC MASTER SHEET 1	1	1	1	1	1	UR FOR SMX
	3C6–F17AA–20	GRAPHIC MASTER SHEET 1	1	1	1	1	1	UR FOR VPBC3
2	3C6–F174J–00	.GRAPHIC 5	1	1	1	1	1	UR FOR PWS1
	3C6–F174J–10	.GRAPHIC 5	1	1	1	1	1	UR FOR SMX
	3C6–F174J–20	.GRAPHIC 5	1	1	1	1	1	UR FOR VPBC3
3	3C6–F174K–00	.GRAPHIC 6	1	1	1	1	1	UR FOR PWS1
	3C6–F174K–10	.GRAPHIC 6	1	1	1	1	1	UR FOR SMX
	3C6–F174K–20	.GRAPHIC 6	1	1	1	1	1	UR FOR VPBC3
4	3C6–F832D–00	.GRAPHIC 17	1	1	1	1	1	UR FOR PWS1
	3C6–F832D–10	.GRAPHIC 17	1	1	1	1	1	UR FOR SMX
	3C6–F832D–20	.GRAPHIC 17	1	1	1	1	1	UR FOR VPBC3
5	3C6–F832P–00	.GRAPHIC 18	1	1	1	1	1	UR FOR PWS1
	3C6–F832P–10	.GRAPHIC 18	1	1	1	1	1	UR FOR SMX
	3C6–F832P–20	.GRAPHIC 18	1	1	1	1	1	UR FOR VPBC3
6	3C6–F841G–00	.GRAPHIC 1	1	1	1	1	1	UR FOR PWS1
	3C6–F841G–10	.GRAPHIC 1	1	1	1	1	1	UR FOR SMX
	3C6–F841G–20	.GRAPHIC 1	1	1	1	1	1	UR FOR VPBC3
7	3C6–F841H–00	.GRAPHIC 5	1	1	1	1	1	UR FOR PWS1
	3C6–F841H–10	.GRAPHIC 5	1	1	1	1	1	UR FOR SMX
	3C6–F841H–20	.GRAPHIC 5	1	1	1	1	1	UR FOR VPBC3
8	3C6–F842G–00	.GRAPHIC 2	1	1	1	1	1	UR FOR PWS1
	3C6–F842G–10	.GRAPHIC 2	1	1	1	1	1	UR FOR SMX
	3C6–F842G–20	.GRAPHIC 2	1	1	1	1	1	UR FOR VPBC3
9	3C6–F842H–00	.GRAPHIC 6	1	1	1	1	1	UR FOR PWS1
	3C6–F842H–10	.GRAPHIC 6	1	1	1	1	1	UR FOR SMX
	3C6–F842H–20	.GRAPHIC 6	1	1	1	1	1	UR FOR VPBC3

PART NO.	GRID NO.
3AA–13124–00	B – 6
1YU–13185–00	B – 6
1YU–13187–00	B – 6
1YU–13473–00	B – 6
1YU–13516–00	B – 6
1YU–13577–00	B – 6
5WJ–14D36–00	B – 10
5WJ–14D41–00	B – 10
5WJ–14D81–00	B – 10
3AA–15513–00	C – 2
3KJ–15528–00	C – 2
3VL–15570–00	C – 2
3KJ–21481–00	C – 6
22F–23411–01	C – 11
22F–23412–01	C – 11
3VP–23416–00	C – 11
22F–2341E–00	C – 11
5BM–81801–01	C – 2
5BM–81861–00	C – 2
27V–81940–02	E – 6
5HE–E1111–00	B – 2
5BR–E1193–00	B – 2
5BR–E1194–00	B – 2
5BR–E1311–00	B – 2
5BR–E1351–00	B – 2
5RN–E1400–00	B – 3
4SB–E1603–00	B – 3
4SB–E1605–00	B – 3
5HE–E1631–00	B – 3
5PF–E1633–00	B – 3
5HE–E1636–00	B – 3
5BR–E2410–00	B – 2
5BR–E2422–00	B – 4
5BR–E243A–10	B – 5
5BR–E2450–00	B – 4
5BR–E2459–00	B – 4
5BR–E2460–01	B – 5
5BR–E2483–00	B – 4
5BR–E2484–10	B – 5
5BR–E2485–10	B – 5
5BR–E2486–00	B – 5
5BR–E2487–10	B – 5
5BR–E2490–01	B – 5
5BR–E2567–01	B – 5
5BR–E2589–10	B – 5
5PE–E3100–00	B – 6
5BR–E3141–00	B – 6
3VL–E3178–00	B – 6
5BR–E3487–00	B – 6
4CU–E3555–00	B – 7
	B – 8
4CU–E3610–00	B – 7
	B – 8
4CU–E3621–00	B – 7
	B – 8
4SB–E4103–01	B – 10
4SB–E4104–00	B – 10
5EU–E410A–00	B – 9
4SB–E4133–01	B – 10
4SB–E4134–00	B – 10
4SB–E4137–00	B – 10
5BR–E4148–10	B – 2
5EU–E414H–00	B – 9
5BR–E4159–00	B – 2
5EU–E4198–00	B – 9
5EU–E4205–00	B – 9
5EU–E4216–00	B – 9
5EU–E4216–10	B – 9
5EU–E4216–20	B – 9
5EU–E4243–00	B – 9
5SB–E4301–01	B – 9
5BR–E4312–00	B – 10
5EU–E4331–00	B – 9
4SB–E4331–01	B – 10
5EU–E4341–00	B – 9
5AD–E4342–00	B – 10
5AD–E4344–00	B – 10
4SB–E4357–00	B – 10
5DU–E4368–00	B – 10
5EU–E4369–00	B – 9
5DN–E4369–01	B – 10
4SB–E4377–00	B – 10
5EU–E4384–00	B – 9
5EU–E4396–00	B – 9
5BR–E4410–01	B – 8
5BR–E4410–20	B – 7
3WG–E4411–00	B – 7
	B – 8
3WG–E4412–00	B – 7
	B – 8
3WG–E4437–00	B – 7
4JC–E4437–00	B – 8
4MJ–E4445–00	B – 11
	B – 13
3WG–E4451–00	B – 7
	B – 8
3WG–E4452–00	B – 7
	B – 8
3YJ–E4453–00	B – 7
	B – 8
5BR–E4459–00	B – 15
5PE–E4610–20	B – 13
5SB–E4610–30	B – 11
5SB–E4610–40	B – 11
5AD–E4613–00	B – 11
	B – 13
5PE–E4729–00	B – 11
	B – 13
5PE–E4747–01	B – 11
	B – 13
3WG–E4766–00	B – 11
	B – 13
3WG–E4766–10	B – 11
	B – 13
5EU–E4779–00	B – 11
	B – 13
5WW–E4803–10	B – 11
5RJ–E4806–00	B – 11
5SB–E4881–00	B – 11
5SB–E4882–00	B – 11
5SB–E4883–00	B – 11
5WJ–E4D01–00	B – 10
5RN–E4D16–00	B – 10
5PE–E4D43–42	B – 10
5RN–E4G12–30	B – 9
5SB–E4G21–00	B – 9
5SB–E4G23–00	B – 9
5SB–E4G43–31	B – 9
5SB–E4G63–00	B – 9
5RN–E4G81–01	B – 9
5SB–E4G85–00	B – 9
5SB–E4G92–00	B – 9
3VL–E5128–00	B – 14
5DN–E5150–00	B – 14
4CU–E5317–00	B – 14
3VL–E5363–00	B – 15
3VL–E5371–00	B – 14
5AD–E5411–00	B – 14
5BR–E5411–00	B – 14
3VL–E5421–00	B – 14
5BR–E5421–00	B – 4
5BR–E5435–00	B – 14
5AD–E5451–00	B – 15
3VL–E5461–00	B – 14
4CU–E5462–00	B – 14
4CU–E5532–00	C – 2
5AD–E5601–00	C – 2
5FX–E5620–11	C – 2
5FX–E5620–20	C – 2
4SB–E5631–00	C – 2
4SB–E5650–00	C – 2
3VL–E5657–00	C – 3
3VL–E5659–00	B – 14
	C – 2
3VL–E5673–00	C – 2
3VL–E6111–00	C – 3
5BR–E6611–10	C – 3
5HE–E6620–10	C – 3
5HE–E6626–10	C – 3
3WT–E7410–00	C – 5
3WT–E7420–00	C – 5
5WW–E7611–10	C – 3
5WW–E7620–10	C – 3
3VL–E7623–00	C – 3
4FG–E7632–00	C – 3
5RN–E7641–00	C – 3
3VL–E7653–00	C – 3
5PE–E7654–00	C – 4
5BR–E7660–10	C – 3
5BR–E7664–10	C – 3
5BR–E7670–10	C – 3
5BR–E7684–10	C – 3
5PU–F1110–11	C – 6
5SB–F118N–02	C – 14
5HE–F1232–00	C – 6
5BR–F1335–00	E – 6
5BR–F1337–00	E – 6
5BR–F1410–10	C – 6
5DS–F1481–00	C – 6
2RN–F1518–00	C – 7
5BR–F152A–10	C – 7
X01–F153A–10	D – 11
5PE–F1556–00–P2	C – 7
5PE–F1556–00–PH	C – 7
5WW–F1568–00	D – 11
5PE–F1569–00	C – 7
5PE–F1579–00	C – 7
5BR–F1629–00	C – 7
5BR–F1642–00	C – 7
5BR–F1642–10	C – 7
5BR–F1705–00	C – 9
5BR–F1711–10	C – 8
5BR–F1716–00	C – 8
5BR–F1721–10	C – 8
5BR–F1731–03–PJ	C – 8
5BR–F1731–03–PM	C – 8
5BR–F1731–03–PS	C – 8
5BR–F1741–03–PJ	C – 8
5BR–F1741–03–PM	C – 8
5BR–F1741–03–PS	C – 8
3C6–F174J–00	E – 7
3C6–F174J–10	E – 7
3C6–F174J–20	E – 7
3C6–F174K–00	E – 7
3C6–F174K–10	E – 7
3C6–F174K–20	E – 7
5BR–F174X–00	E – 6
4SB–F174X–10	D – 8
3WG–F1771–00	C – 9
5BR–F177E–00	C – 8
3C6–F17AA–00	E – 7
3C6–F17AA–10	E – 7
3C6–F17AA–20	E – 7
5BR–F2141–00	D – 2
5BR–F2210–71	C – 10
4X6–F2216–00	B – 14
5ME–F3100–11	C – 11
5BR–F3108–00	C – 11
5BR–F3110–01	C – 11
4TD–F3111–00	C – 11
4TD–F3112–00	C – 11
5BR–F3126–00	C – 11
5BR–F3136–00	C – 11
4TD–F3141–00	C – 11
4TD–F3144–00	C – 11
4TD–F3145–00	C – 11
4TD–F3147–00	C – 11
4TD–F3153–00	C – 11
4TD–F3154–00	C – 11
4TD–F3156–00	C – 11
4CU–F3165–00	C – 11
4TD–F3181–00	C – 11
4TD–F3183–00	C – 11
5ME–F3340–10	C – 11
4TD–F3394–00	C – 11
5DS–F3418–00	C – 12
21L–F3462–00	C – 11
5BR–F4110–01	C – 13
5DN–F415A–10	C – 15
4SB–F4312–11	C – 13
4SB–F4318–11	C – 13
4SB–F4335–11	C – 13
5BR–F4500–00	C – 13
5BR–F4500–10	C – 13
5EU–F4501–00	C – 13
5EU–F4512–00	C – 13
5HE–F4710–60	C – 14
4CU–F4726–00	C – 14
5HE–F4731–60	C – 14
5BR–F473R–00	C – 14
3VL–F4741–10	C – 6
5HE–F4756–00	C – 14
5BR–F475M–00	C – 14
5HE–F4773–00	C – 6
3C6–F4780–00	C – 14
5AD–F4780–00	C – 14
5AD–F4781–00	C – 14
5BR–F478E–10	C – 14
5BR–F478E–20	C – 14
4SB–F5117–00	D – 2
5BR–F5117–00	D – 2
5BR–F5168–01	D – 2
5BR–F5168–A0	D – 2
5BR–F5170–00	D – 2
	D – 4
5PU–F5190–00	D – 2
5BR–F5311–00	D – 4
5BR–F5311–10	D – 4
5BR–F532A–10	D – 4
5BR–F5338–00	D – 4
5BR–F5338–A0	D – 4
5ME–F580T–30	D – 3
5BR–F580V–30	D – 5
5MF–F5811–00	D – 3
5BR–F5811–10	D – 5
4CU–F5824–00	D – 3
	D – 5
4CU–F5825–00	D – 3
	D – 5
5JH–F5831–00	D – 3
	D – 5
5JH–F5831–10	D – 3
	D – 5
5BR–F583T–06	D – 7
5BR–F583V–06	D – 9
4SB–F5852–10	D – 7
	D – 9
5BR–F5872–51	D – 7

PART NO.	GRID NO.
5BR–F5873–10	D – 9
5BR–F5876–00	B – 14
5TK–F5876–00	C – 12
5ME–F5919–00	D – 3
5BR–F5919–10	D – 5
5BR–F6110–00	D – 6
5PU–F612E–00	D – 12
5BR–F6143–01–PG	D – 12
5BR–F6143–01–PJ	D – 12
5BR–F6143–01–PL	D – 12
5BR–F6145–01	D – 12
5BR–F6213–00–P7	D – 12
5BR–F6213–00–P9	D – 12
5BR–F6240–10	D – 6
5BR–F6241–00	D – 6
5BR–F6246–10	D – 6
3VL–F6261–00	D – 6
5BR–F6273–00	D – 6
5BR–F6280–10	D – 12
5BR–F6290–10	D – 12
5BR–F6311–00	D – 6
3VL–F6312–01	D – 6
3WG–F6329–00	D – 6
5BR–F632G–00	D – 6
5BR–F6331–00	D – 6
3VL–F6334–02	D – 6
5ME–F7111–02	D – 8
2JW–F7114–10	D – 8
5BR–F7481–01	D – 8
5BR–F8120–09	D – 7
	D – 9
5WJ–F8199–E0	C – 14
5WJ–F8199–E1	C – 14
5WJ–F8199–F0	C – 14
5WJ–F8199–F1	C – 15
5WJ–F8199–G0	C – 15
5WJ–F8199–G1	C – 15
5SB–F8199–H0	C – 15
5SB–F8199–H1	C – 14
5WJ–F8199–S1	C – 15
5BR–F8311–00	D – 10
3C6–F832D–00	E – 7
3C6–F832D–10	E – 7
3C6–F832D–20	E – 7
3C6–F832P–00	E – 7
3C6–F832P–10	E – 7
3C6–F832P–20	E – 7
3WV–F8349–10	D – 10
5BR–F835G–00–PF	D – 10
5BR–F835G–00–PJ	D – 10
5BR–F835G–00–PN	D – 10
5BR–F835J–00–PJ	D – 10
5BR–F835J–00–PN	D – 10
5BR–F835J–00–PV	D – 10
5BR–F836K–01	D – 10
5BR–F837N–00	D – 10
5BR–F837N–20	D – 10
5BR–F837N–40	D – 10
5BR–F8385–21	D – 10
5BR–F8385–71	D – 10
3C6–F841G–00	E – 7
3C6–F841G–10	E – 7
3C6–F841G–20	E – 7
3C6–F841H–00	E – 7
3C6–F841H–10	E – 7
3C6–F841H–20	E – 7
3C6–F842G–00	E – 7
3C6–F842G–10	E – 7
3C6–F842G–20	E – 7
3C6–F842H–00	E – 7
3C6–F842H–10	E – 7
3C6–F842H–20	E – 7
5BM–H1410–02	D – 13
5BM–H1450–02	D – 13
5BM–H1800–00	C – 2
5RN–H1960–00	E – 5
5WJ–H2021–10	C – 8
	C – 13
	E – 5
4SB–H2110–00	E – 6
4CU–H2110–20	E – 6
4CU–H2110–30	E – 6
5BR–H2129–00	D – 8
5BR–H2151–00	E – 6
4BE–H2310–00	E – 6
5BR–H2370–00	E – 6
5PE–H2370–00	E – 6
4CU–H2541–00	C – 2
5AD–H2552–00	C – 8
	C – 13
	E – 5
5SB–H2590–00	E – 6
5WJ–H2590–10	E – 6
5BR–H3310–10	D – 14
NDH–H3311–00–01	D – 14
5BR–H3312–10	D – 14
5BR–H331N–00	D – 14
5BR–H3320–10	D – 14
5BR–H3322–10	D – 14
5BR–H332N–00	D – 14
5HE–H3330–00	D – 14
5HE–H3332–00	D – 14
5BR–H3333–00	D – 14
5HE–H3333–00	D – 14
5HE–H3336–00	D – 14
5HE–H333L–00	D – 14
5HE–H3340–00	D – 14
5HE–H3342–00	D – 14
5HE–H3346–00	D – 14
5XW–H3350–00	E – 5
5SB–H3371–00	E – 5
5PU–H3510–30	D – 15
5FV–H3517–00	E – 3
5PU–H3534–00	D – 15
5PU–H353K–00	D – 15
5PU–H3546–00	D – 15
5PU–H3550–01	D – 15
5BS–H3605–02	E – 6
5BR–H3912–01	D – 7
	D – 9
4SB–H3916–00	D – 7
	D – 9
5BR–H3928–00	E – 4
5BR–H3935–00	D – 7
	D – 9
4KH–H3936–01	C – 14
	E – 6
4VU–H3936–01	E – 5
5BR–H3940–00	E – 4
4SB–H3945–00	D – 7
	D – 9
5WJ–H3972–00	E – 4
5BR–H3973–10	E – 4
5JH–H3980–02	D – 7
	D – 9
5SB–H3987–00	E – 4
5BR–H3987–01	E – 4
5BR–H3992–00	E – 4
5BR–H4312–01	E – 2
4SB–H4314–00	E – 2
5BR–H4320–01	E – 2
4JC–H4340–00	E – 2
3WW–H4347–00	E – 2
3HL–H4535–00	E – 3
5WJ–H4547–00	E – 3
5BR–H4700–01	E – 3
5BR–H4726–00	E – 3
5BR–H472F–00	E – 3
5BR–H4735–00	E – 3
5ME–H4740–00	E – 3
5PU–H4744–00	D – 15
5BR–H4754–00	E – 3
5HE–H5111–00	C – 12
5ME–H553A–01	E – 6
5BM–H5540–00	E – 6
5WJ–H5546–00	E – 6
3VL–H5720–10	E – 6
5RN–H5741–00	E – 6
5ME–H5752–00	E – 6
4SB–W0001–00	B – 10
4SB–WE419–00	B – 10
90101–10776	C – 10
90105–06841	B – 5
	D – 14
	E – 6
90105–06X01	C – 14
90105–06X02	C – 14
	D – 8
90105–08121	C – 10
90105–08X00	D – 3
	D – 5
90105–08X04	B – 15
90105–10036	D – 6
90109–06851	E – 5
90109–06X00	B – 4
90109–06X05	C – 7
	C – 14
90110–05X01	D – 12
90110–06X01	B – 14
90110–06X03	B – 7
	B – 8
	B – 14
	C – 2
90110–06X04	B – 4
	B – 14
90110–06X06	B – 14
90110–06X07	B – 15
90110–06X08	B – 14
90110–06X09	B – 15
90110–06X10	B – 15
90110–06X16	C – 2
90110–06X21	B – 14
90110–06X21	C – 2
90110–10X00	D – 4
90111–06X01	C – 6
	D – 10
	E – 4
90111–10X00	D – 3
	D – 5
90116–07353	B – 2
90149–06X02	B – 7
90149–08X02	B – 11
	B – 13
90153–06034	E – 6
90153–06061	B – 11
	B – 13
90154–06808	B – 11
	B – 13
90154–06X00	B – 11
	E – 6
90154–06X01	C – 9
	C – 12
	E – 5
	E – 6
90154–06X05	B – 11
90157–05X02	C – 7
90159–05134	D – 12
90159–06093	D – 10
90167–05X01	C – 8
	C – 14
	D – 8
	D – 10
	D – 12
90167–05X02	C – 7
	C – 8
	D – 8
	D – 10
90170–10219	C – 4
	D – 13
90170–10X01	C – 3
90170–28X00	C – 3
90179–06X00	C – 14
	E – 3
90179–06X05	B – 12
90179–07381	B – 2
90179–25X00	C – 11
90183–05X00	C – 6
	C – 7
90183–05X00	C – 8
	C – 14
	D – 8
	D – 10
	D – 12
90183–06X00	B – 5
	C – 6
	C – 14
90185–10154	C – 6
	D – 6
90185–14150	D – 4
90201–05X00	E – 3
90201–06X00	B – 11
	B – 13
90201–06X01	D – 12
90201–06X05	B – 11
90201–06X06	C – 9
90201–08X00	C – 2
90201–08X09	B – 11
	B – 13
90201–10X01	D – 4
90201–10X02	D – 13
90201–10X03	D – 7
	D – 9
90201–13X03	C – 3
90201–140G5	C – 5
90201–142M6	D – 4
90201–155G5	C – 2
90201–17X00	D – 4
90202–05X00	D – 10
90202–10120	D – 8
90202–26X00	C – 11
90208–10012	C – 3
90208–14047	C – 5
90214–13055	C – 3
90240–10137	D – 8
90241–10X00	C – 14
90267–48X02	E – 3
90280–03X00	B – 3
90380–15X00	C – 2
90387–06X06	B – 7
	B – 8
90387–06X08	B – 11
	B – 13
90387–10X00	D – 2
90387–135U9	C – 3
90387–156U0	B – 3
90387–178S8	B – 4

PART NO.	GRID NO.
90401–10X03	D – 7
	D – 9
90430–08X00	B – 15
90445–05431	B – 6
90445–096K0	B – 6
90446–13311	B – 14
90450–16X00	B – 11
90450–21X01	B – 5
90450–22X00	C – 13
90450–22X02	B – 4
90450–23X01	B – 5
90450–32X02	B – 7
	B – 8
90464–09X00	D – 7
	E – 6
90464–10X01	C – 13
90464–23X00	B – 12
90464–50X02	B – 11
90464–75X00	C – 13
90467–08003	B – 6
	C – 9
90467–09006	C – 13
90467–17800	B – 5
90467–24X00	B – 7
	B – 8
90468–02033	B – 6
90468–02X00	B – 6
90468–12006	D – 8
90468–15009	D – 6
90480–06874	B – 4
90480–11877	B – 15
90480–11X00	B – 11
	B – 13
90480–12X00	B – 7
	B – 8
90480–13875	B – 6
90480–13876	B – 6
90501–20X00	C – 14
90501–35X01	C – 3
90506–35X00	D – 8
90508–32609	C – 2
91317–05020	B – 4
91810–14X00	B – 14
92907–06600	B – 7
	B – 8
92990–06100	B – 4
93101–10842	B – 4
93101–20138	B – 3
93102–17342	C – 3
93102–20425	B – 3
93102–22897	C – 5
93106–20001	D – 2
93109–34801	C – 3
93210–14X01	B – 15
93210–23614	C – 2
93210–40X00	C – 3
93210–548E8	B – 4
93306–003YC	B – 14
93306–082Y0	B – 4
93306–200Y4	C – 5
93306–203XC	C – 3
93306–203YF	C – 5
93306–204X7	B – 3
93306–300Y8	D – 2
93306–300YB	D – 2
93310–210X4	B – 3
93310–257R1	C – 2
93399–99940	C – 11
93420–40064	C – 5
93430–06X01	C – 3
93440–08130	B – 4
93450–11818	B – 3
93603–12007	B – 6
93603–22X00	B – 4
94701–00195	B – 2
95607–10200	C – 10
	D – 2
95607–12200	C – 6
95817–08040	B – 11
	B – 13
95827–08016	C – 6
9770L–50525	B – 7
	B – 8
98507–04008	C – 2
98507–05014	B – 6
98507–06010	E – 5
98507–06016	D – 13
98507–06020	B – 7
	B – 8
98907–04010	B – 2
98907–05014	B – 6
99009–15400	C – 2
99009–17400	B – 14
99009–19400	B – 6
99530–12016	B – 14