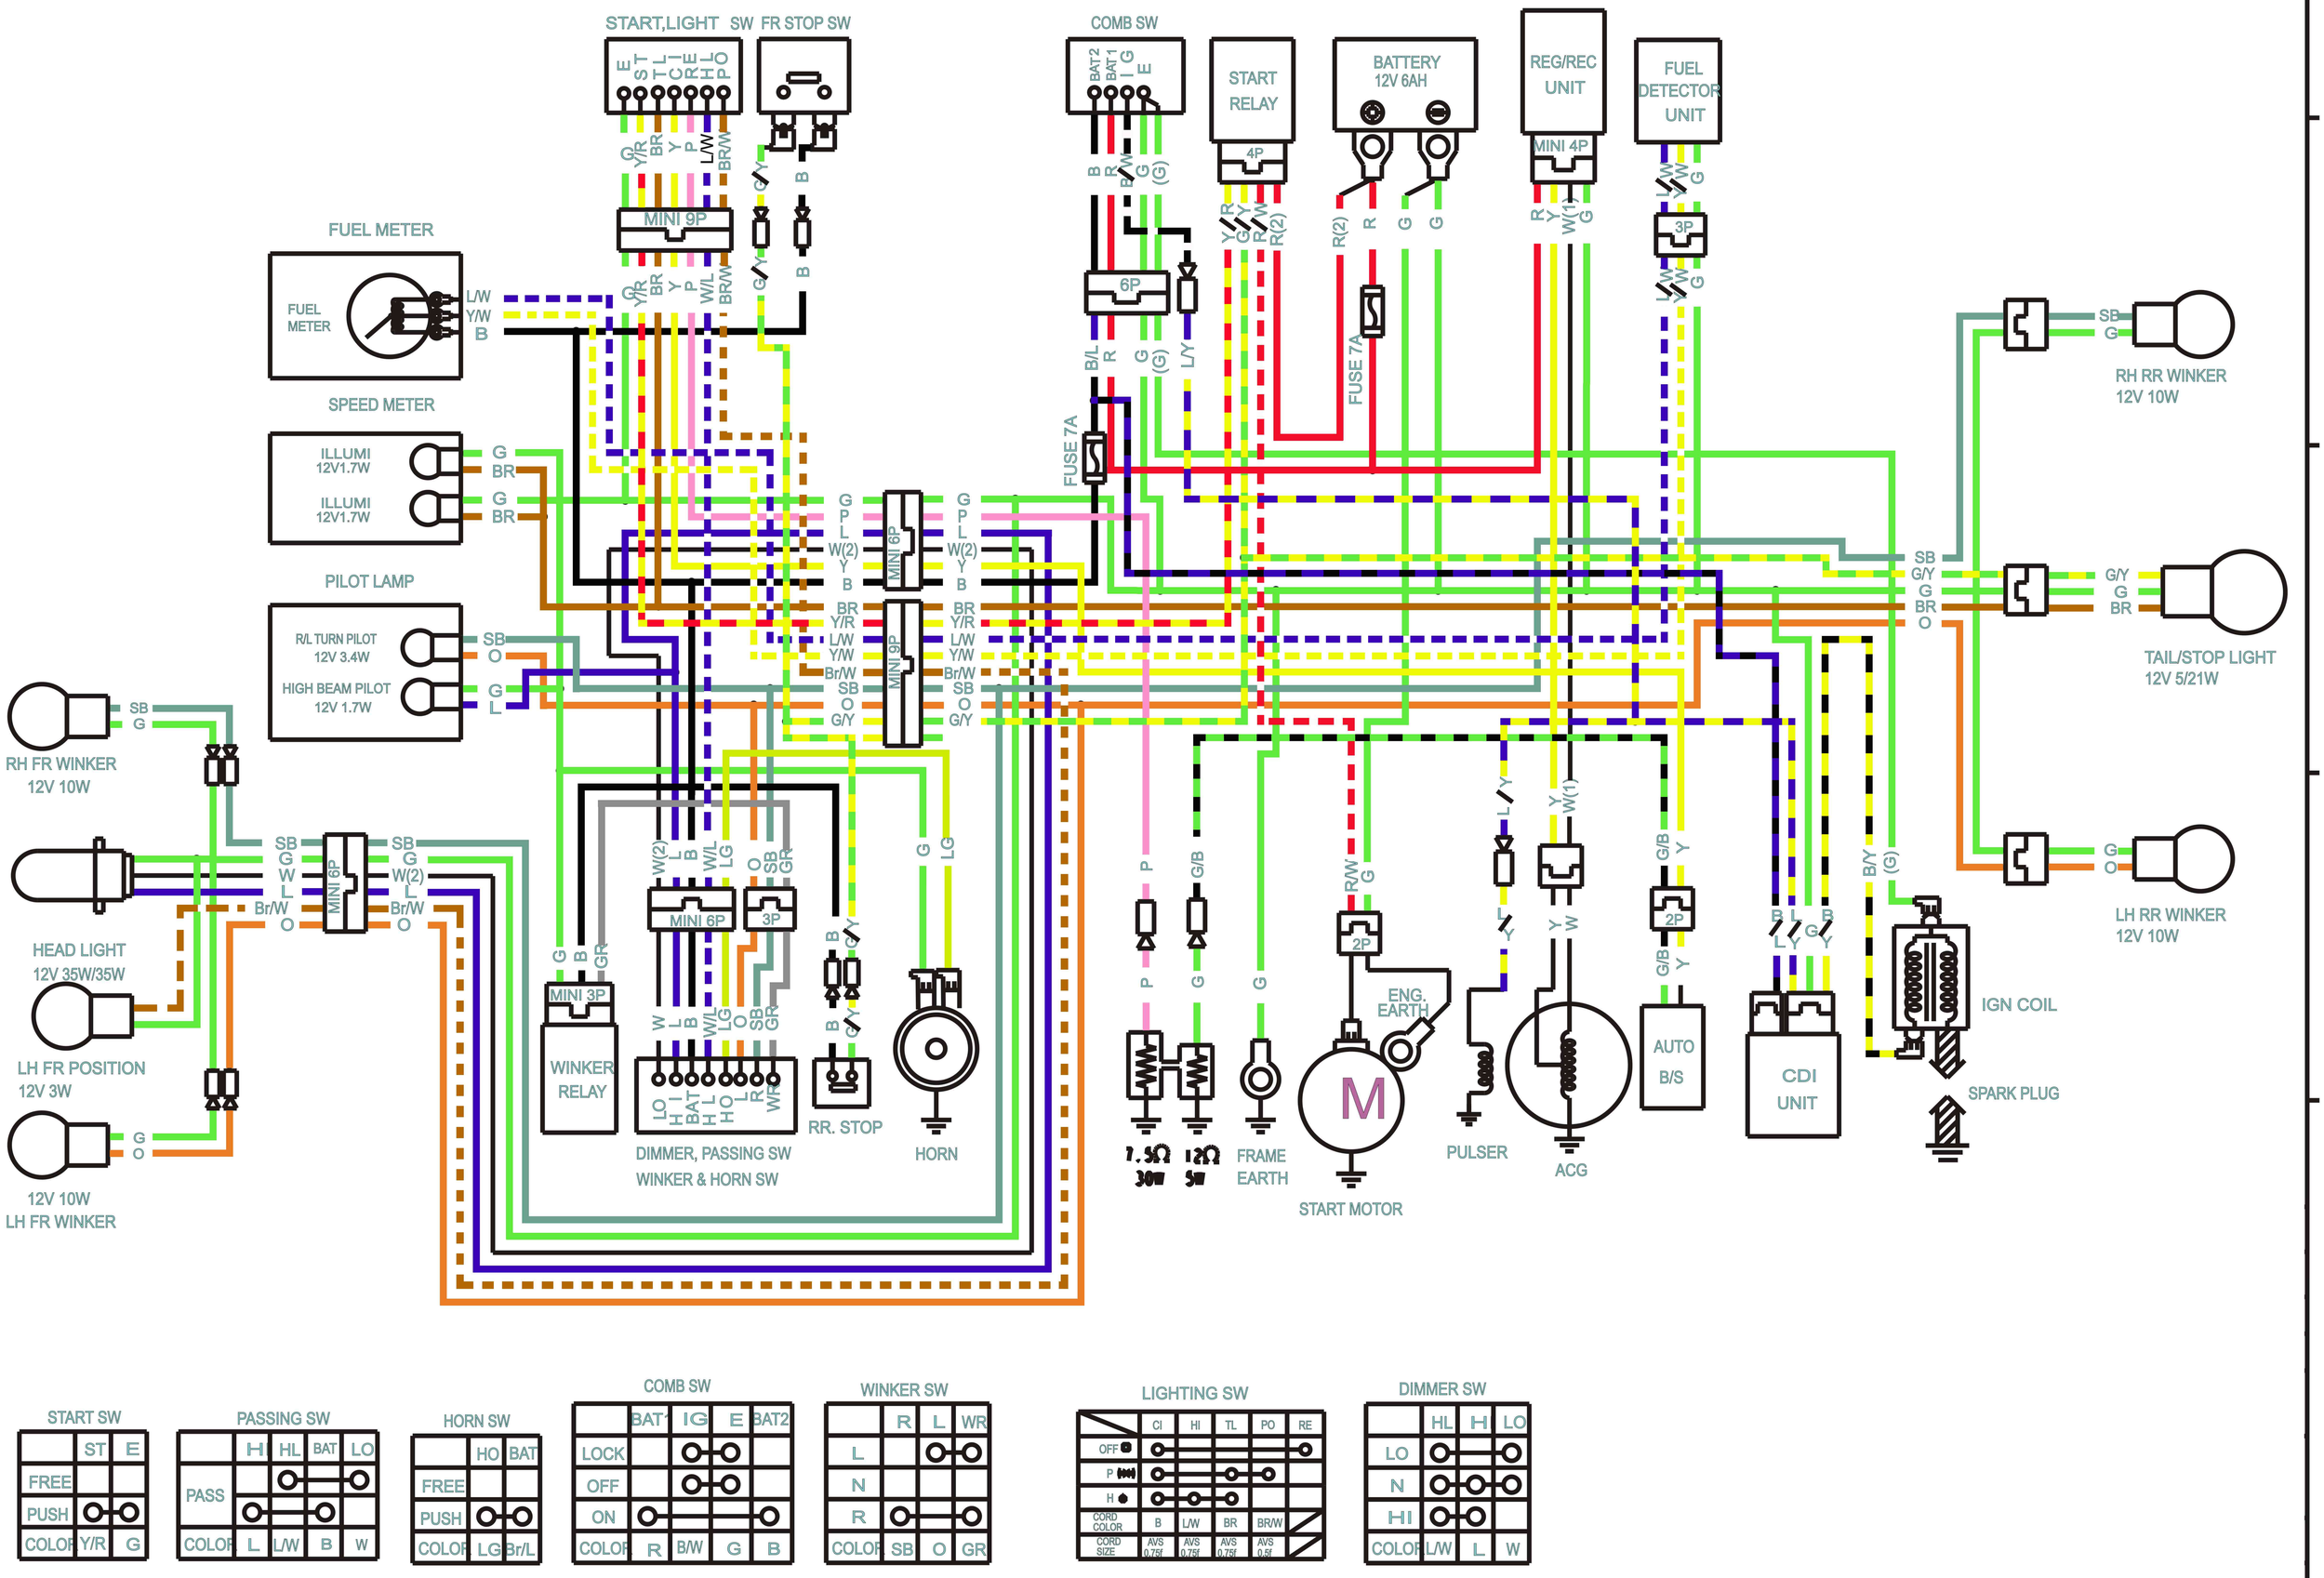
START,LIGHT SW
FR STOP SW
COMB SW
START RELAY
BATTERY 12V 6AH
REG/REC UNIT
FUEL DETECTOR UNIT
FUEL METER
SPEED METER
PILOT LAMP
ILLUMI 12V1.7W
ILLUMI 12V1.7W
R/L TURN PILOT 12V 3.4W
HIGH BEAM PILOT 12V 1.7W
MINI 9P
MINI 6P
MINI 4P
3P
6P
4P
2P
FUSE 7A
FUSE 7A
RH FR WINKER 12V 10W
HEAD LIGHT 12V 35W/35W
LH FR POSITION 12V 3W
12V 10W LH FR WINKER
WINKER RELAY
DIMMER, PASSING SW
WINKER & HORN SW
RR. STOP
HORN
RH RR WINKER 12V 10W
TAIL/STOP LIGHT 12V 5/21W
LH RR WINKER 12V 10W
IGN COIL
SPARK PLUG
CDI UNIT
AUTO B/S
PULSER
ACG
ENG. EARTH
FRAME EARTH
START MOTOR
7.5Ω 30W
12Ω 5W
START SW
PASSING SW
HORN SW
COMB SW
WINKER SW
LIGHTING SW
DIMMER SW